


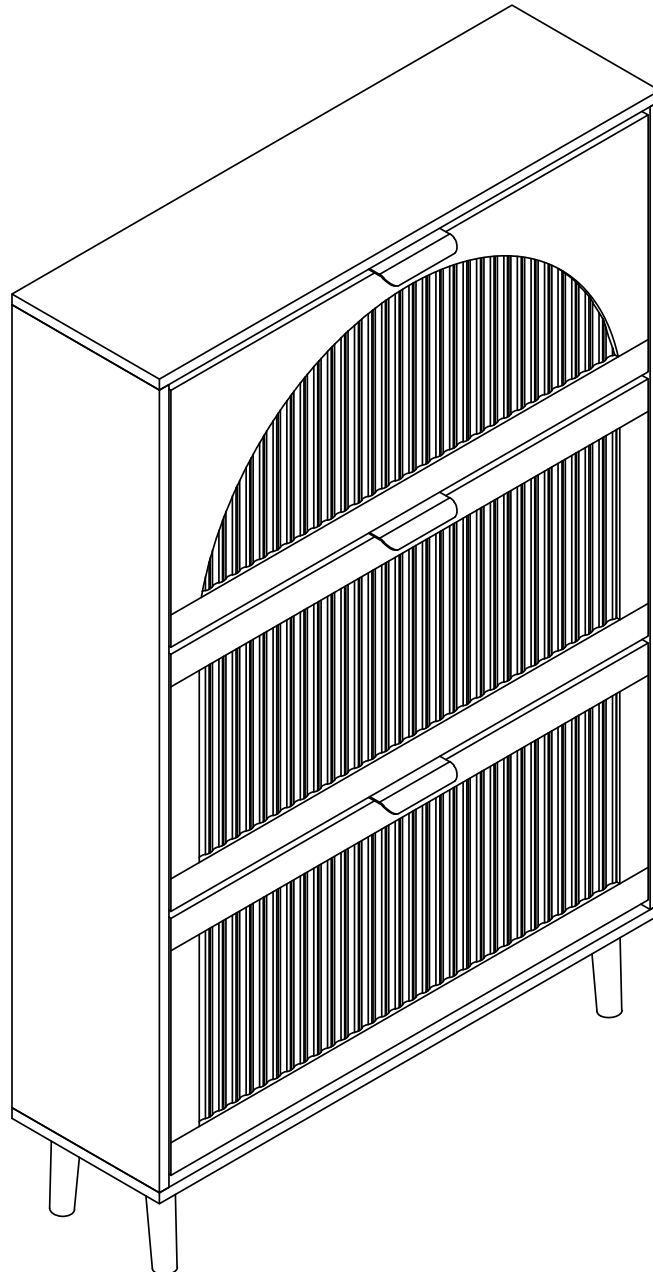




Please note: Items cannot be returned once assembled

HLG228

Version:1.0




IT IS RECOMMENDED
TO USE POWER TOOLS

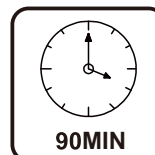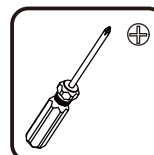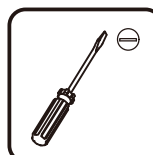


90MIN




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

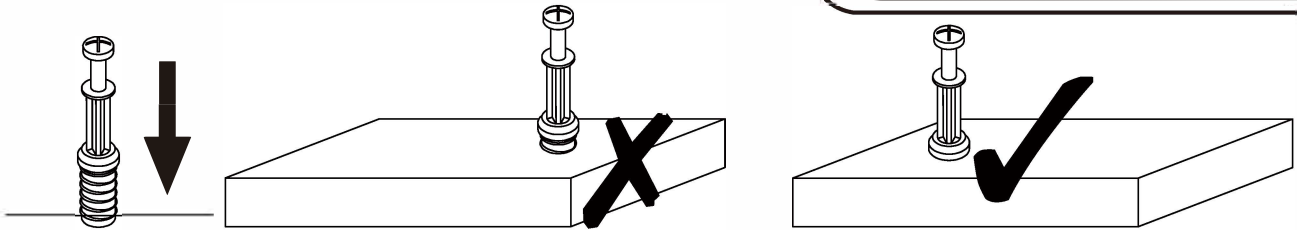


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

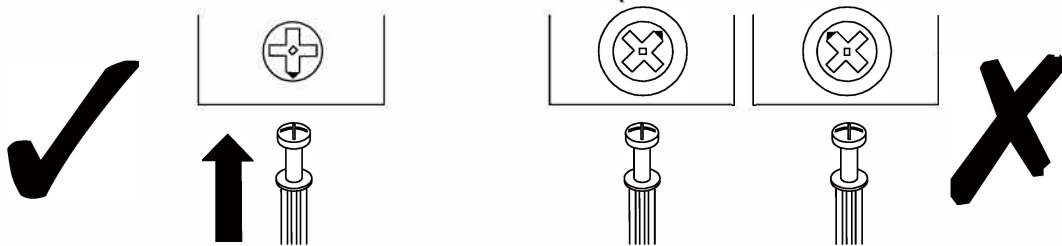










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.



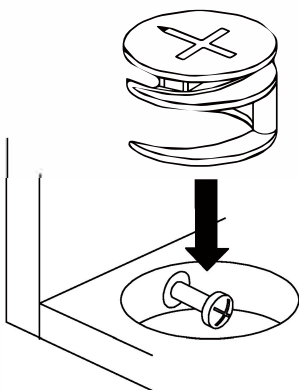





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.










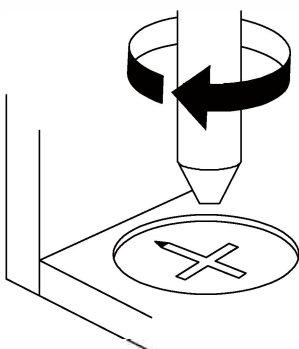



EN_Turn cam lock clockwise to tighten.

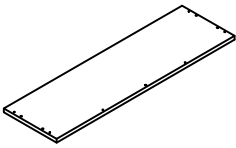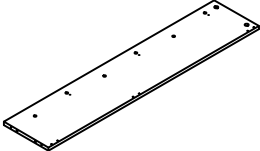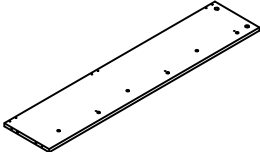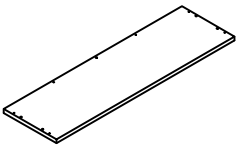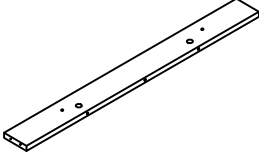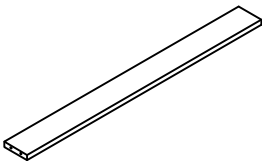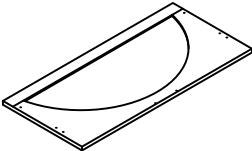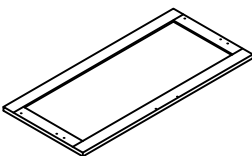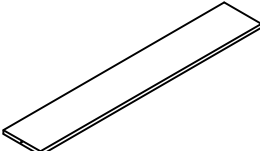NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x4	
⑧		x1	
⑨		x2	
⑩		x3	

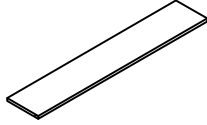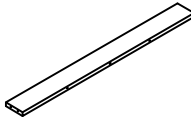NO.		QTY	SPARE
⑪		x6	
⑫		x1	
	 Hardware Kit	x1	

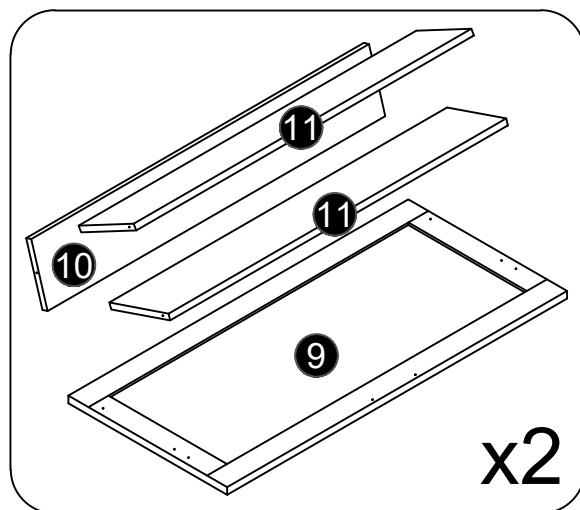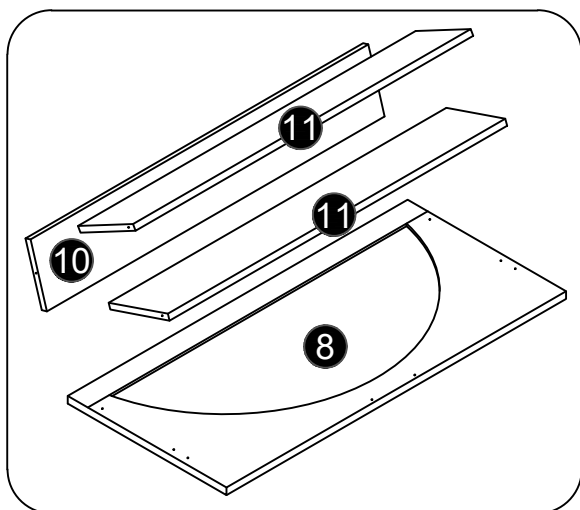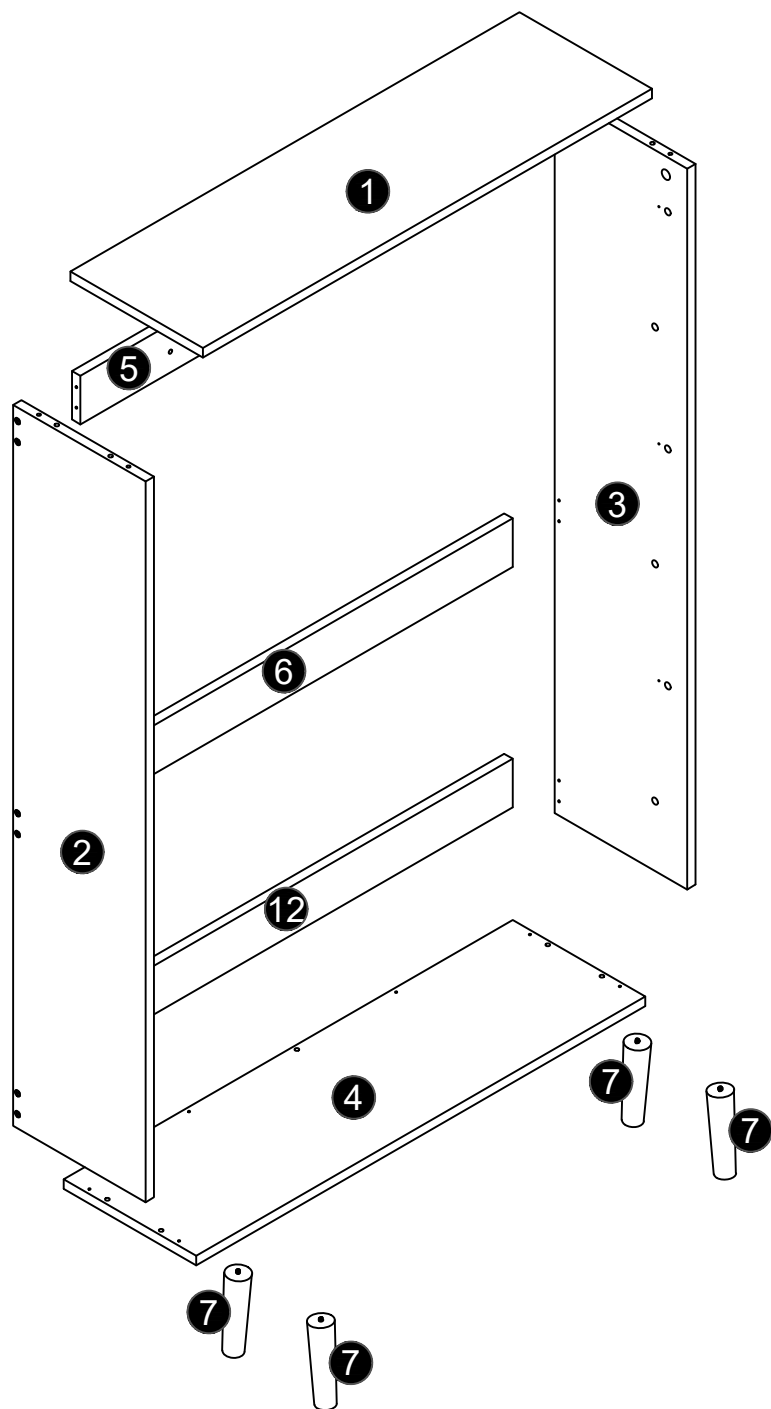

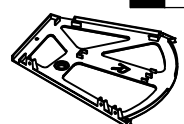
A x6 Ø6x35mm 	B x6 Ø15x10mm 	C x10 Ø6x30mm 	D x18 Ø4x35mm +1(spare) 	E x42 Ø3.5x12mm +2(spare) 	F x6 +1(spare) 
G x6 +1(spare) 	H x6 +1(spare) 	I x1 	J x4 	K x20 Ø4x14mm +2(spare) 	L x3 
M x4 	N x3 	O x2 O-1 O-2  	P x12 +2(spare) 	Q x6 	R x3 

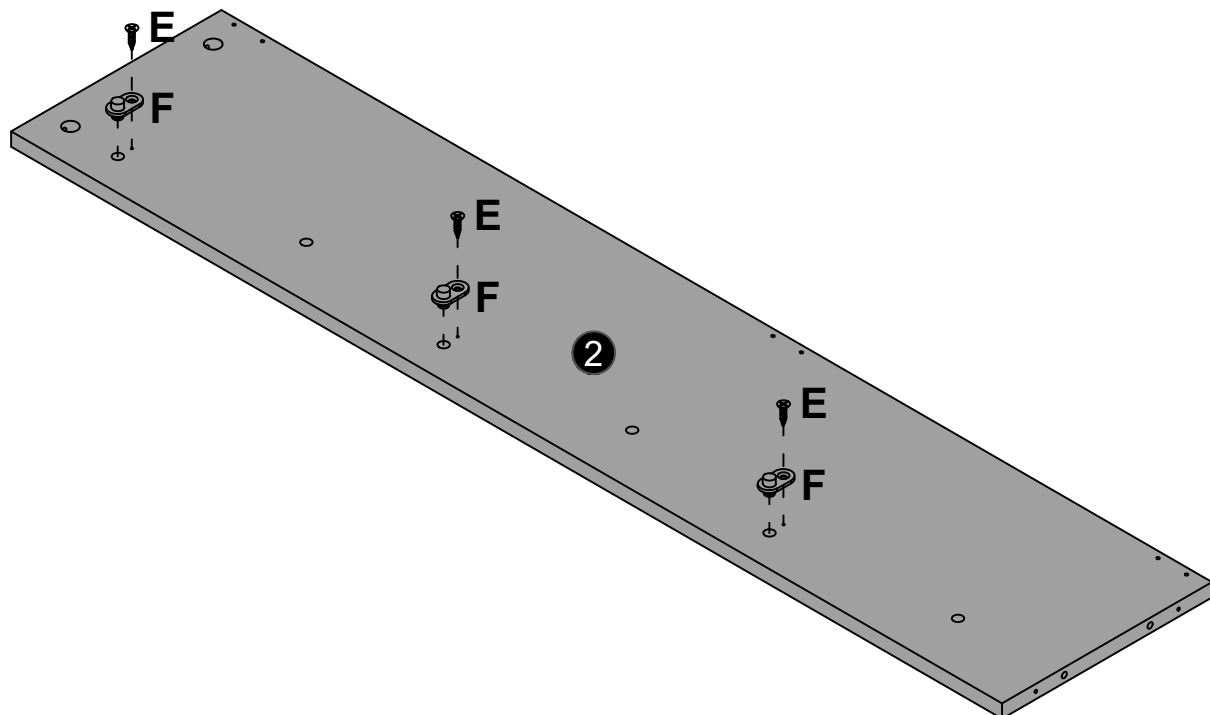E x3**F** x3**01**



E x3





F x3

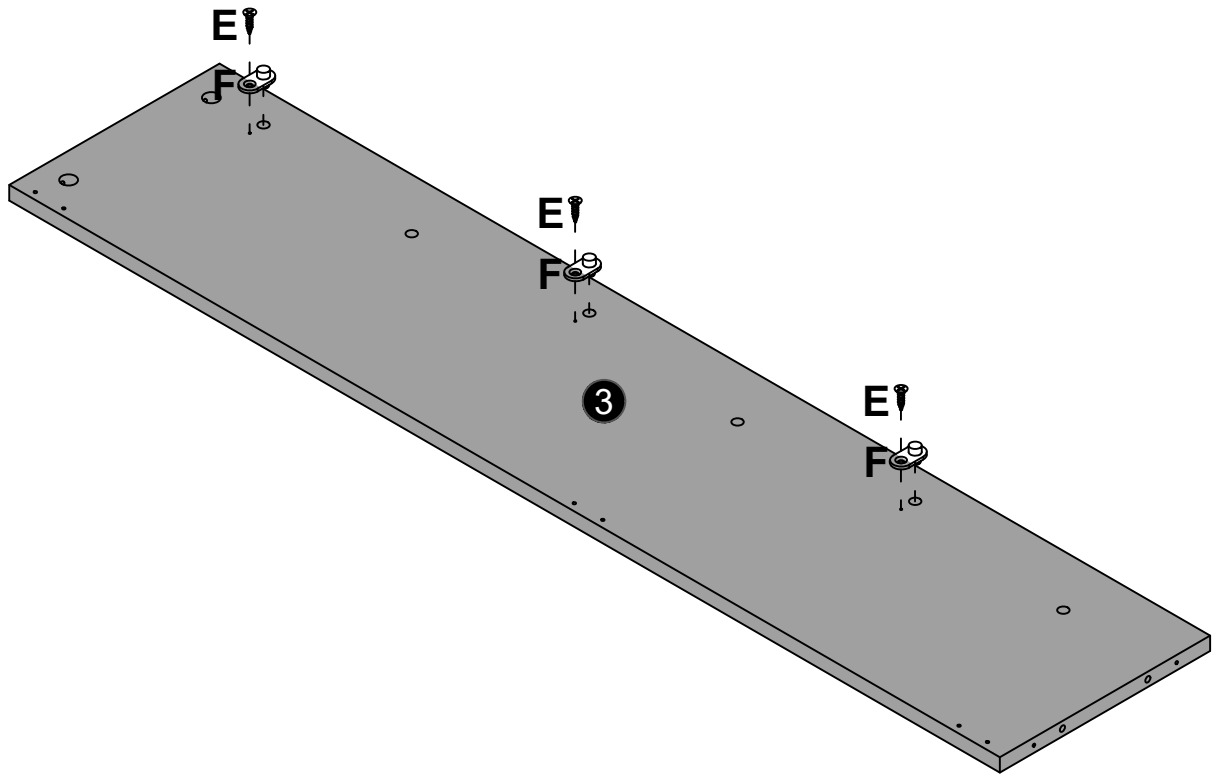


D x6

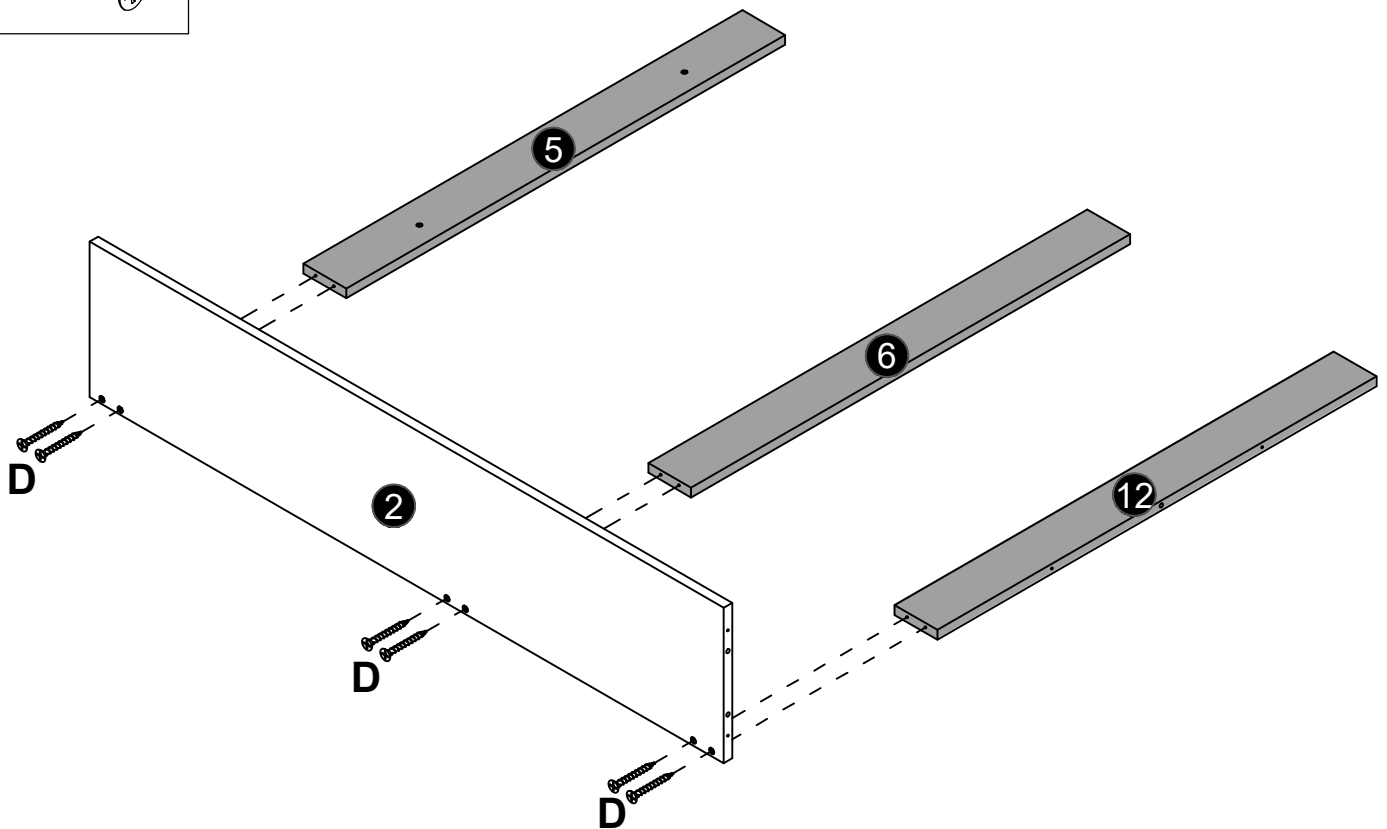



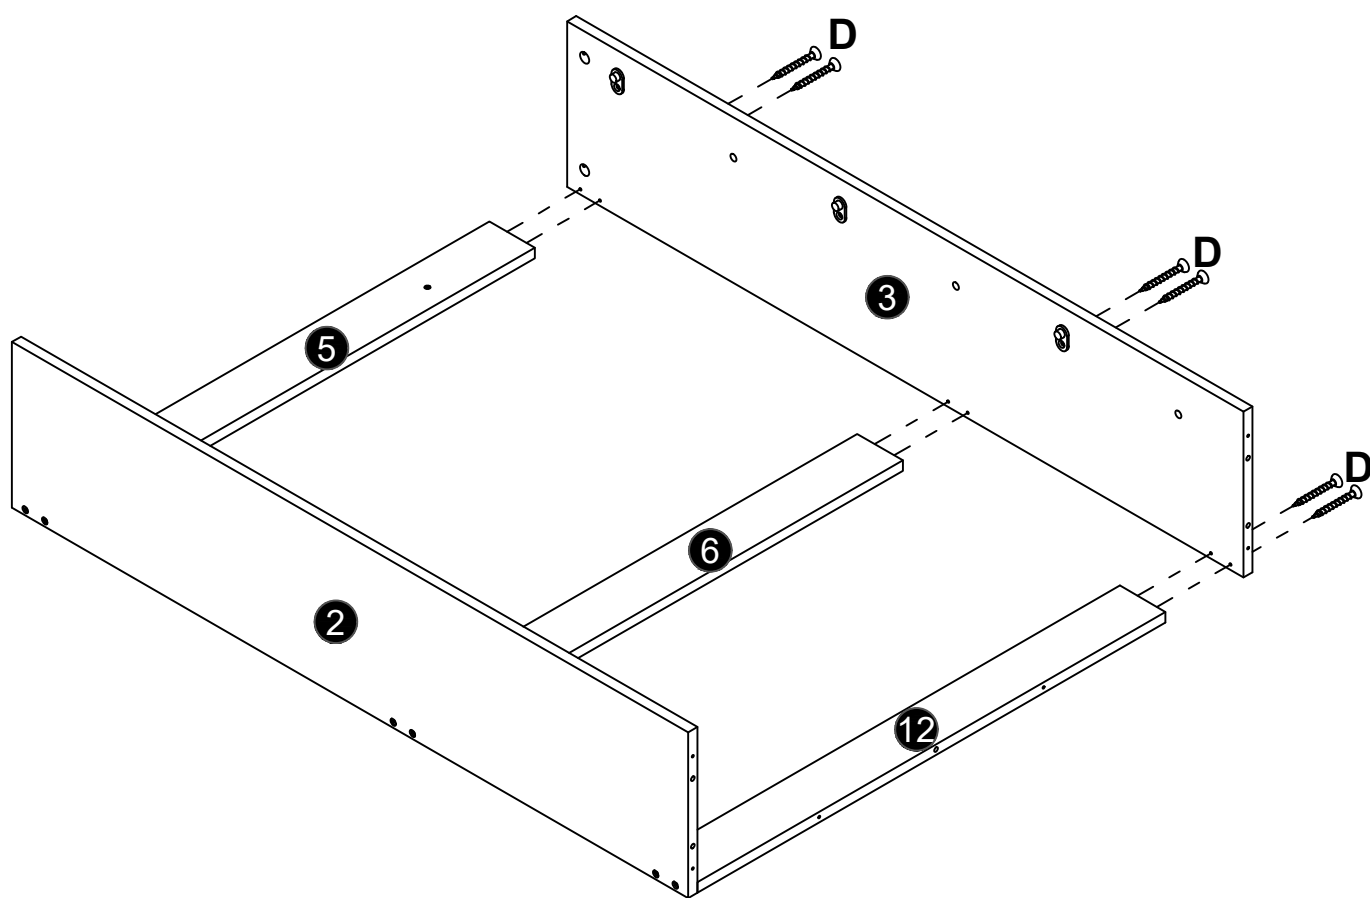


C x5




D x6

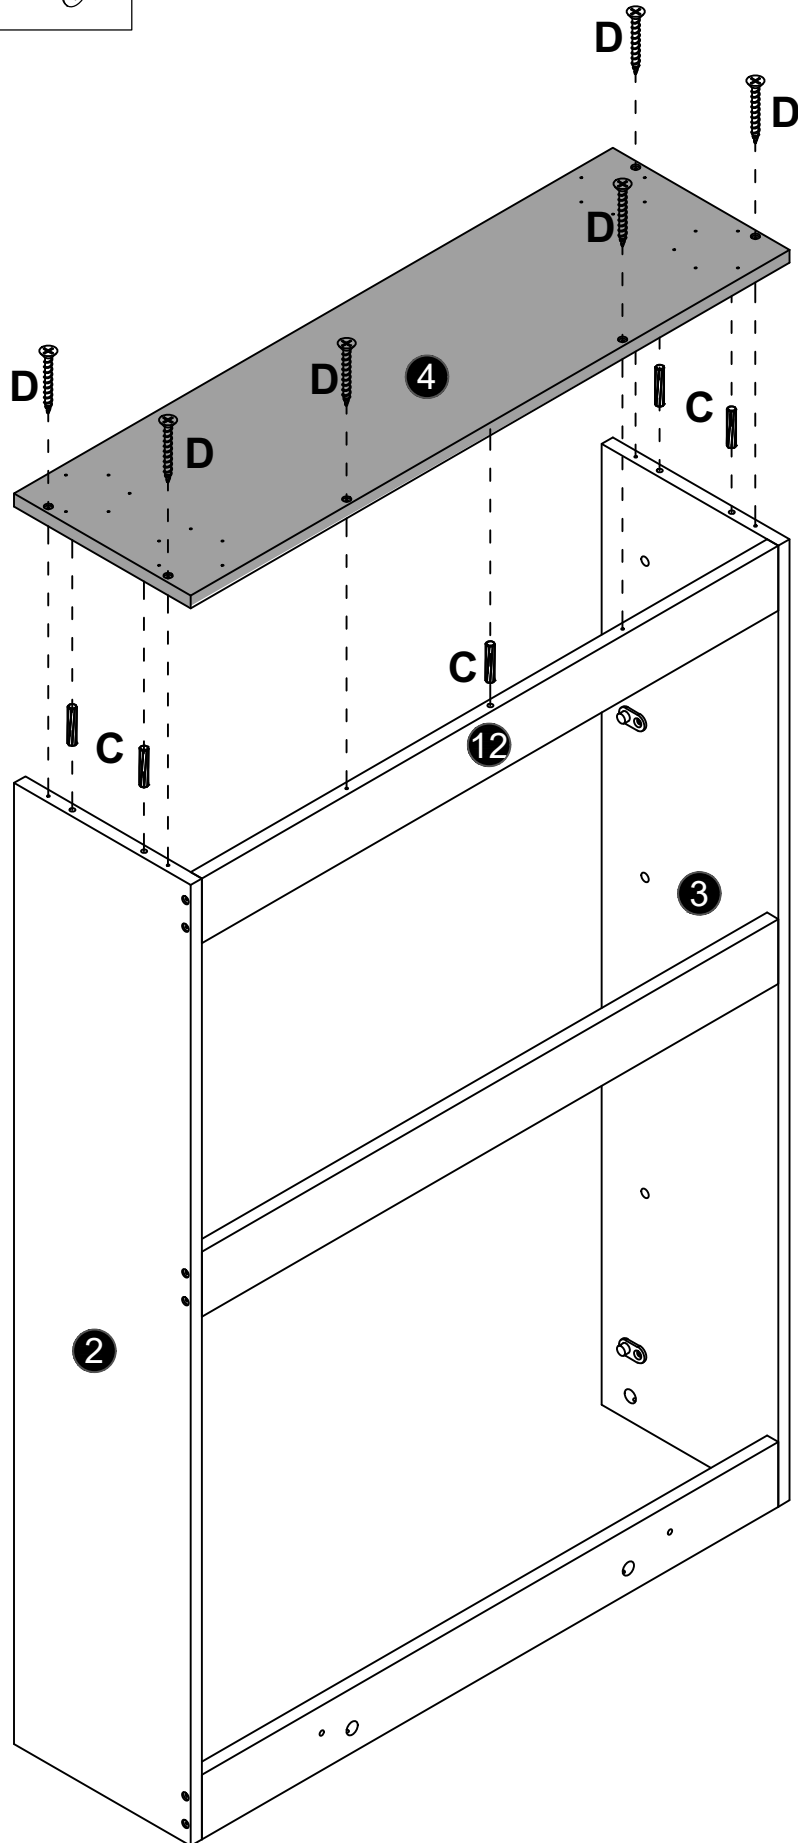


J x4




K x20

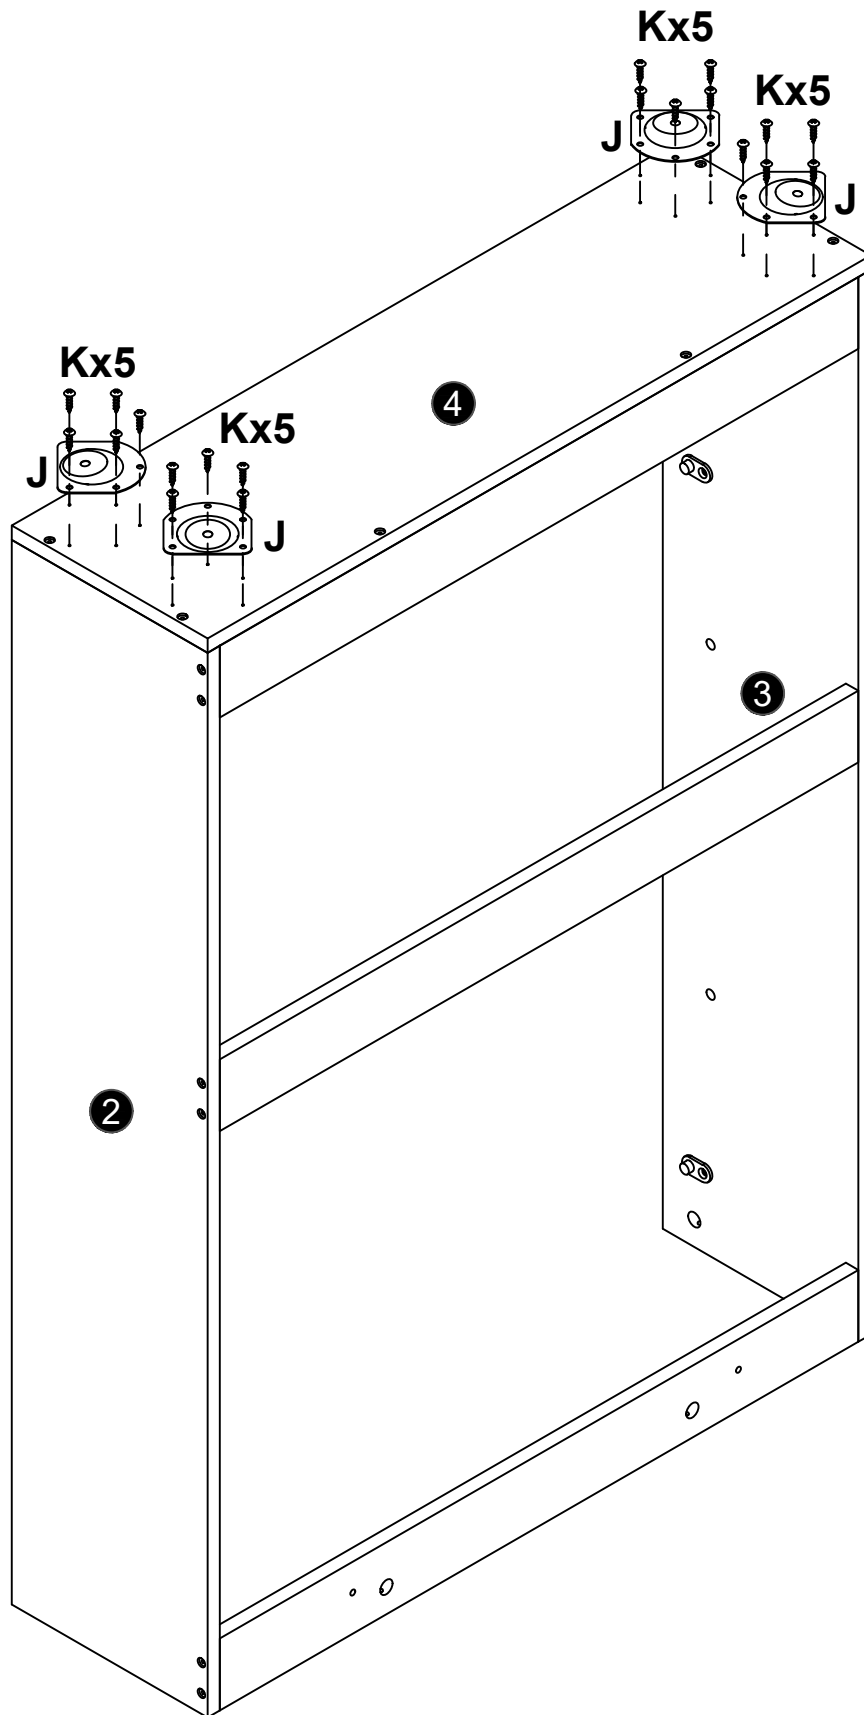


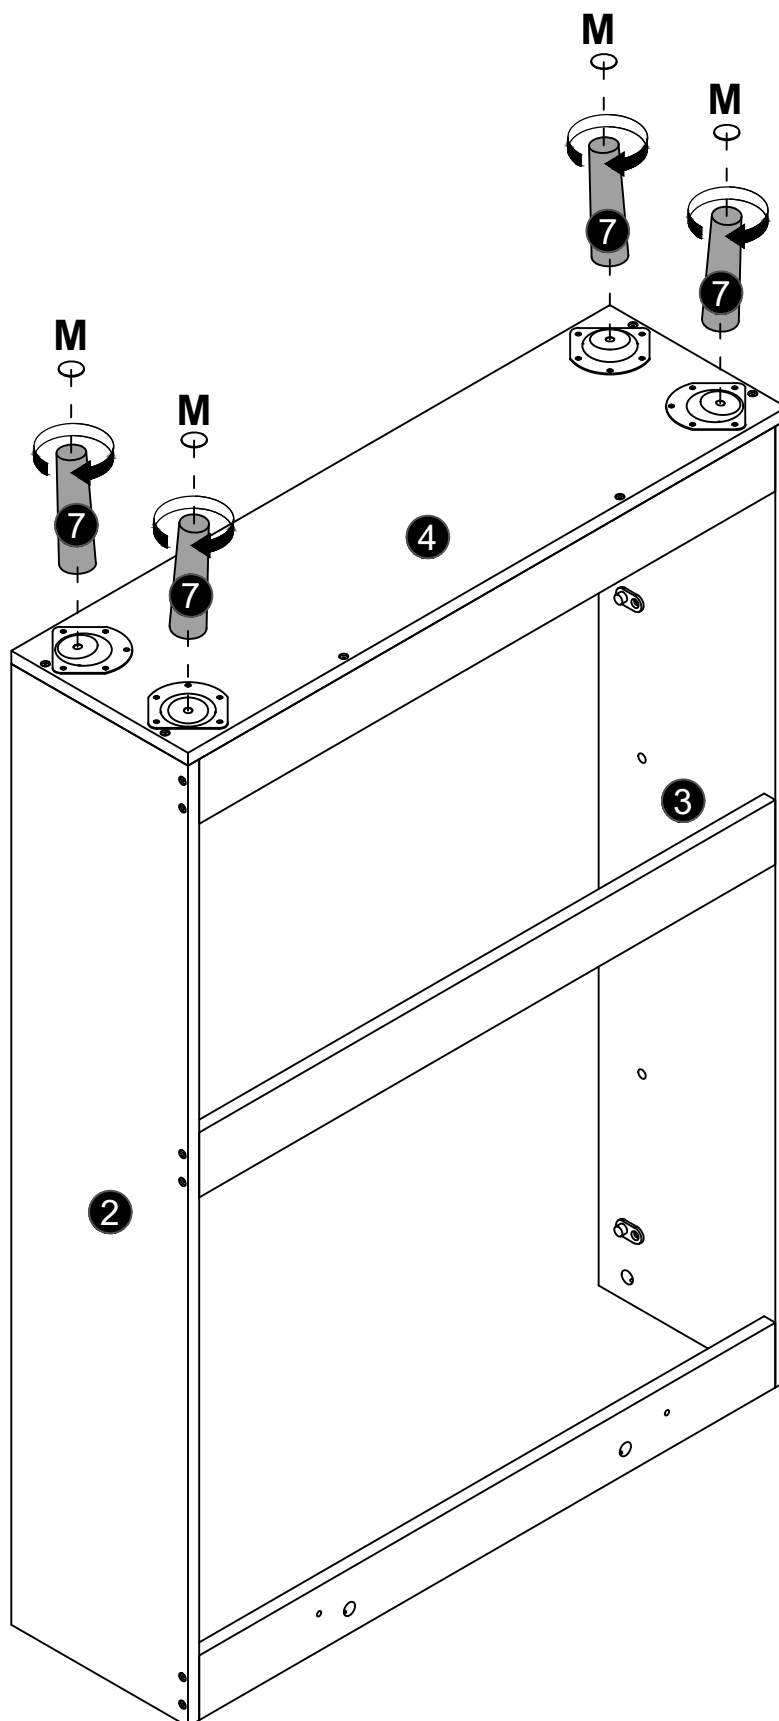

A x6



08

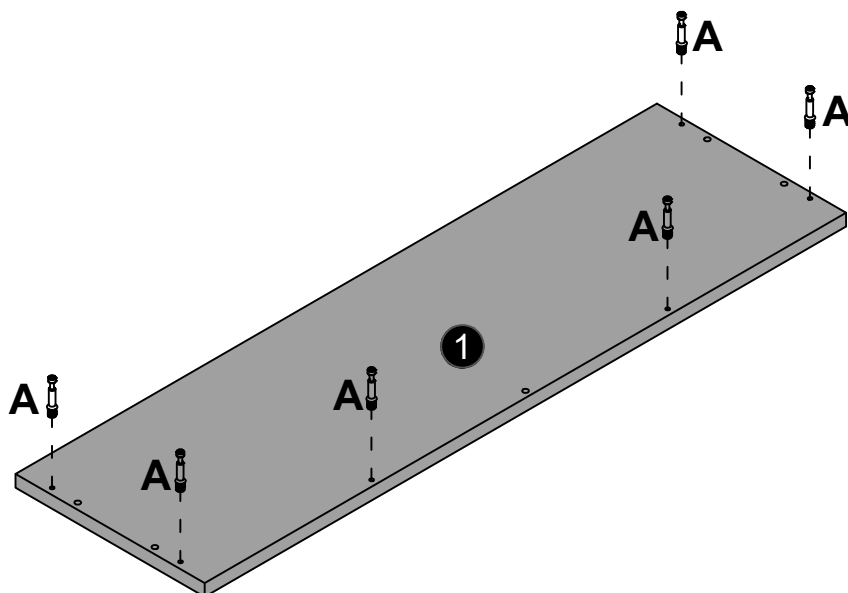


B x6



C x5




09

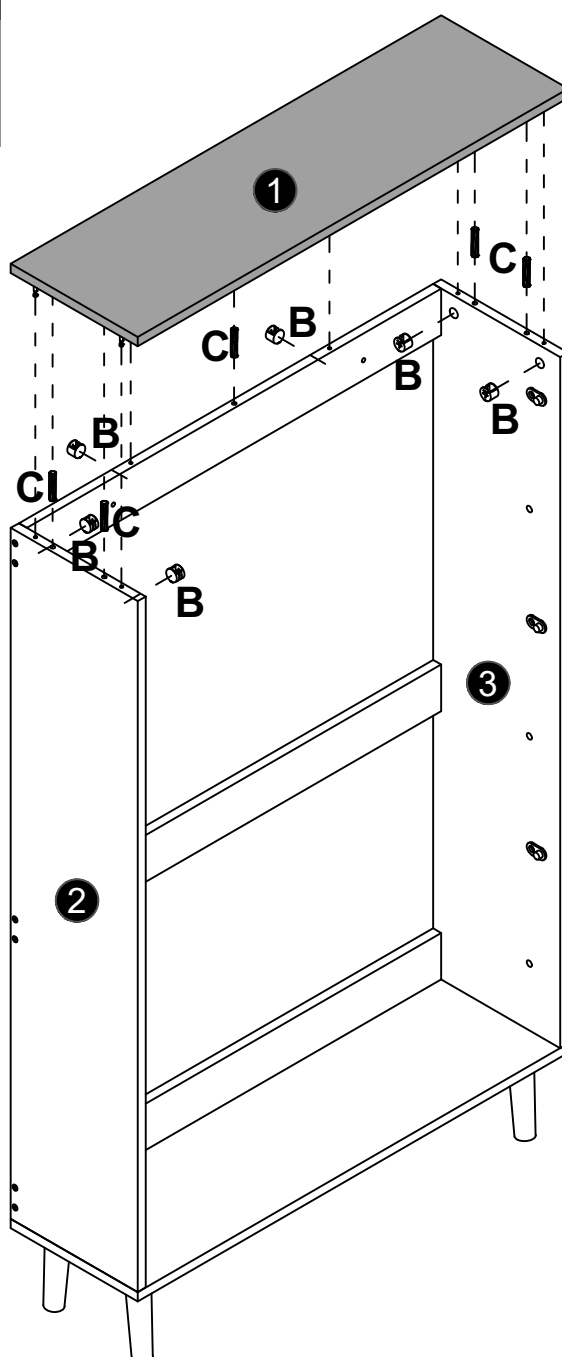

O x2



O-1 O-2

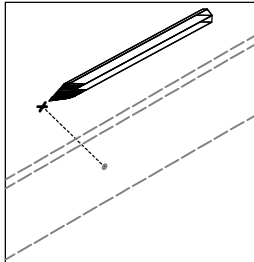

(1)x2

WALL

+
drilling hole
Ø6x30mm

(2)x2



First fix the anti-rewind screw in the reserved hole of the product.

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

O-1

(3)x2

WALL


O-1




(4)x2

O-2


Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

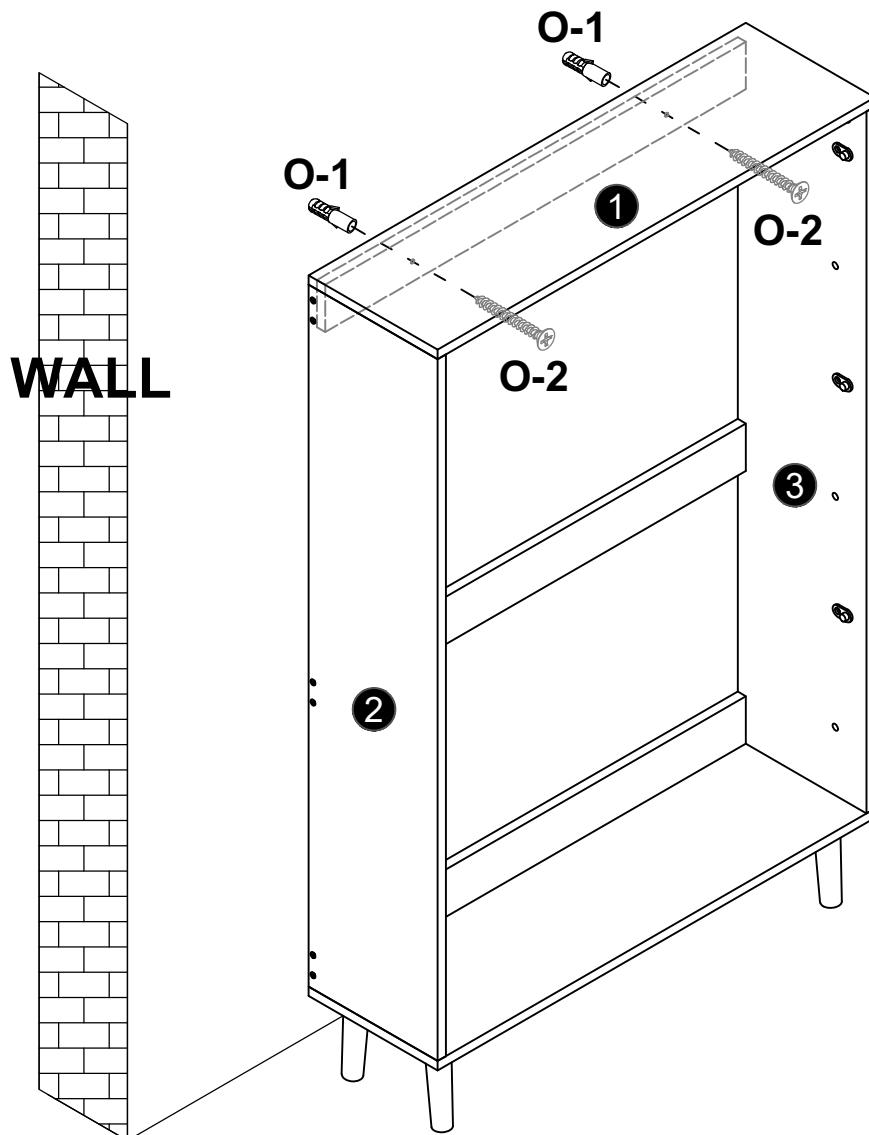

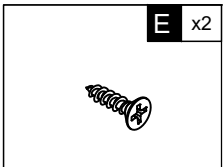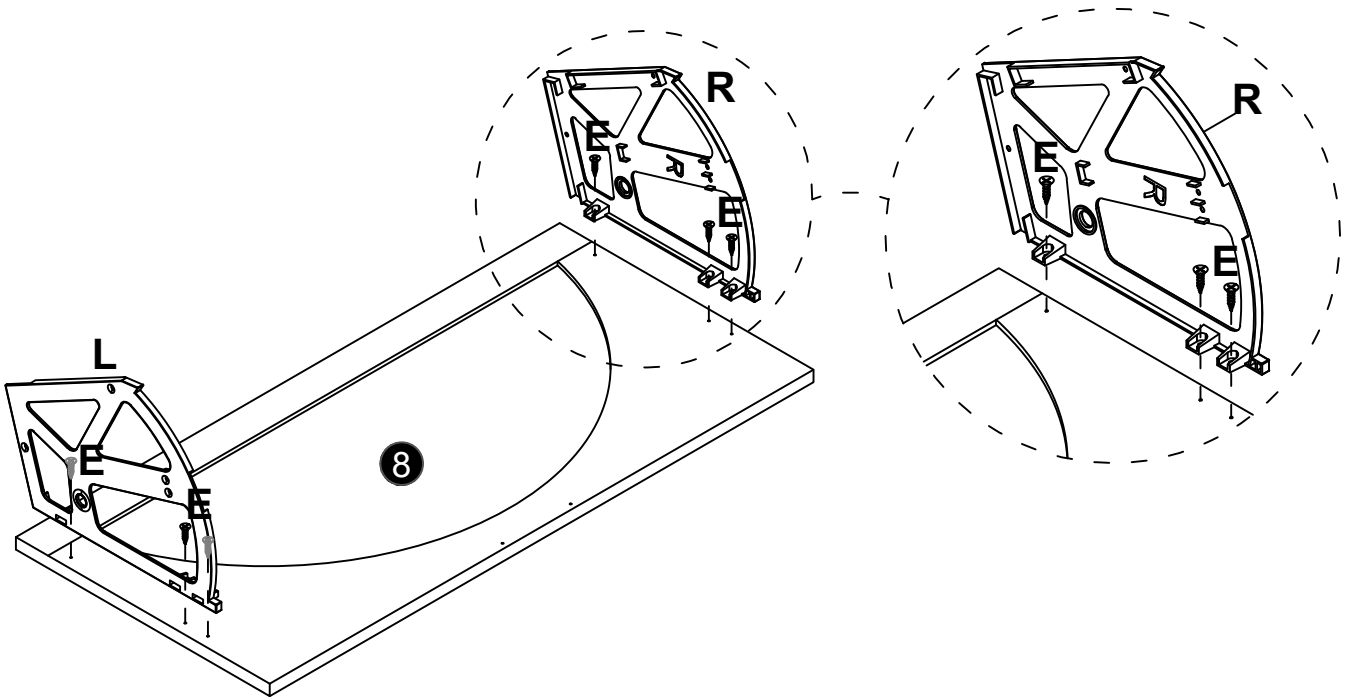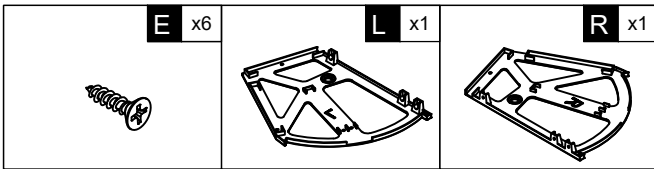


Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 10th back panel into the back panel slot As shown in the figure.

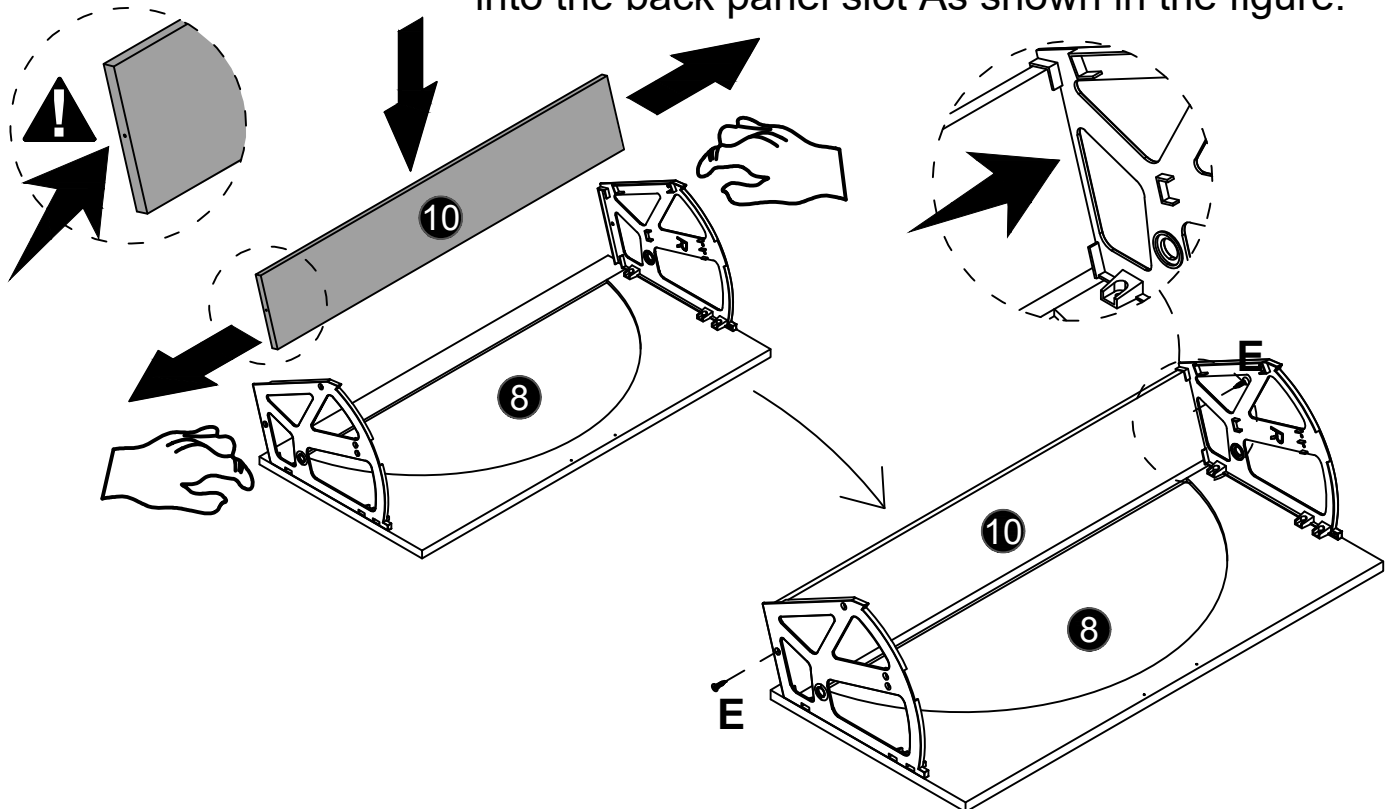

E x2

13



Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 11th back panel into the back panel slot As shown in the figure.

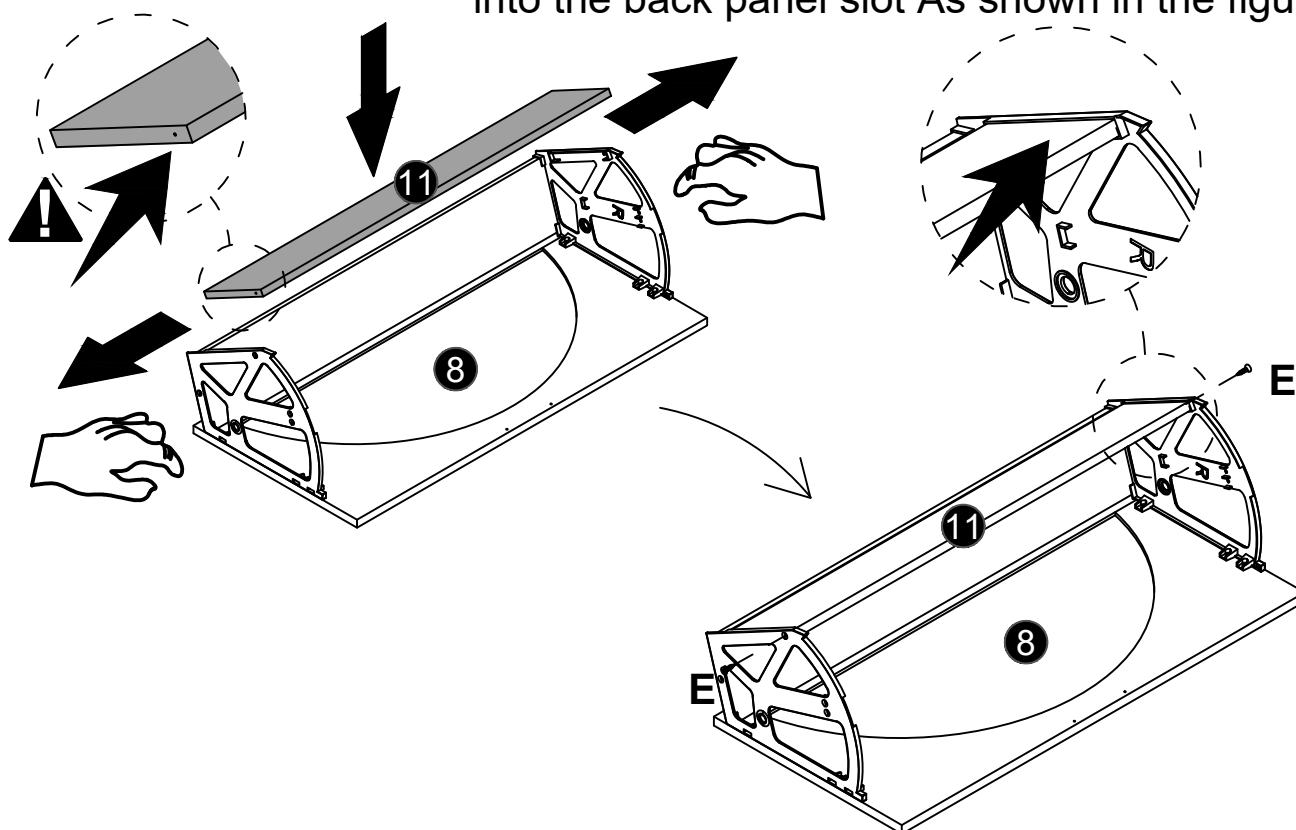

N x1

Q x2




14

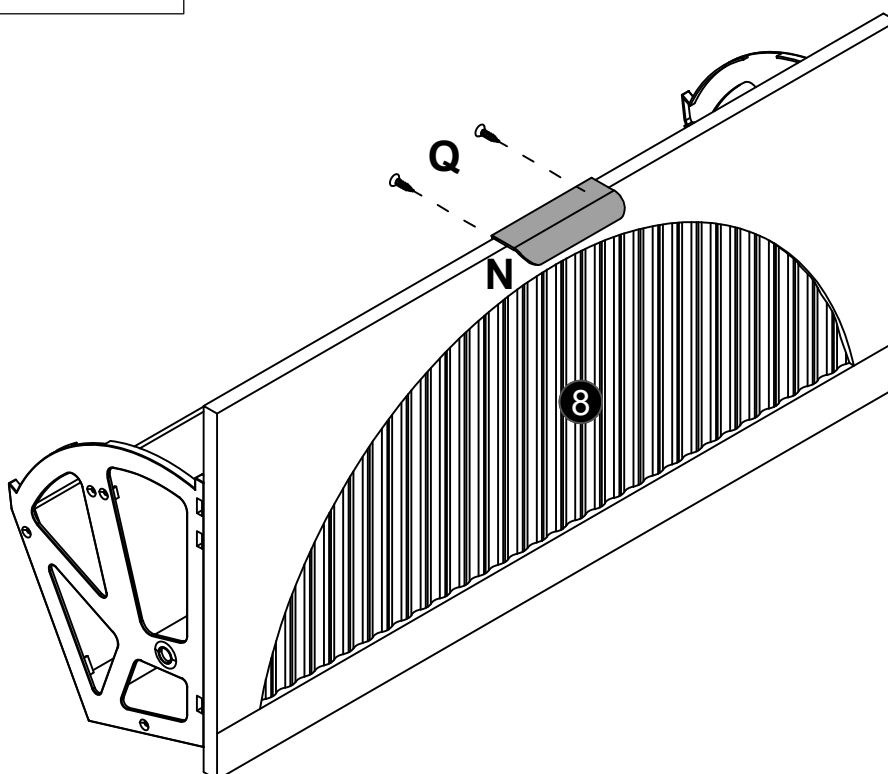

E x12

L x2

R x2

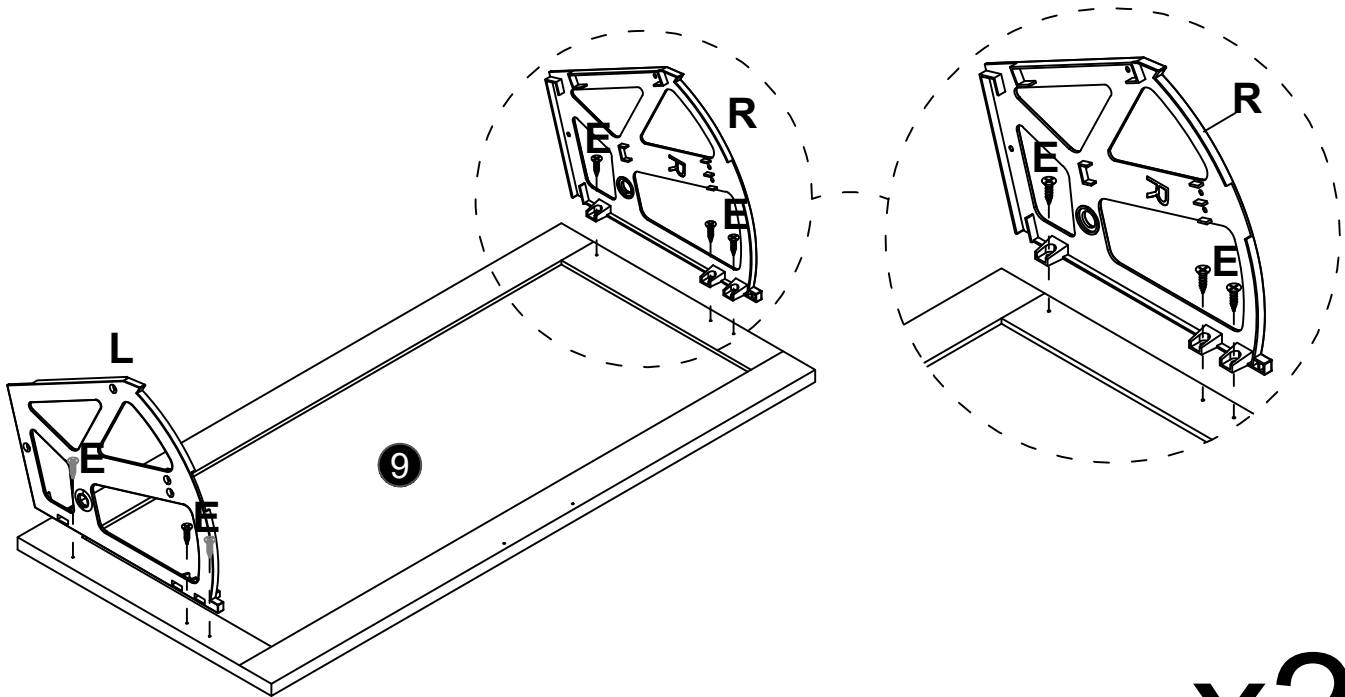


x2

E x4



Please push the shoe racks L and R slightly with your hands. As shown in the figure, facing towards both sides, Place the 10th back panel into the back panel slot As shown in the figure.

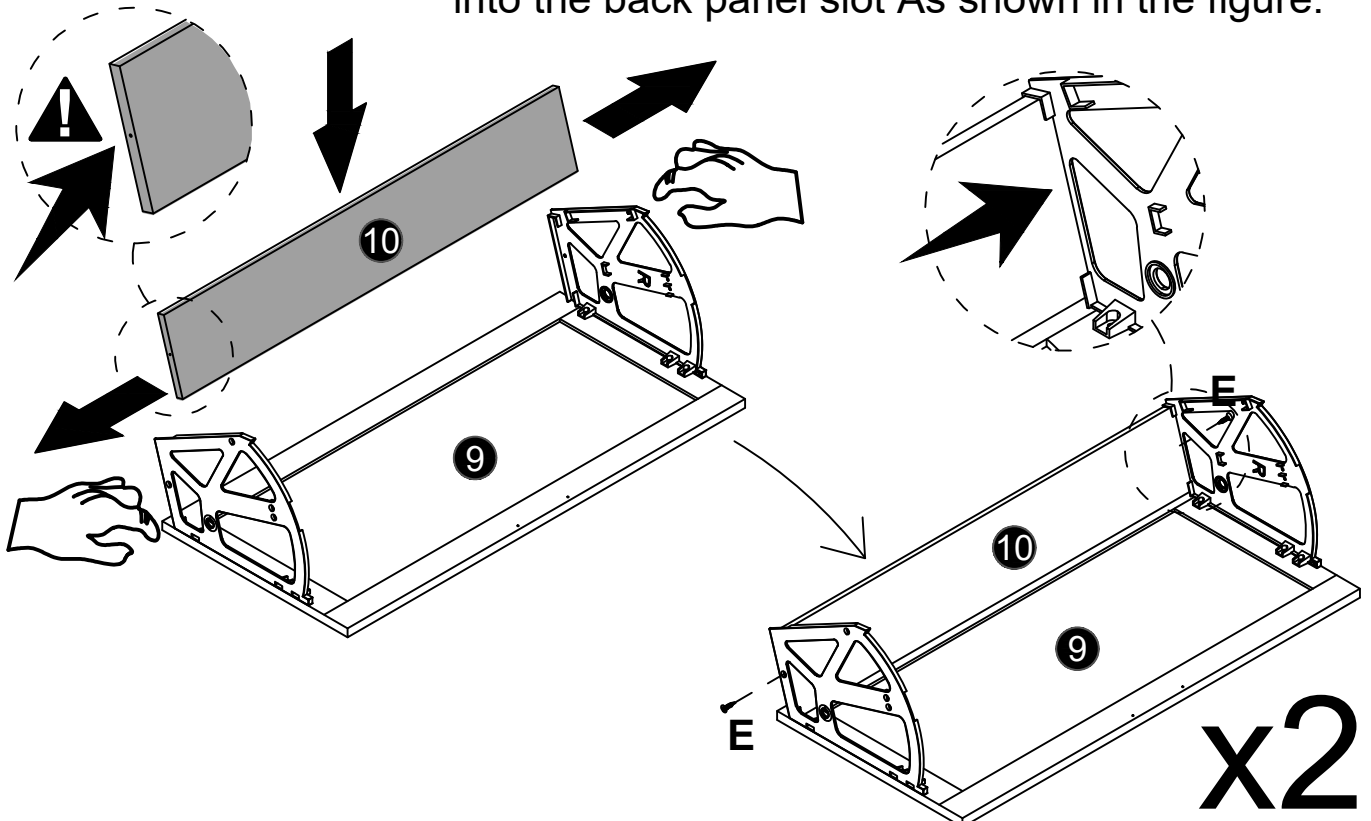


x2

E x4

17


Please push the shoe racks L and R slightly with your hands .As shown in the figure, facing towards both sides,Place the 11th back panel into the back panel slot As shown in the figure.

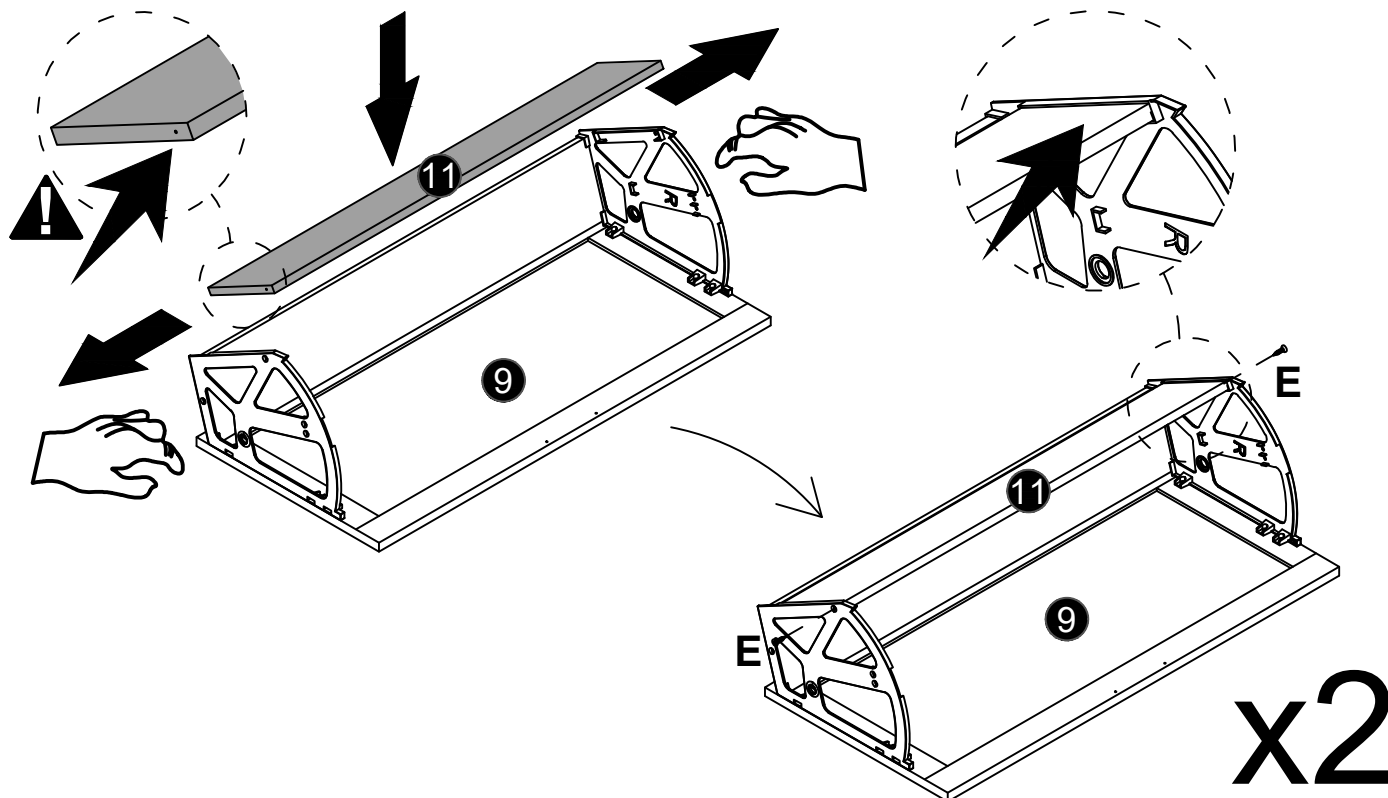




N x2

Q x4


18

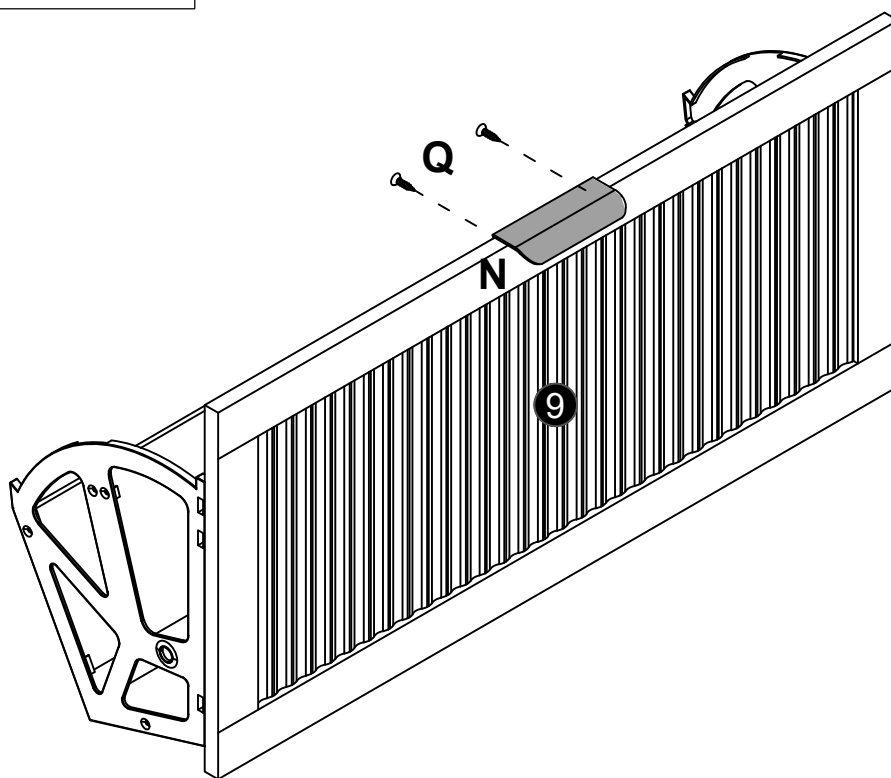


x2

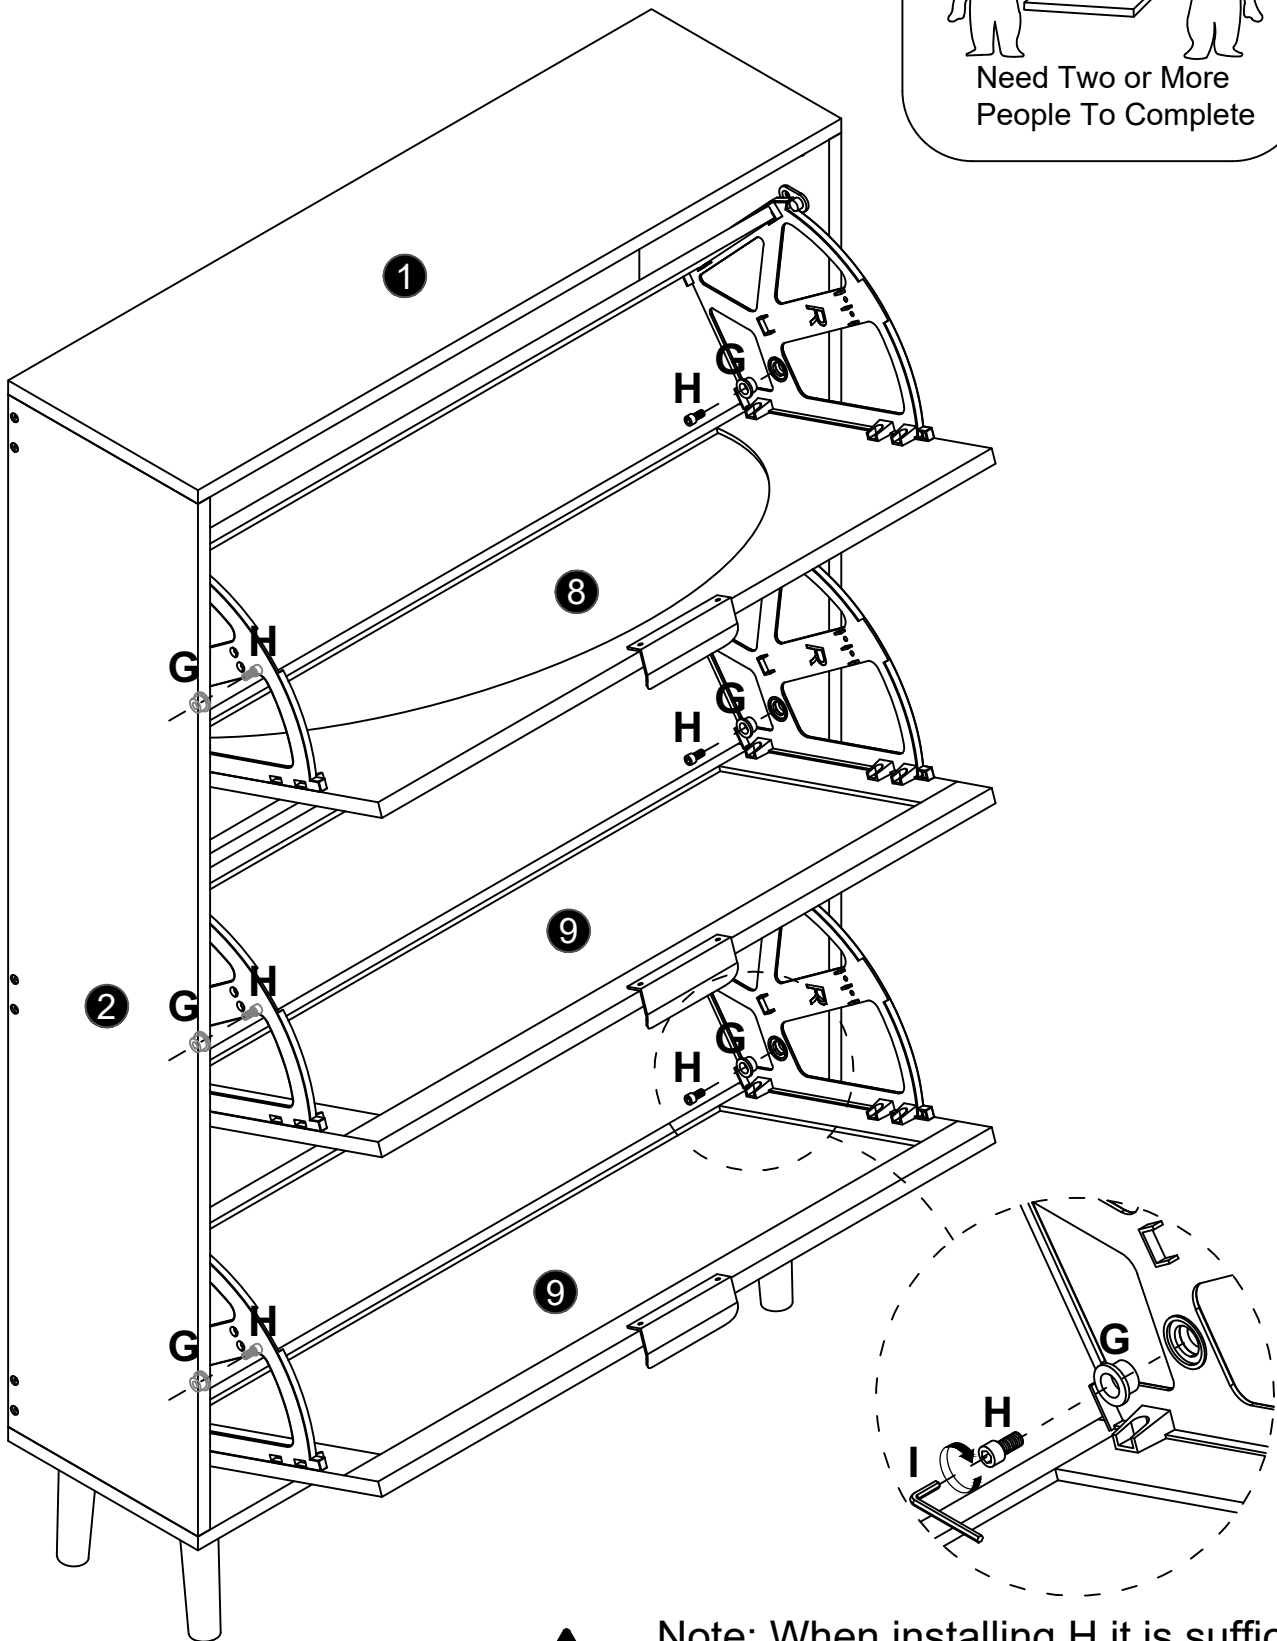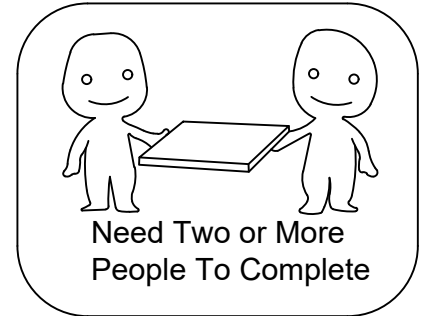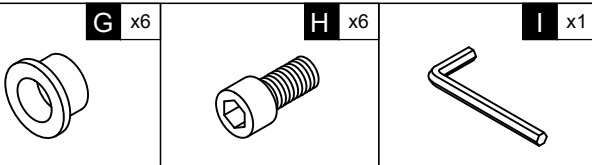


Note: When installing H, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

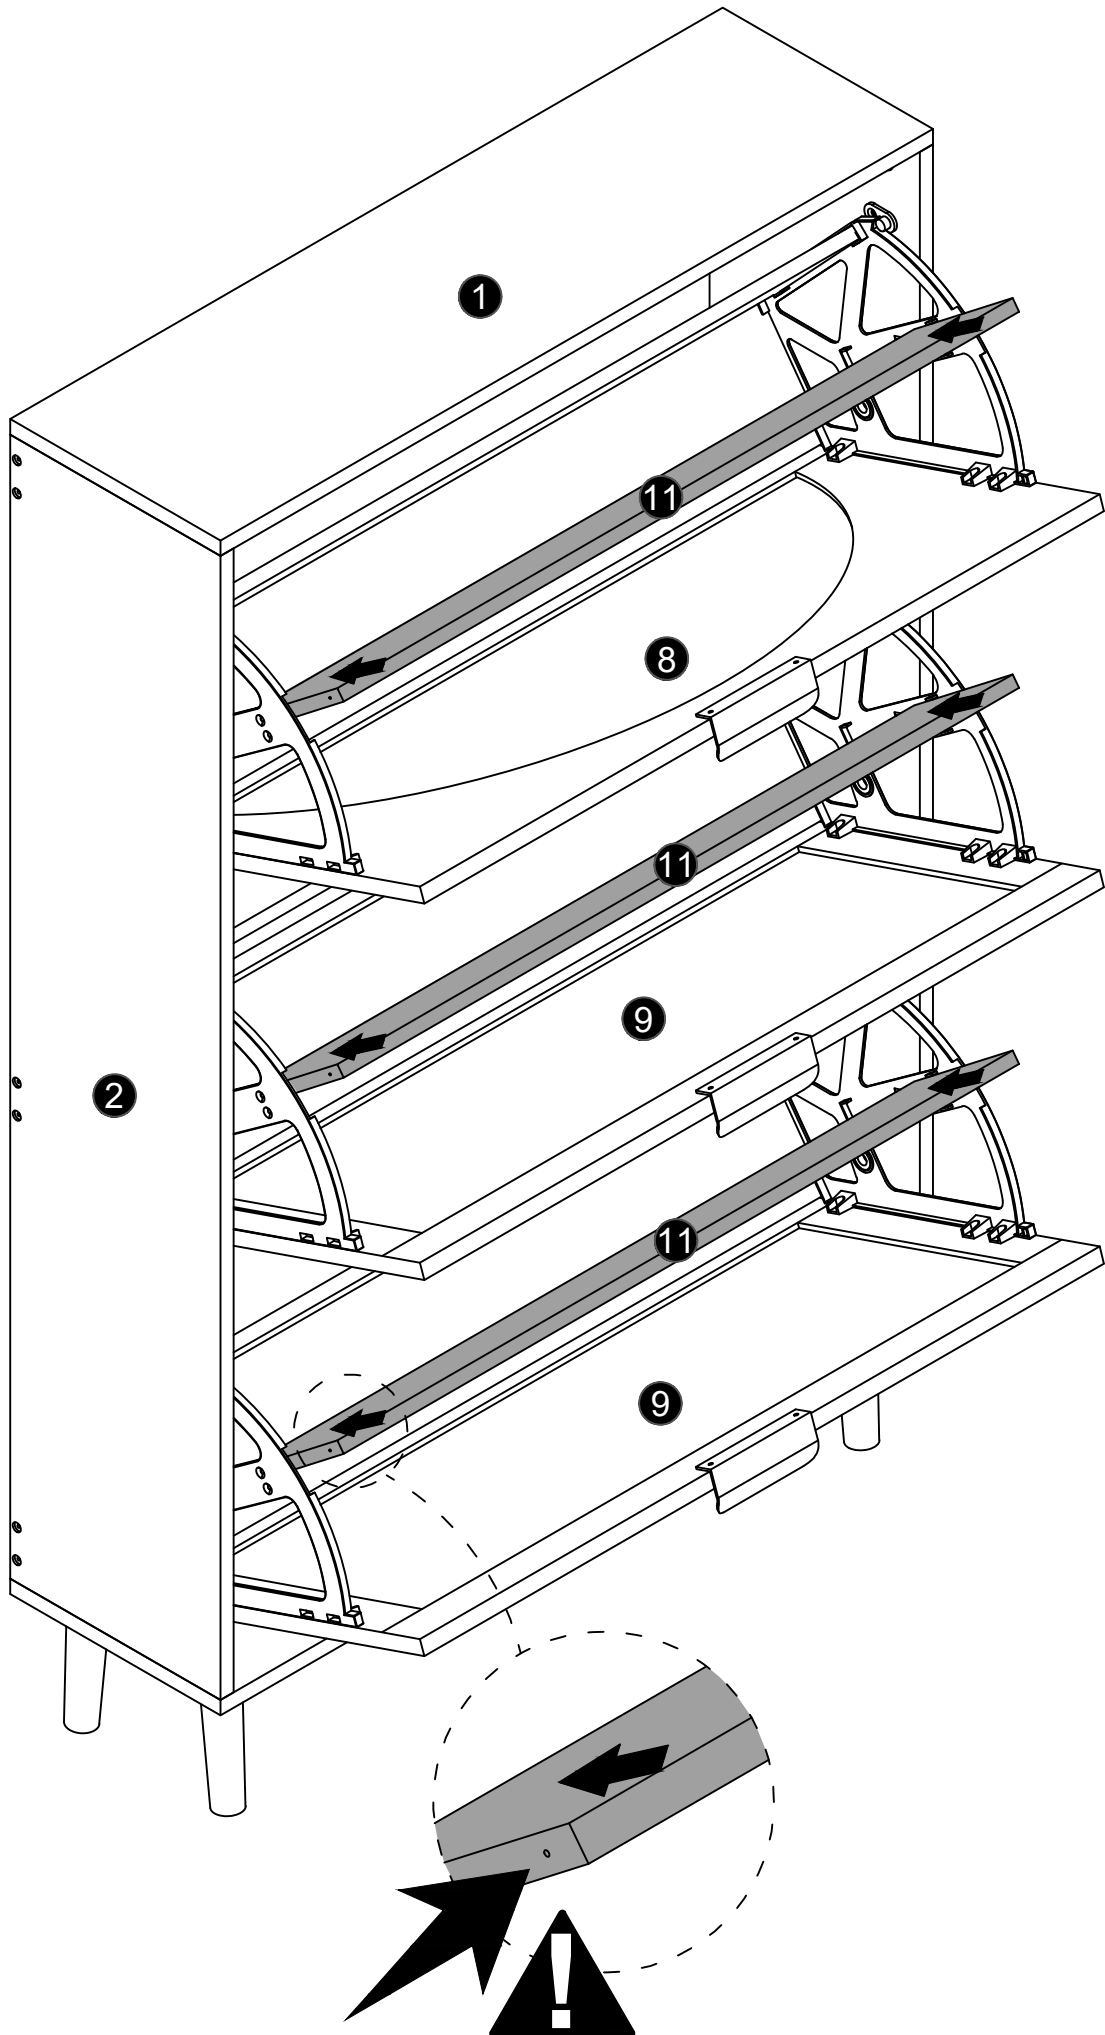

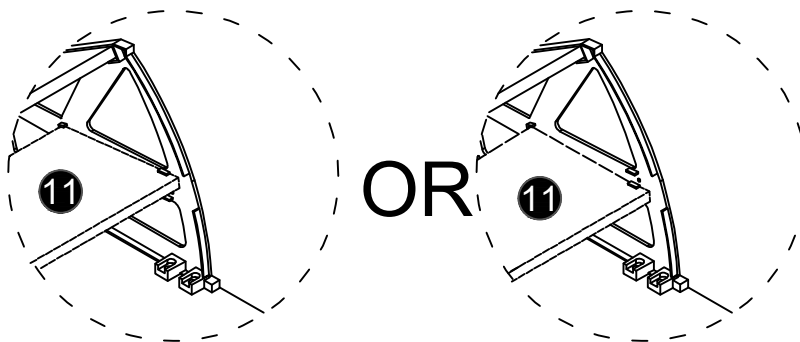

Adjustments can be made according to your own needs.

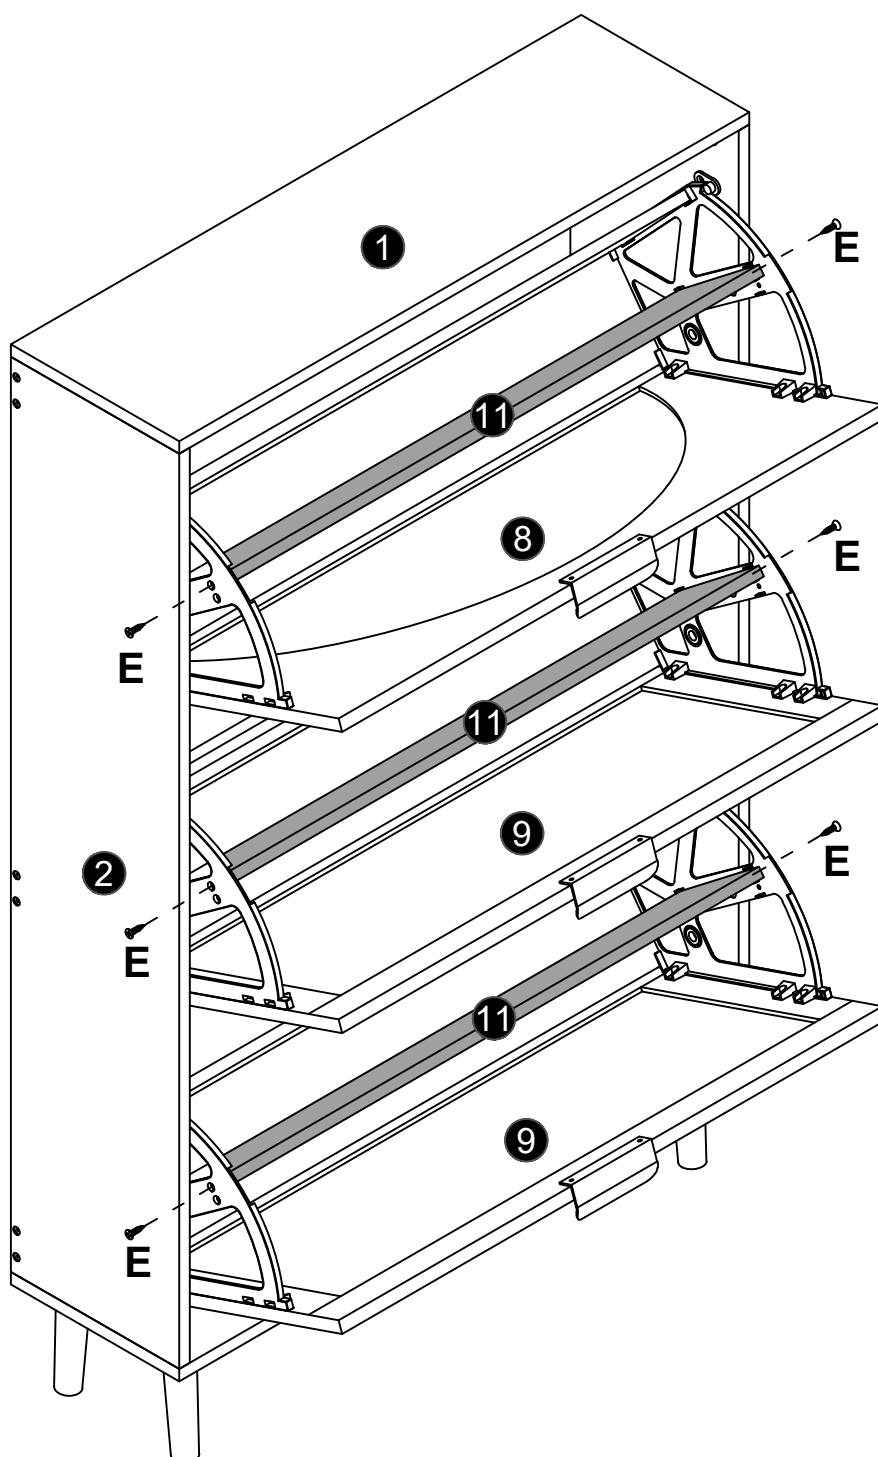

P x12

Done

