


Bamboo Bed Frame Set-up Instruction

Size: Queen (8904-16/18)

If you have any questions about the product, please don't hesitate to contact us.
You can reach us through your order. Thanks for your support!


Components-Parts

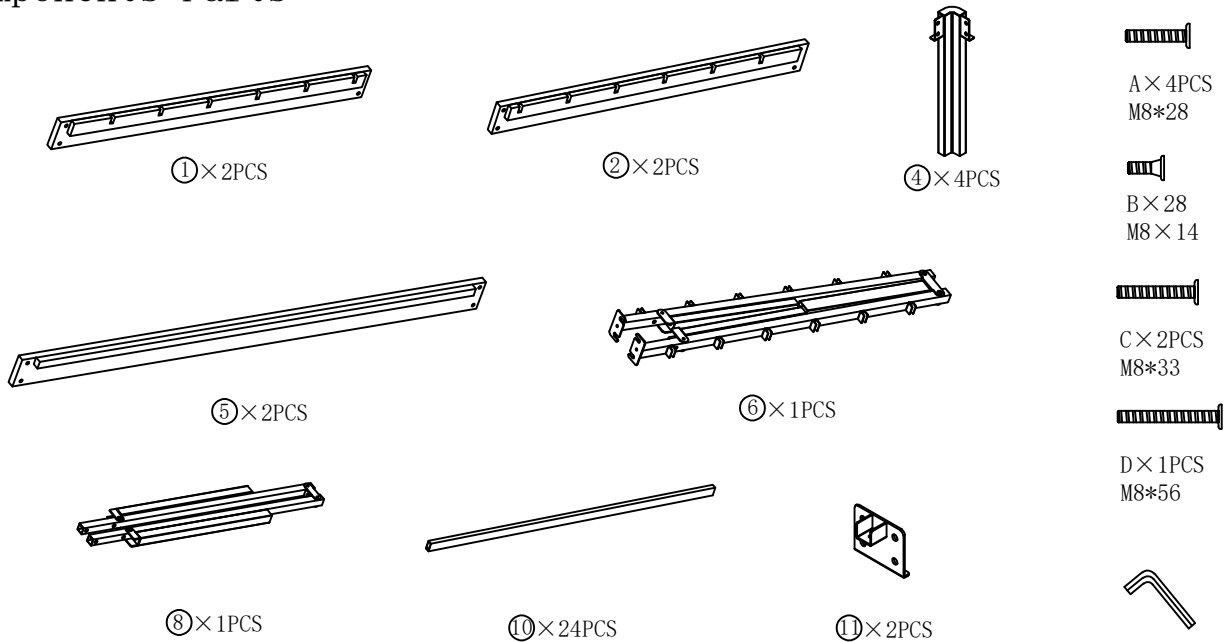




NOTE: The M8*27 for the bolt indicates a diameter of 8 mm (0.315 in) and a length of 27 mm (1.06 in).

Spare: A × 1, B × 1, C × 1, E × 1




Component Distribution - Easy Assembly in 6 Steps

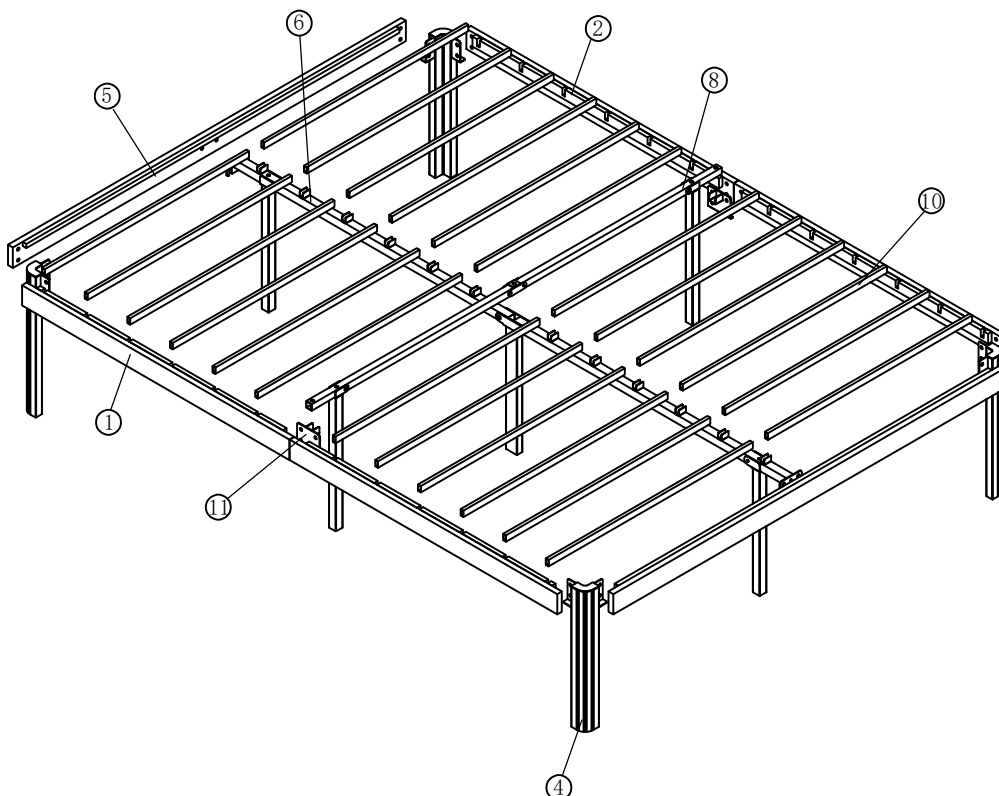



Step1:Take out parts ①&② & ①①; Joint them with screws as shown

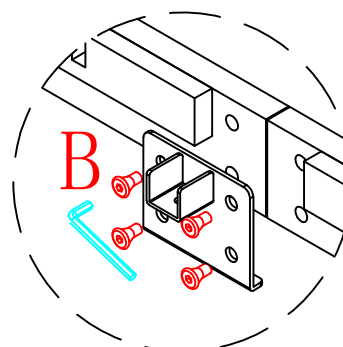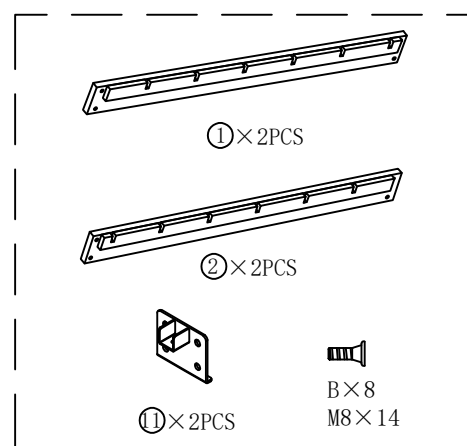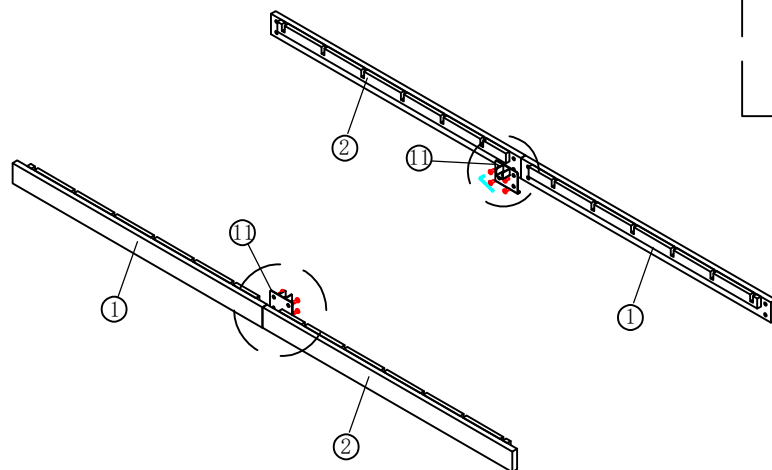

Step2:Joint four corners with screws as shown

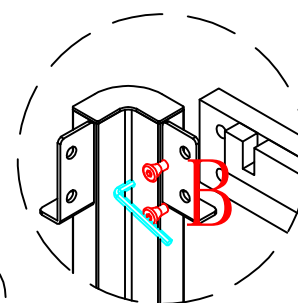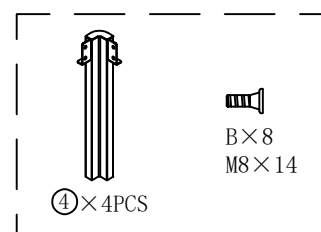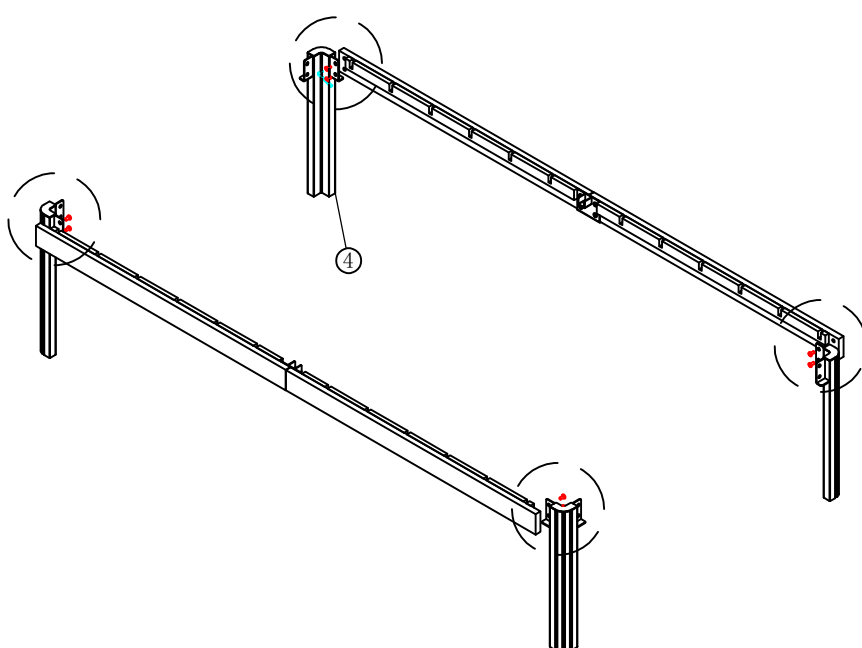


Step3:Joint parts ⑤ with screws as shown

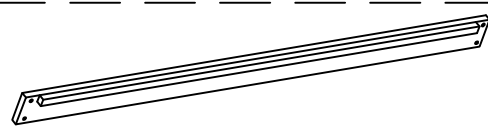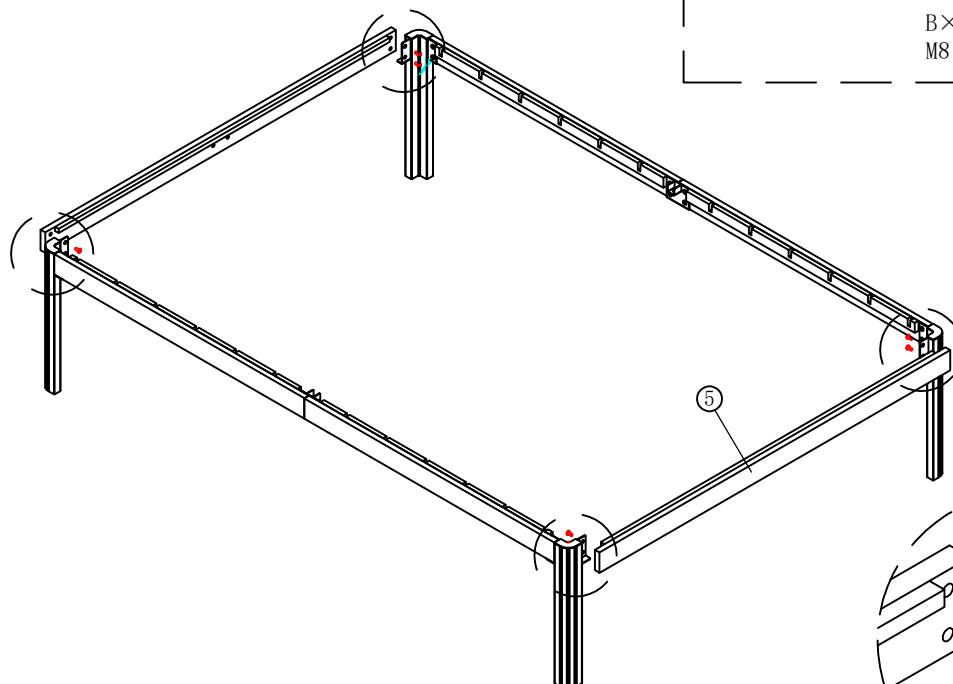



⑤×2PCS



B×8
M8×14

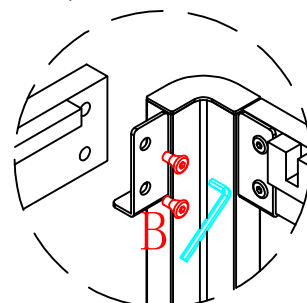

Step5:Joint parts ⑥ with screws as shown

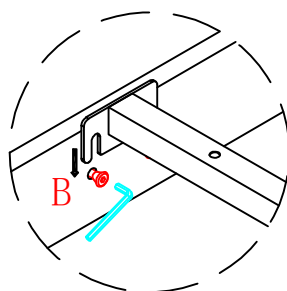



⑥×1PCS




B×4
M8×14




C×2
M8×33

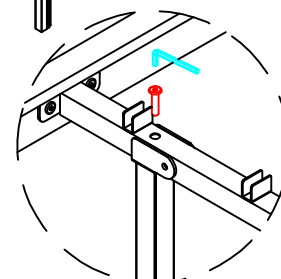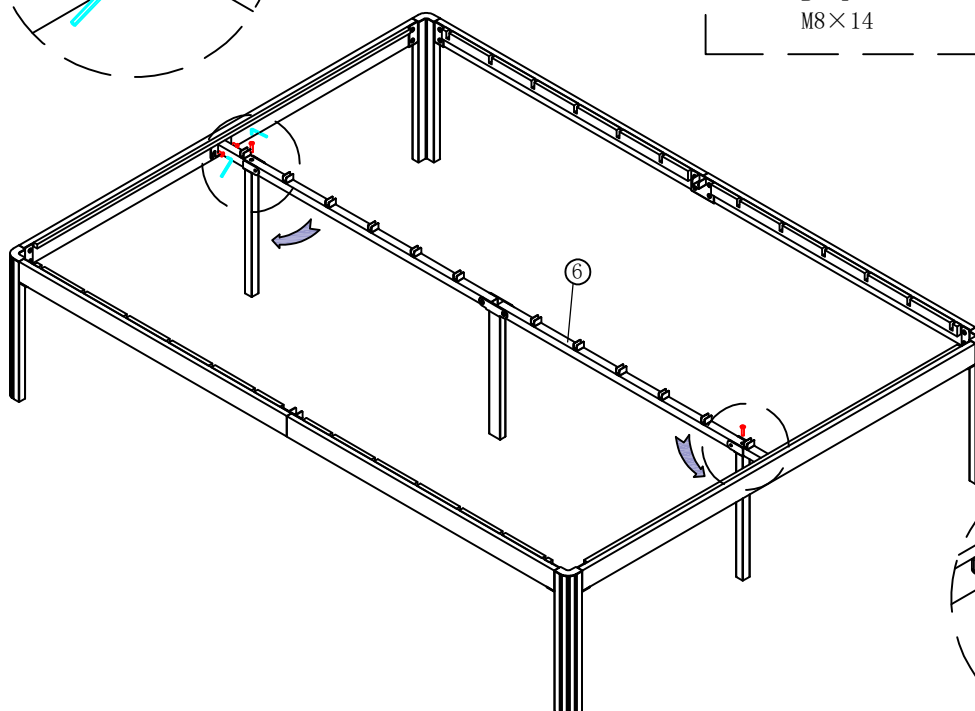

Step6:Joint parts ⑧ with screws as shown

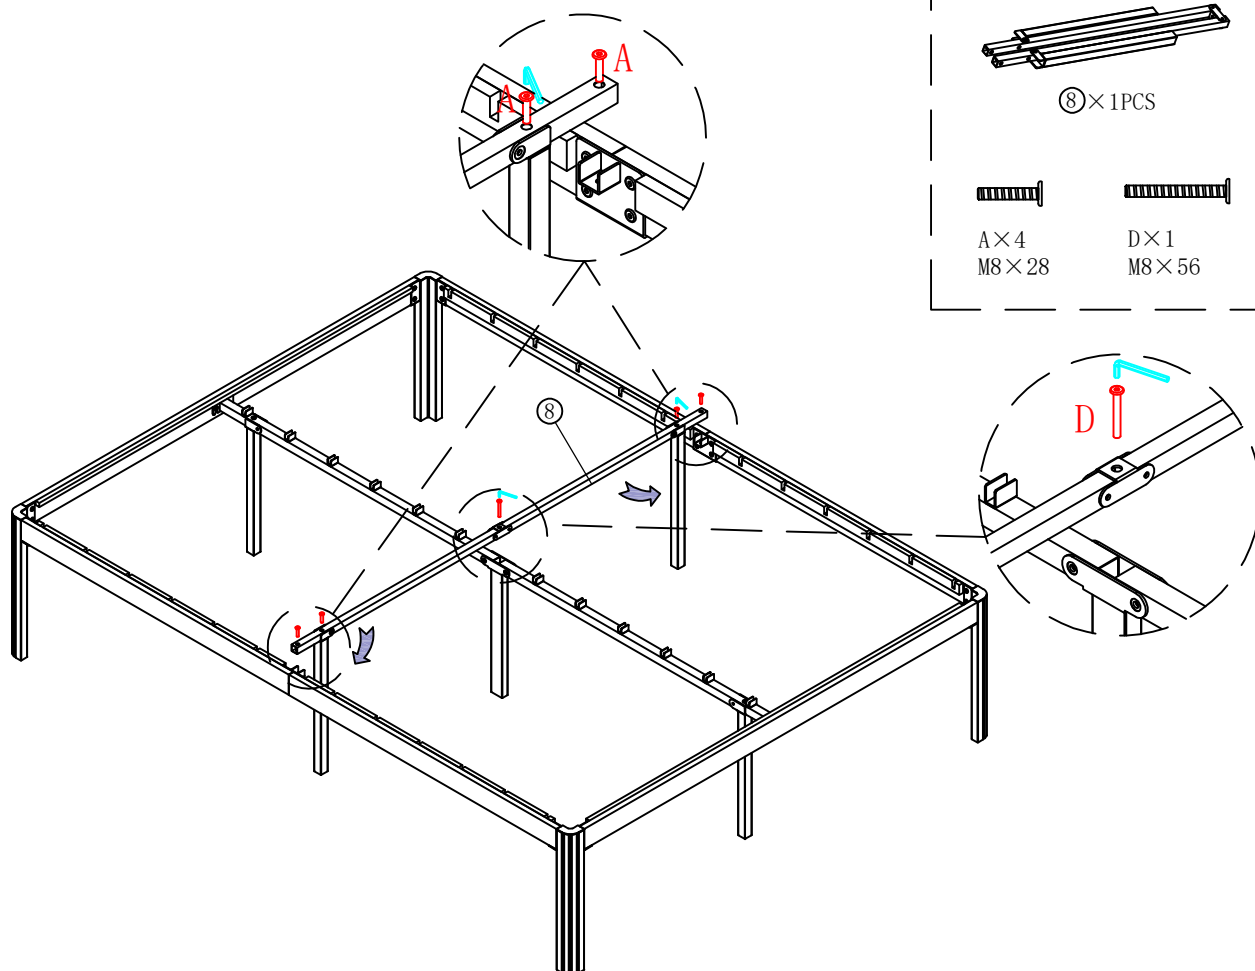

Step7:Insert slats

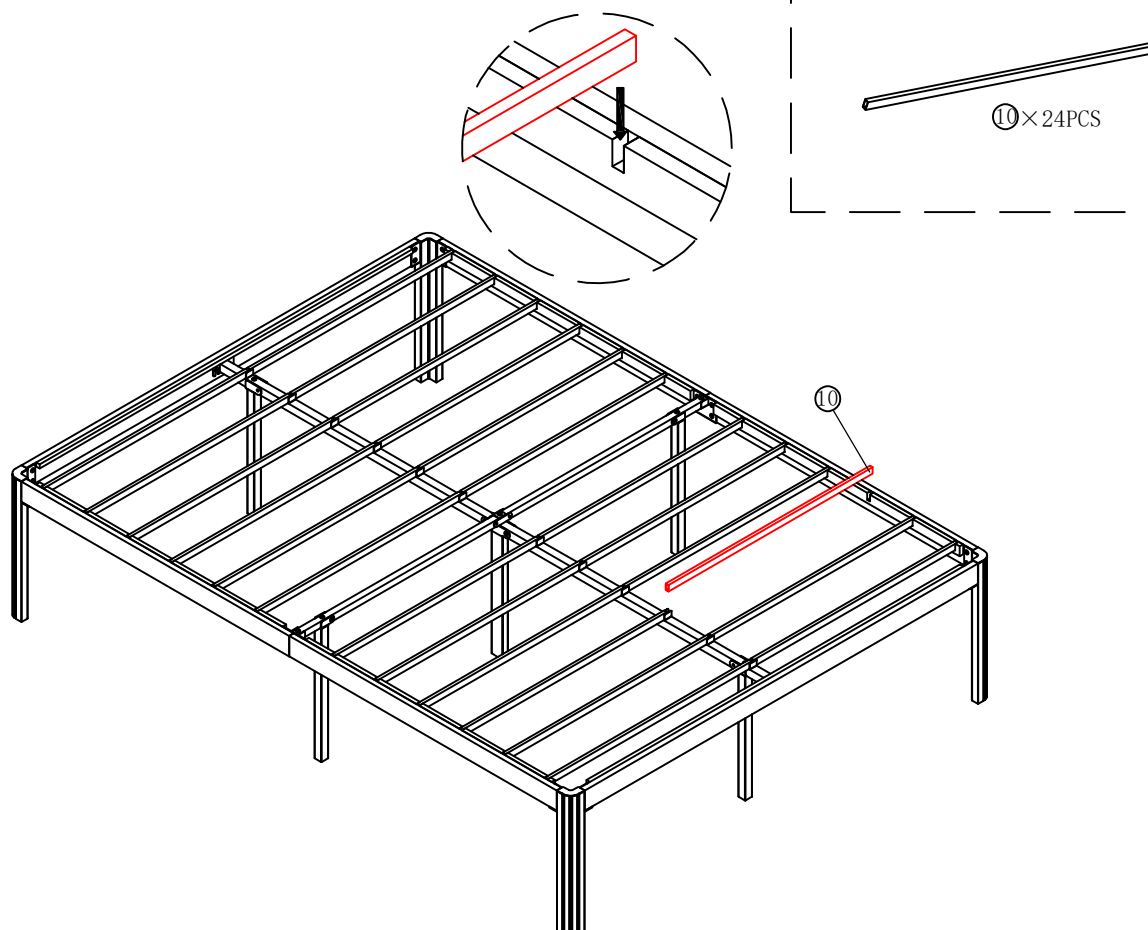

In the last step, please make sure all the screws are tightened.