
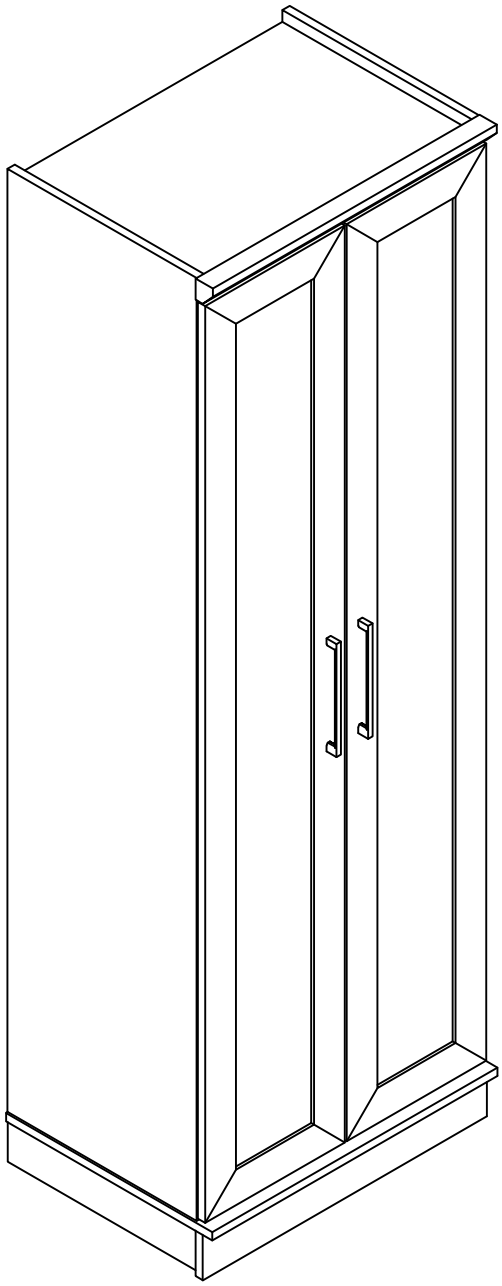


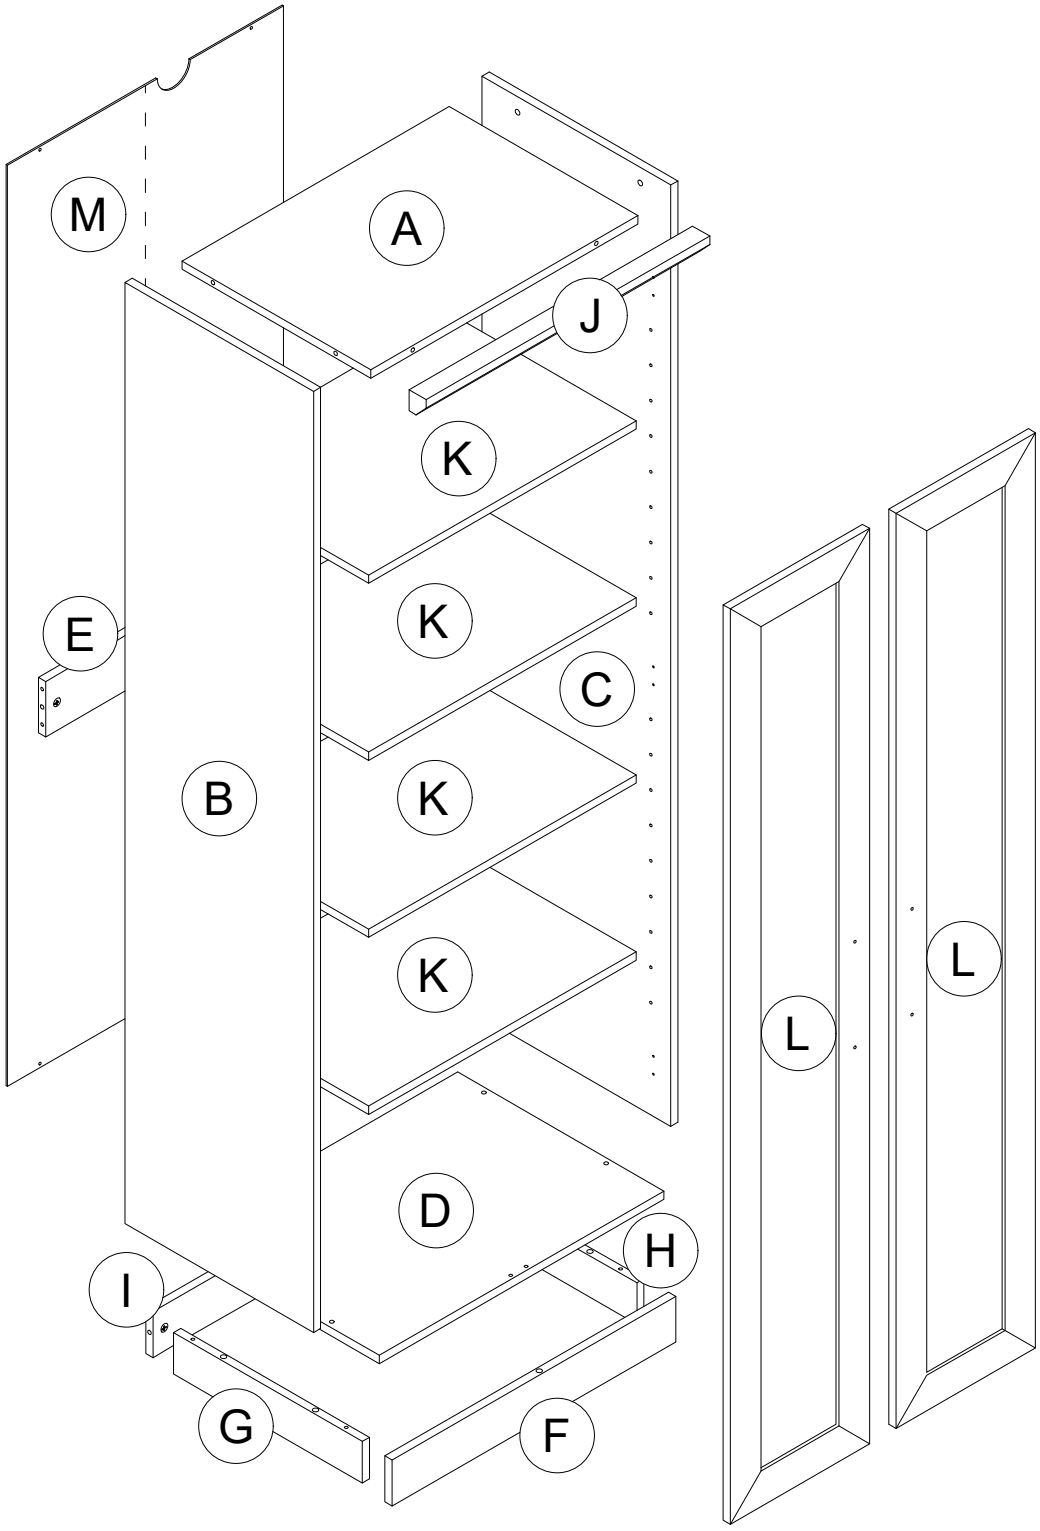


MODEL: SC24001



M
A
J
K
K
E
C
K
B
K
L
L
D
H
I
G
F

HARDWARE LIST


1 x 18

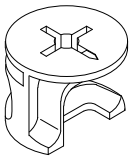


2 x 18




3 x 2

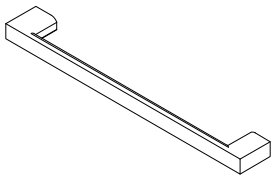


4 x 16



5 x 6

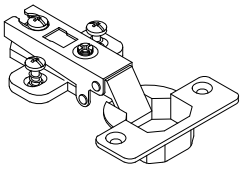

6 x 8

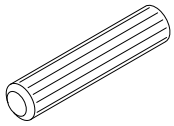


7 x 12




8 x 4




9 x 4



10 x 4




11 x 2




12 x 30




13 x 4




96 x 1

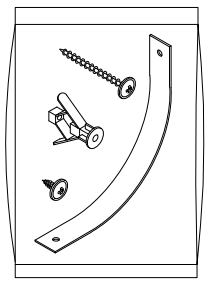


Step 1

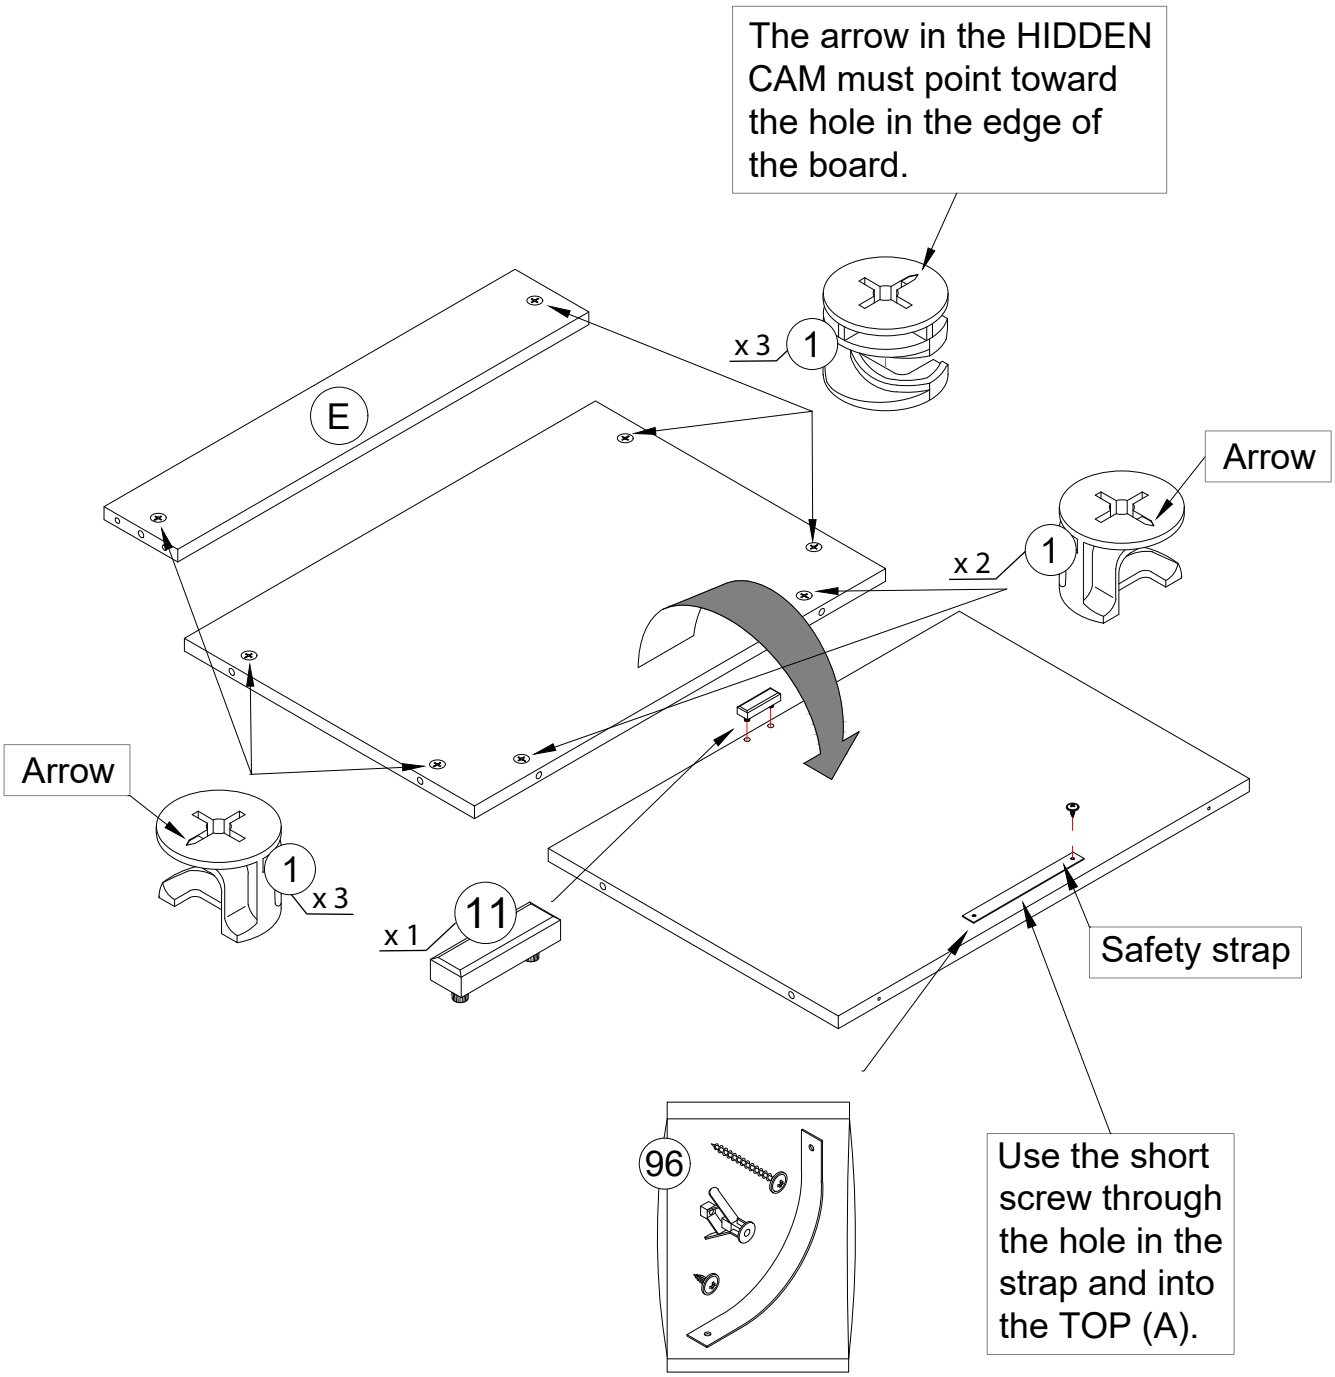
The arrow in the HIDDEN CAM must point toward the hole in the edge of the board.
x 3
1
E
Arrow
x 2
1
Arrow
1
x 3
x 1
11
Safety strap
96
Use the short screw through the hole in the strap and into the TOP (A).


Step 2

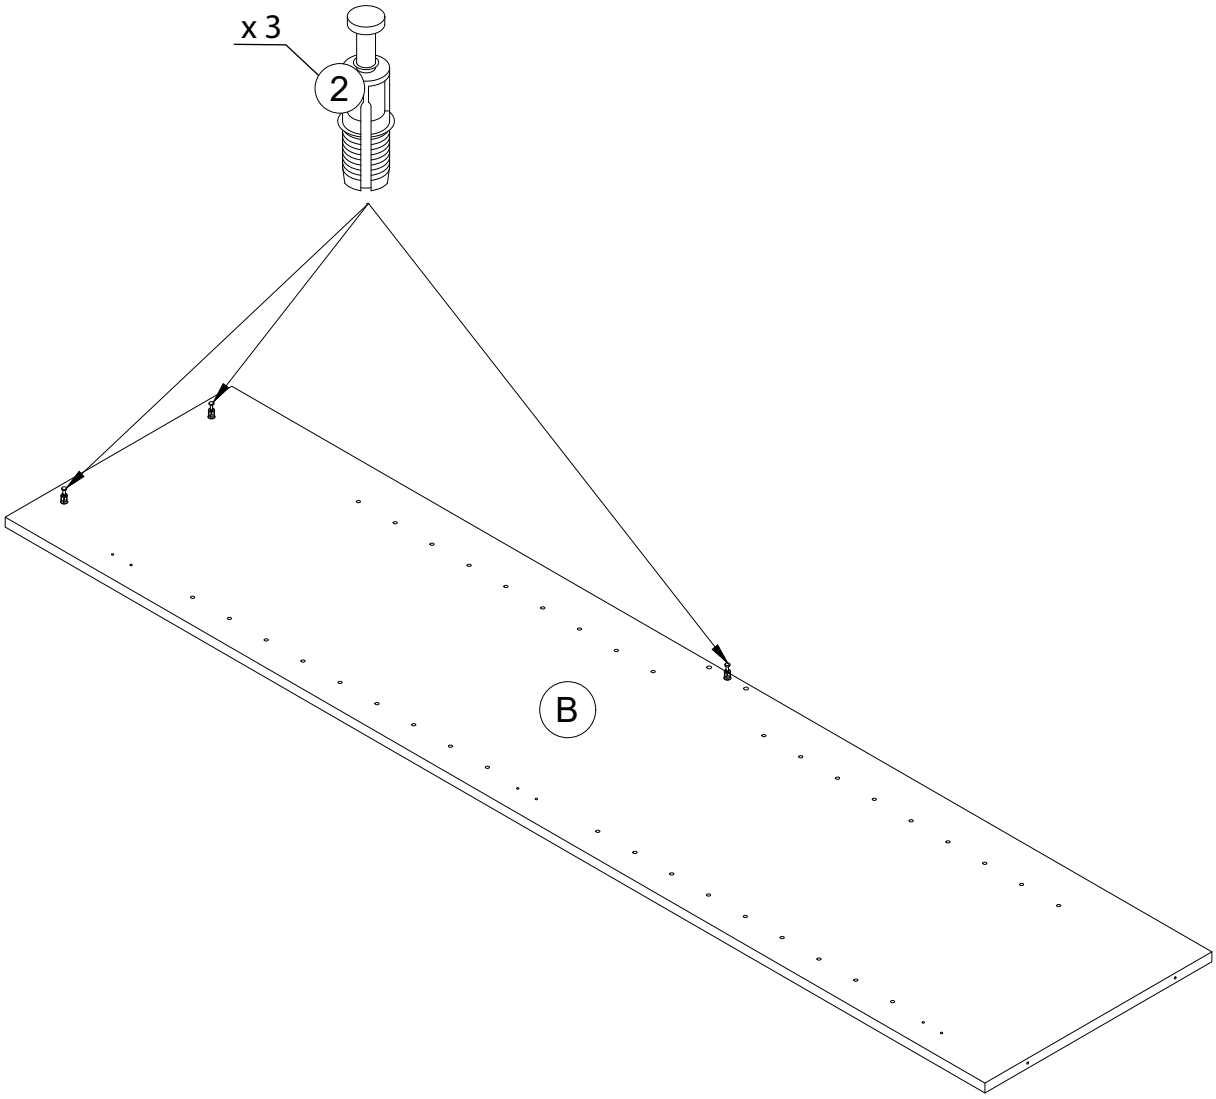


Step 3

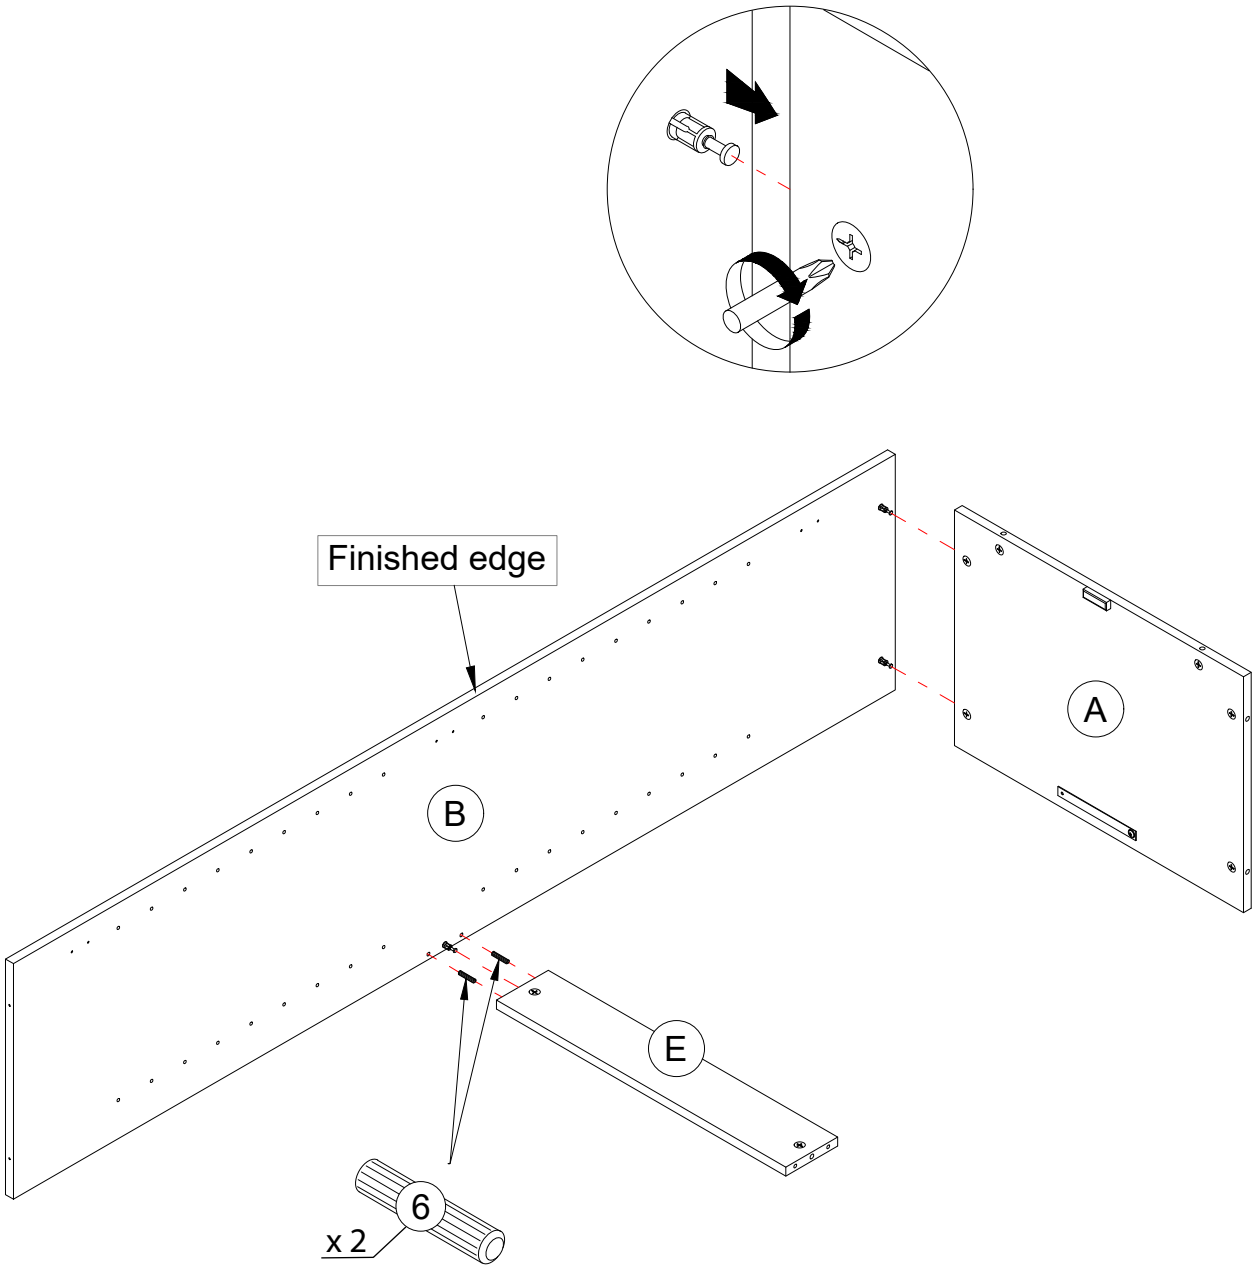


Step 4

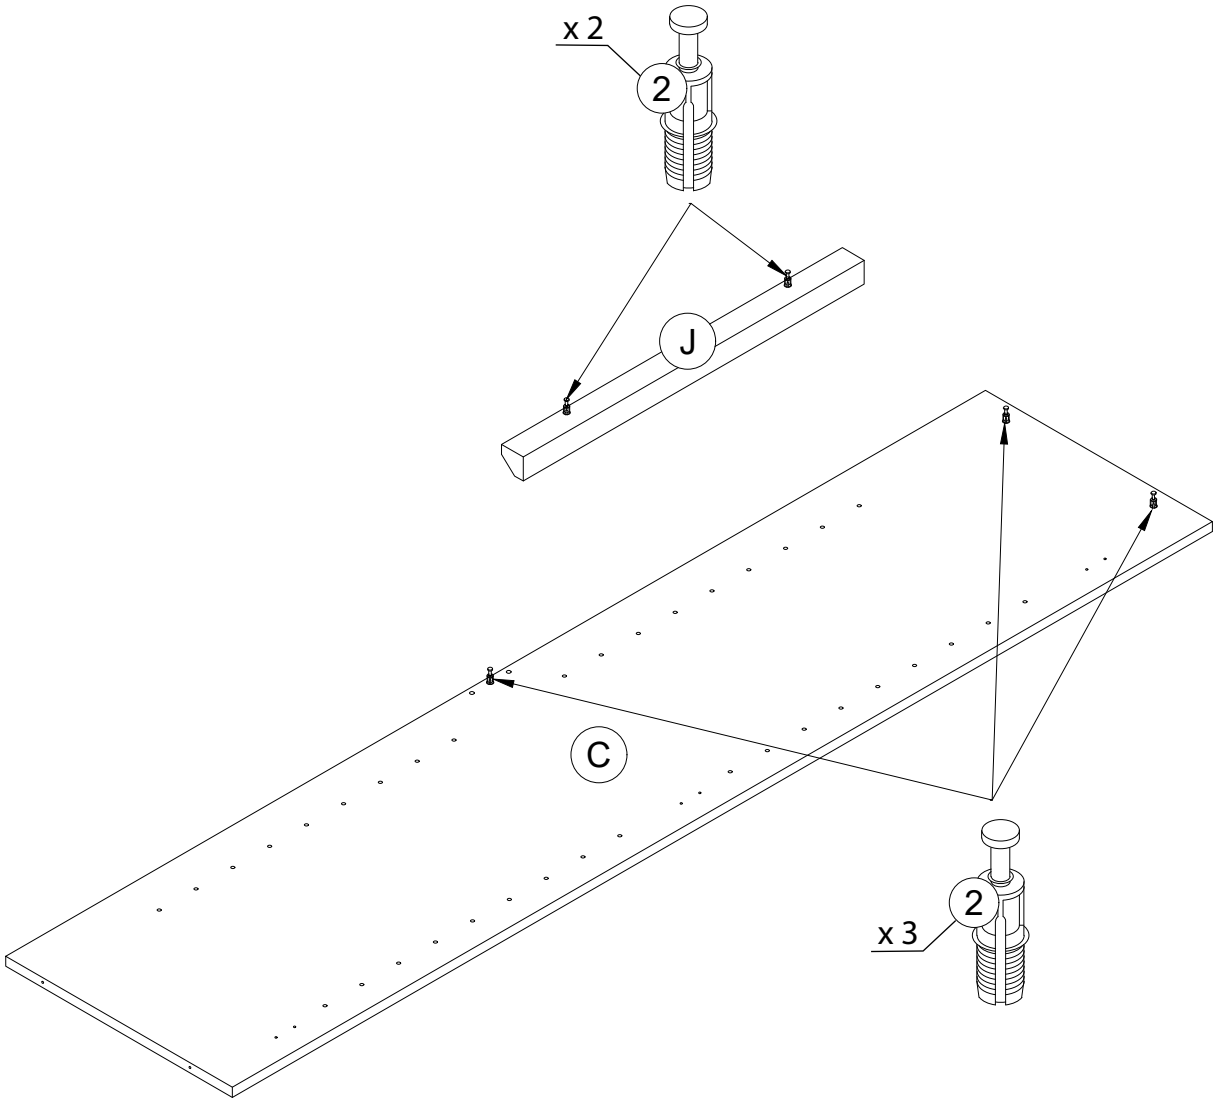


Step 5

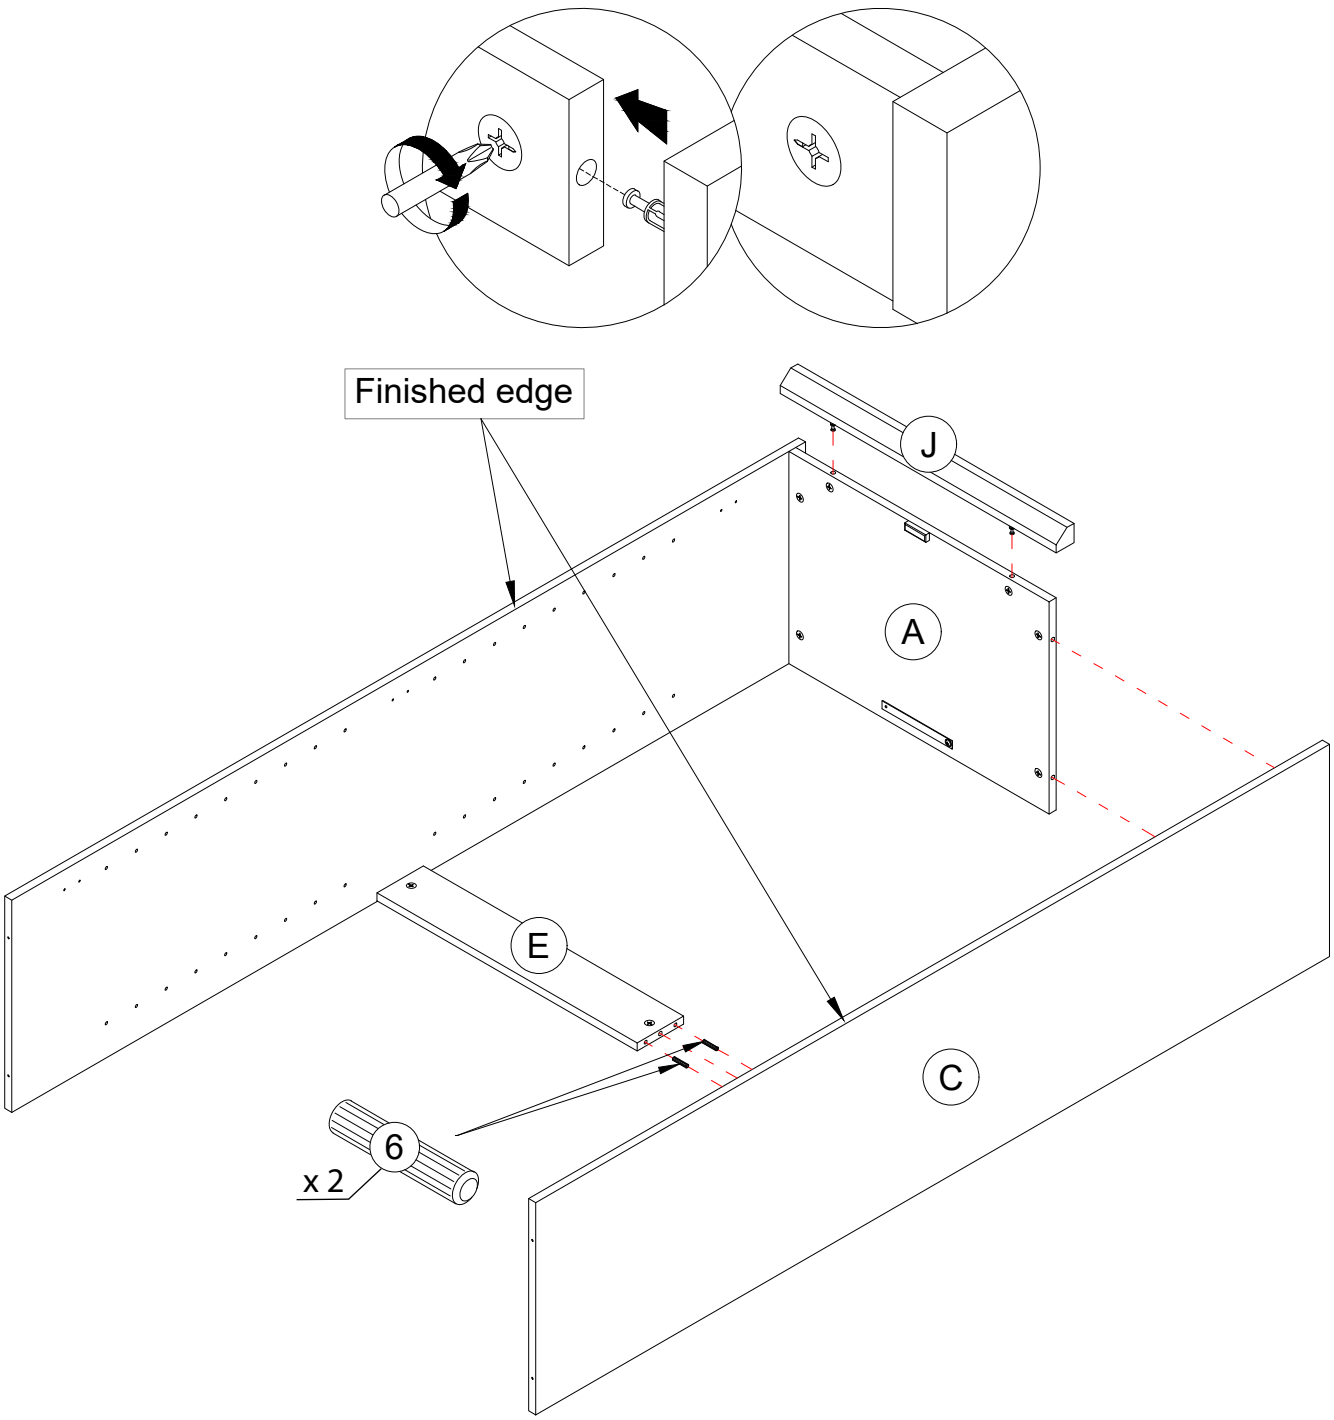

Step 6

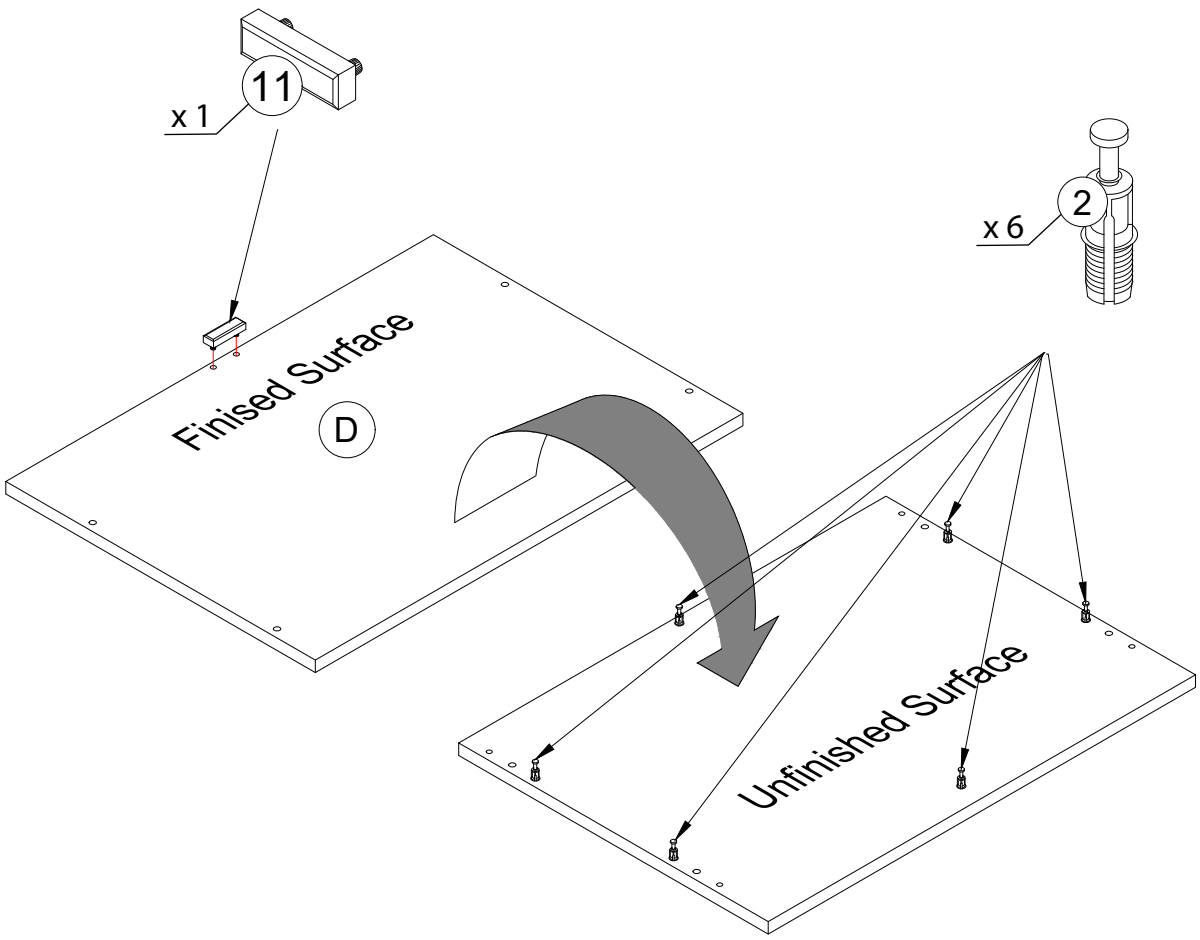



Step 7

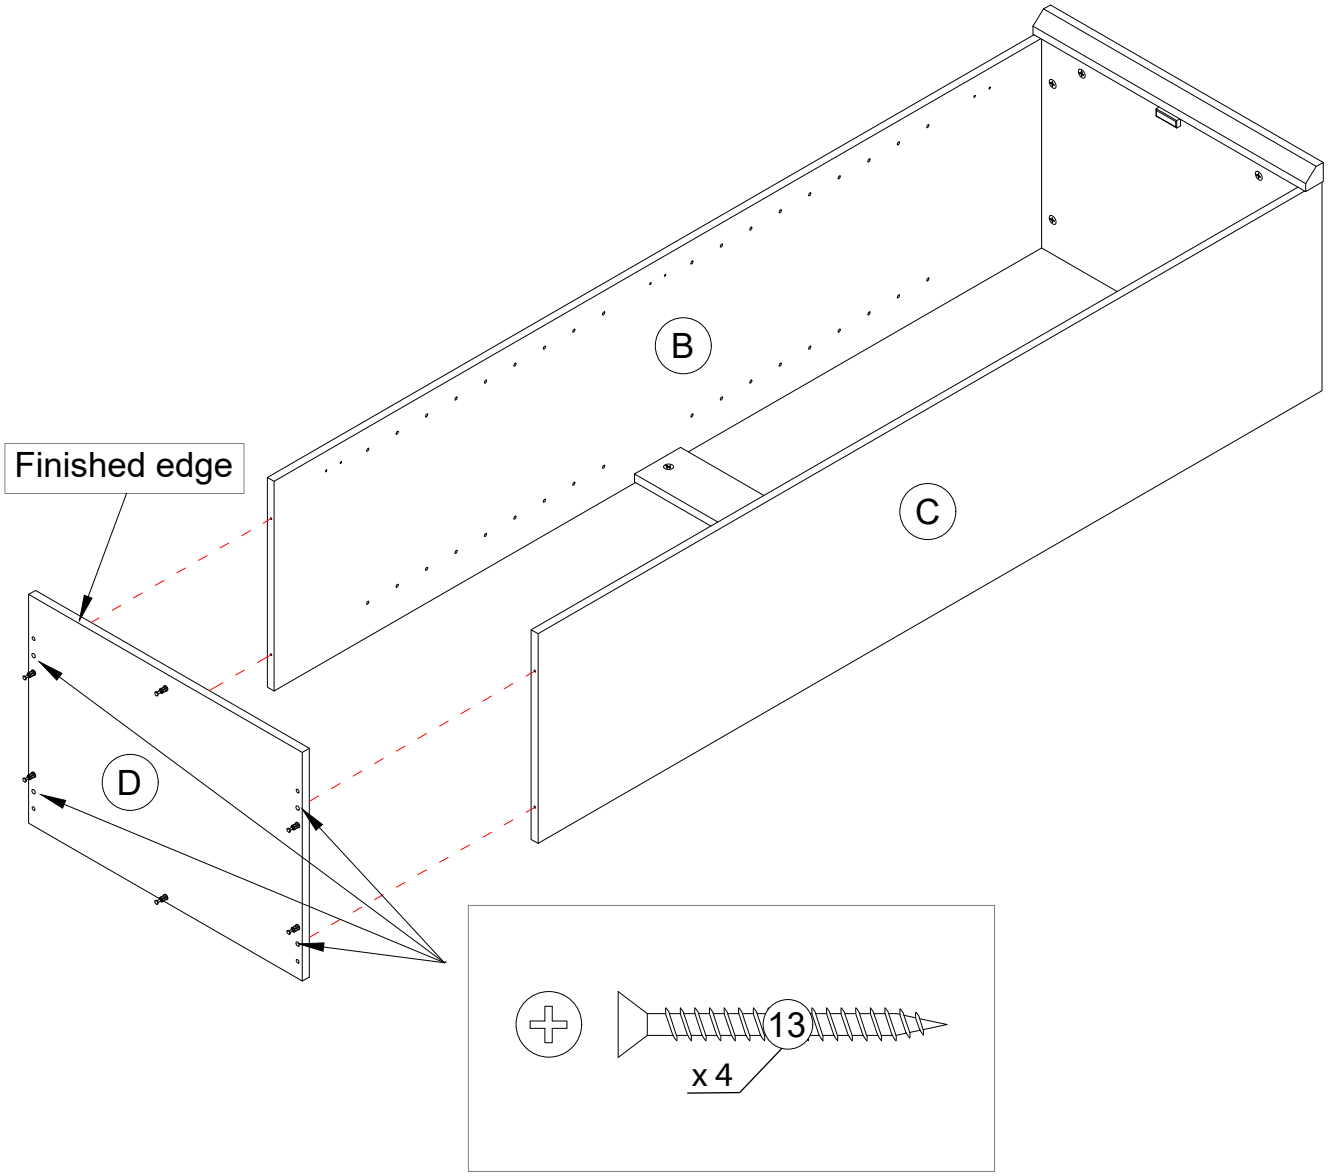


Step 8

The arrow in the HIDDEN CAM must point toward the hole in the edge of the board.

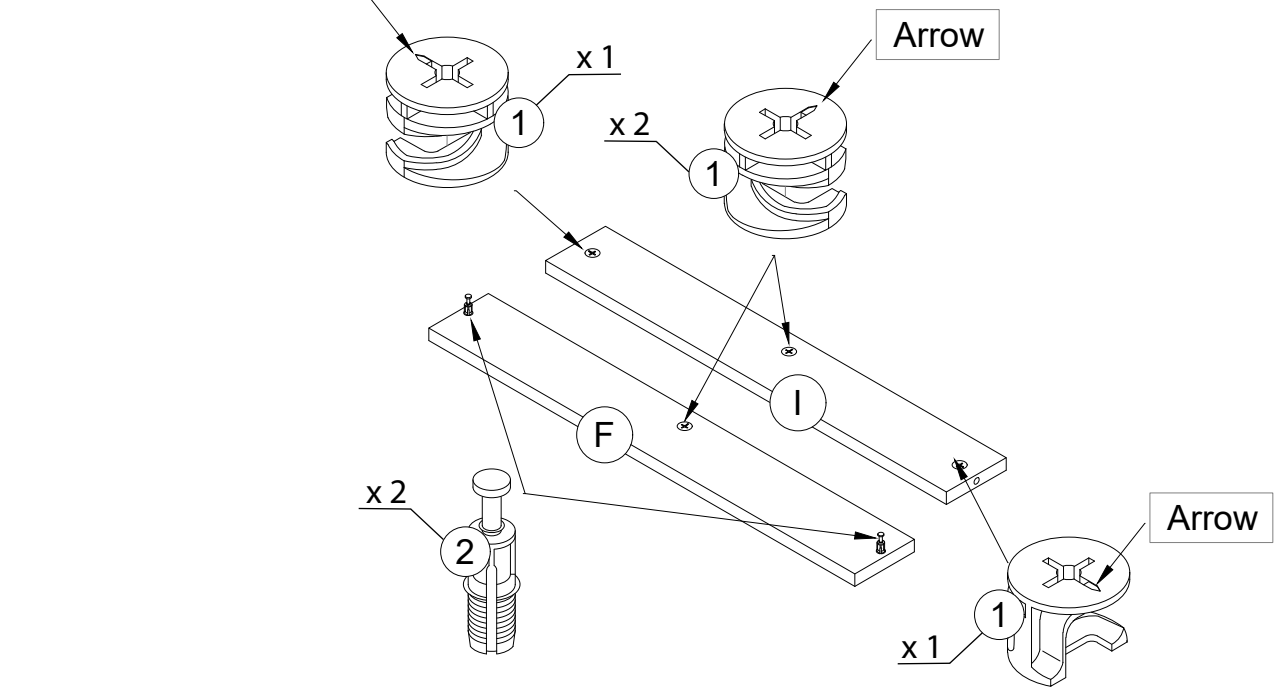


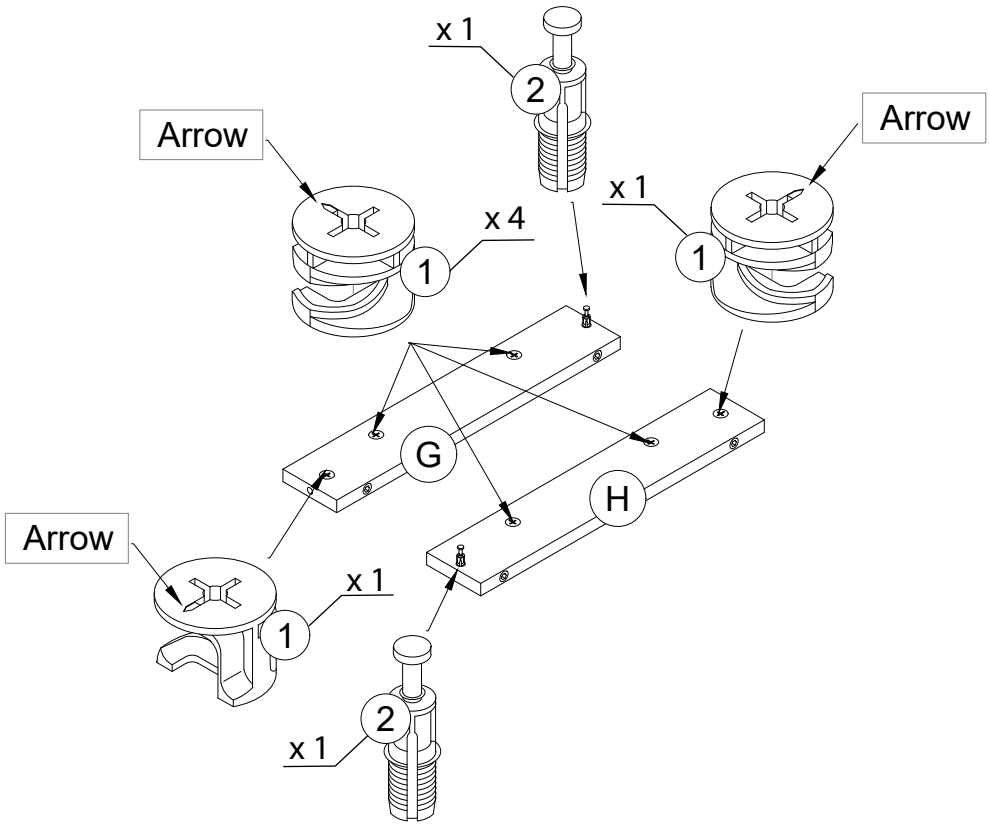


Step 9

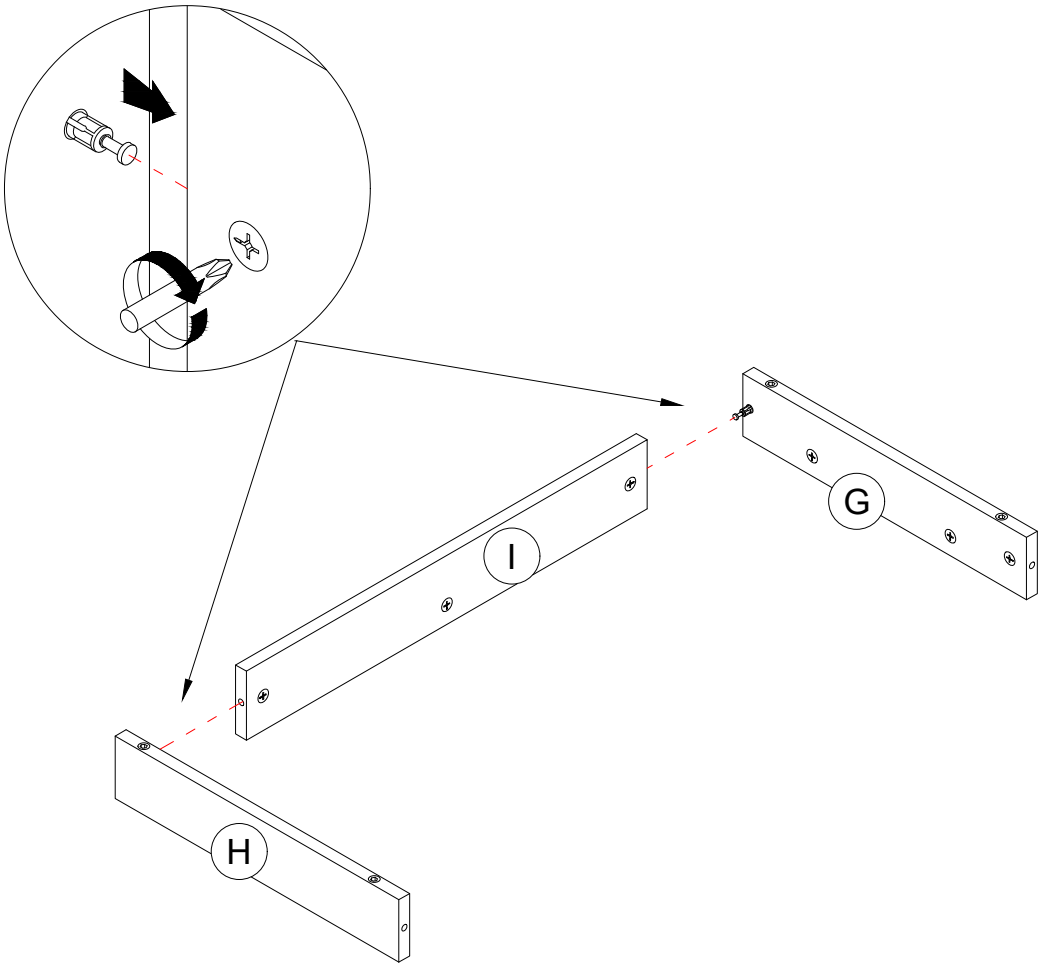


Step 10

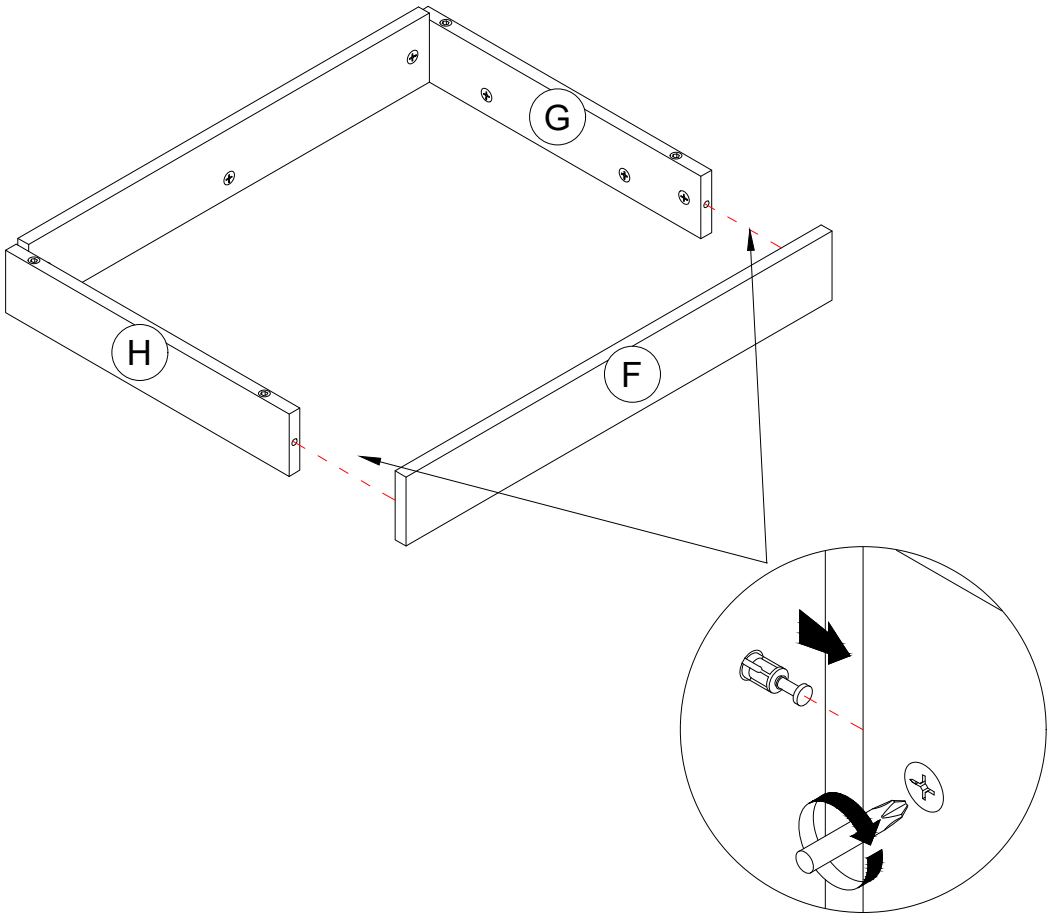


Step 11

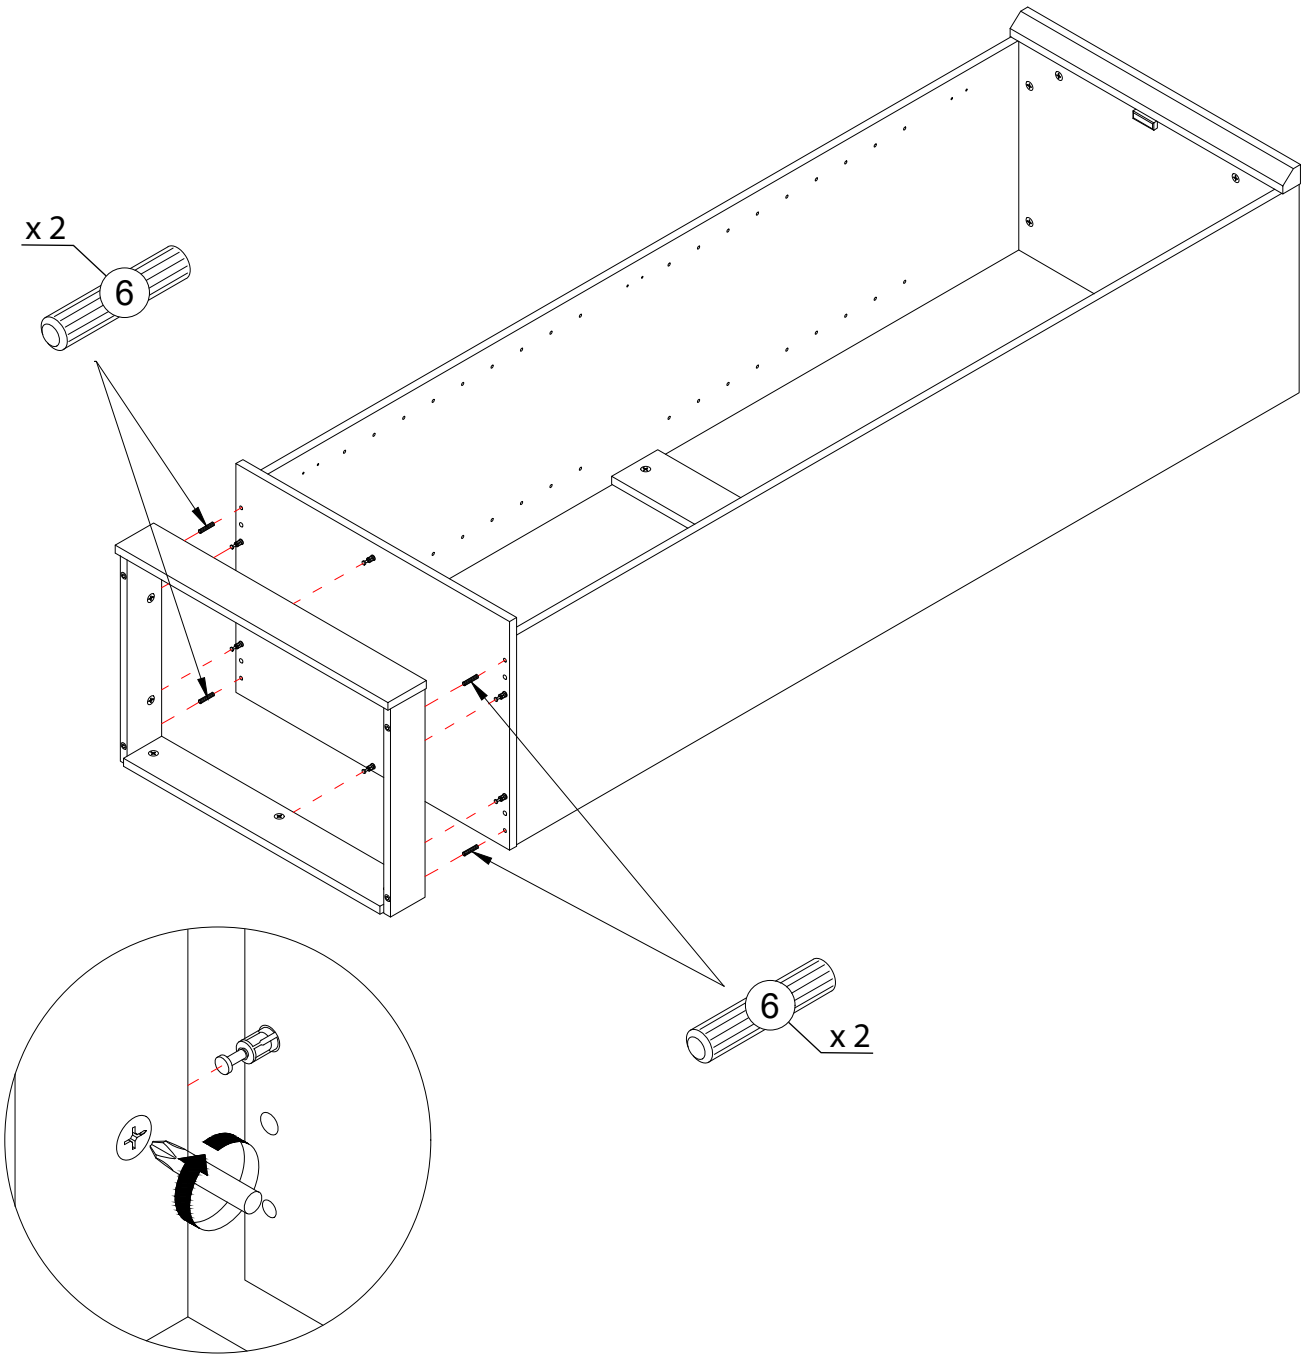


Step 12

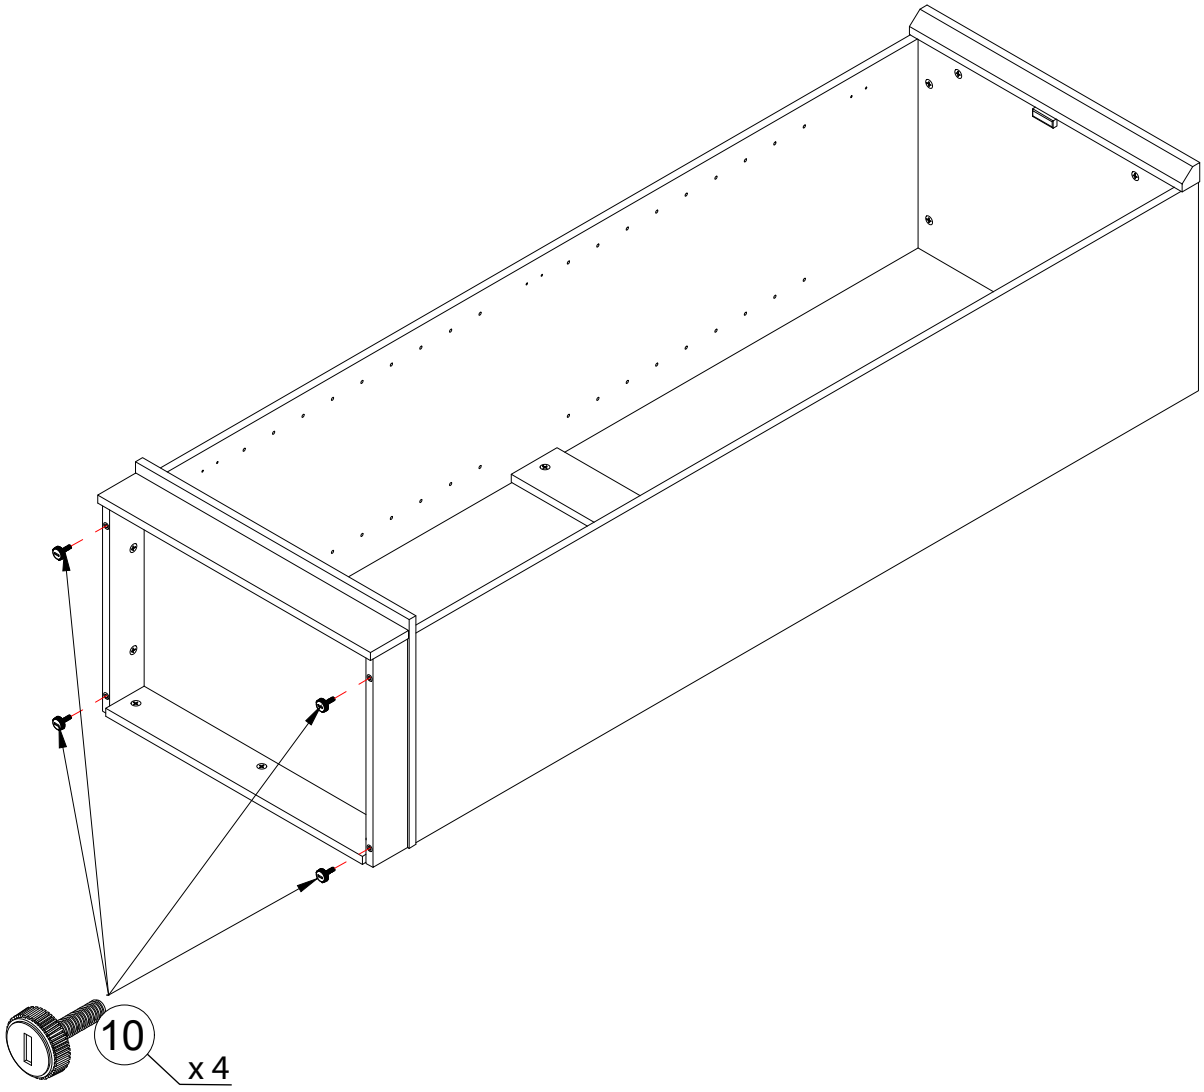


Step 13

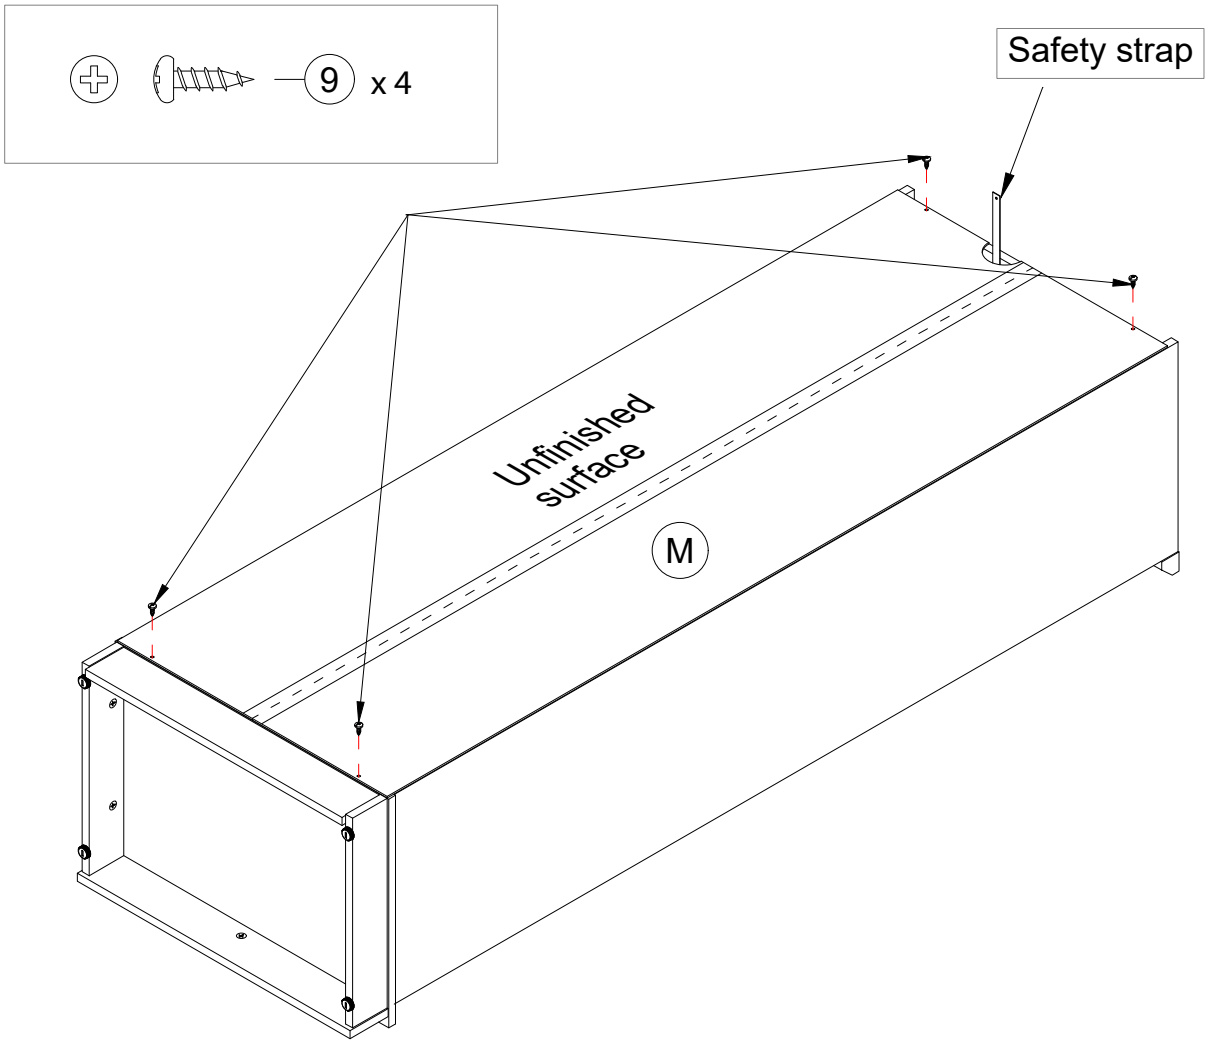


Step 14

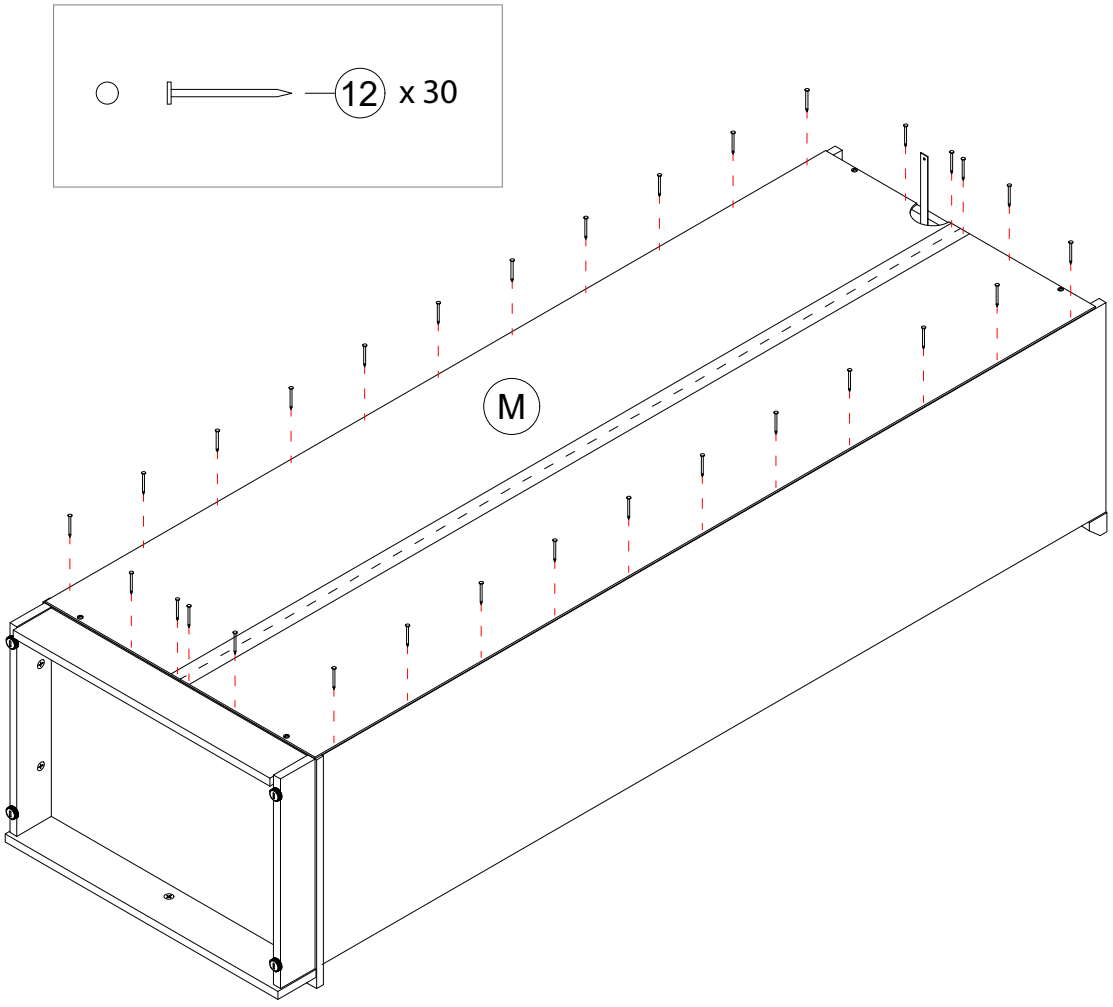


Step 15

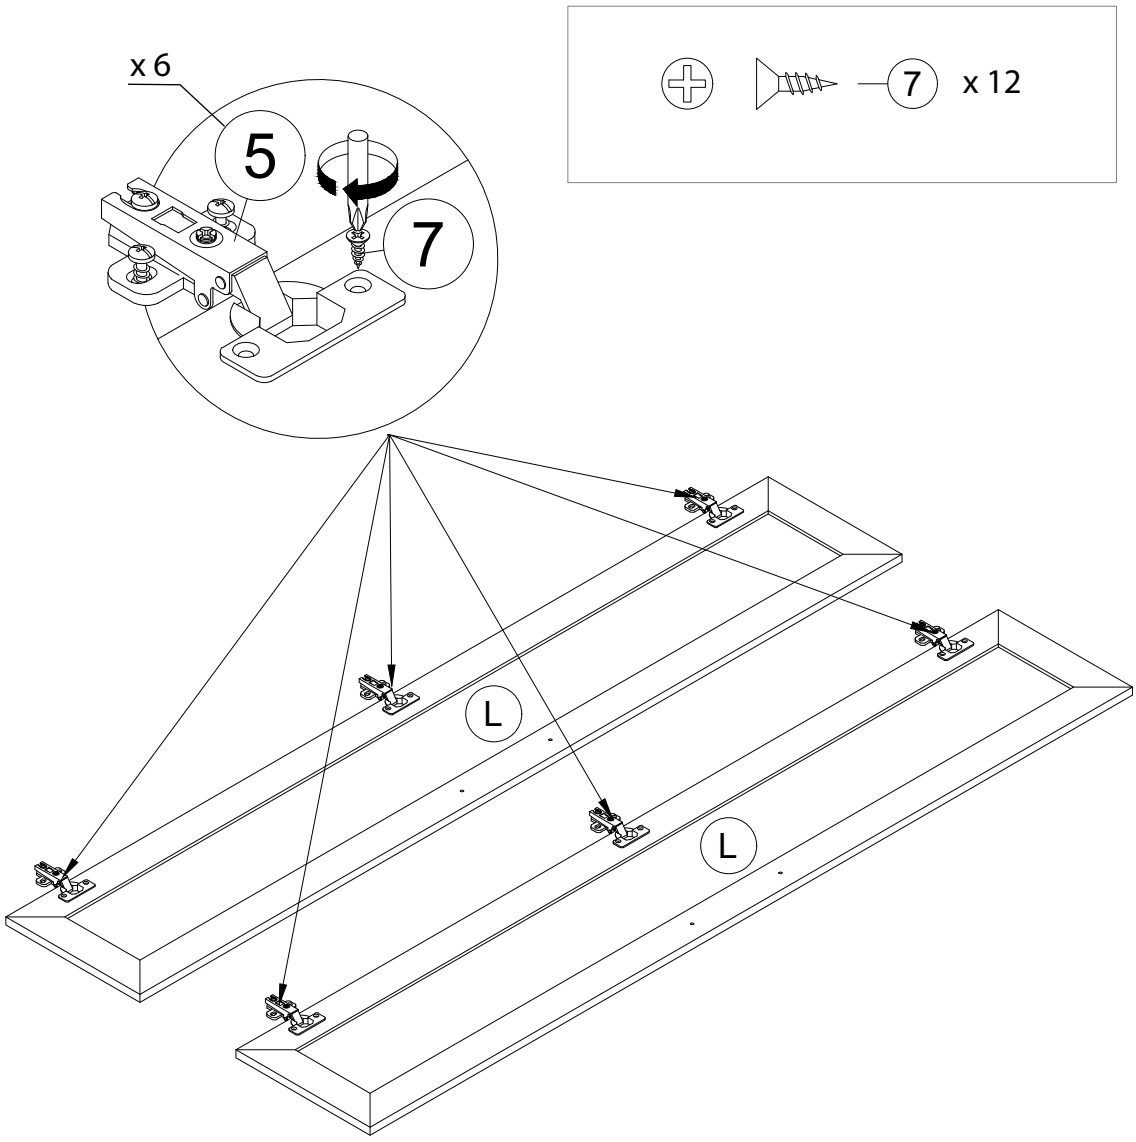


Step 16

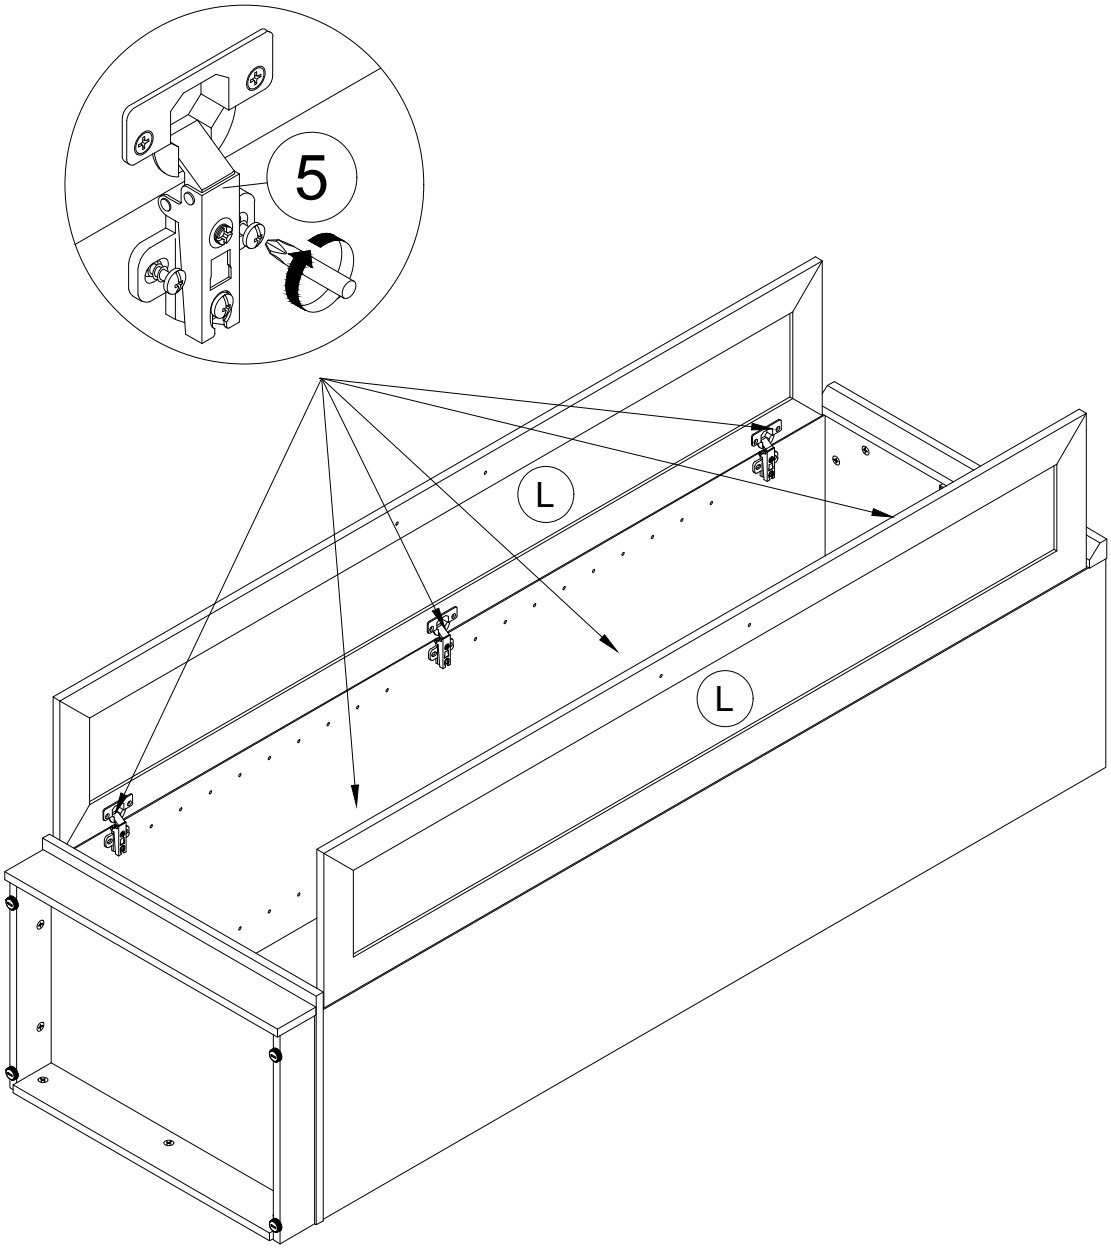


Step 17

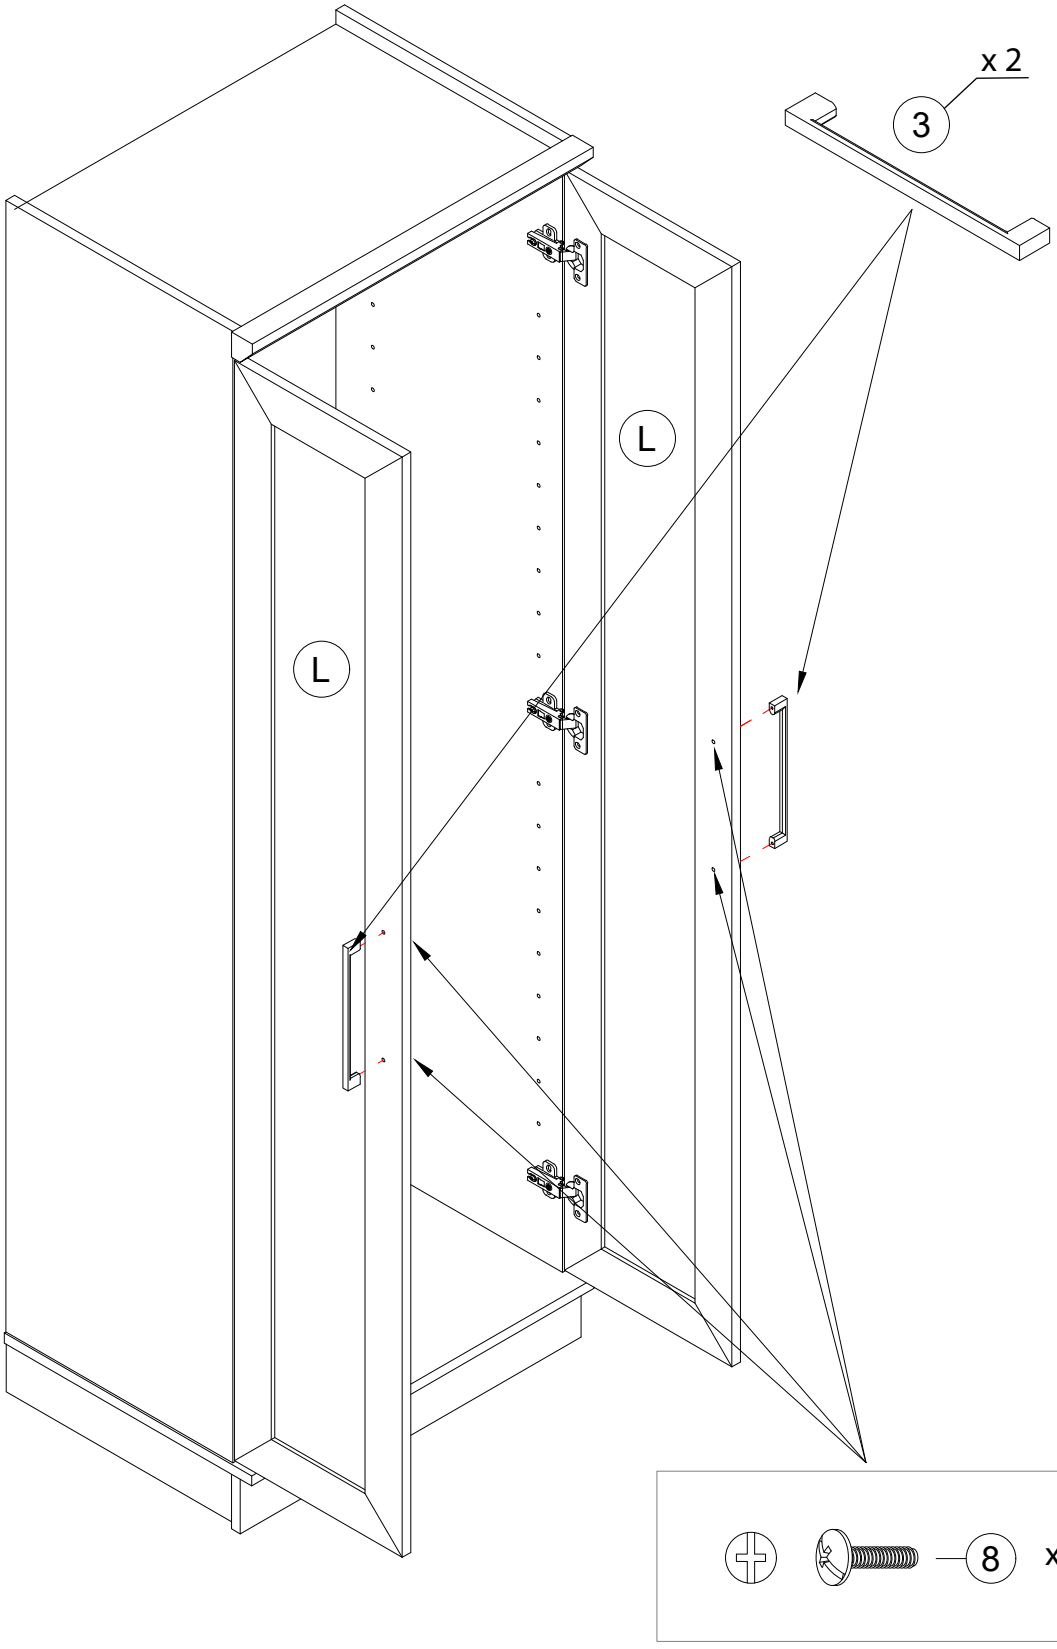


Step 18

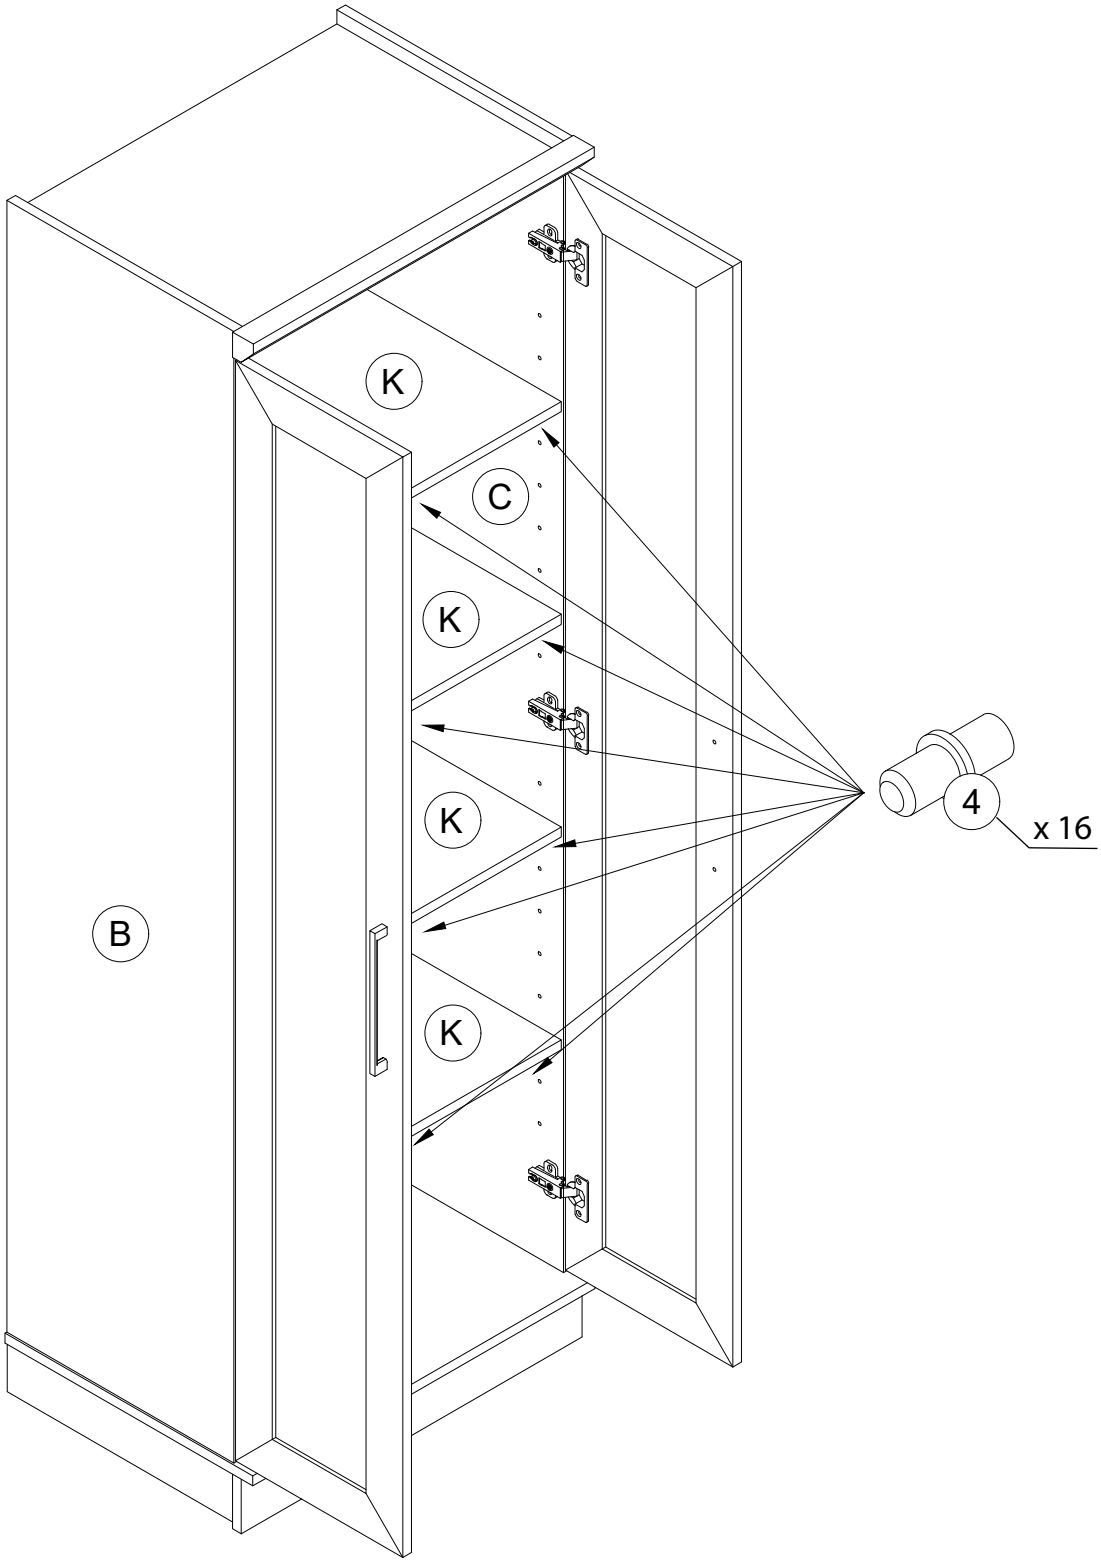


Step 19

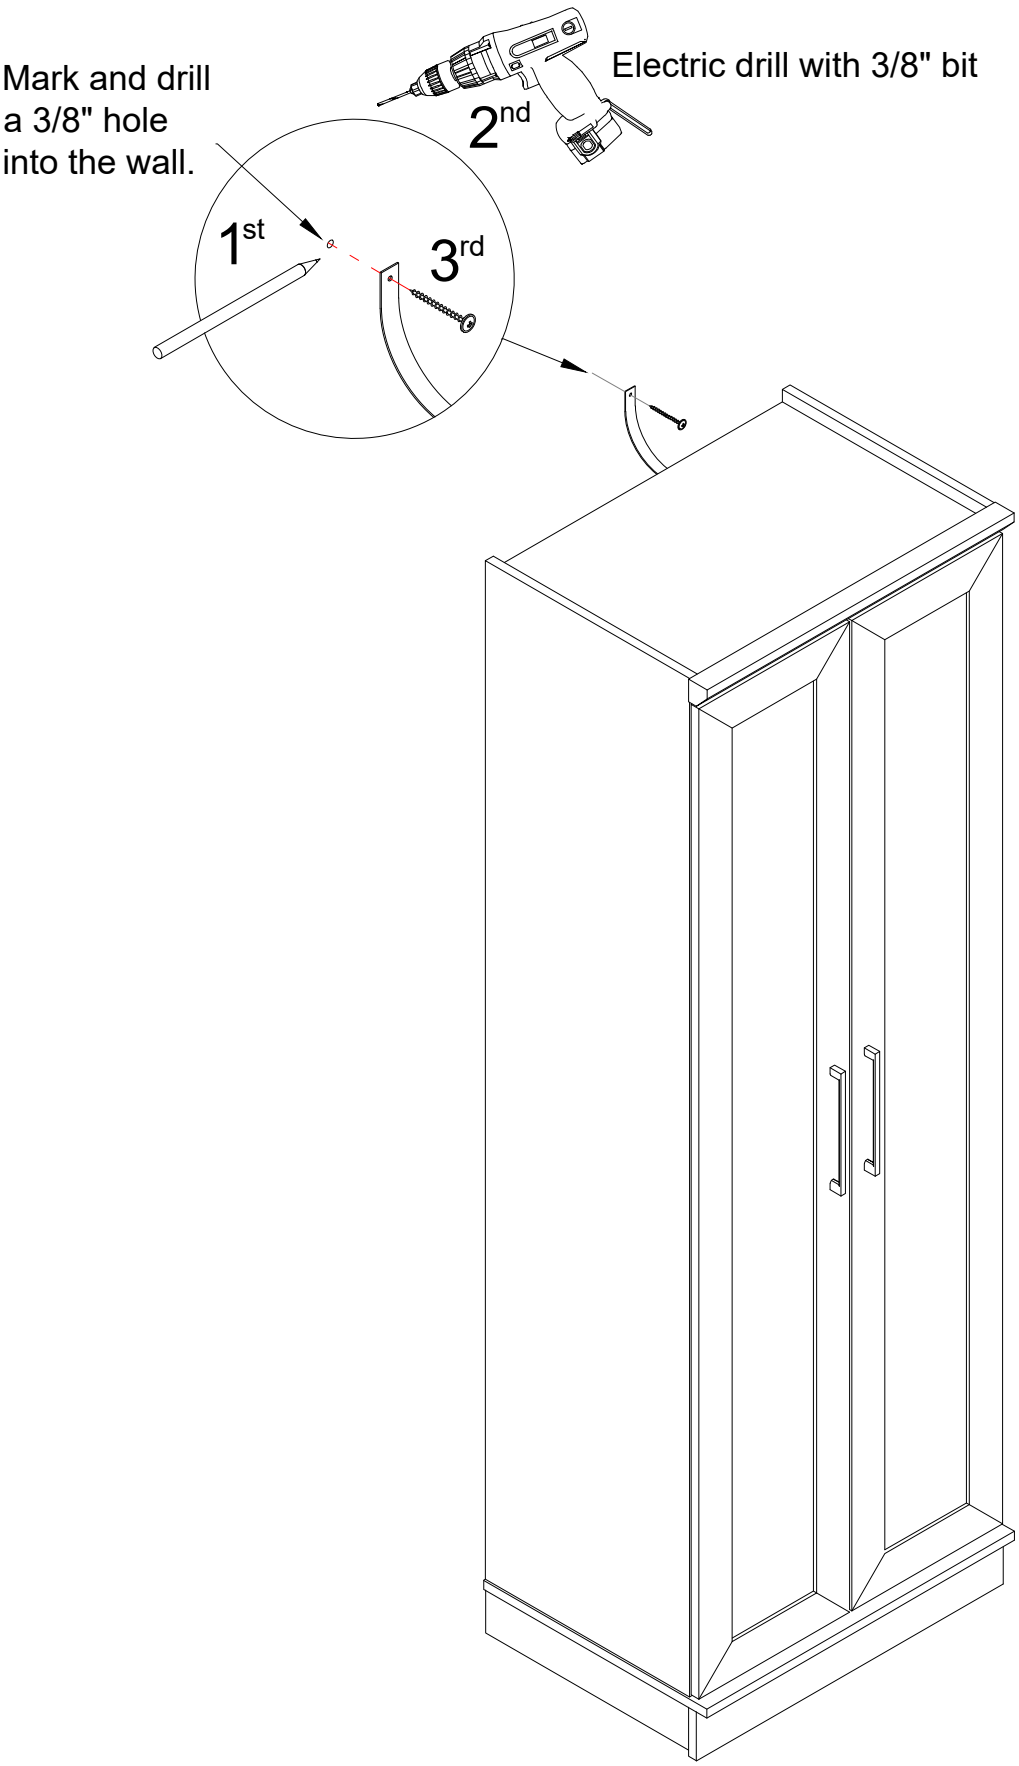
Mark and drill
a 3/8" hole
into the wall.
1st
2nd
3rd
Electric drill with 3/8" bit

Step 20

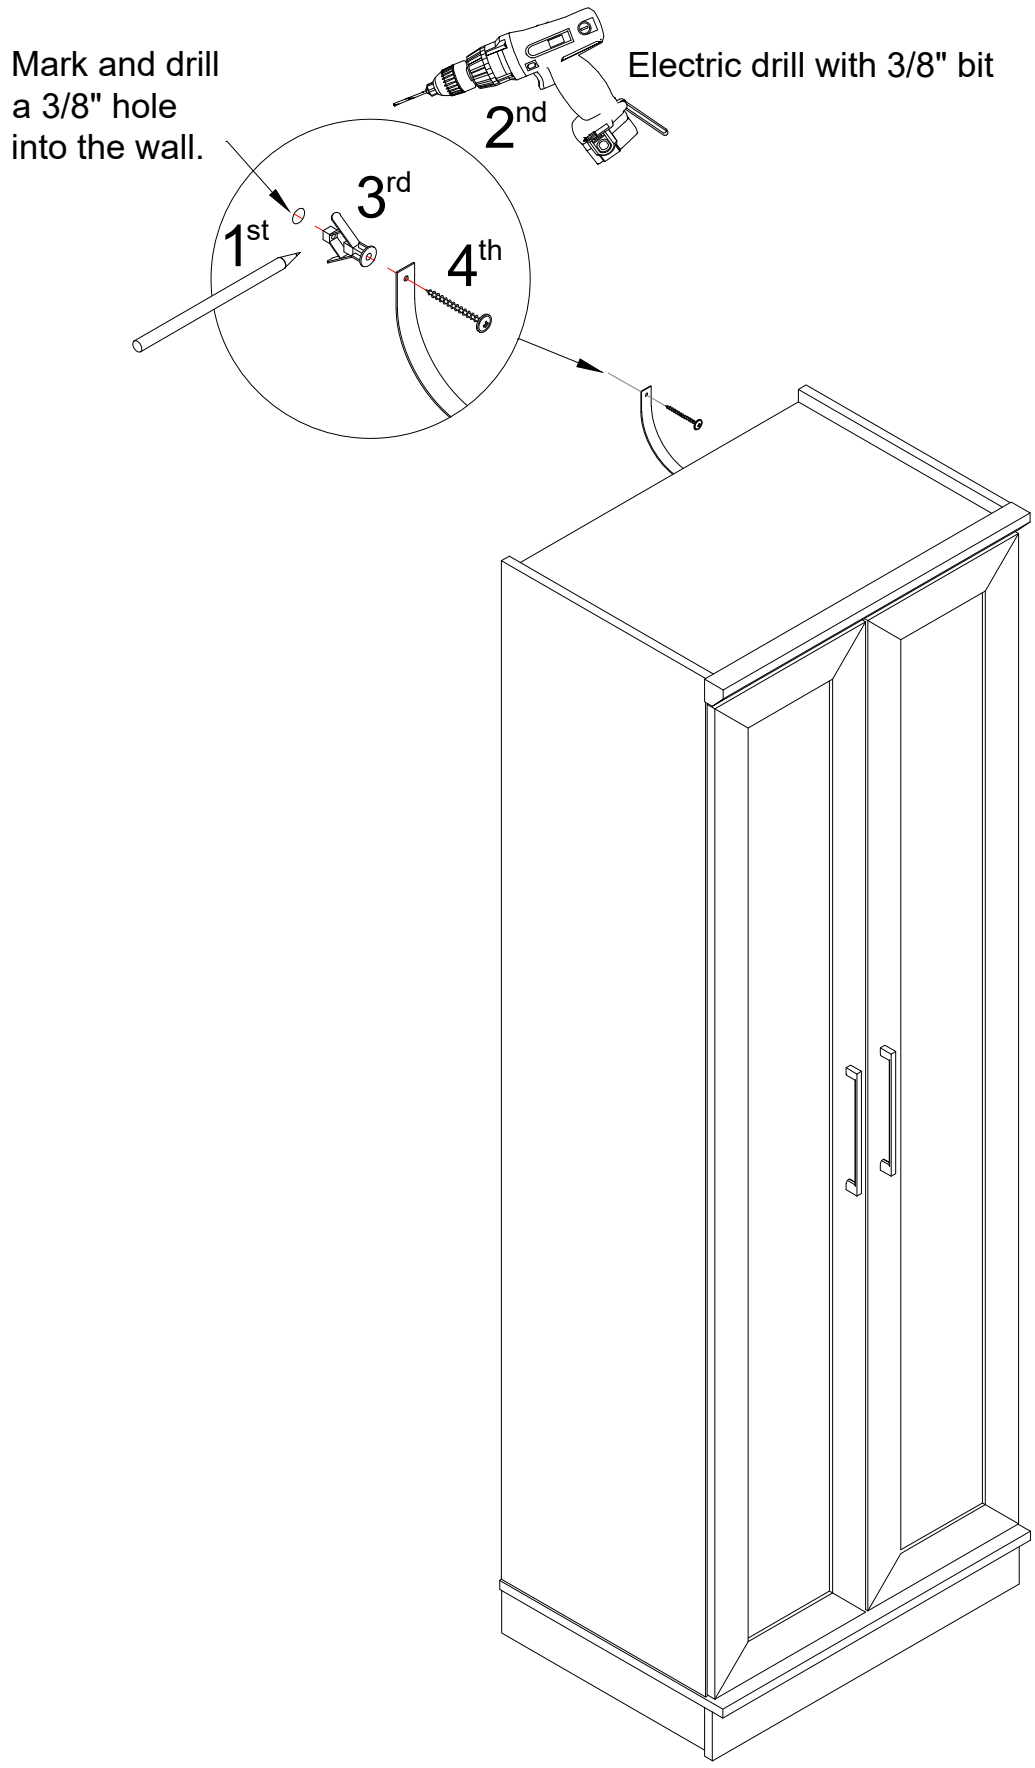
Mark and drill
a 3/8" hole
into the wall.
Electric drill with 3/8" bit
2nd
1st
3rd
4th

Step 21

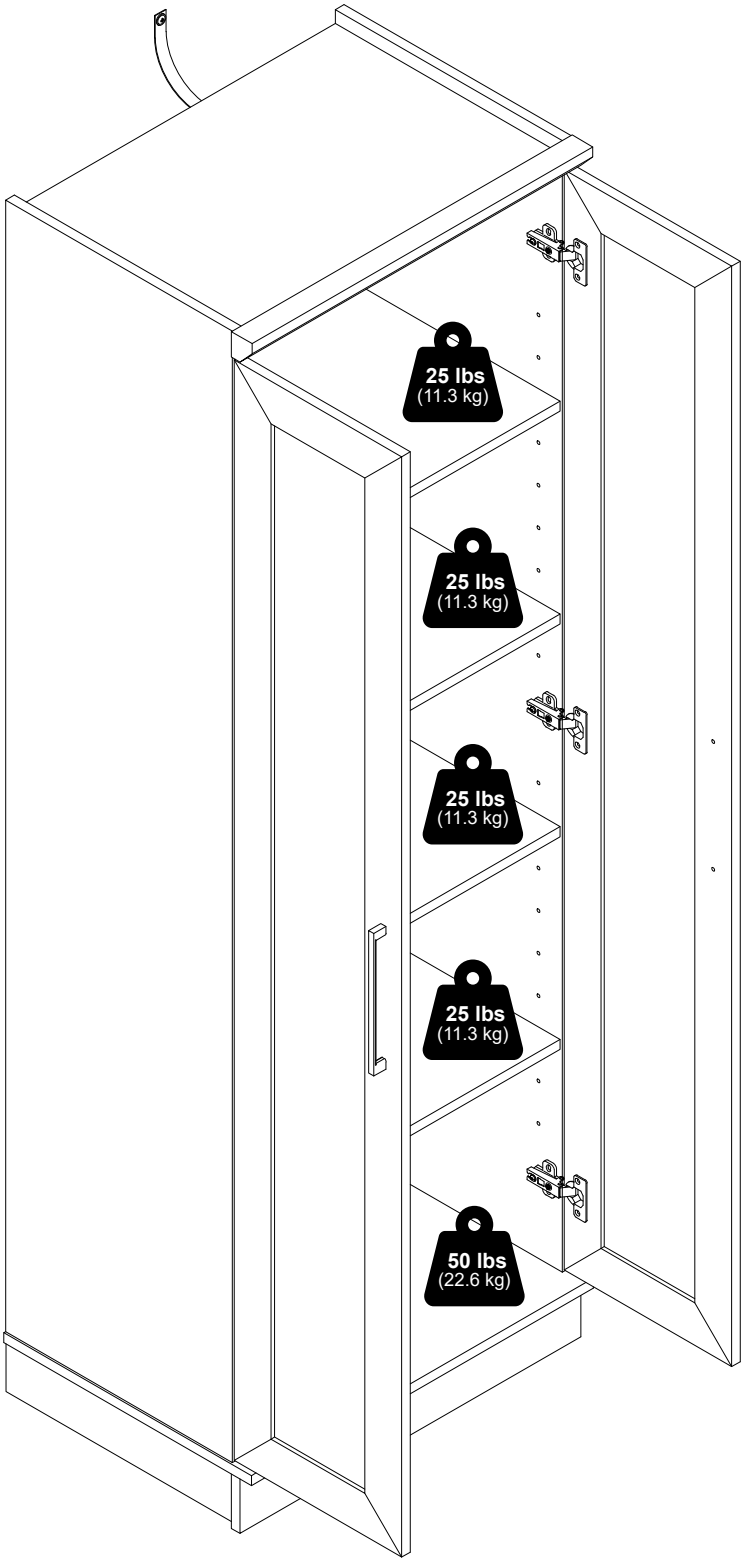
25 lbs
(11.3 kg)
25 lbs
(11.3 kg)
25 lbs
(11.3 kg)
25 lbs
(11.3 kg)
50 lbs
(22.6 kg)