
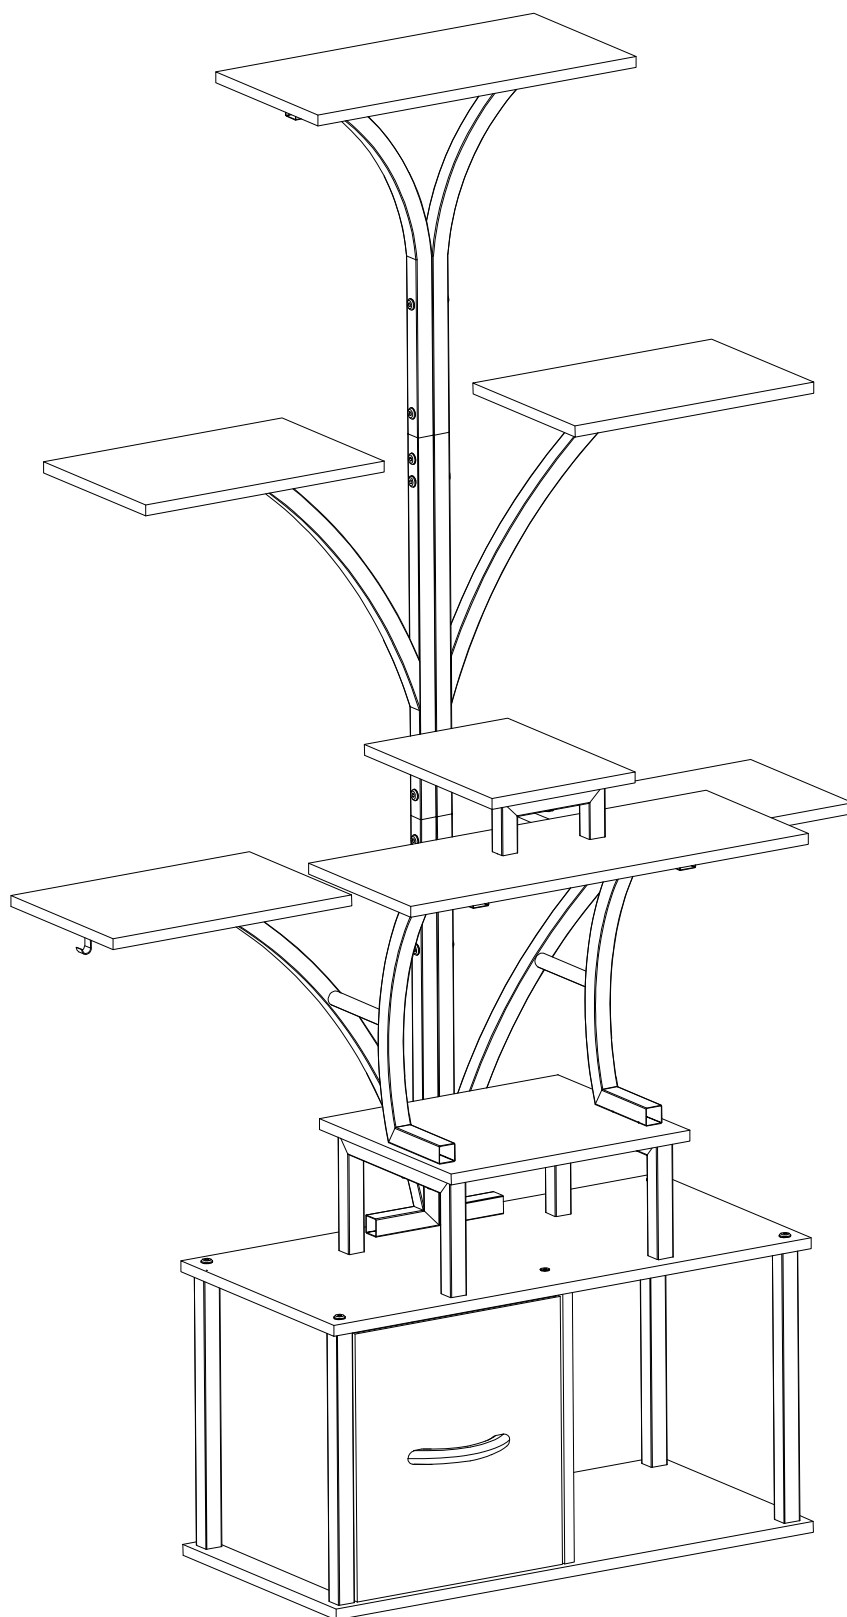
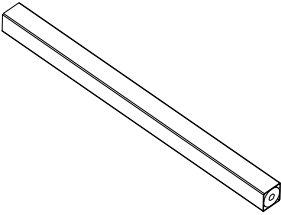

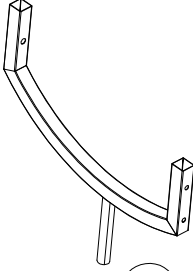
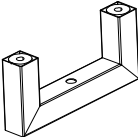
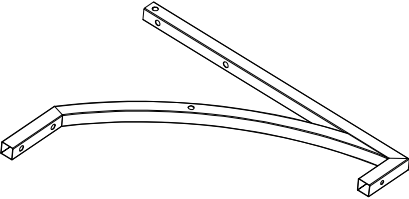
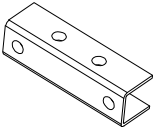
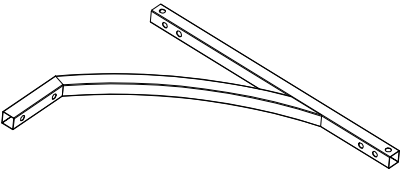
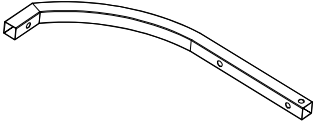
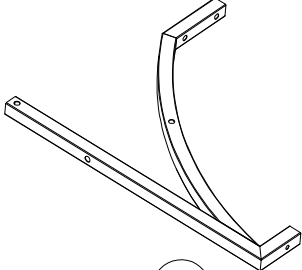
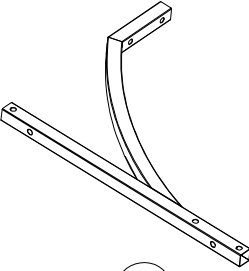
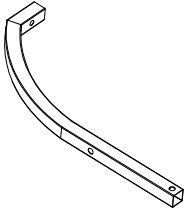
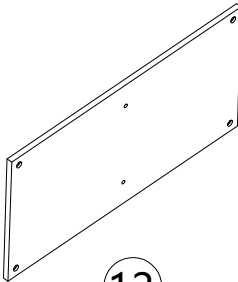
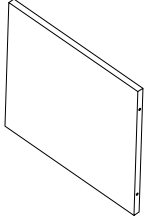
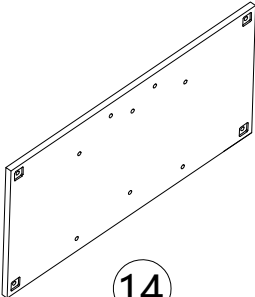








Assembly Instructions

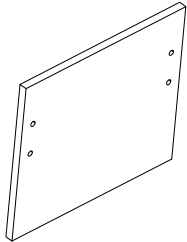















Part List

 1 4 pcs	 2 2 pcs	 3 2 pcs
 4 1 pcs	 5 1 pcs	 6 4 pcs
 7 1 pcs	 8 1 pcs	 9 1 pcs
 10 1 pcs	 11 1 pcs	 12 1 pcs
 13 1 pcs	 14 1 pcs	 15 1 pcs


Part List

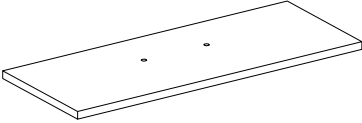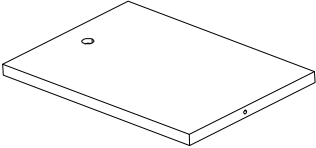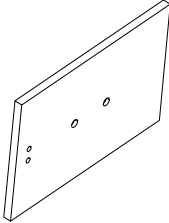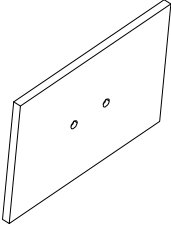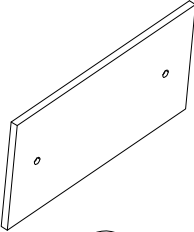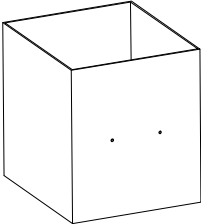 16 1 pcs	 17 1 pcs	 18 2 pcs
 19 2 pcs	 20 1 pcs	 21 1 pcs

Part List

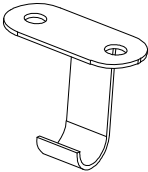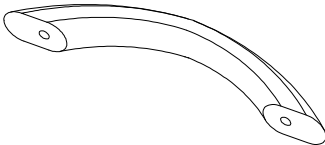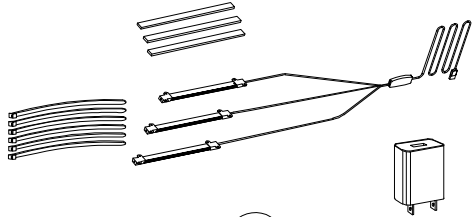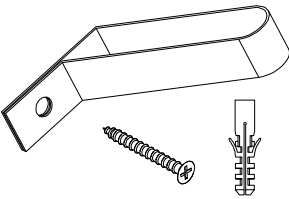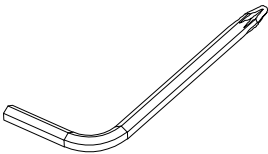
M6X45mm  A 4 pcs	M6X35mm  B 4 pcs	M6X28mm  C 31 pcs
M6X12mm  D 16 pcs	M5X40mm  E 5 pcs	M6X15mm  F 4 pcs
M4X10mm  G 4 pcs	M4X8mm  H 2 pcs	Ø25×5MM  I 4 pcs
 J 2 pcs	 K 1 pcs	 L 1 set
 M 1 pcs	 N 2 pcs	

Exploded view of the cabinet

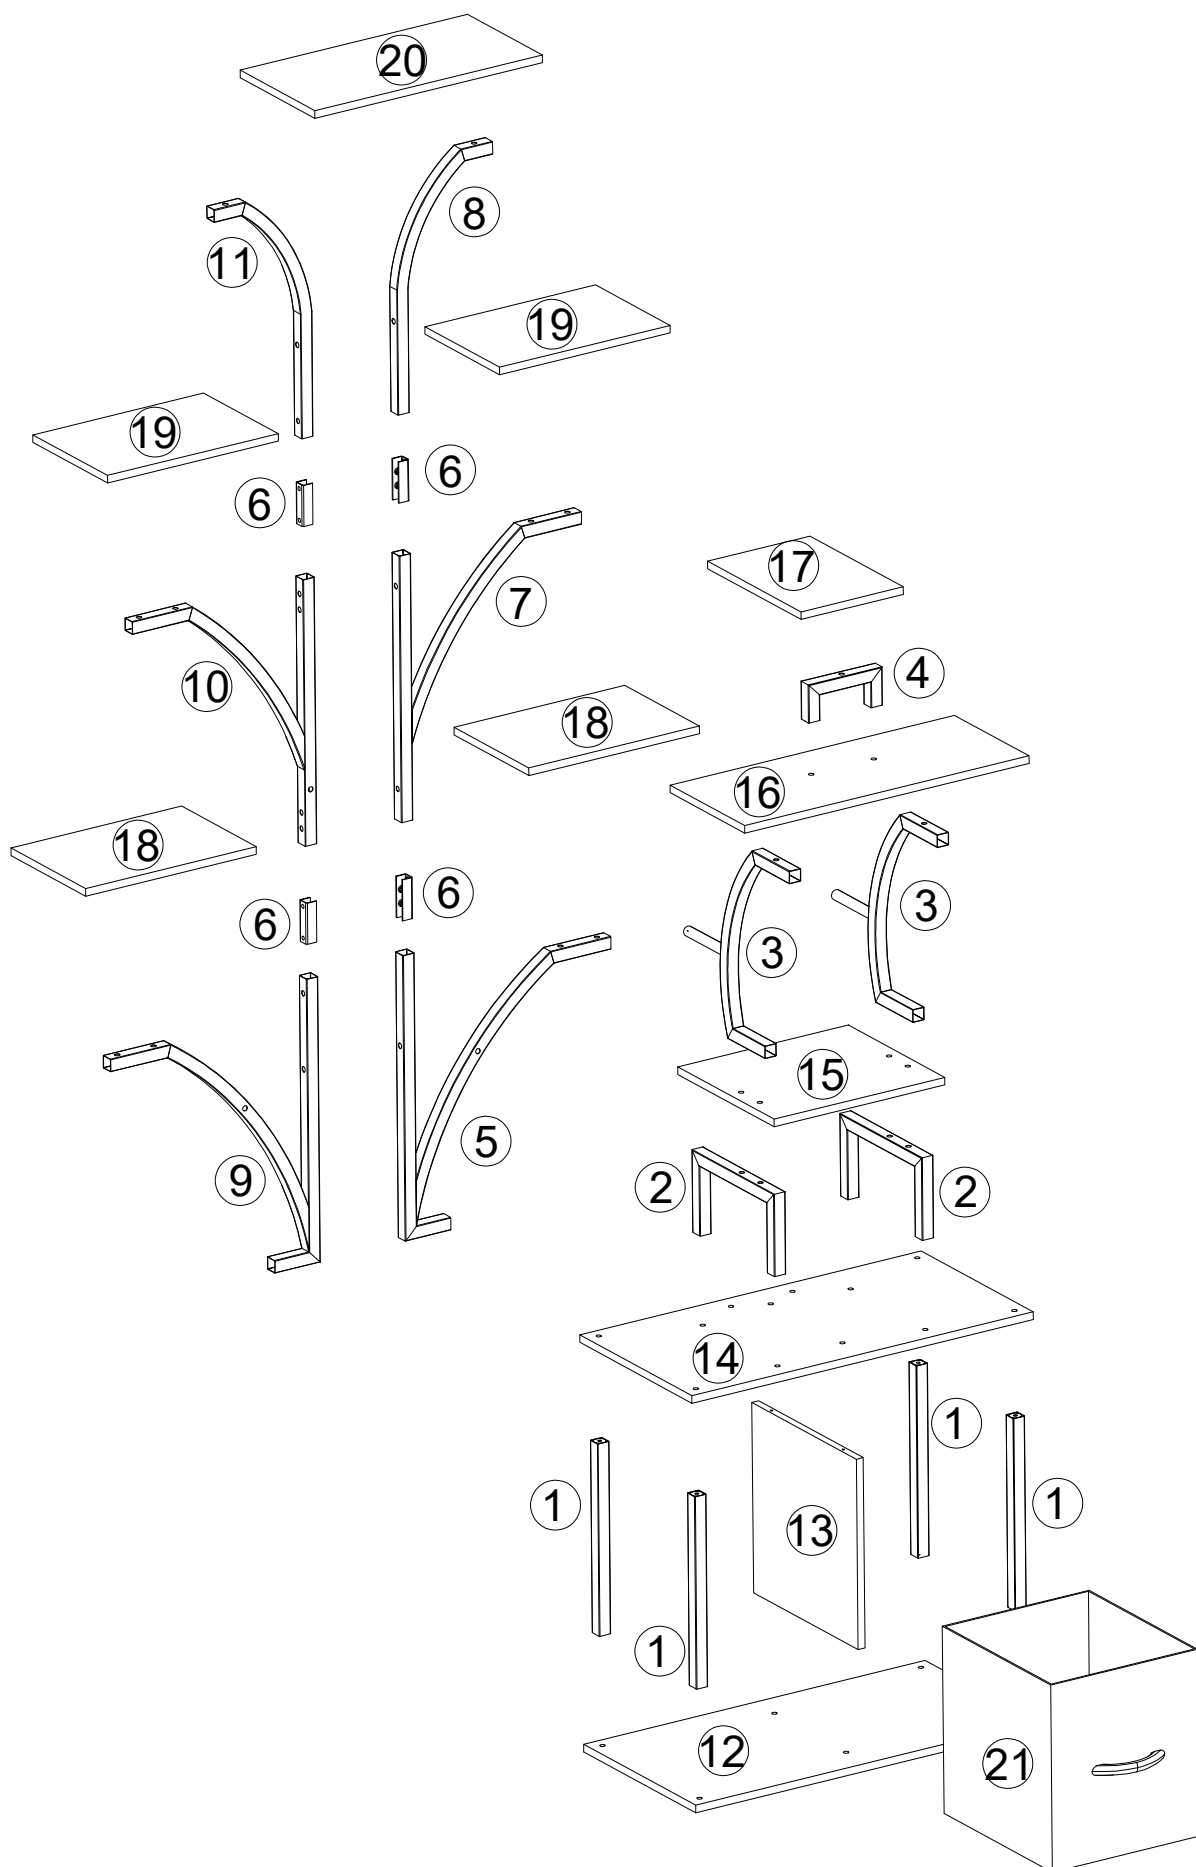


It is divided into four steps of ABCD


Module A

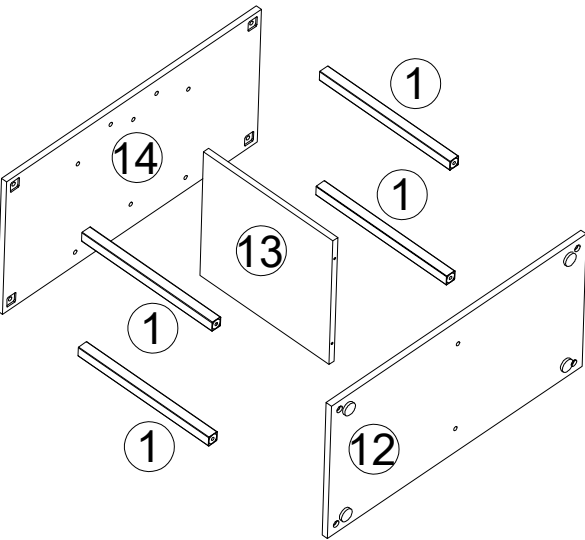


Module B



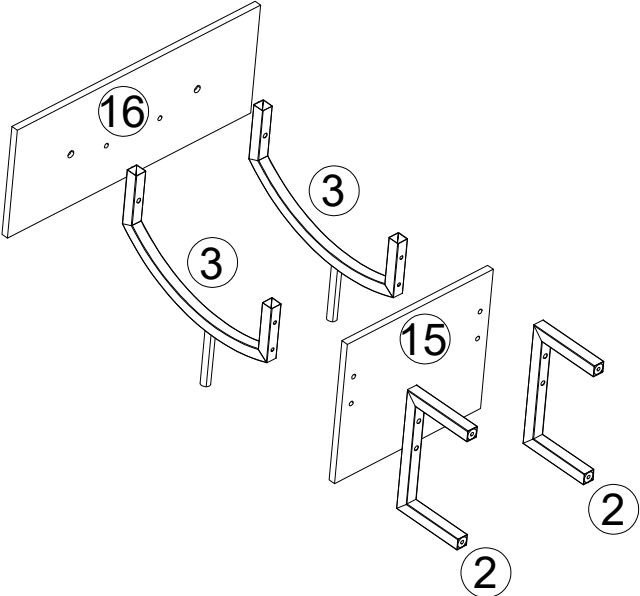


Module C


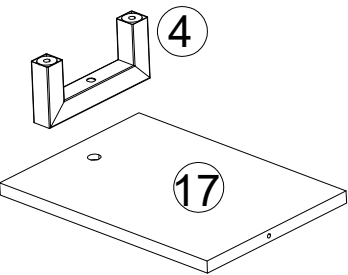





Module D


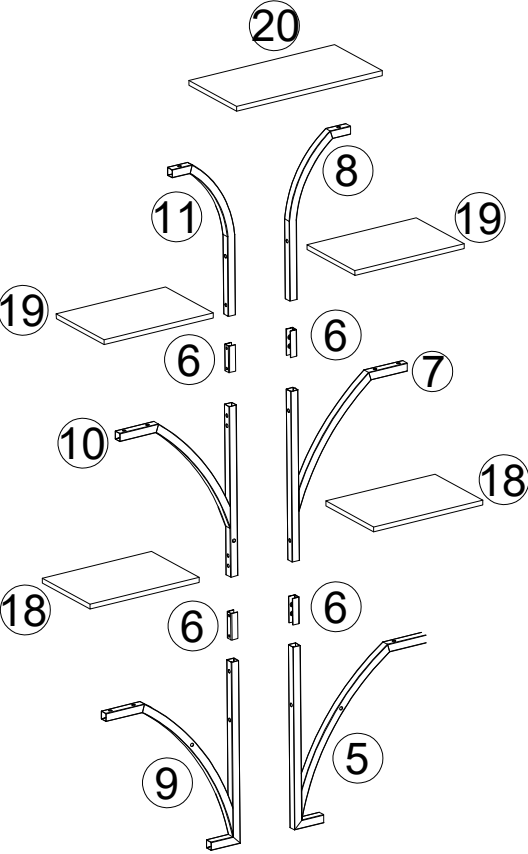


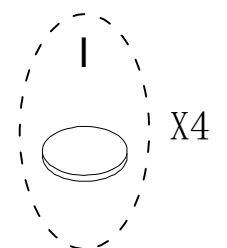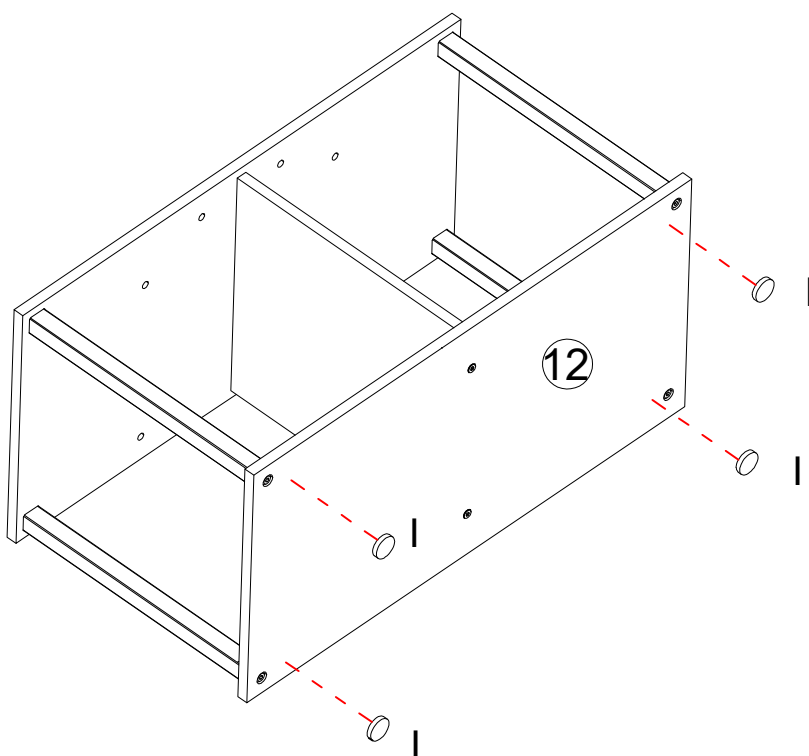
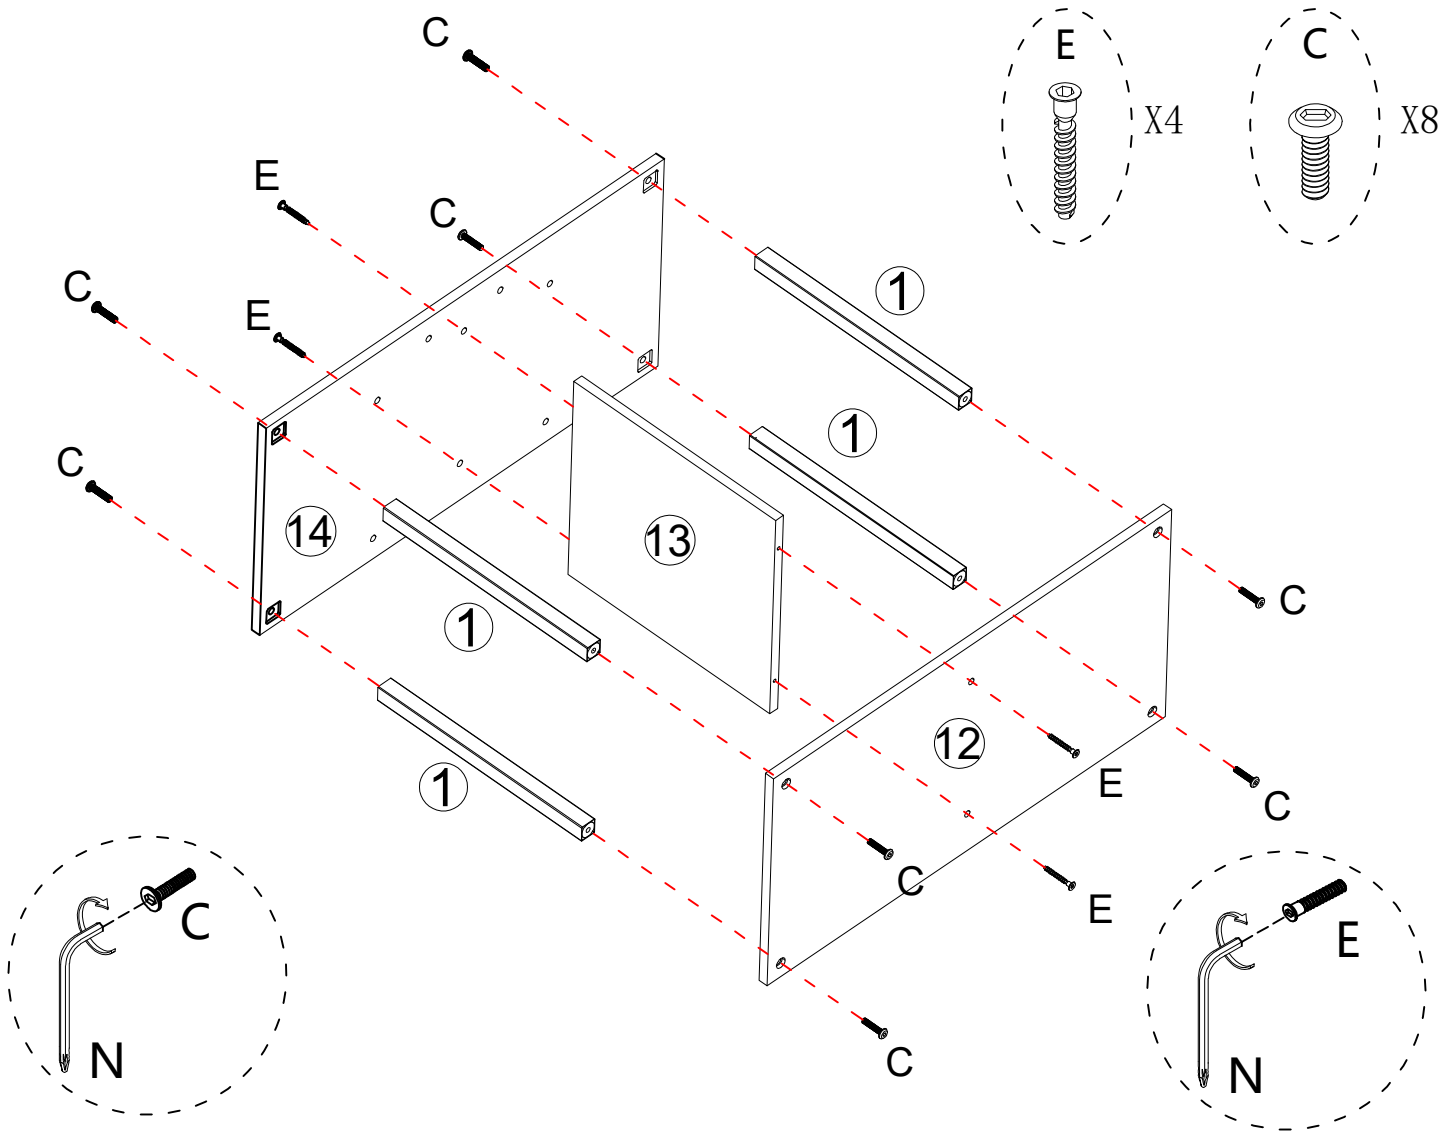


Tear off 3M adhesive protective paper and stick it on the underside




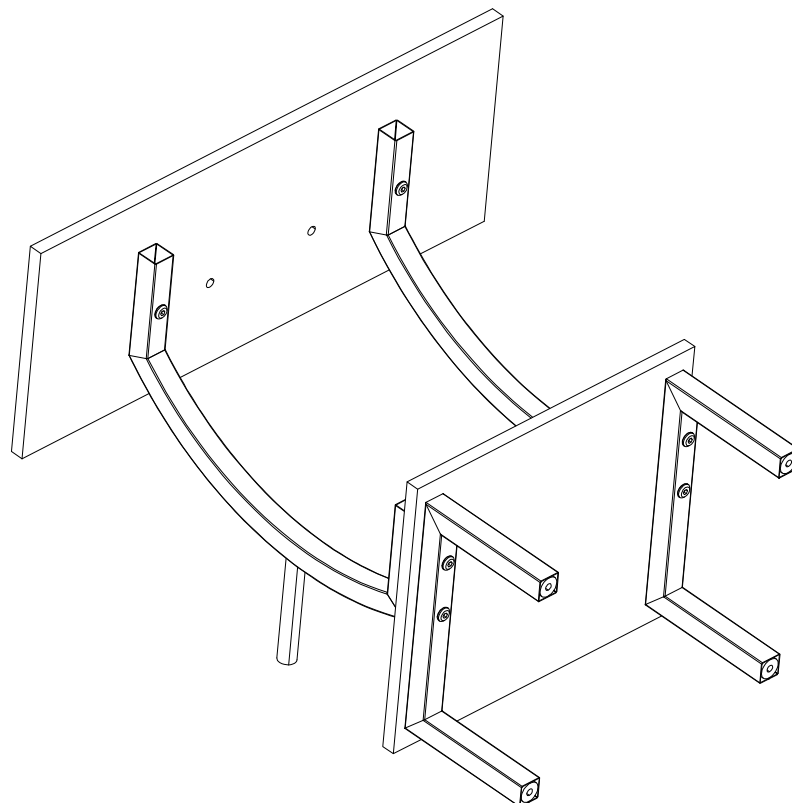
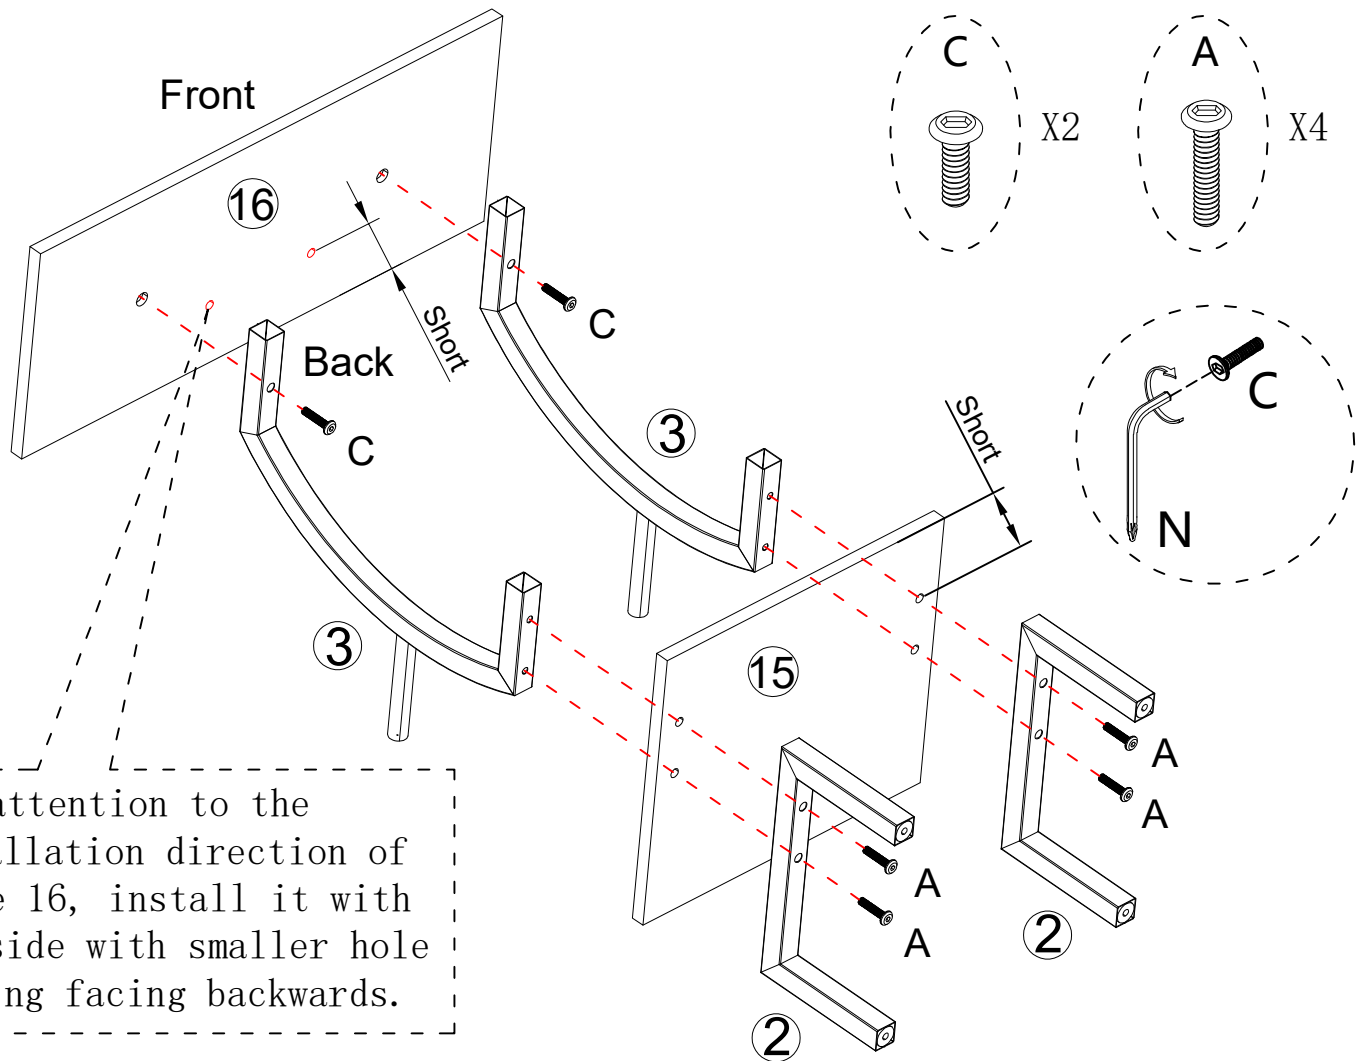


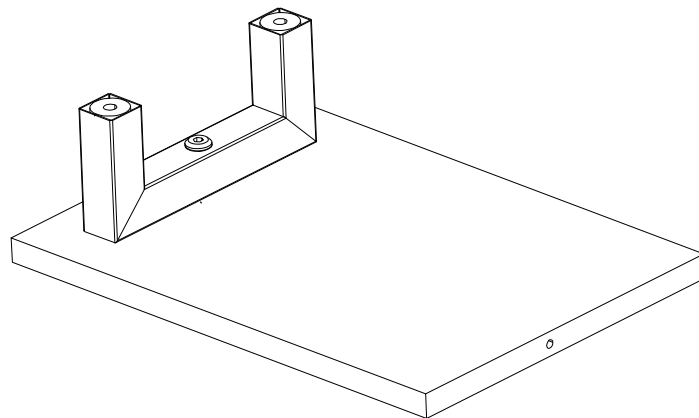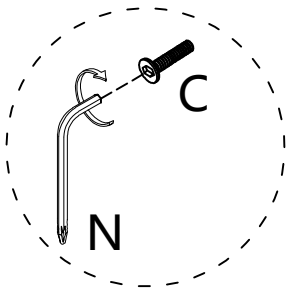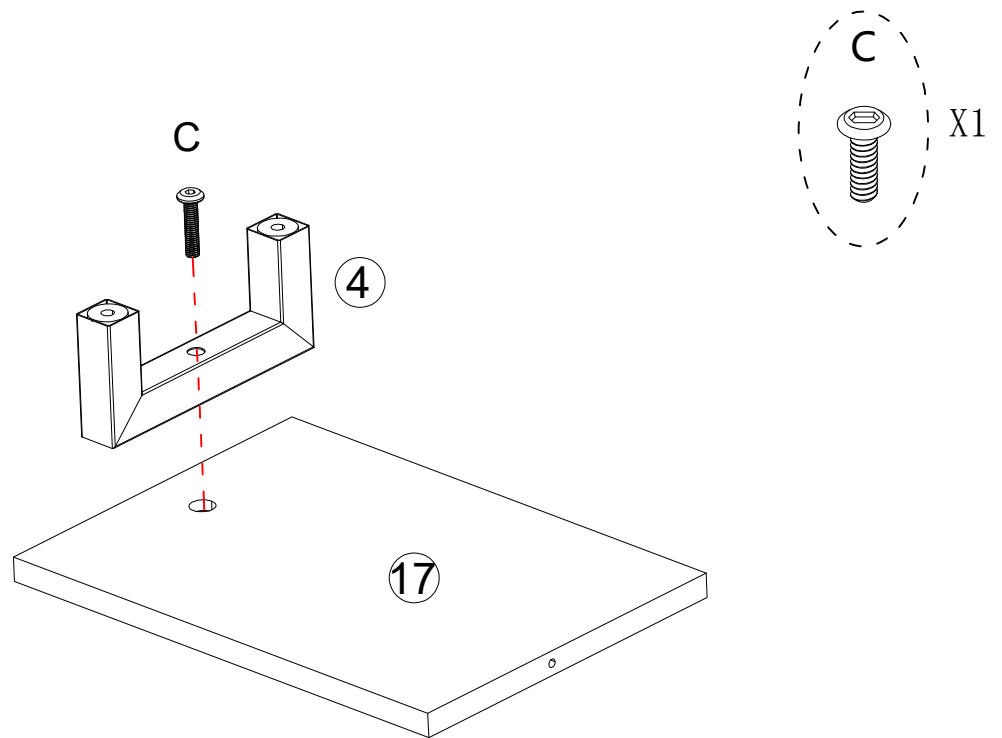






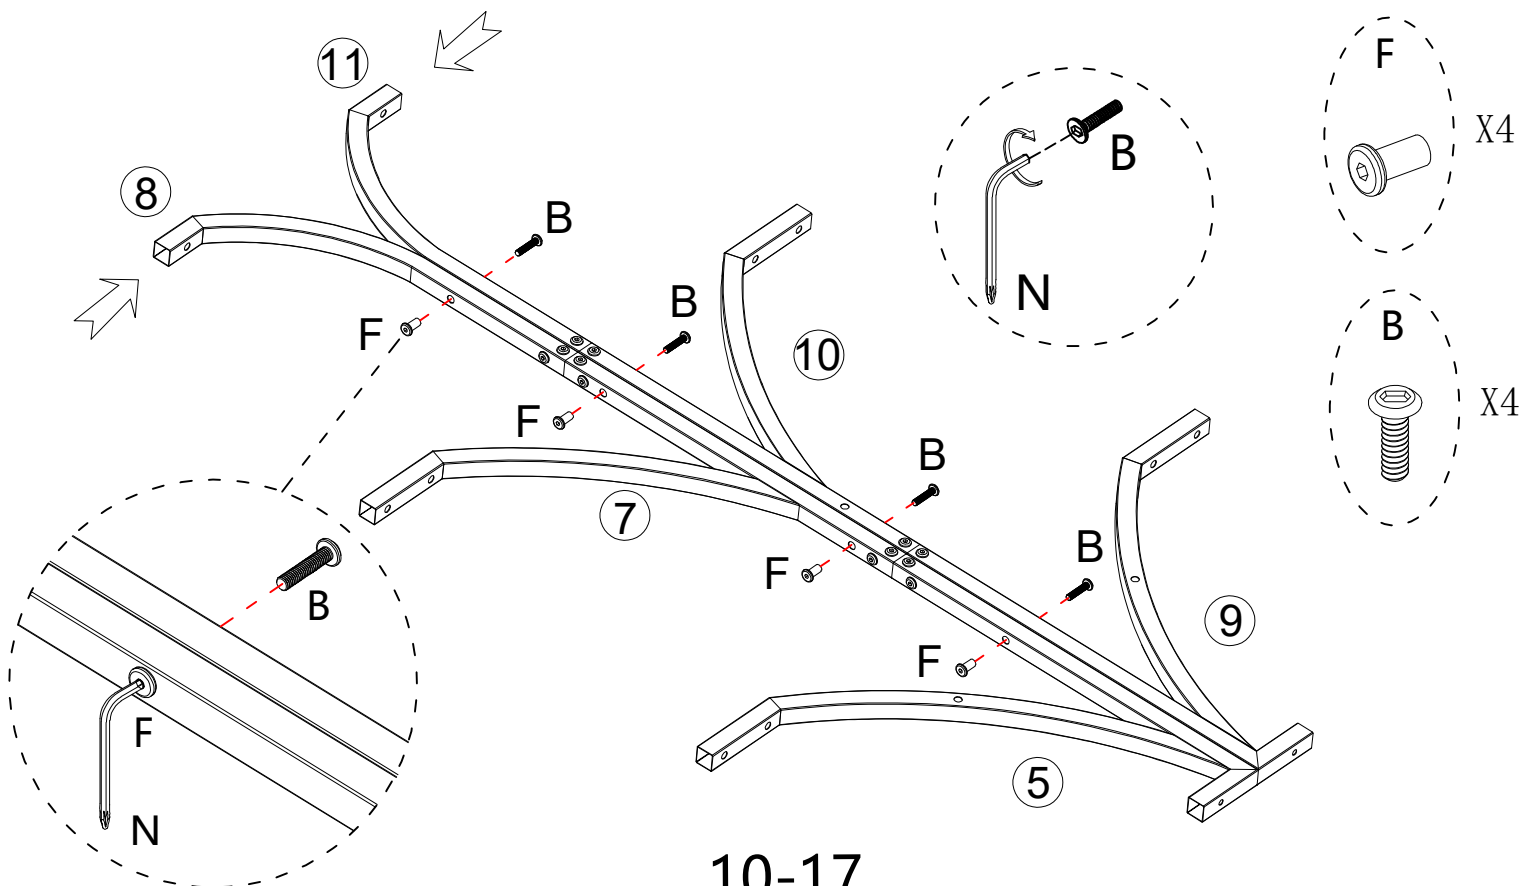
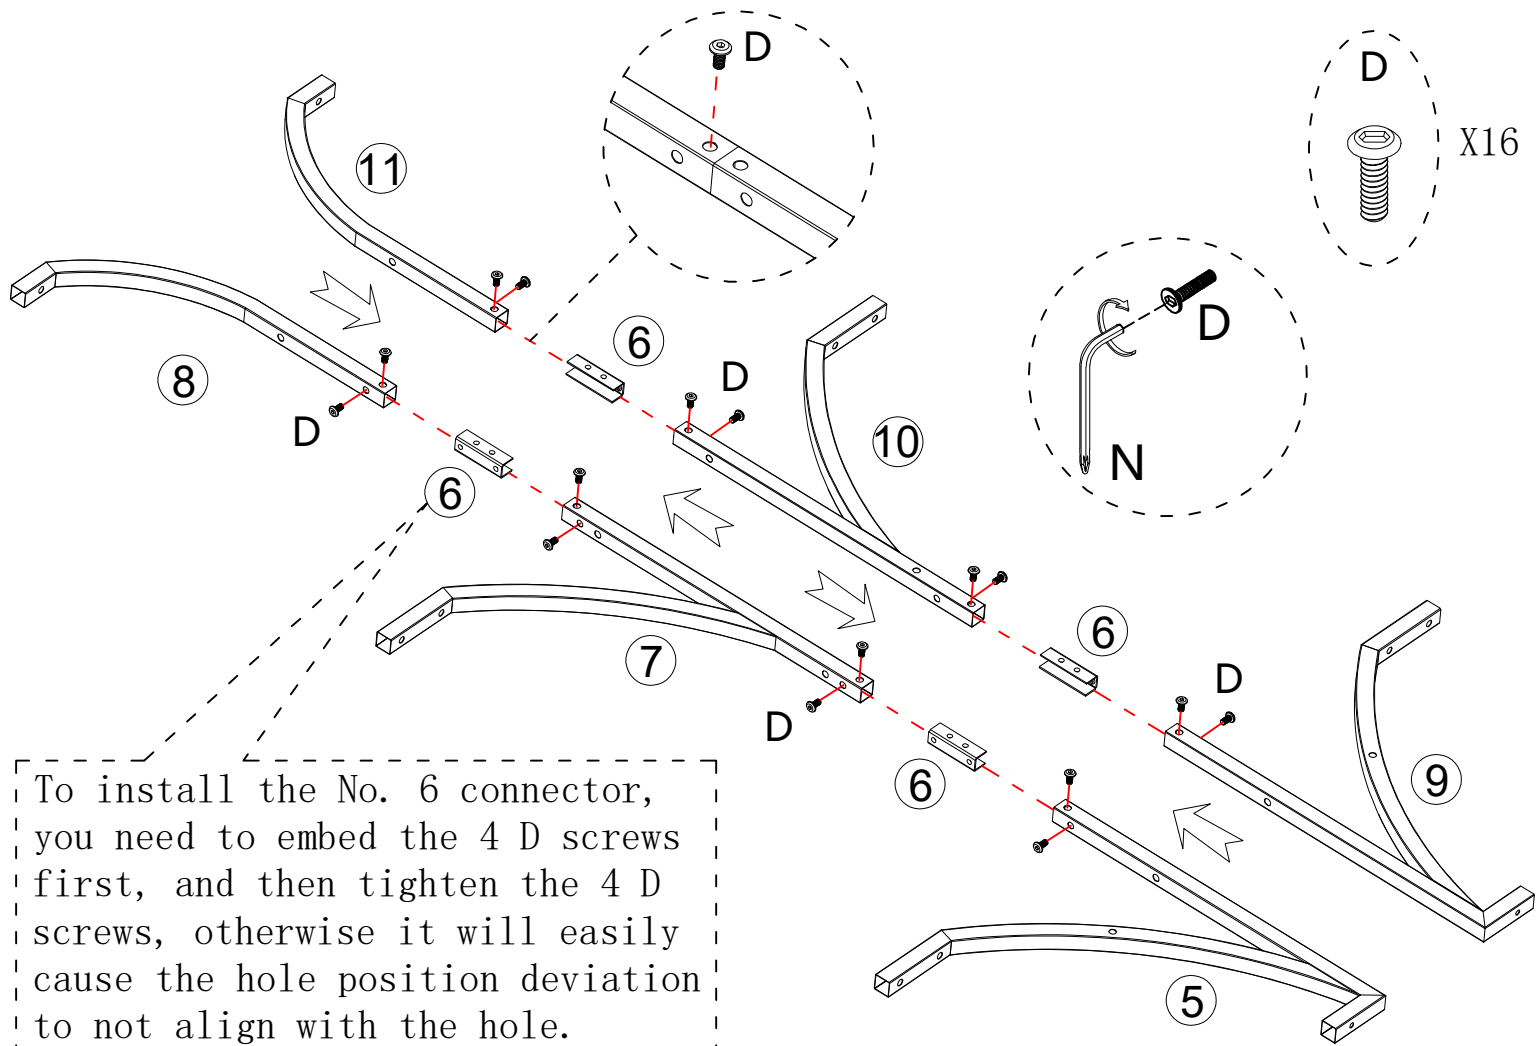


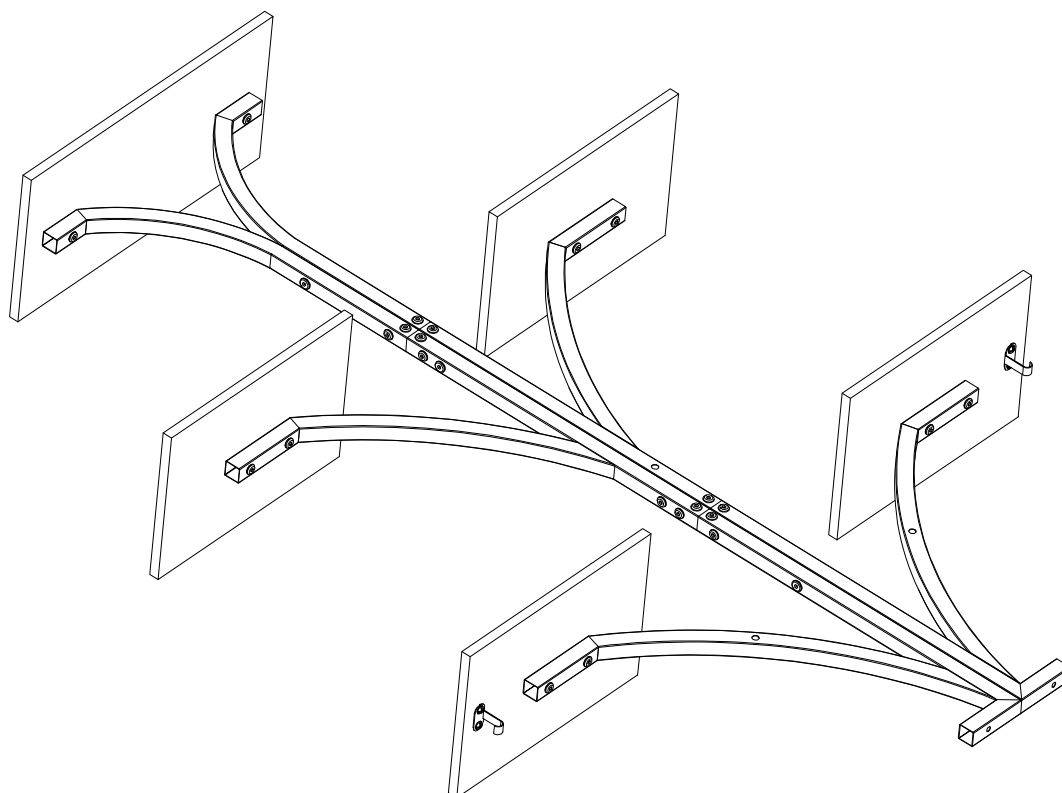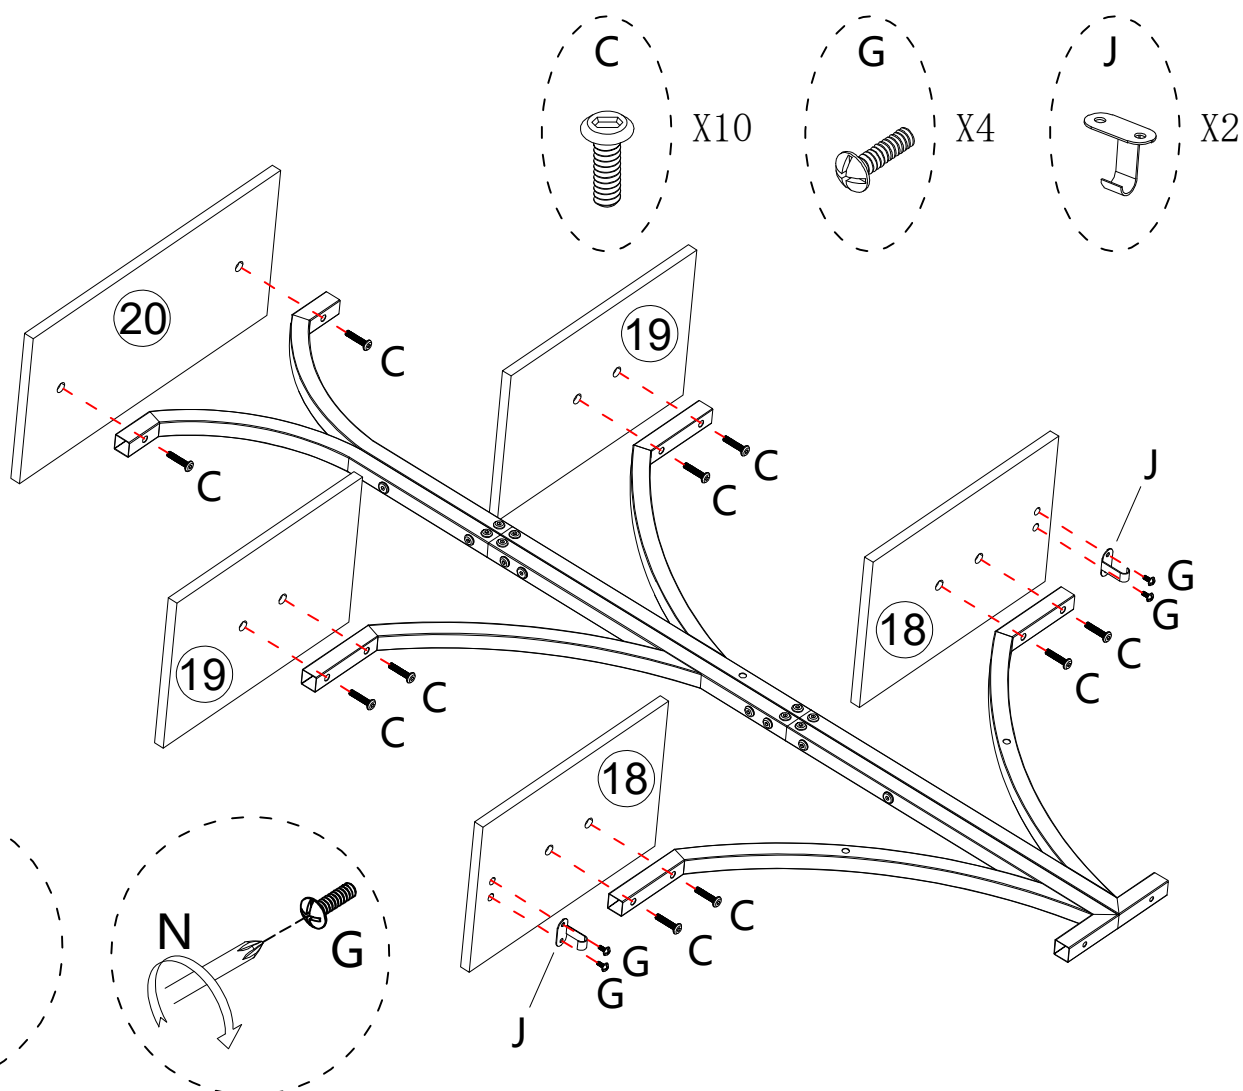



Pay attention to the screw hole position and install it on the back as shown in the picture.

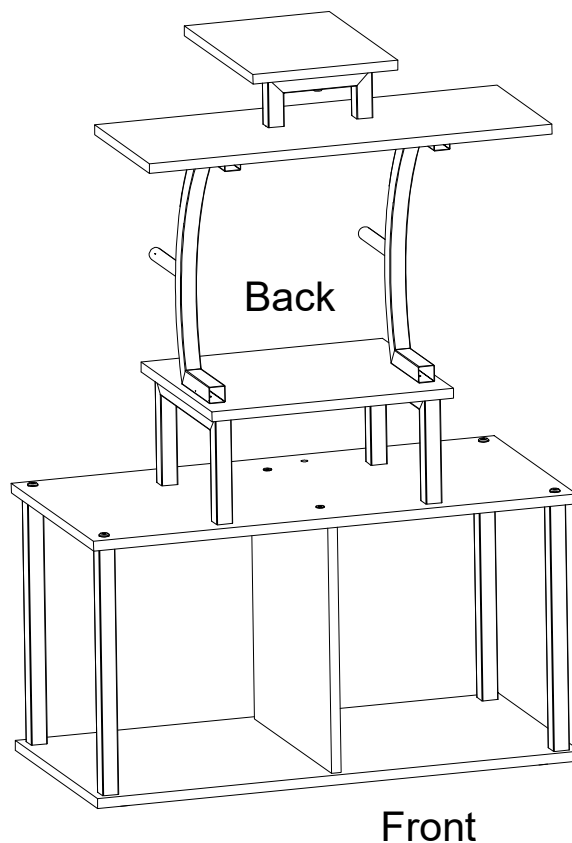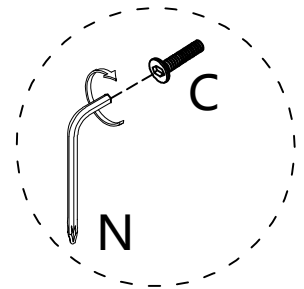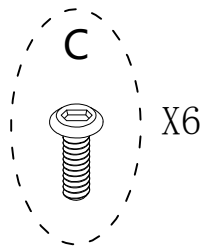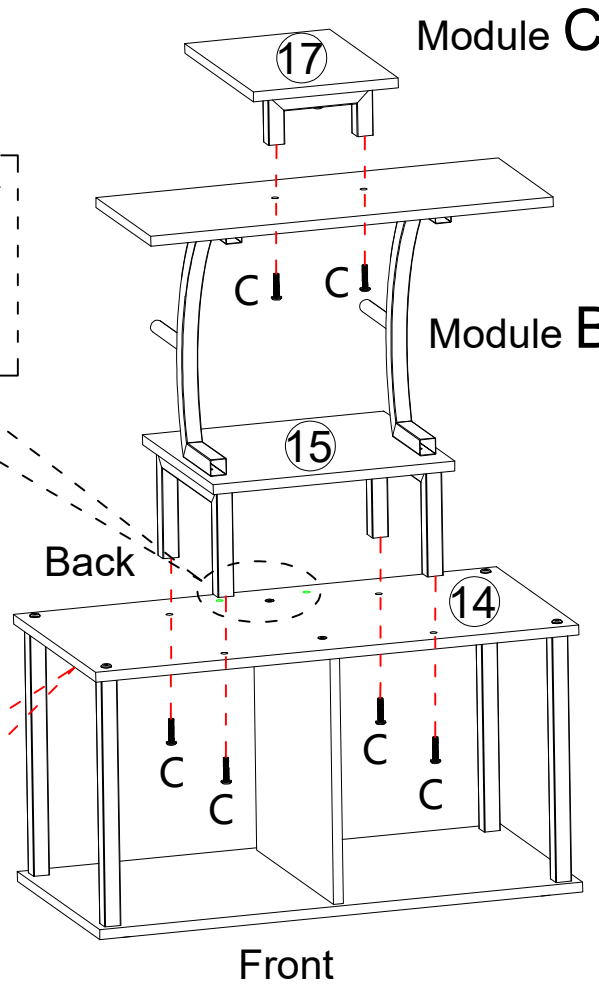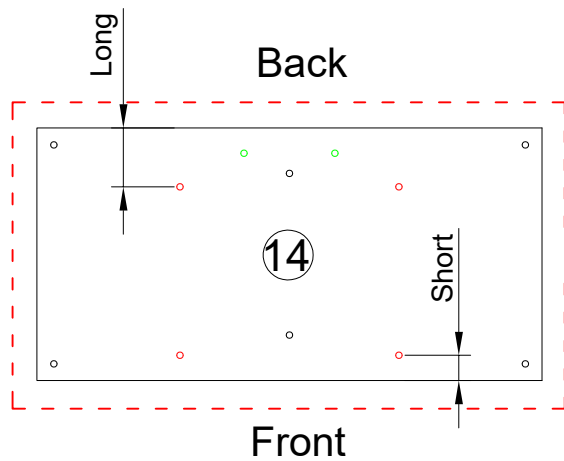



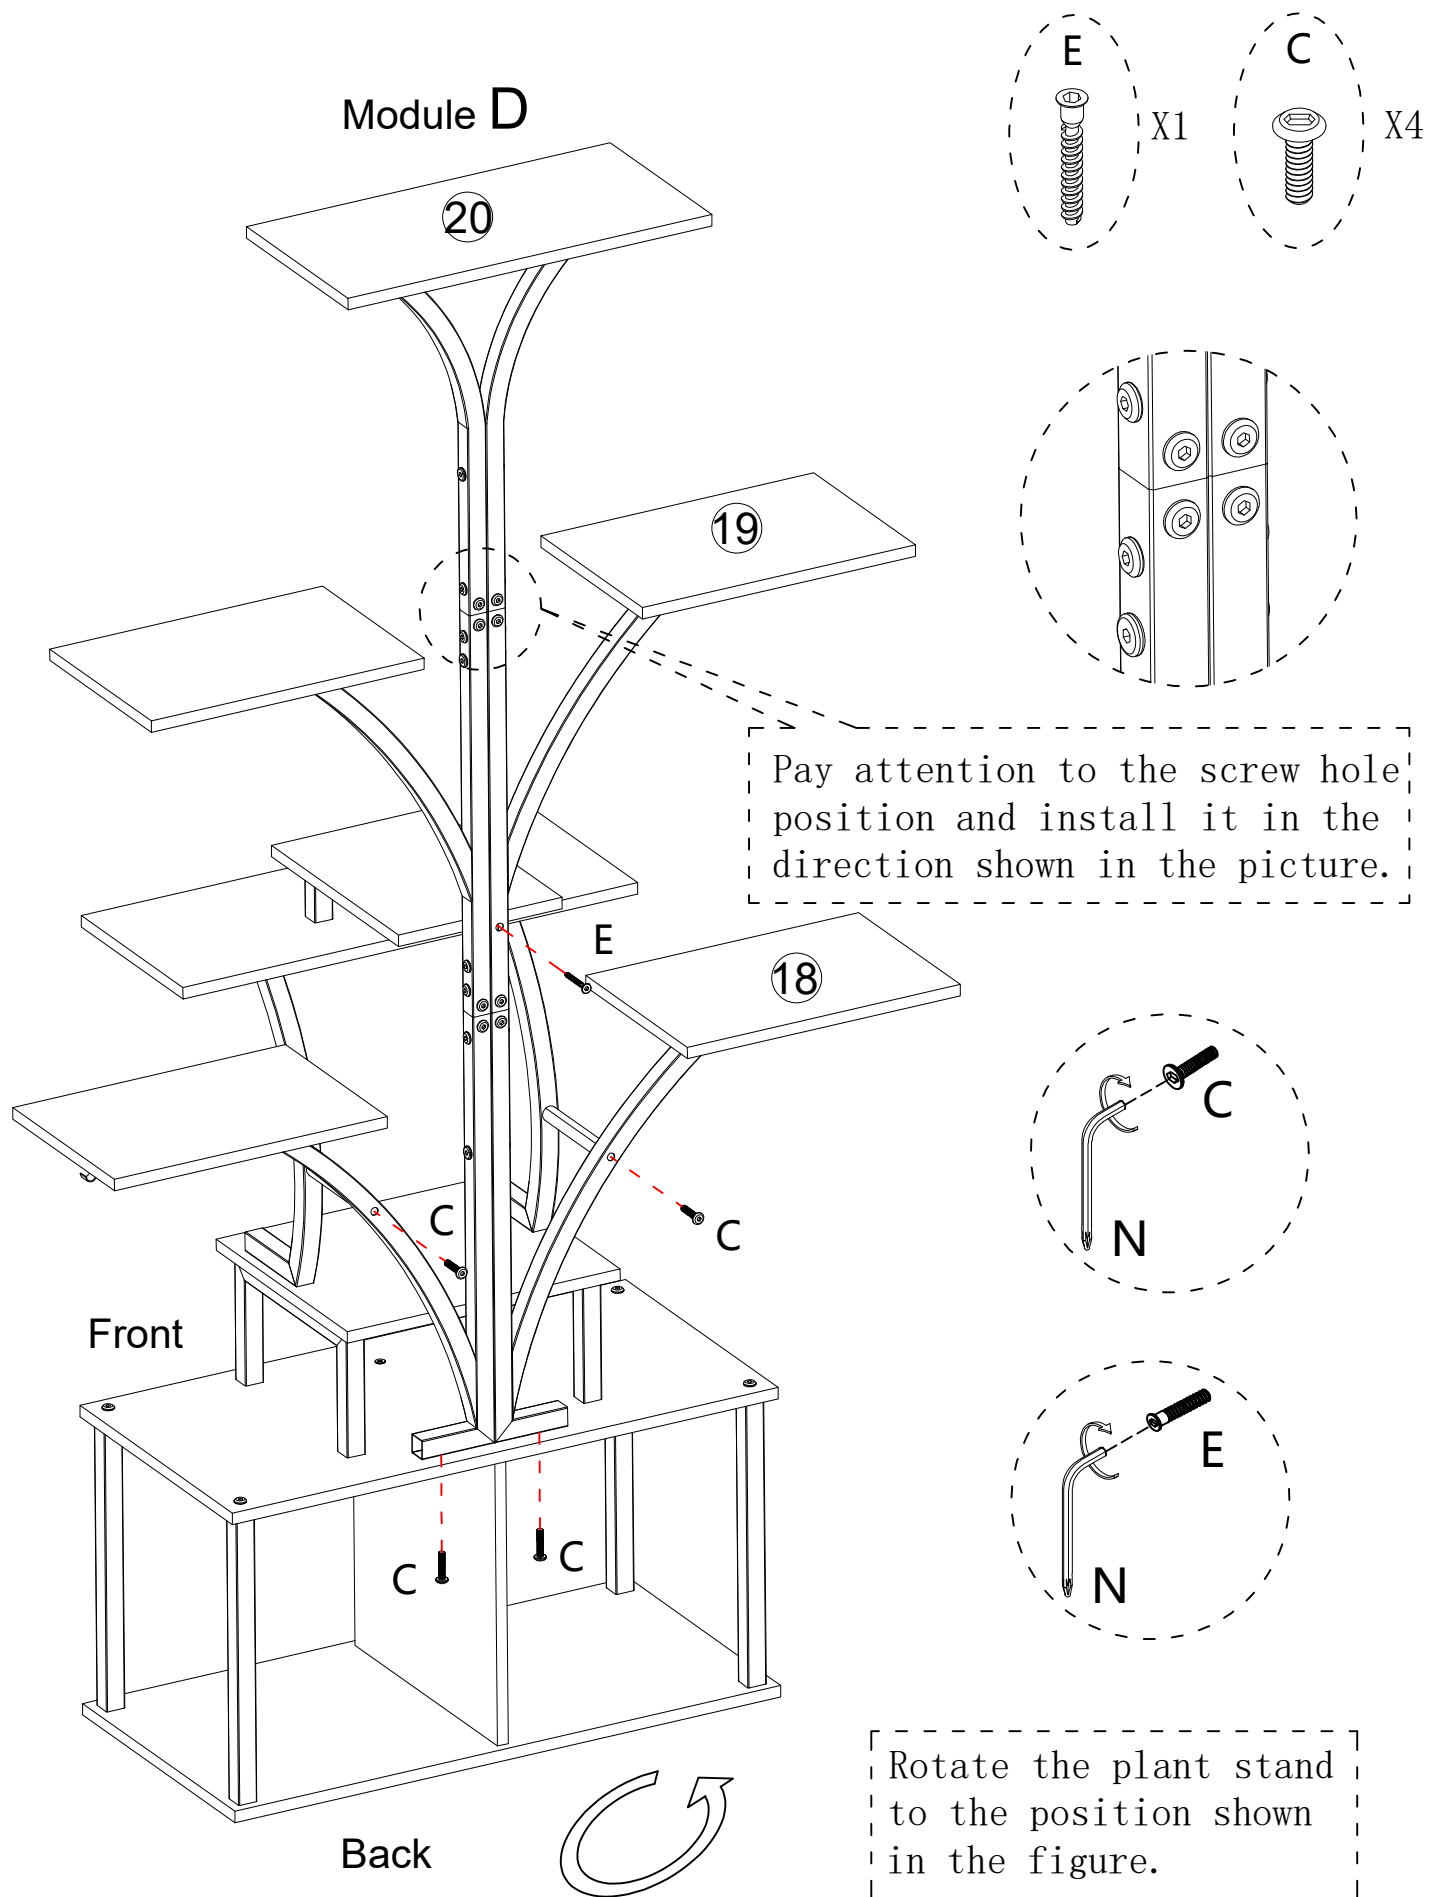


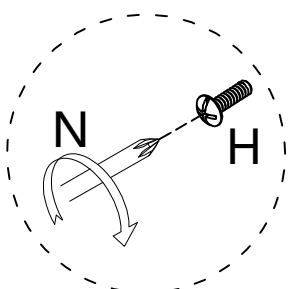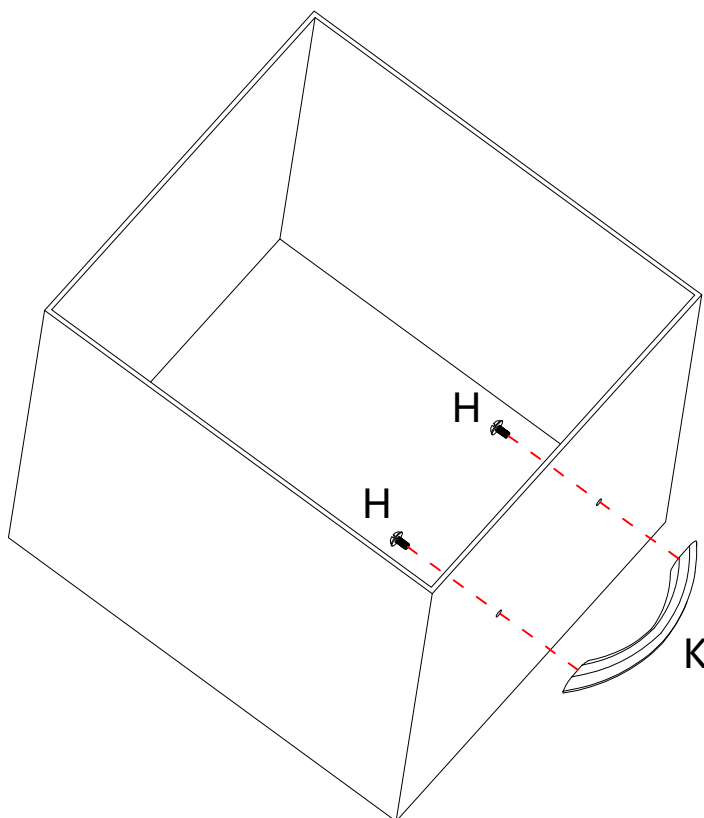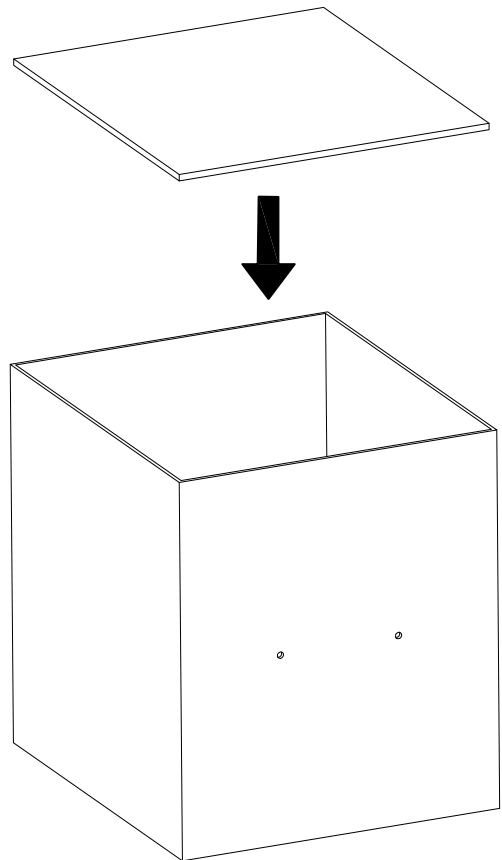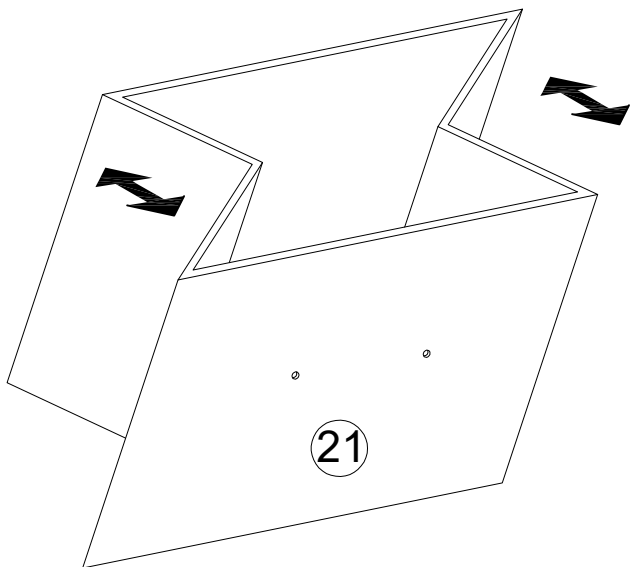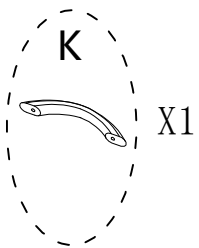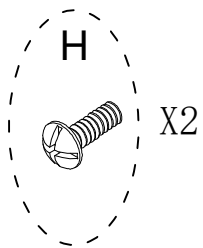

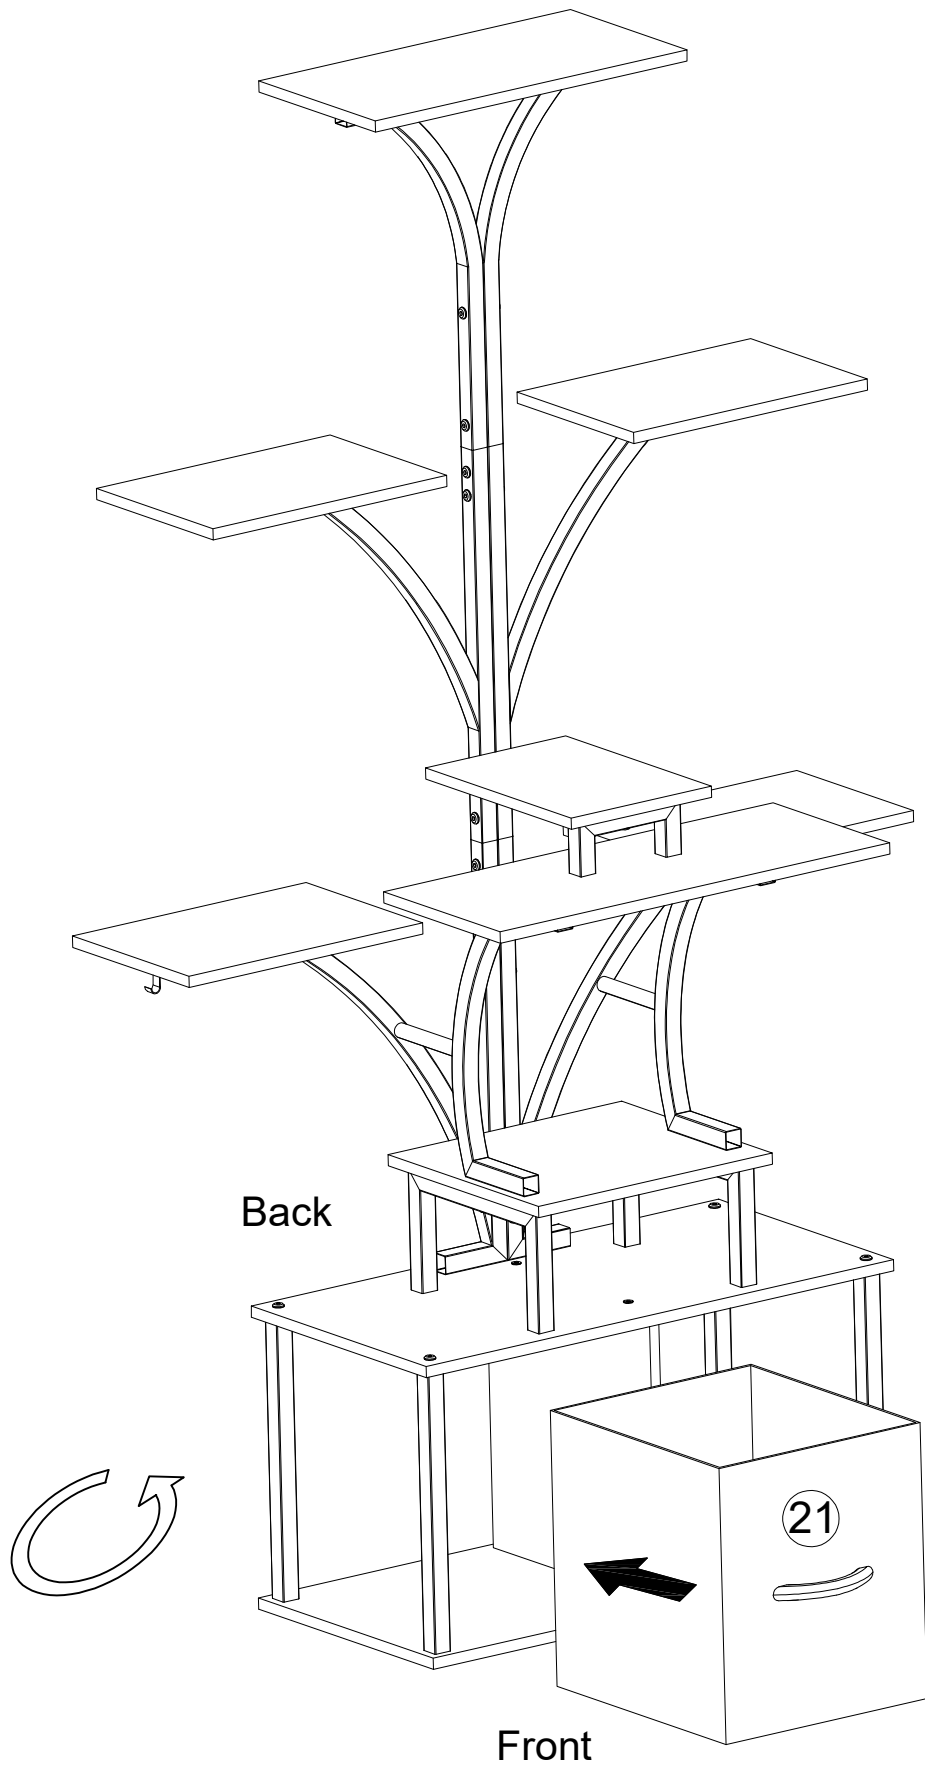

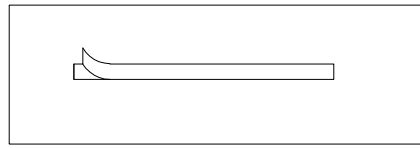

Carefully remove the plastic film behind the light strip

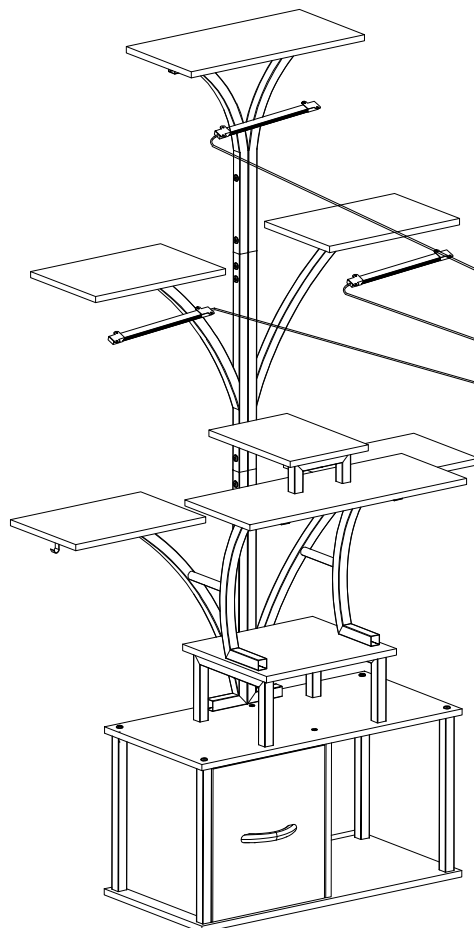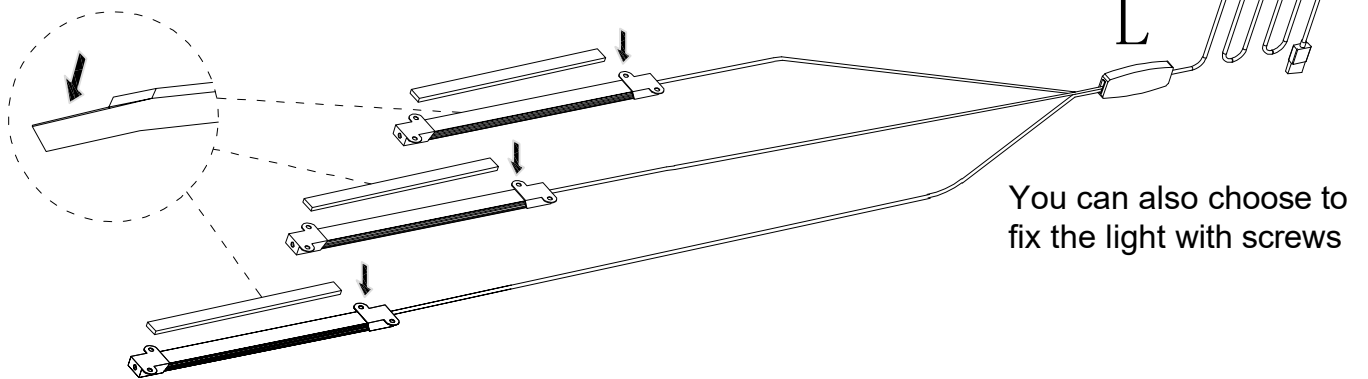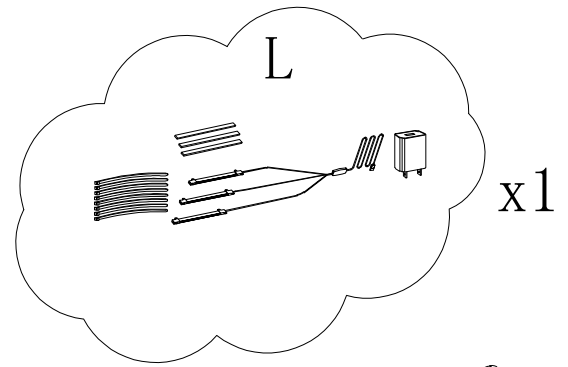

(1) : The light strip can be pasted to the desired position according to your own needs.

(2): Tie the wire with black strips.

Route the wire along the edge of the plant stand and secure it with zip ties to make the light wire more concealed.

