
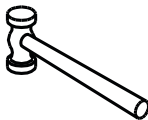













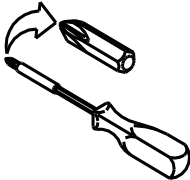






Width = 750mm







Depth = 290mm







Height = 1000mm







	2m x 2m 			 0:60h
---	--	---	--	--

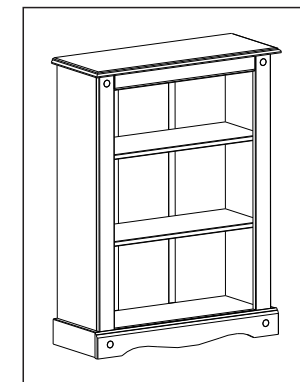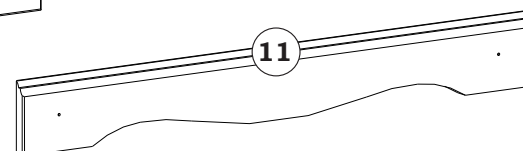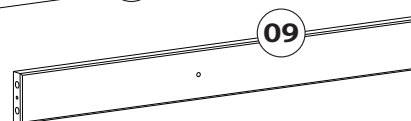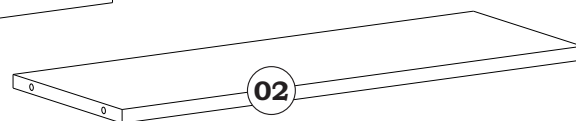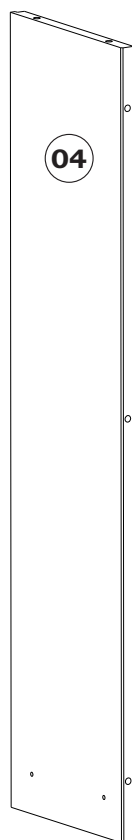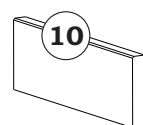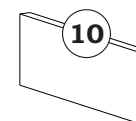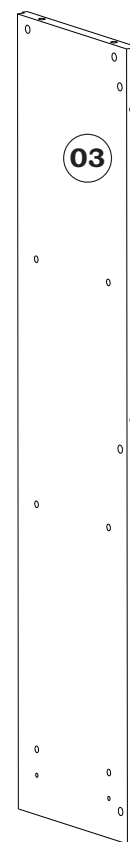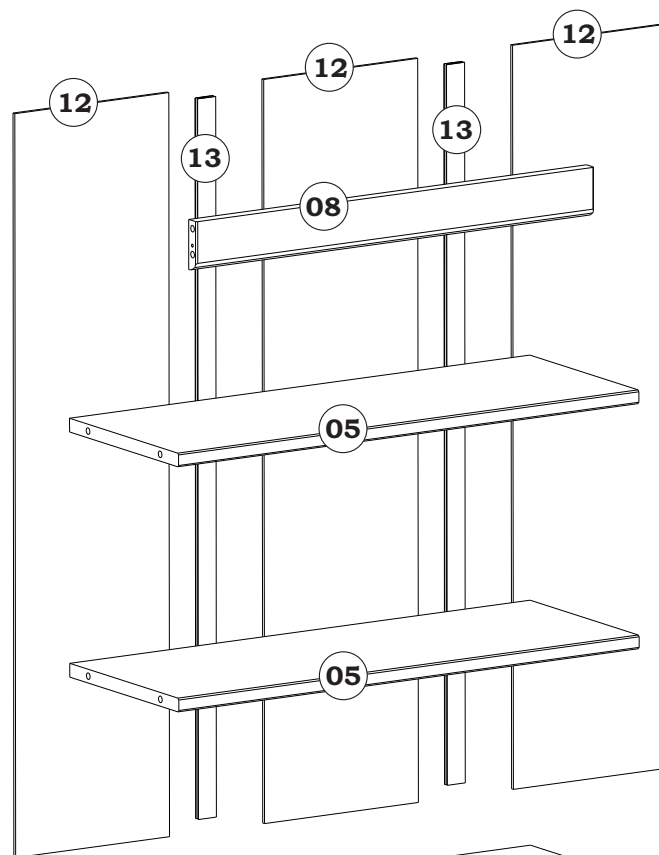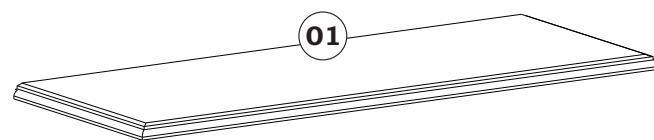

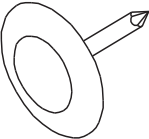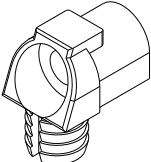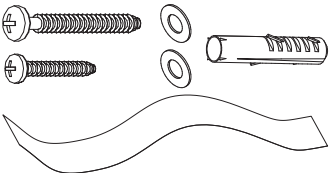A	 $\varnothing 8,0 \times 30 \text{ mm}$	30
B	 $\varnothing 3,5 \times 30 \text{ mm}$	11
C	 8×8	36
D		04
E	 $\varnothing 4,0 \times 25 \text{ mm}$	24
F		24
Y		01

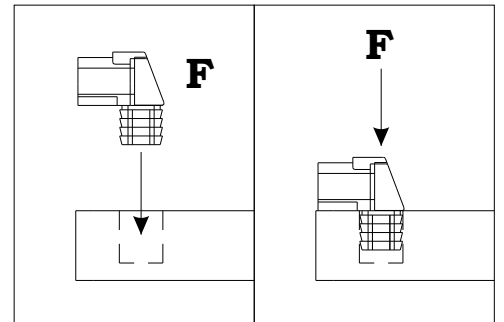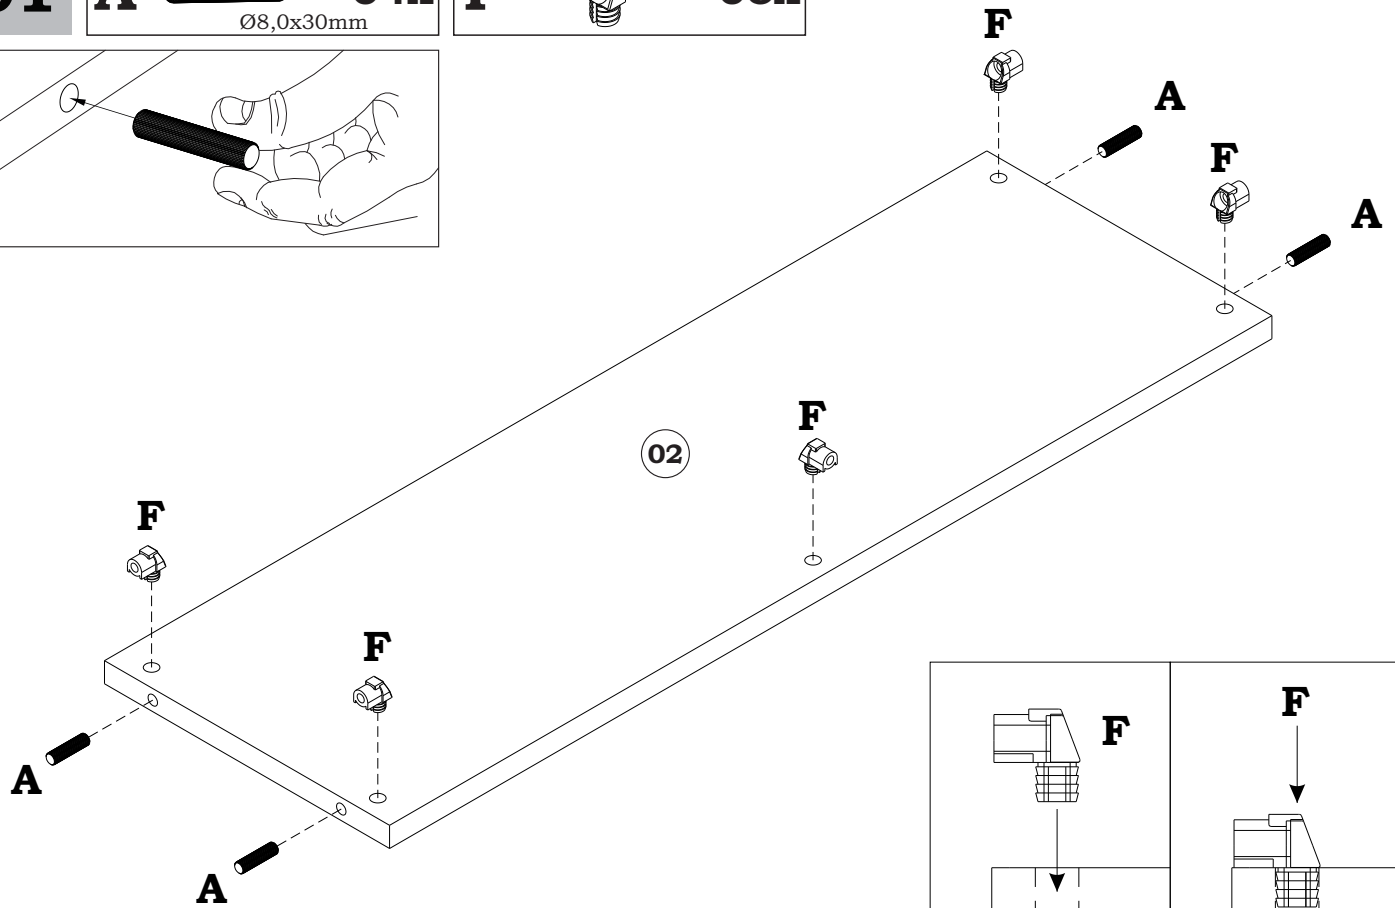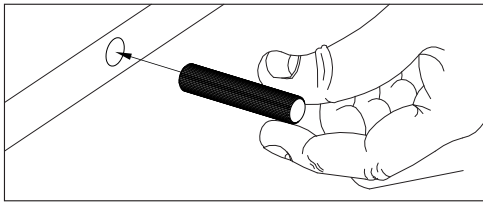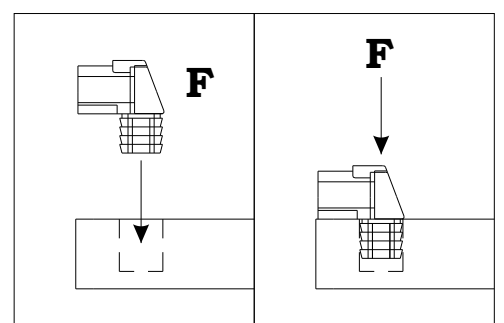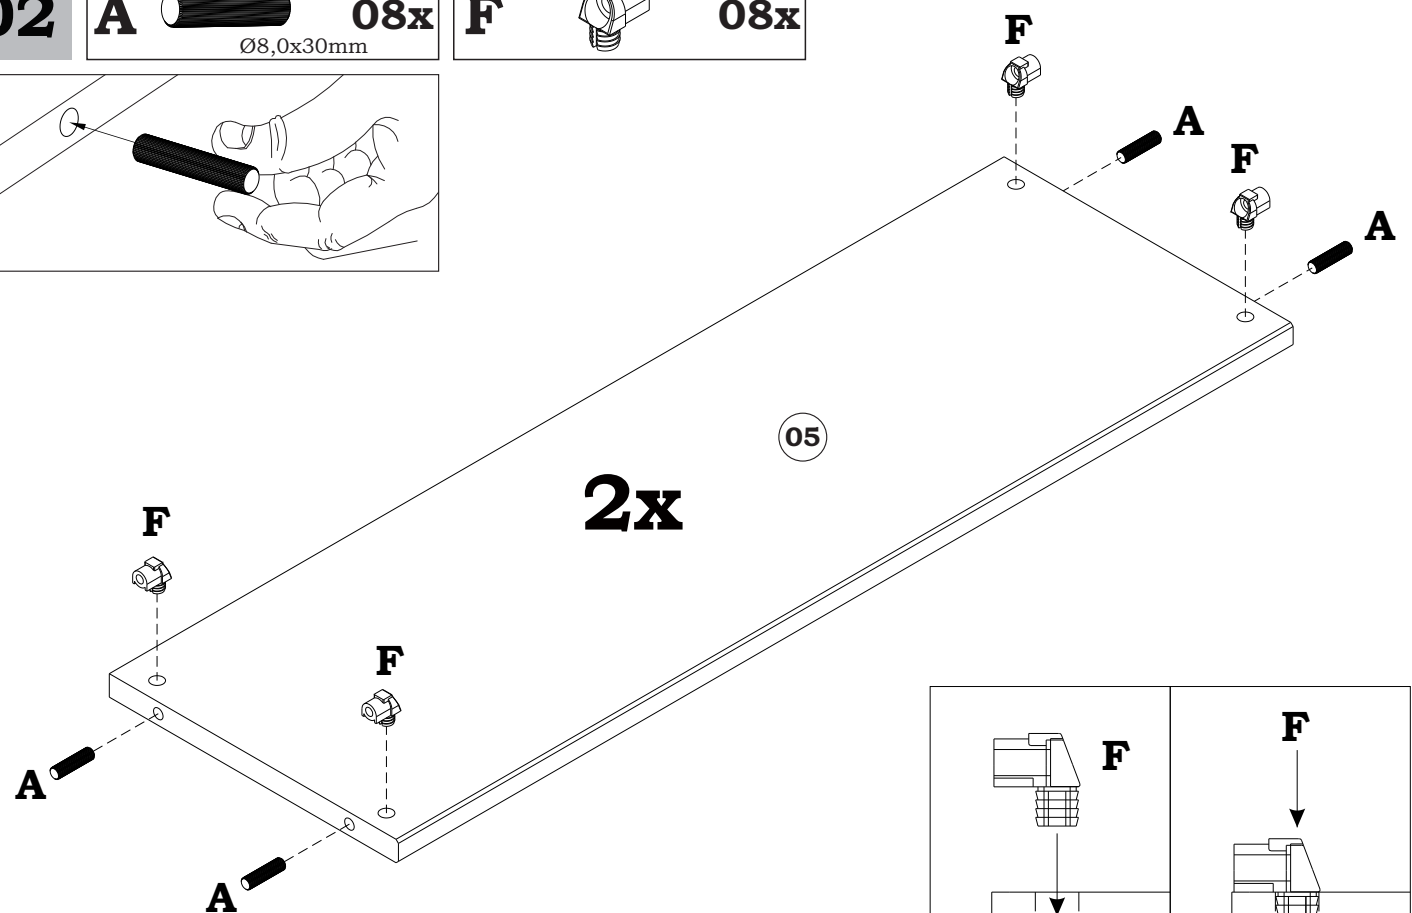
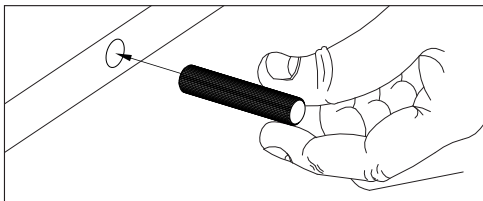
01**A**  **04x**
Ø8,0x30mm**F****05x****02****A**  **08x**
Ø8,0x30mm**F****08x**

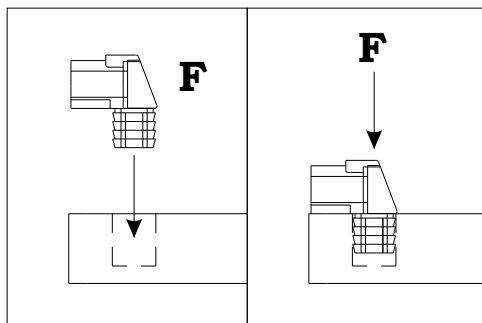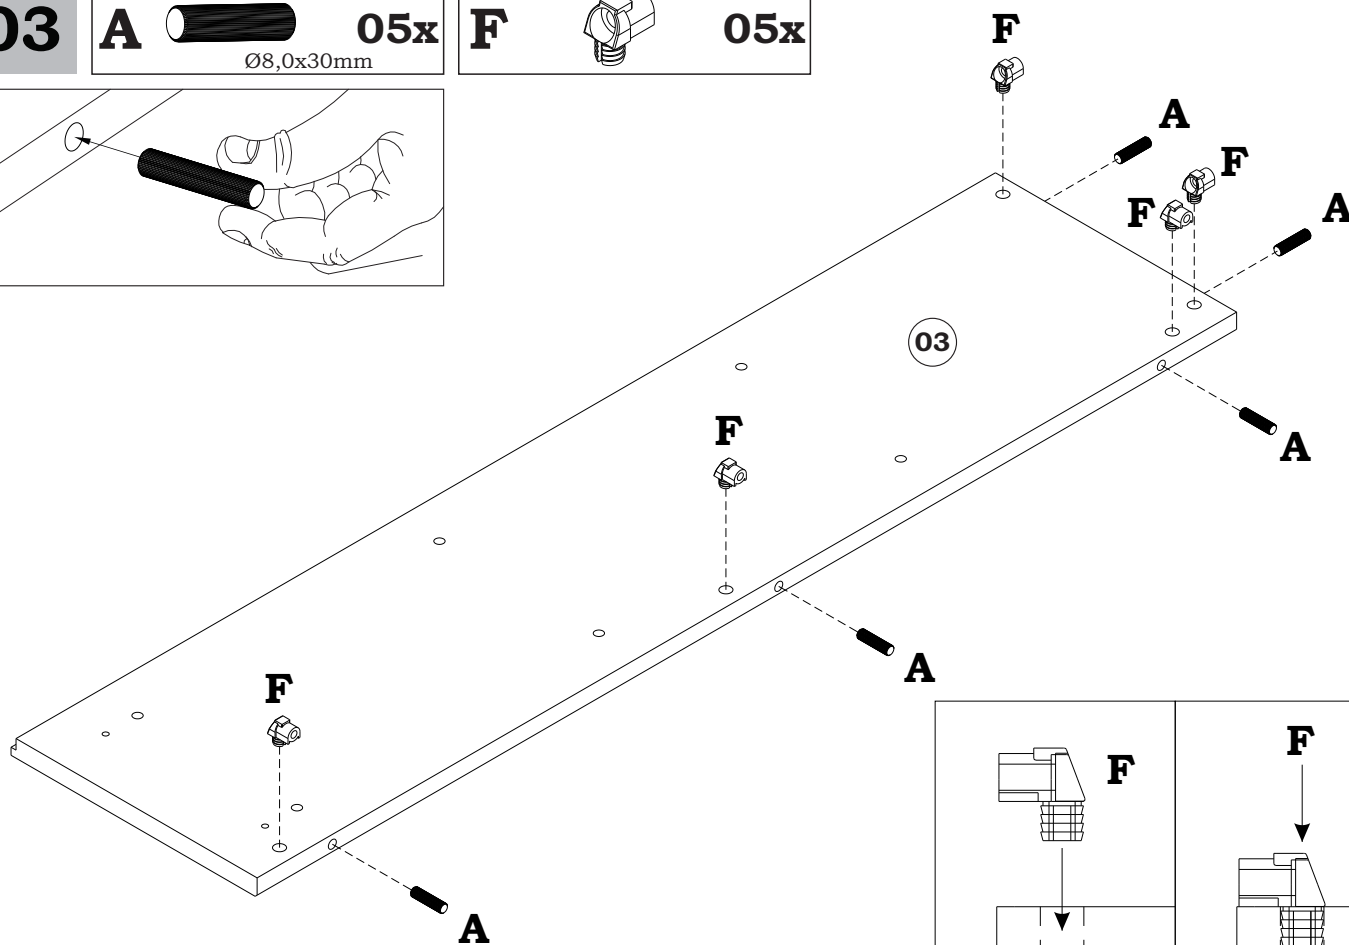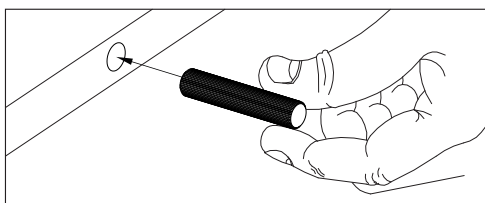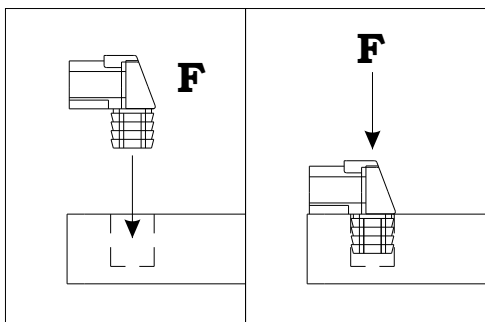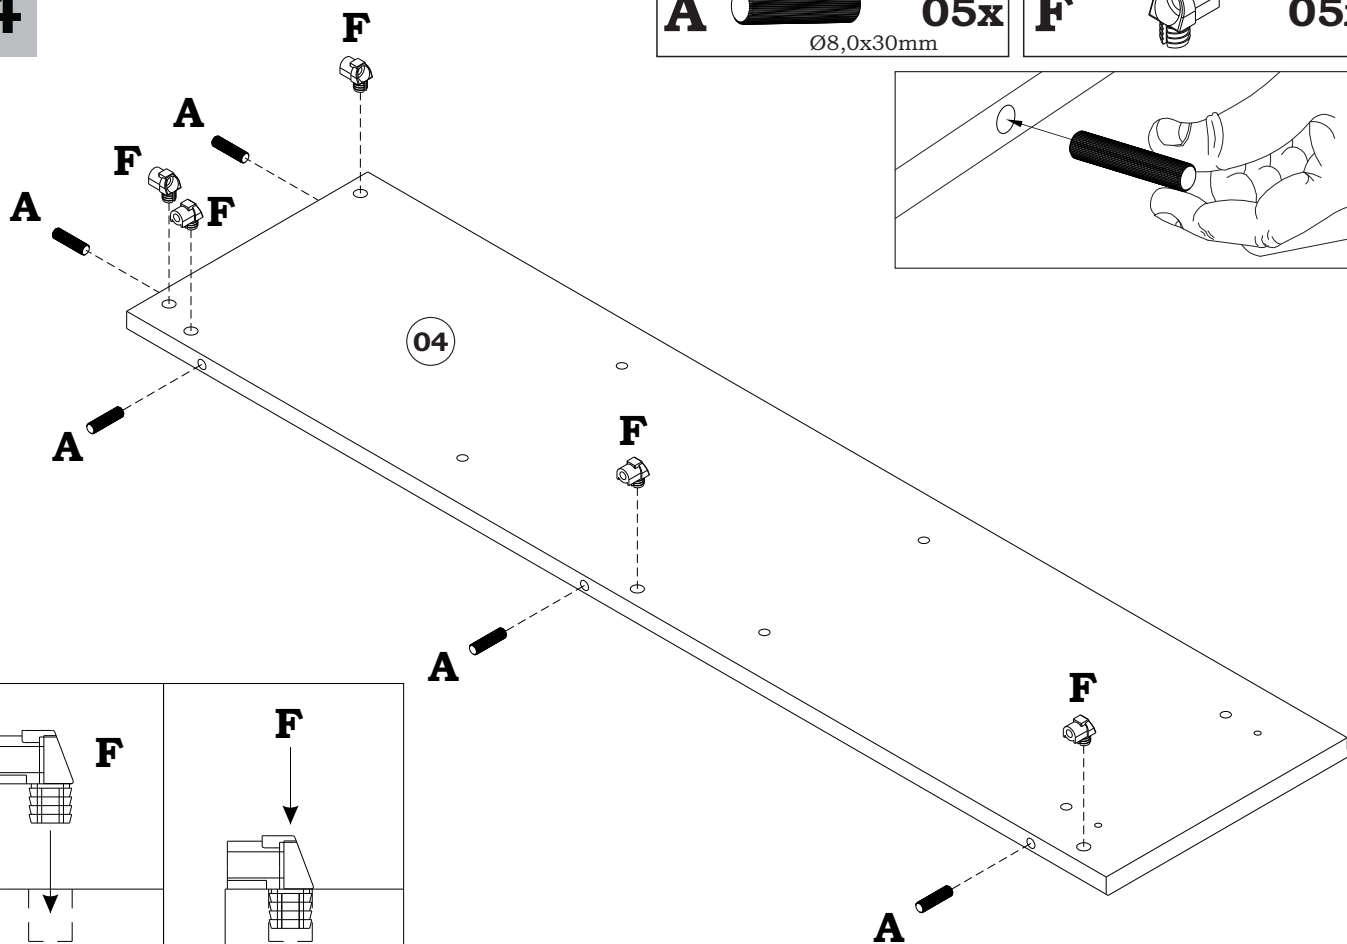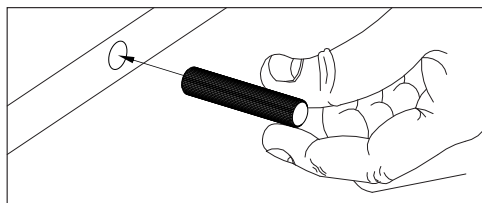03**A**  **05x**
Ø8,0x30mm**F****05x****04****A**  **05x**
Ø8,0x30mm**F****05x**

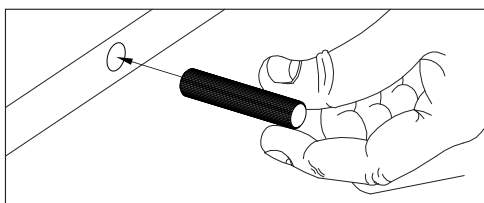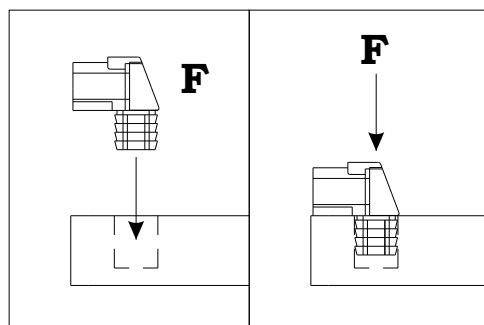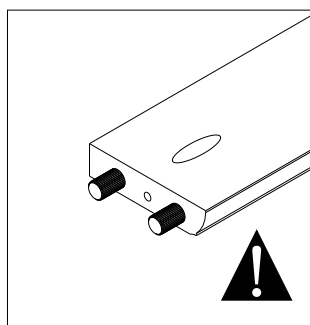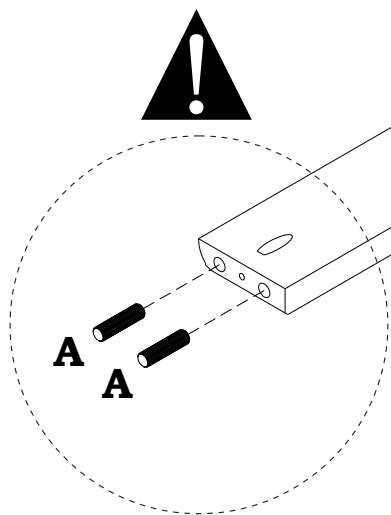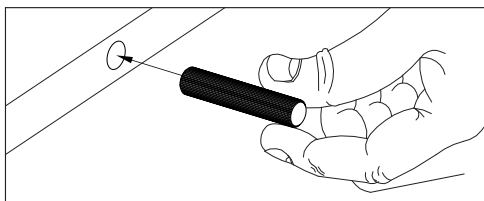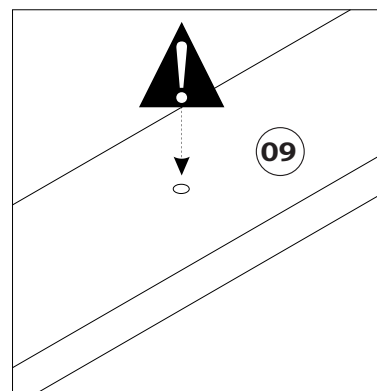05**A**  **04x**
Ø8,0x30mm**F****01x****F****08****A****A****06****A**  **04x**
Ø8,0x30mm**09****A****A****A****A**




07

B  **01x**
Ø3,5x30mm

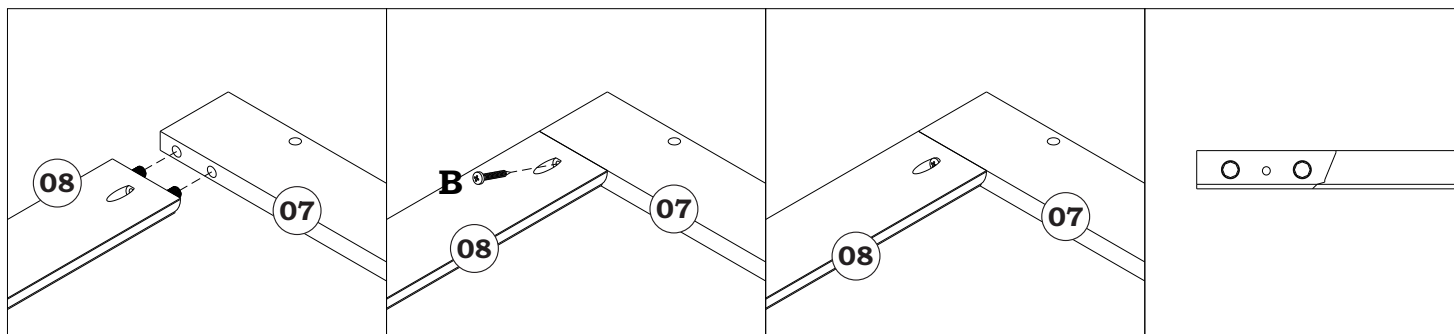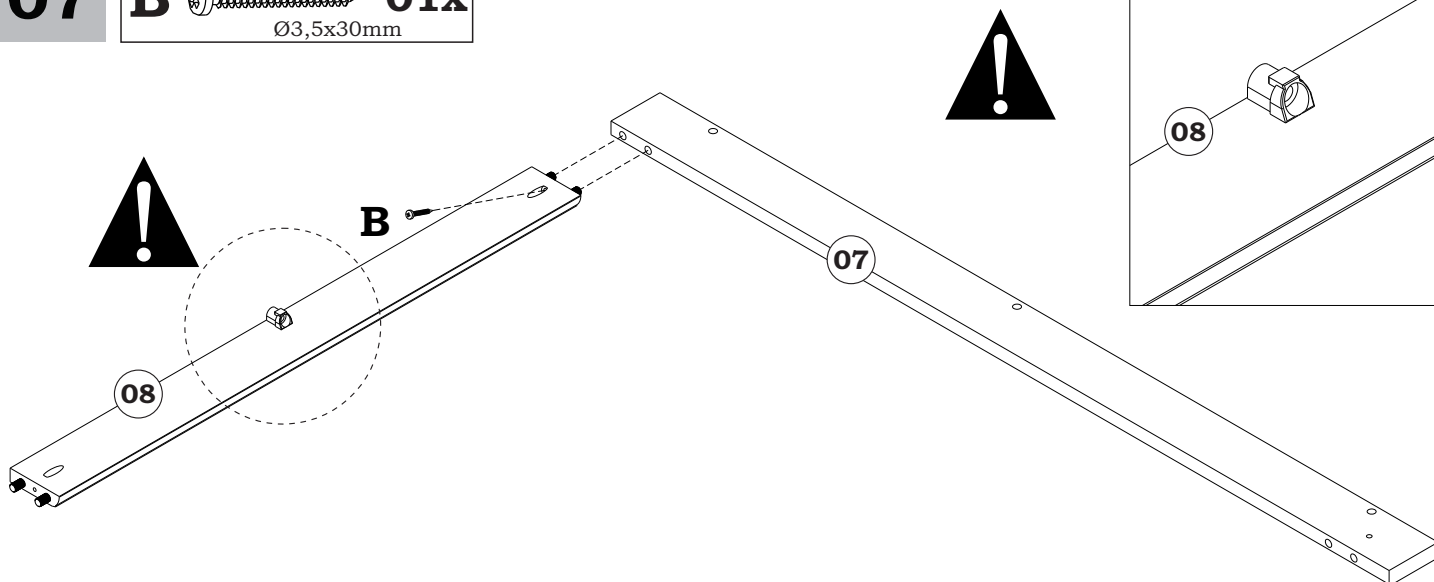




08

B  **01x**
Ø3,5x30mm

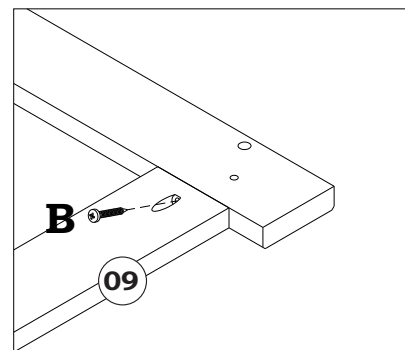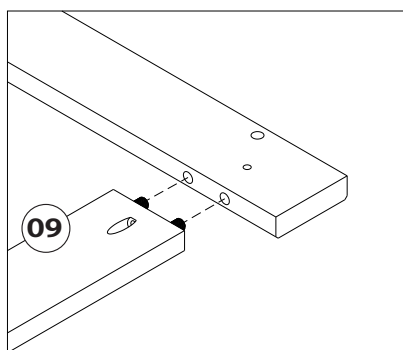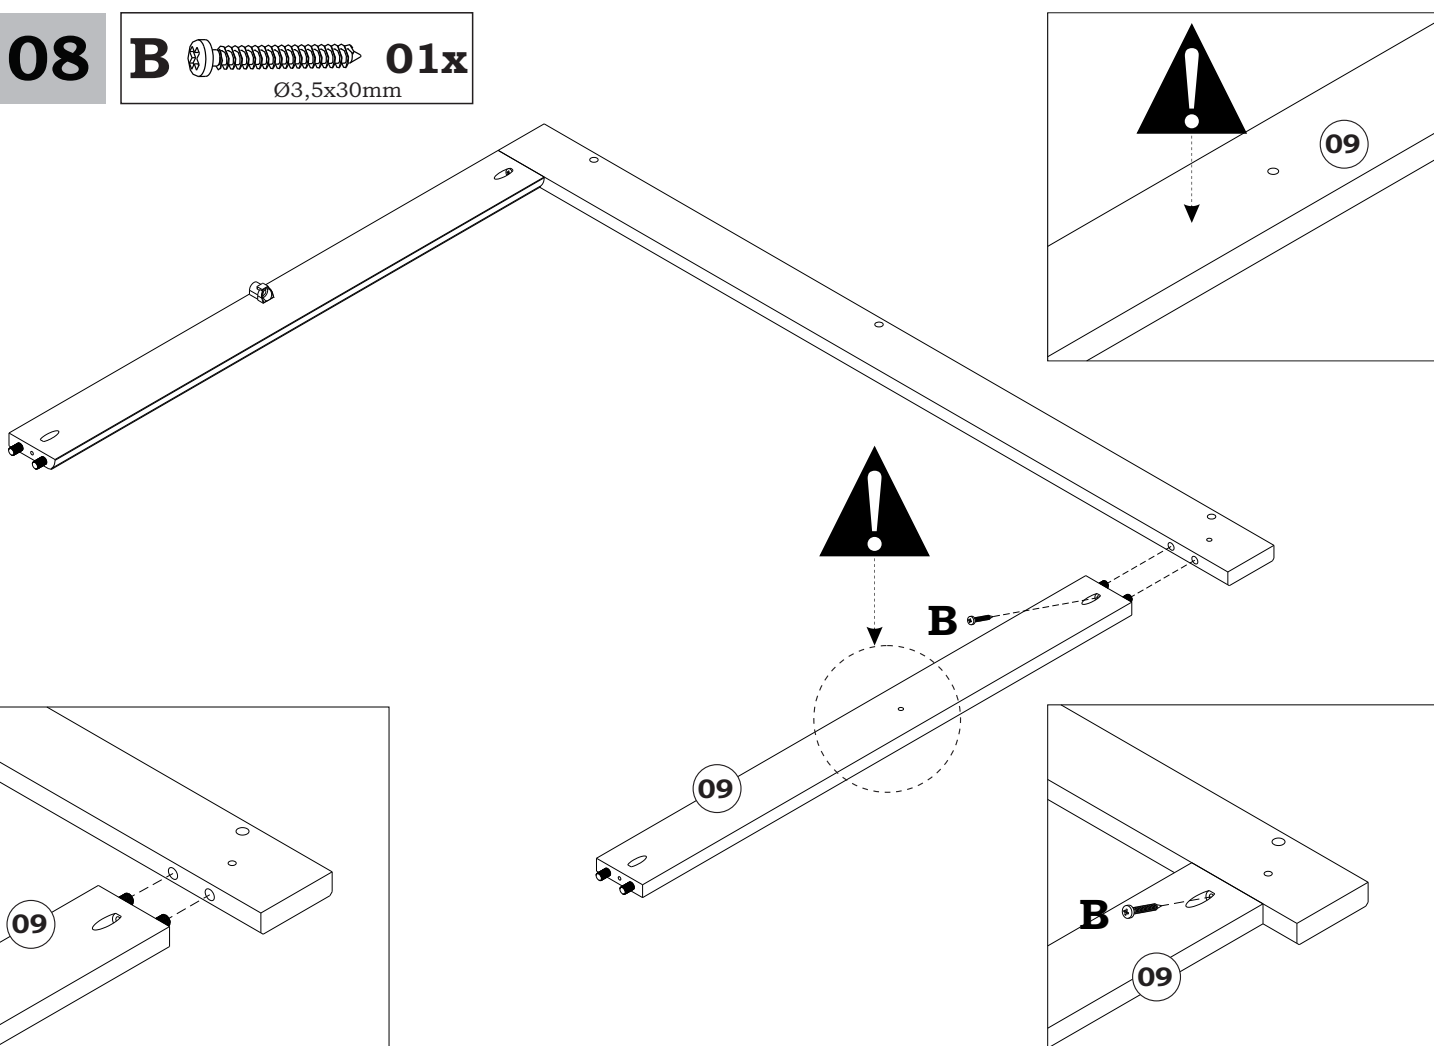





09

B  **02x**
Ø3,5x30mm

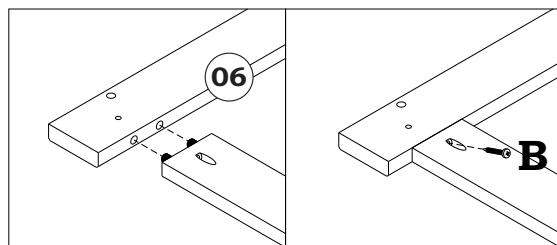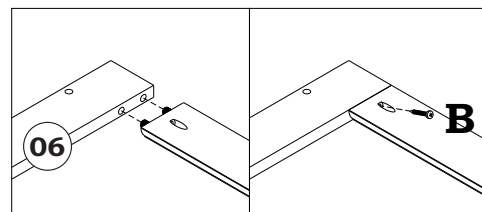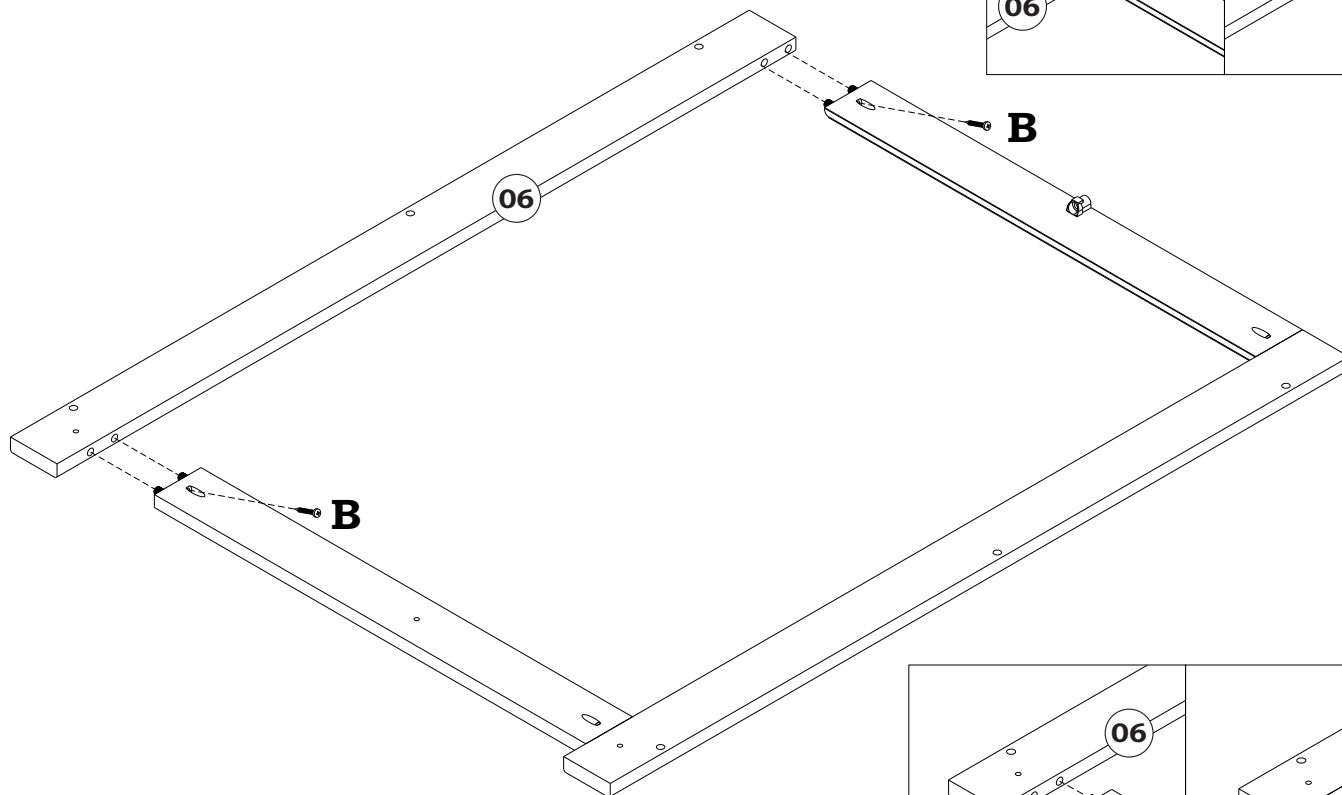



10

E  **02x**
Ø4,0x25mm

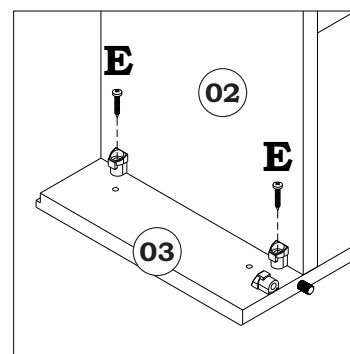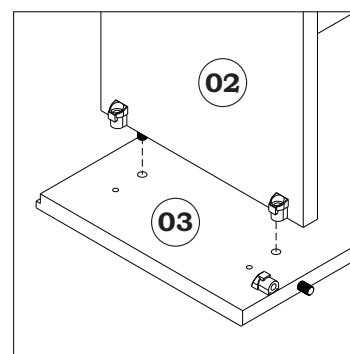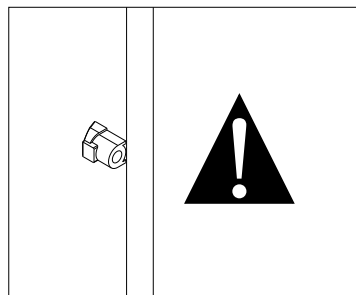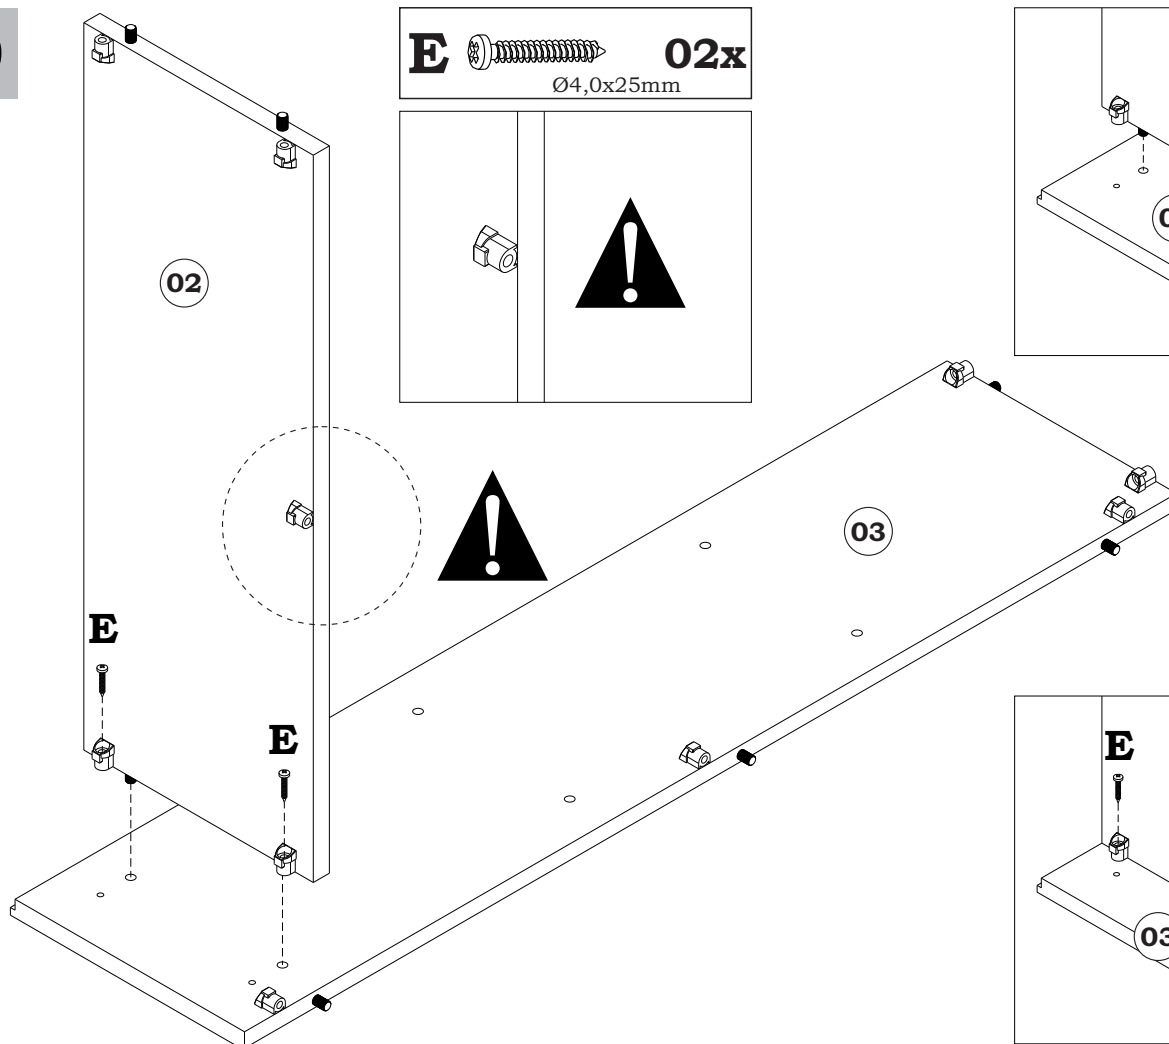



11

E  **04x**
Ø4,0x25mm

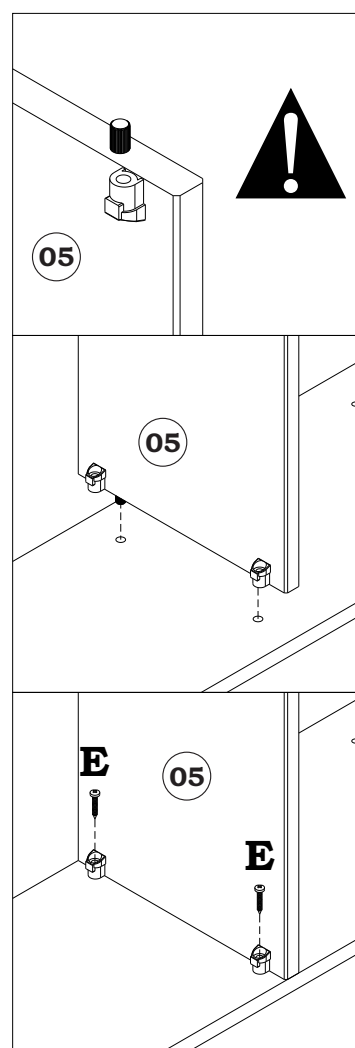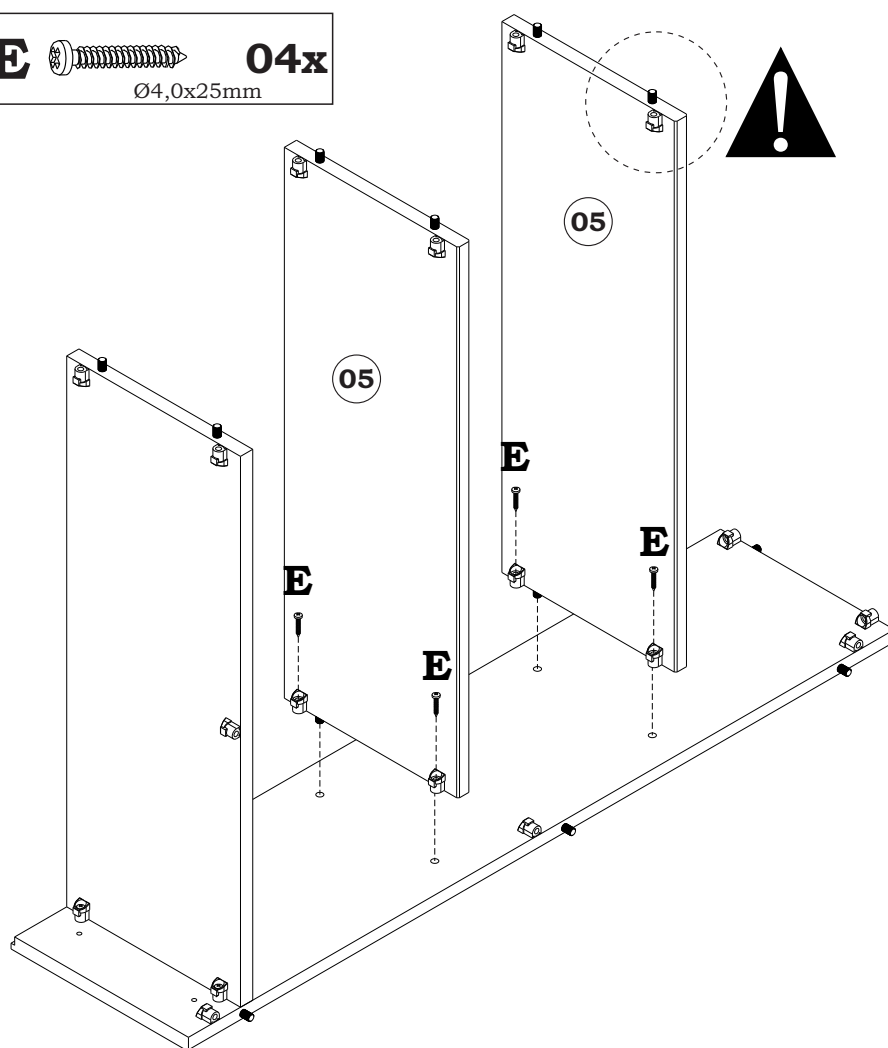



12

E  **06x**
Ø4,0x25mm

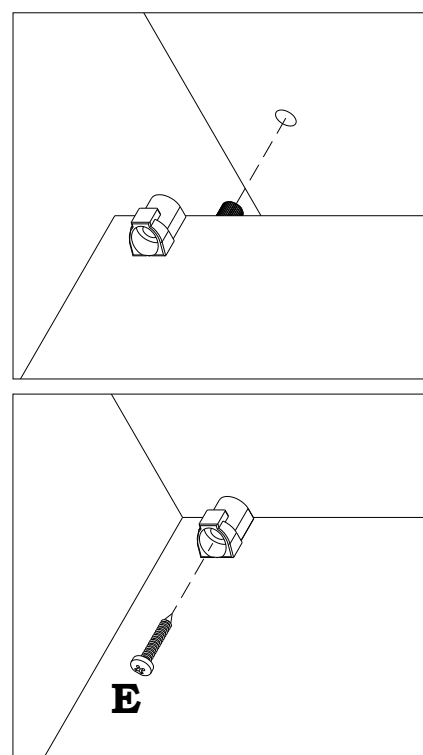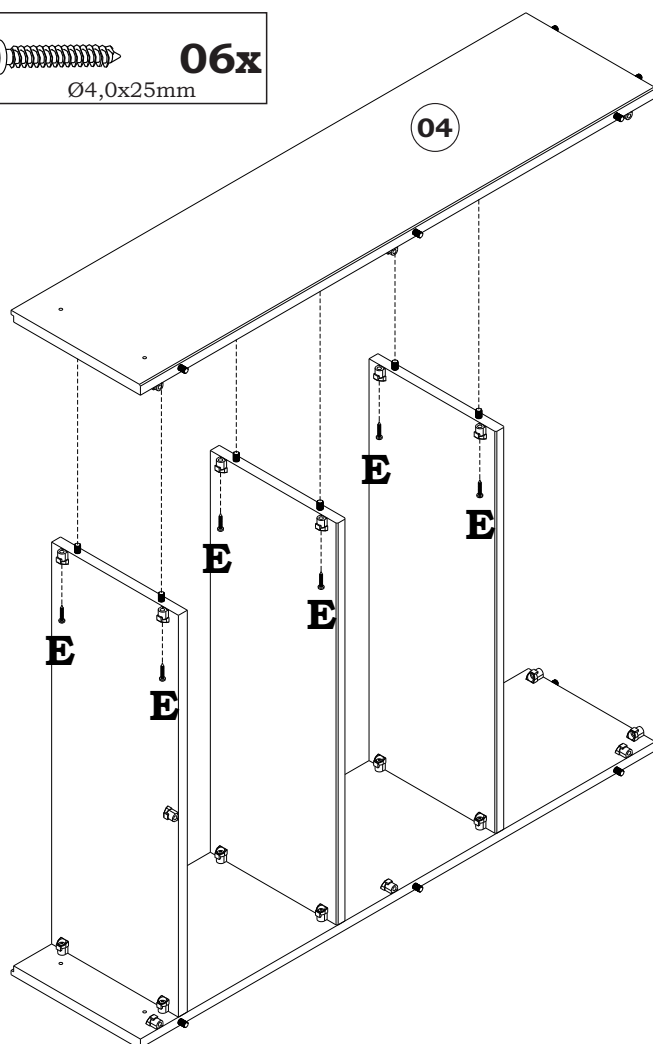



13

E  **07x**
Ø4,0x25mm

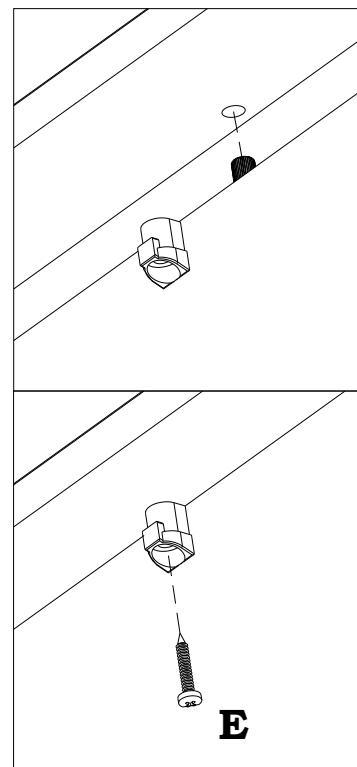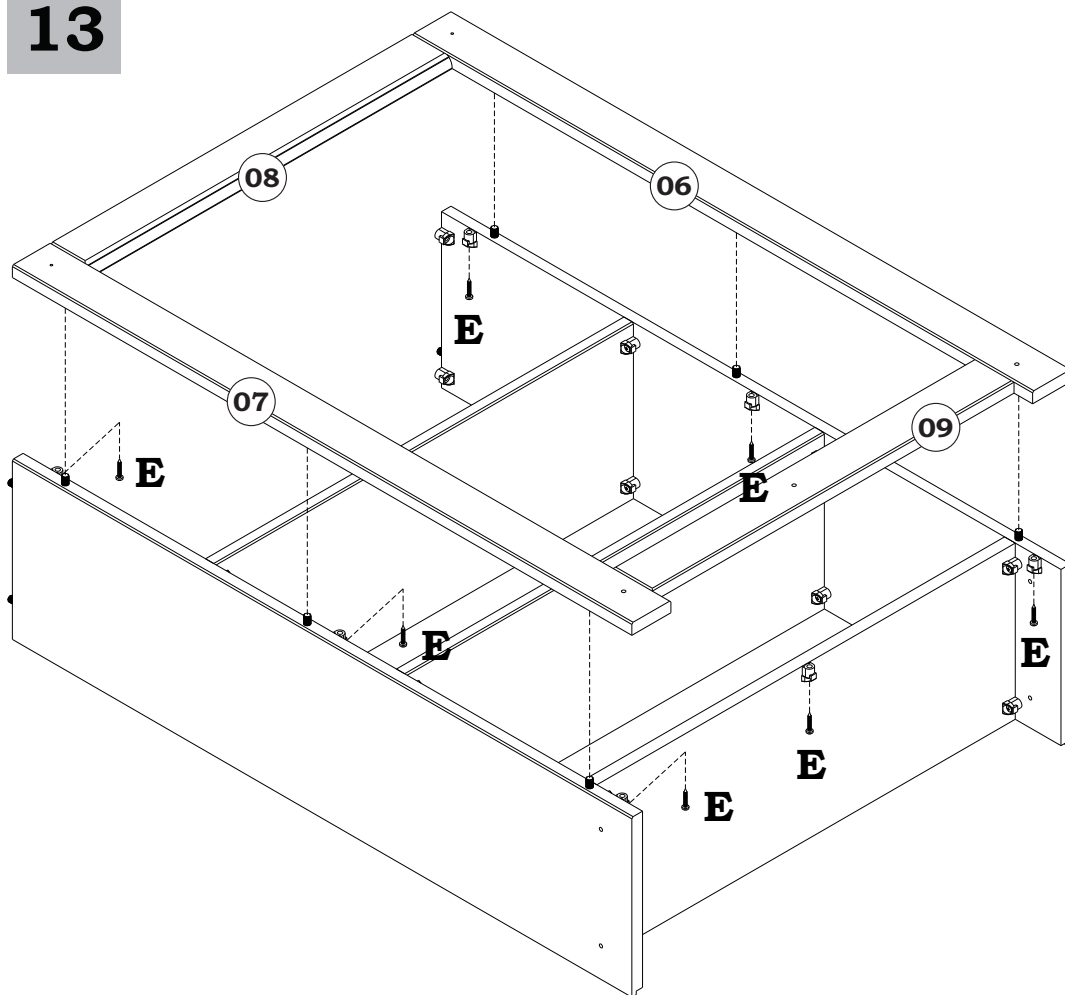






14

E  **05x**
Ø4,0x25mm

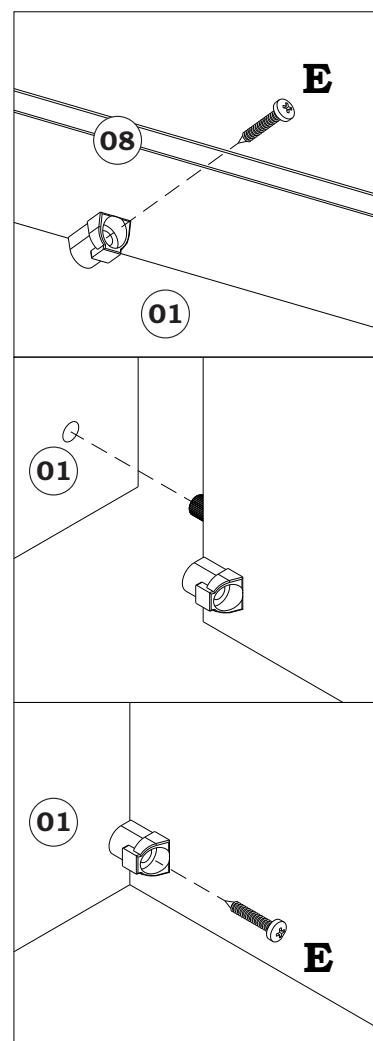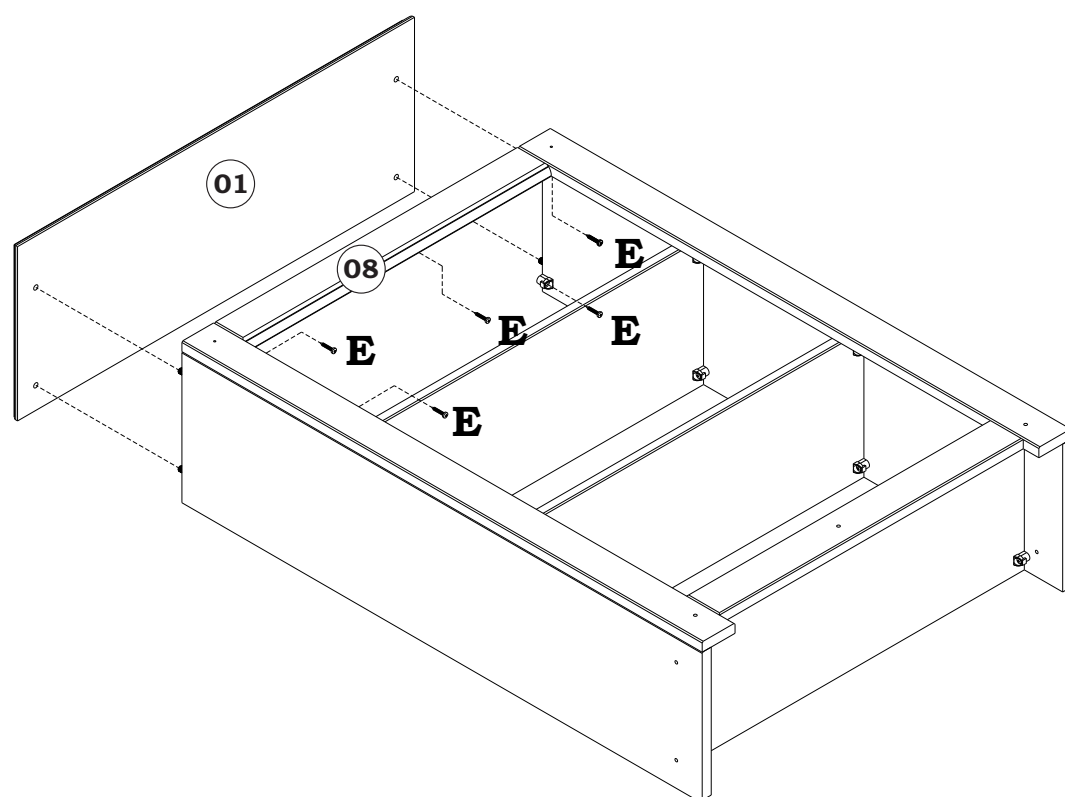





15

B  **04x**
Ø3,5x30mm

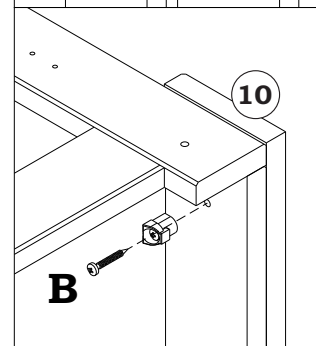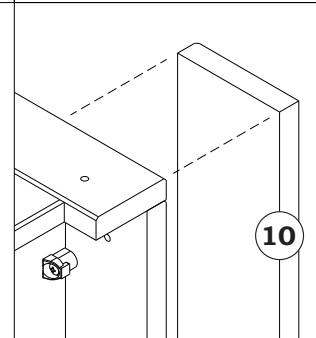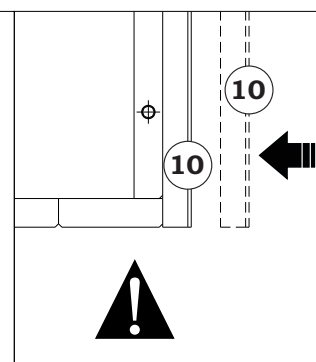
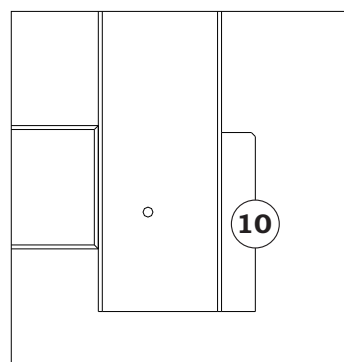
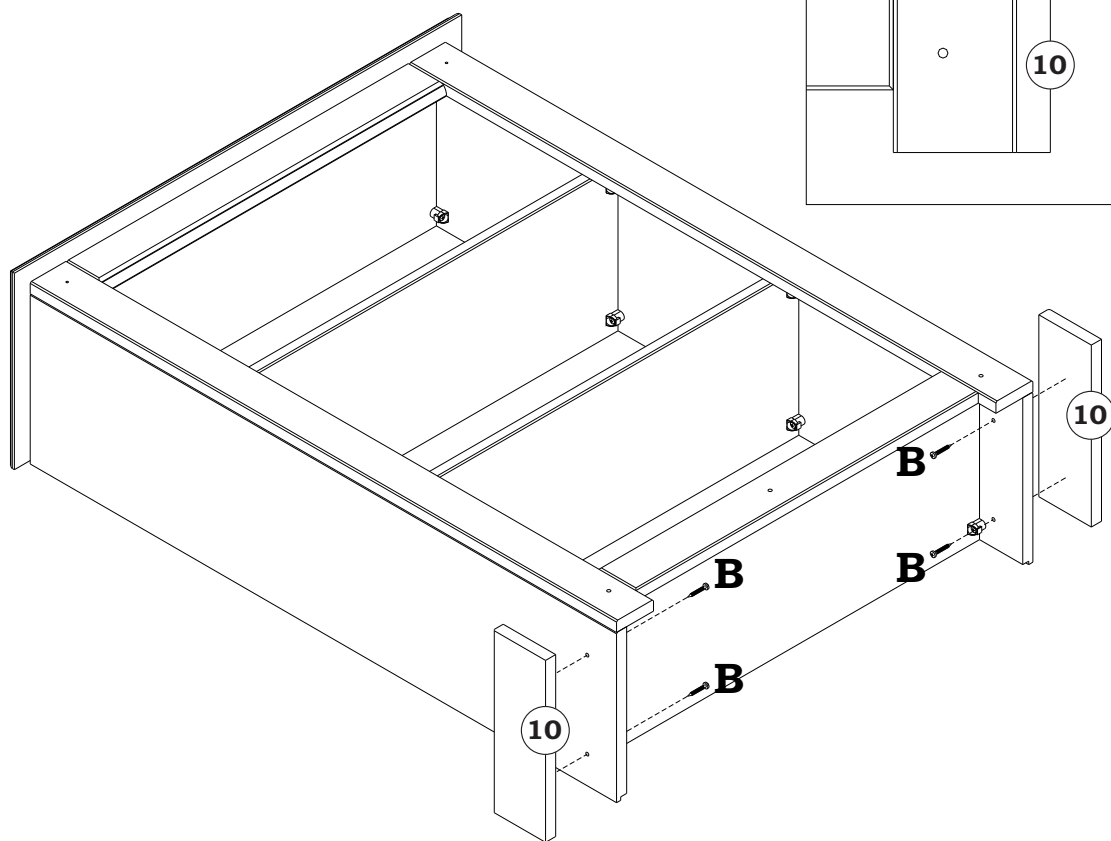



16




B  **03x**
Ø3,5x30mm

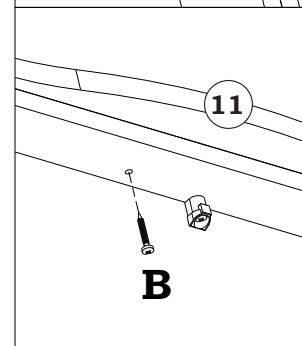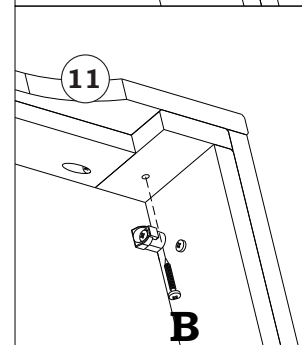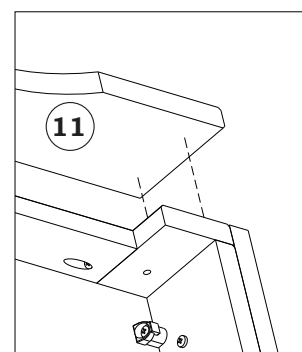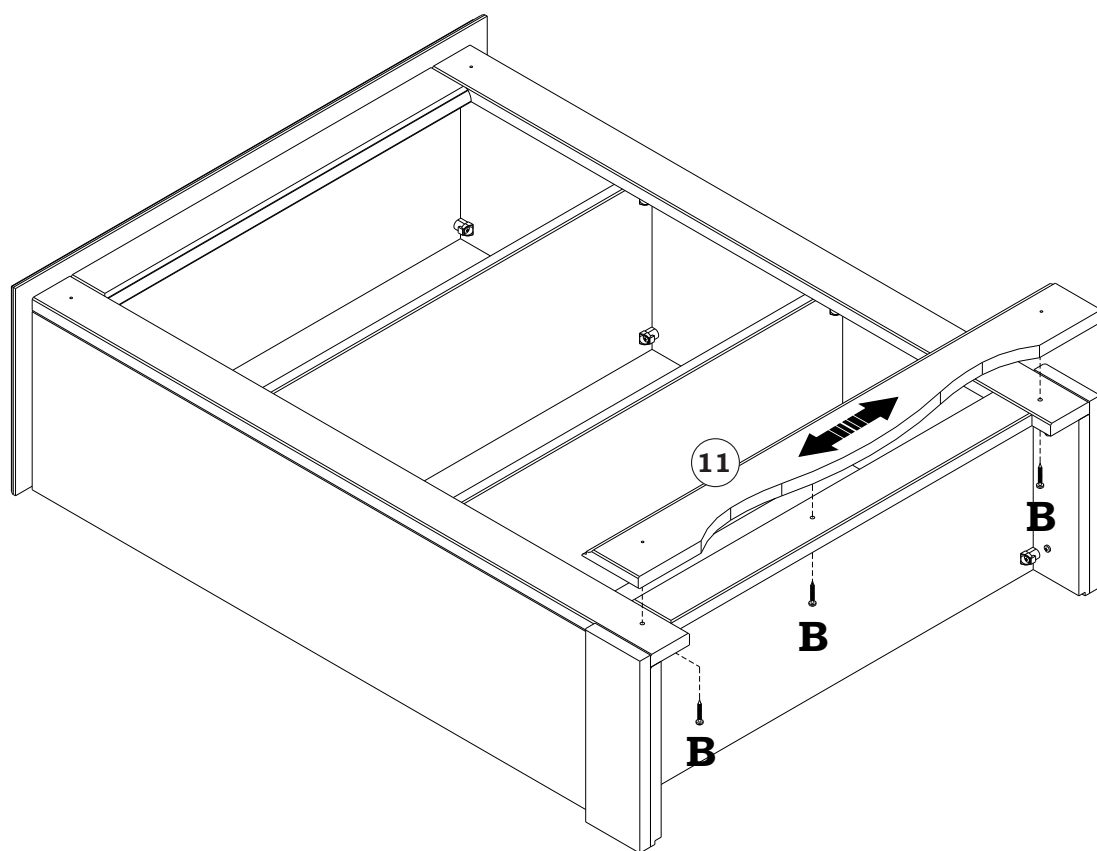


17

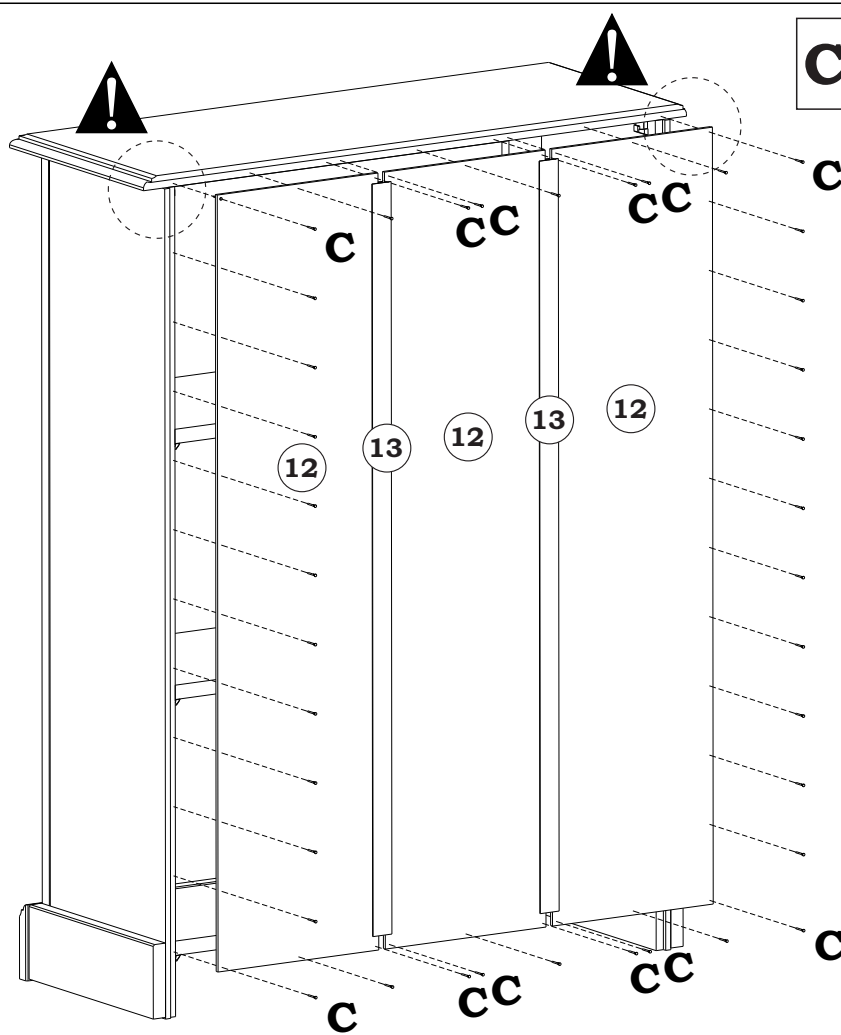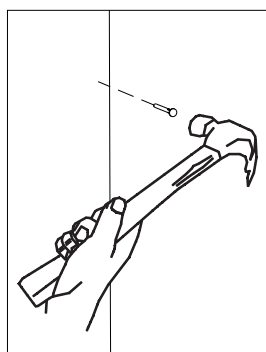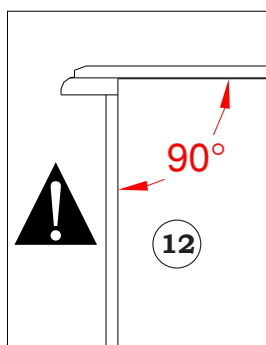



C  **36x**
8x8



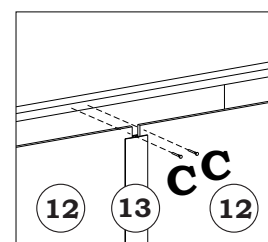
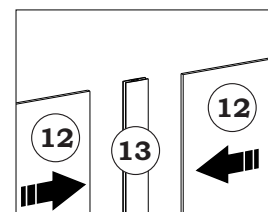
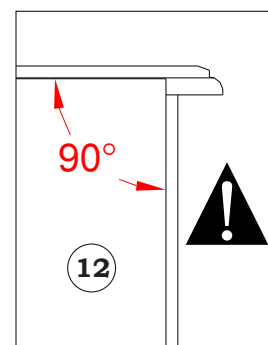


18

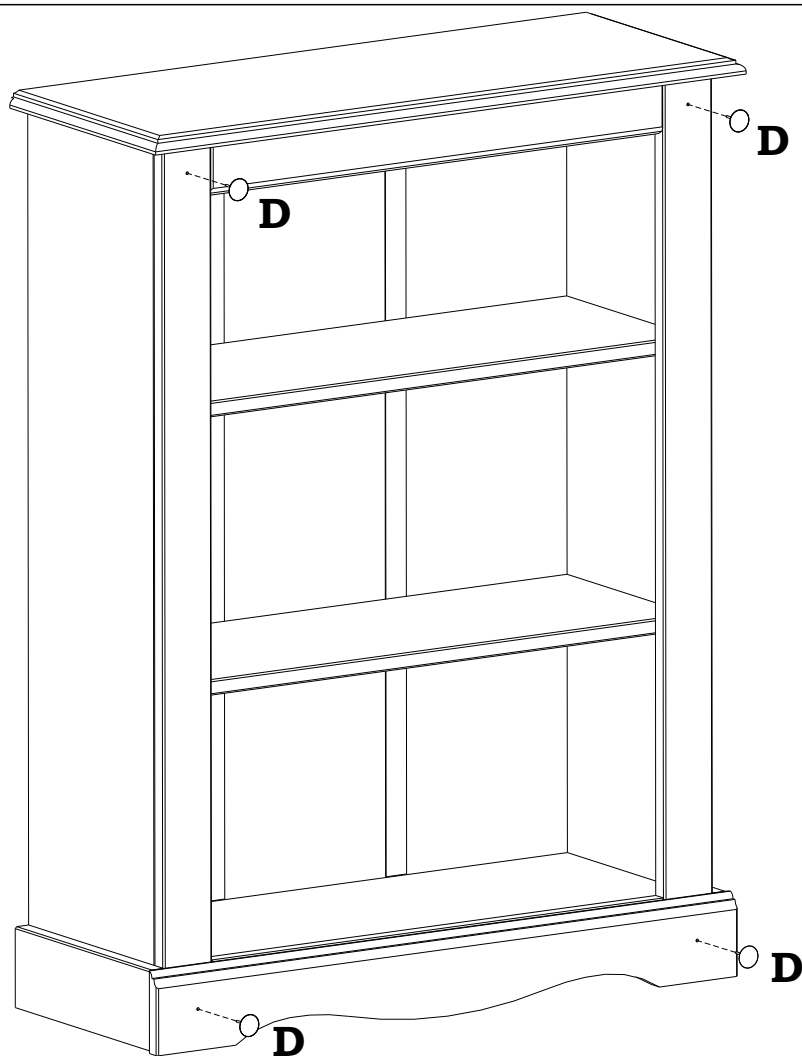

D  **04x**

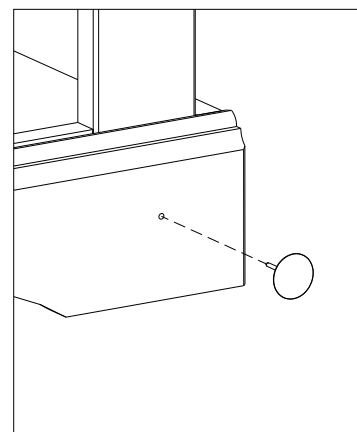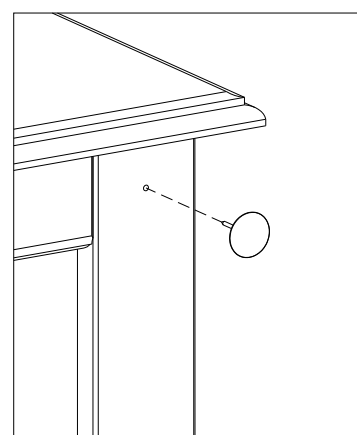

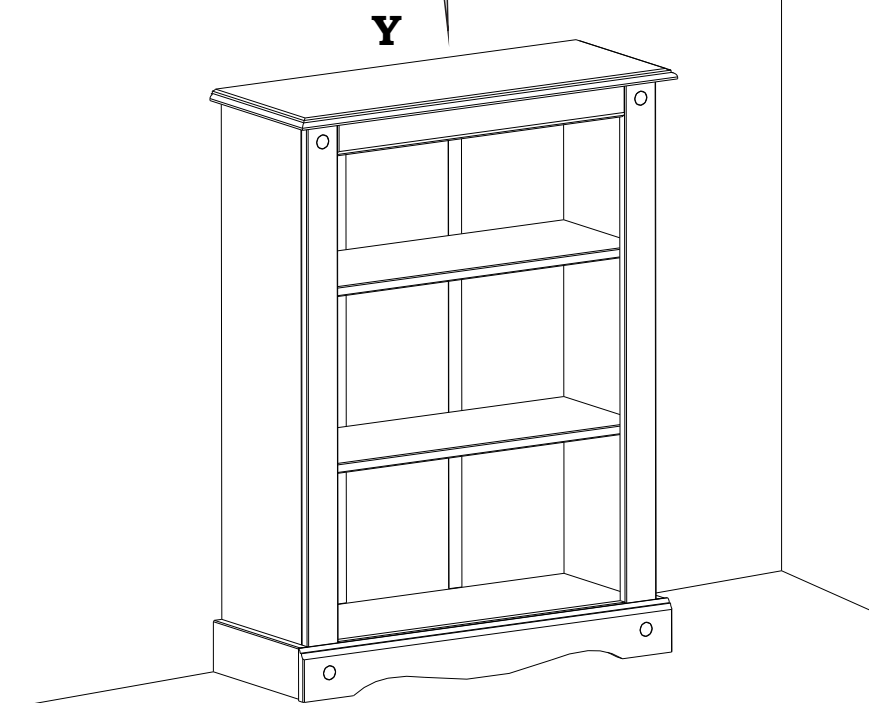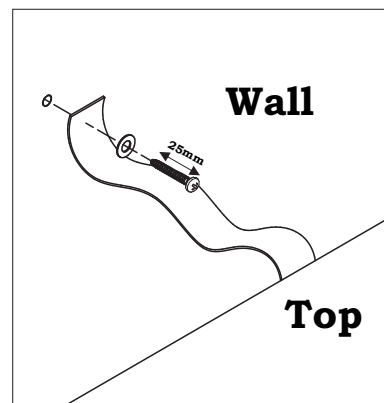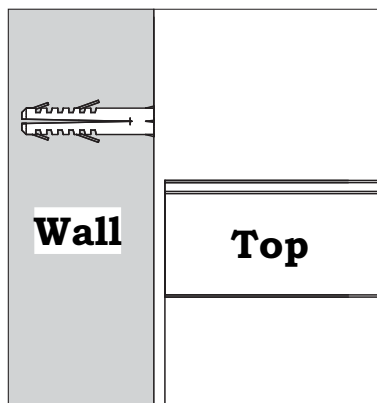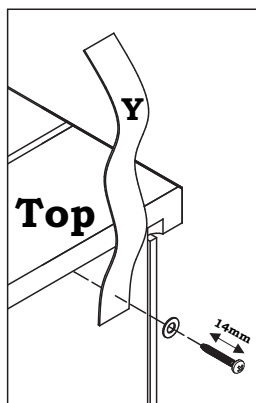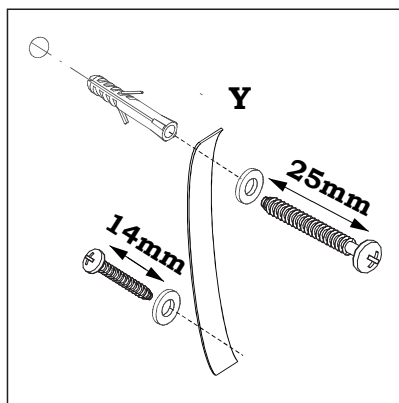19**Y****01x**

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, YOU WILL REQUIRE SPECIALIST FITTINGS (NOT SUPPLIED).

- Place fixing strip against the wall and mark position for drilling hole.
- Drill hole in your wall to a depth of 30mm using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you to use a 5mm drill bit for a tighter fit.
- Insert the wall plug into the hole with end flush to the wall surface.
- Attach fixing strip to the wall using the 25mm screw + washer and securely tighten.
- Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end of fixing strip to the back edge of the furniture top using the 14mm screw + washer and securely tighten.