



BED FRAME

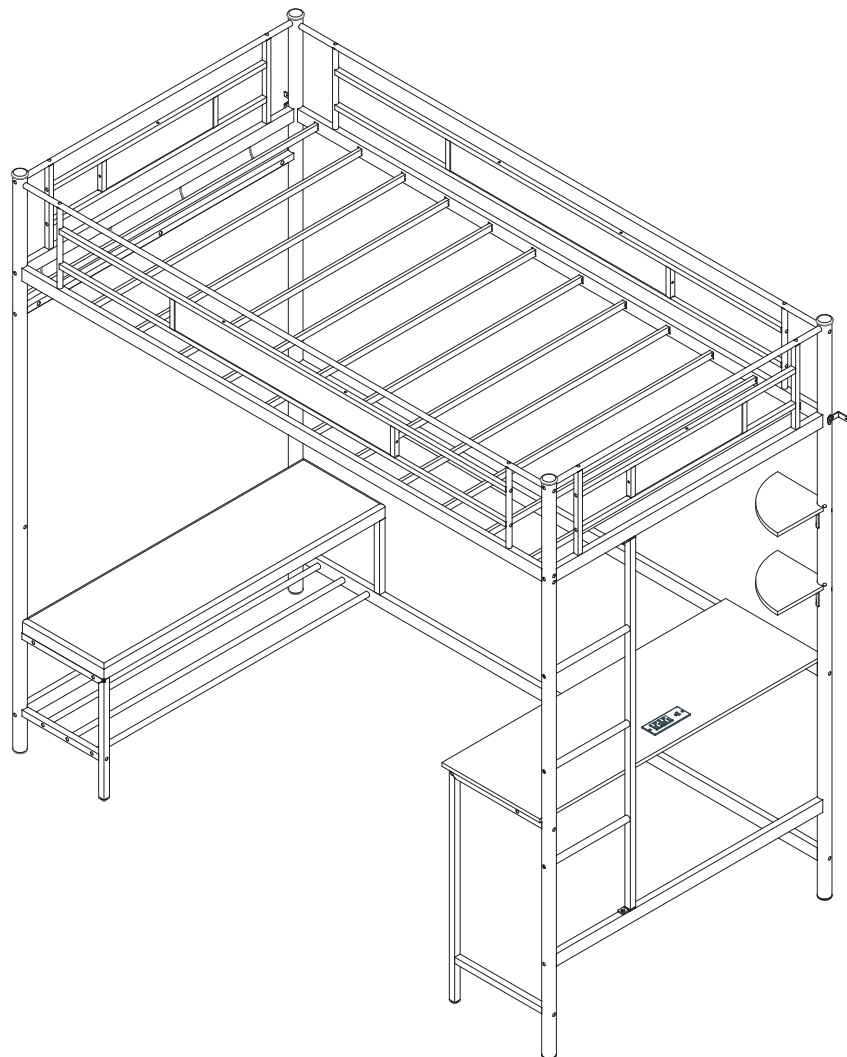

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




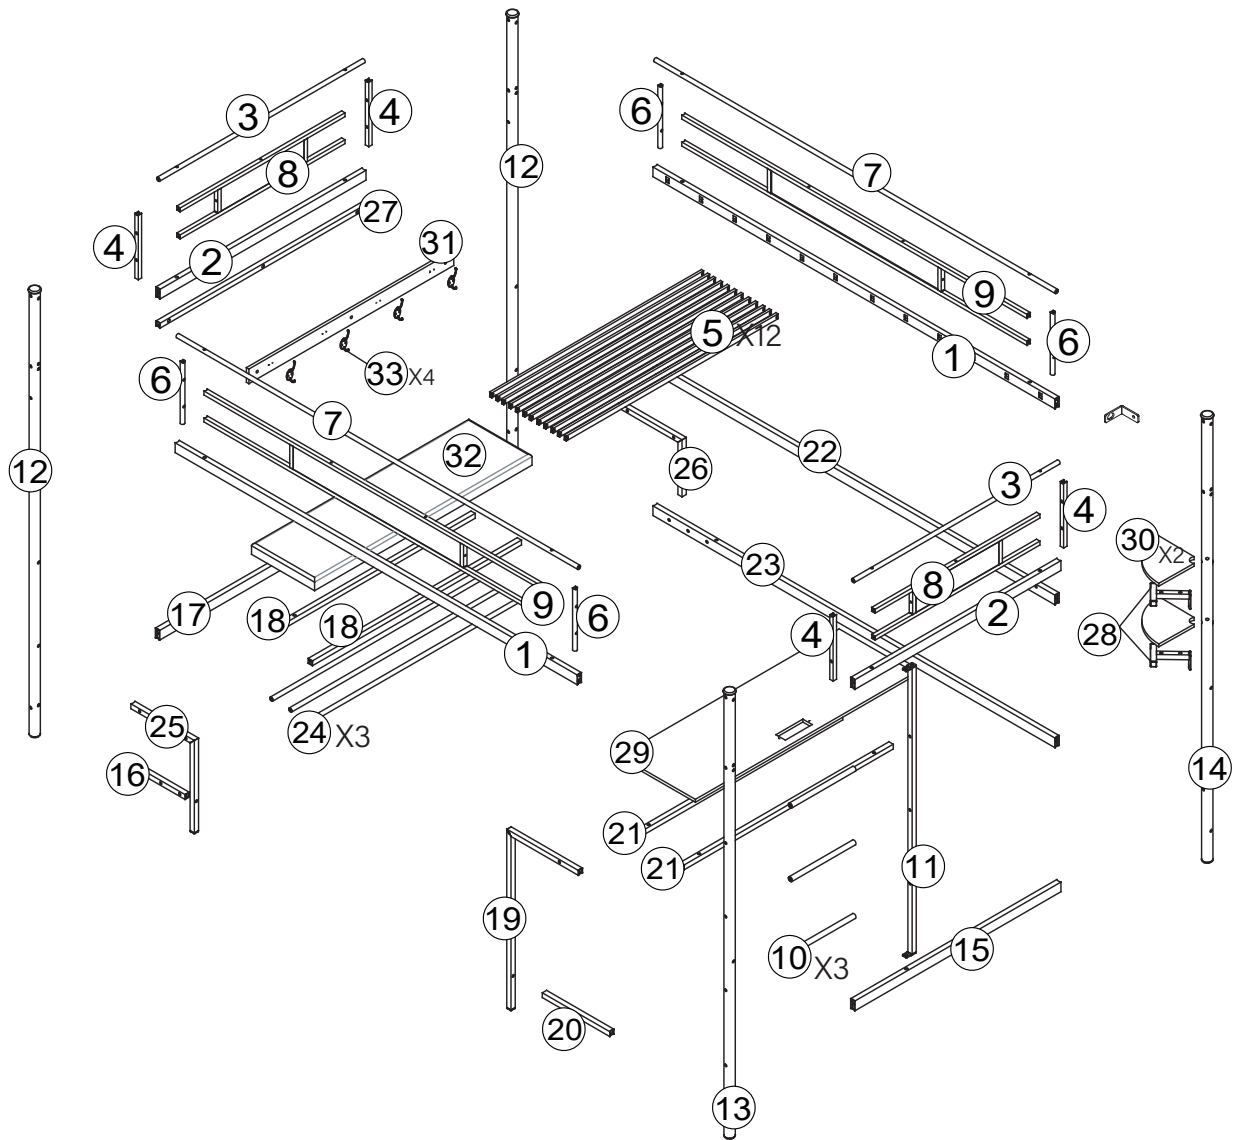



Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

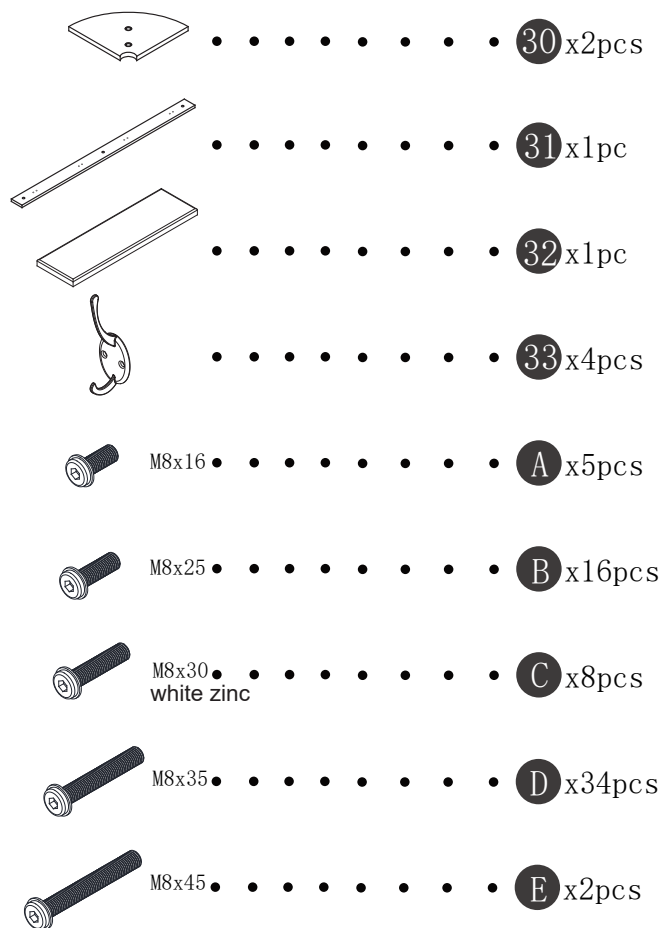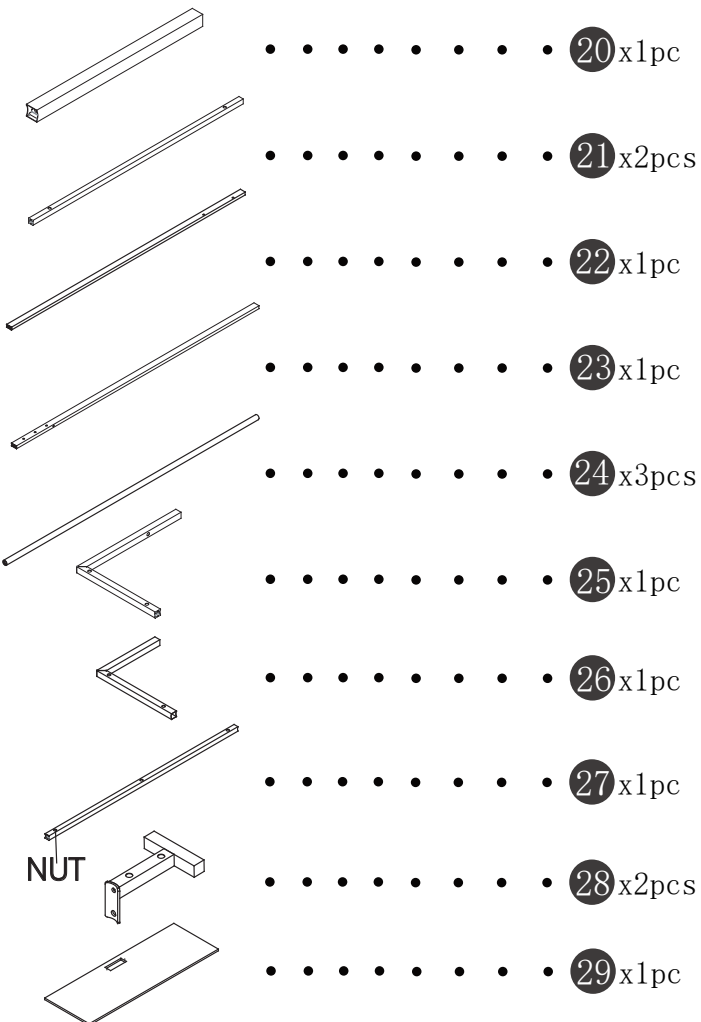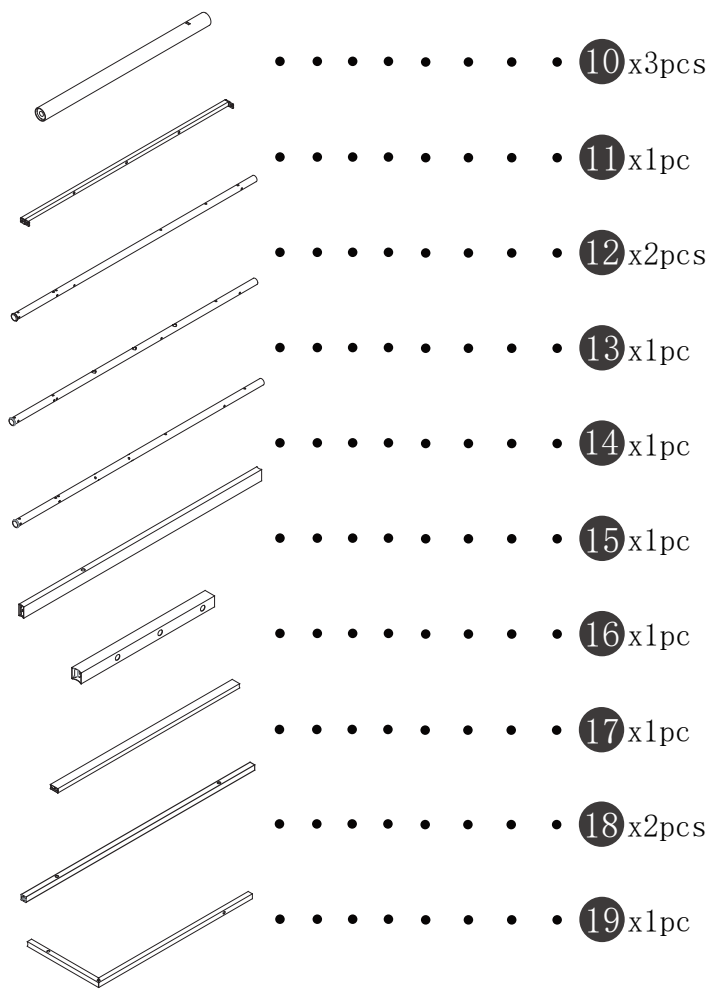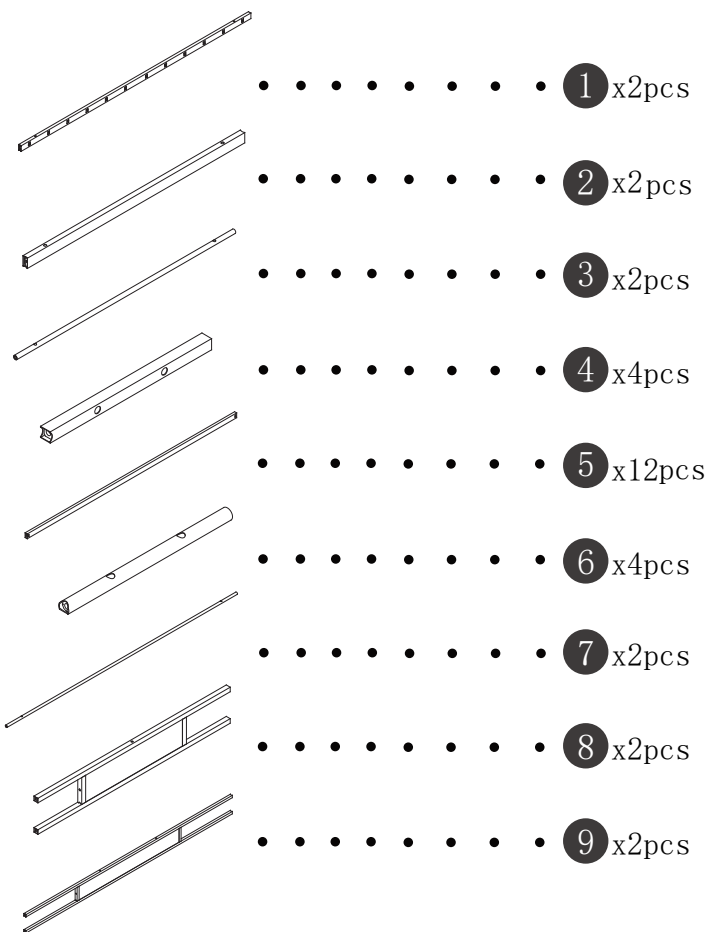


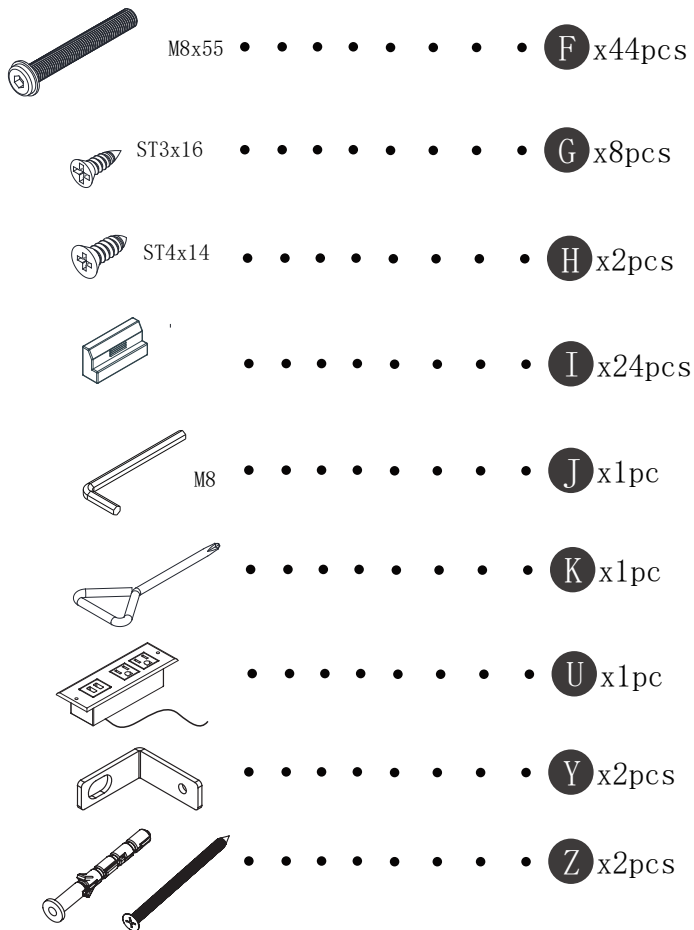


TYPE 1

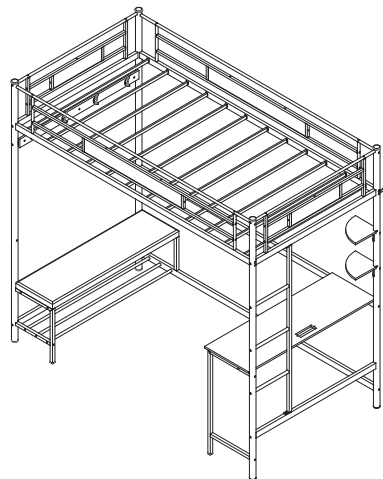


TYPE 2

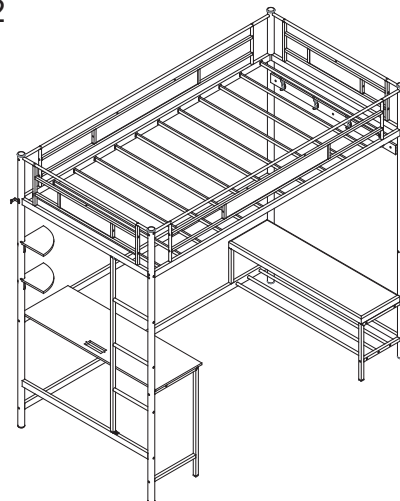


TYPE 1

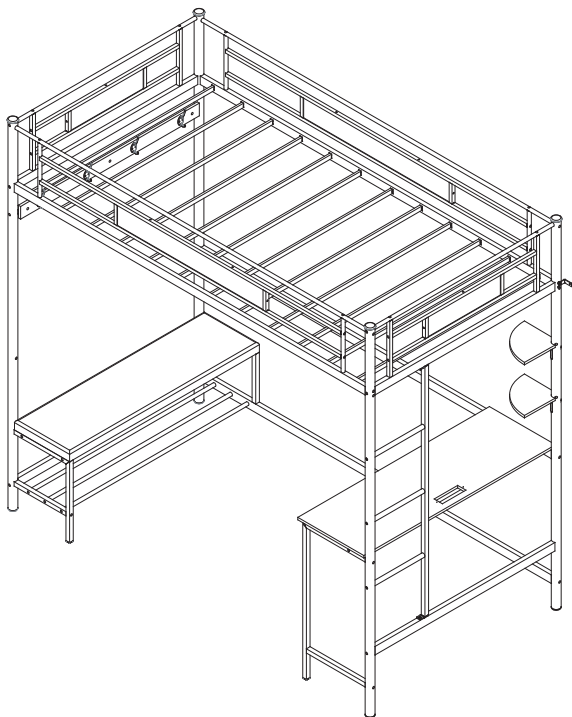

x2 **1**

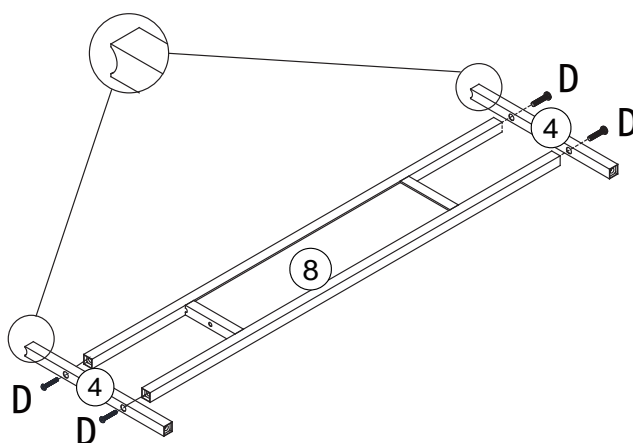


x2 2

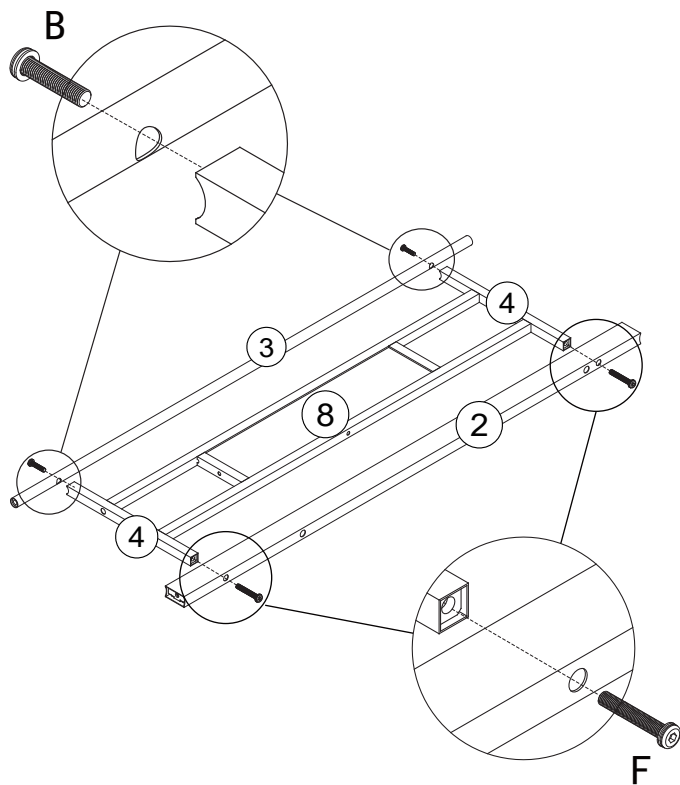


B		4pcs
F		4pcs

3

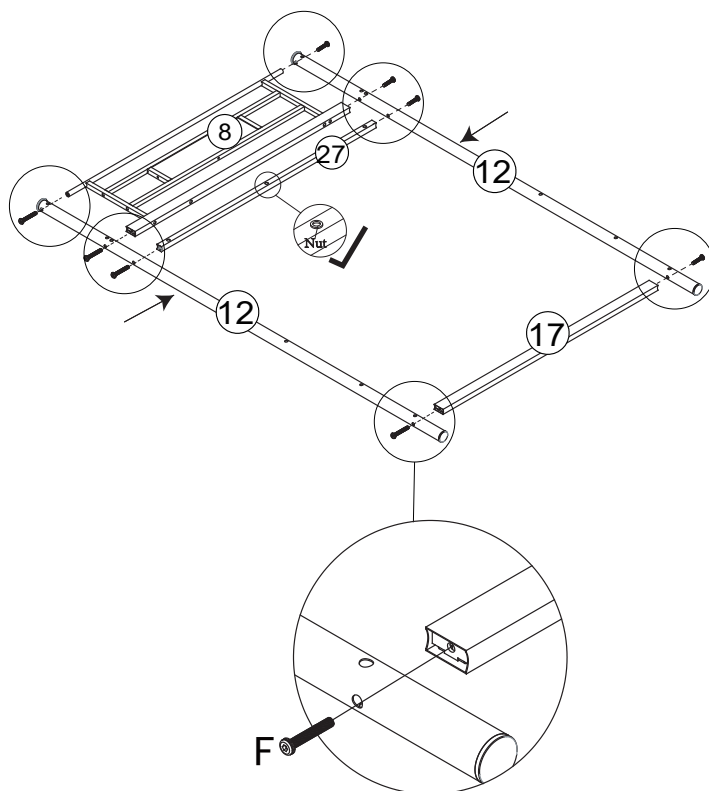


F		8pcs
---	--	------

x2 4

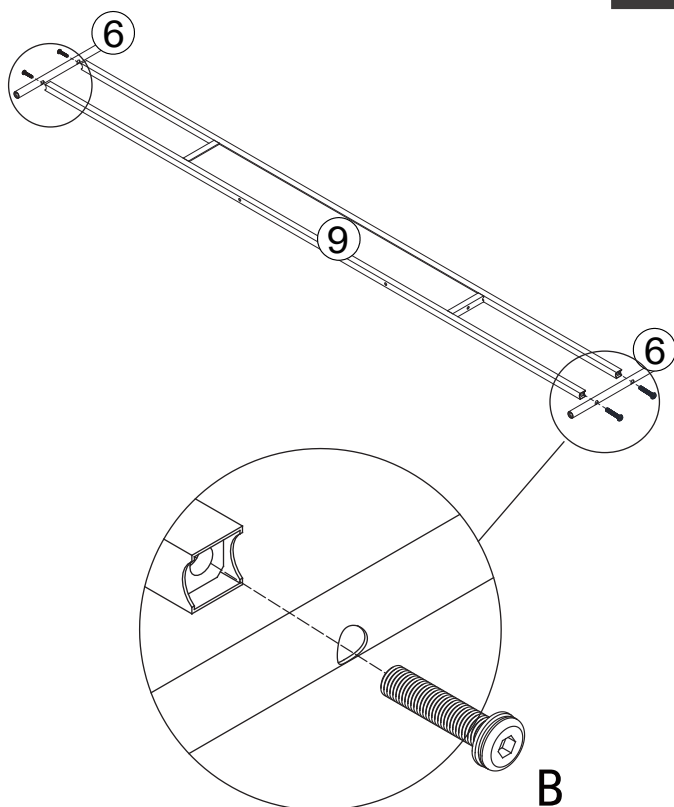


B		8pcs
---	---	------

x2 5

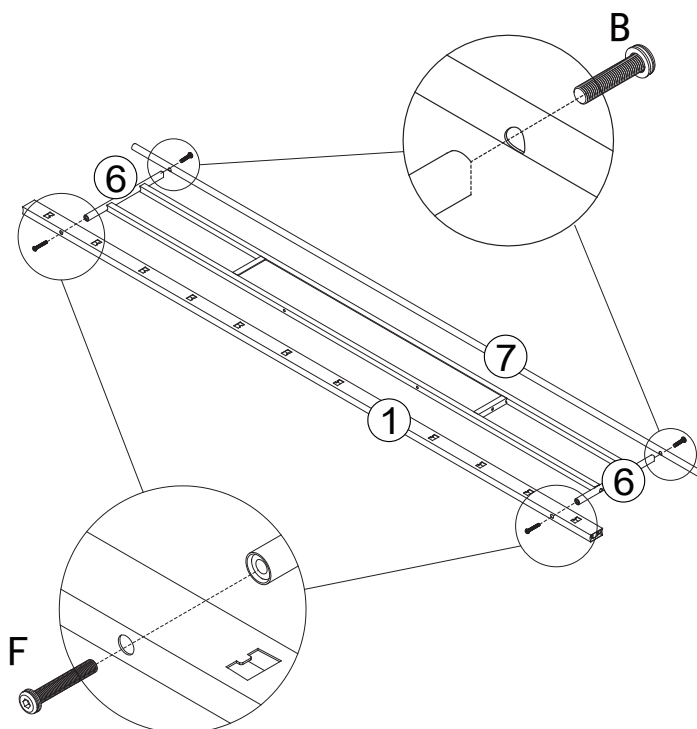


B		4pcs
F		4pcs

6

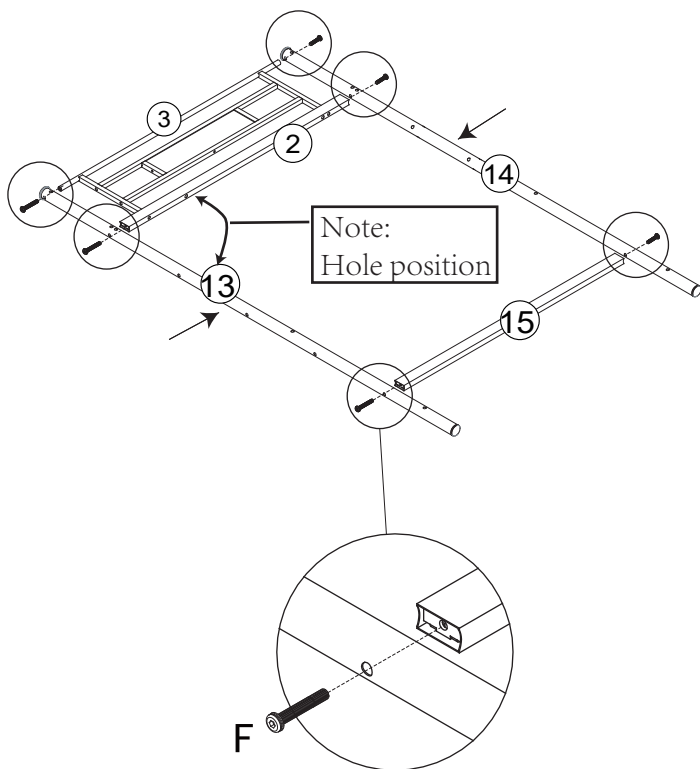


F		6pcs
---	--	------

7

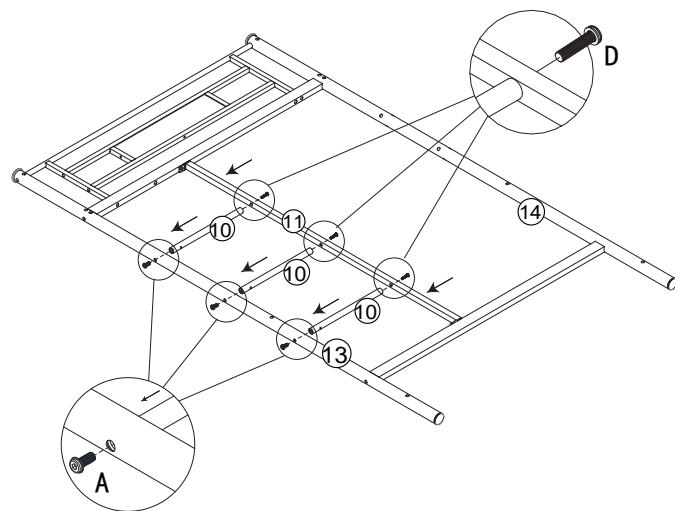

D		3pcs
A		3pcs


8

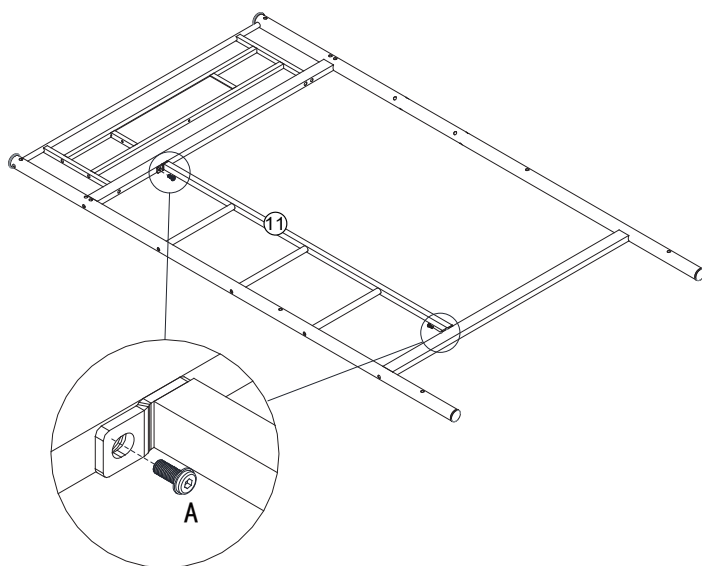

A		2pcs
---	---	------


Install screws loosely,
fully tighten

9

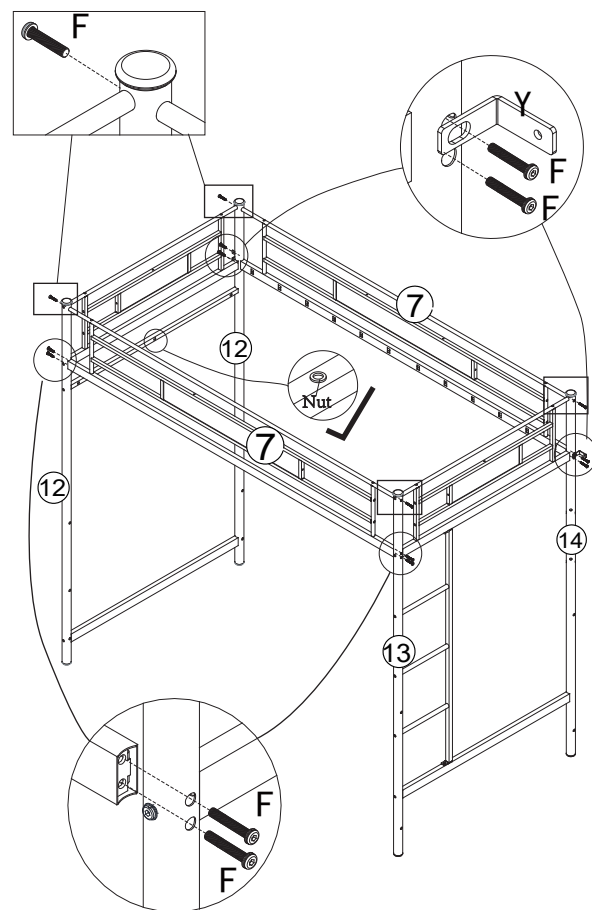


F		12pcs
---	--	-------

10

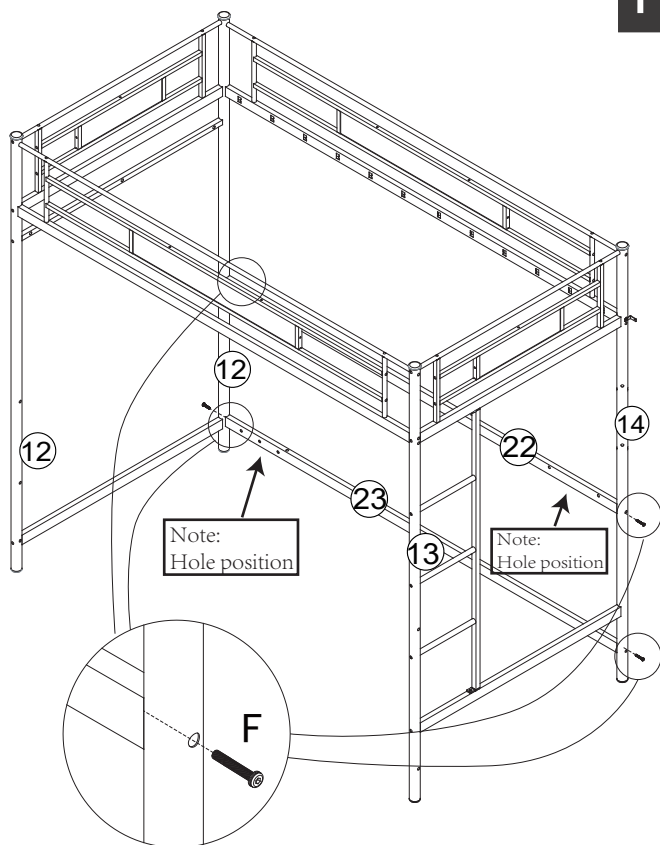


F		4pcs
	M8x55	

11

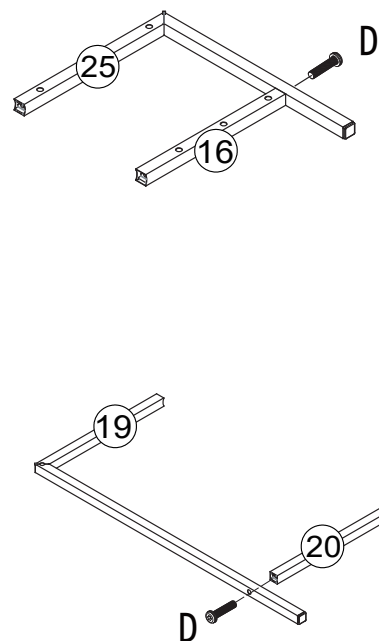

D		2pcs
	M8x35	


12

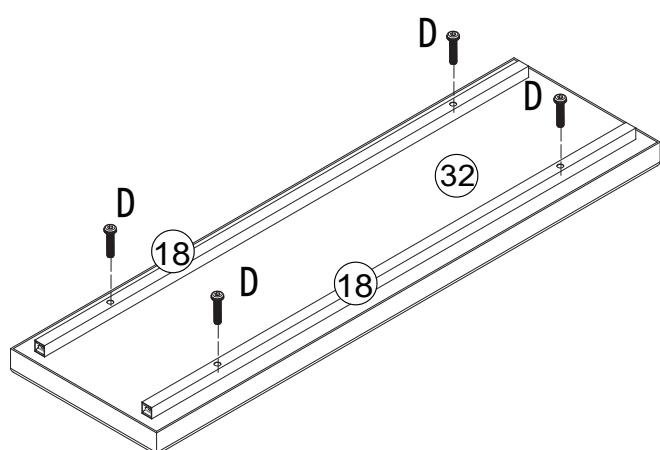

D		4pcs
	M8x35	

Install screws loosely,
don't fully tighten

13

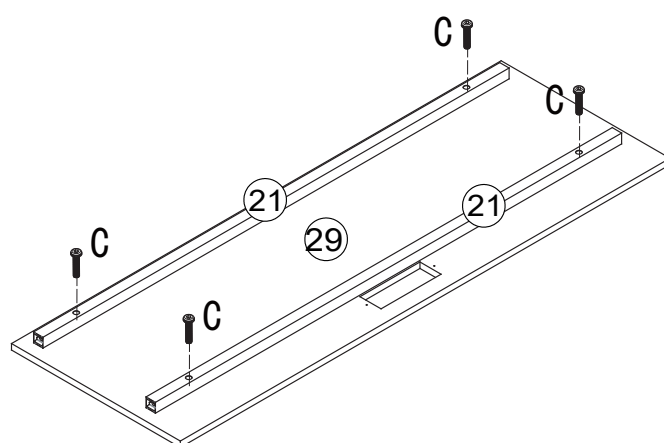


C		4pcs
	M8x30	

white zinc


Install screws loosely,
don't fully tighten

14

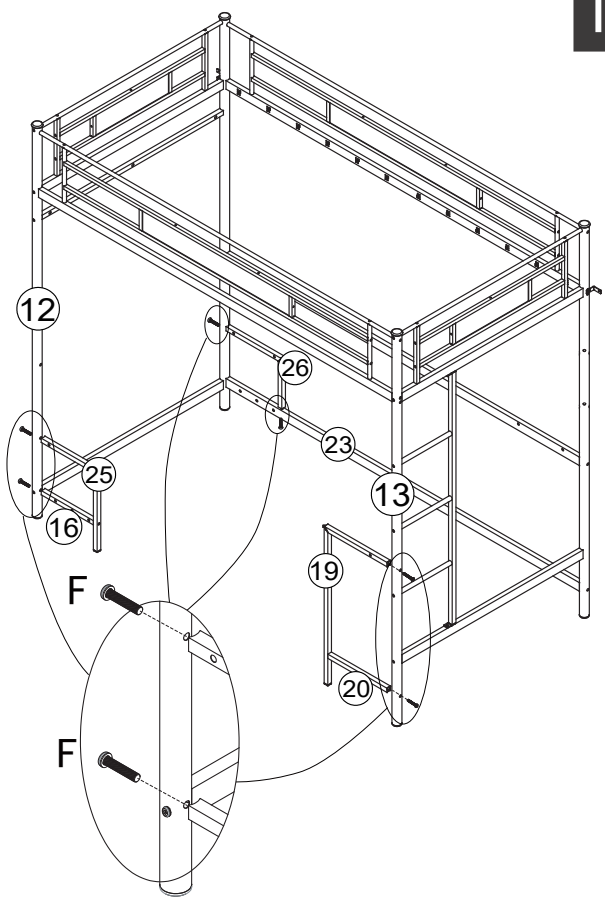


F		6pcs
	M8x55	

15

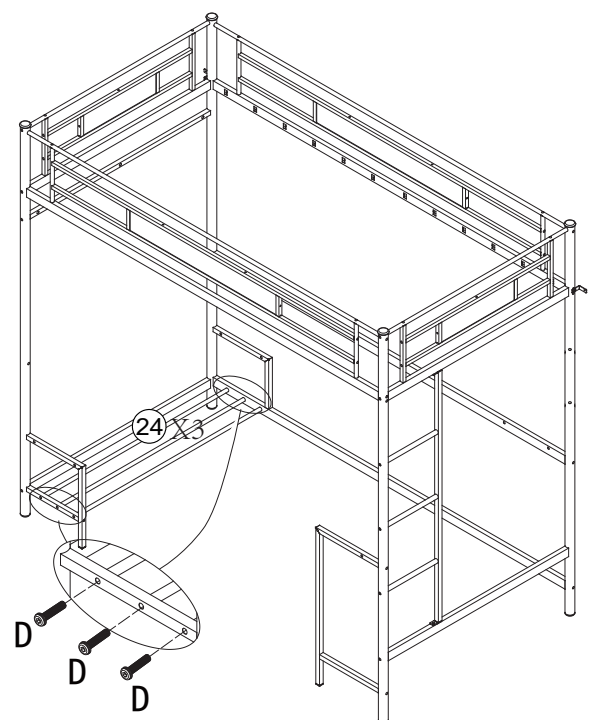


D		6pcs
	M8x35	

16

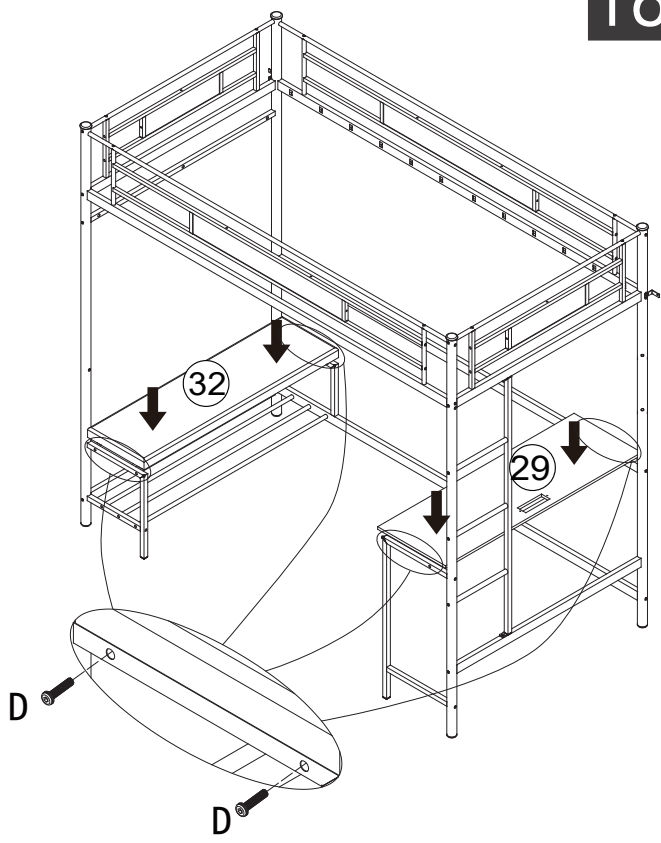


D		8pcs
	M8x35	

17

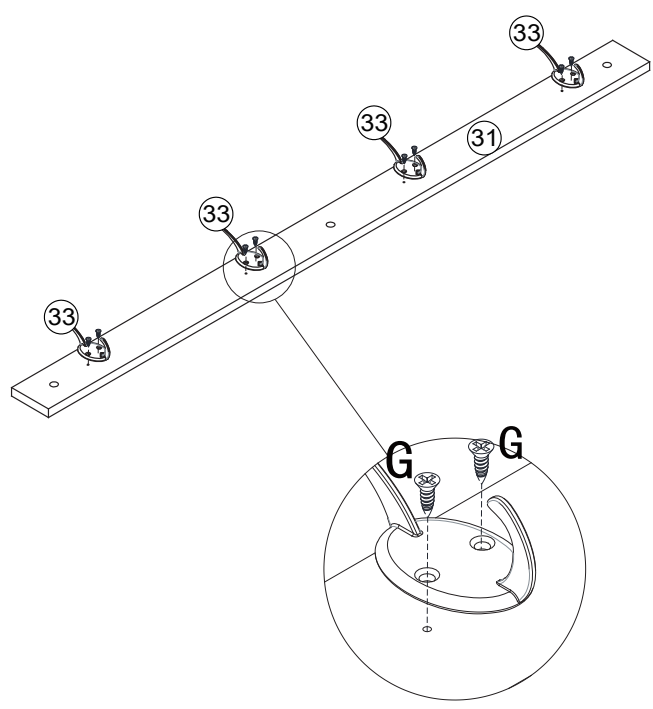


G		8pcs
	ST3*16	

18

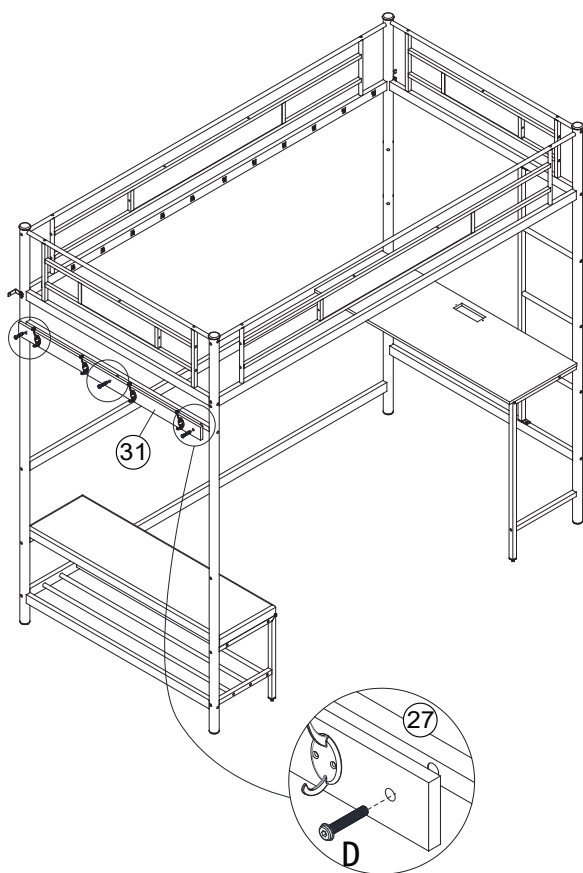


D		3pcs
M8x35		

x2 19

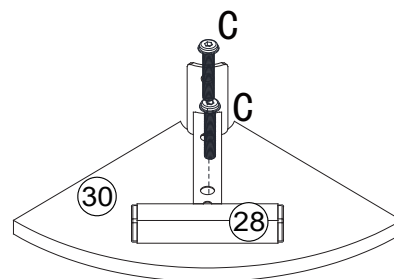


C		4pcs	white zinc
M8x30			

20

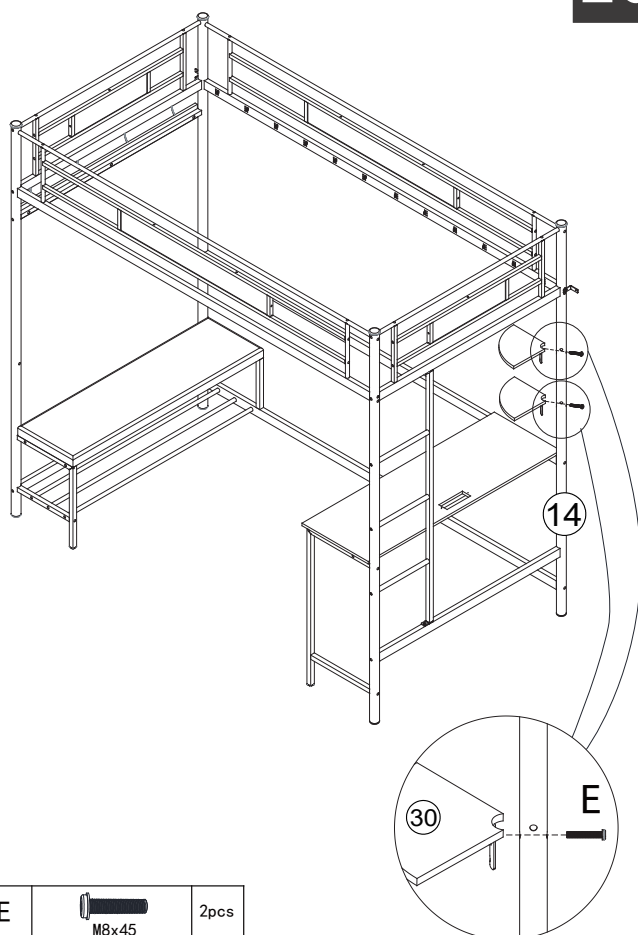


E		2pcs
M8x45		

21

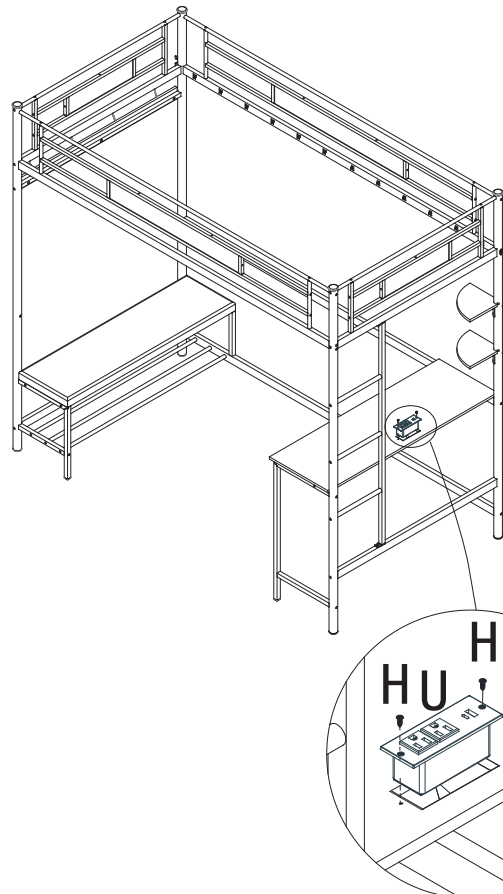


H		2pcs
ST4x14		

22

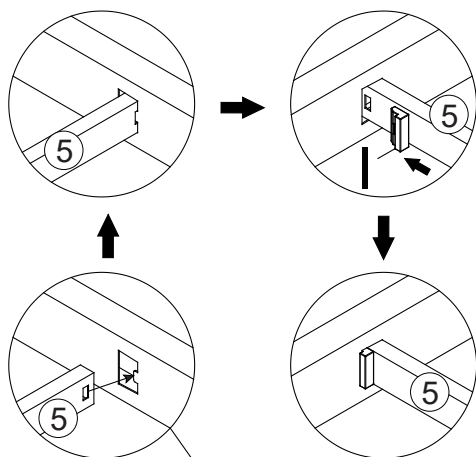

I		24pcs
---	--	-------


Finish

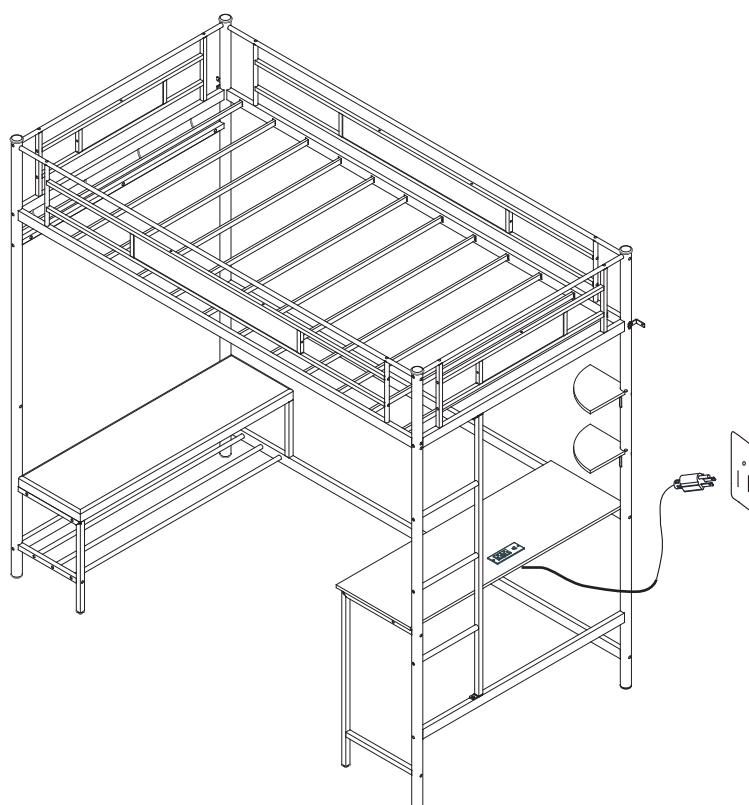

Note: Now you can tighten all the bolts.


23

- 1: Using a drill bit with a diameter of 6, drill mounting holes where installation is required
- 2: Place the expansion tube into the hole
- 3: Screw the screw together with the mounting part into the expansion pipe

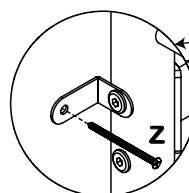


Z		2pcs
---	--	------

TYPE 2

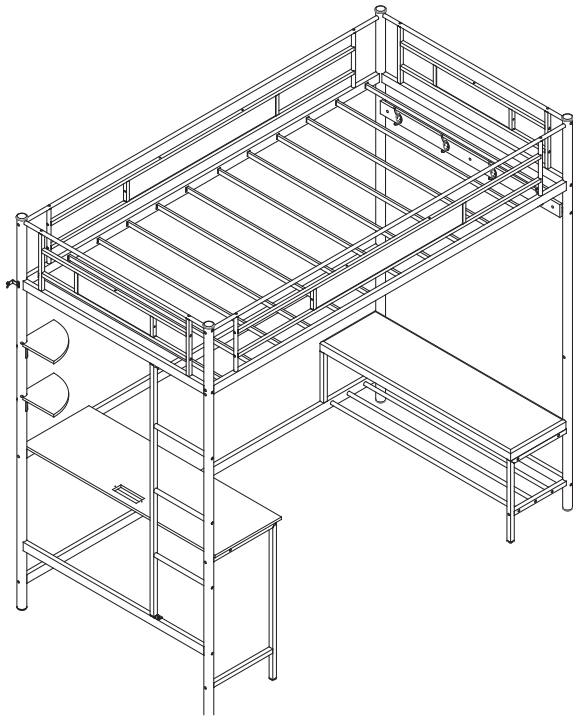


x2 1

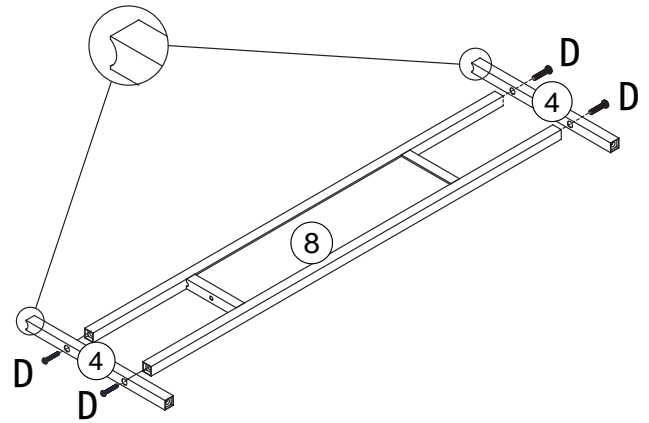


D		8pcs
	M8x35	

x2 2

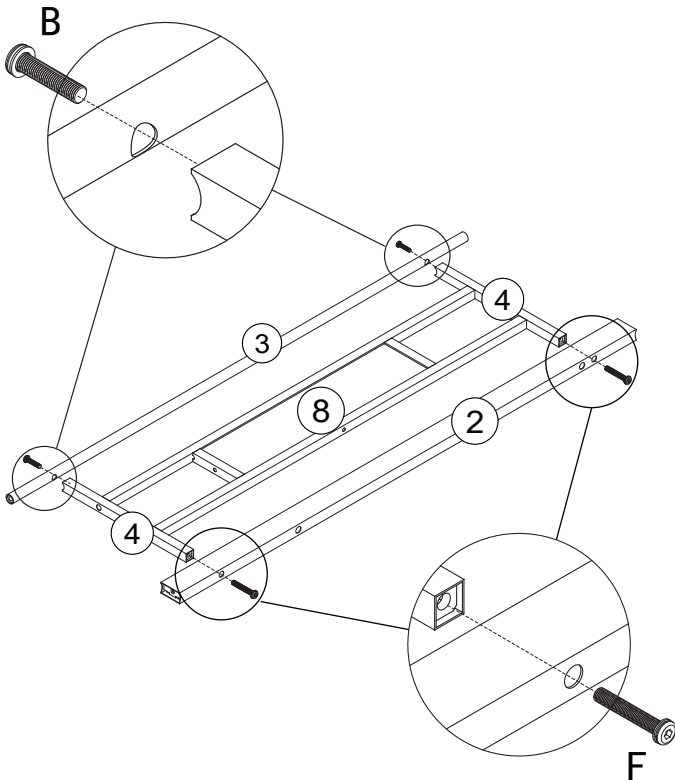


B		4pcs
	M8x25	
F		4pcs
	M8x55	

3

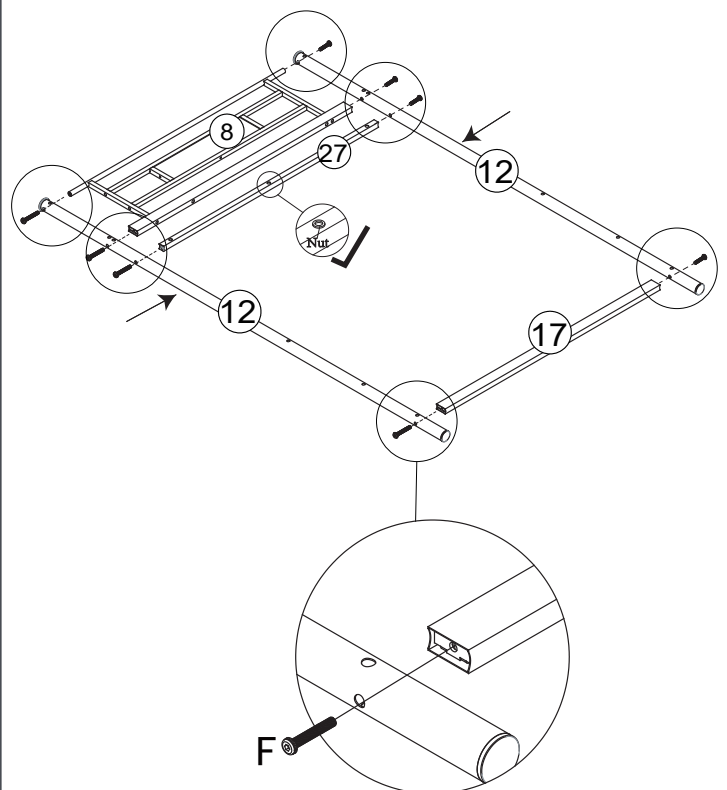


F		8pcs
	M8x55	

x2 4

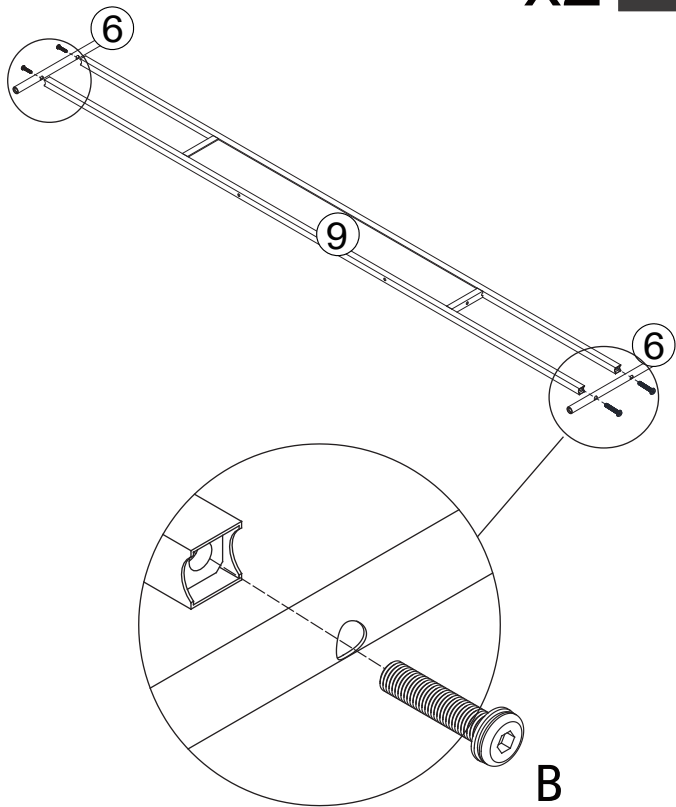


B		8pcs
M8x25		

x2 5

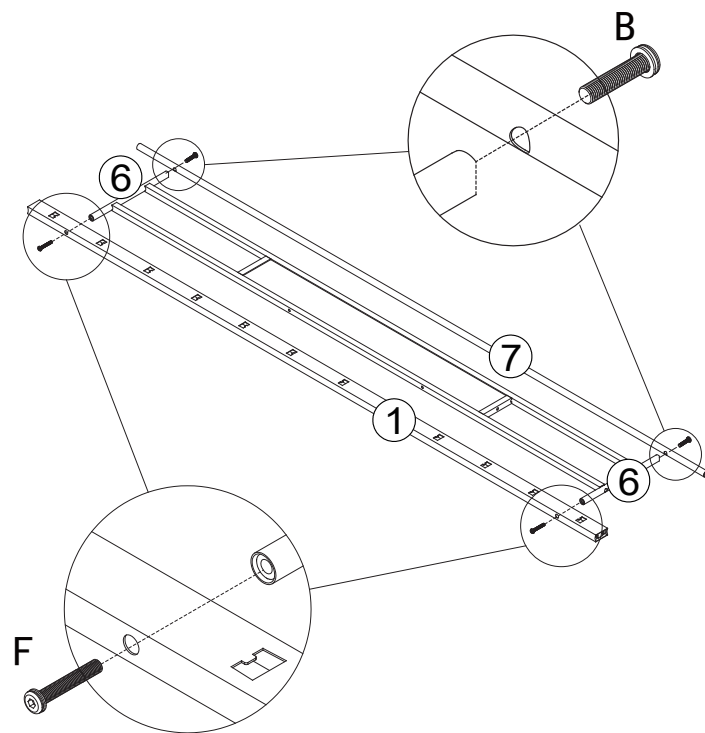


B		4pcs
M8x25		
F		4pcs
M8x55		

6

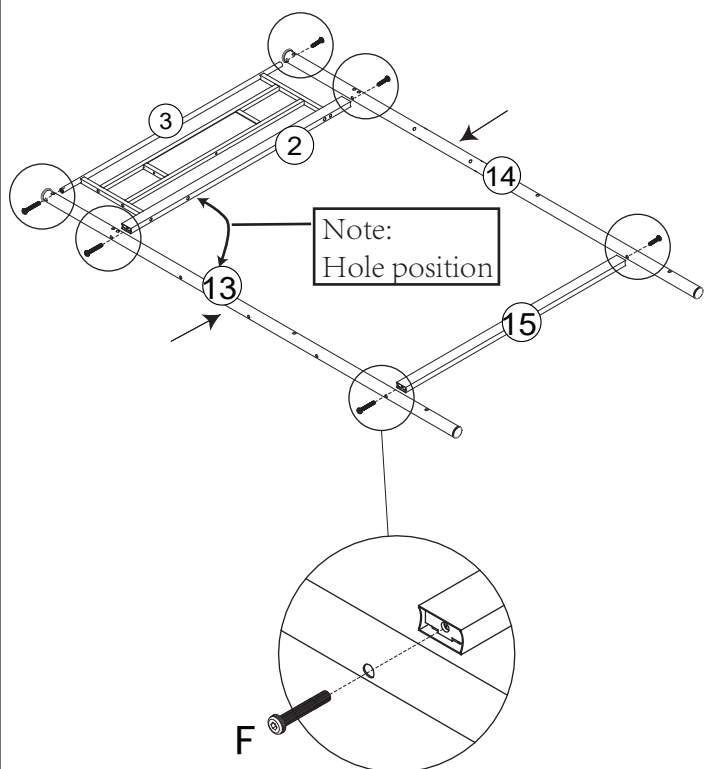


F		6pcs
M8x55		

7

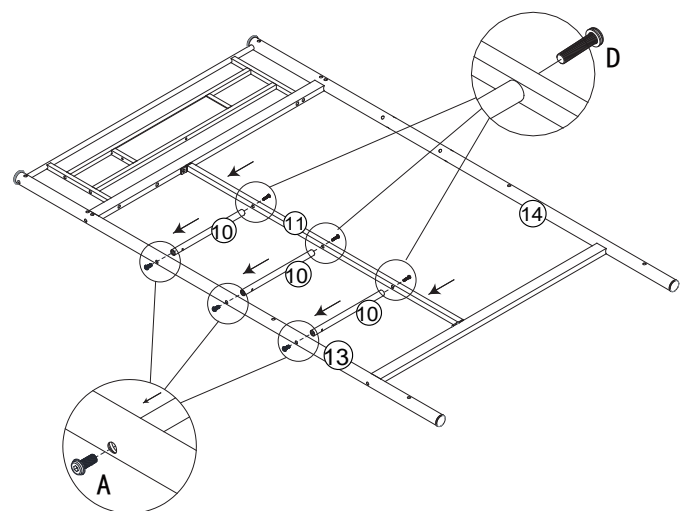

D		3pcs
M8x35		
A		3pcs
M8x16		


8

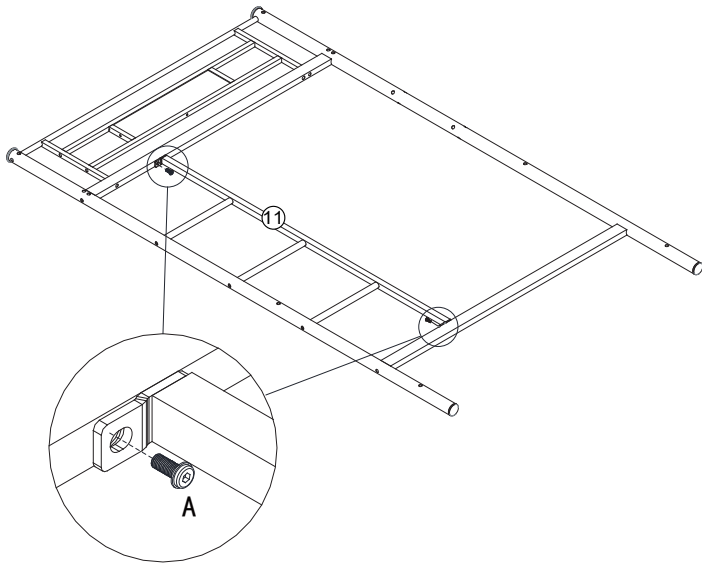

A		2pcs
M8x16		


Install screws loosely,
fully tighten

9

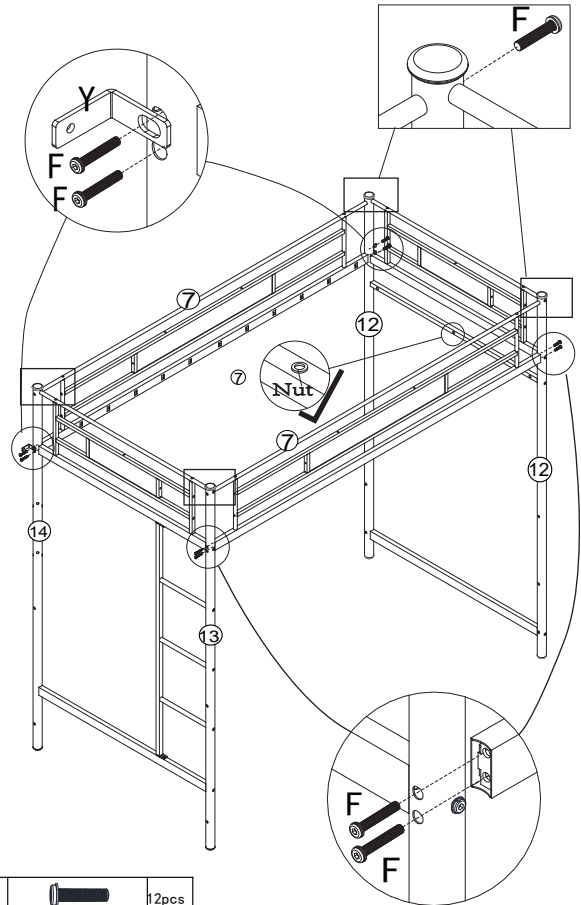


F		12pcs
M8x55		

10

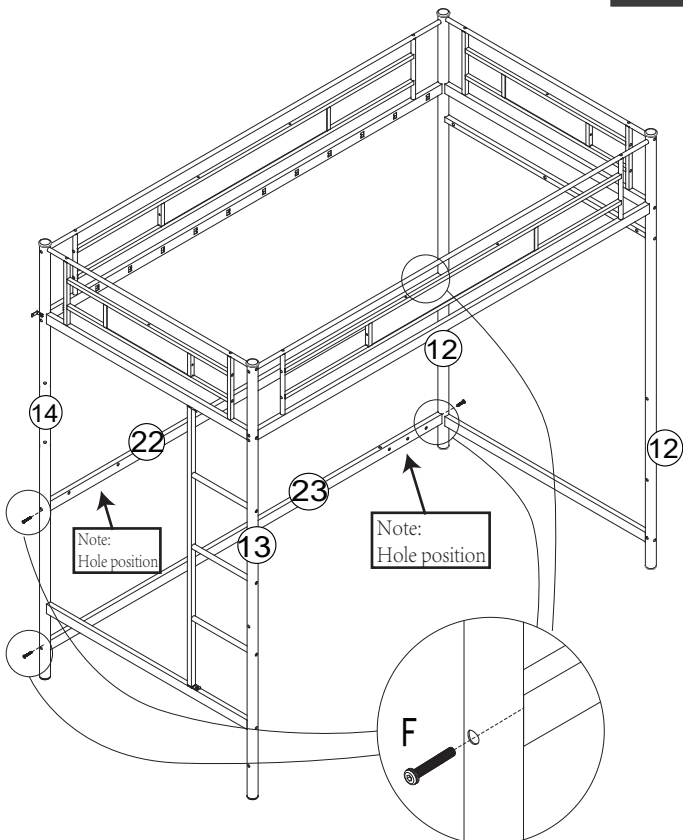


F		4pcs
M8x55		

11

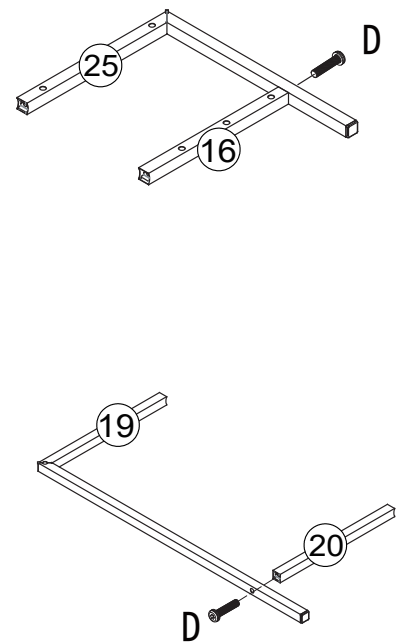

D		2pcs
M8x35		


12

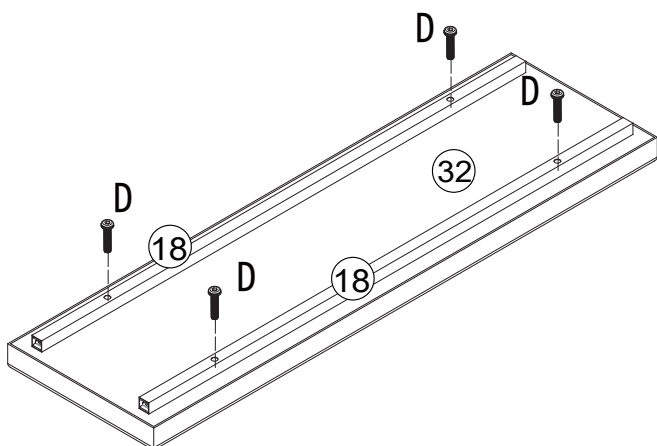

D		4pcs
M8x35		

Install screws loosely,
don't fully tighten


13

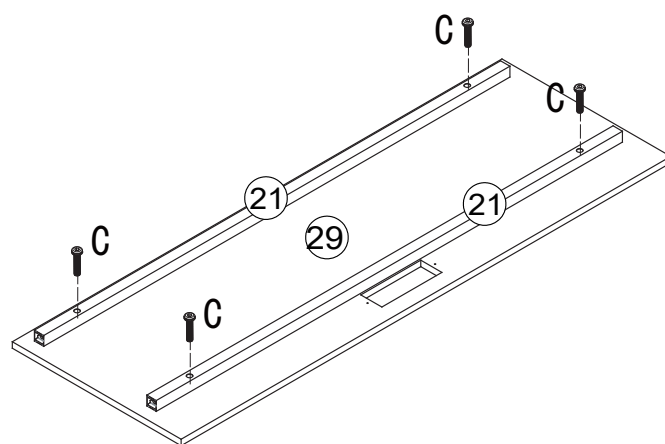

C		4pcs	white zinc
M8x30			


Install screws loosely,
don't fully tighten

14

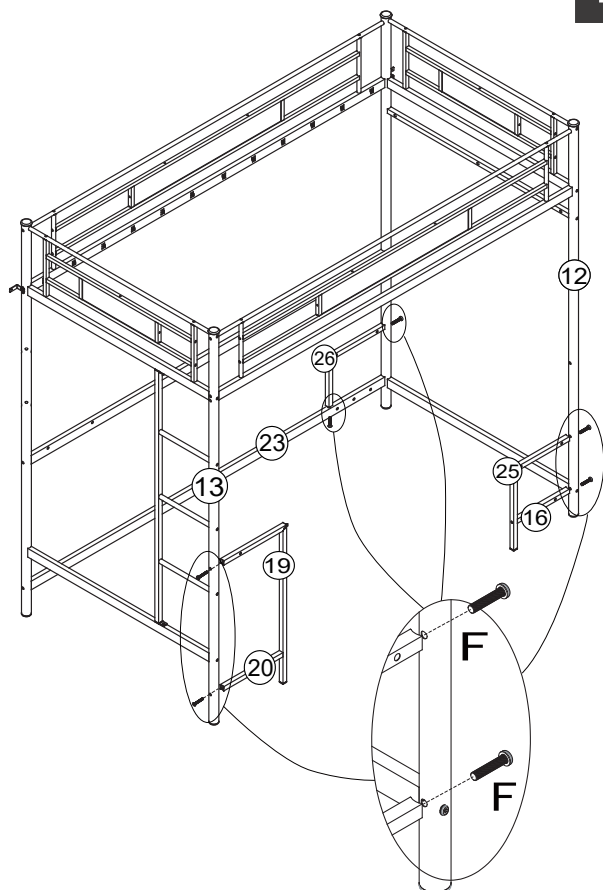


F		6pcs
M8x55		

15

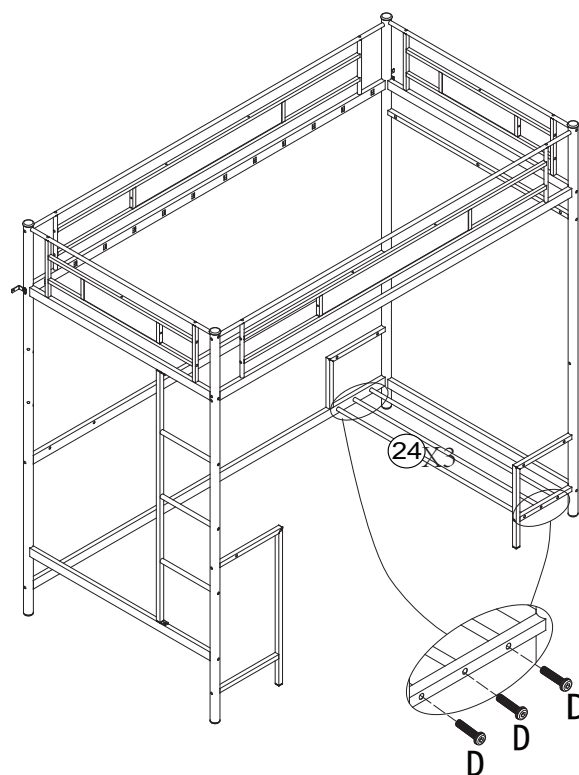


D		6pcs
M8x35		

16

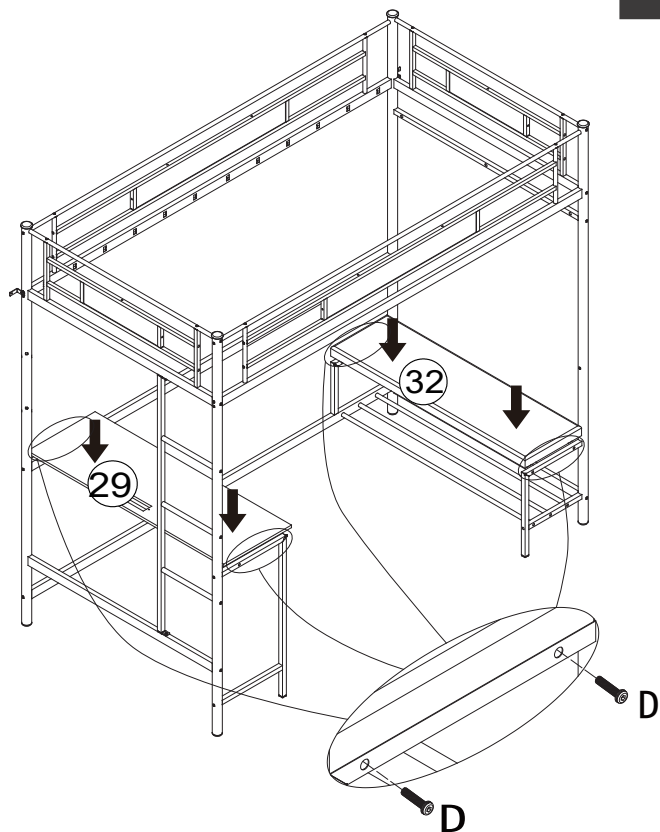


D		8pcs
	M8x35	

17

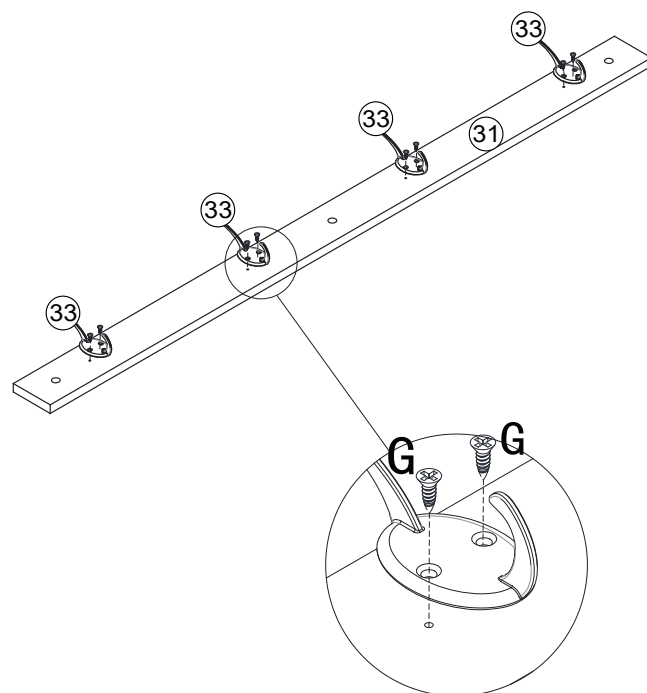


G		8pcs
	ST3*16	

18

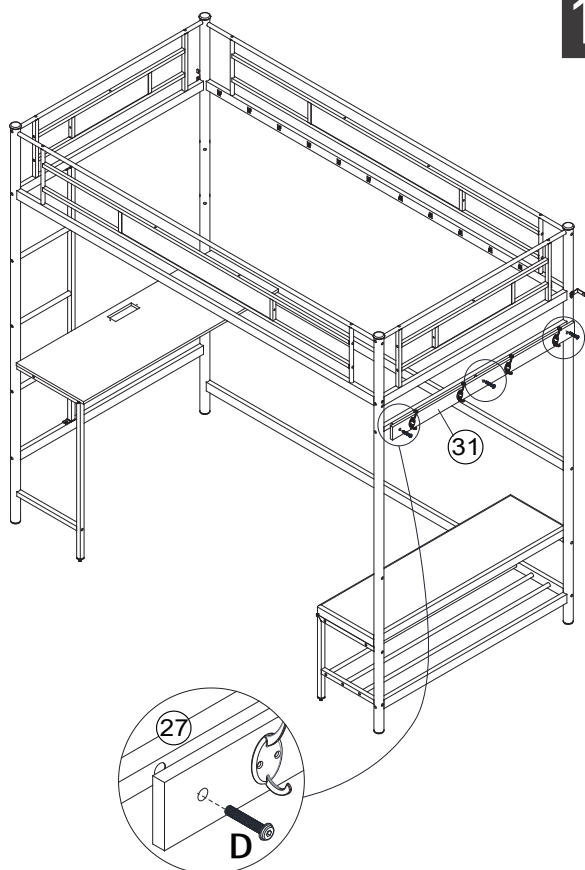


D		3pcs
	M8x35	

x2 19

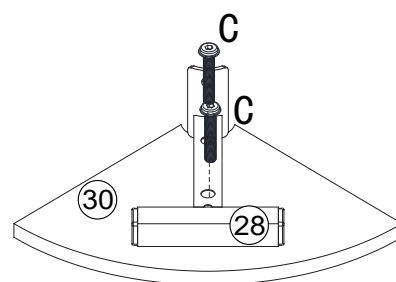


C		4pcs	white zinc
	M8x30		

20

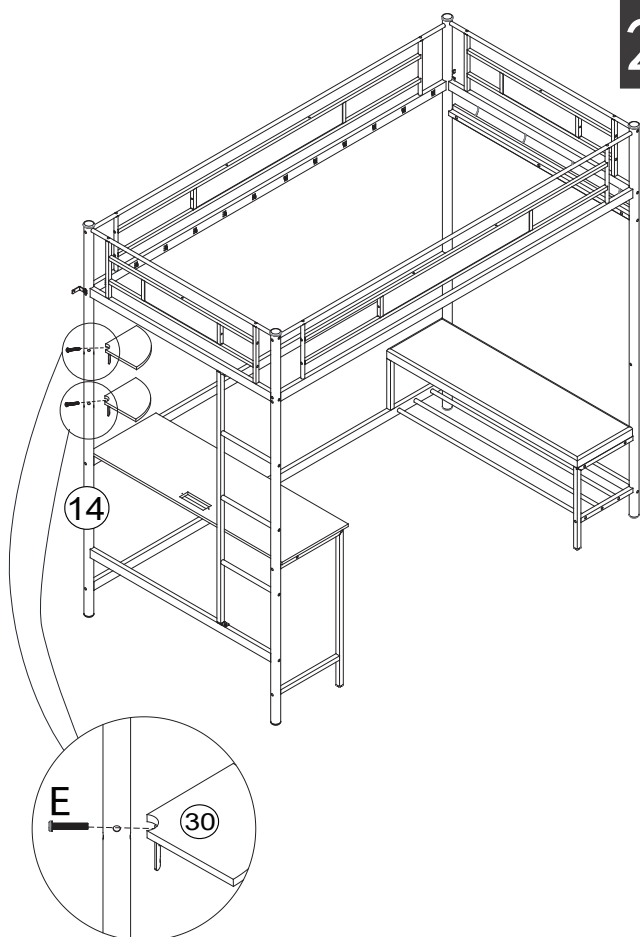


E		2pcs
M8x45		

21

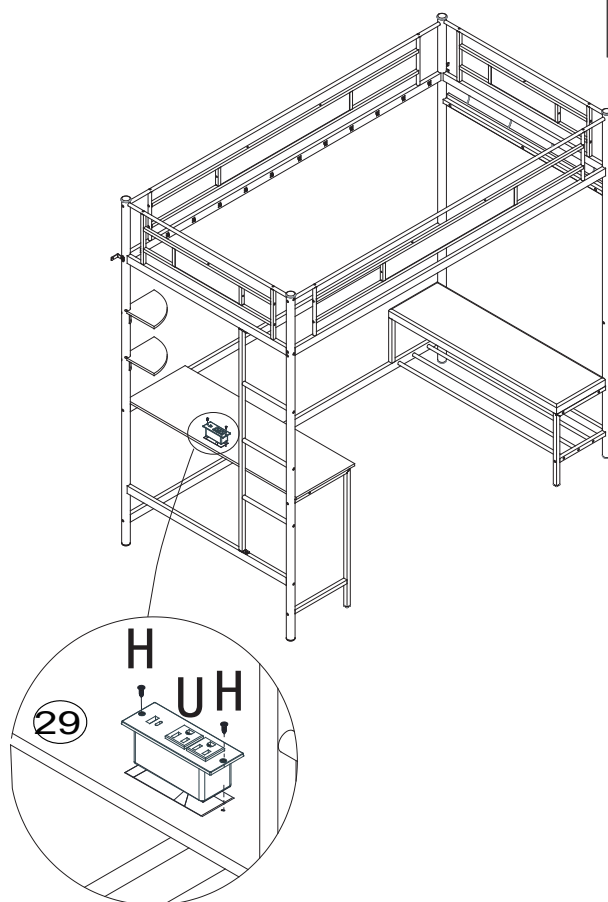

H		2pcs
ST4x14		


22

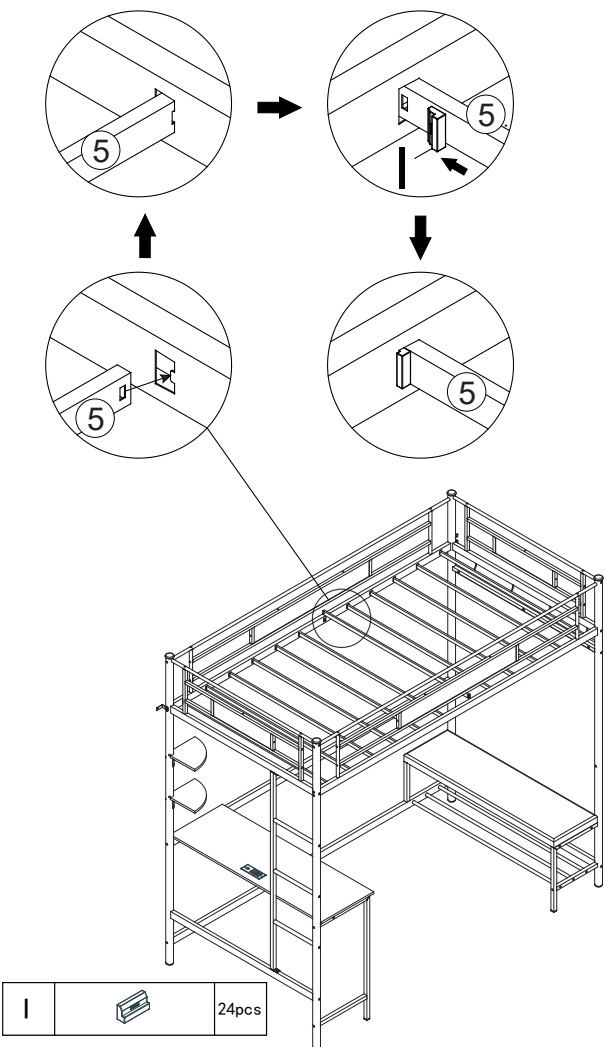

I		24pcs
---	---	-------

23


- 1: Using a drill bit with a diameter of 6, drill mounting holes where installation is required
- 2: Place the expansion tube into the hole
- 3: Screw the screw together with the mounting part into the expansion pipe

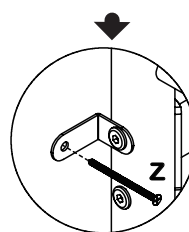

Z		2pcs
---	--	------

Finish

24

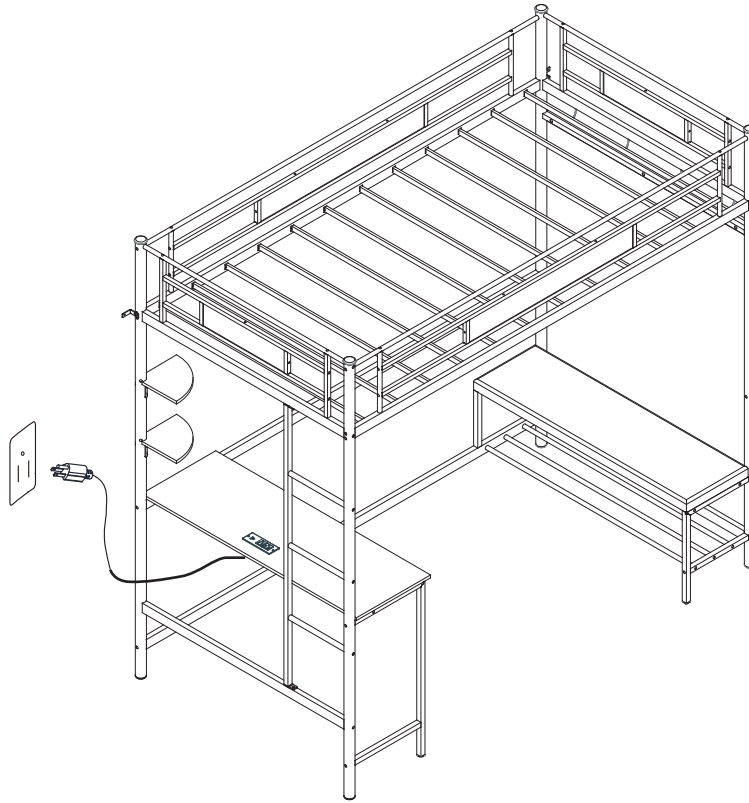

Note: Now you can tighten all the bolts.