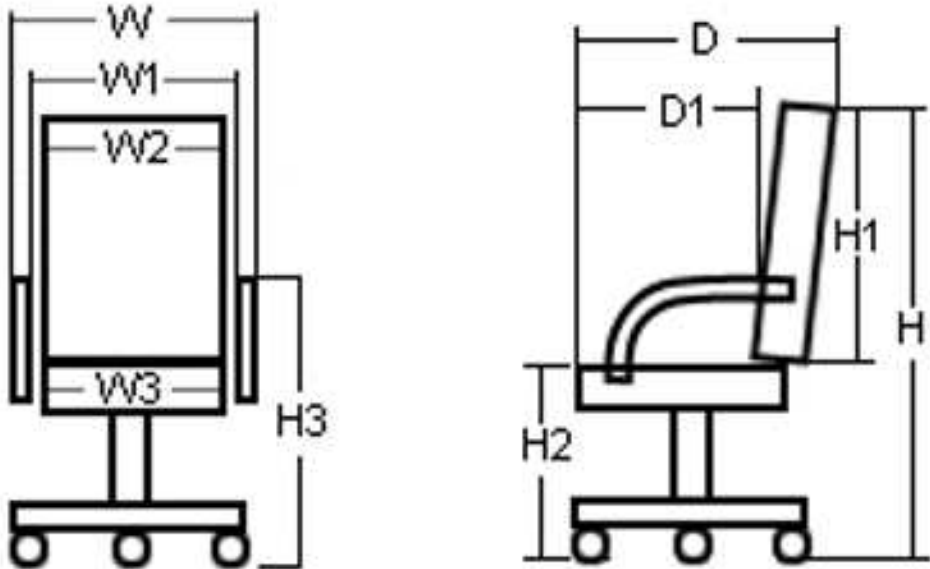


FULL CHAIR DIMENSION(inch)			
ARM.O.W	/	 The technical drawing consists of two views of an office chair. The left view is a front elevation showing the chair's width and backrest dimensions. Labels include W (total back width), W1 (backrest width), W2 (seat width), W3 (base width), and H3 (total height). The right view is a side elevation showing the chair's depth and height. Labels include D (total depth), D1 (backrest depth), H1 (backrest height), H2 (seat height), and H (total height). The chair has a five-point base with casters.	
ARM.I.W1	/		
SEAT.W3	19.49		
SEAT.H2	19.29-24.41		
SEAT.D1	16.93		
BACK.W2	17.32		
BACK.H1	14.57		
D	20.87		
ARM.H3	/		
		OVERALL SIZE	D210.63*W19.49*H34.84-39.96