

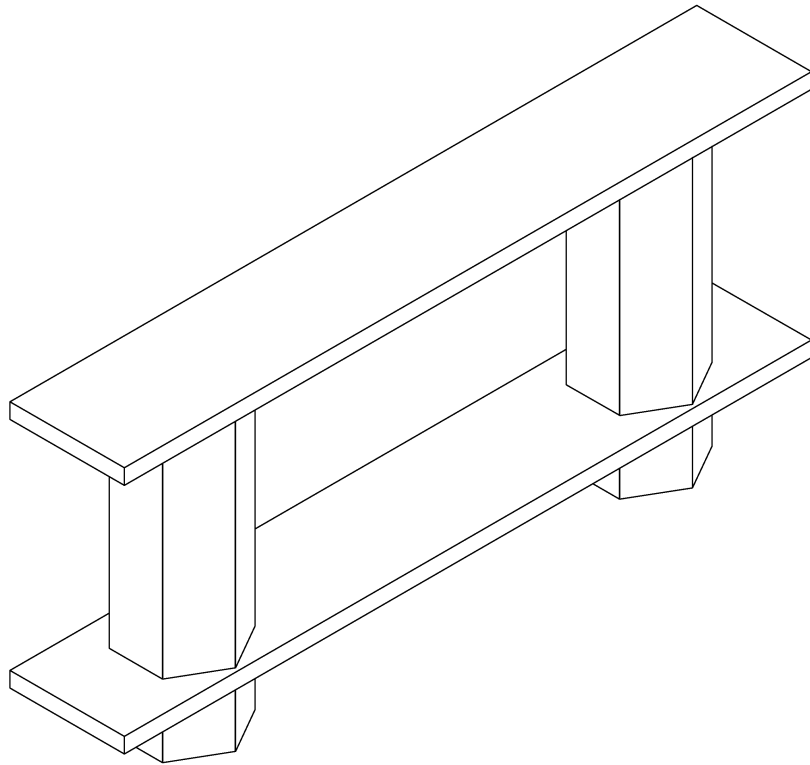
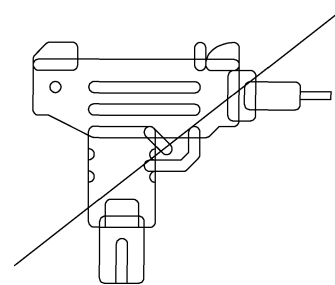


# Assembly Instructions

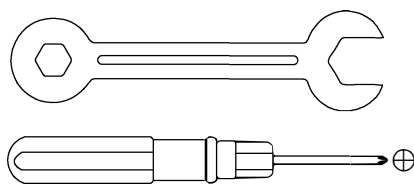


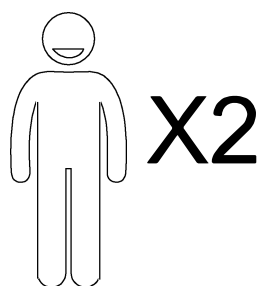

We recommend using hand tools for assembly.

If an electric screwdriver is used, reduce power and torque to avoid damage to the product.


---

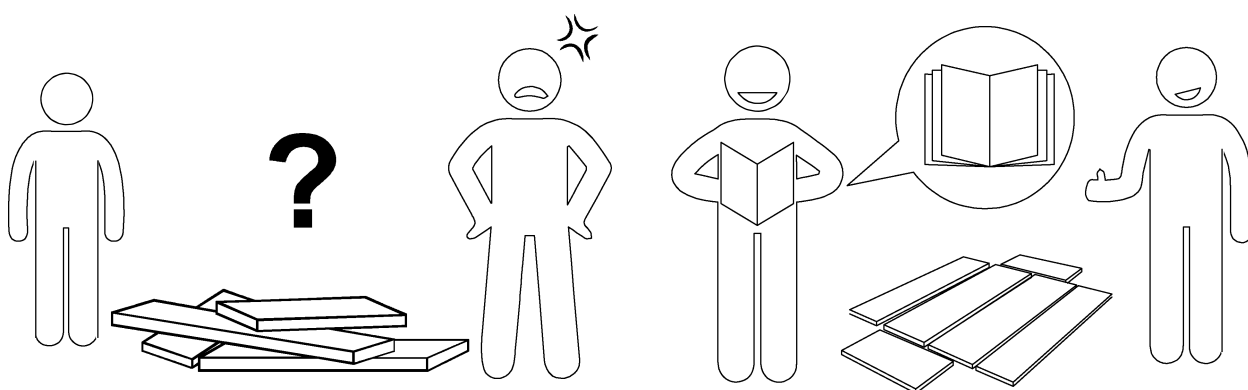


---

## Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.








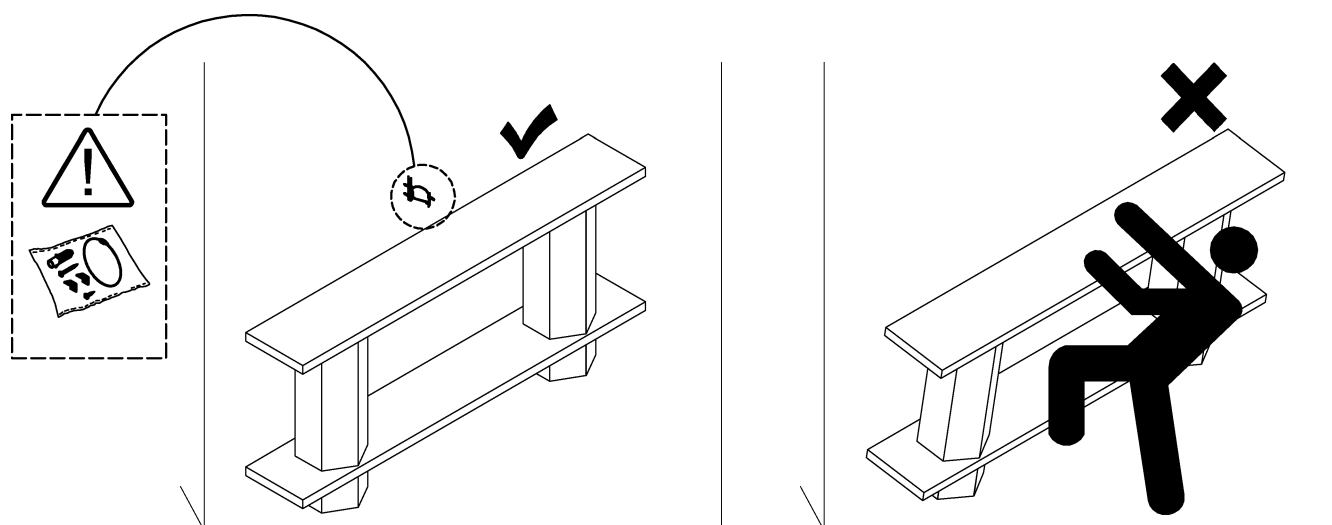


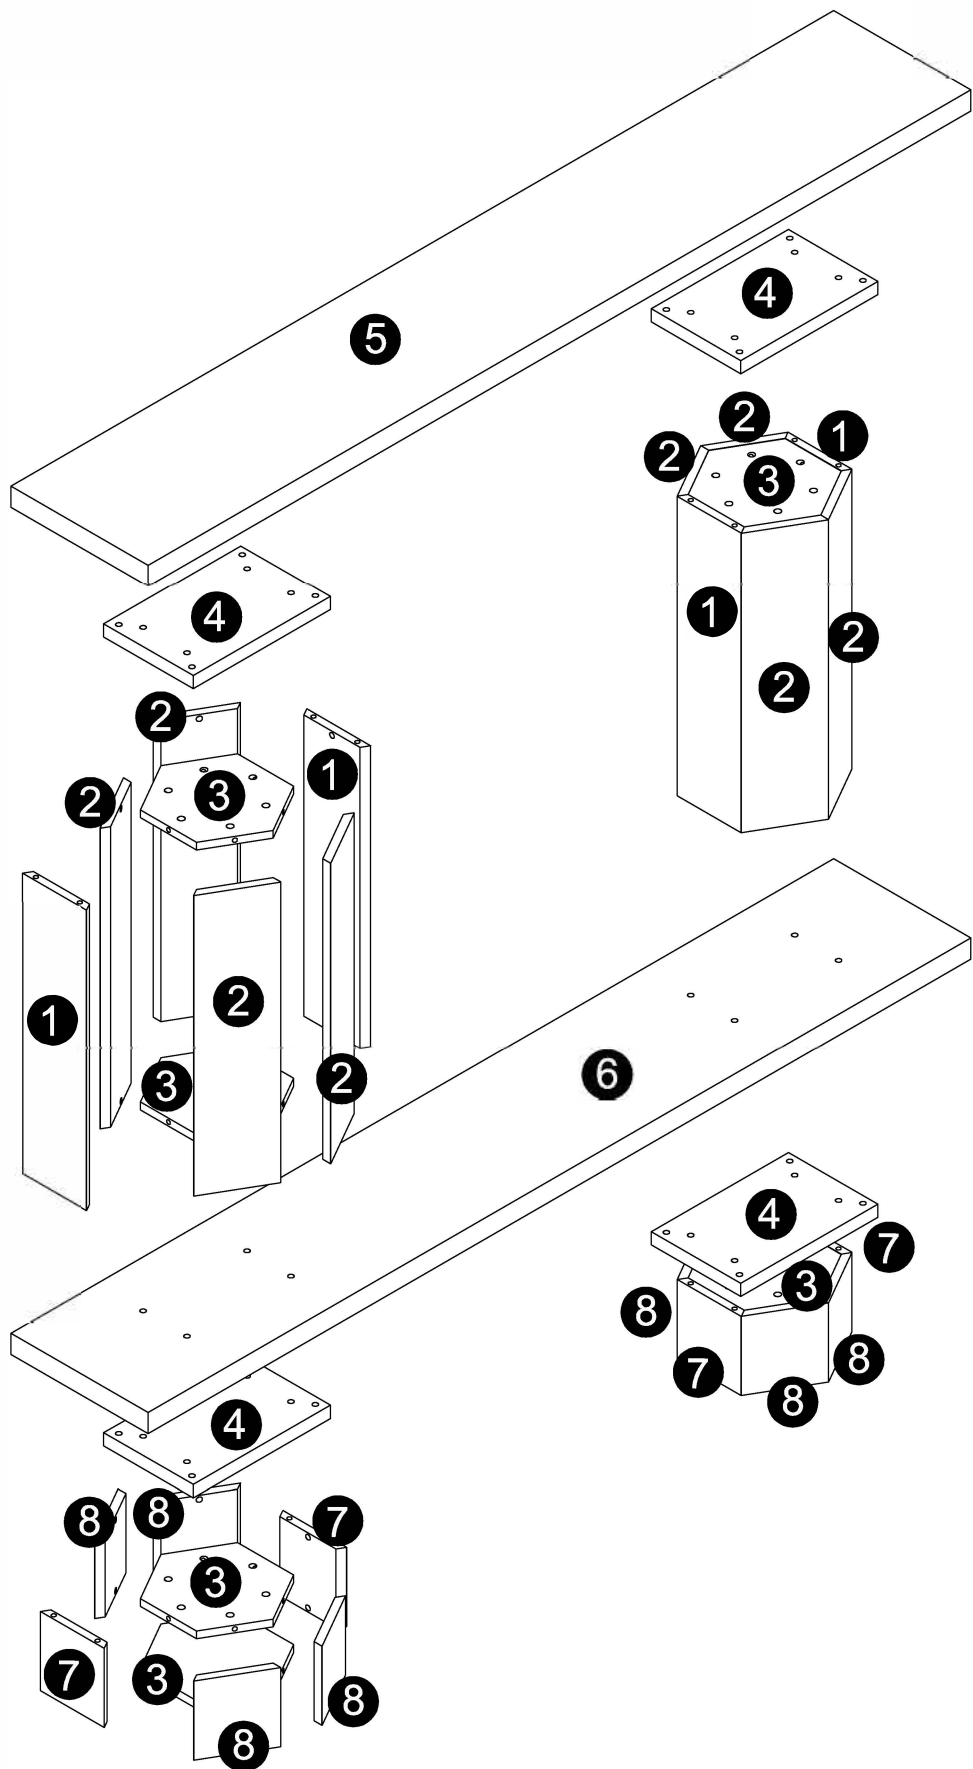








**⚠ Caution**


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

## Parts List
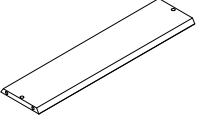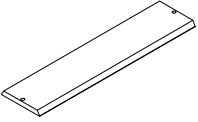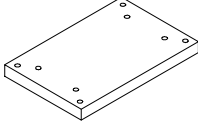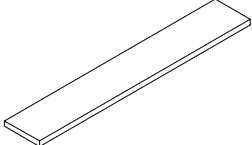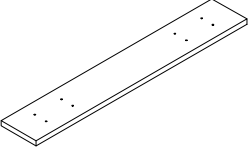
<b>1</b>  <b>4 pcs</b>	<b>2</b>  <b>8 pcs</b>	<b>3</b>  <b>8 pcs</b>	<b>4</b>  <b>4 pcs</b>	<b>5</b>  <b>1 pc</b>
<b>6</b>  <b>1 pc</b>	<b>7</b>  <b>4 pcs</b>	<b>8</b>  <b>8 pcs</b>		


## Hardware List

A	B	C	D	E	F	G
 <b>M6x35mm</b> <b>48+1 pcs</b>	 <b>Ø12x10mm</b> <b>48+1 pcs</b>	 <b>Ø7x38mm</b> <b>24+1 pcs</b>	 <b>M6x35mm</b> <b>16+1 pcs</b>	 <b>8 pcs</b>	 <b>M4</b> <b>1 pc</b>	 <b>1 pc</b>


H						
 <b>Screwdriver</b> <b>1 pc</b>						

## Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

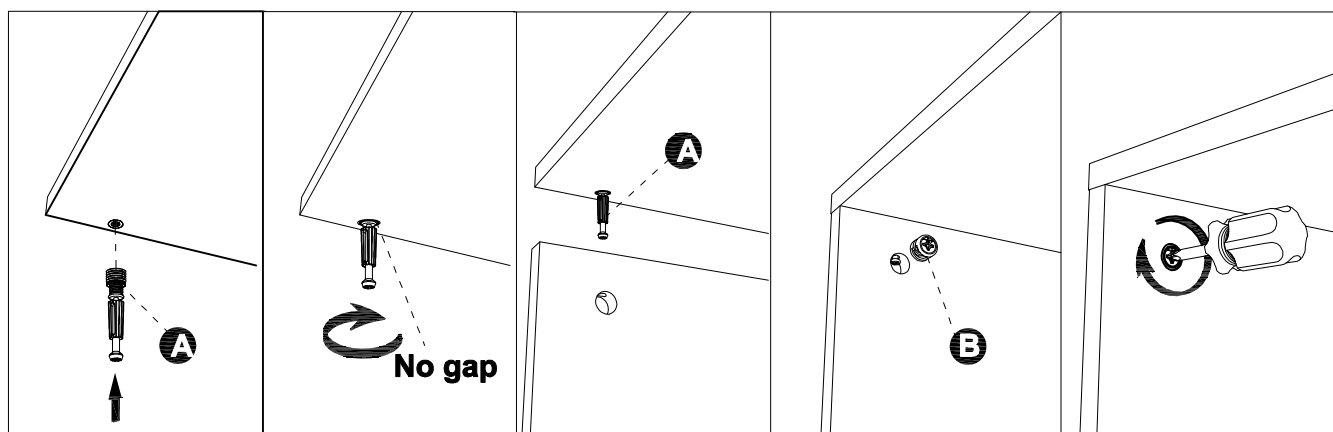

Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

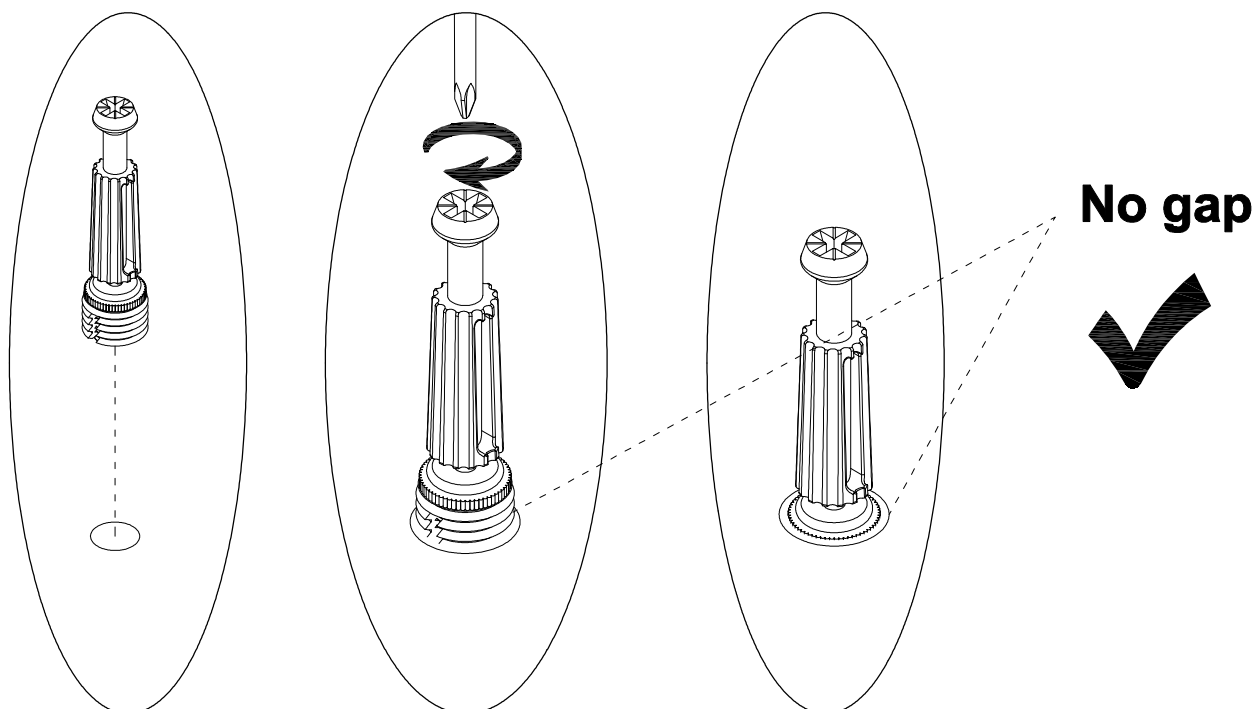


**1**

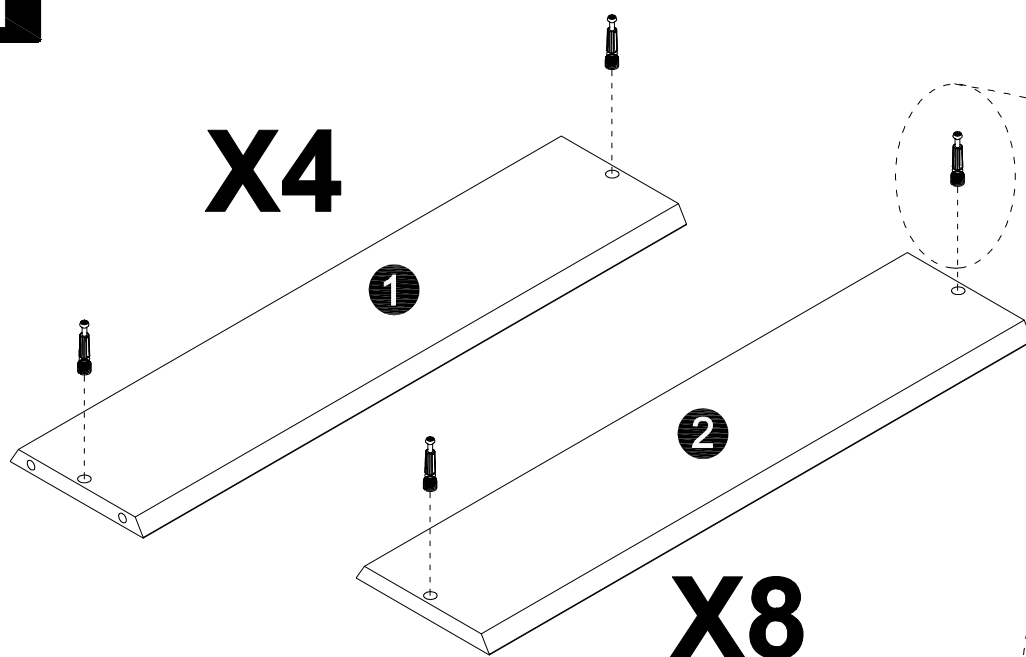



A


M6x35mm 24 pcs

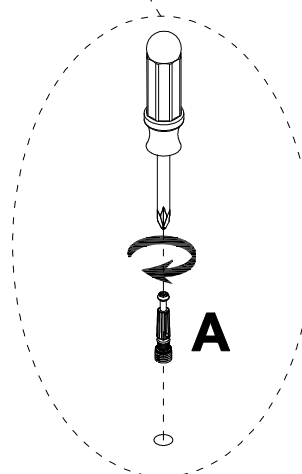


**2**

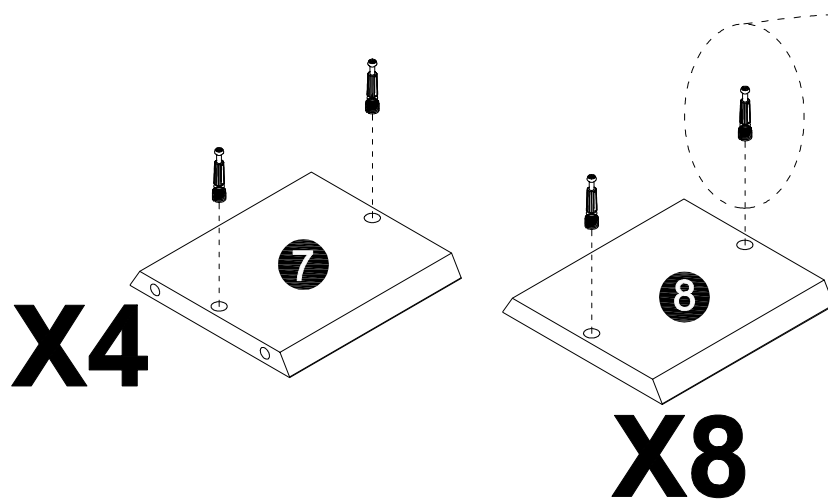


A

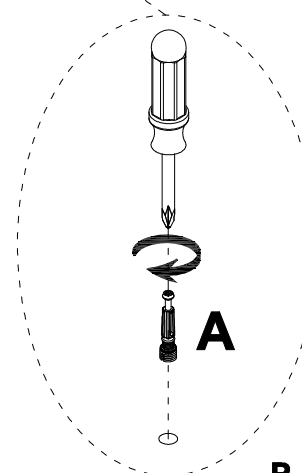M6x35mm 24 pcs

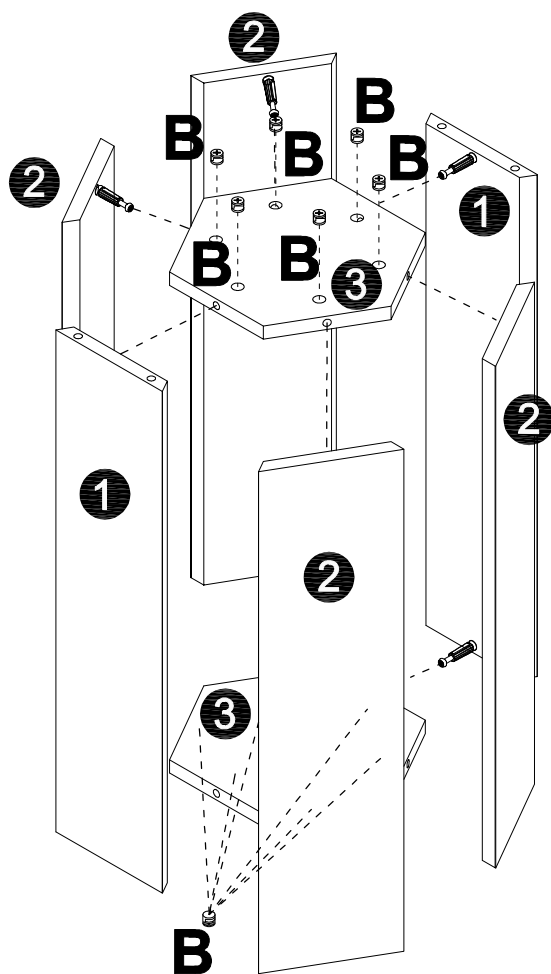


**3**




**X2**


B

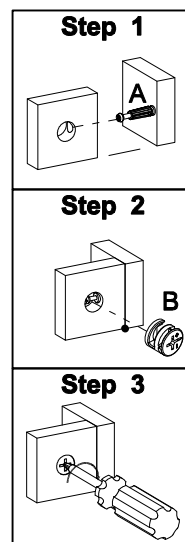Ø12x10mm 24 pcs

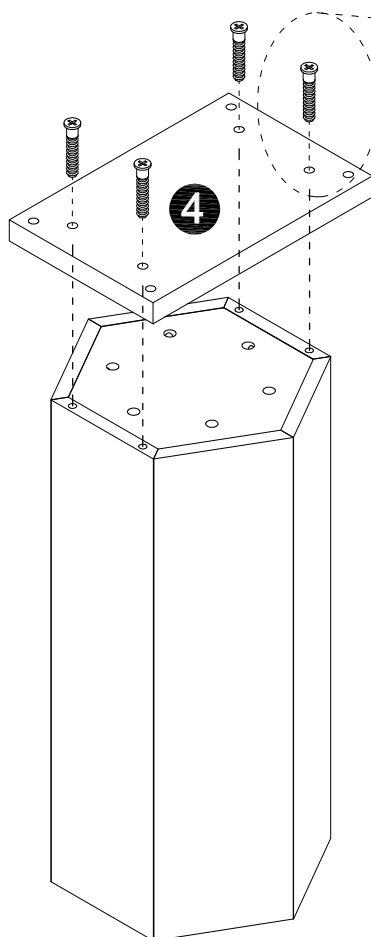


**4**




**X2**


C

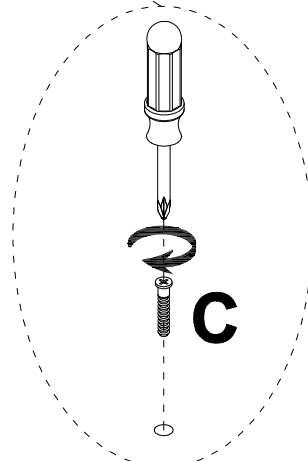Ø7x38mm 8 pcs

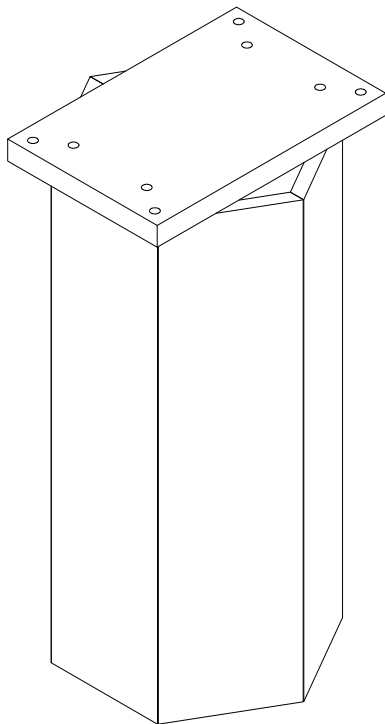


5

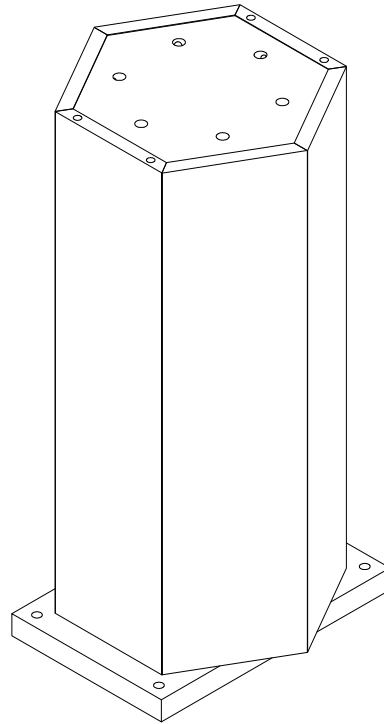



Rotate 180°



6

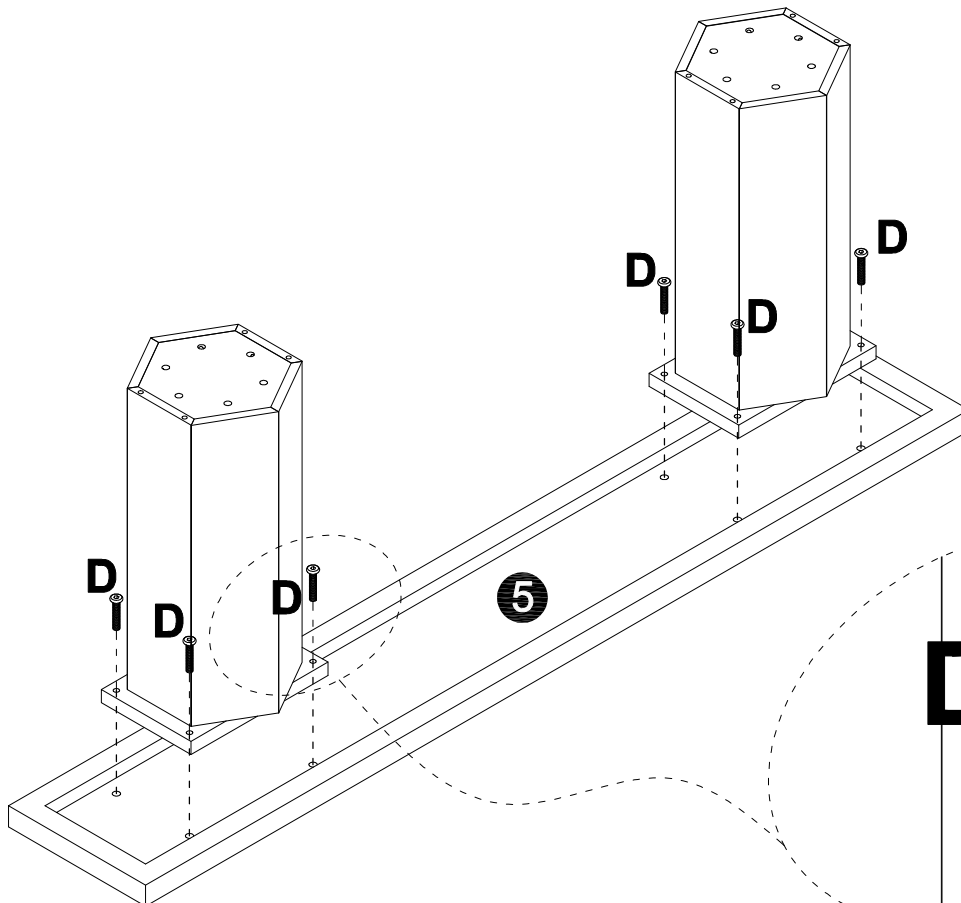


D

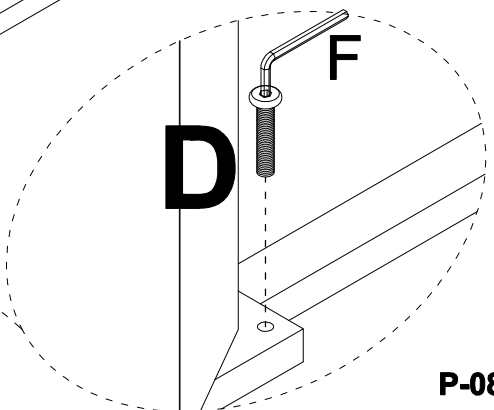M6x35mm
8 pcs




P-08

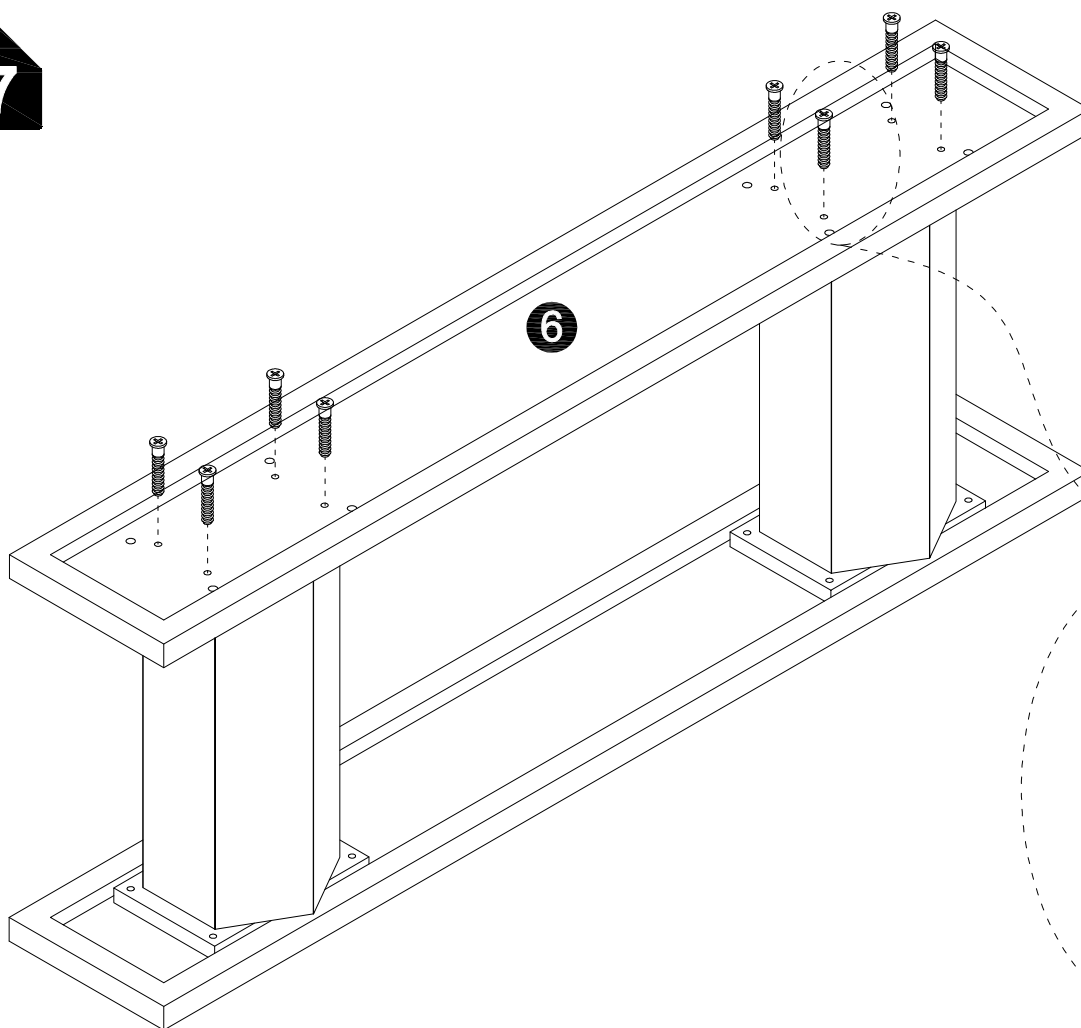


7





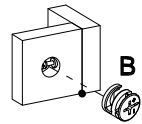
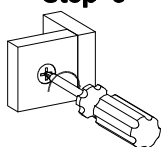
<b>C</b>

<b>Ø7x38mm</b>
<b>8 pcs</b>

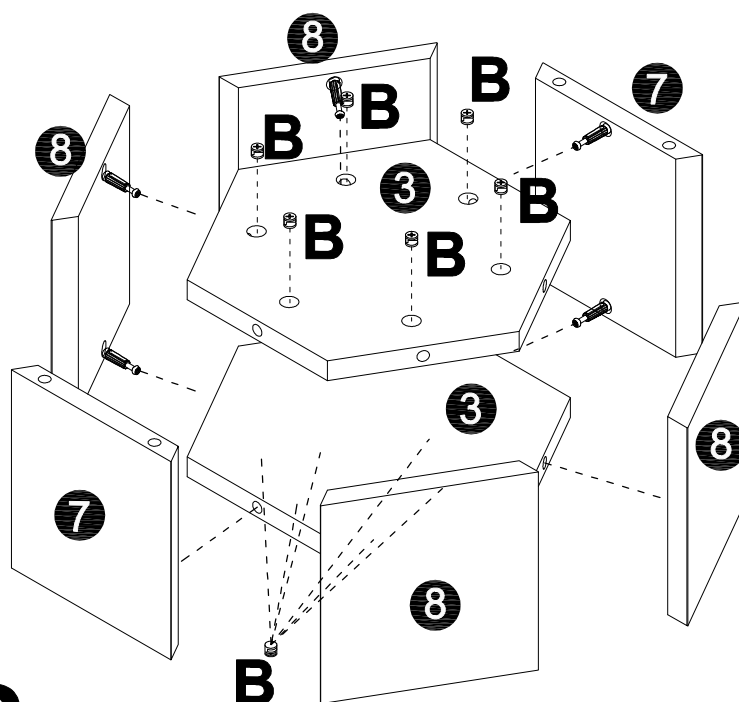8






**X2**

<b>B</b>

<b>Ø12x10mm</b>
<b>24 pcs</b>

<b>Step 1</b>

<b>Step 2</b>
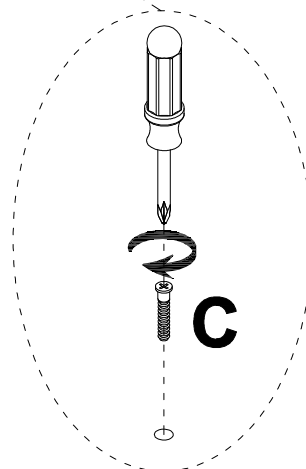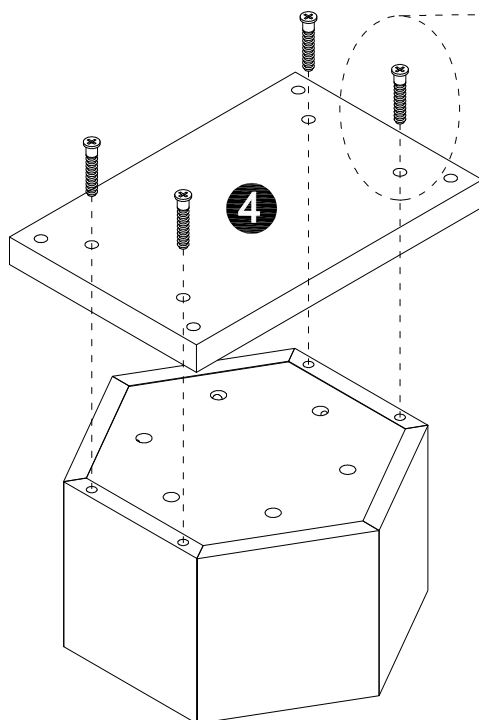
<b>Step 3</b>


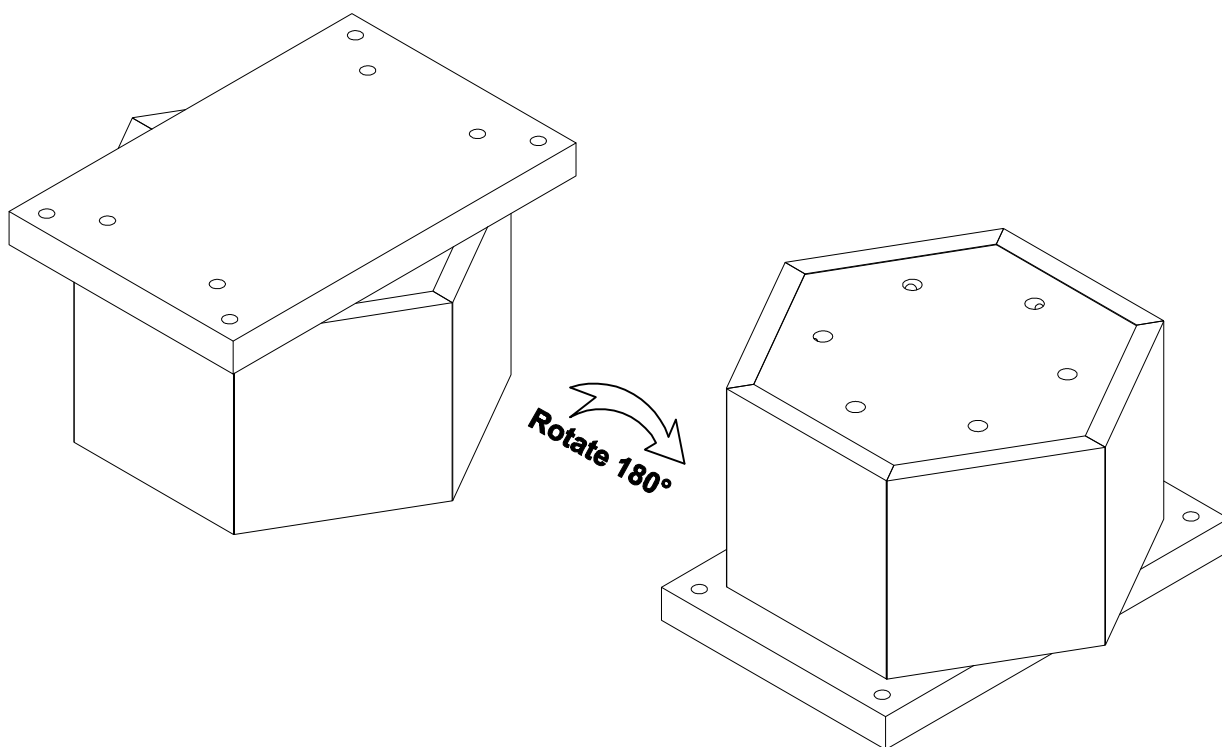
9

C

Ø7x38mm
8 pcs





**X2**

10





11

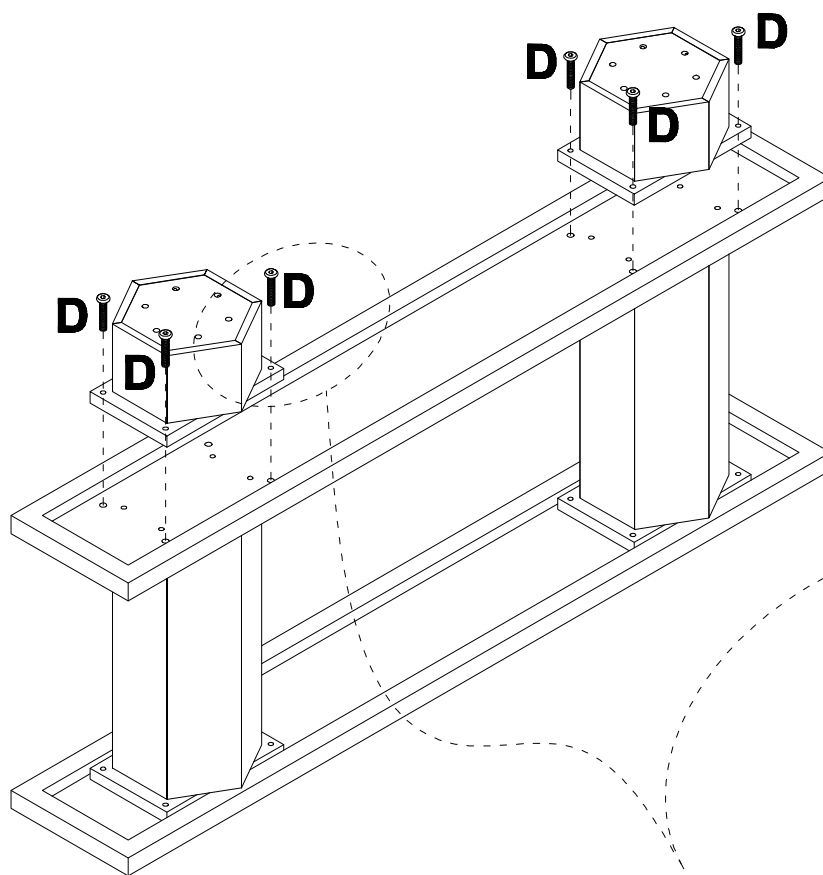


D

M6x35mm
8 pcs

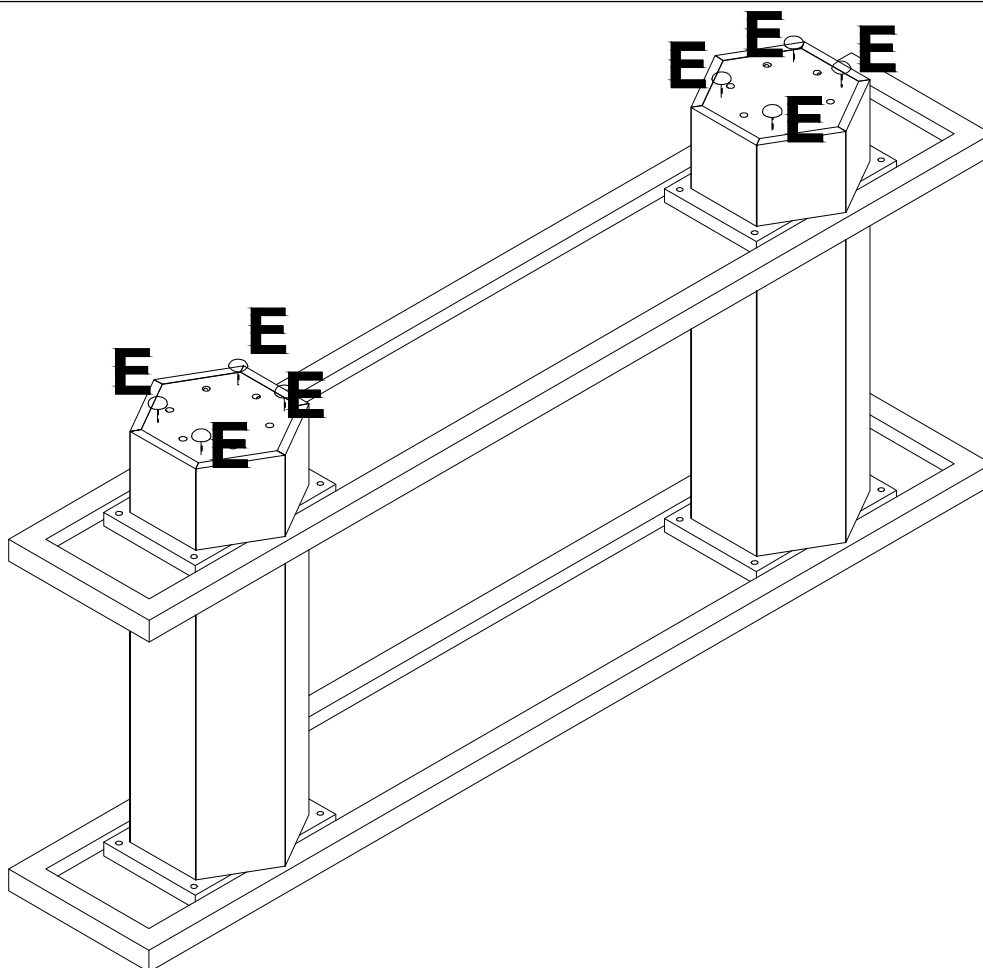12






E

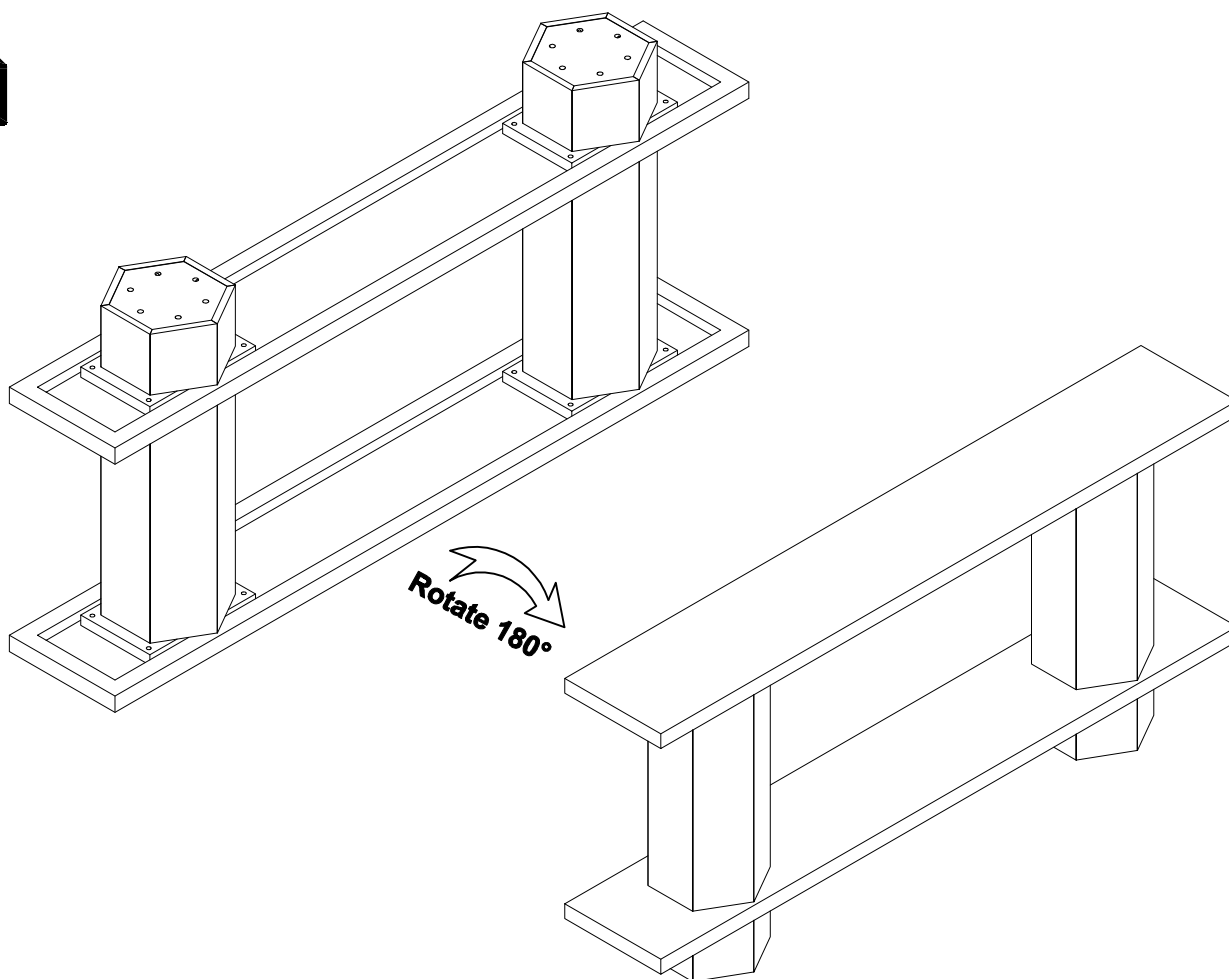8 pcs

**13**

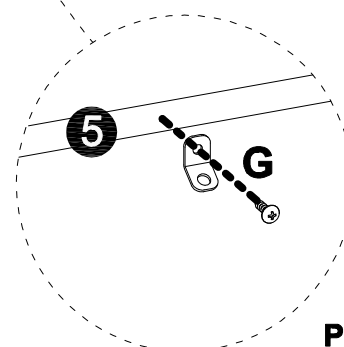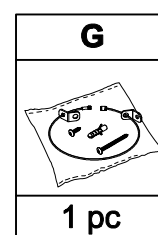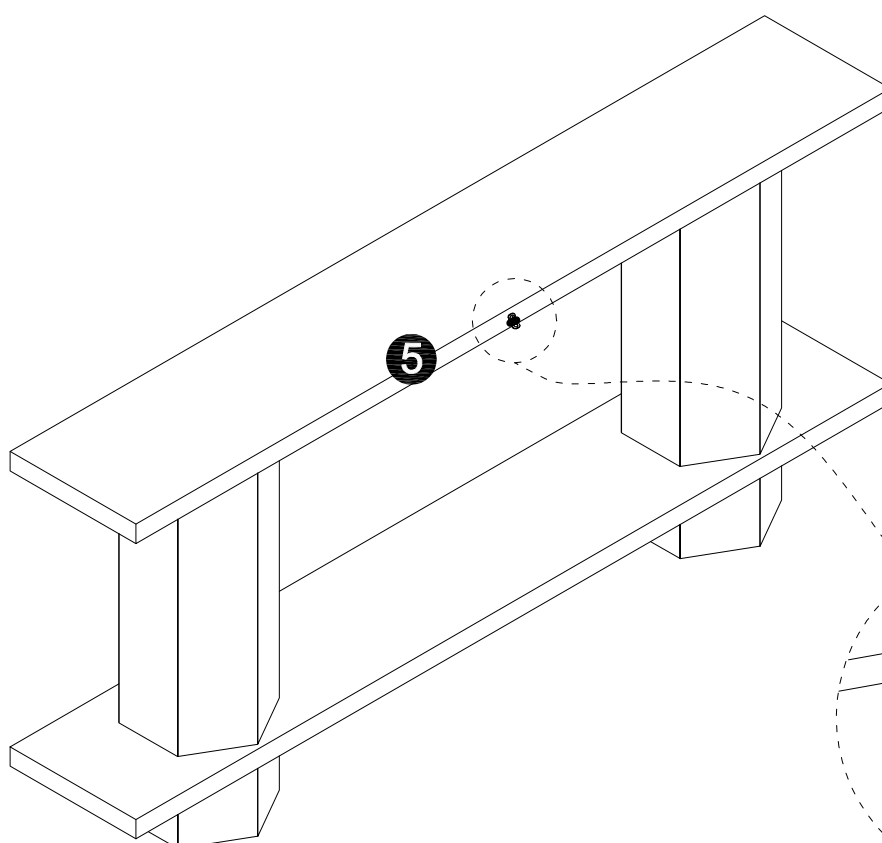

**14**




**P-12**


15

Wall



Step1



Step2

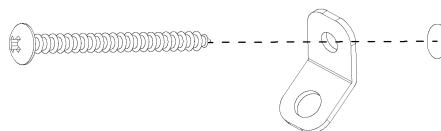

Step3

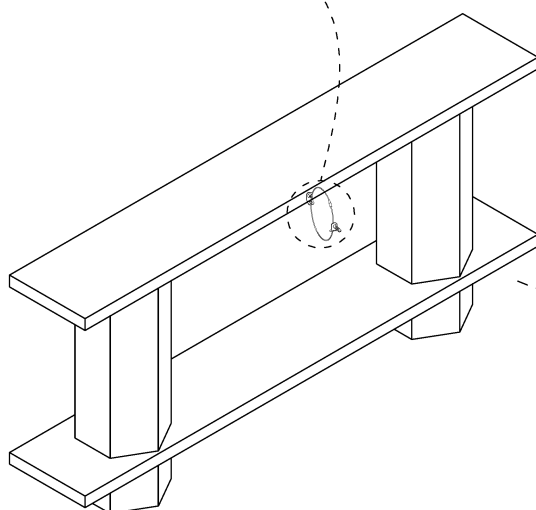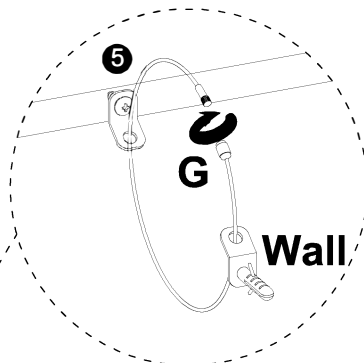

**Thank you for your support!**

