

8' Garden Bridge

Tools Required:

- You will need a #2 Philips or Robertson driver

NOTE: It's recommended a 2nd person assists with this assembly


Package Contents:

(A) Sides...2

(B) Foot Planks...17


Hardware:

- 1-3/4" Zinc Screw ...68

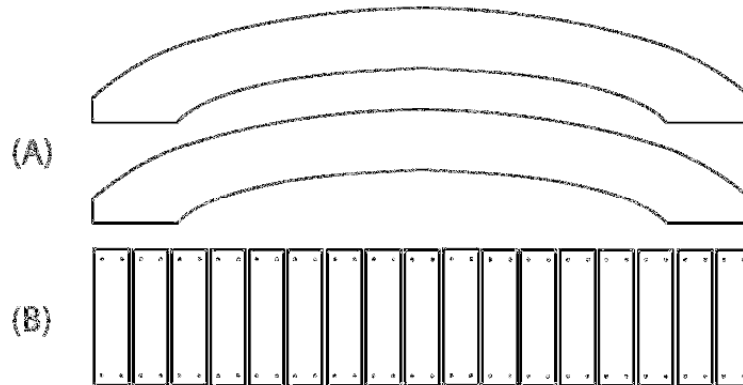

STEP 1. Align Sides

- Use a foot plank (B) to make sides parallel at 35 inches apart (outside edge to outside edge).
- Attach a foot plank to both ends and one in the center using 1-3/4-inch screws.

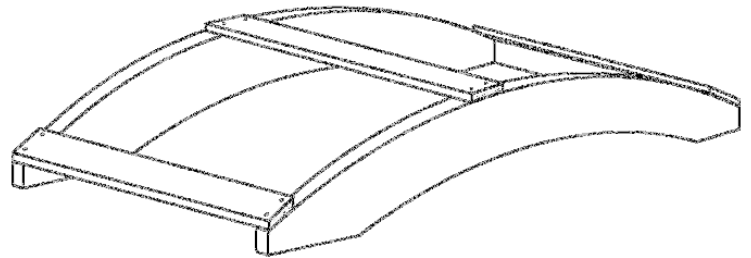

STEP 2. Attach Foot Planks

- Create uniform spacing between each plank and attach using 1-3/4-inch screws.
- Your new bridge is ready or use

