


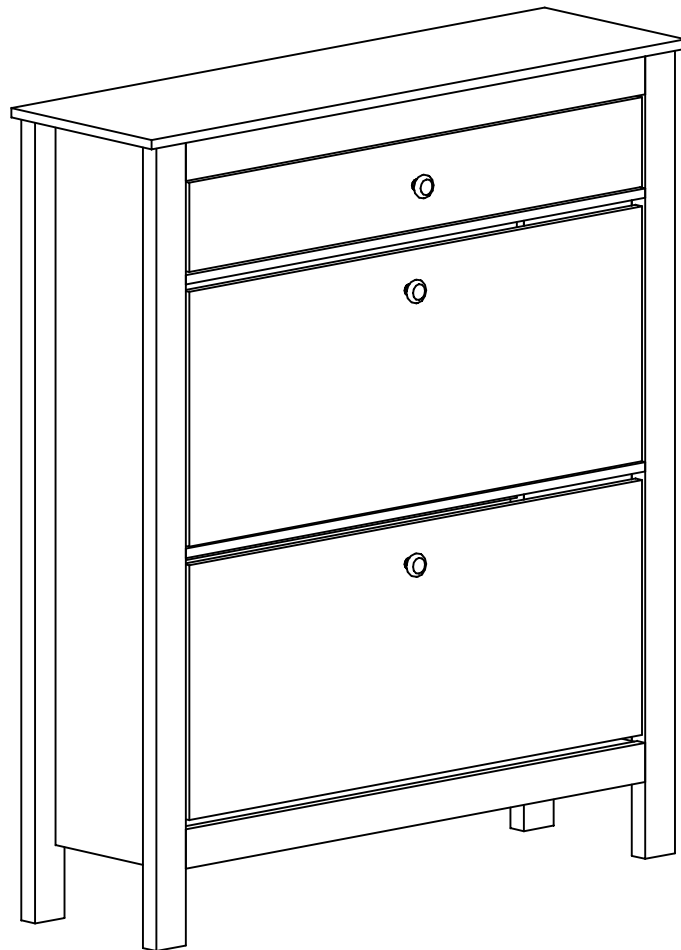


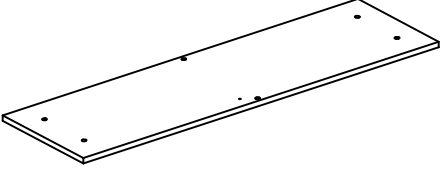
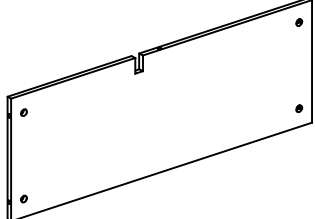
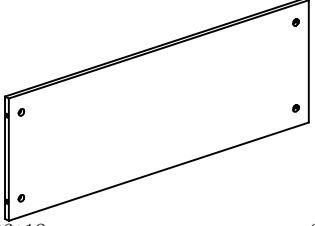
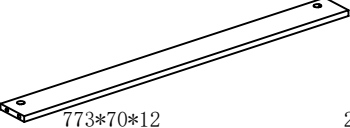
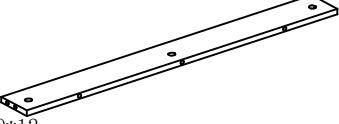










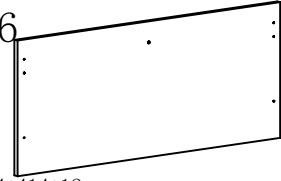

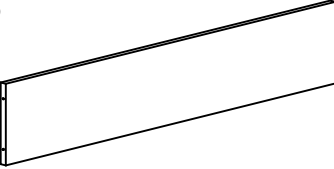
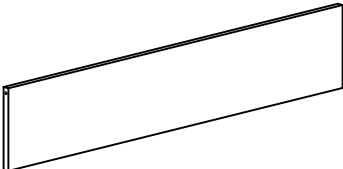

FTBFCB-6026

















IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


Notice:

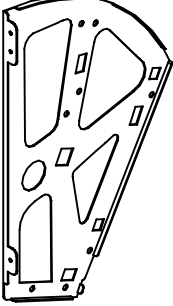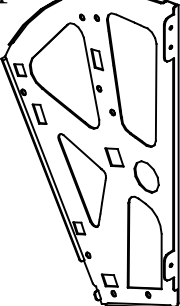1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put carpet on the floor to avoid scratching it.


 <p>Recommended installers: 2</p>		 <p>Put a carpet on the floor before unpacking</p>		 <p>Estimated installation time: 30-60 minutes</p>	
<p>1</p>  <p>900*260*12 1 PC</p>		<p>2</p>  <p>775*296*12 1 PC</p>		<p>3</p>  <p>775*296*12 2 PCS</p>	
<p>4</p>  <p>773*70*12 2 PCS</p>		<p>5</p>  <p>773*80*12 1 PC</p>		<p>6</p>  <p>773*50*15 1 PC</p>	
<p>7</p>  <p>50*25*1196 1PC</p>	<p>8</p>  <p>50*25*1196 1PC</p>	<p>9</p>  <p>50*25*1196 1PC</p>	<p>10</p>  <p>50*25*1196 1PC</p>	<p>11</p>  <p>773*50*15 1 PC</p>	<p>12</p>  <p>746*95*12 1 PC</p>
		<p>13</p>  <p>769*114*12 1 PC</p>	<p>14</p>  <p>206*95*12 1 PC</p>	<p>15</p>  <p>206*95*12 1 PC</p>	
		<p>16</p>  <p>764*414*12 2 PCS</p>	<p>17</p>  <p>764*90*12 2 PCS</p>		
<p>18</p>  <p>764*125*12 2 PCS</p>		<p>19</p>  <p>764*146*12 2 PCS</p>		<p>20</p>  <p>216*735*3 1 PC</p>	


<p>21</p>  <p>201*1102*15 1 PC</p>	<p>22</p>  <p>201*1102*15 1 PC</p>	<p>23</p>  <p>2 PCS</p>	<p>24</p>  <p>2 PCS</p>	
<p>D</p>  <p>4 PCS</p>	<p>E</p>  <p>10*35*10mm 4 PCS</p>	<p>F</p>  <p>3 PCS</p>	<p>G</p>  <p>M8 24 PCS</p>	<p>H</p>  <p>M7*40mm 4 PCS</p>
<p>I</p>  <p>8" 2 PCS</p>	<p>J</p>  <p>1 PC</p>	<p>K</p>  <p>1 PC</p>	<p>L</p>  <p>M3.5*25mm 1 PC</p>	

"A" Hardware installation example


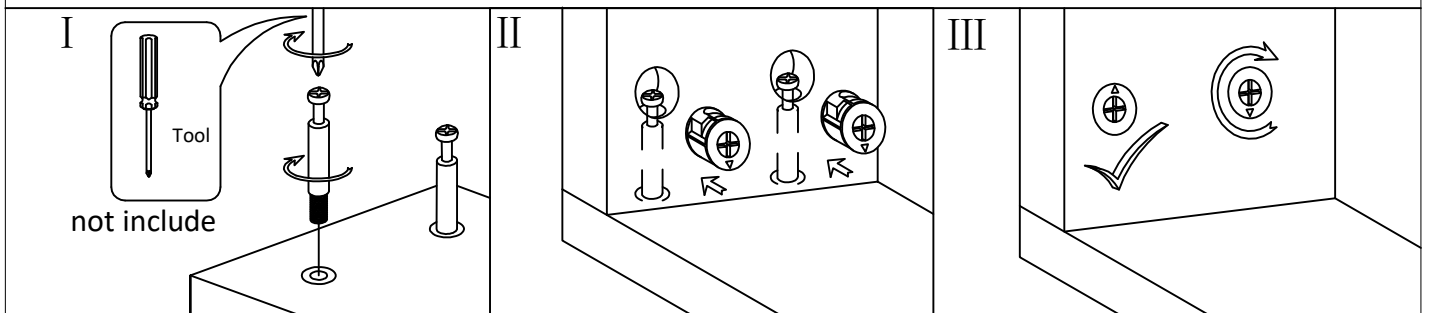


"I" Hardware disassembly example

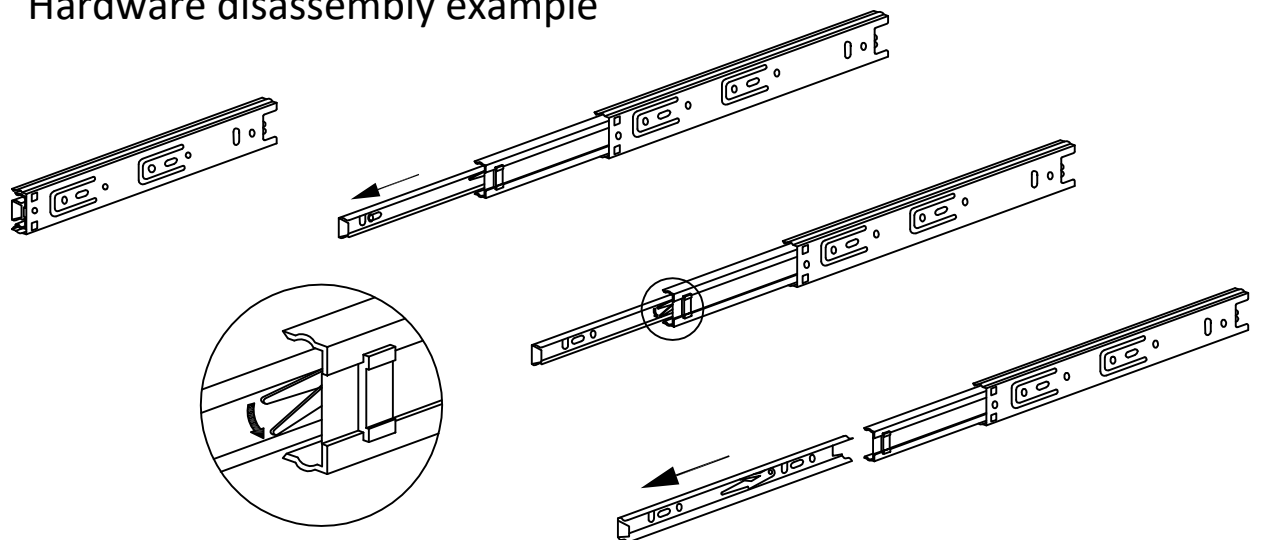


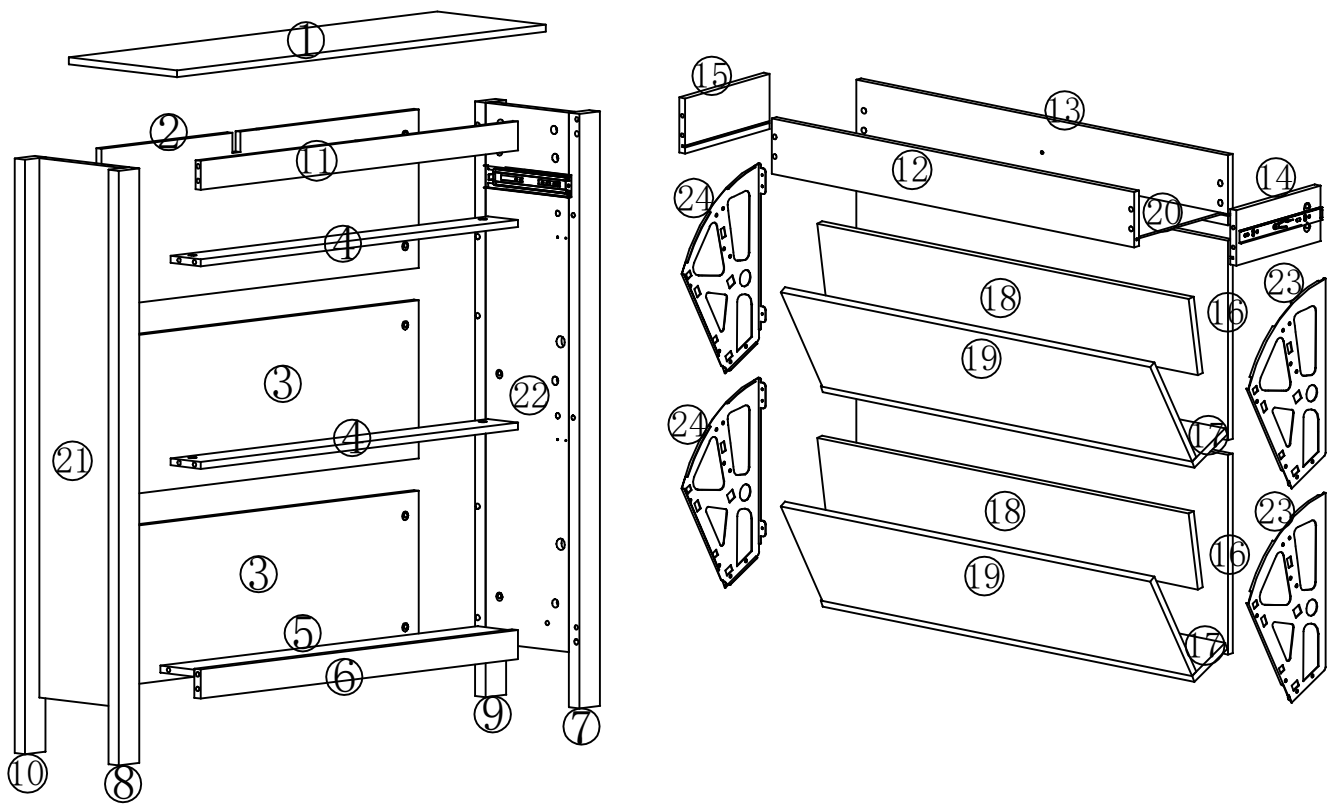


STEP 1

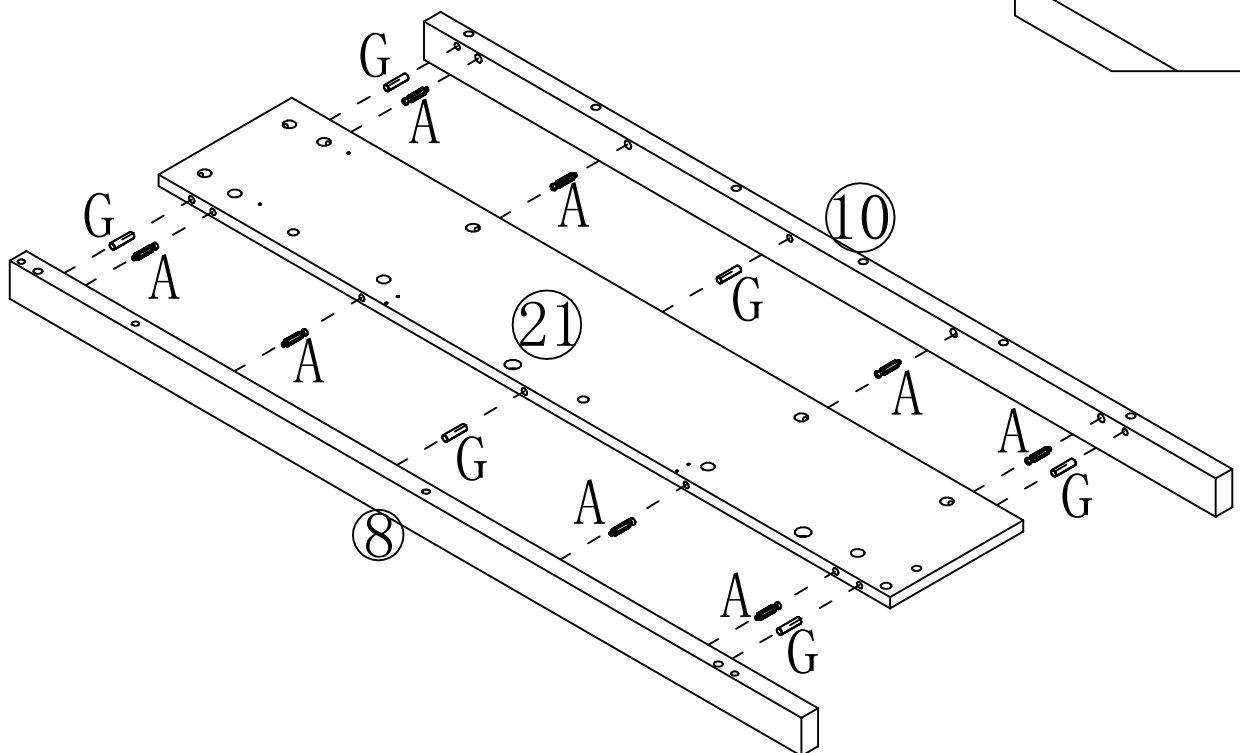
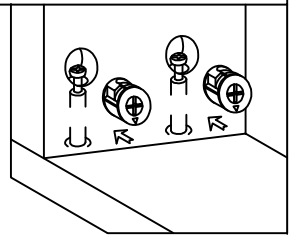


<p>G*6 PCS</p>	<p>A*8 PCS</p>
----------------	----------------


STEP 2

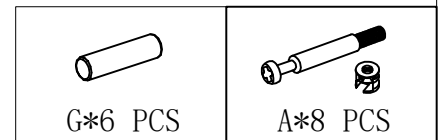
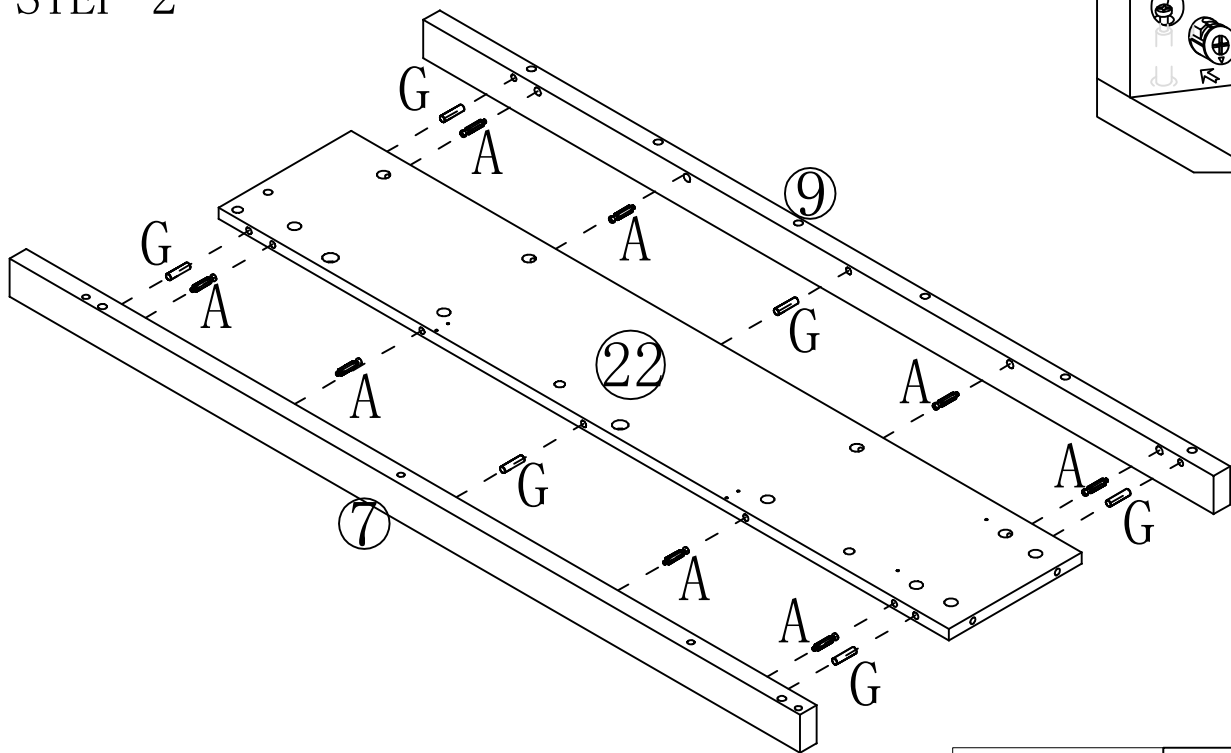



STEP 3

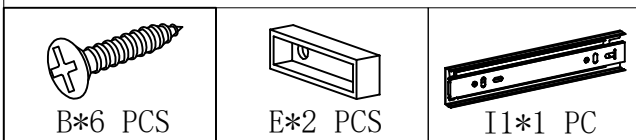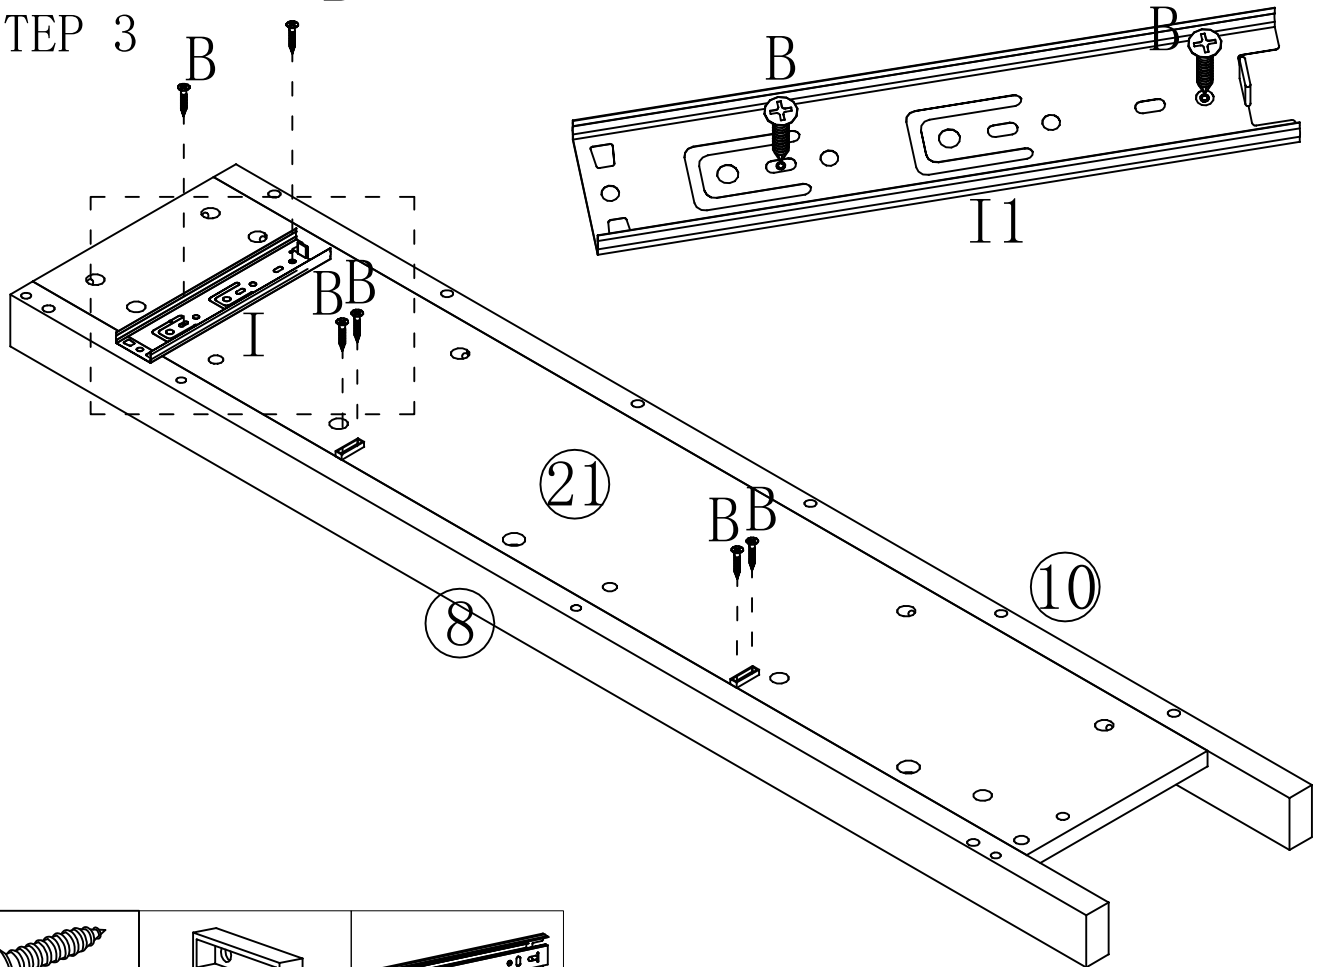


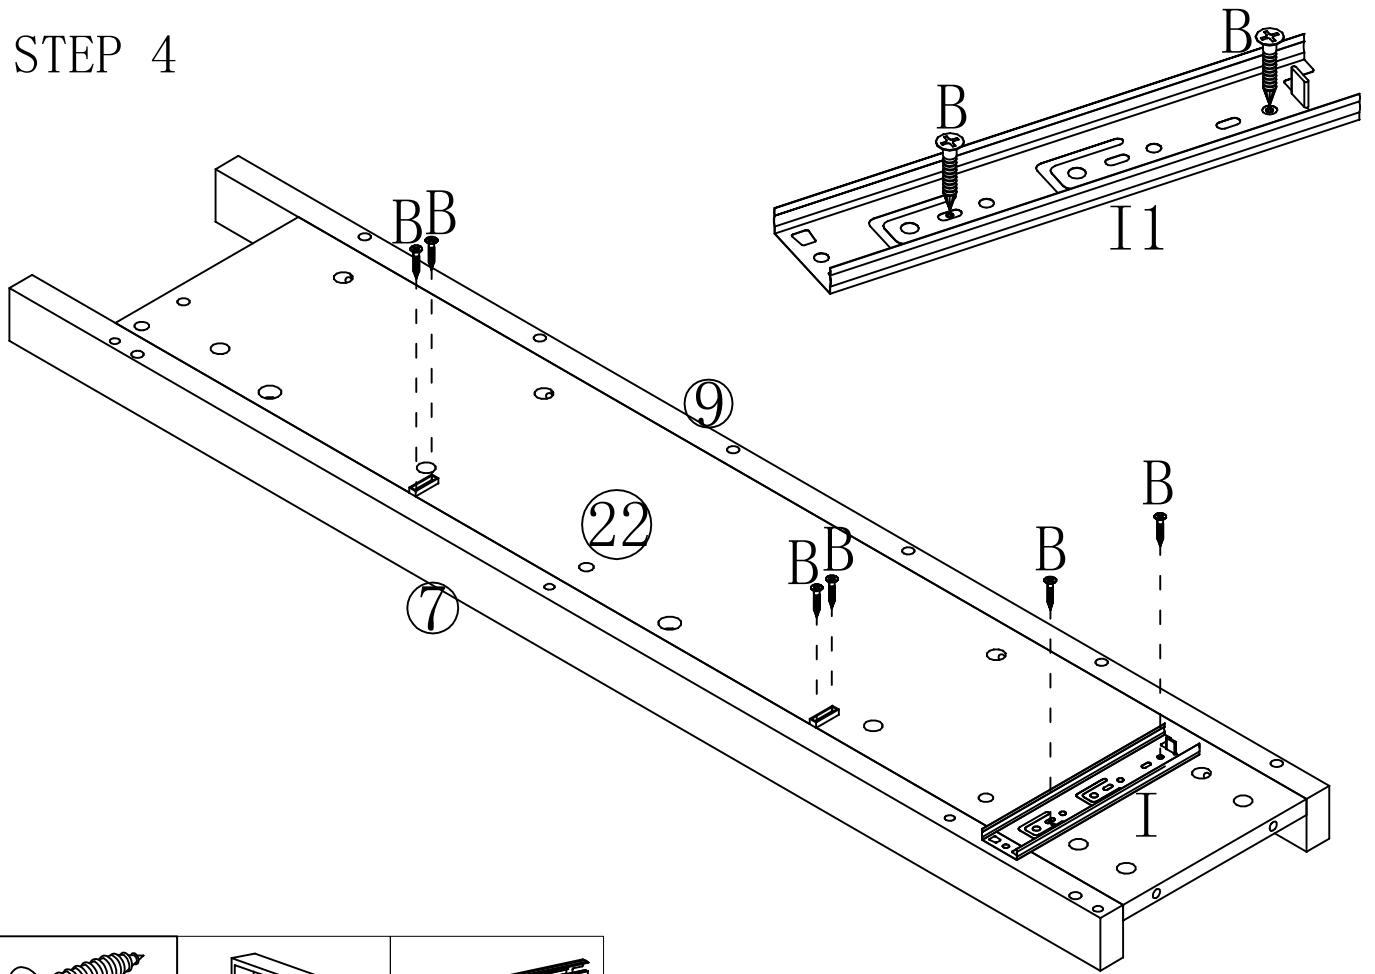

STEP 4





 B*6 PCS	 E*2 PCS	 I1*1 PC
--	--	--

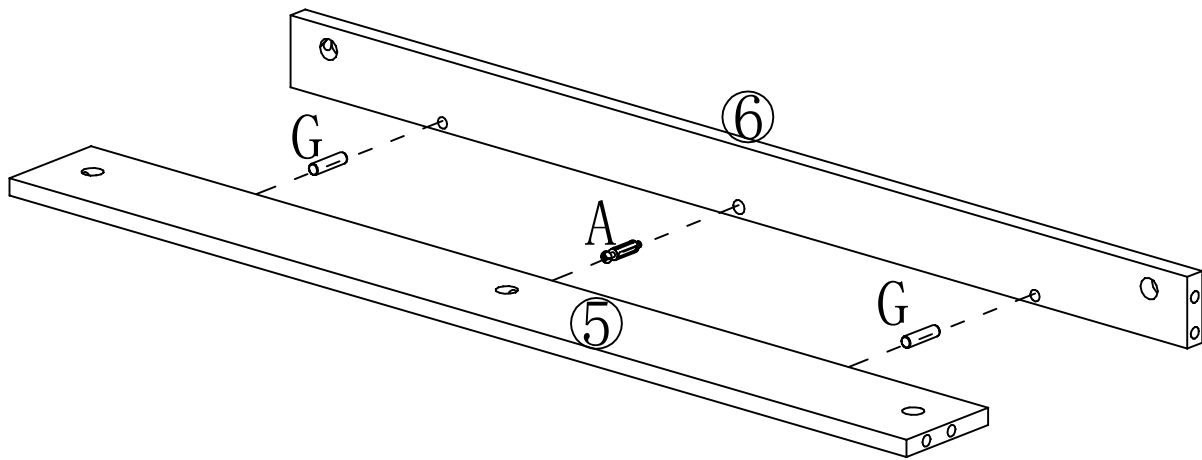STEP 5





 G*2 PCS	 A*1 PC
--	---



STEP 6

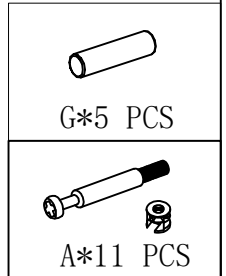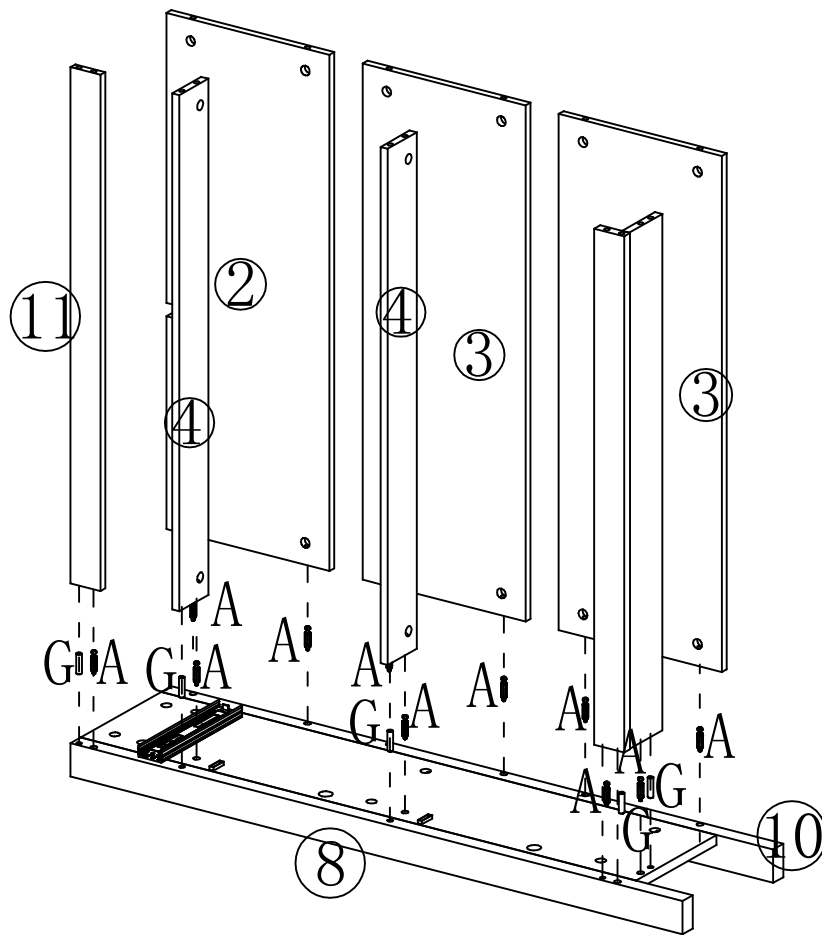



STEP 7

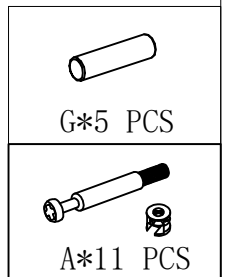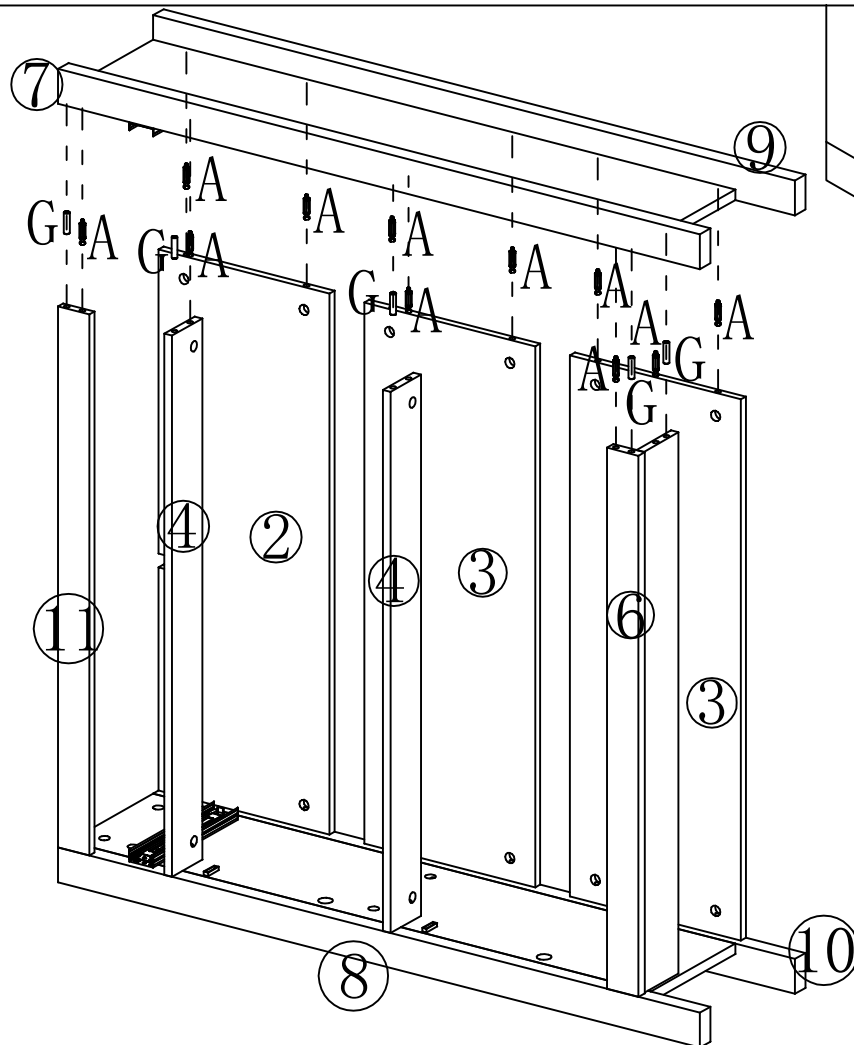


STEP 8

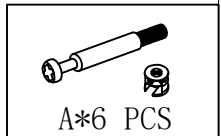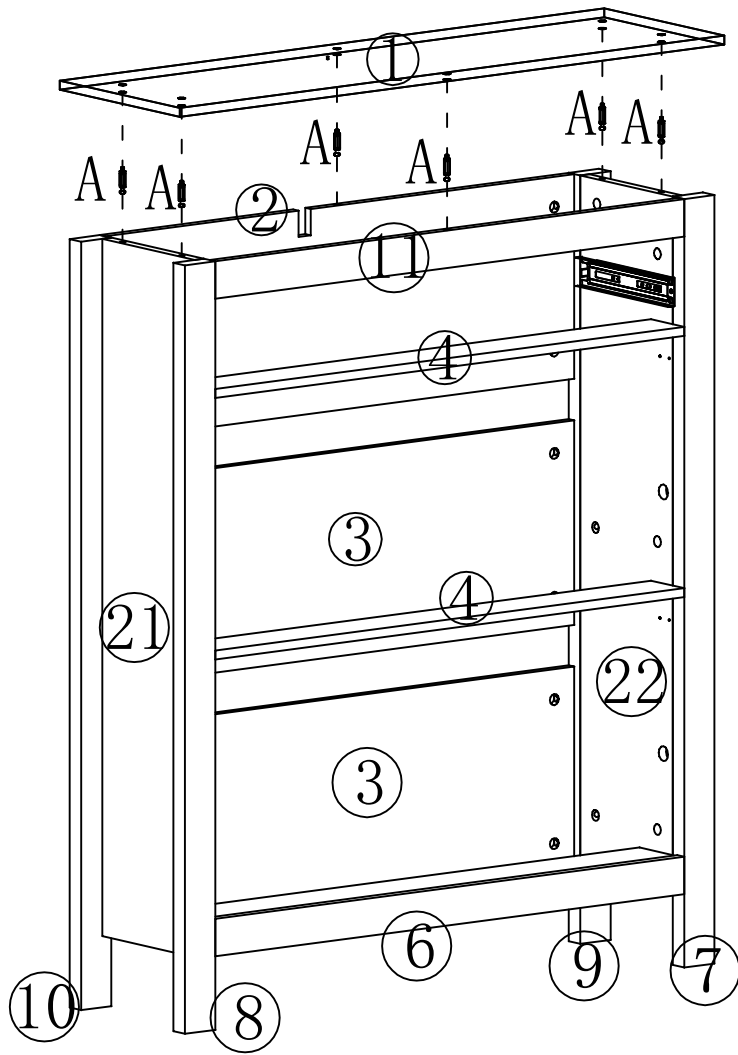



STEP 9*2

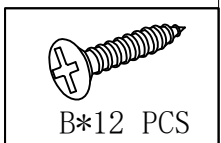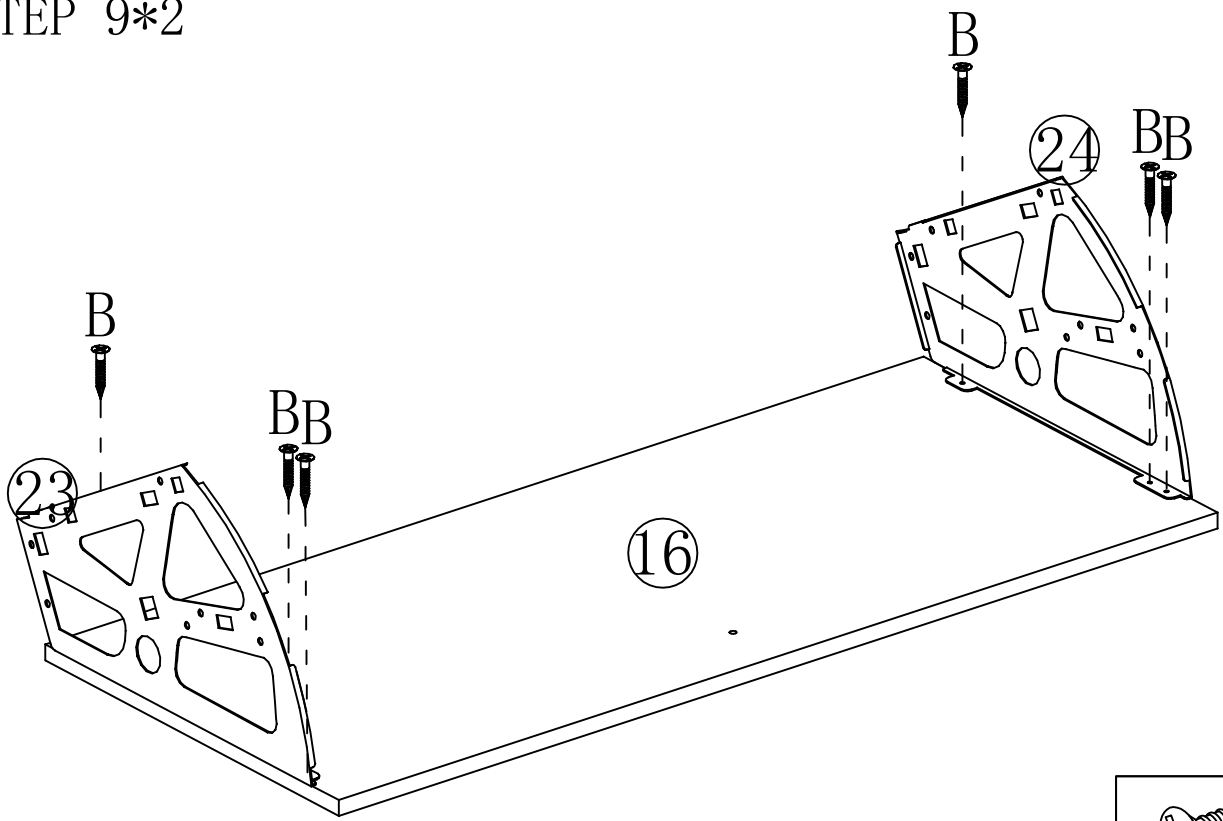

STEP 10*2

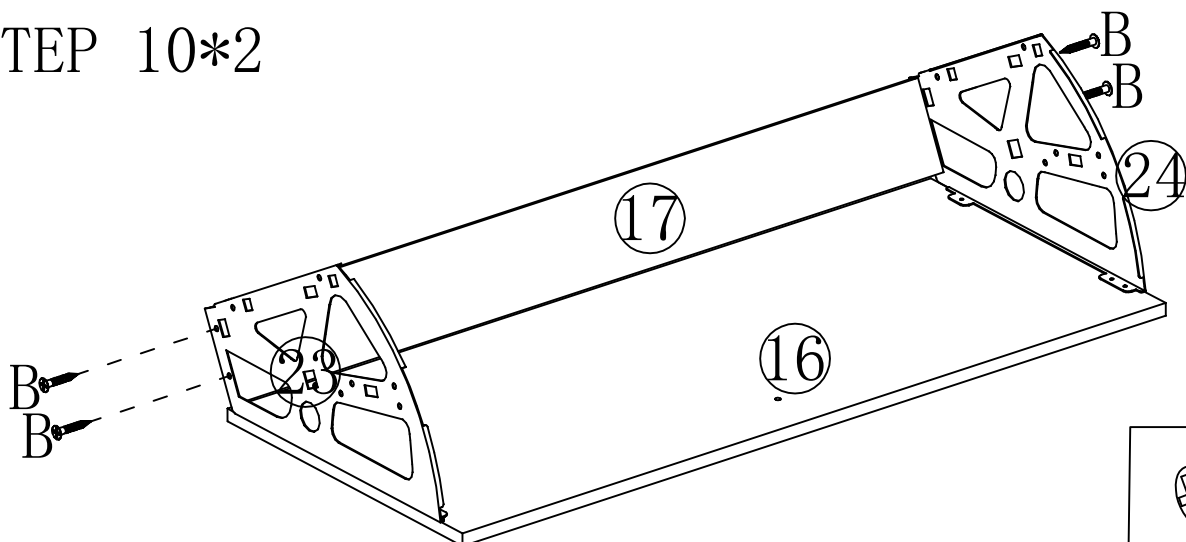


STEP 11*2

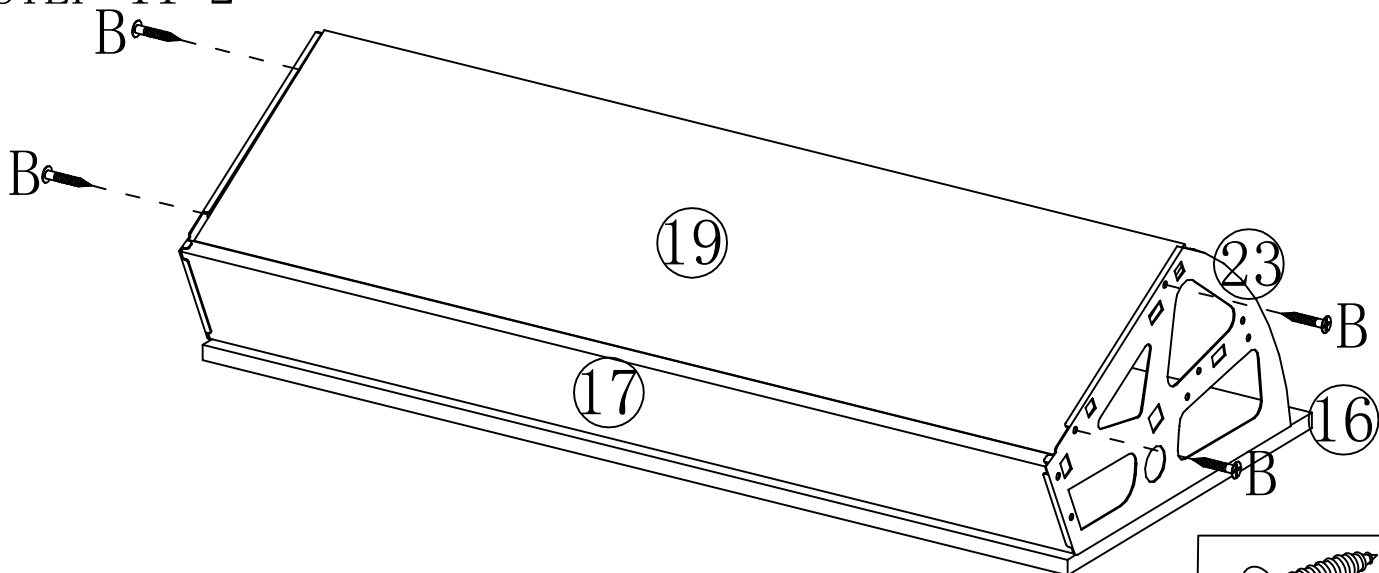


B*8 PCS

STEP 12*2



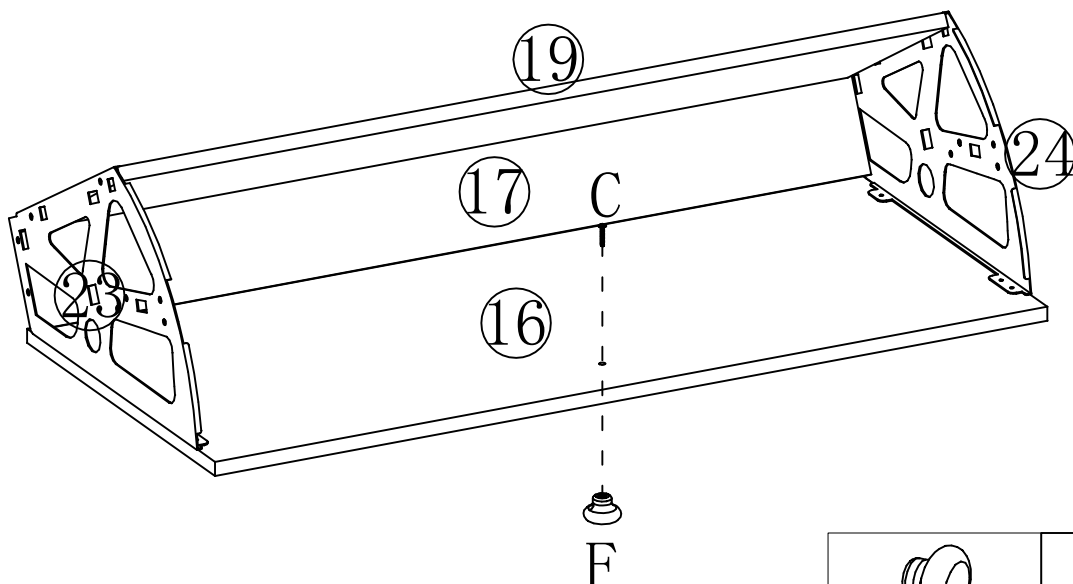


F*2 PCS





C*2 PCS


STEP 13

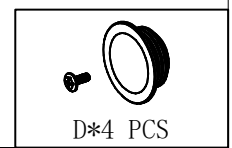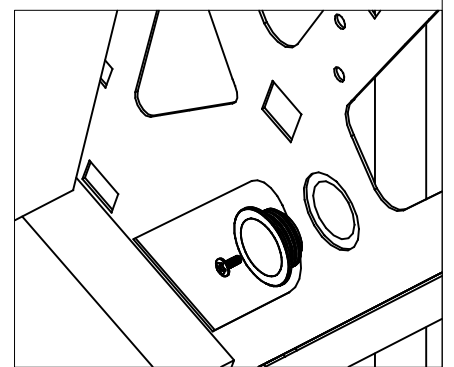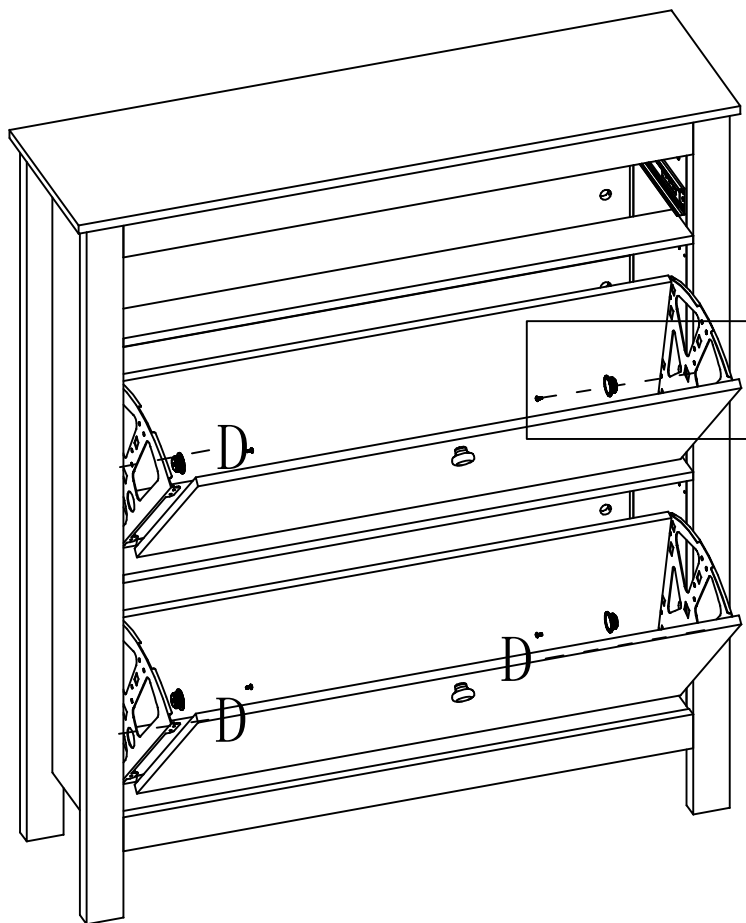


STEP 14

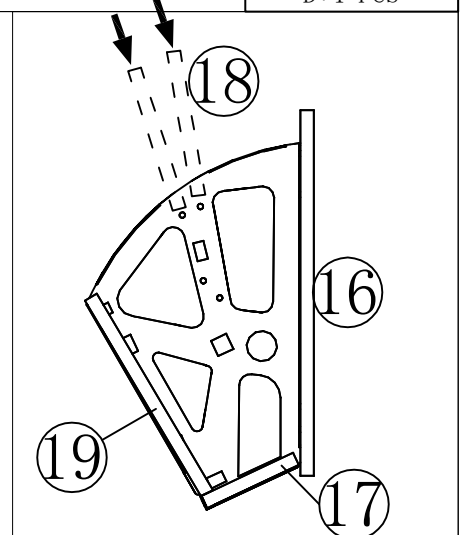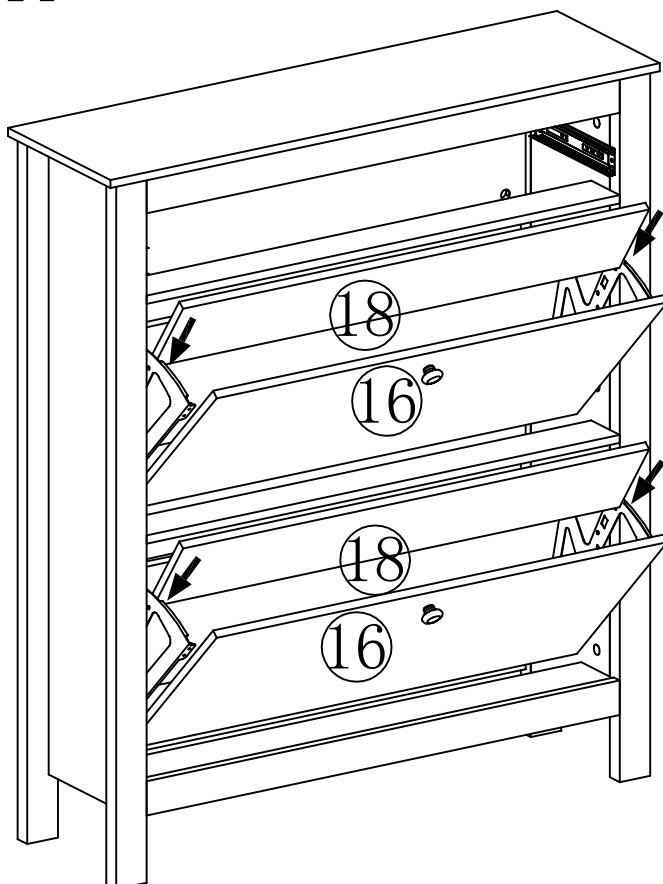


STEP 15

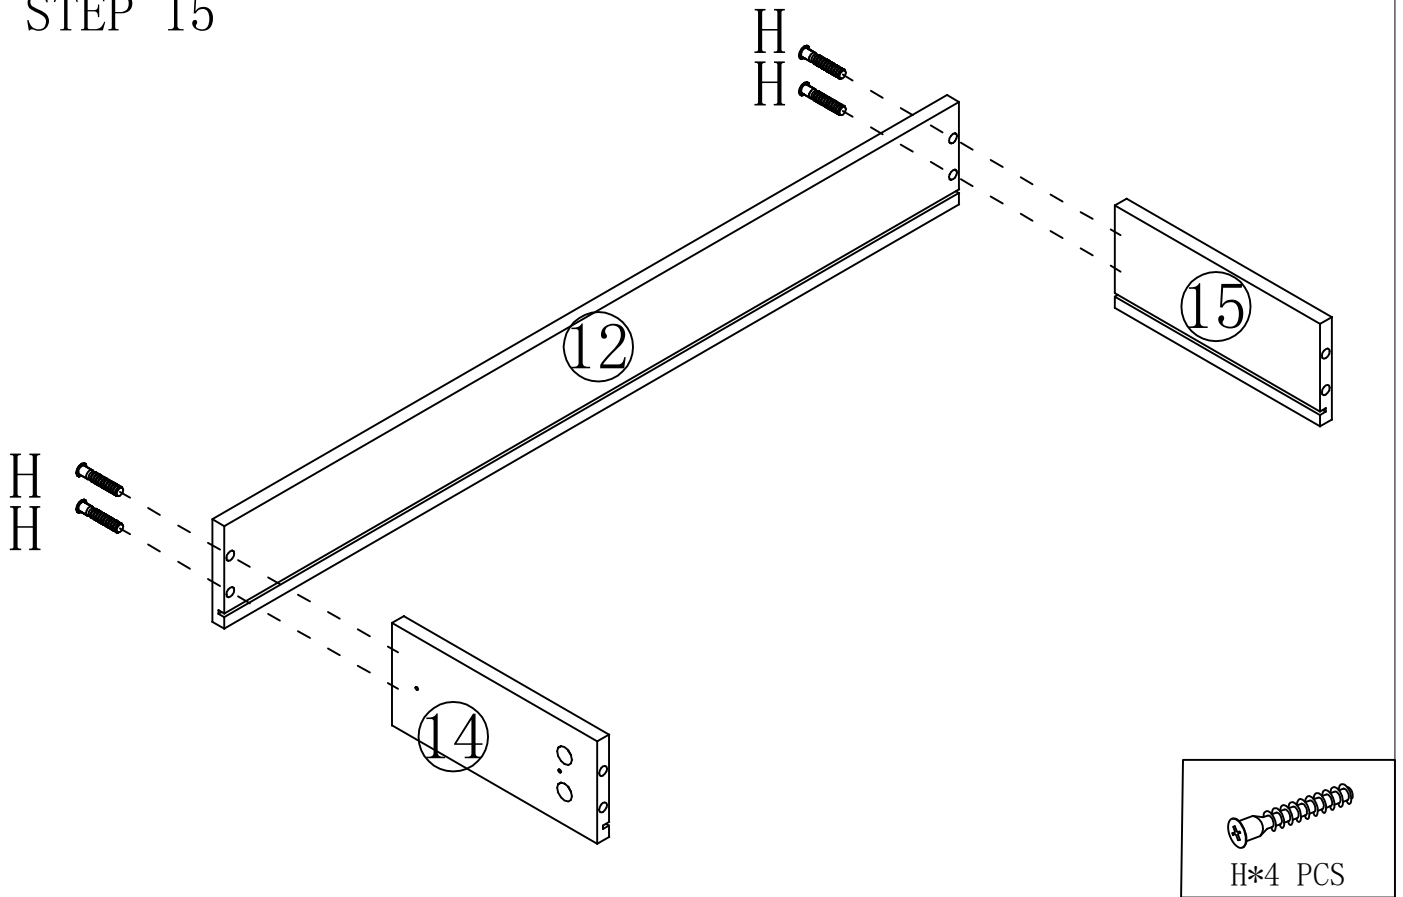


STEP 16

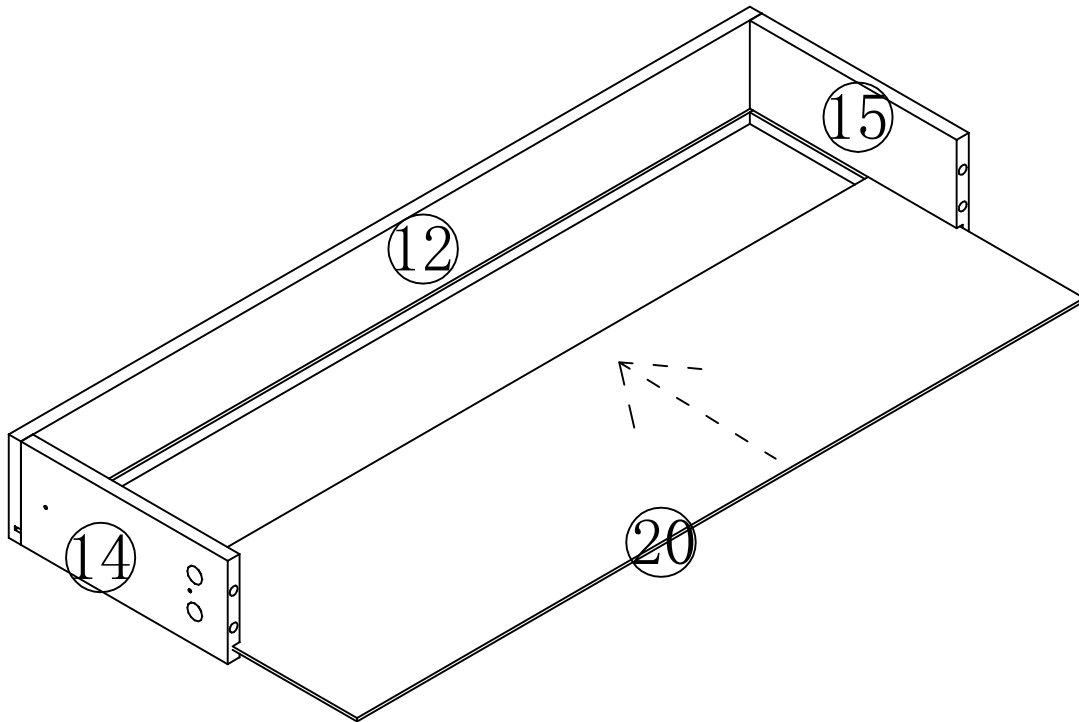


STEP 17

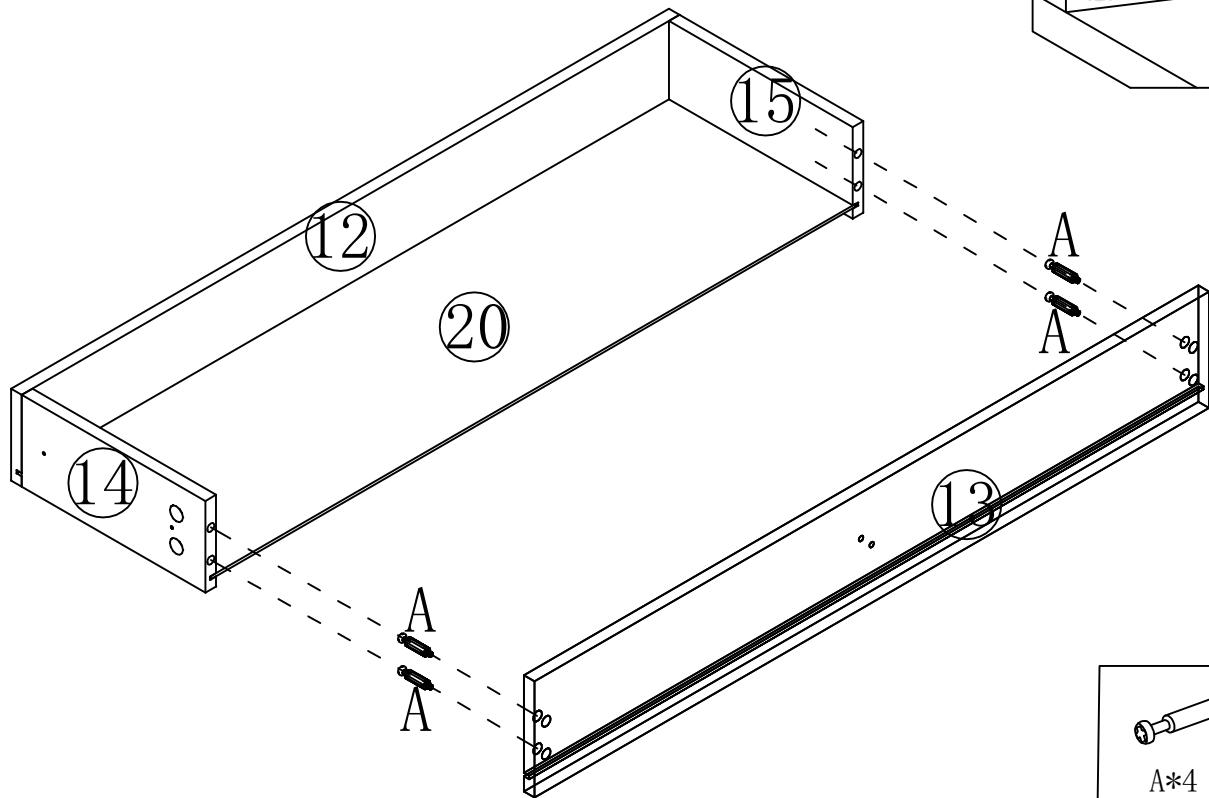




STEP 18

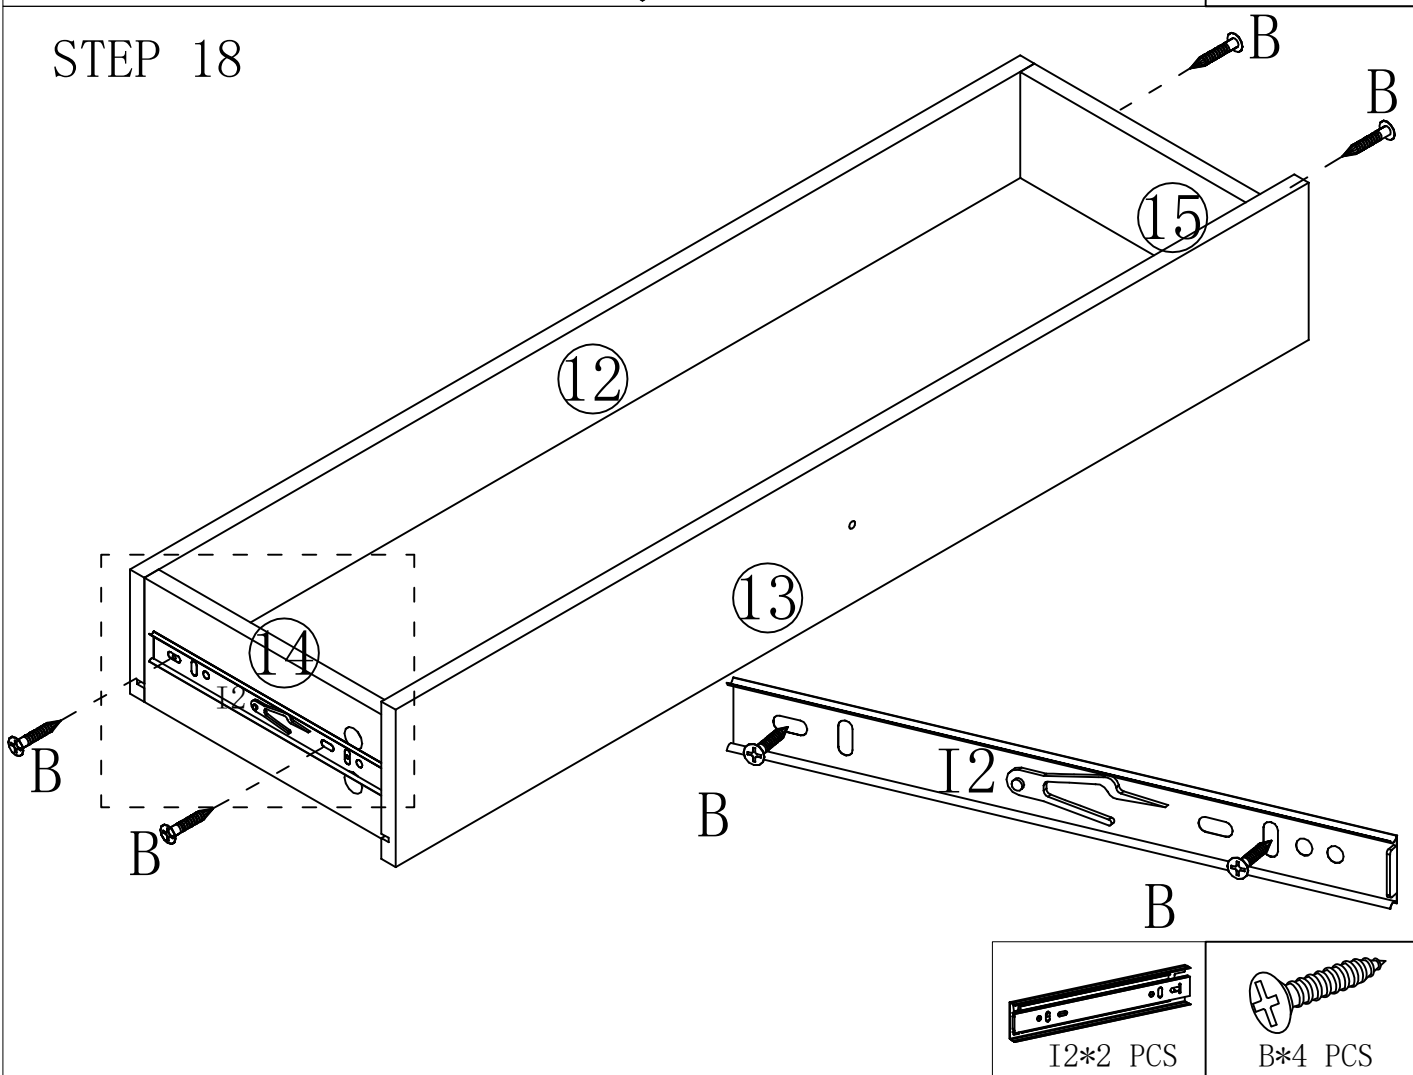



STEP 19

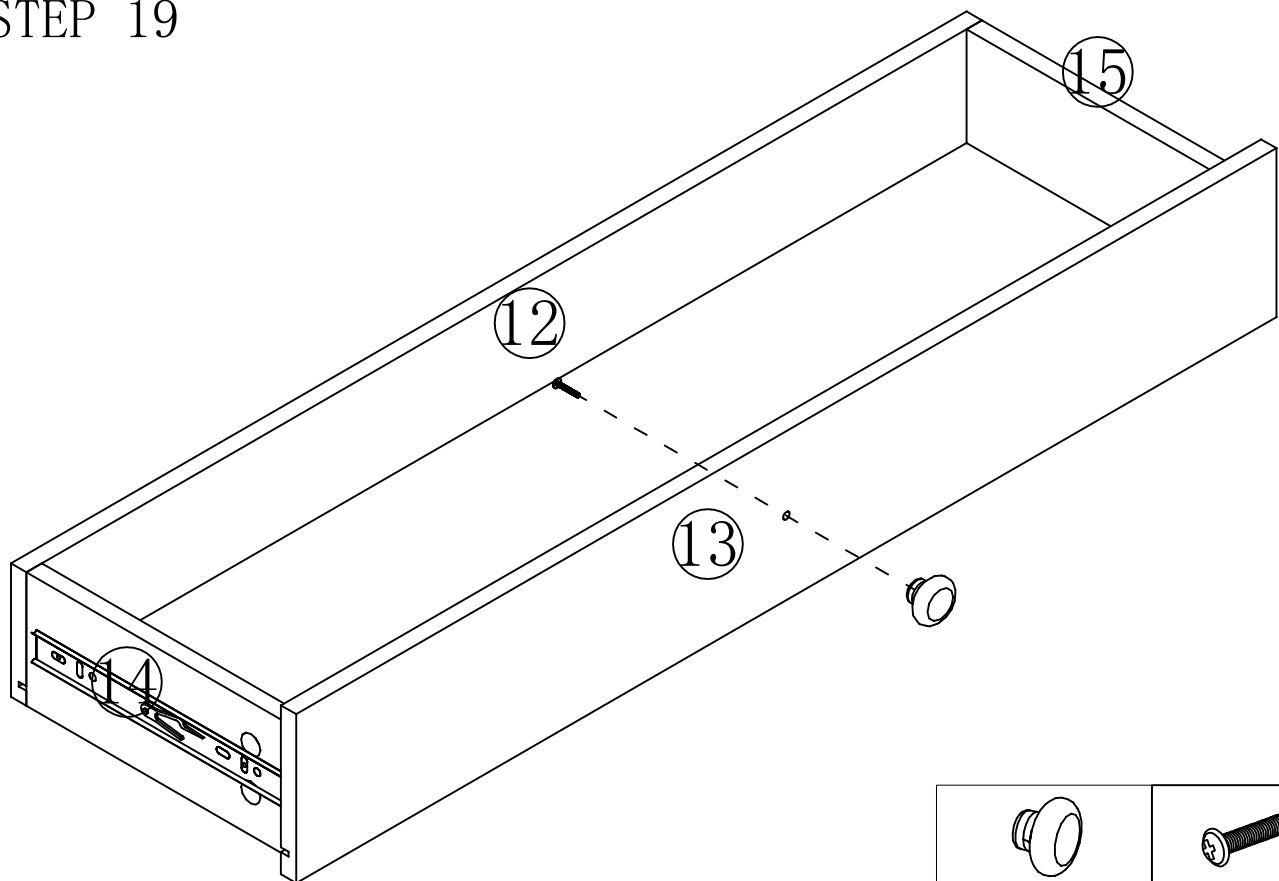

STEP 20

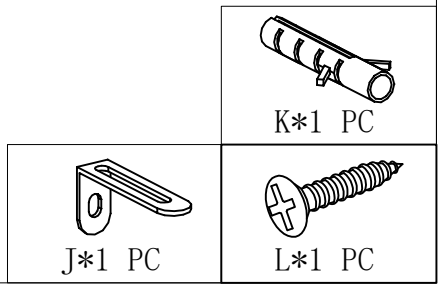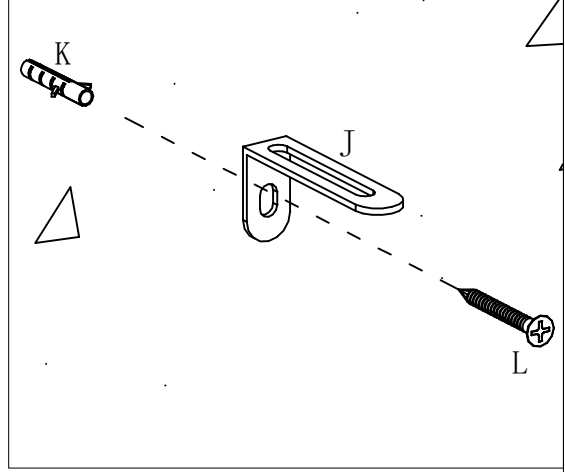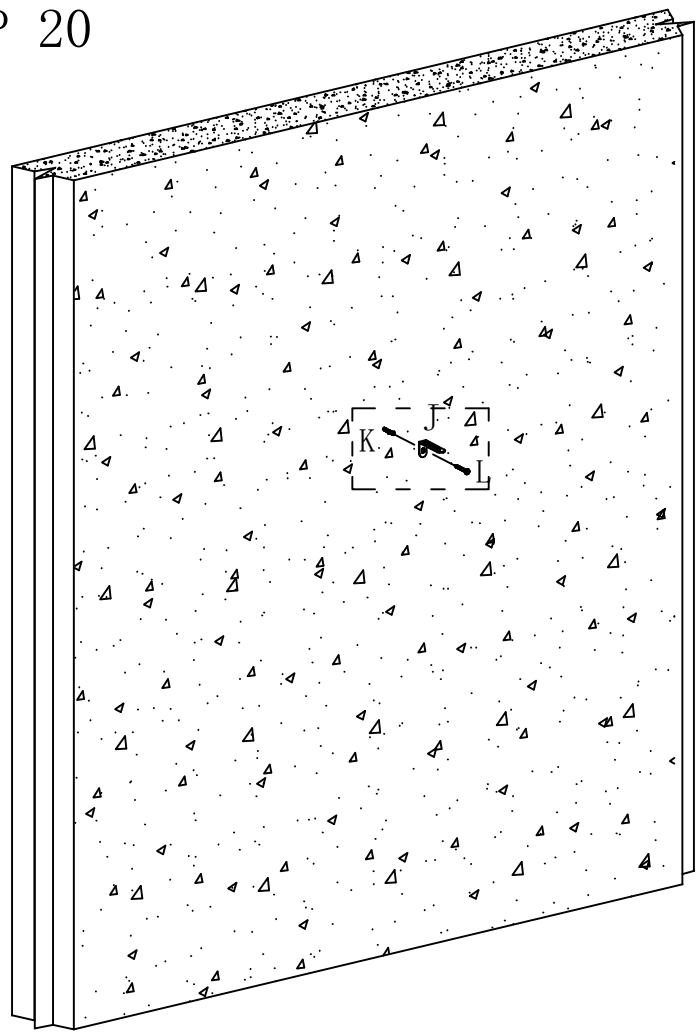

STEP 21

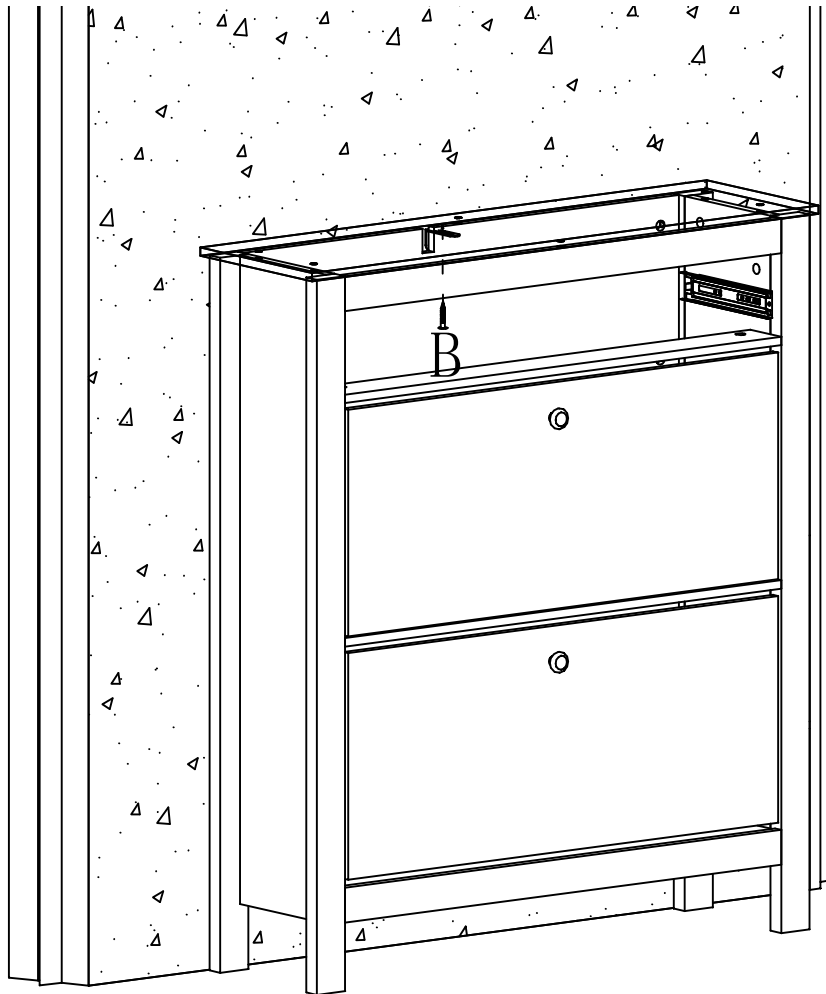

B*1 PC

STEP 22

