



1.0hr

APPROXIMATE ASSEMBLY TIME

2 PERSON OF ASSEMBLY

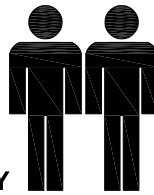


FLOOR AREA
2.0M X 1.0M

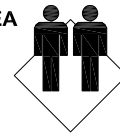


REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS

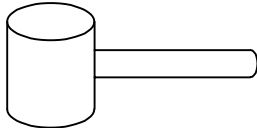


SOFT RUBBER HAMMER



SLOTTED SCREWDRIVER




POZI SCREWDRIVER

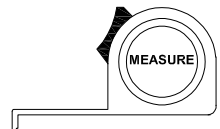

MEASURING TAPE


ASSEMBLED DIMENSIONS

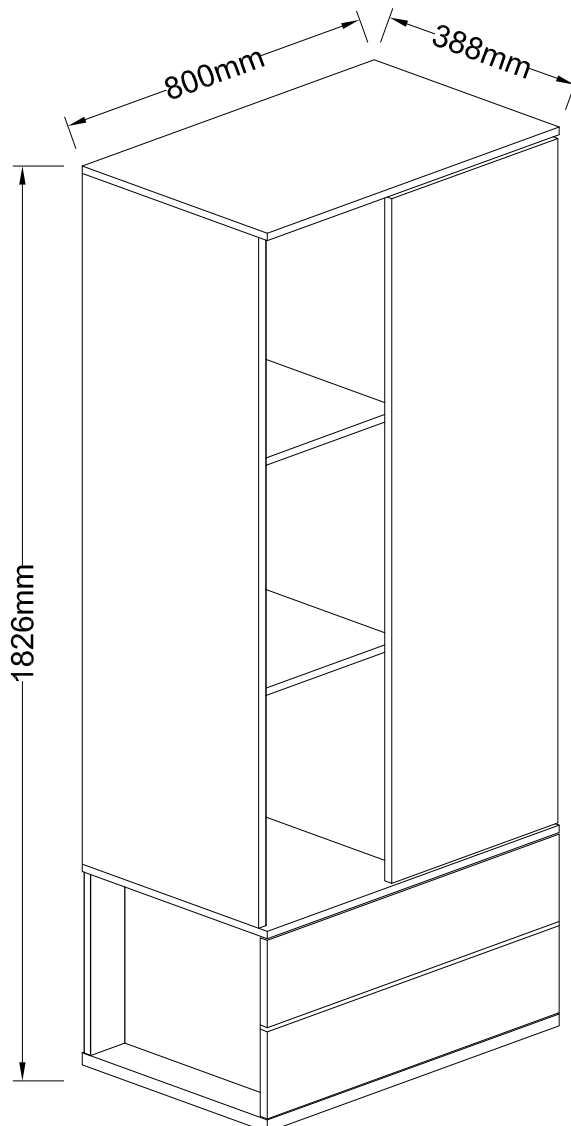










NOTE : THE MAXIMUM WEIGHT THIS PRODUCT CAN HOLD UP TO 25 KGS.







NO.	PART LIST	QTY	NO.	PART LIST	QTY
(A)	TOP RIGHT PANEL	1	(O)	DRAWER FRONT	2
(B)	TOP LEFT PANEL	1	(P)	DRAWER BACK PANEL	2
(C)	CENTRE PANEL	3	(Q)	DRAWER RIGHT PANEL	2
(D)	TOP PANEL	1	(R)	DRAWER LEFT PANEL	2
(E)	FIXED SHELF	2	(S)	DRAWER BOTTOM SUPPORT	4
(F)	TABLE TOP	1	(T)	DRAWER BASE	2
(G)	BOTTOM RIGHT PANEL	1			
(H)	BOTTOM LEFT PANEL	1			
(I)	BOTTOM PANEL	1			
(J)	DOOR PANEL	1			
(K)	WRAPPING LEG	4			
(L)	TOP BACK PANEL	6			
(M)	BOTTOM BACK PANEL	2			
(N)	BACK SUPPORT	2			

PARTS LIST

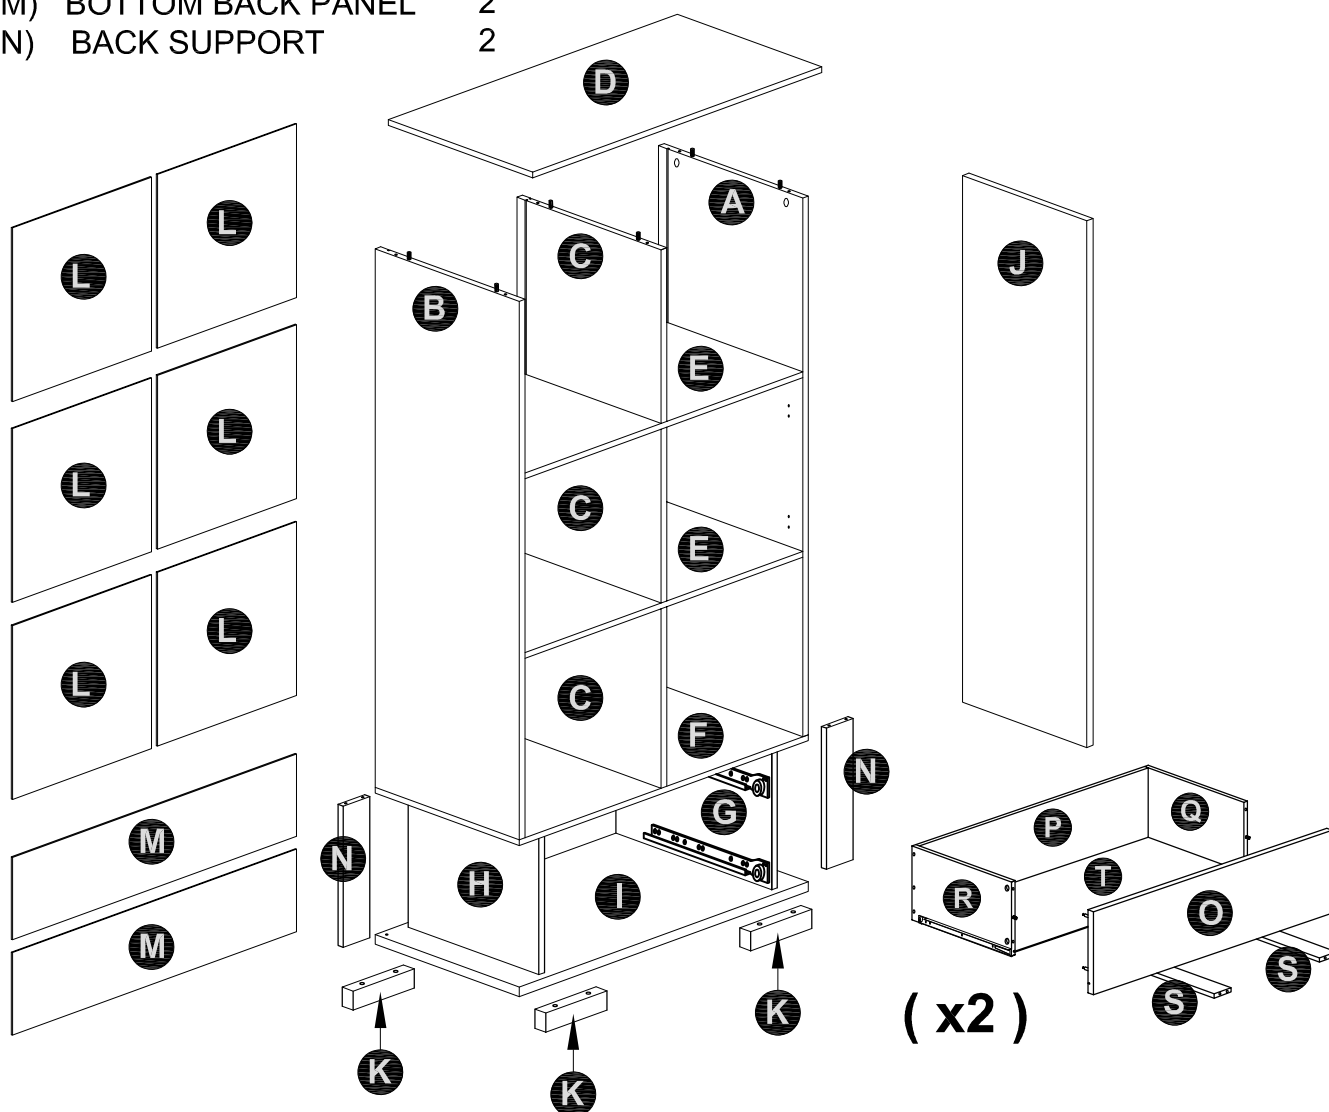




HARDWARE LIST

					
2X 1	22X Dia.15mm 2	8X Dia.15mm 3	30X M6.5 4	52X Dia.6 x 30mm 5	4X 6 FOOT
GLUE 10CC	LARGE CAMLOCK	SMALL CAMLOCK	QUICKFIT	WOOD DOWEL	
					
8X M8 x 32mm 7	18X M8 x 38mm 8	12X M4 x 16mm 9	2X 10 ANTI TIP STRAP	3X 11 ADJUSTABLE HINGE	
PAN HEAD SCREW	FLAT HEAD SCREW	FLAT HEAD SCREW			
					
4X M3 x 16mm 12	2X Dia 17mm 13	30X M3 x 20mm 14	30X 15 BACKPLY STOPPER	20X M3.5 x 25mm 16	
FLAT HEAD SCREW	UNIVERSAL CAP	FLAT HEAD SCREW		FLAT HEAD SCREW	
					
		1X 17 PVC H			

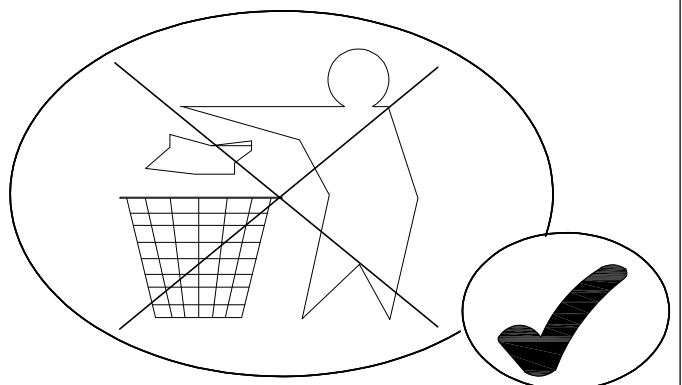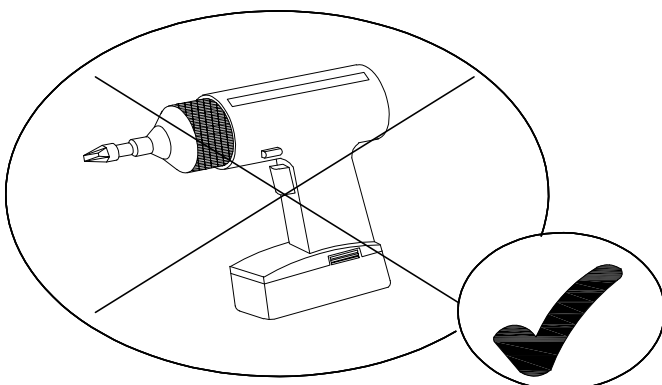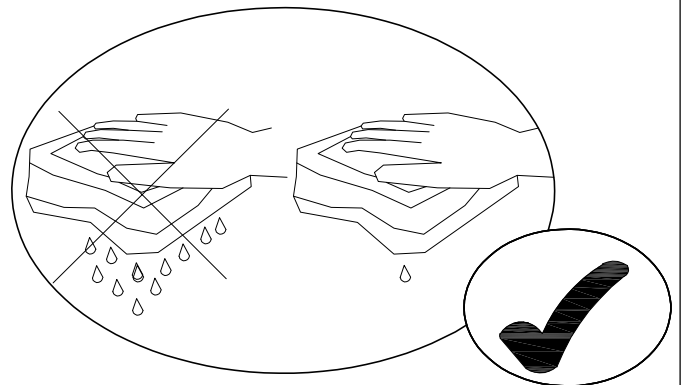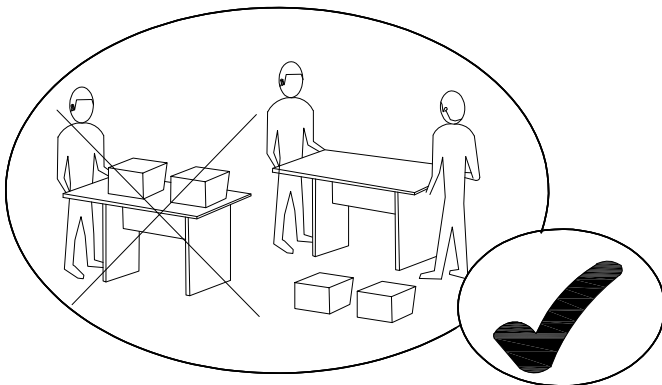
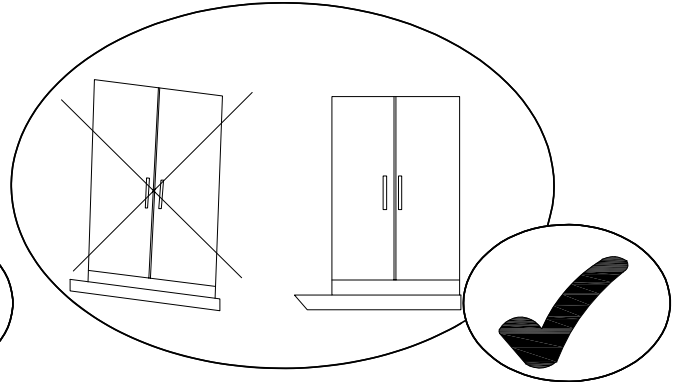
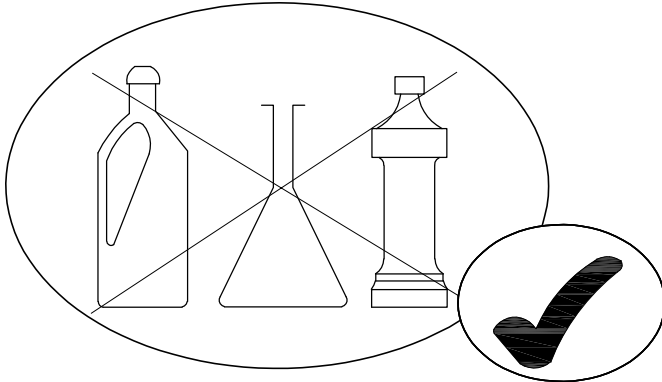


SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT


CAM-LOCK

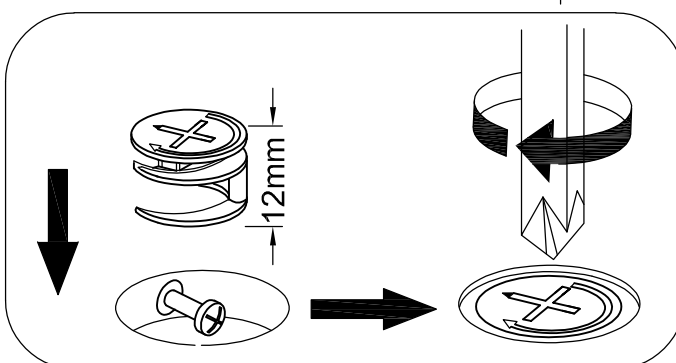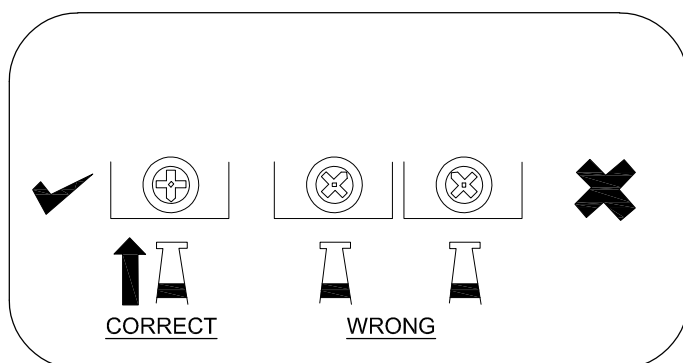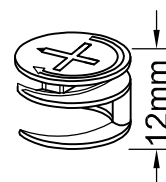


**DRAWER
CAM-LOCK**

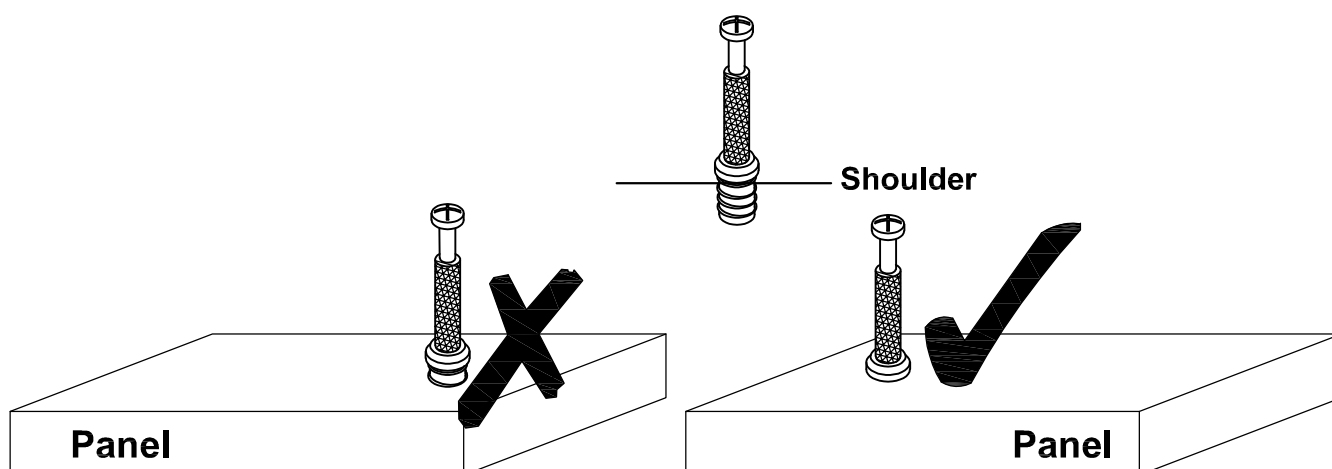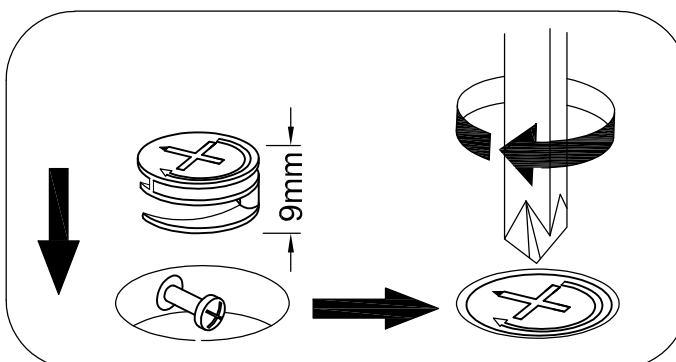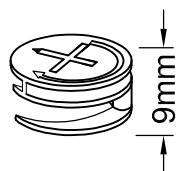


STEP 1

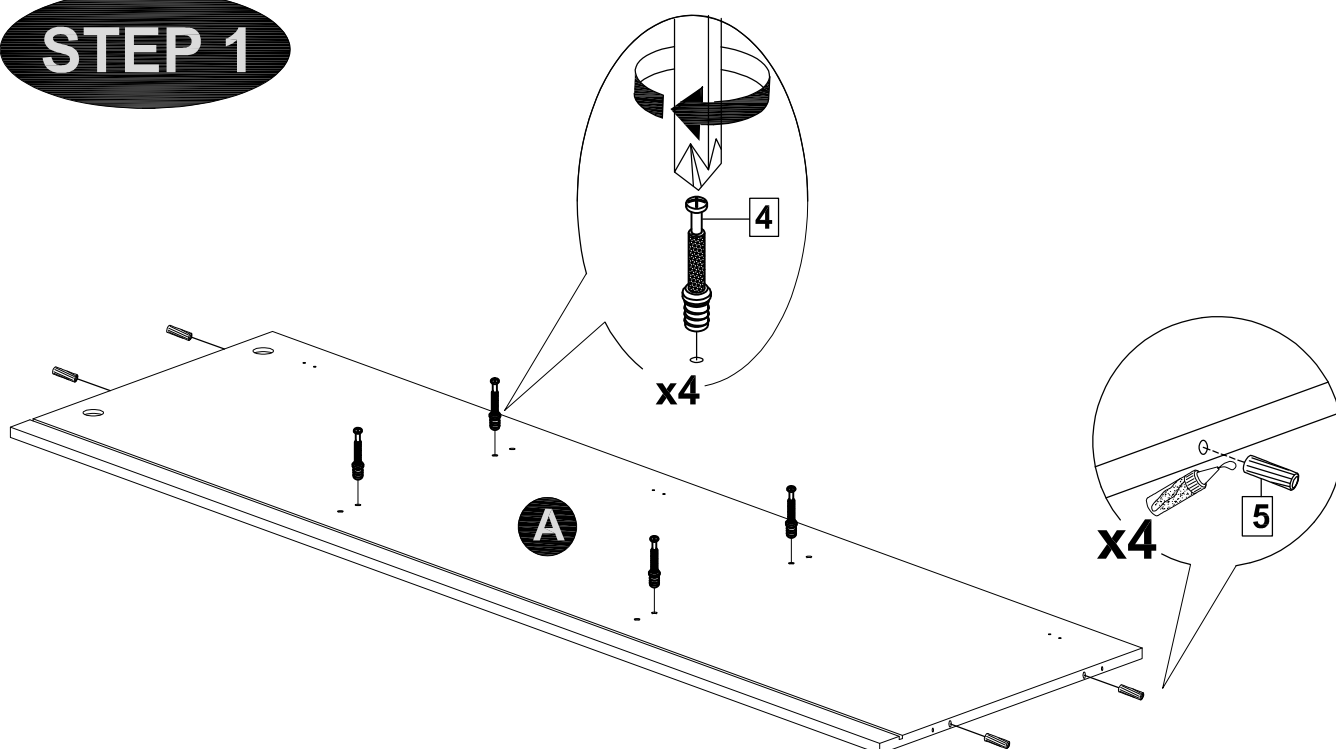


STEP 2

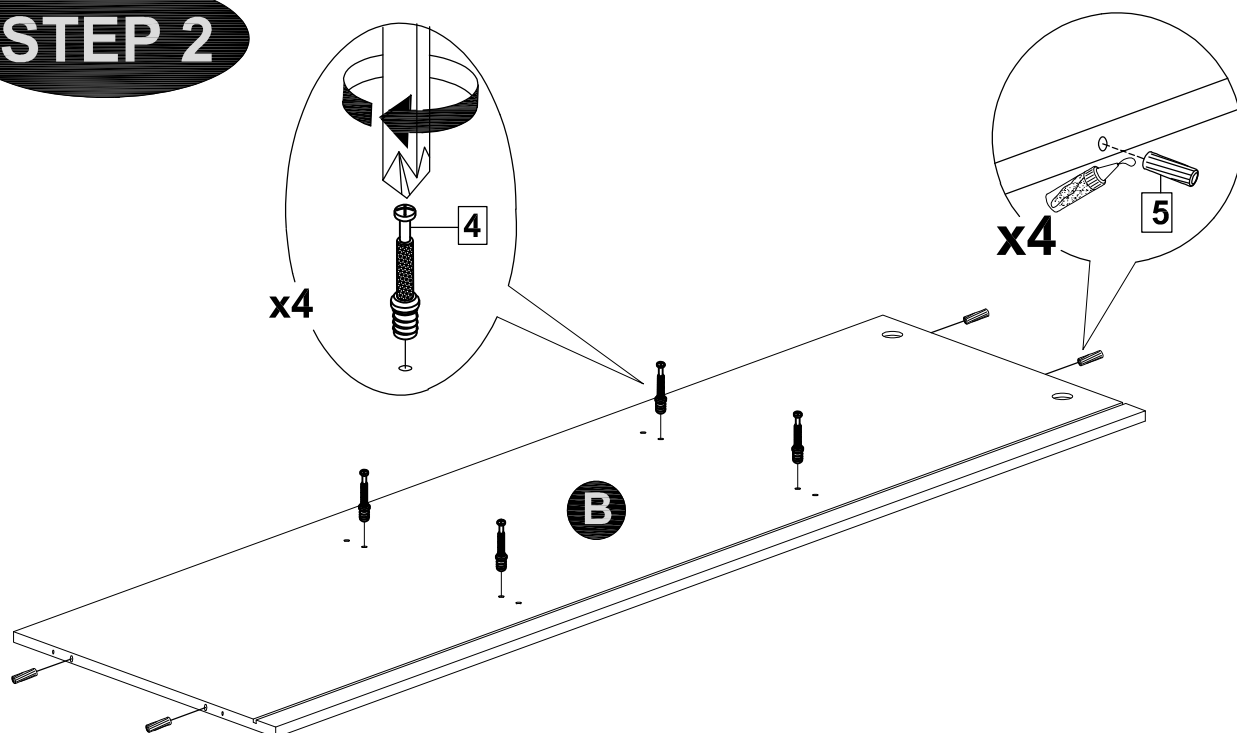

STEP 3

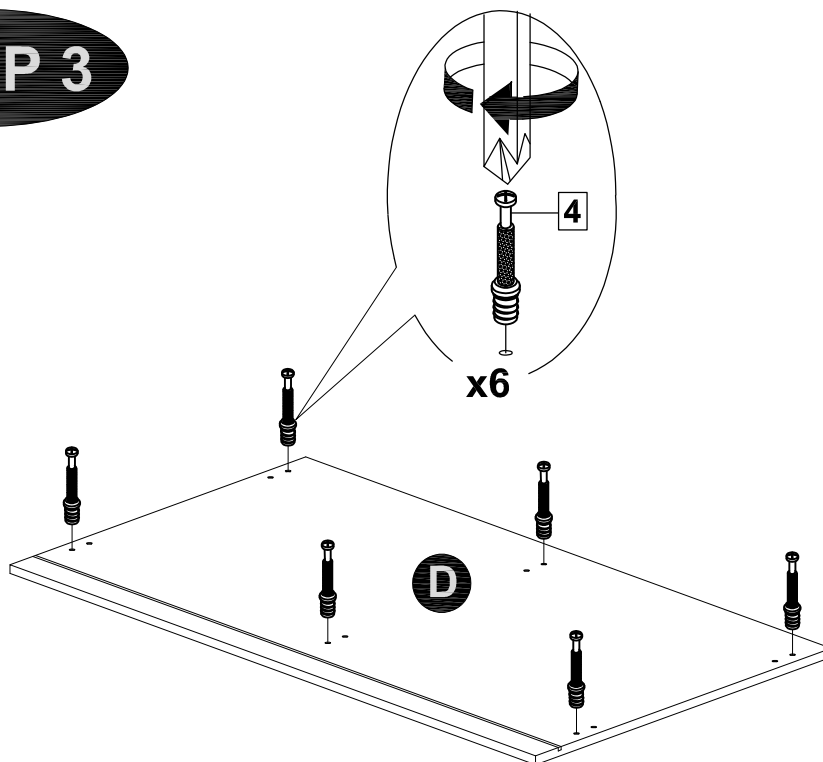


STEP 4

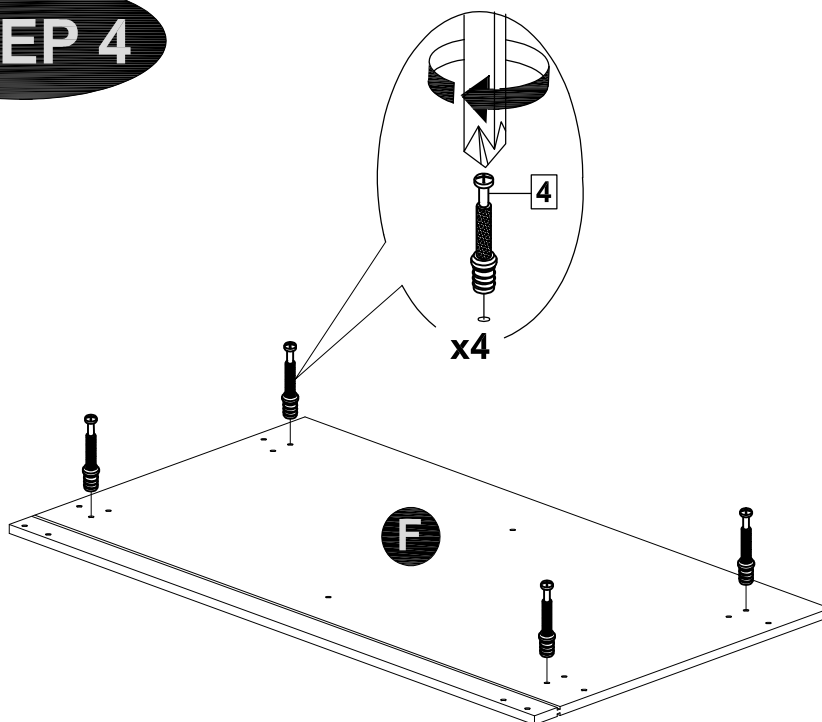

STEP 5


(x3)

x12

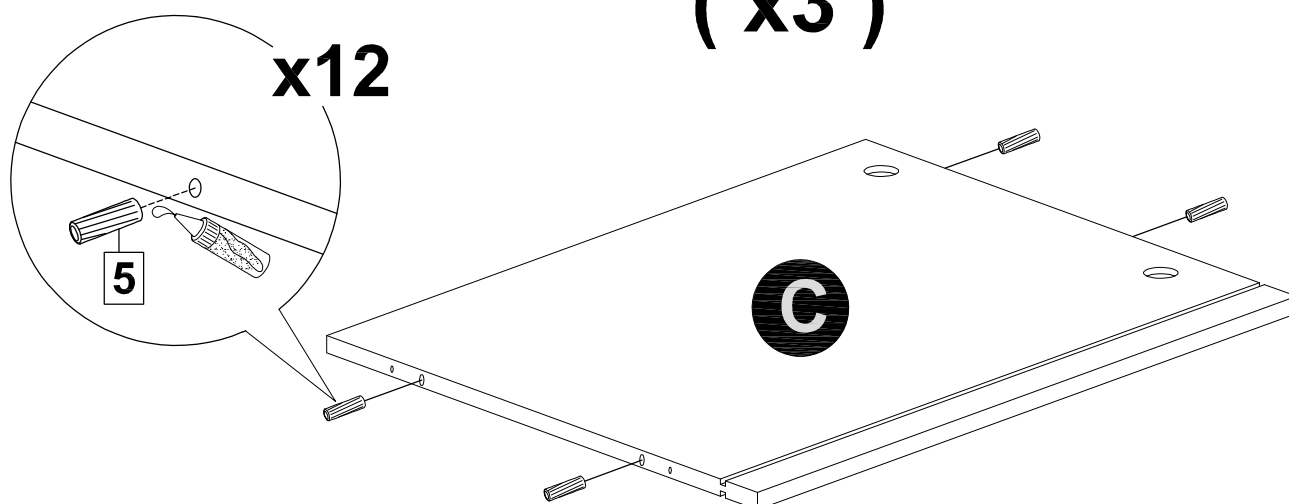


STEP 6


x4

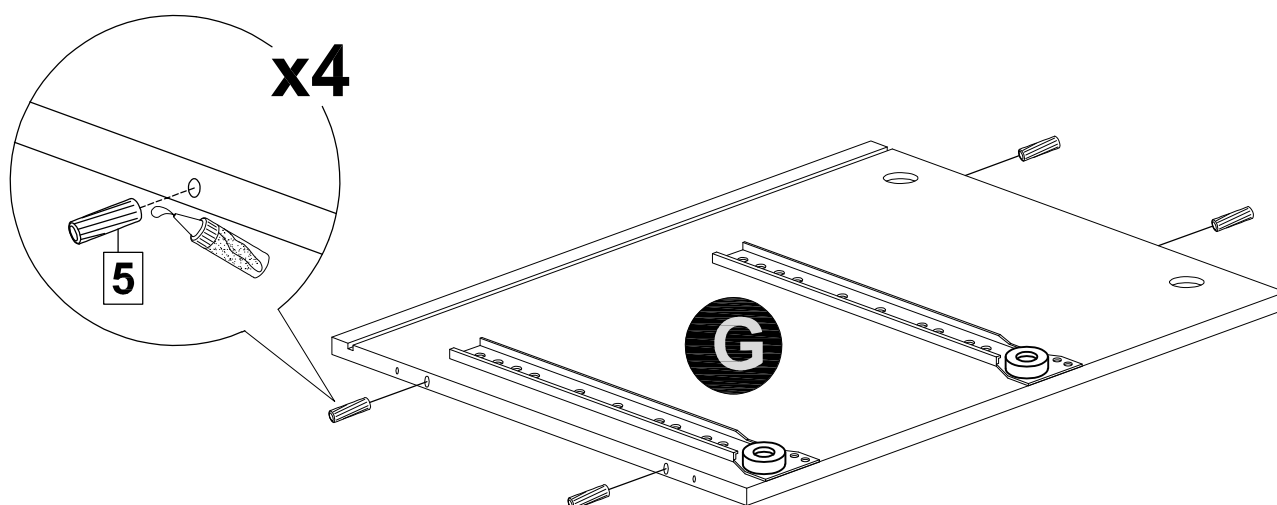


STEP 7

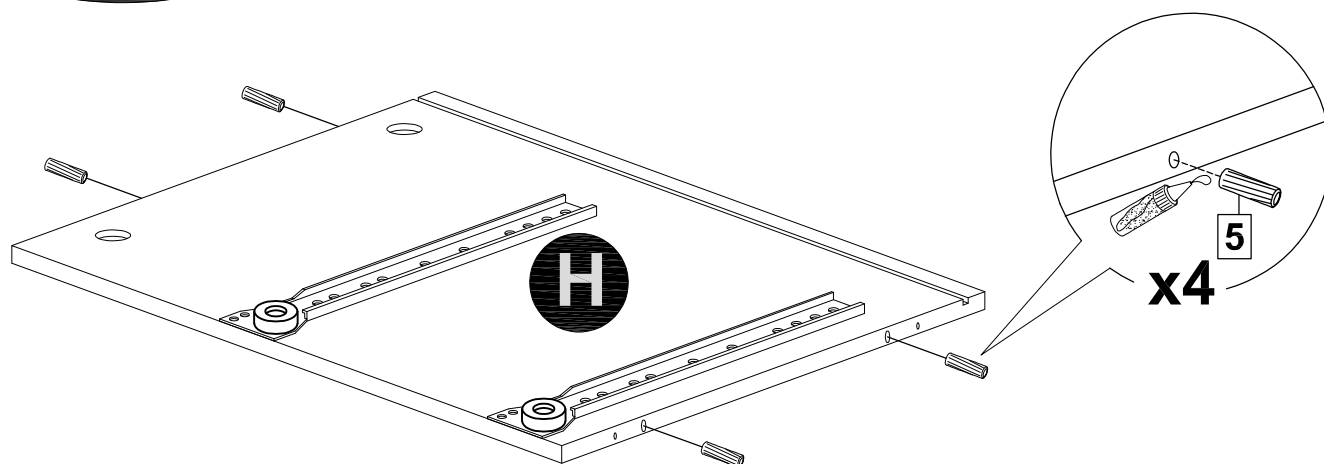


STEP 8

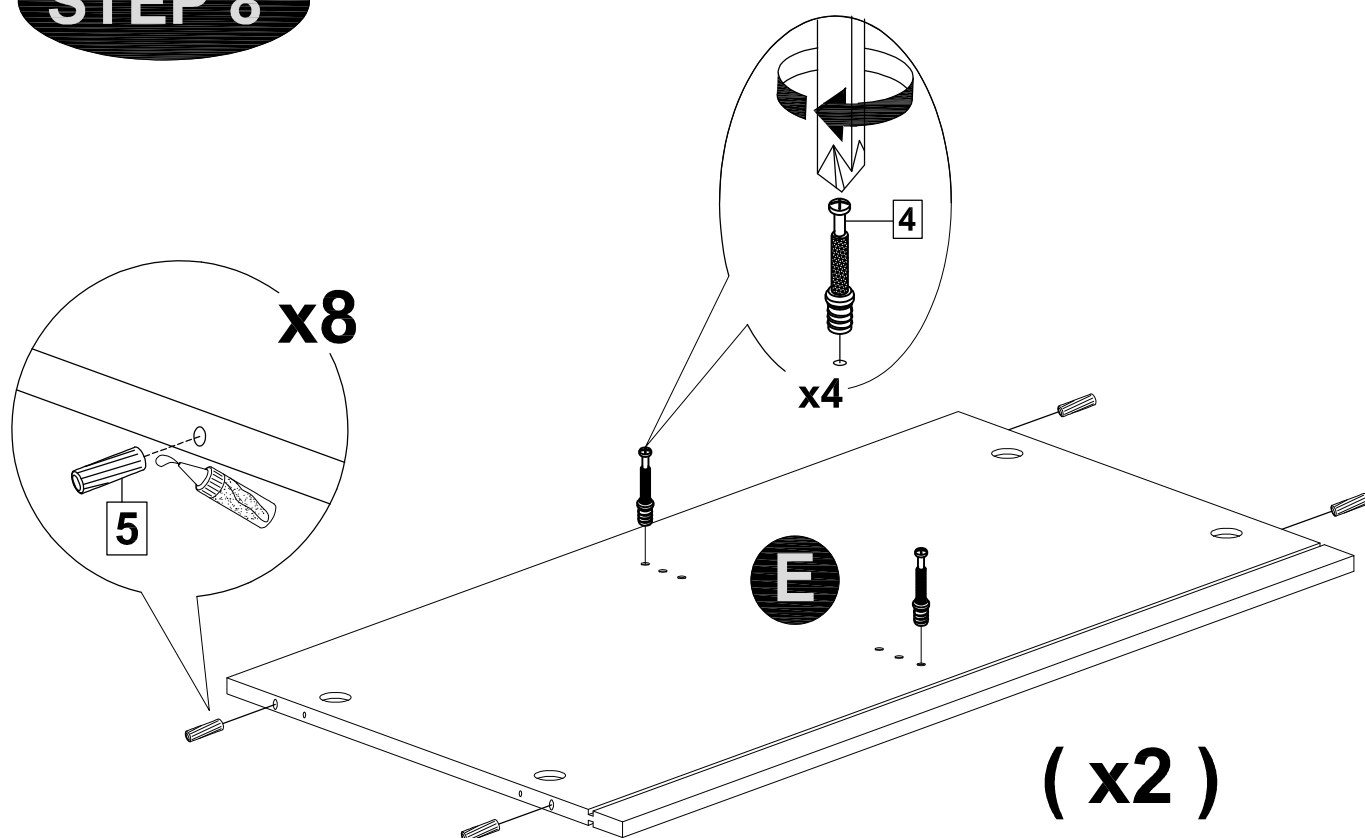


STEP 9

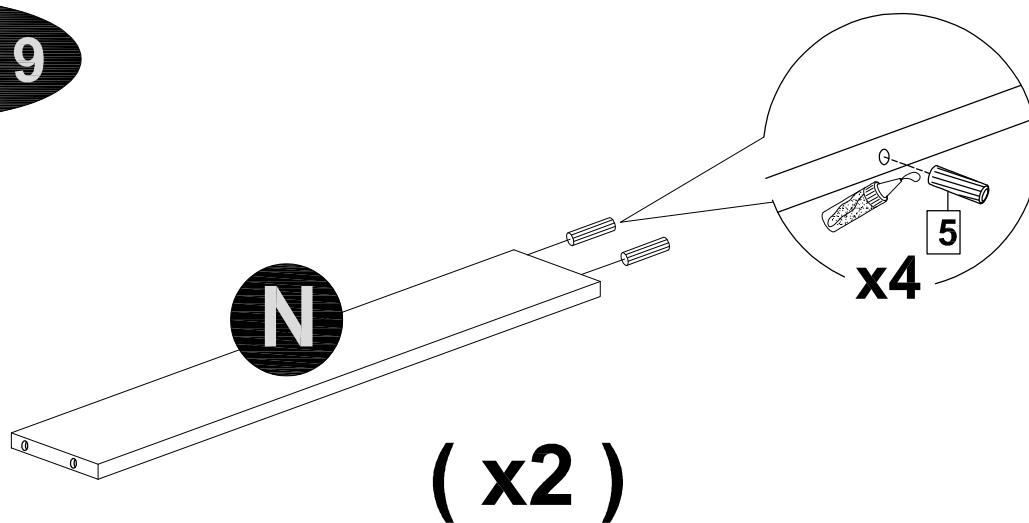


STEP 10

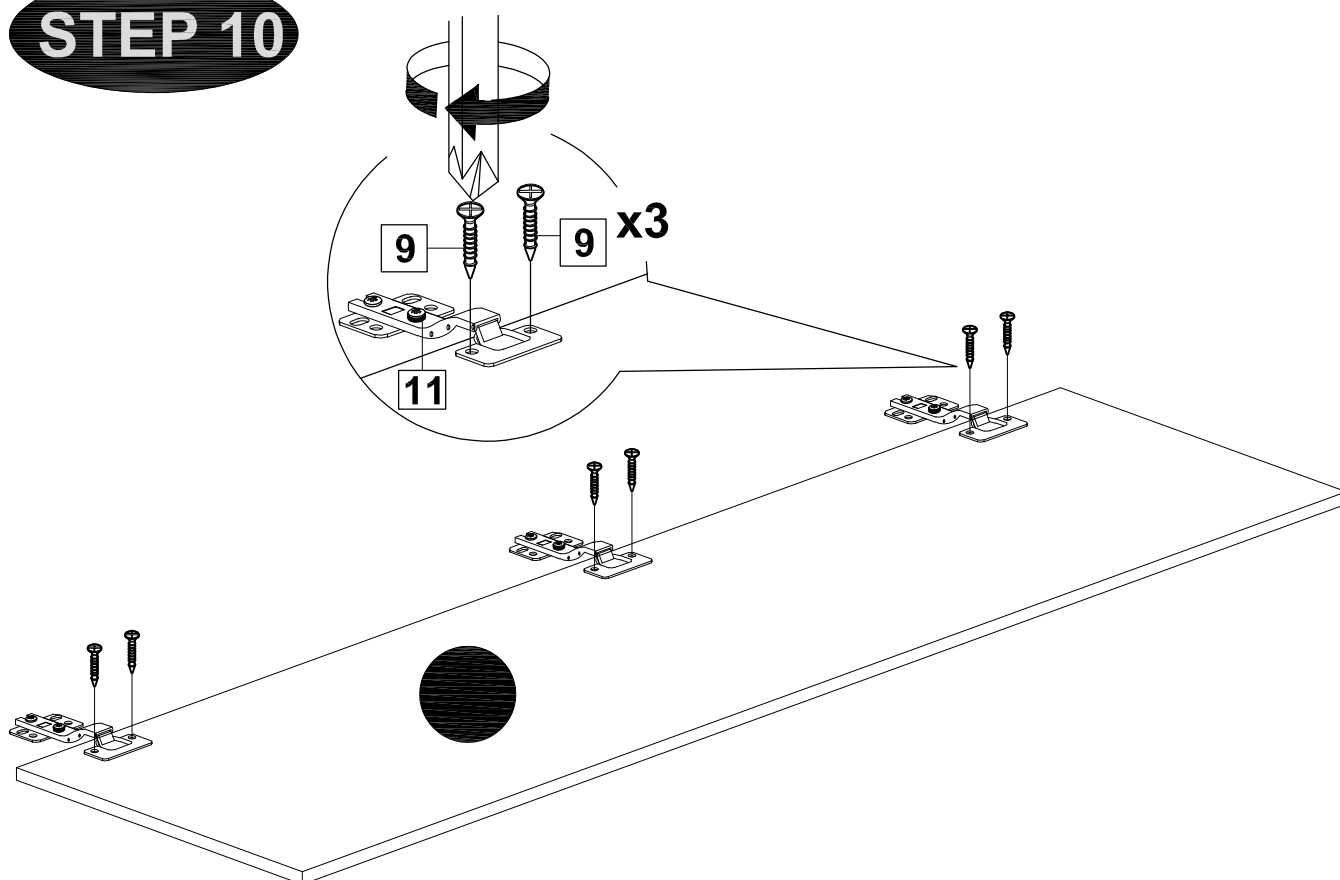


STEP 11

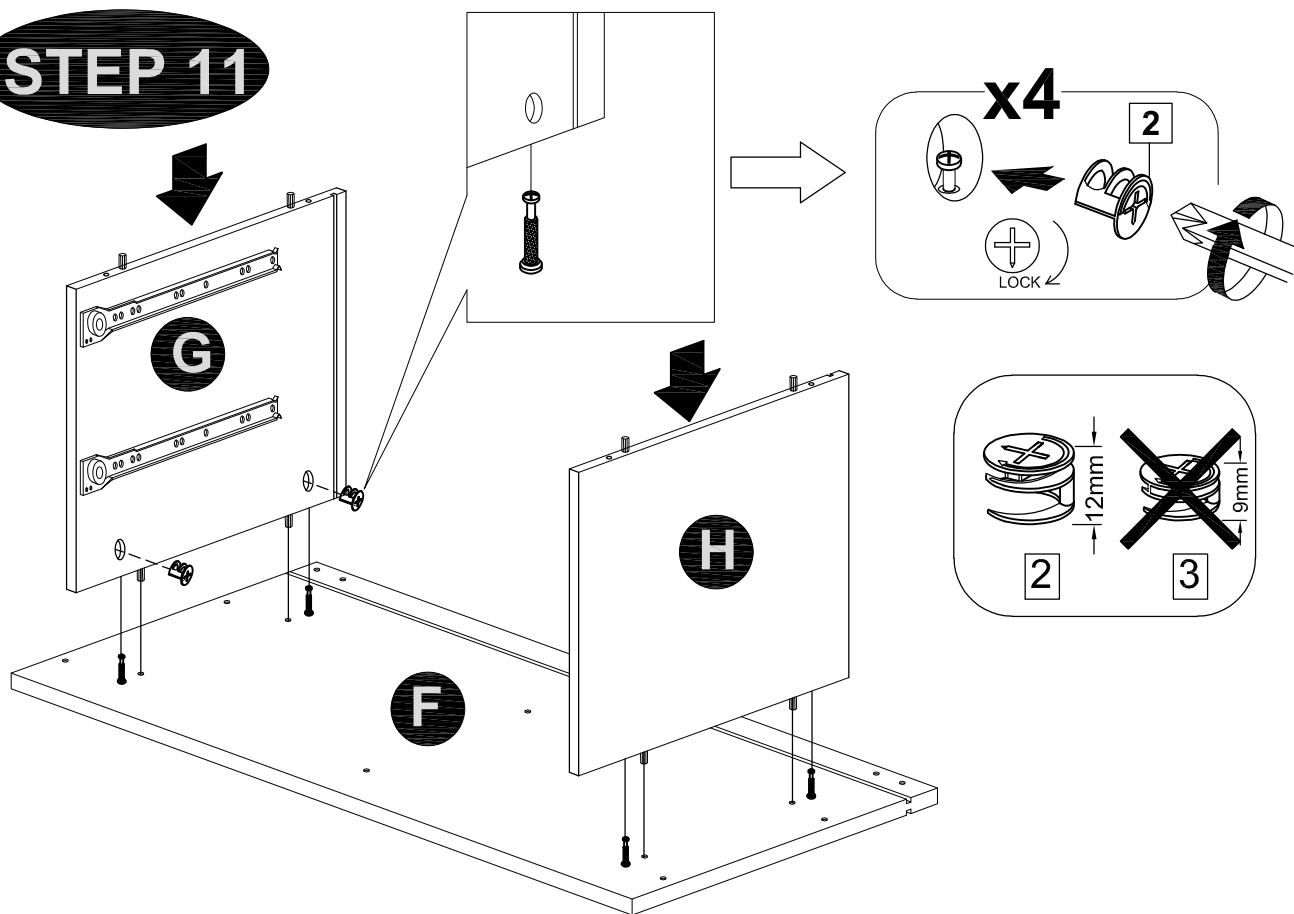


STEP 12

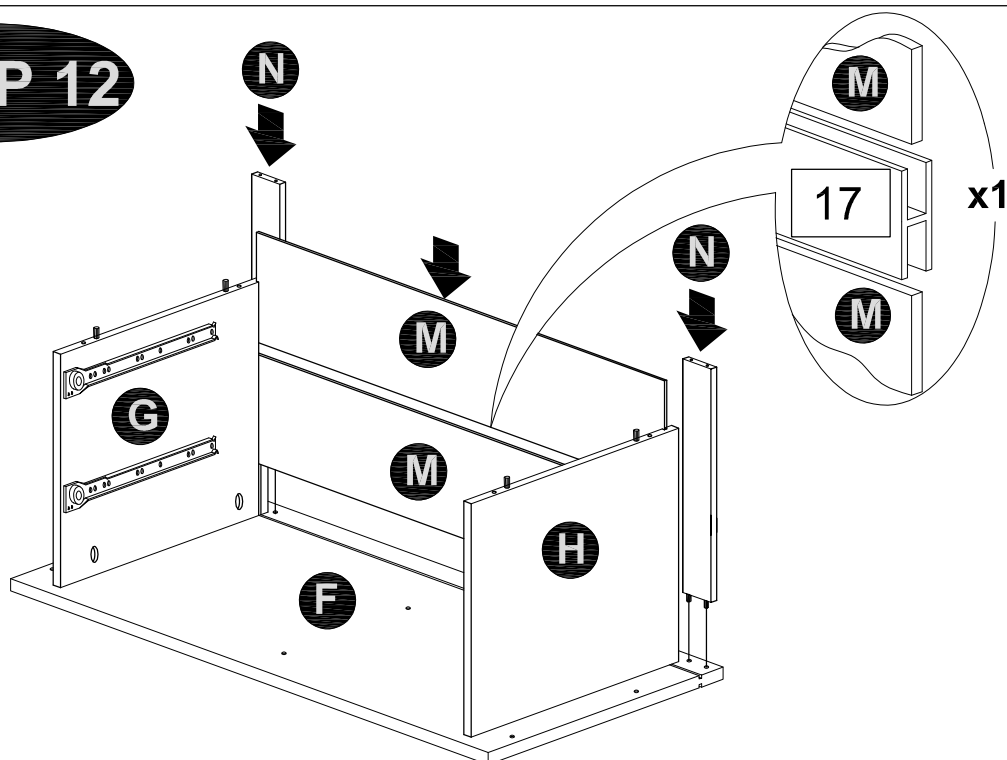


STEP 13

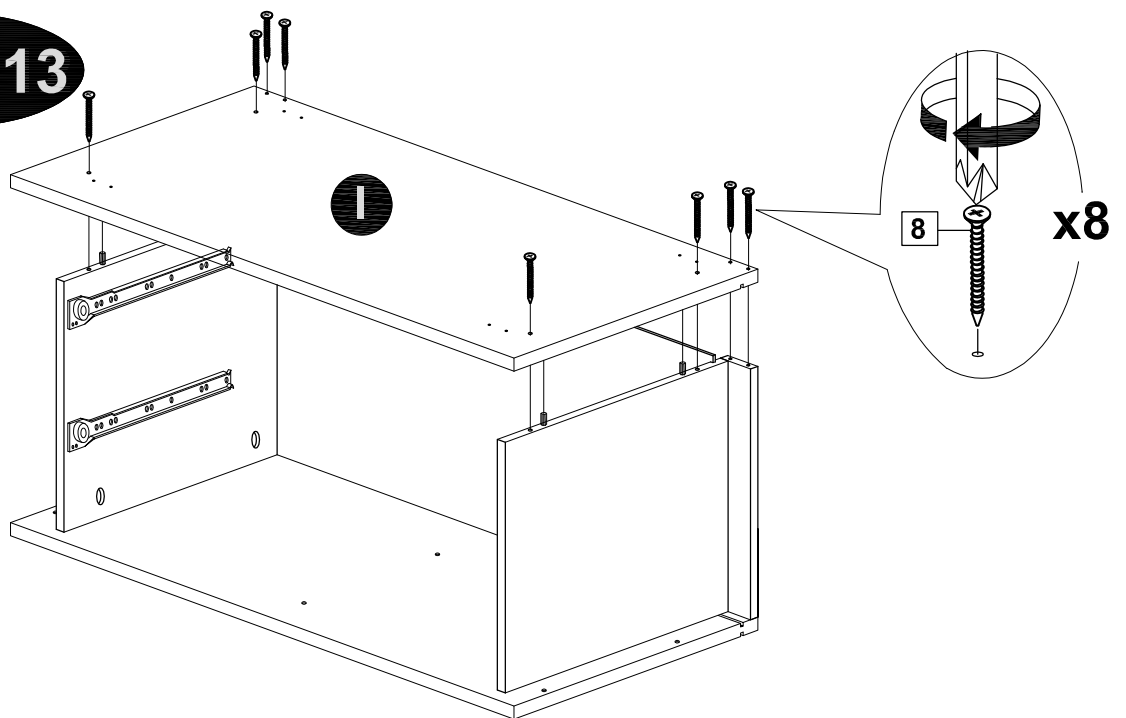


STEP 14

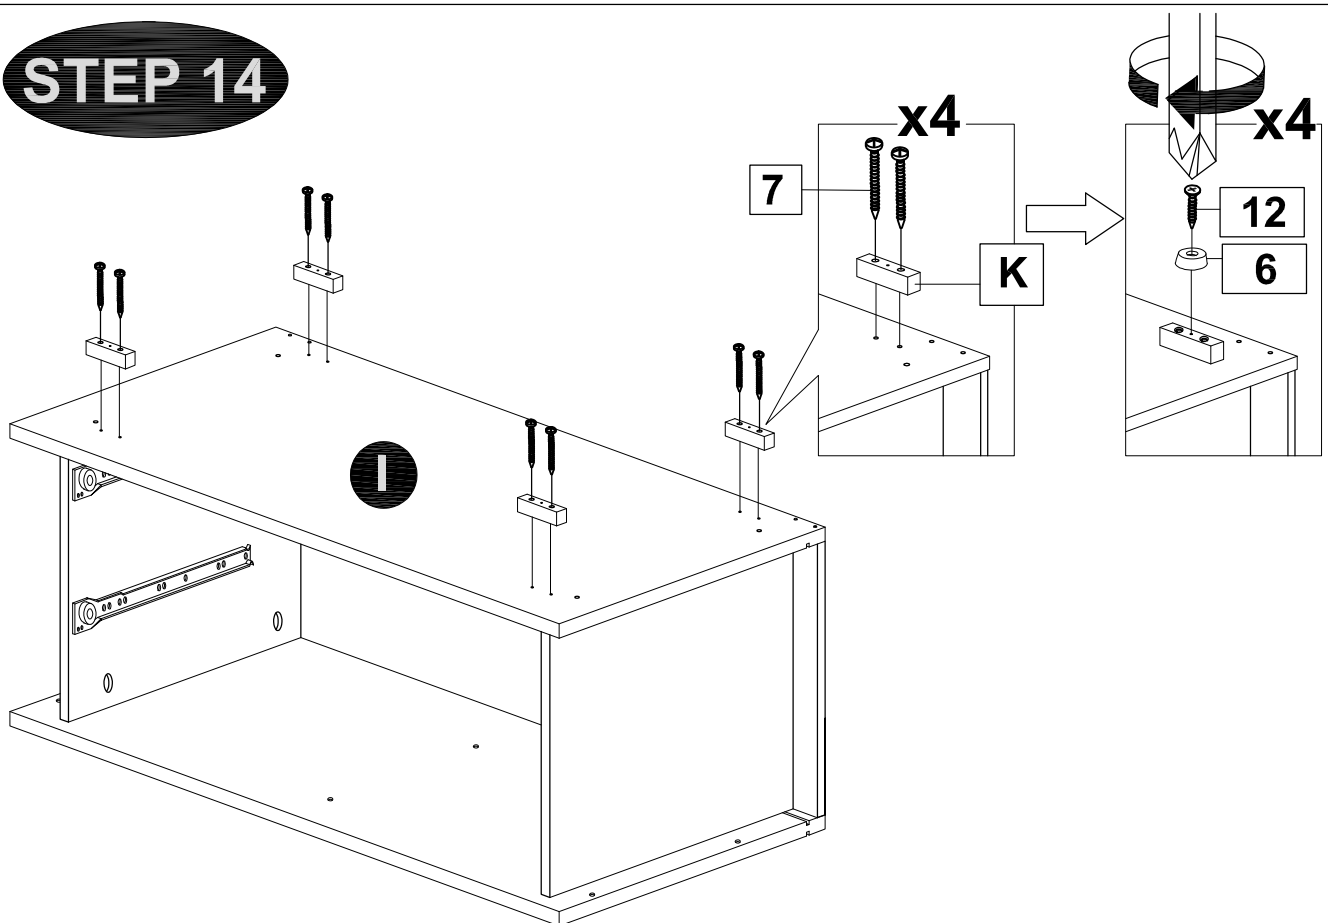


STEP 15

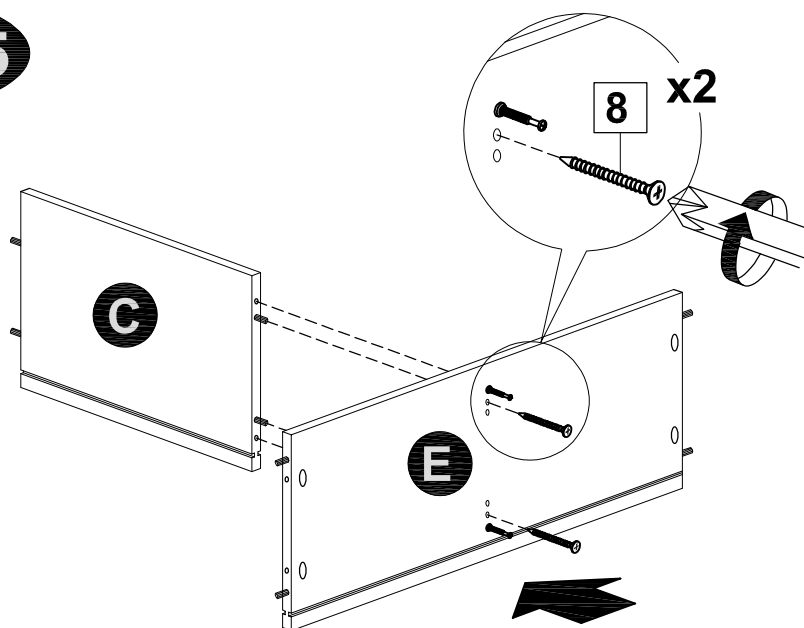


STEP 16

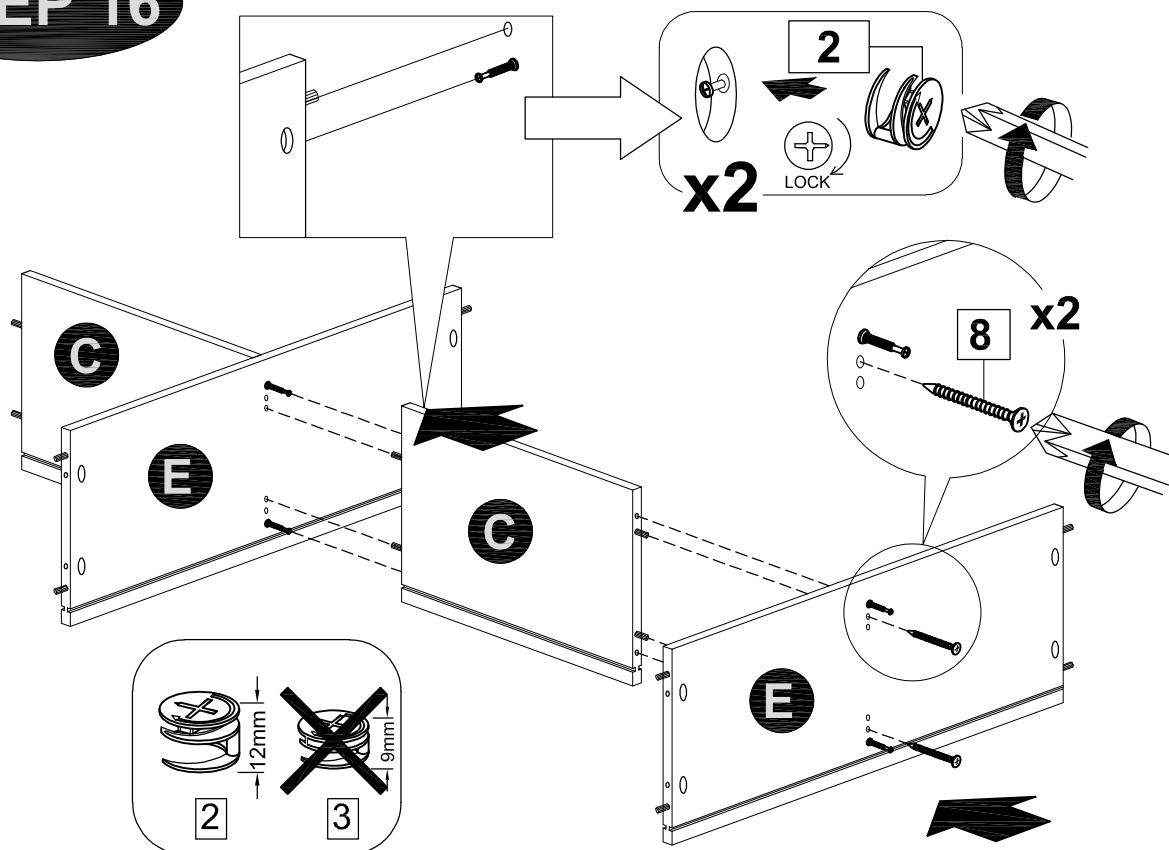




STEP 17

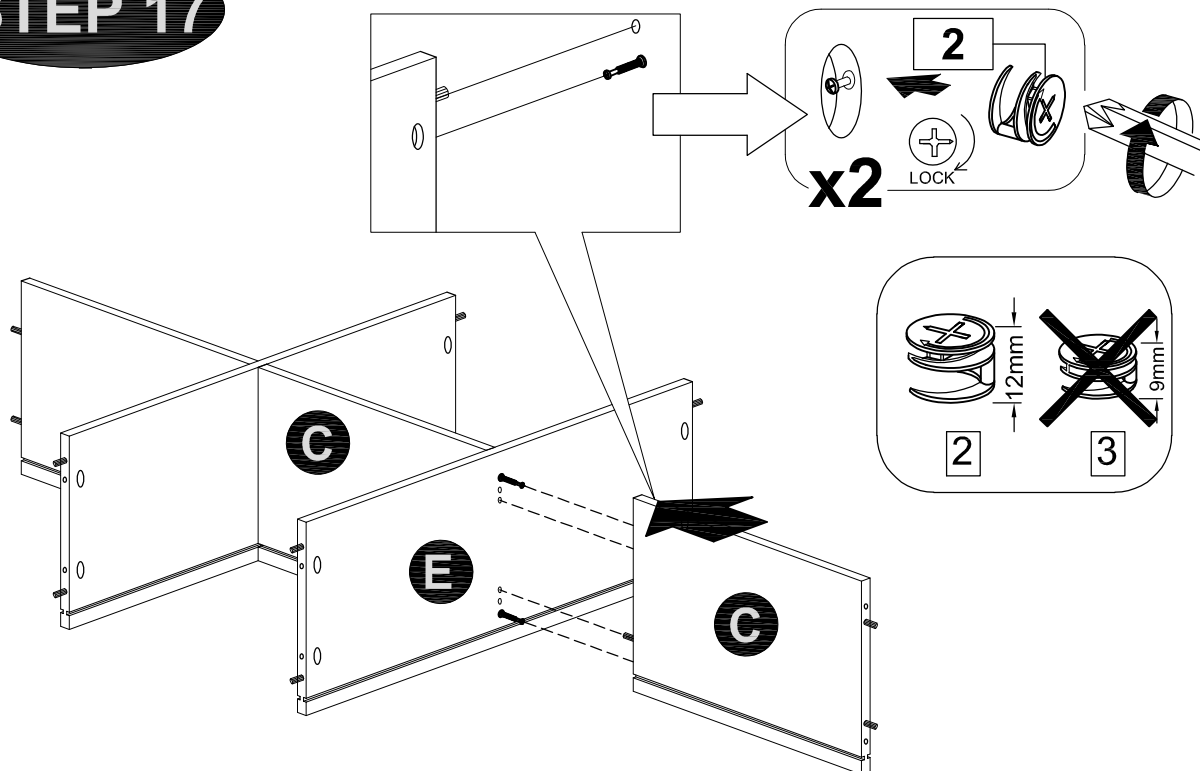


STEP 18

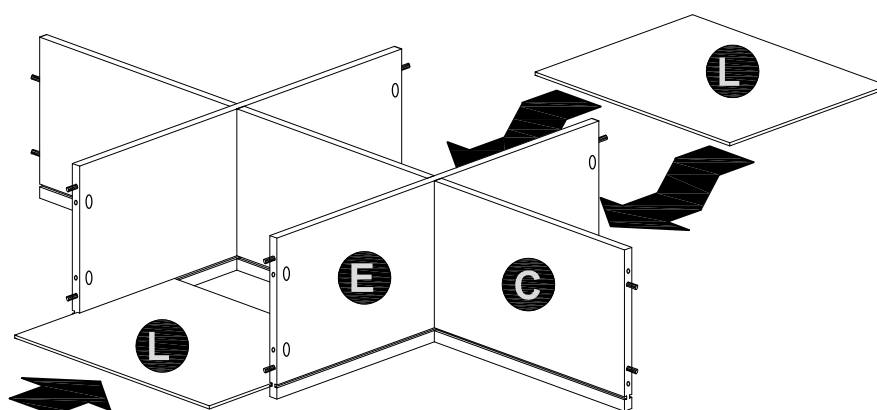


STEP 19

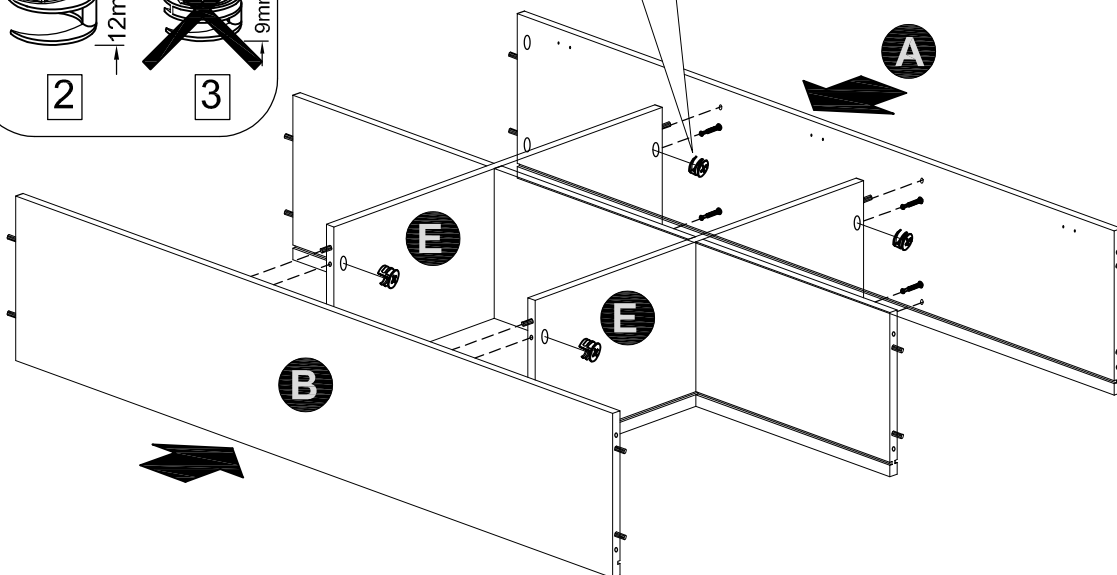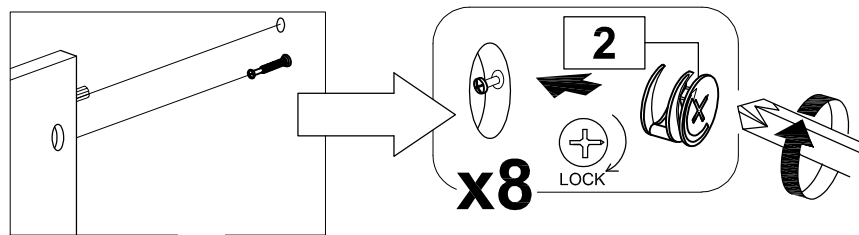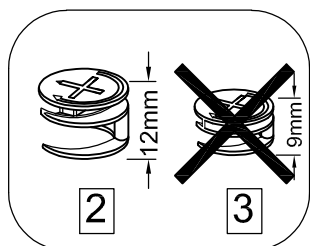


STEP 20

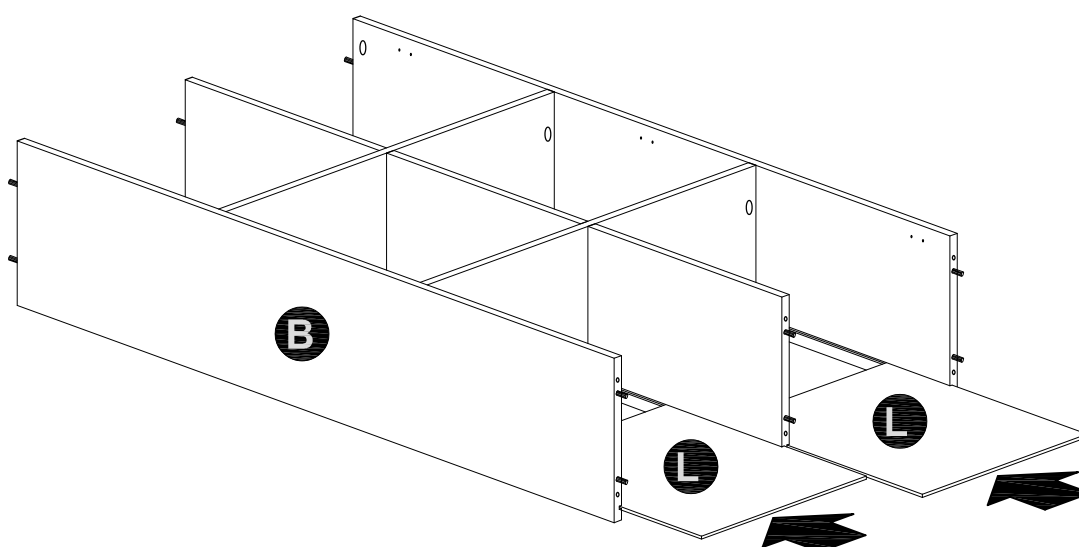


STEP 21

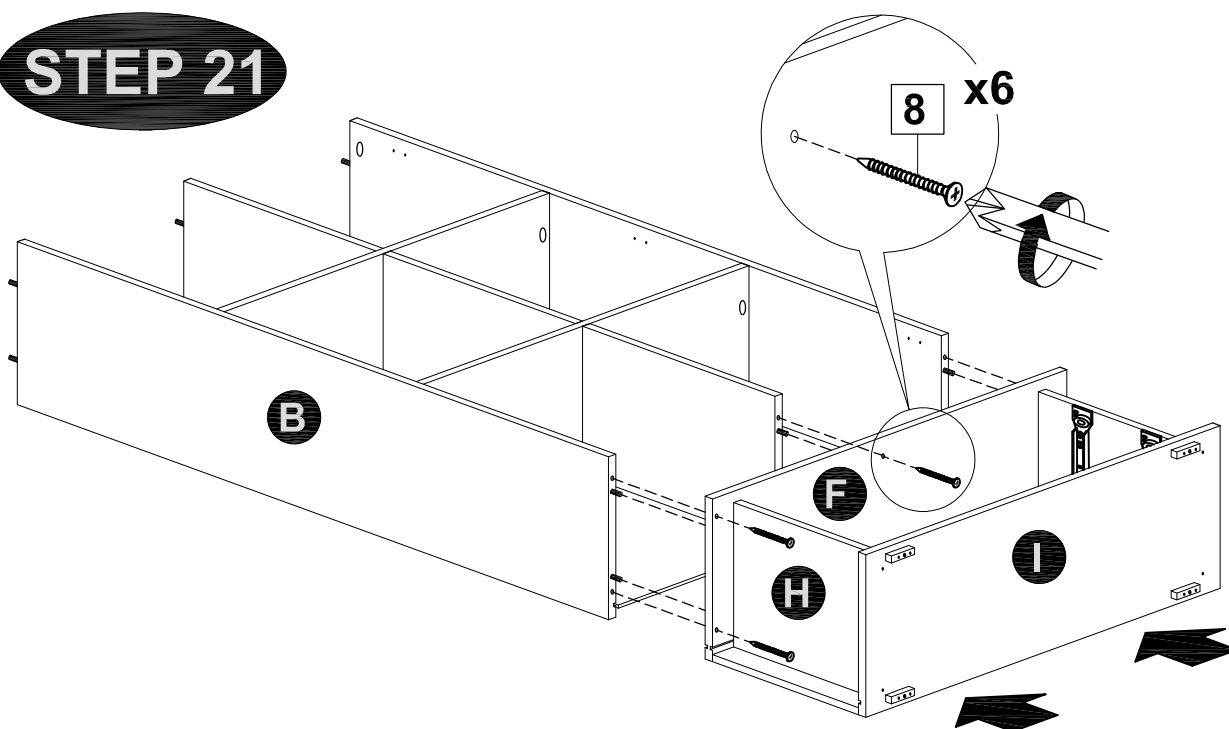

STEP 22

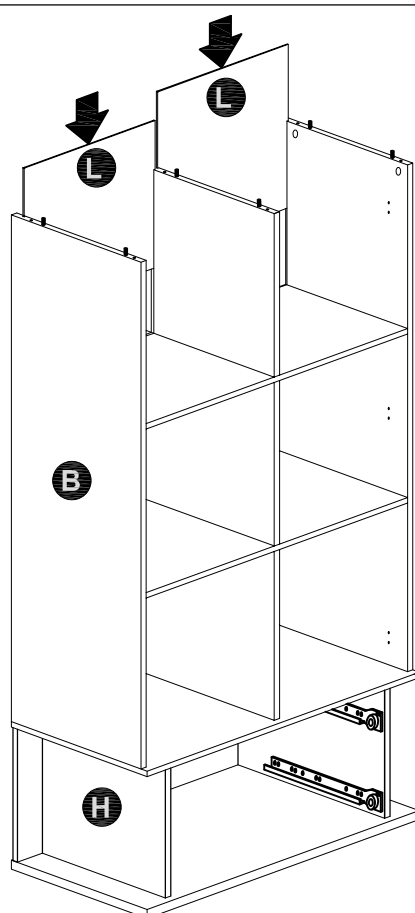


STEP 23

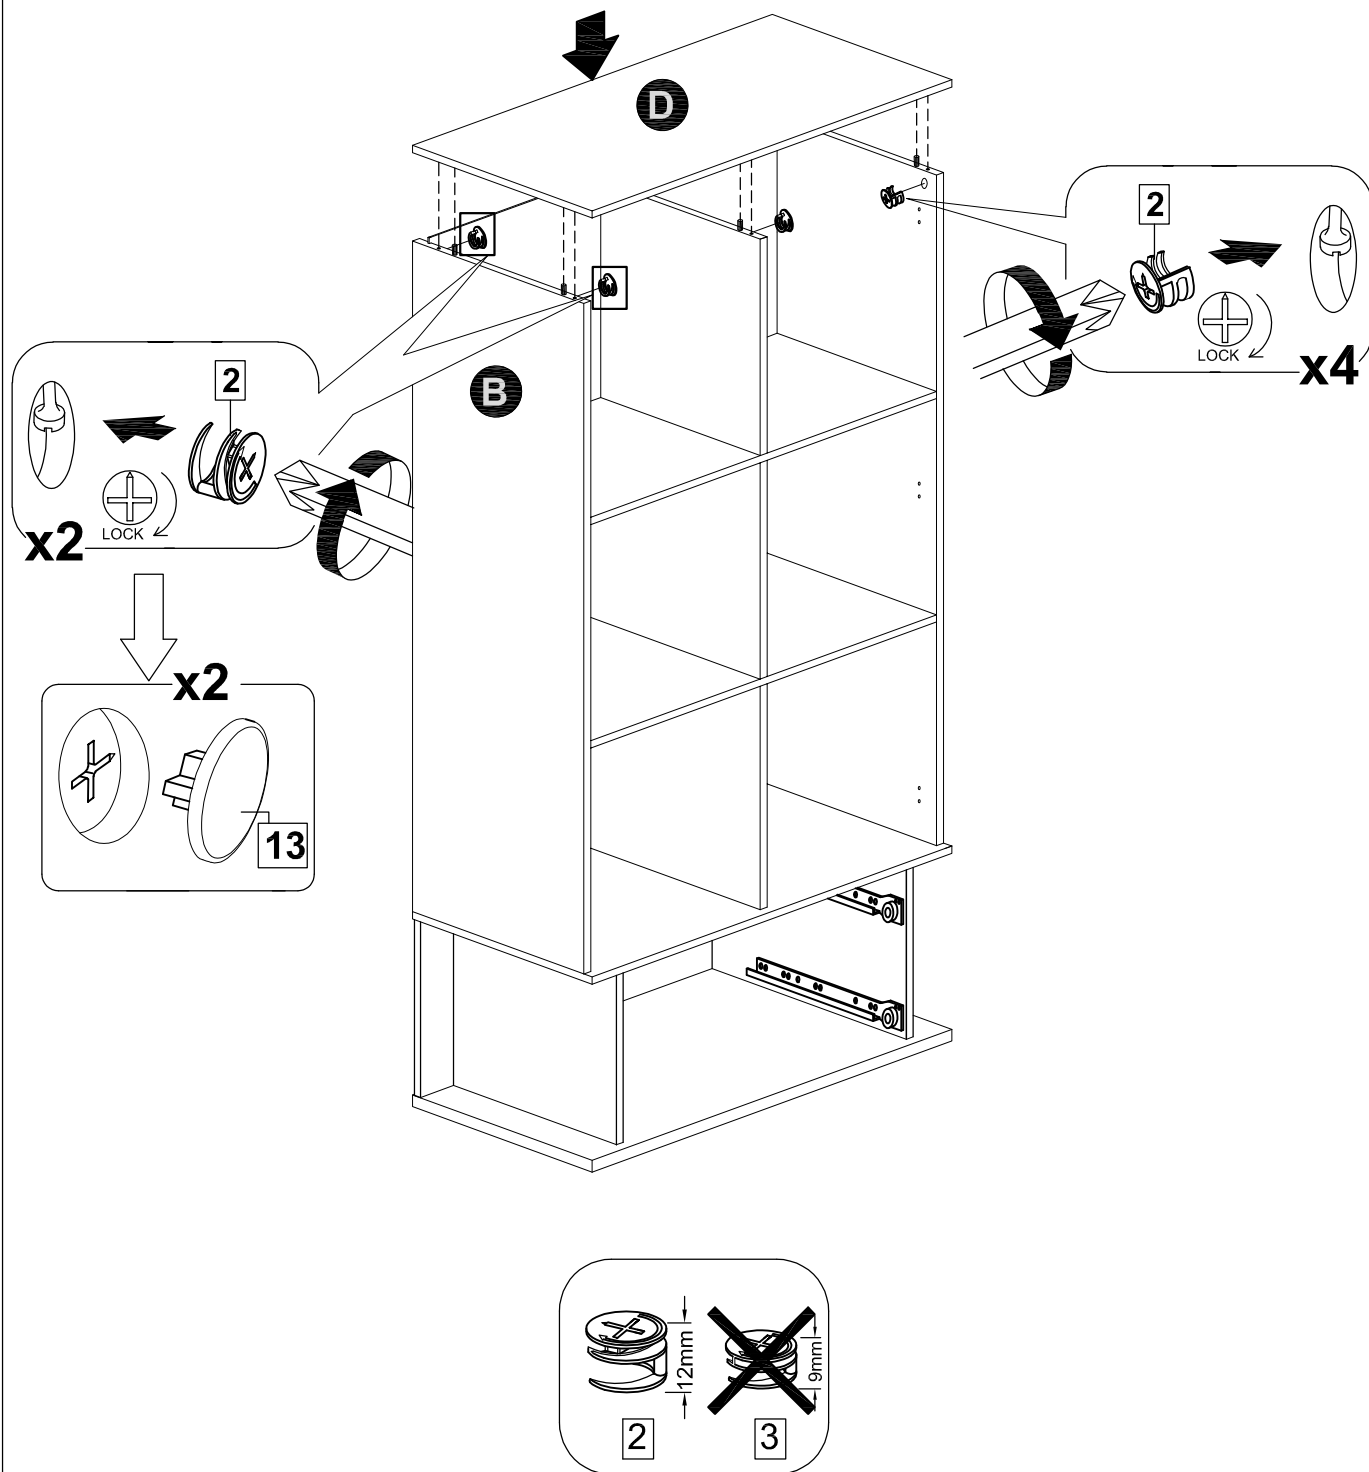

STEP 24


Hinges Adjustment Facilities

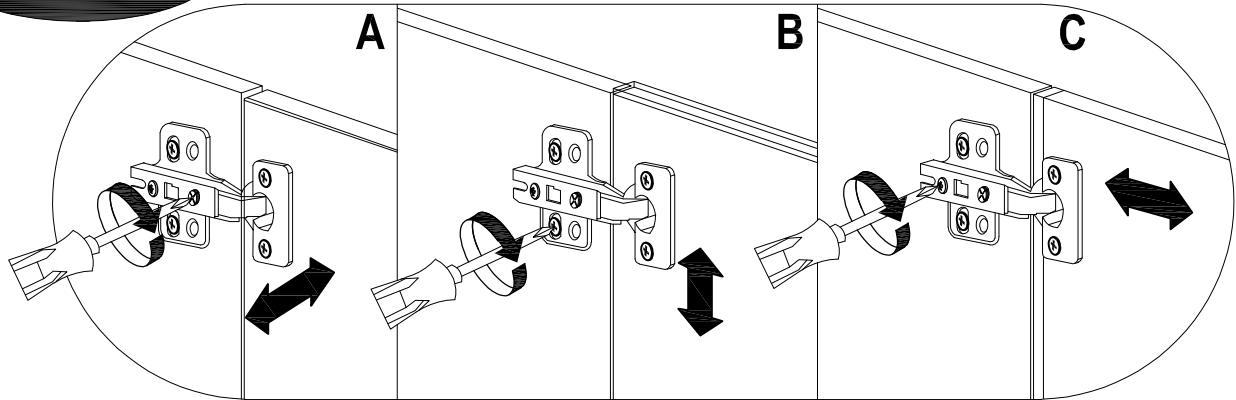


A.Lateral adjustment
by screw adjusting

B.Vertical adjustment via slot
in the mounting plate


C.Front-to-Back by the slacking
the hinge arm mounting screw

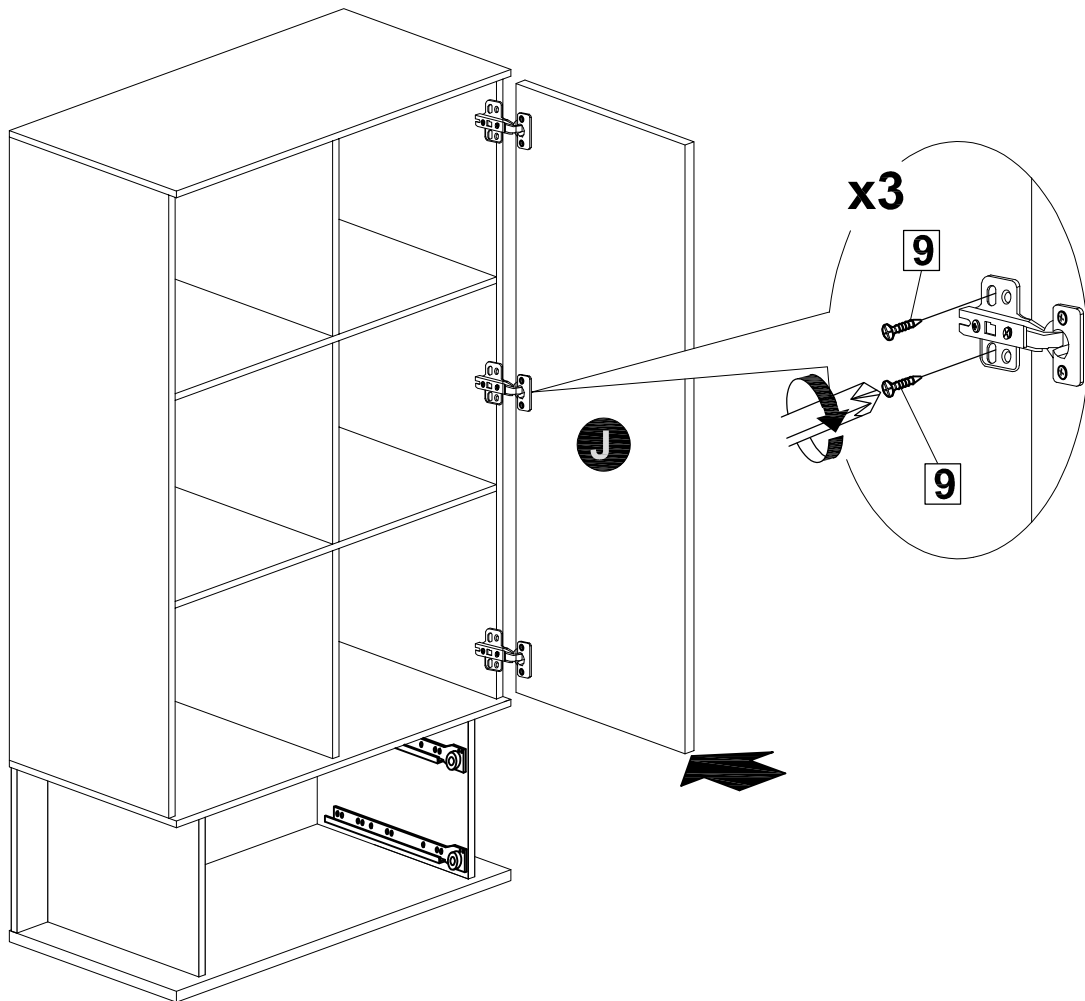


STEP 25

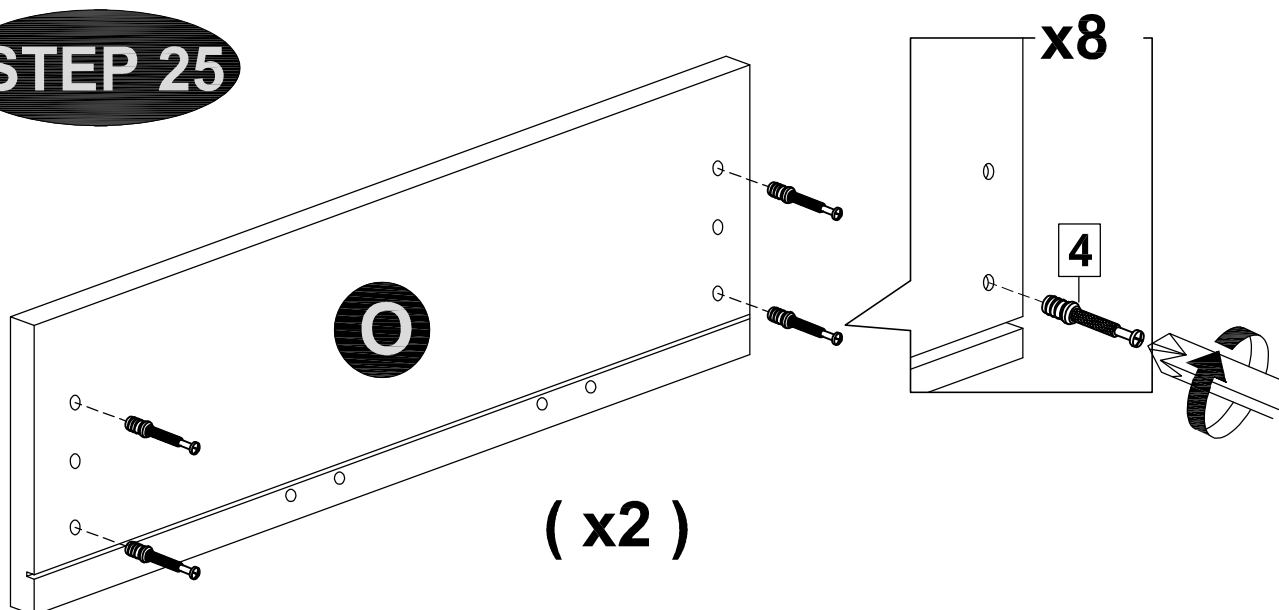


STEP 26

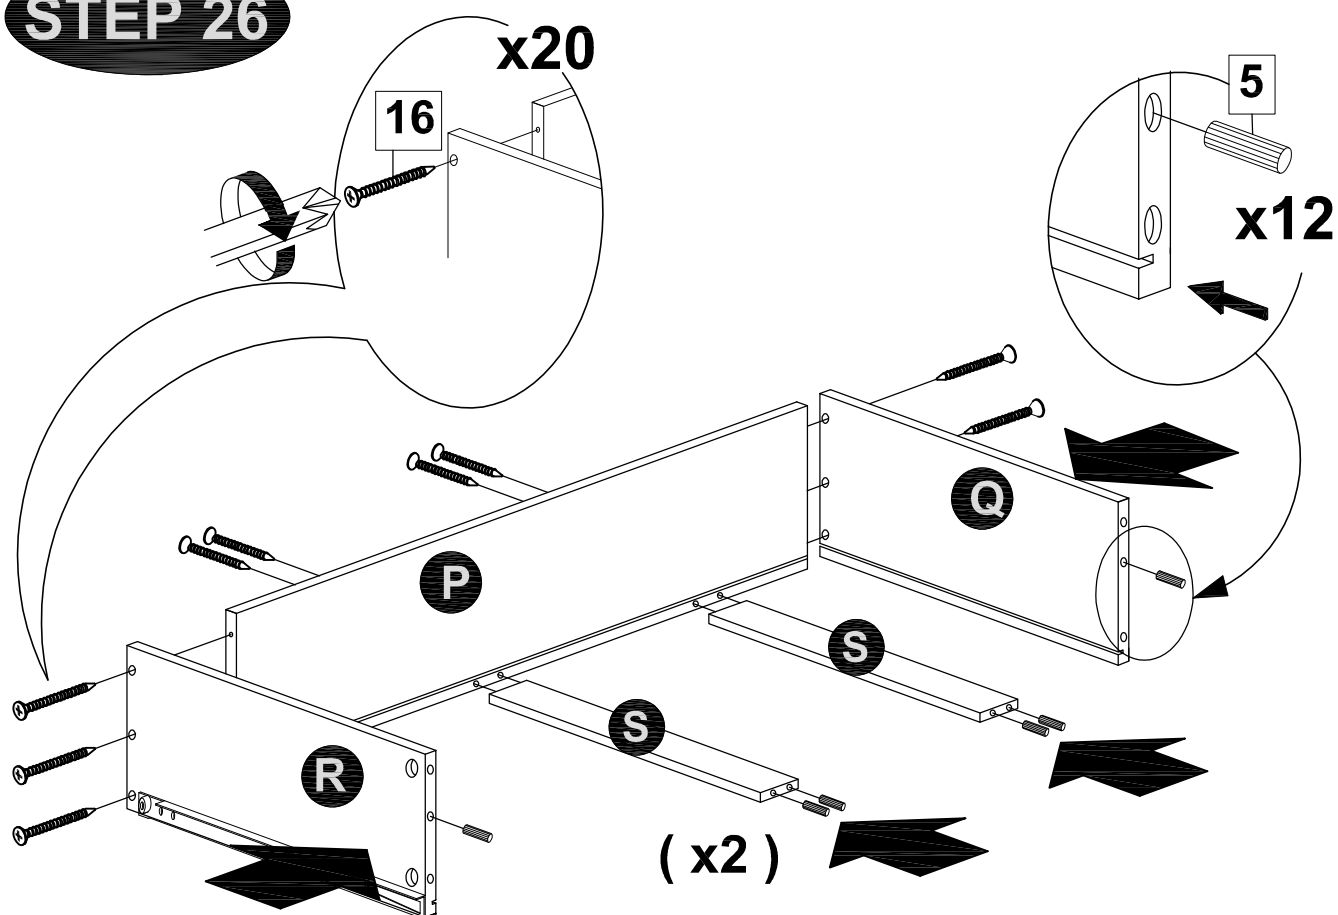


STEP 27

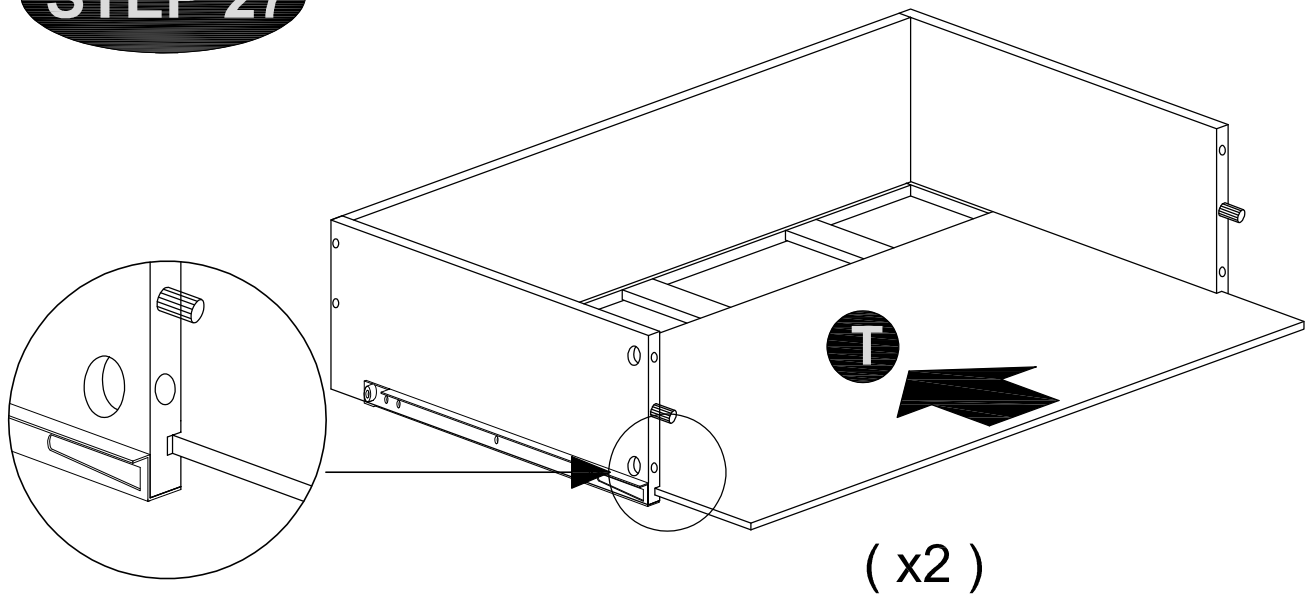



STEP 28

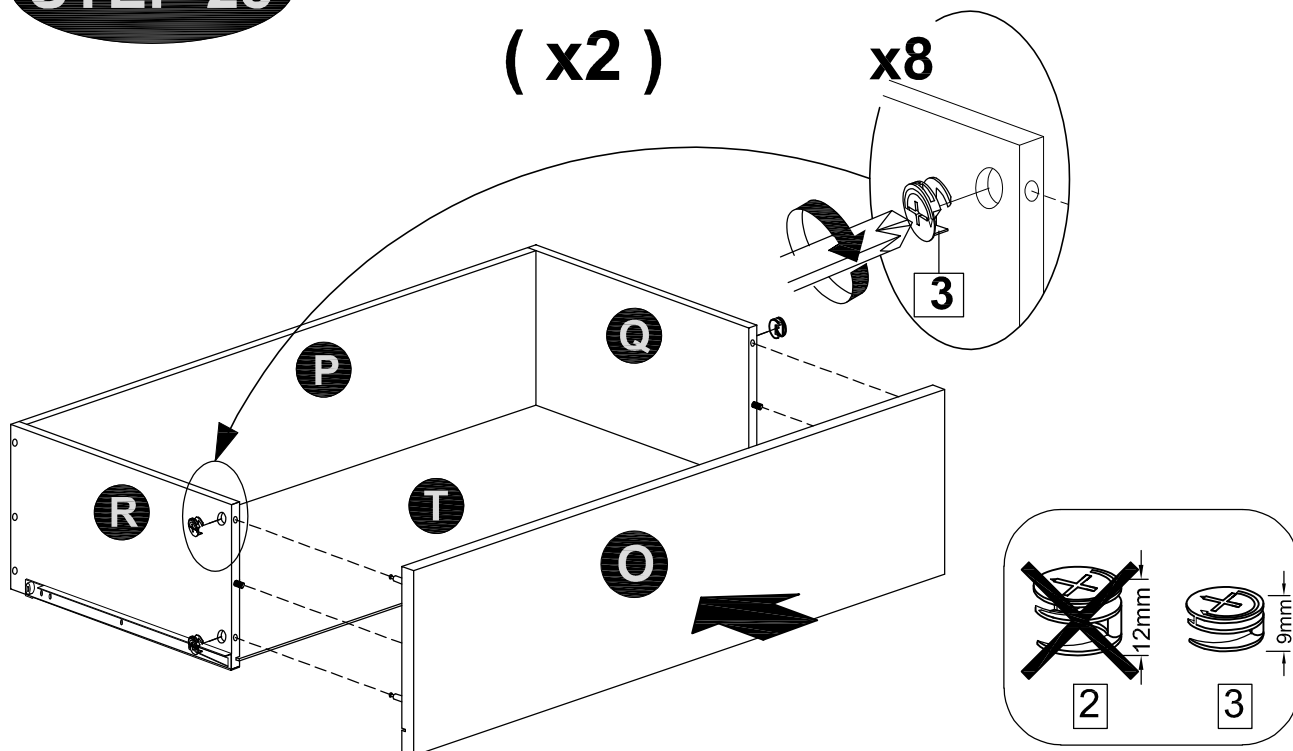


STEP 29

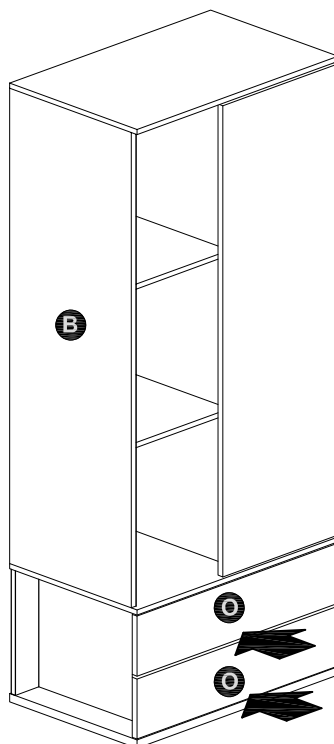


STEP 30

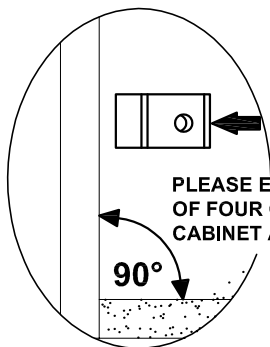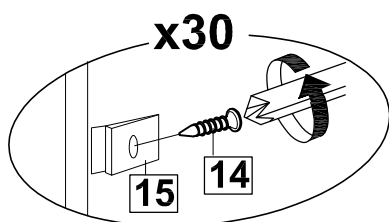

PLEASE ENSURE THAT EACH
OF FOUR CORNERS OF
CABINET ARE SQUARE

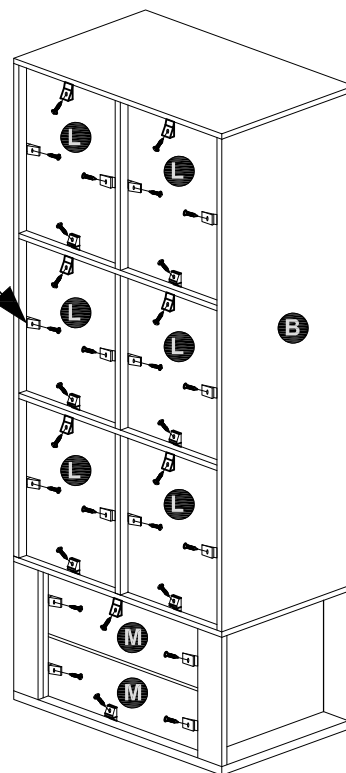


STEP 31

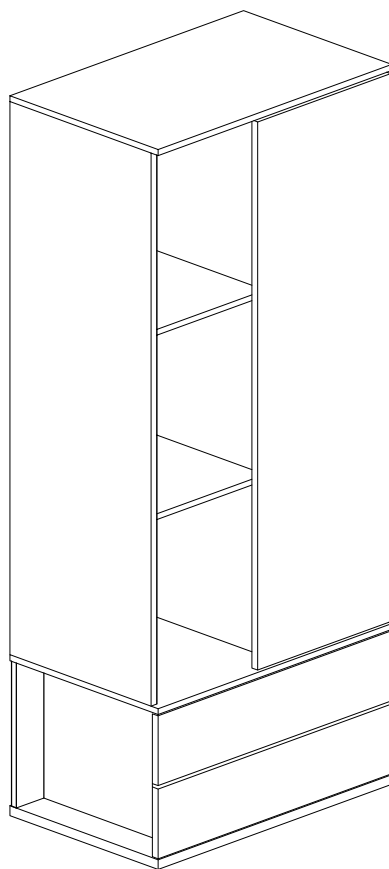

FITTING OF ANTI-TIP BRACKET


STEP 1 :

Insert screws through bracket on the cabinet.

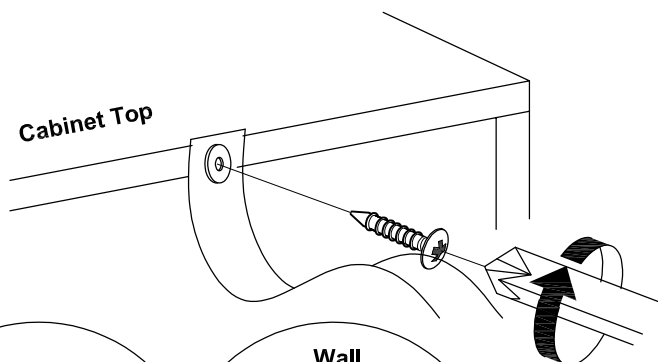

STEP 2 :


Make a mark on the wall through the bracket.

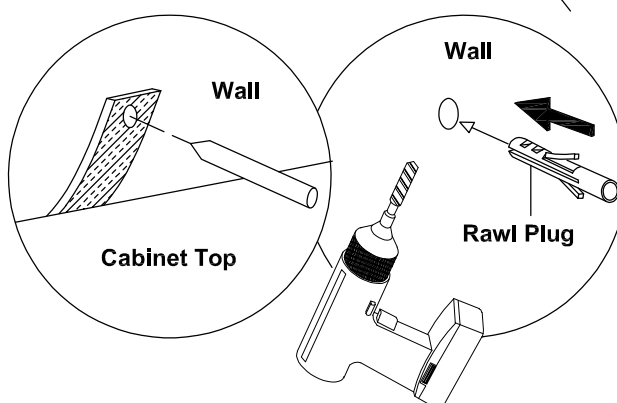

Drill a hole in the wall and insert the rawl plug.

STEP 3 :

Insert screw through bracket into hole in wall

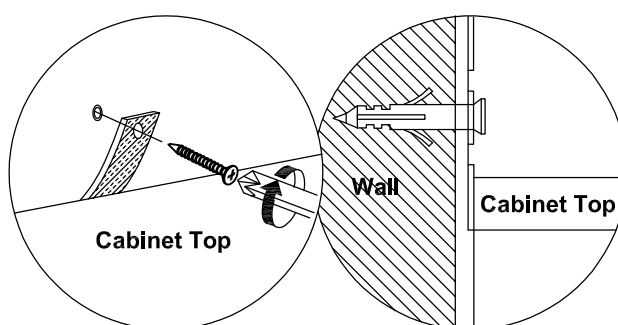

NOTE : Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used as a diameter greater than the diameter of the mounting hole on the bracket and that the fixing is safe and secure before use.

The screw supplied is to fix the anti-tip strap to the cabinet.

HARDWARE LIST



Anti-Tip Strap - 2pcs



M3.5 x 16MM - 2pcs