


STARY

Assembly Manual

Bookcase


Bk002

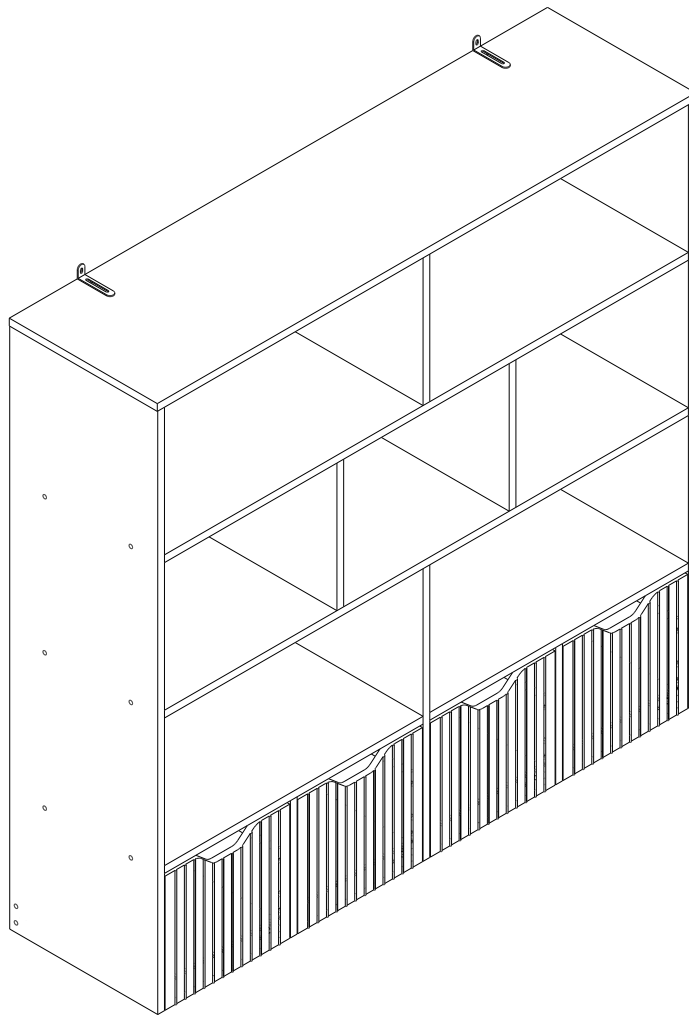

Please read this manual carefully before any operation and keep it properly for future use.

Customer Servic : **ogenaservices@outlook.com**


Exploded View

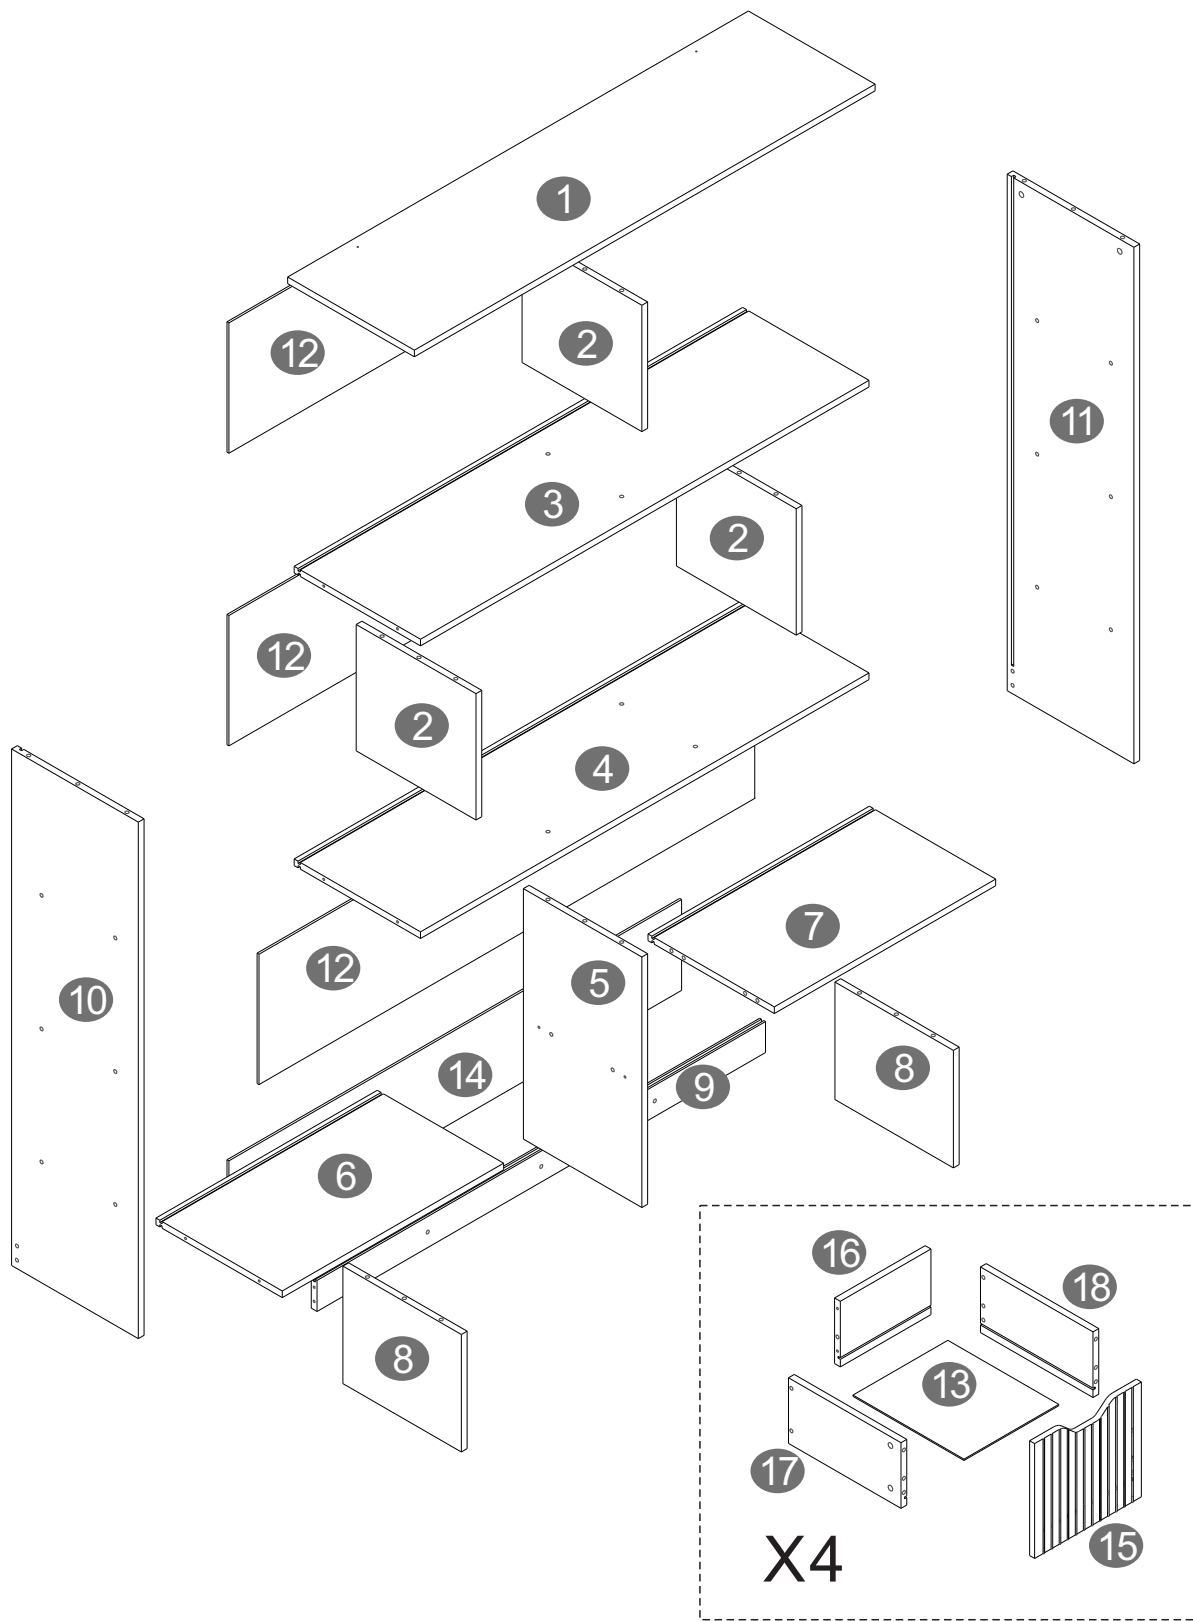


Components List

30 min


Assembly Time




Two People

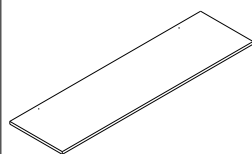


1 1PC




2 3PCS

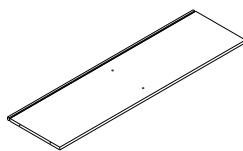


3 1PC

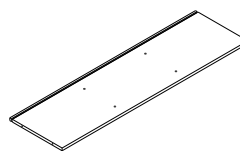


4 1PC




5 1PC

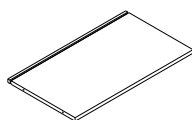


6 1PC



7 1PC



8 2PCS

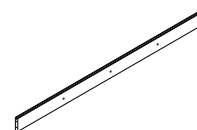


9 1PC




10 1PC




11 1PC

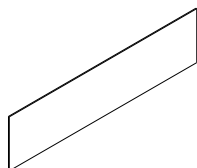


12 3PCS

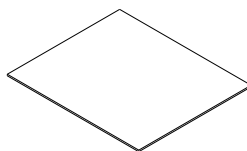


13 4PCS

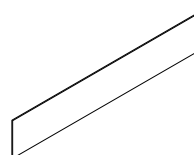


14 1PC

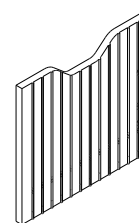


15 4PCS

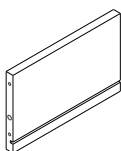

16 4PCS

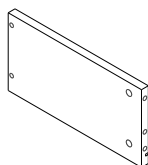


17 4PCS

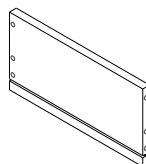

18 4PCS


Warnings

ATTENTION:






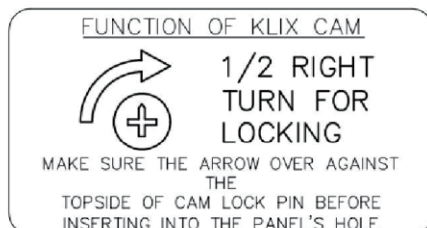


IMPORTANT!

After 180° right turn, if there is a gap between the boards, please check whether the cam lock pin is tightened enough.

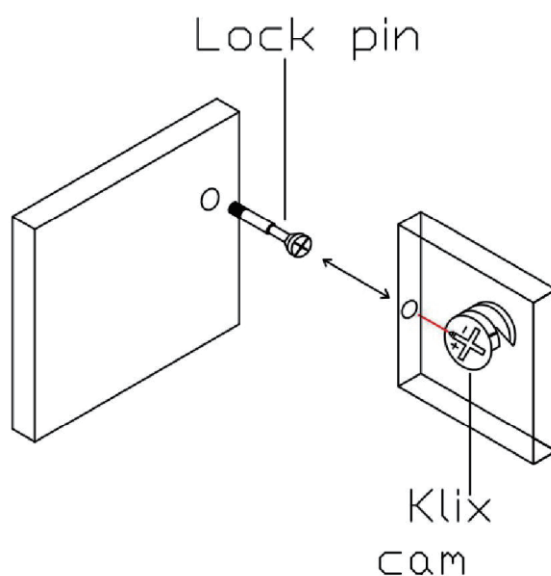


Components List

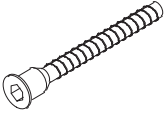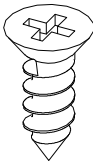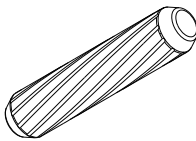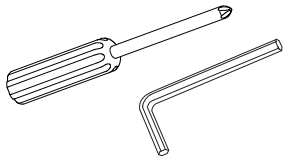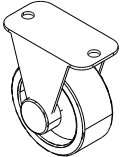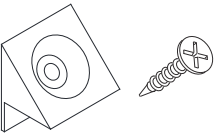A			B			C		
								
Screw	M6x40	41+2	Screw	3.5x12	32+2	Cam lock pin	5x40	36+2
D			E			F		
						    		
Klix cam	12x9.5	36+2	Wooden pin	M8x40	26+2	anti-tip kit		2
G			H			I		
								
Screwdriver		1	wheel		16	Backplane clip		16+2

Assembly Instruction

STEP 1

Pass screw (A) through panel (3) to connect part (2), then screw (C) into panel (3).

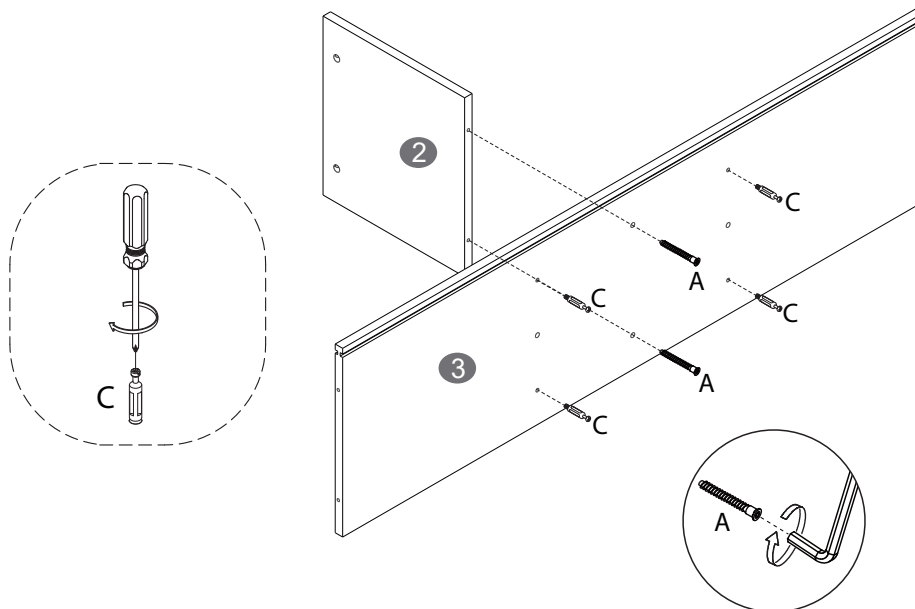


Ax2



Cx4

STEP 2

Insert screw (E) into the matching holes of part (2), then lock pieces (2 and 3) together with screw (D).

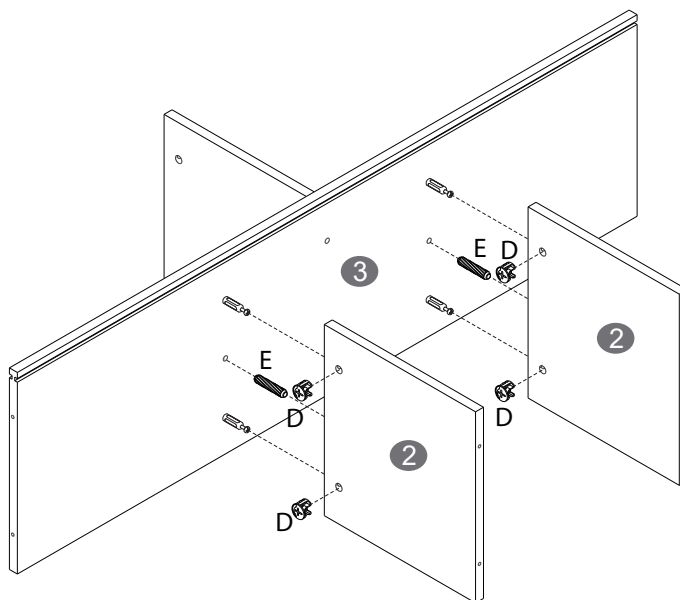

Dx4




Ex2

Assembly Instruction

STEP 3

Use screws (A) to attach boards (2) to board (4)

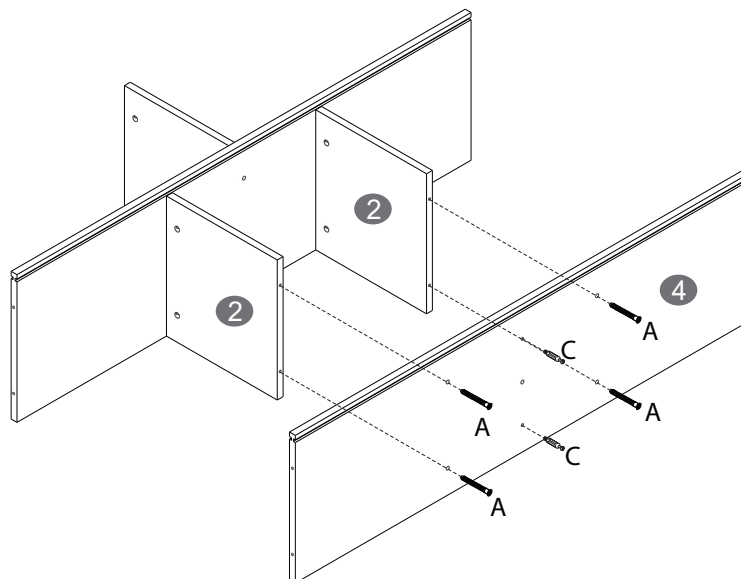


Ax4



Cx2

STEP 4

Insert screw (E) into the matching holes of piece (5), connect it with piece (4) and secure using screw (D); screw (C) into the aligned holes of piece (5).

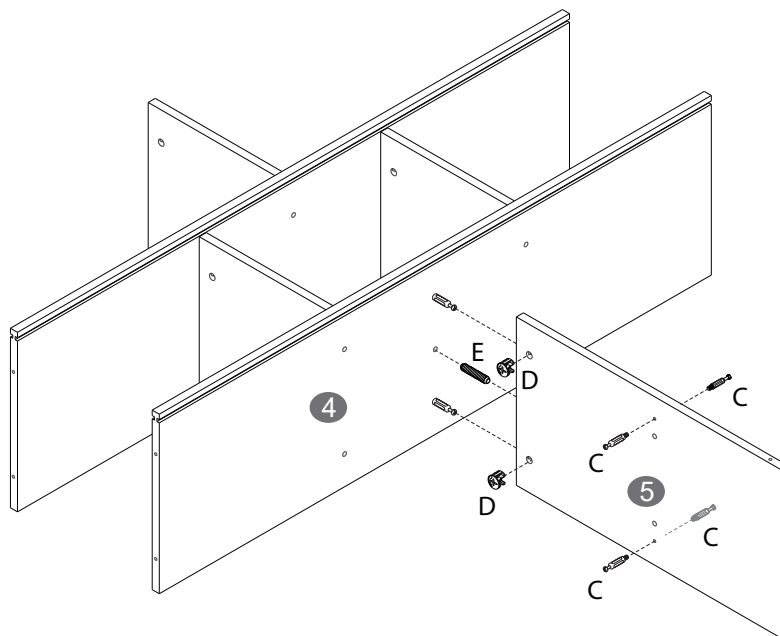

Cx4



Dx2




Ex1

Assembly Instruction

STEP 5

Insert screw (E) into the matching holes of part (6) or (7), connect with part (5) and secure with screw (E); screw screw (C) into parts (6 & 7).

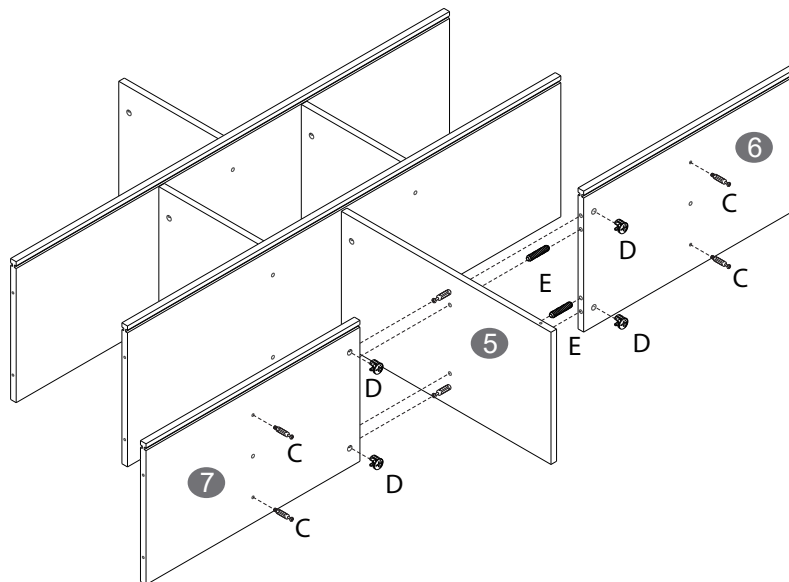

Cx4




Dx4



Ex2

STEP 6

Insert screw (E) into the matching holes of part (8), connect it with parts (6 & 7) and secure with screw (D).

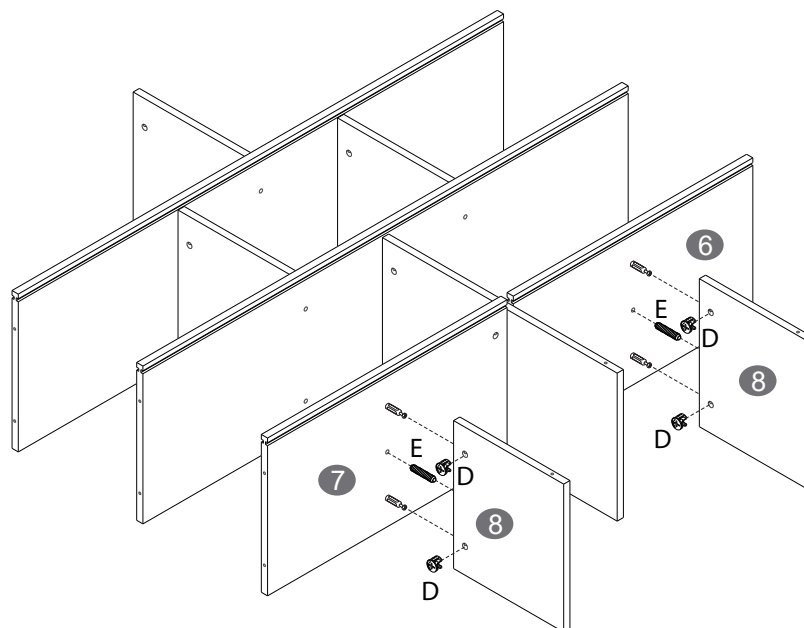

Dx4




Ex2

Assembly Instruction

STEP 7


Thread screw (A) through the aligned holes of part (9) to connect parts (5 and 8).

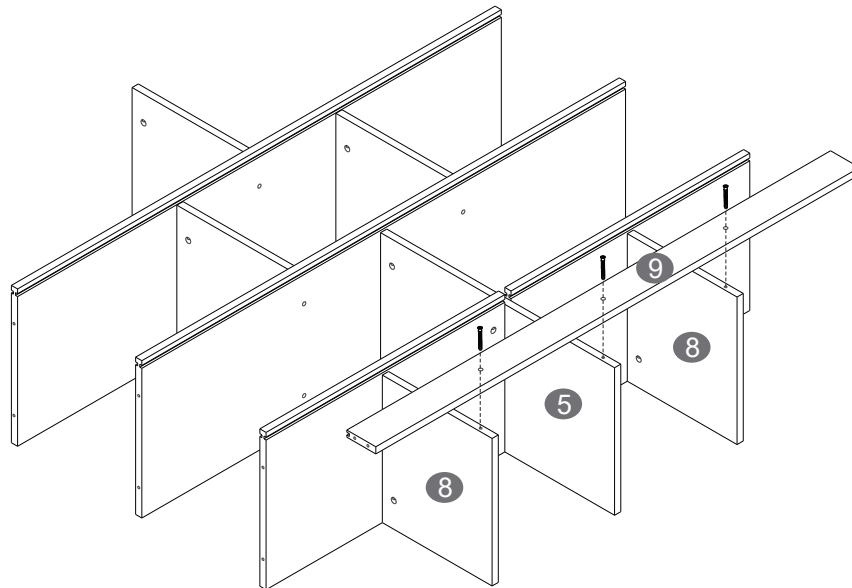

Ax3

STEP 8


Insert pieces (2x12 & 1x14) into the corresponding grooves.

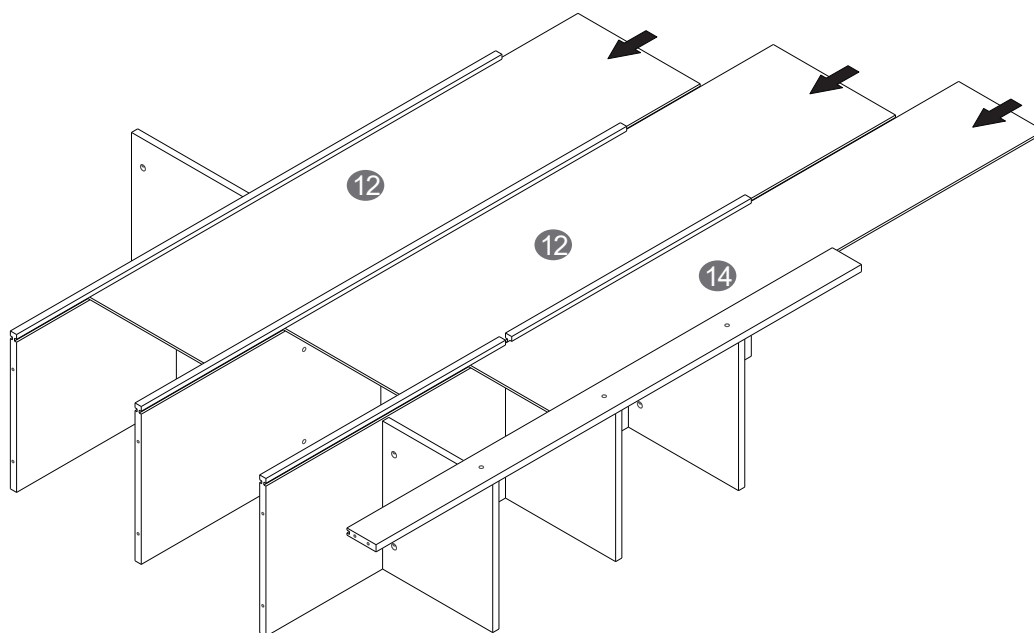

Assembly Instruction

STEP 9


Thread screw (A) through parts (10 & 11) to connect with parts (3, 4, 6 & 7). Do NOT fully tighten the bolts until all of them are in the correct holes. This will allow you slight adjustments during the assembly.

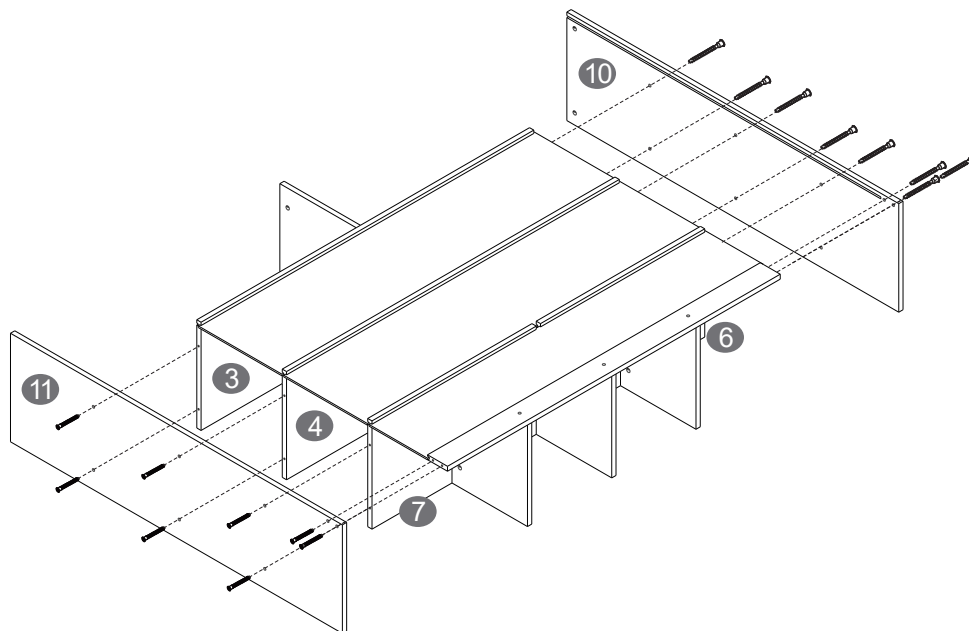

Ax16

STEP 10


Insert piece (12) into the matching slots.

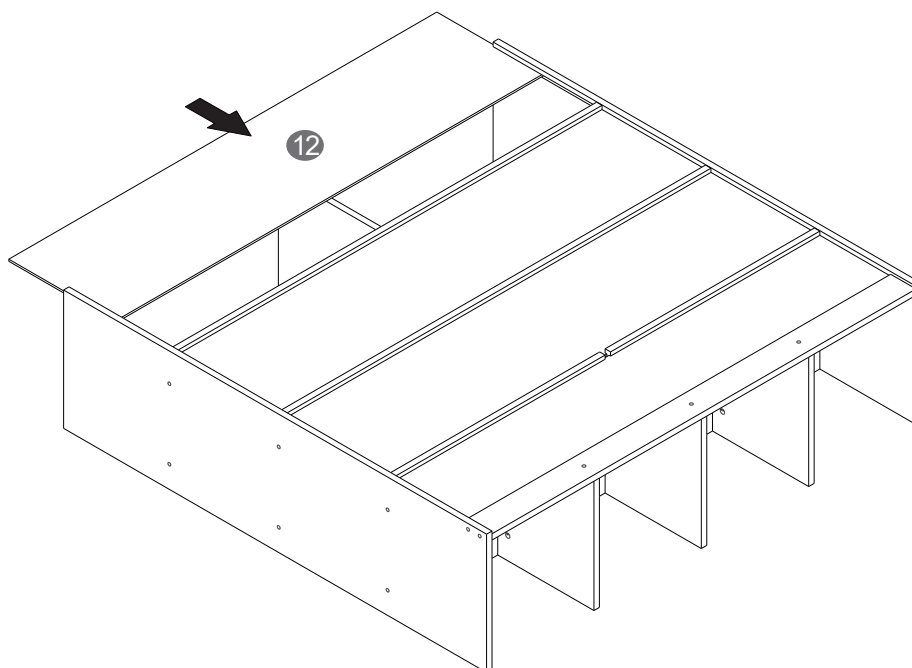

Assembly Instruction

STEP 11


Screw screw (C) into part (1).

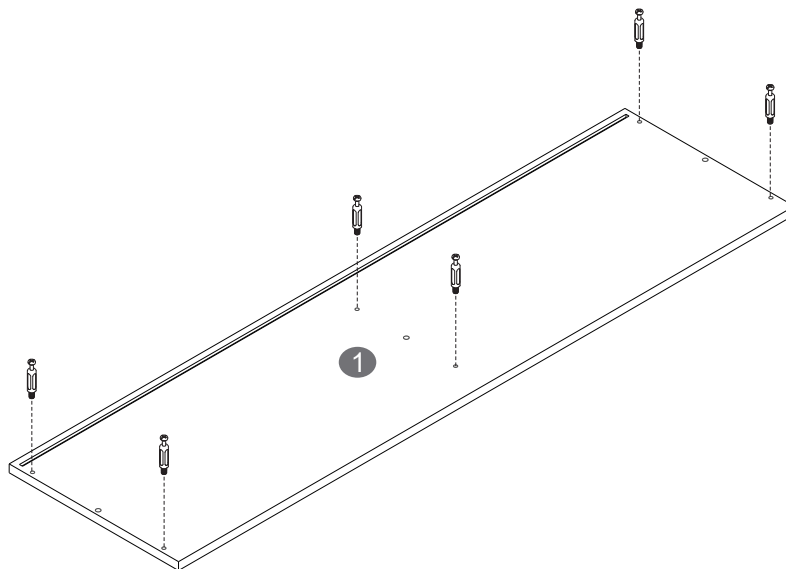

Cx6

STEP 12

Insert screw (E) into the aligned holes of parts (2, 10 & 11), then secure with screw (D).

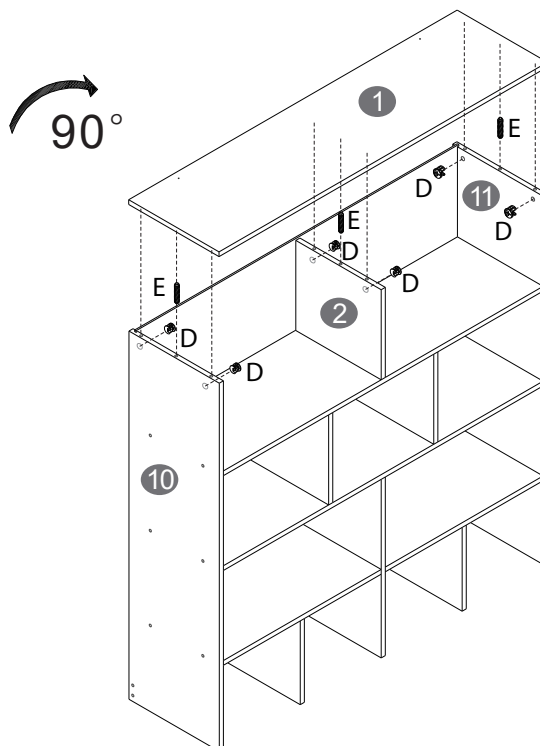

Dx6




Ex3

Assembly Instruction

STEP 13

Insert screw (I) into both sides of the slot and lock tightly.


90°

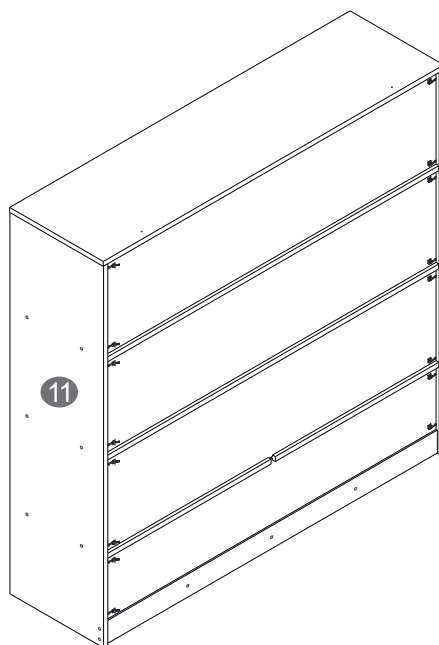

Ix16

STEP 14

Screw (C) into part (15).

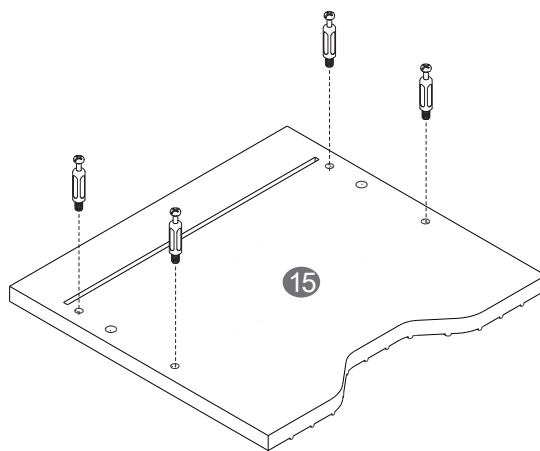

X4




Cx16

Assembly Instruction

STEP 15

Insert screw (E) into the aligned holes of parts (17 & 18), then thread screw (A) through the matching holes to connect with part (16).

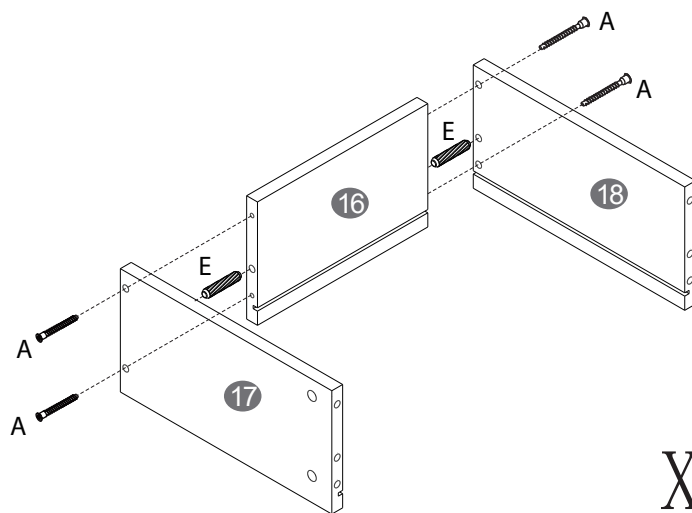


Ax16



Ex8

STEP 16


Insert piece (13) into the slot.

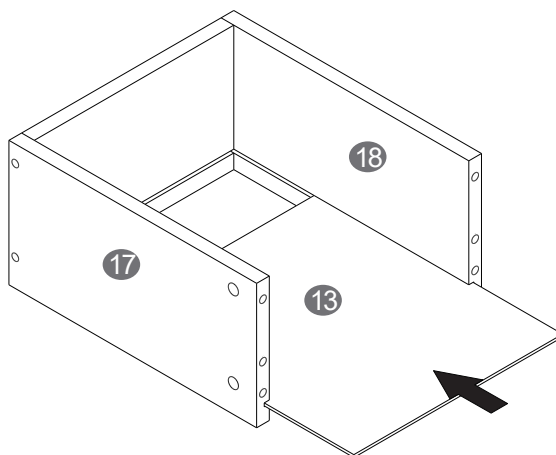

Assembly Instruction

STEP 17

Insert screw (E) into parts (17 & 18), then lock them to part (15) with screw (D).

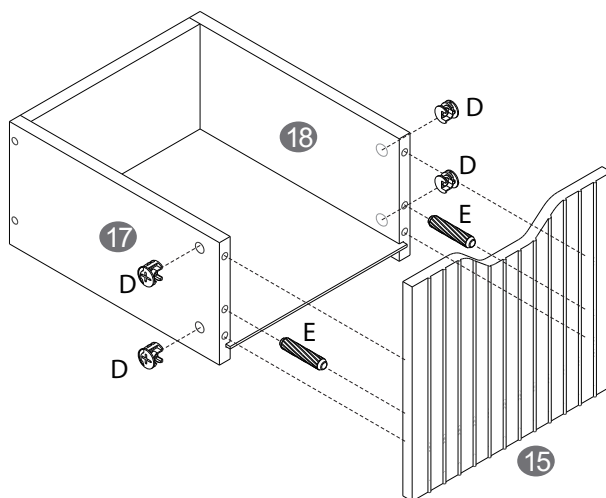

X4




Dx16



Ex8

STEP 18

Thread screw (B) through wheel (H) to connect the aligned holes of parts (17 & 18).

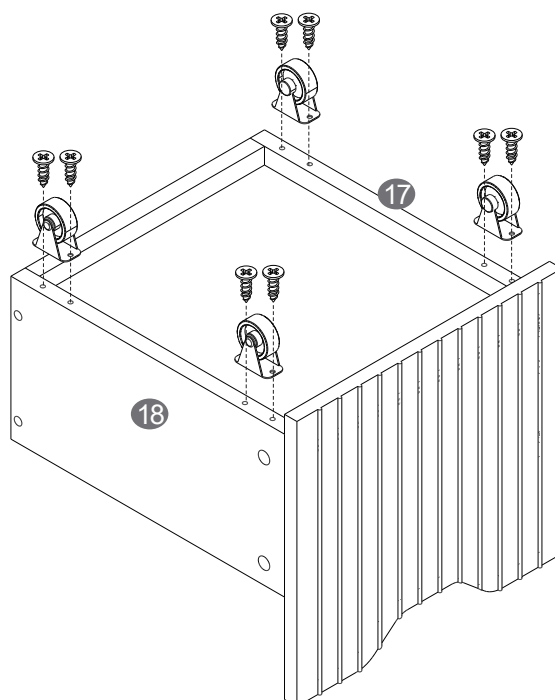

X4



Hx16




Bx32

Assembly Instruction


STEP 19

Slide the drawers into the four empty spaces at the bottom of the cabinet.

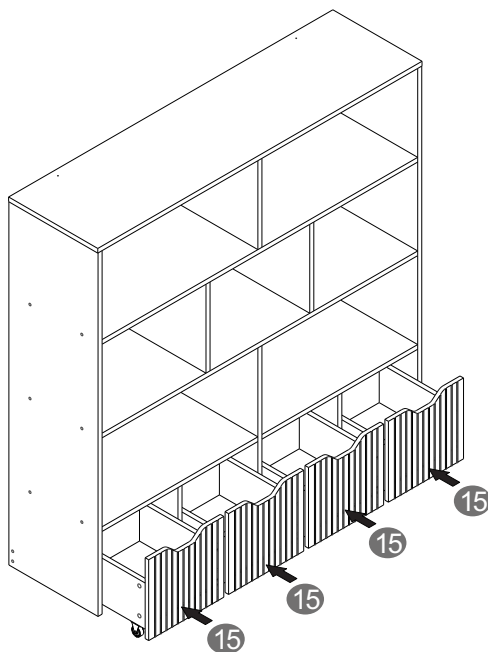

STEP 20


Thread fitting (F2) through fitting (F1) and lock it into the aligned holes on the top of part (1).

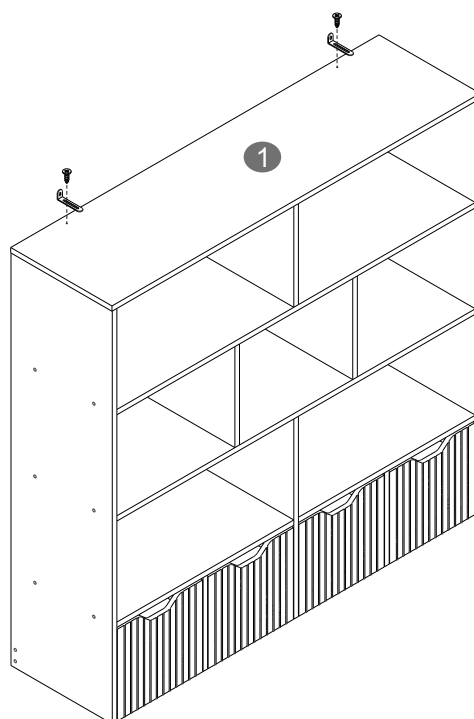

Assembly Instruction

STEP 21

Depending on the type of apartment, accessories (F 1-F2) can be locked on the side or the back.

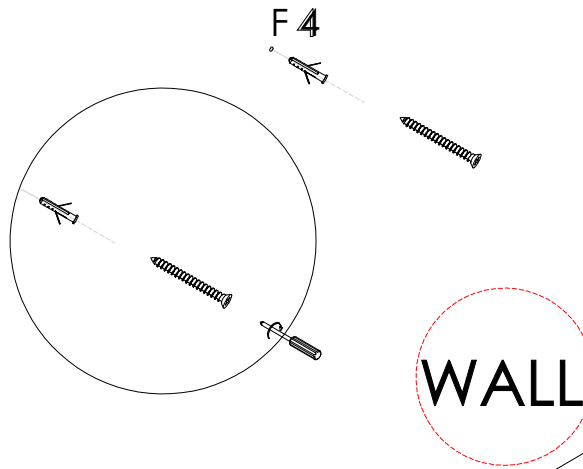


F3
ST4*40
F4
FX2

STEP 22

Tap the accessories (F4) into the wall according to the measurement size of the accessory on the cabinet

Anti-Tip Kit Installation:

- (1) Position the unit against the wall in its final location. Mark the bracket holes on the wall.
- (2) Drill pilot holes at the marked locations and insert the wall anchors.
- (3) Secure the L-brackets (K) to the underside of the top panel using the provided screws.
- (4) Fasten the brackets to the wall anchors to complete the anti-tip installation.

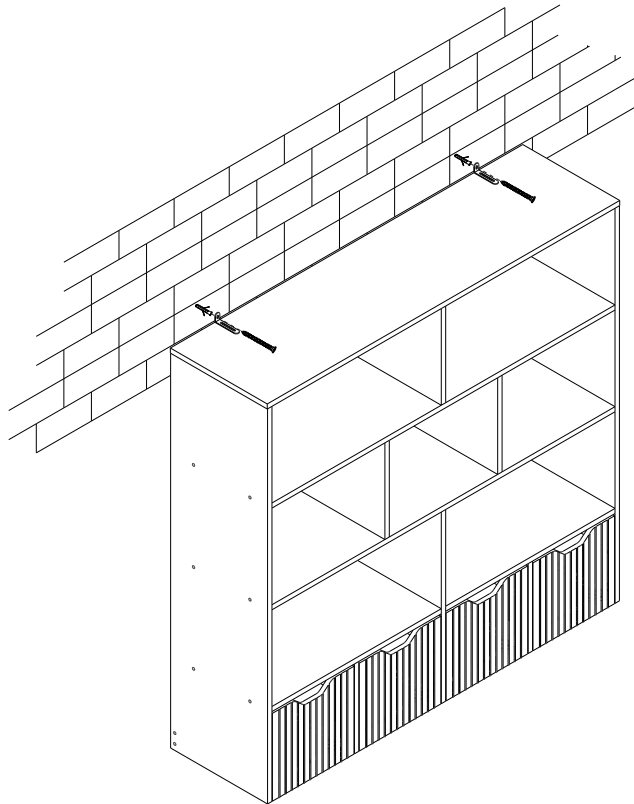

F3
ST4*40
F4
FX2

Gx1