


Assembly Instructions








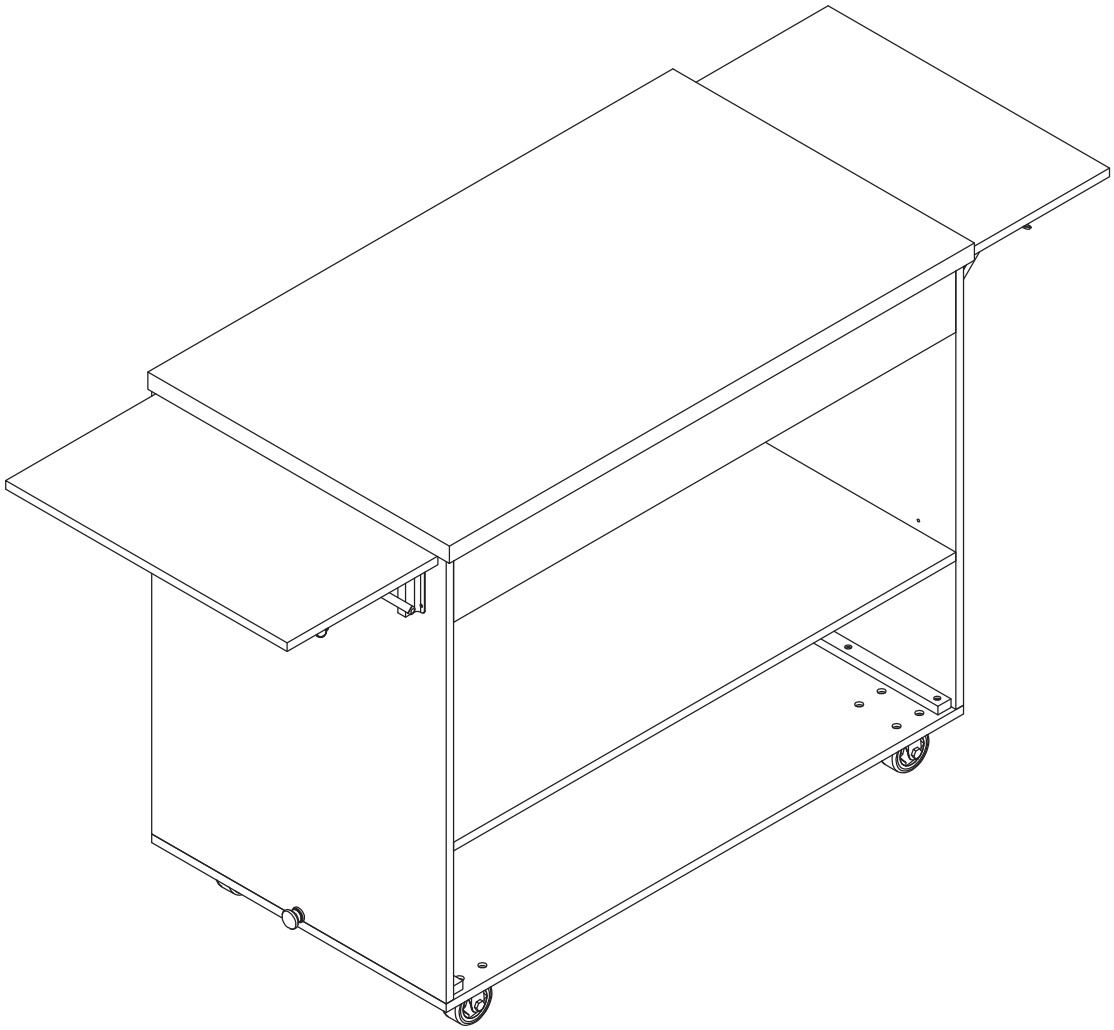


All necessary tools for assembly are included
but for faster assembly, a power drill is recommended

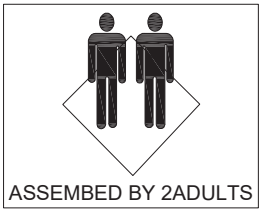





Hareware List

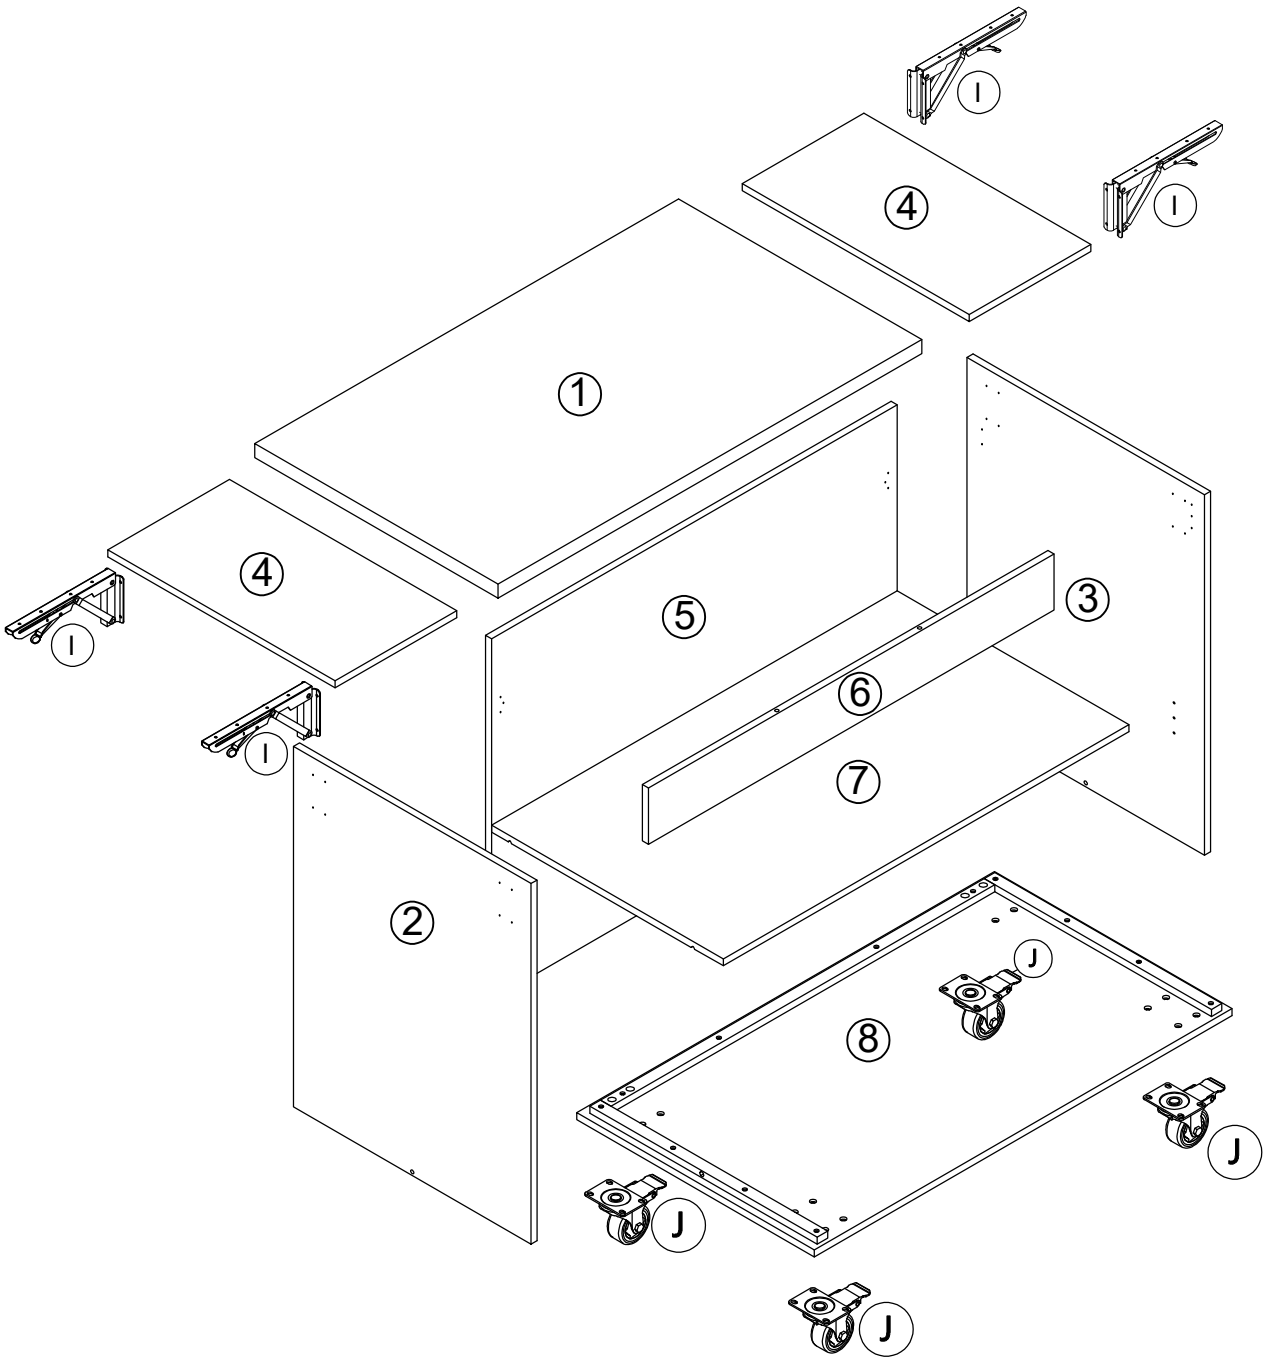


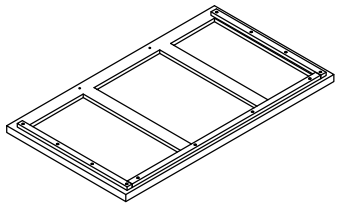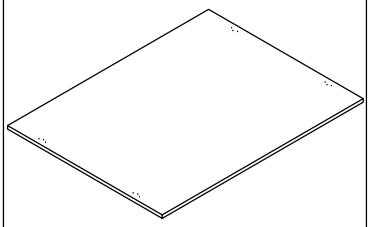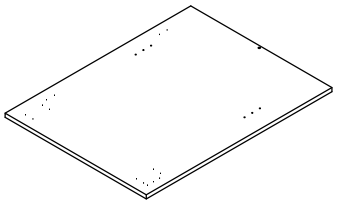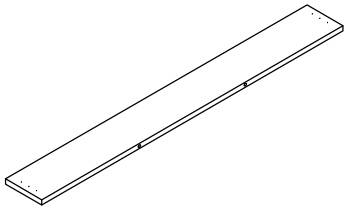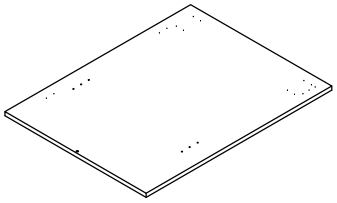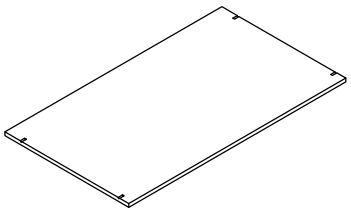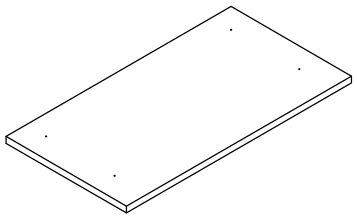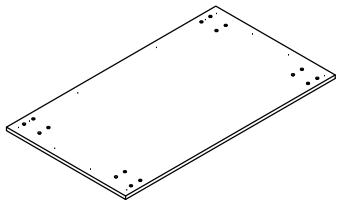
Parts List					
ITEM	PART	QTY	ITEM	PART	QTY
①		1PC	⑤		1PC
②		1PC	⑥		1PC
③		1PC	⑦		1PC
④		2PCS	⑧		1PC


Hareware List

ITEM	PART	QTY
A		2PCS
B		4PCS
C		1PC
D	 Ø3.5×12	32+2PCS
E	 Ø4×14	8PCS
F	 Ø8×30	2PCS
G	 Ø5×25	16+1PCS
H		16+1PCS
I		4PCS
J	 75	4PCS
K	 Ø6×25	16+1PCS


ITEM	PART	QTY
L		16+1PCS
M		4PCS
N		1PC
O		1PC
P		1PC
Q		1PC

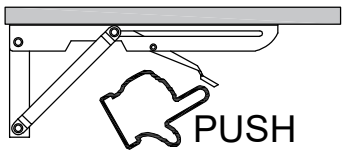

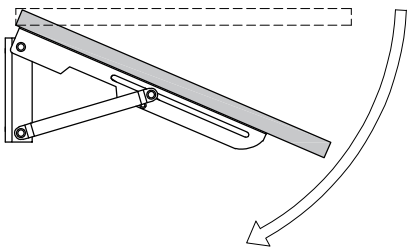





01

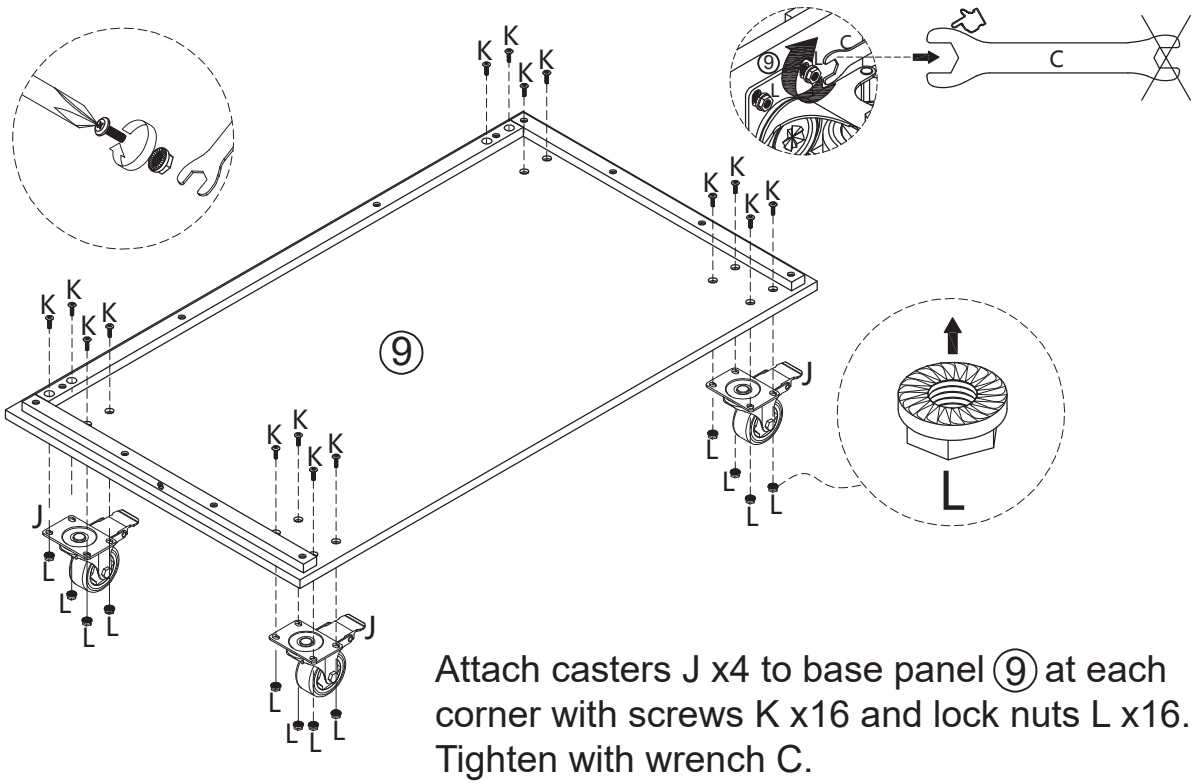


Attach casters J x4 to base panel ⑨ at each corner with screws K x16 and lock nuts L x16.
Tighten with wrench C.

J×4	K×16	L×16	C×1
	 Ø6	 Ø6×20	


02

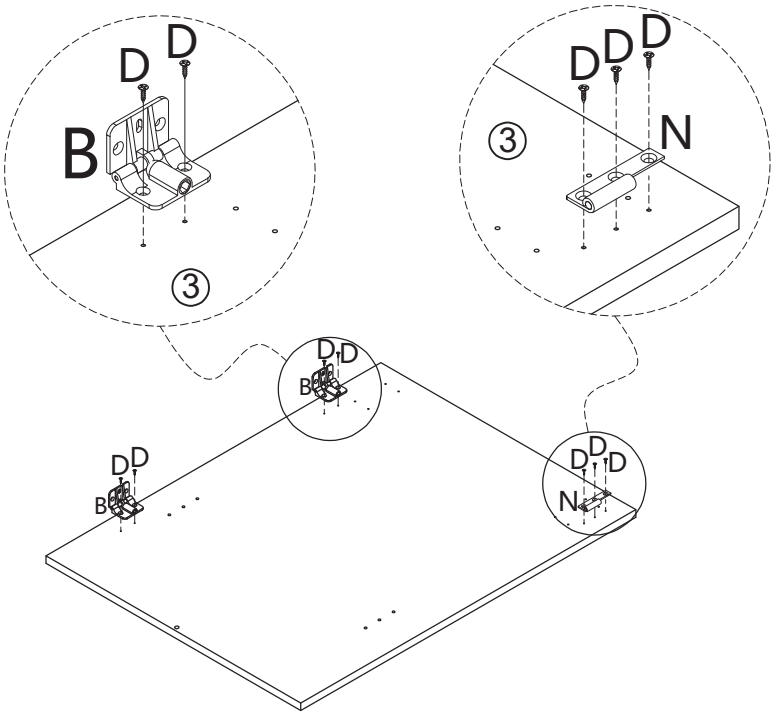


Lay right side panel ③ flat, inner side up. Attach bases B x2 and connector N x1 with screws D x7.
Do not fully tighten.
Pay attention to the orientation.

B×2	N×1	D×7
		 Ø3.5×12


03

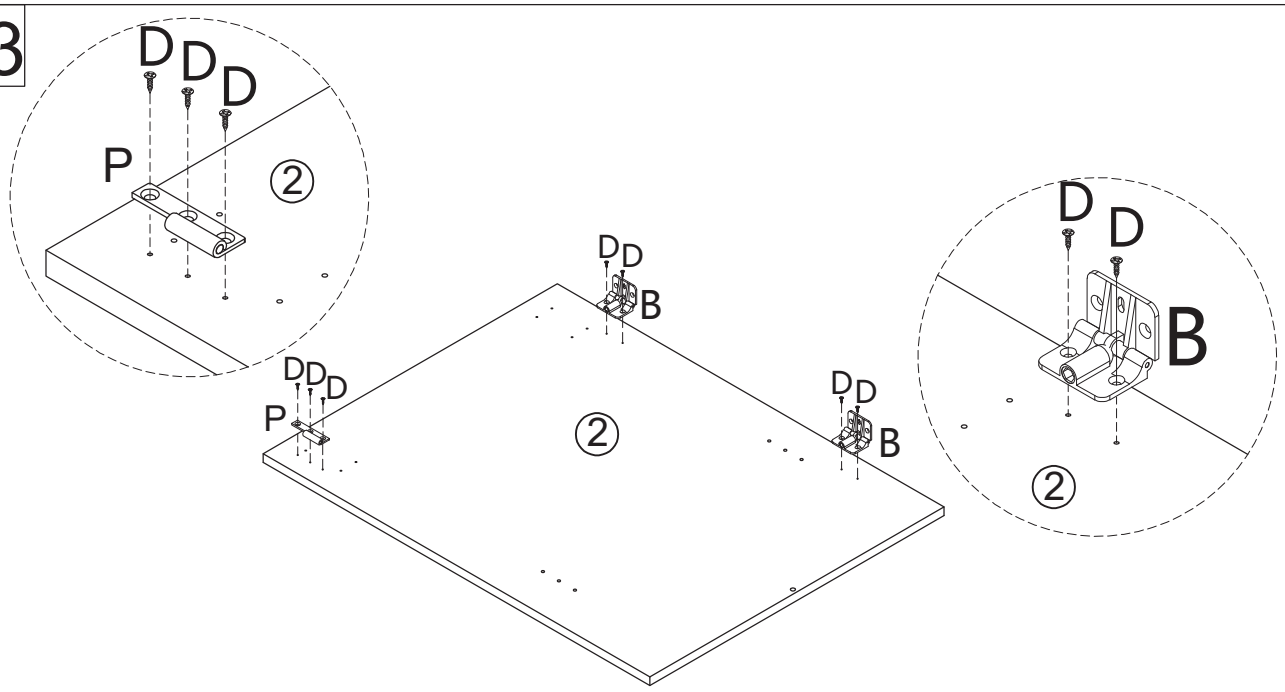

Lay left side panel ② flat, inner side up. Attach bases B x2 and connector P x1 symmetrically with screws D x7. Do not fully tighten.

B×2	P×1	D×7
		 Ø3.5×12


04

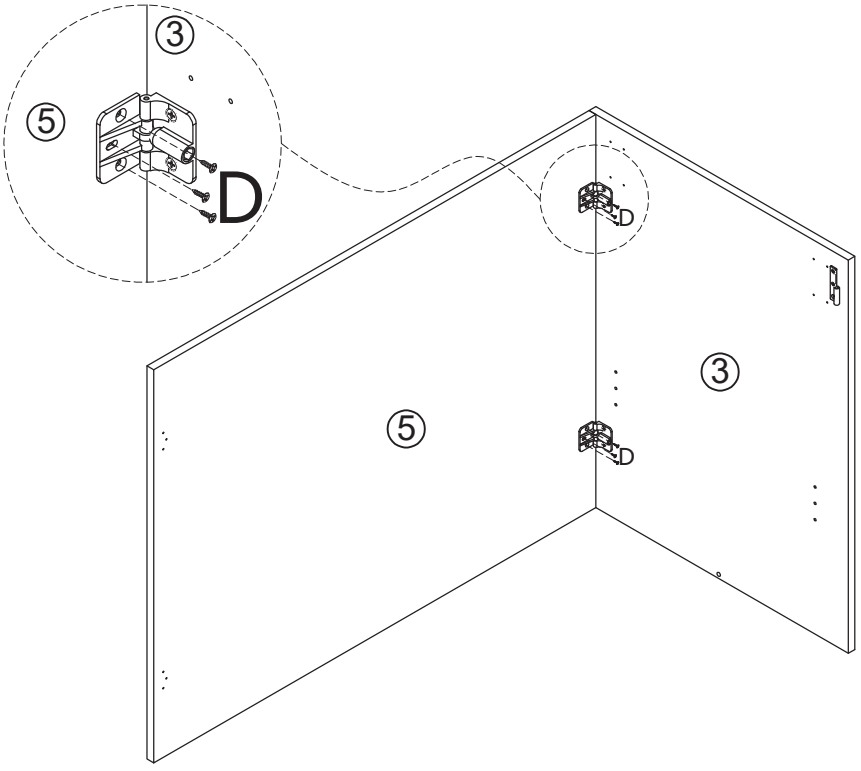

Align back panel ⑤ with right side panel ③ at 90°. Secure top and bottom with corner brackets and screws D x6.

D×6
 Ø3.5×12

05

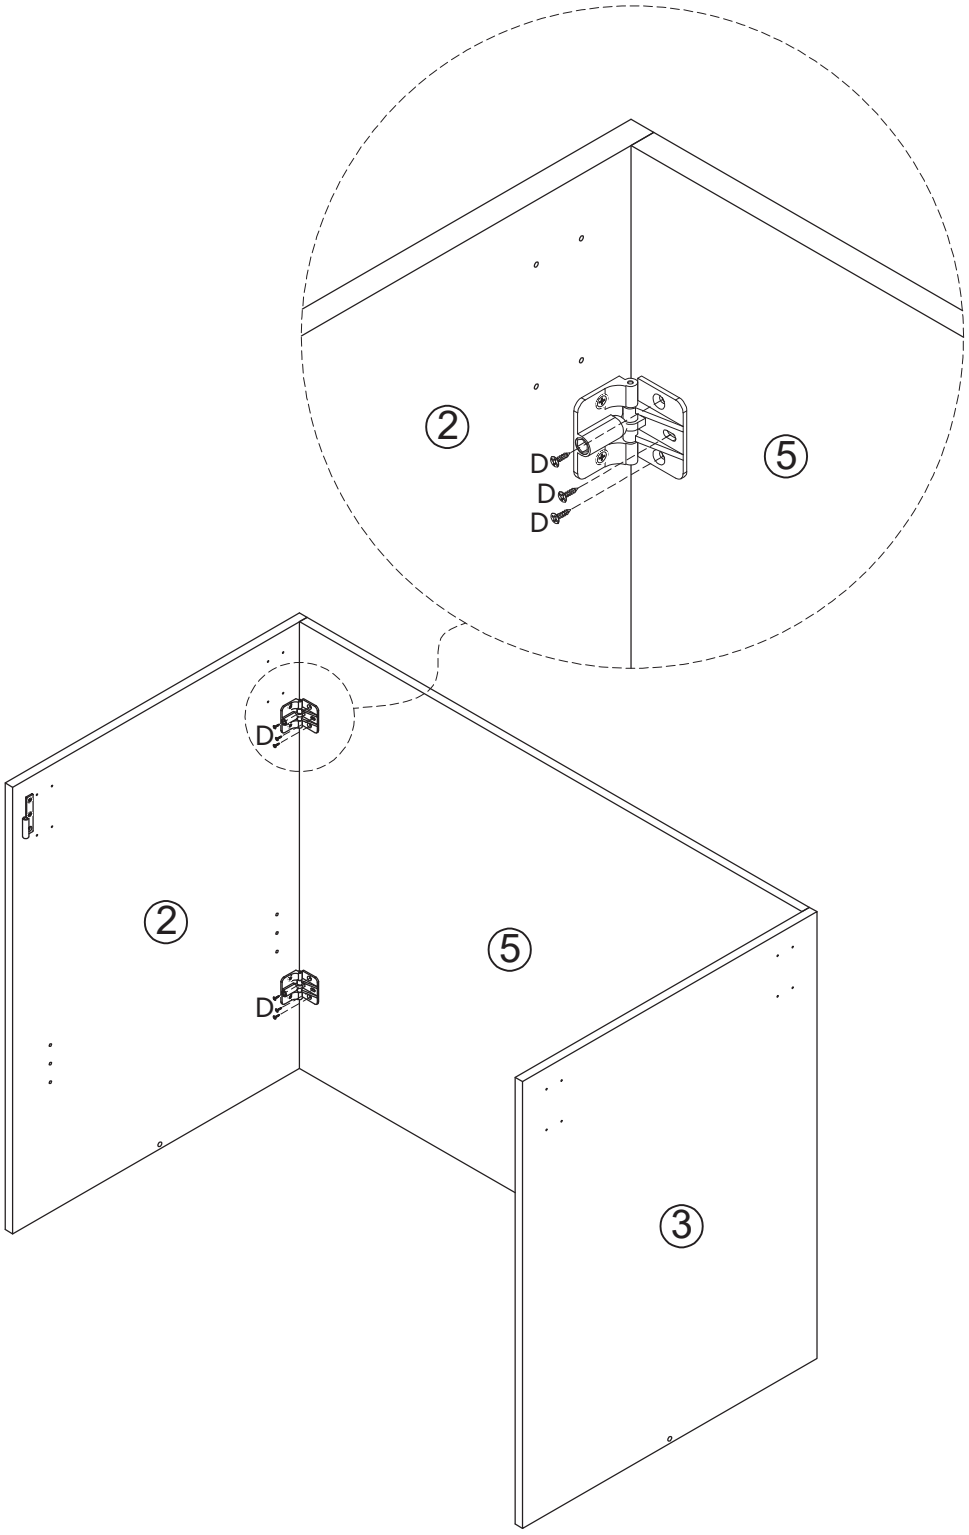



Align left side panel ② with back panel ⑤ at 90°. Secure with brackets and screws D x6 to form U-shaped frame.

D×6

Ø3.5×12

06

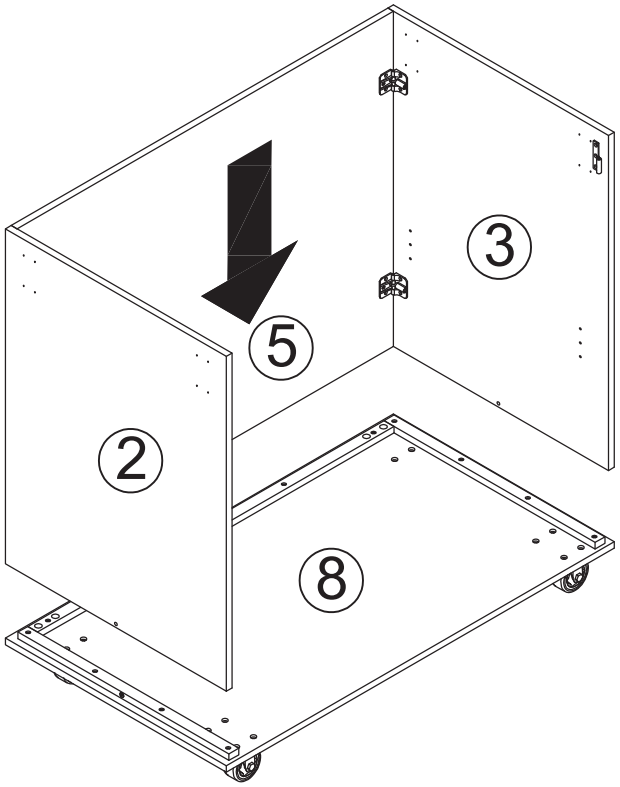


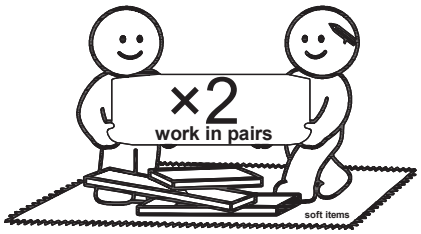

ASSEMBLED BY 2 ADULTS

Lift the U-shaped frame (2 people needed) and lower it vertically onto base panel ⑧. Align all holes. 2 adults required.


07

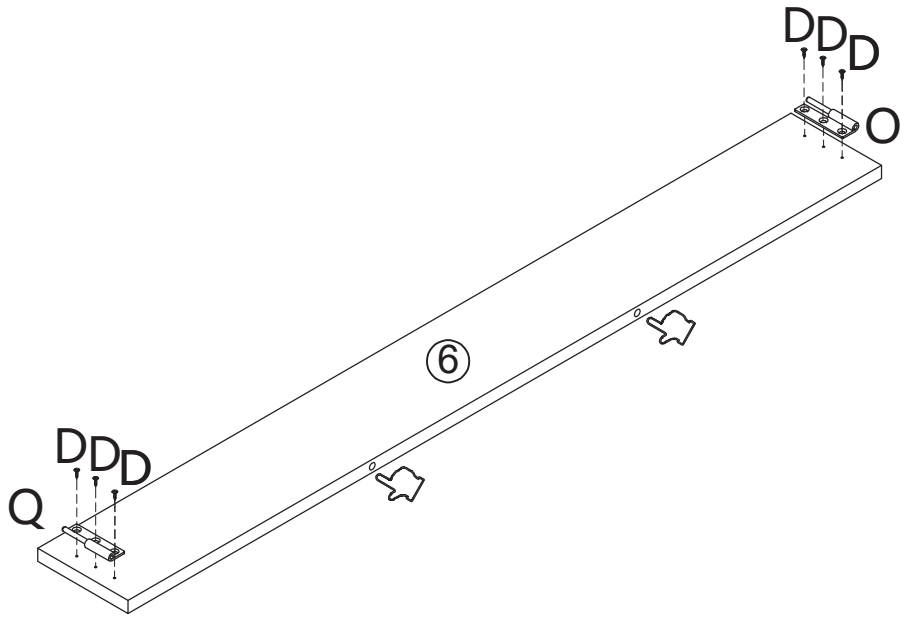

Lay front cross beam ⑥ flat. Attach connector O and Q to each end with screws D x3 each.

O Q	D×6
O×1 Q×1	Ø3.5×12

08

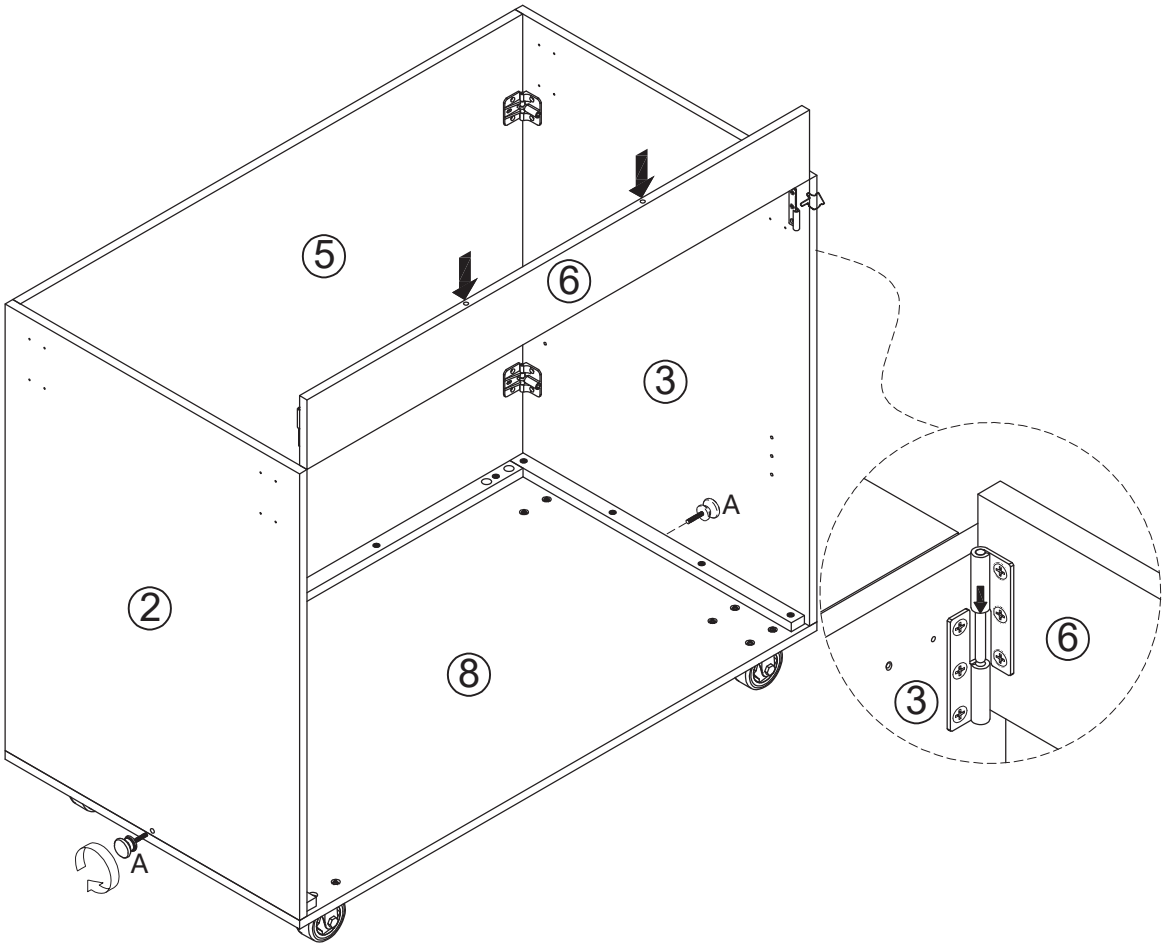


Insert front cross beam ⑥ into the front opening. Align with connectors N/P and secure with hinges A x2 on both sides.


A×2




09

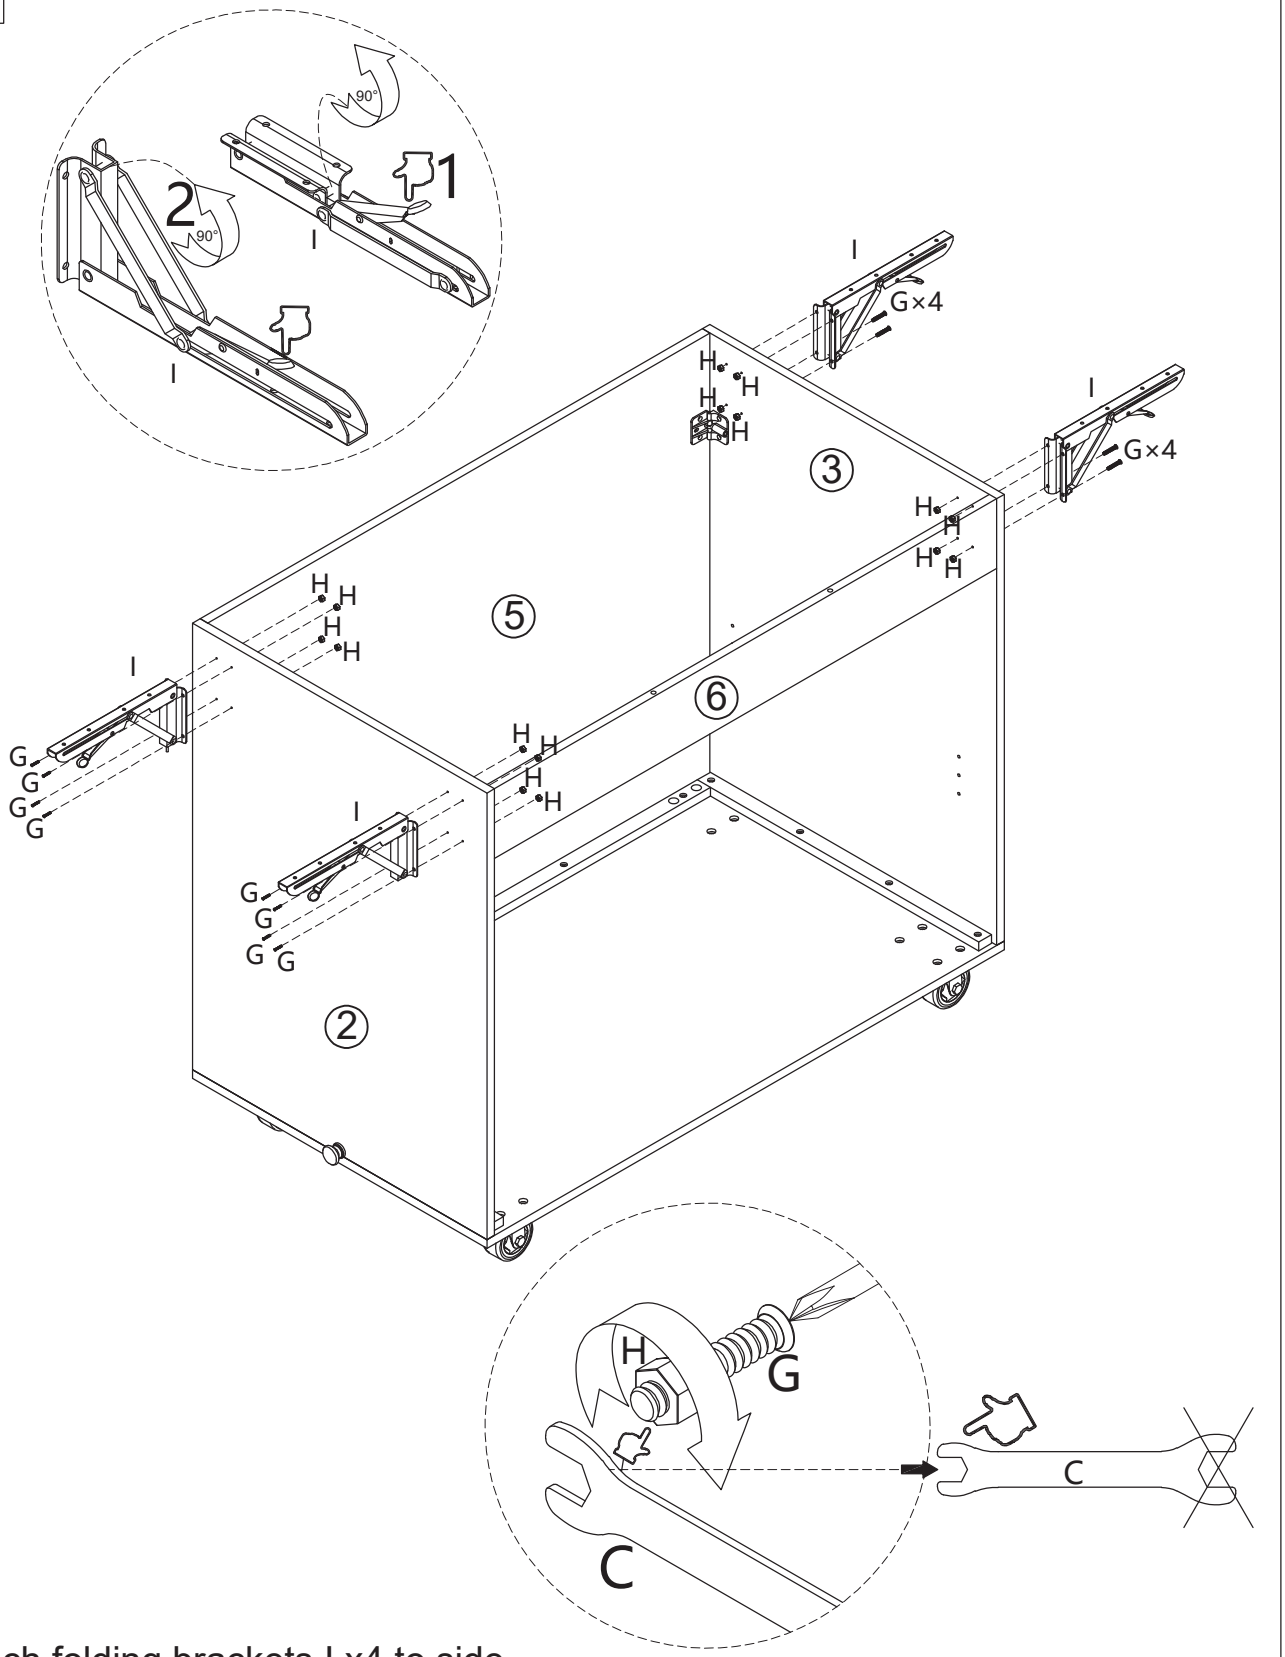

Attach folding brackets I x4 to side panels ② and ③. Secure with bolts G x16 and nuts H x16. Tighten with wrench C.

C×1	G×16	H×16	I×4
			

10

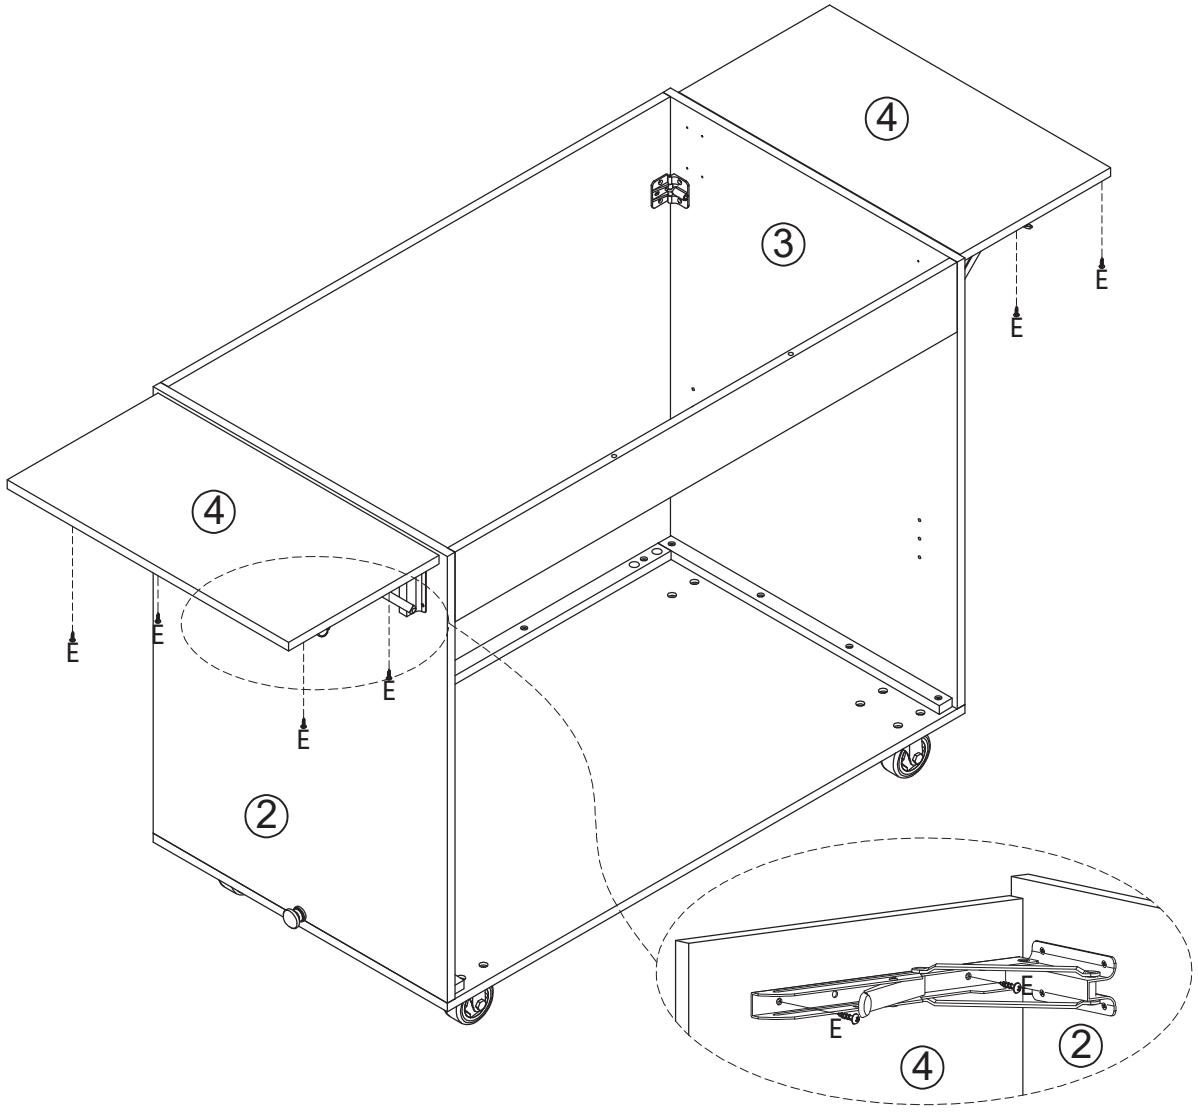


Place shelf ④ onto the brackets. Secure from underneath with screws E x8.

E×8


Ø4×14

11

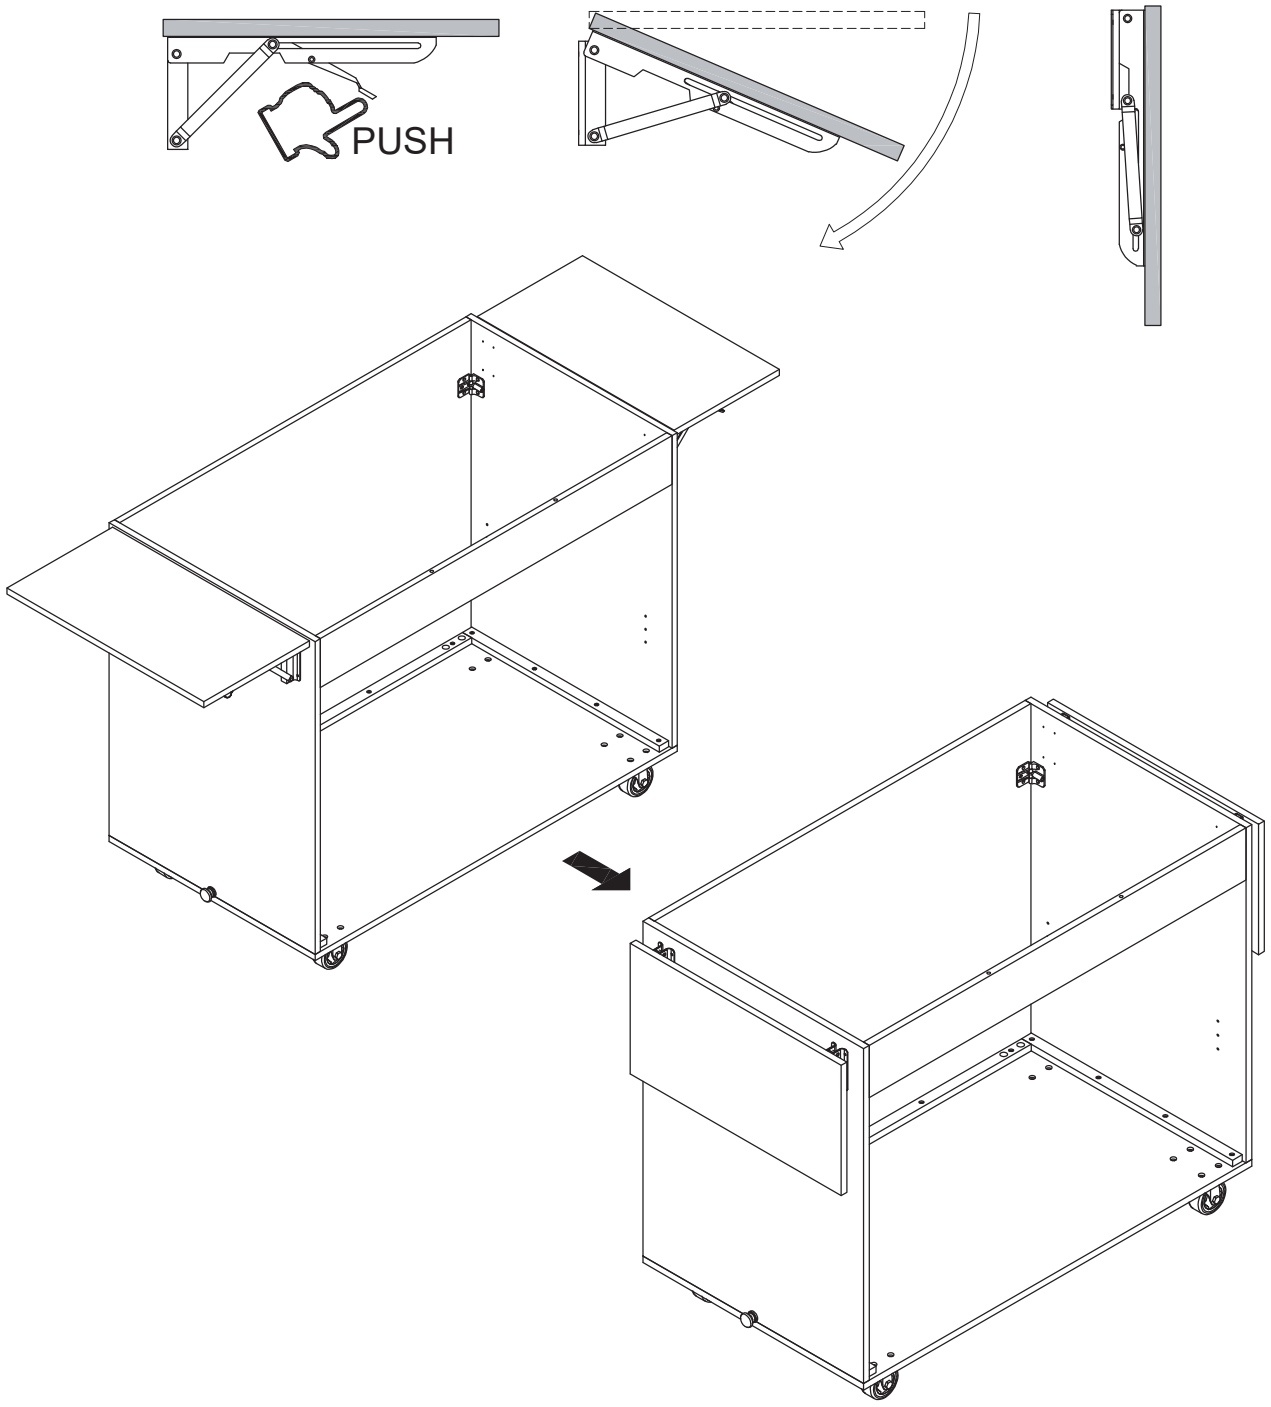

Press PUSH to fold down.

12

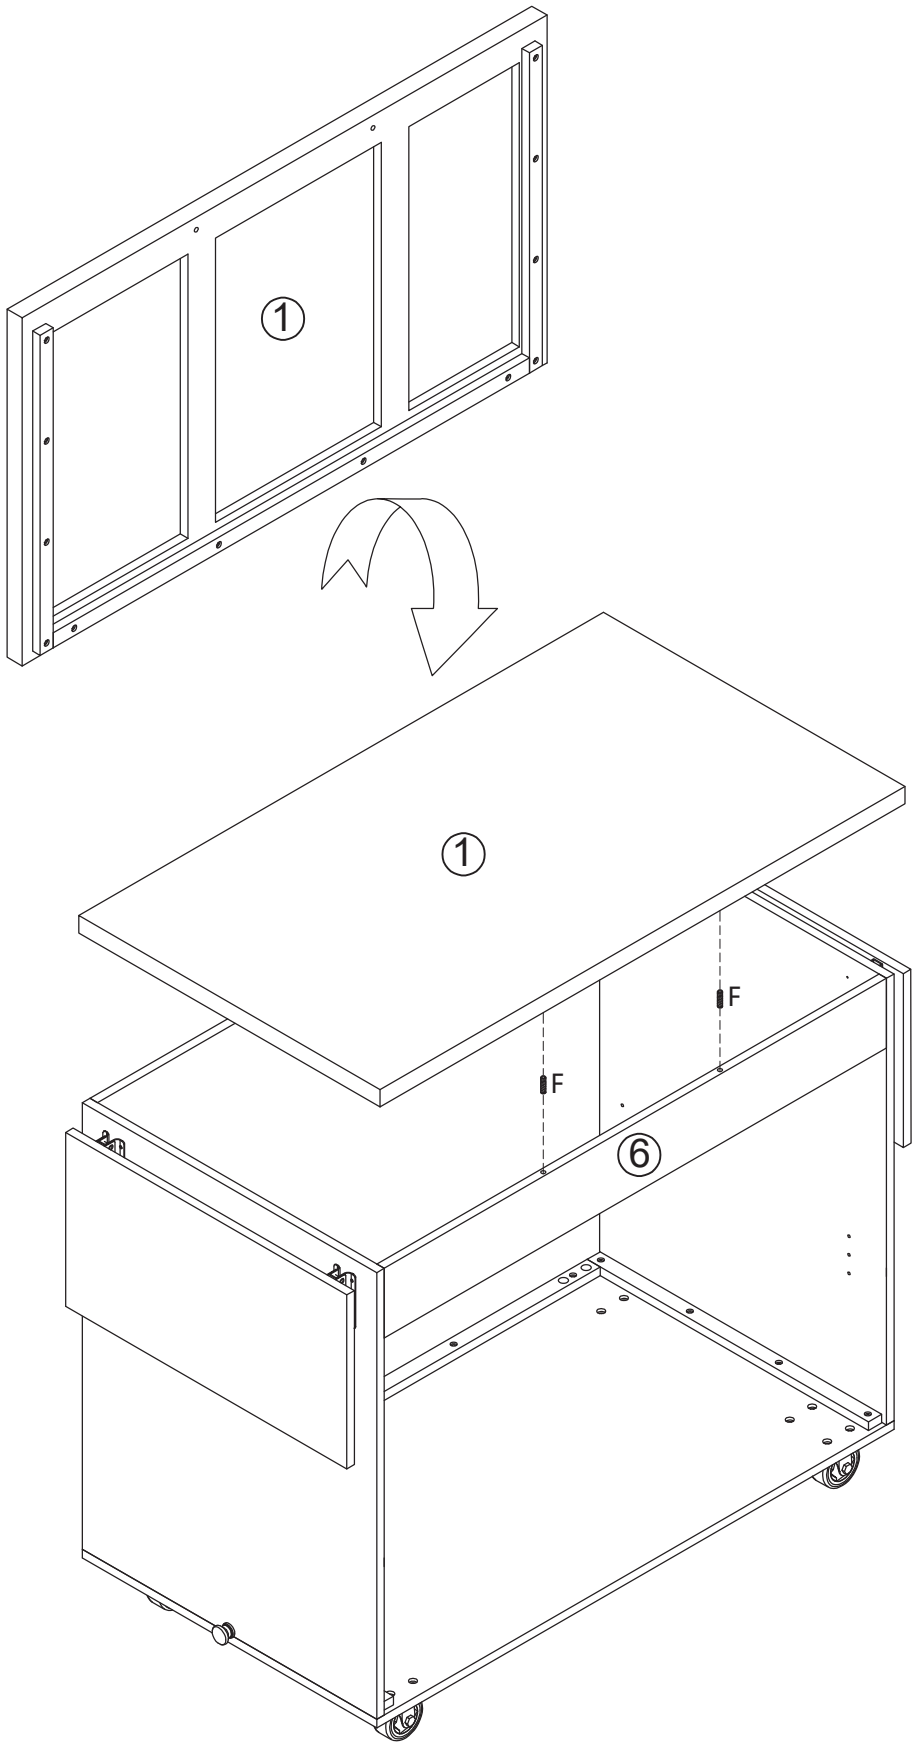


Place top panel ① on top of the cabinet. Align holes and insert dowel pins F x2 to secure.

F×2

Ø8×30


13

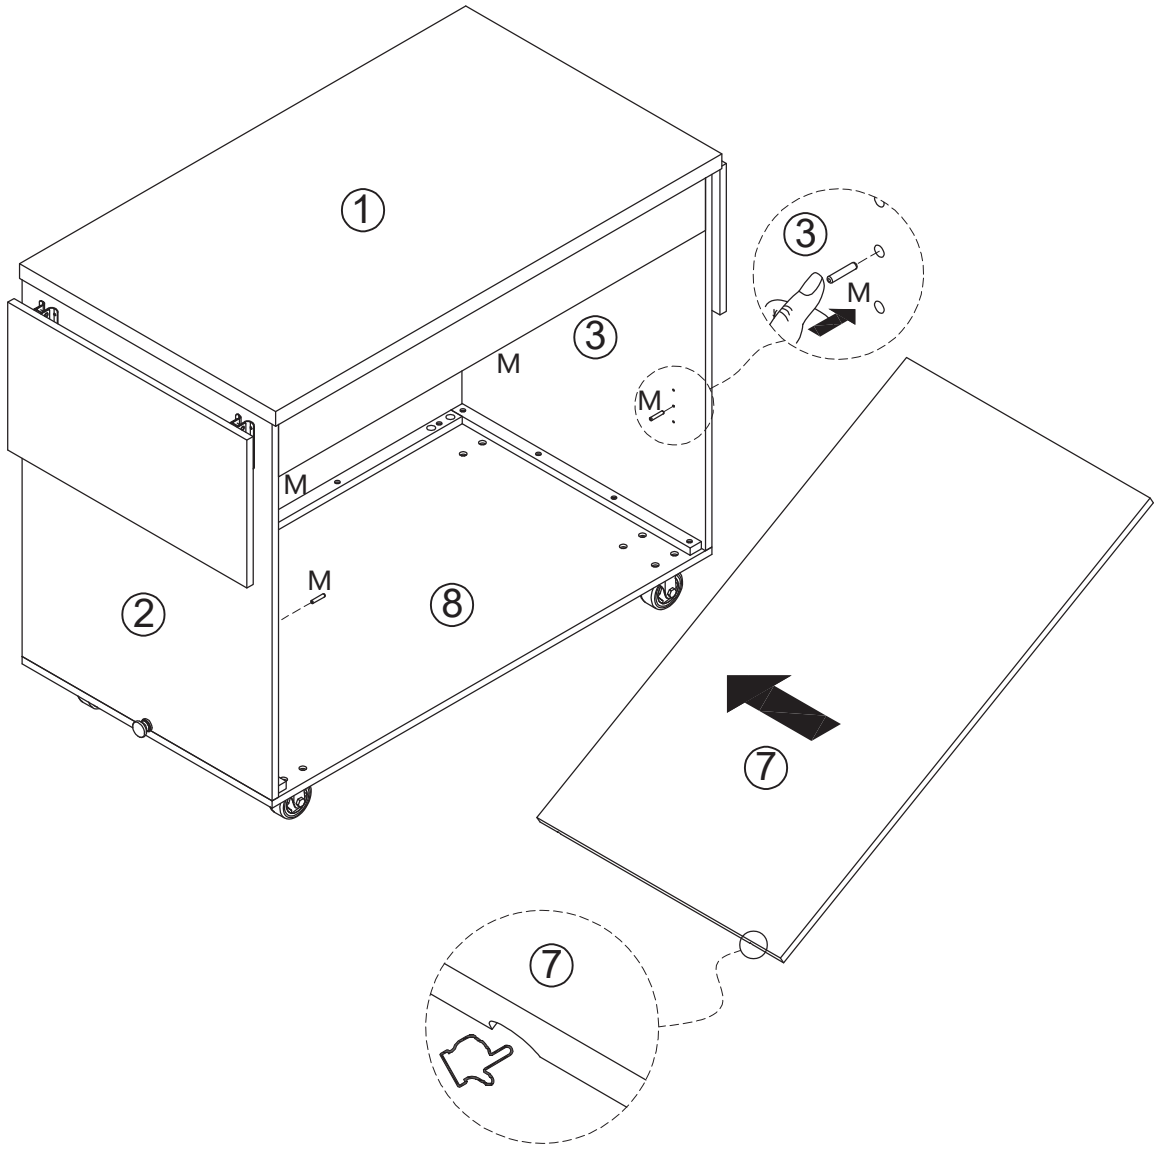


Place the adjustable shelf at your preferred position. Fully tighten all screws. Check casters, folding function and overall stability.

M×4



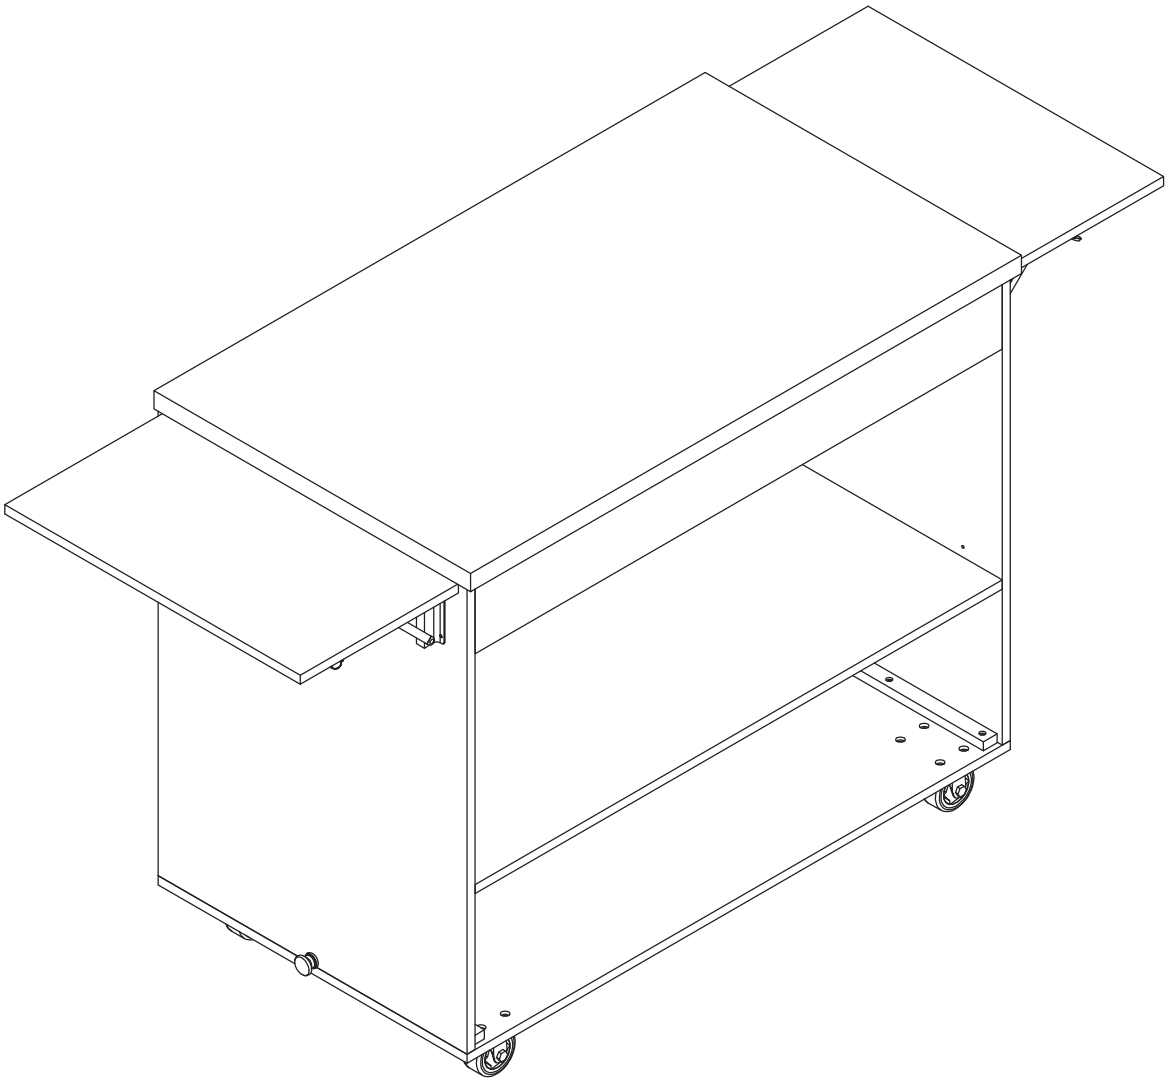

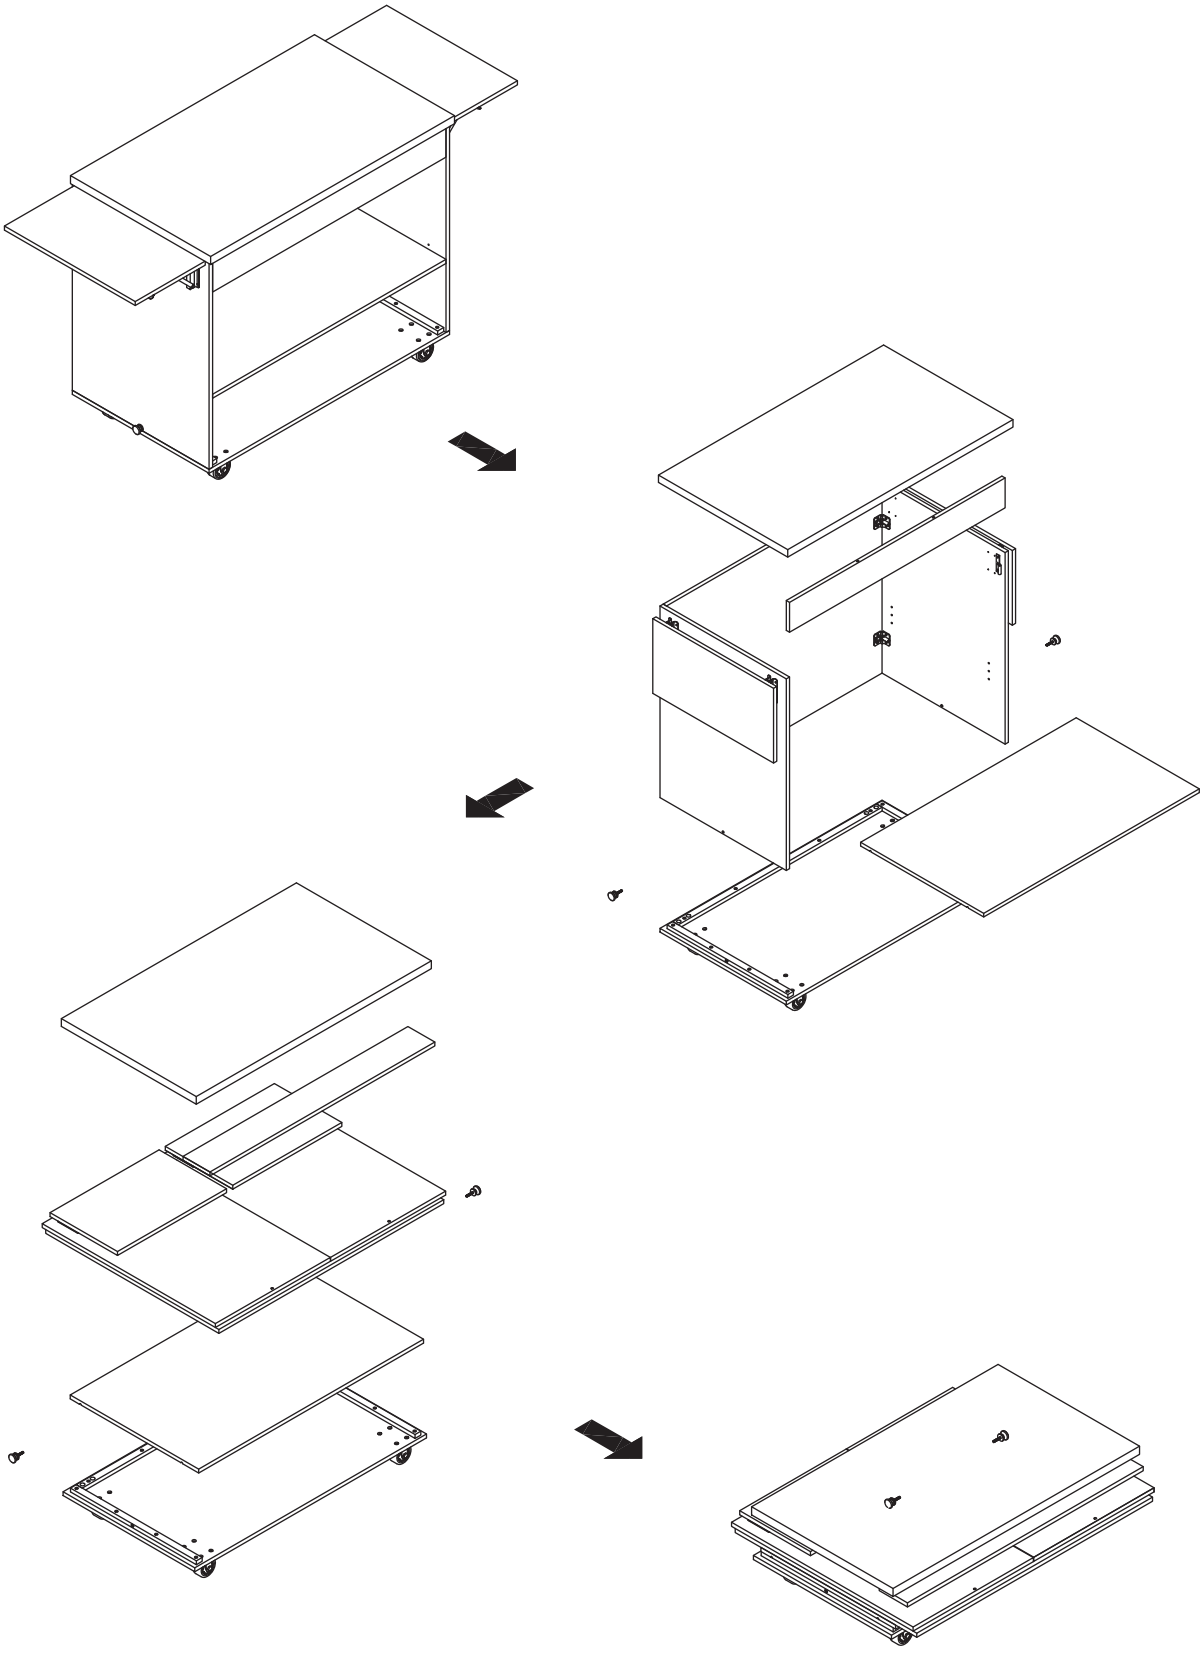

This product features a quick-fold design for easy transport and fast assembly.