



ASSEMBLY INSTRUCTIONS


León

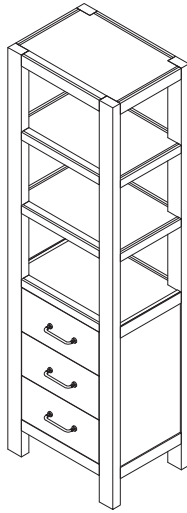


703822

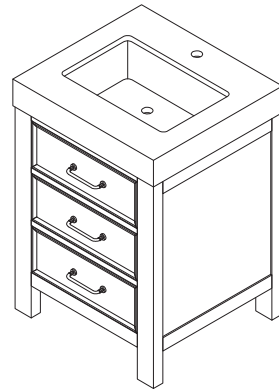


703824

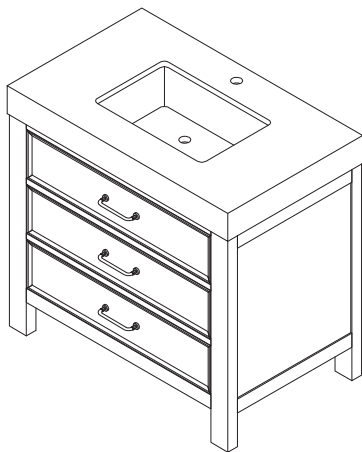


703836

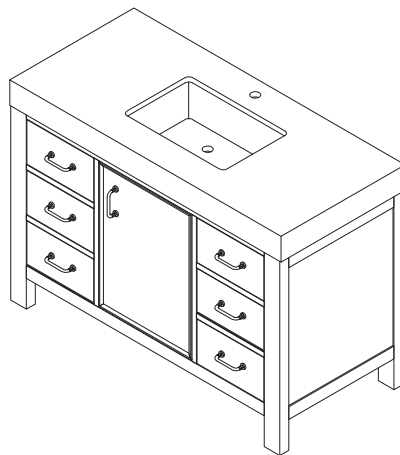


703848

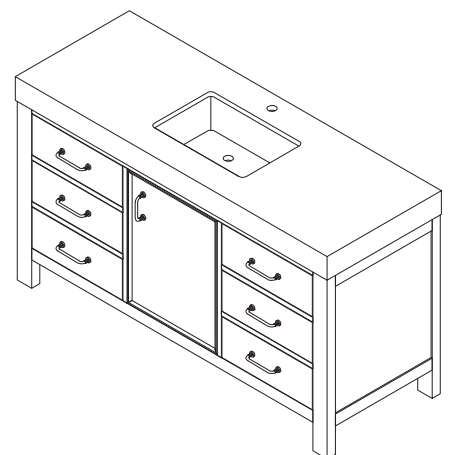


703860

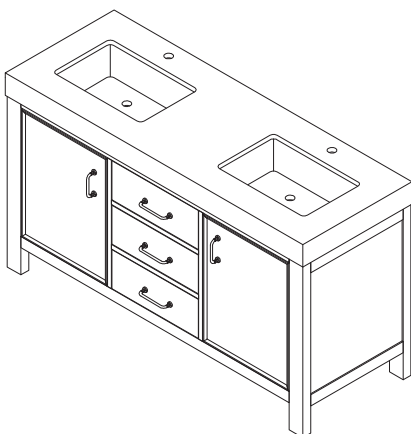


703860M

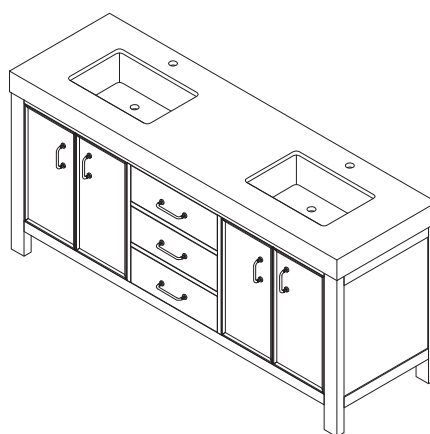

703872

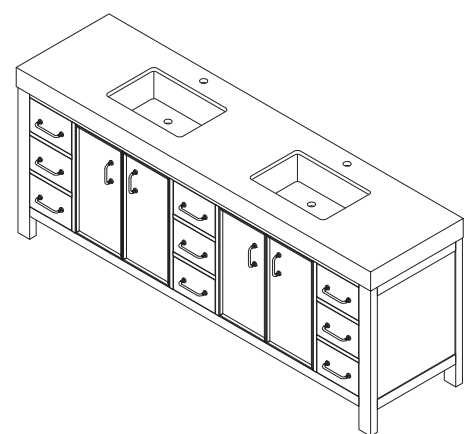

703884



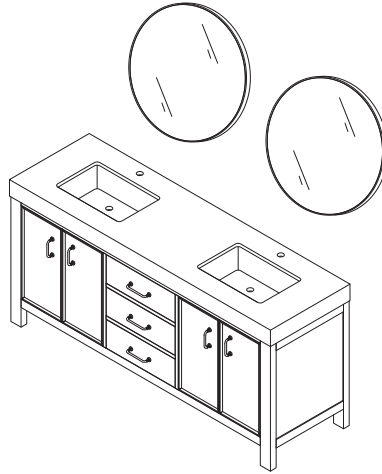


INSTALLING VANITY WITH TWO PEOPLE IS HIGHLY RECOMMENDED
L'INSTALLATION DE LA VANITÉ AVEC DEUX PERSONNES EST FORTEMENT RECOMMANDÉE


Box Contents/Contenu de la boîte

- Ceramic Basin/Countertop
Bassin/comptoir en céramique
- Vanity Base/Cabinet
Base de vanité/Cabinet
- Vanity Mirror/ Mirror
Miroir de courtoisie/Miroir

Main Body Parts/La partie principale du corps

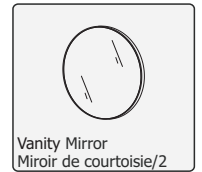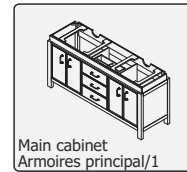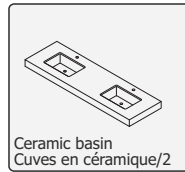


Main Cabinet Installation Instructions/
Instructions d'installation de l'armoire principale

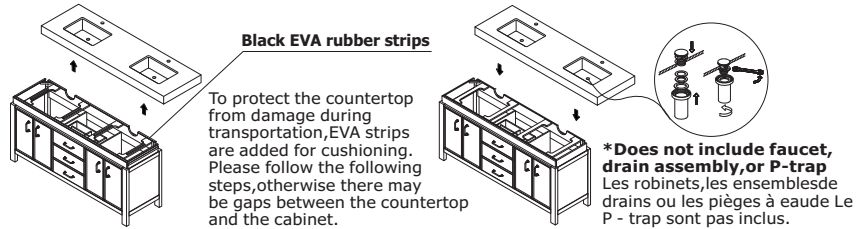

Installation Tips/Conseils d'installation

- Add silicone to attach frame/
Ajouter du silicone pour fixer le cadre
- Secure the countertop to the main cabinet/
Fixez le comptoir à l'armoire principale


- 1. Remove all black Eva strips**
Déchirez toutes les bandes noires Eva
- 2. Paste the countertop**
Coller le comptoir

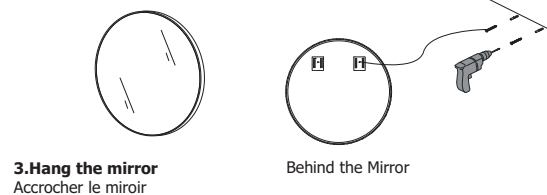


Recommended tools/Outils recommandés

- Tape measure/
mètre à ruban
- Pencil/
Crayon
- Screwdriver (Manual/Mechanical)/
Tournevis (manuel/mécanique)
- Level/Niveau
- Calking & Calking Gun/
Pistolet à calfeutrer et à calfeutrer


Installation tool/Outil d'installation



Installation, Removal and Adjustment of Hinges on Vanity

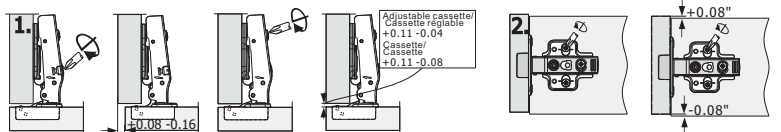

Installation Instruction/Instructions d'installation

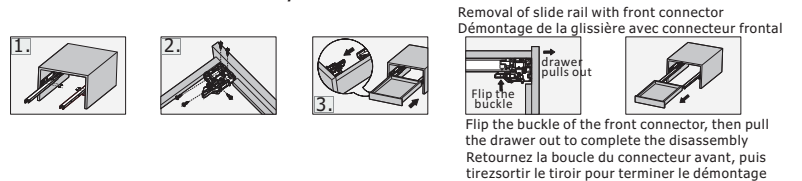

• Please check your product packaging to make sure the included accessories etc.

