


ASSEMBLY INSTRUCTIONS

Item No : WF299165AAK + WF299166AAK + WF299167AAK

Description : DAY BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

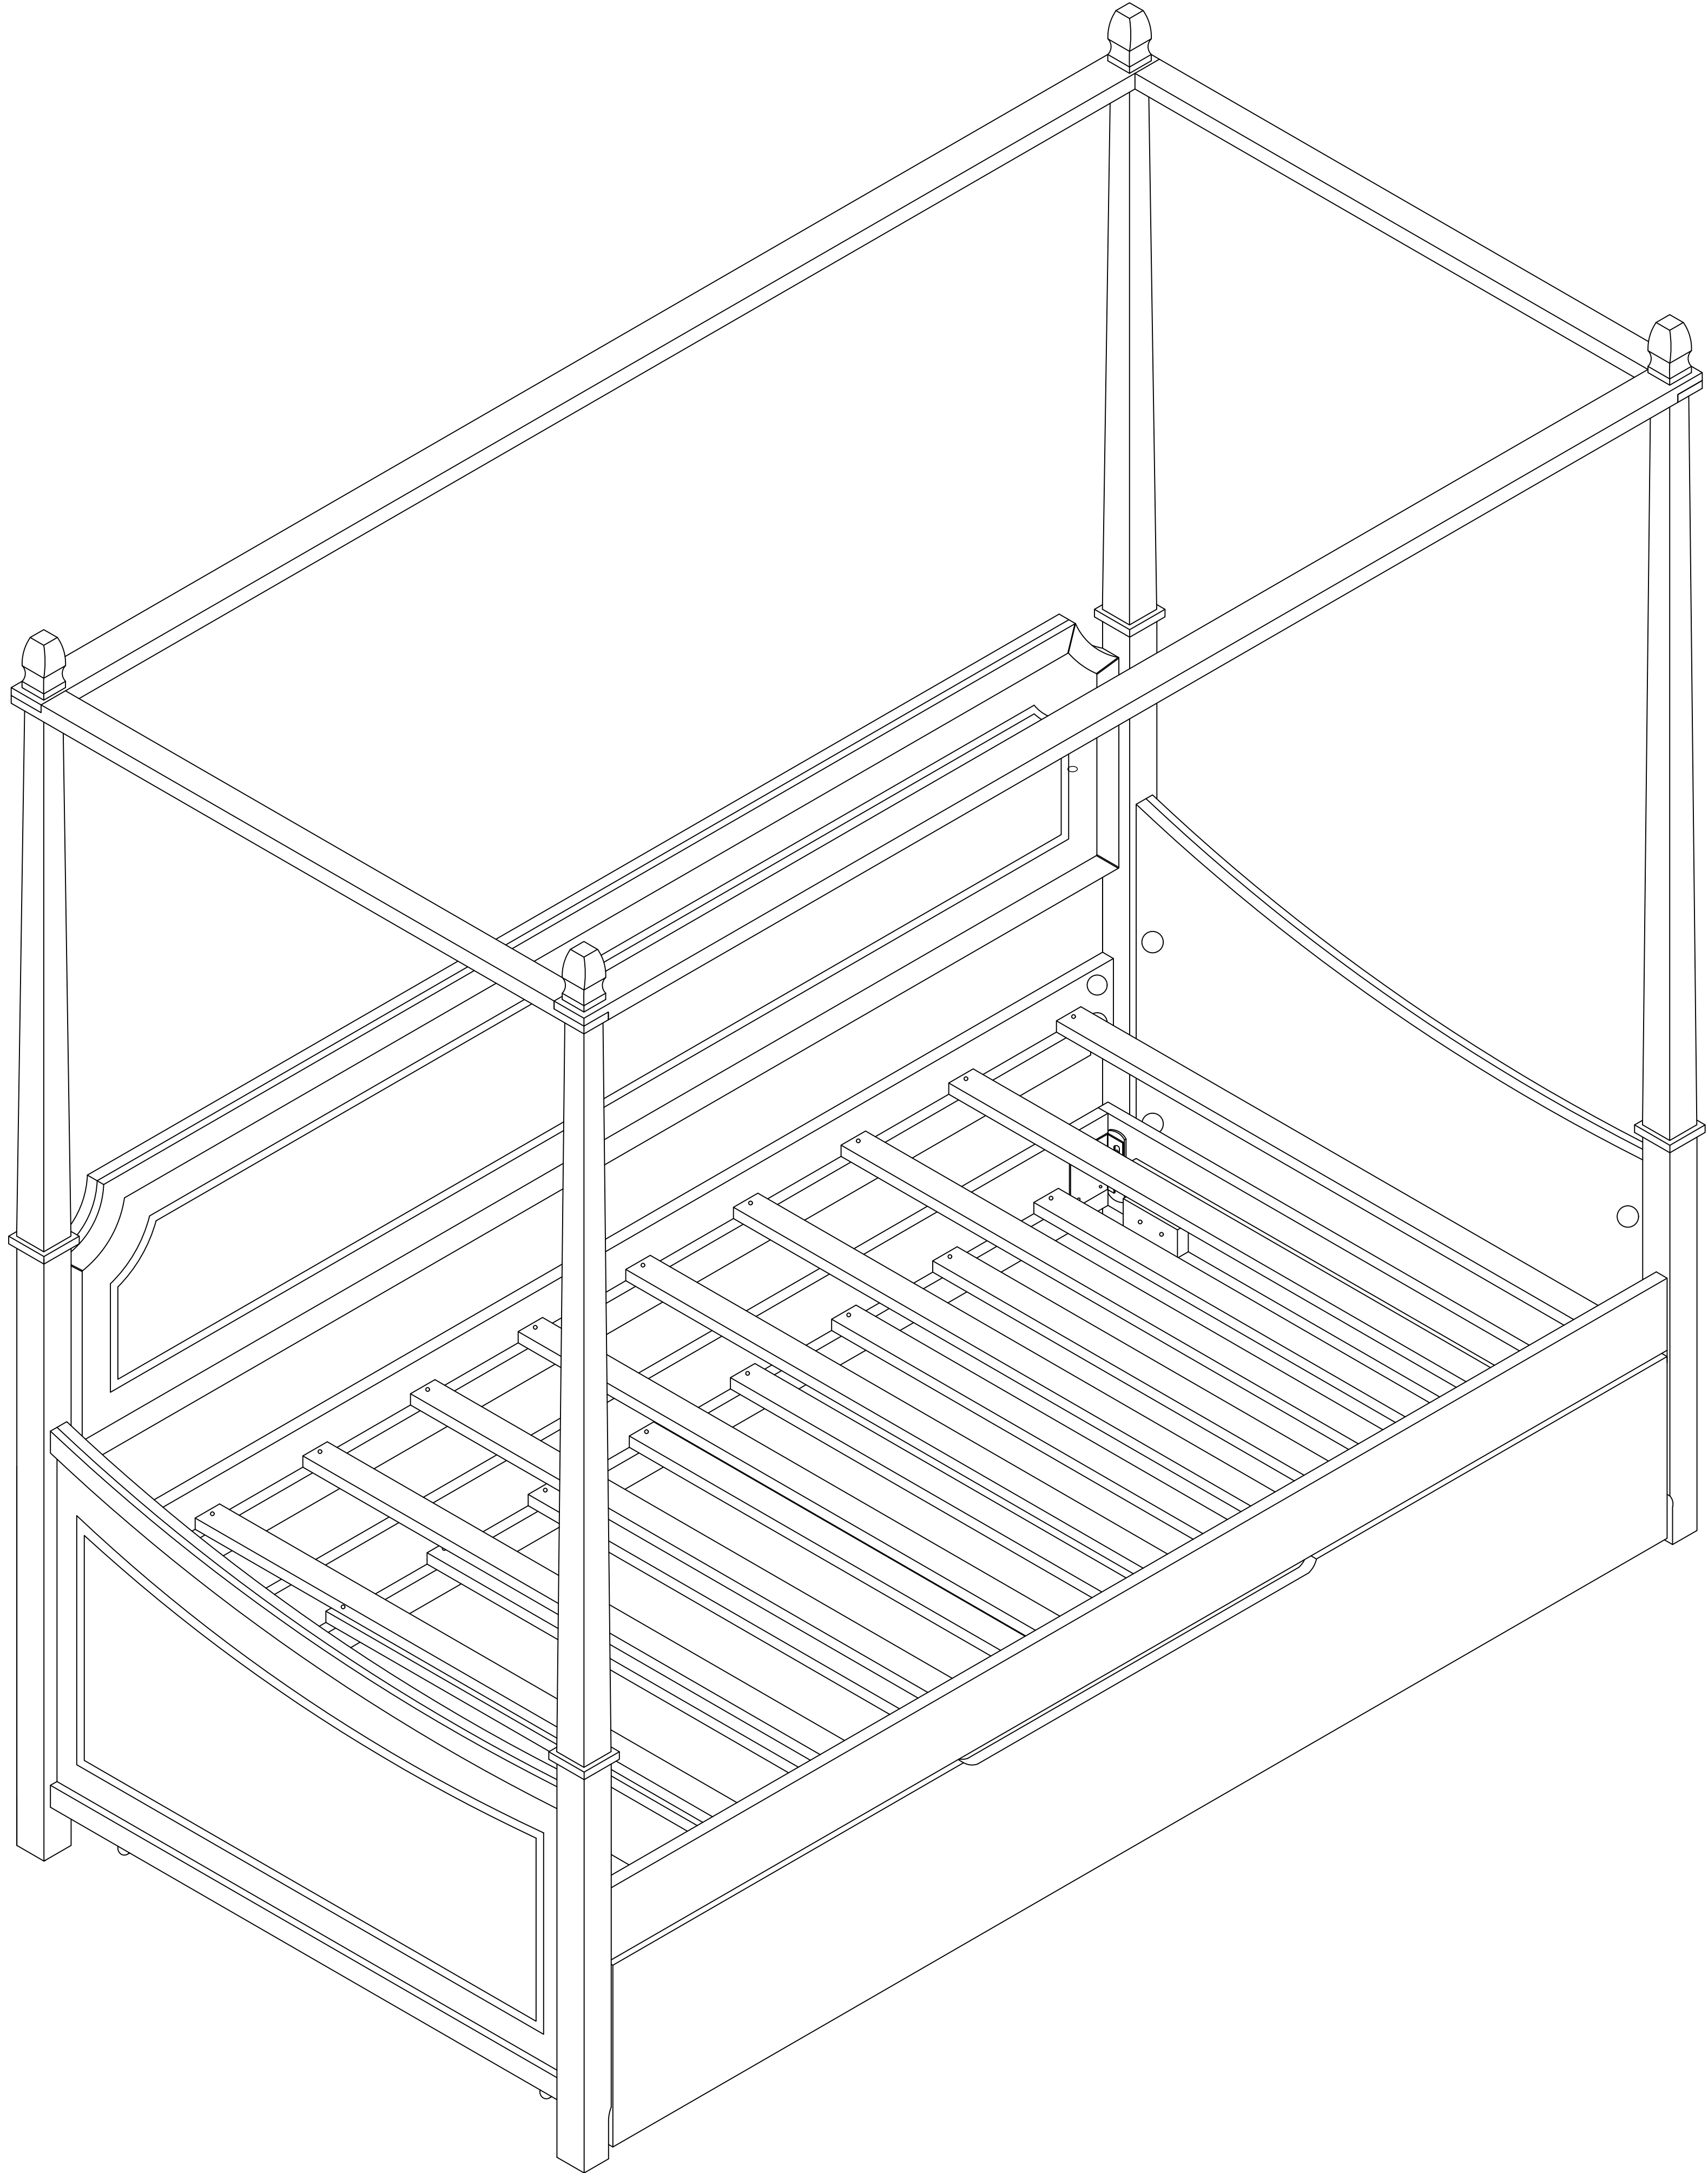


WF299165AAK + WF299166AAK + WF299167AAK

ASSEMBLY INSTRUCTIONS


Item No : WF299165AAK + WF299166AAK + WF299167AAK

Description : DAY BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

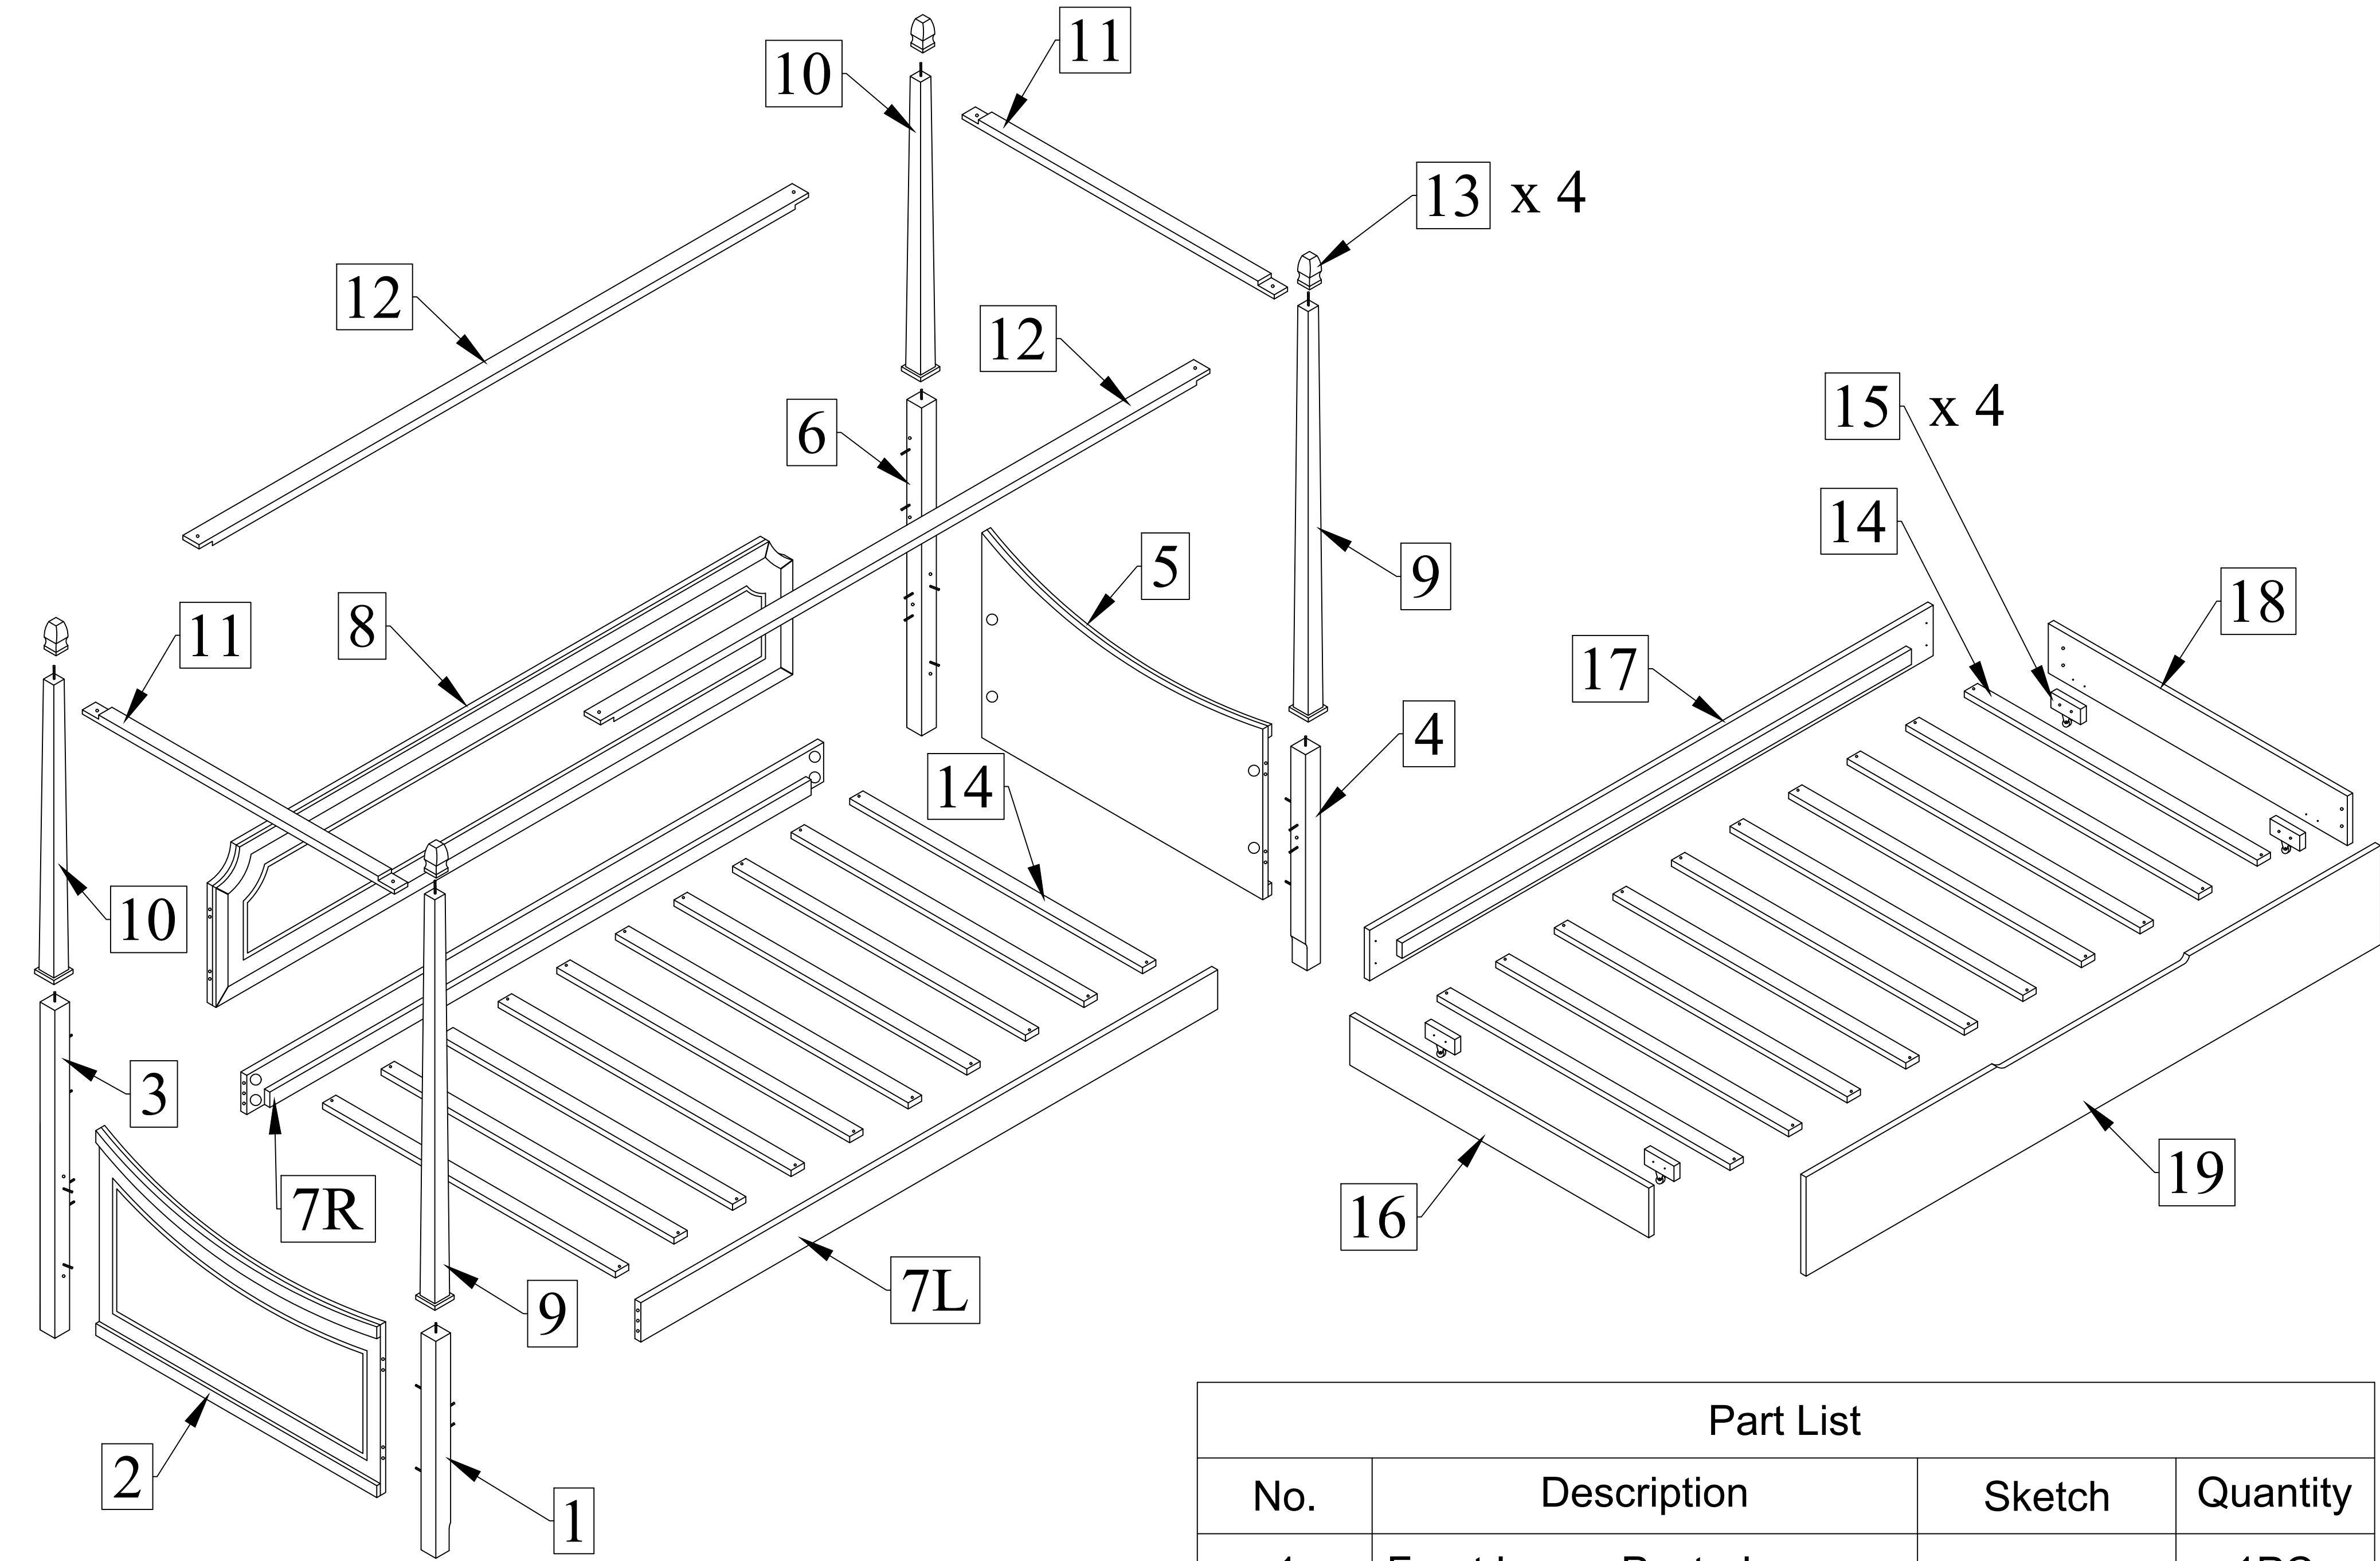

TOOLS REQUIRED (Not provided)



Screwdriver

Hardware List

No.	Description	Sketch	Quantity
A	Wood Dowel M8x30MM		16PCS
B	I - Bracket		2PCS
C	Screw M3.5 x 16MM		38PCS
D	Iron Plate		4PCS
E	Bed Bracket - 2L2R		4PCS
F	Screw M4 x 32MM		48PCS
G	Hex Nut		20PCS
H	Spring Washer		22PCS
I	Spanner		1PC
J	JCBC M6 x 80MM		2PCS
K	Flat Washer		2PCS
L	Allen Key M4		1PC
M	Bolt		8PCS
N	Allen Key M5		1PC


Part List

No.	Description	Sketch	Quantity
1	Front Lower Post - L		1PC
2	Side Panel - L		1PC
3	Back Lower Post - L		1PC
4	Front Lower Post - R		1PC
5	Side Panel - R		1PC
6	Back Lower Post - R		1PC
7	Bed Side Rail (L&R)		2PCS
8	Headbord		1PC
9	Front Post		2PCS
10	Back Post		2PCS
11	Top Frame - Side		2PCS
12	Top Frame - Front & Back		2PCS
13	Crown		4PCS
14	Bed Slats		20PCS
15	Caster Support		4PCS
16	Trundle Bed Side - L		1PC
17	Trundle Bed Rail		1PC
18	Trundle Bed Side - R		1PC
19	Trundle Bed		1PC

ASSEMBLY INSTRUCTIONS
Item No : WF299165AAK + WF299166AAK + WF299167AAK
Description : DAY BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 1 : Attach Wood Dowel (A) to parts (2,5,7,8) accordingly. Attach I-Bracket (B) onto Bed Side Rail (7L) with Screw (C). Attach Iron Plate (D) and Bed Bracket (E) to parts (16,17,18,19) accordingly using Screw (C). Connect Caster Support (15) to Trundle Bed Sides (16,18) with Screw (F).



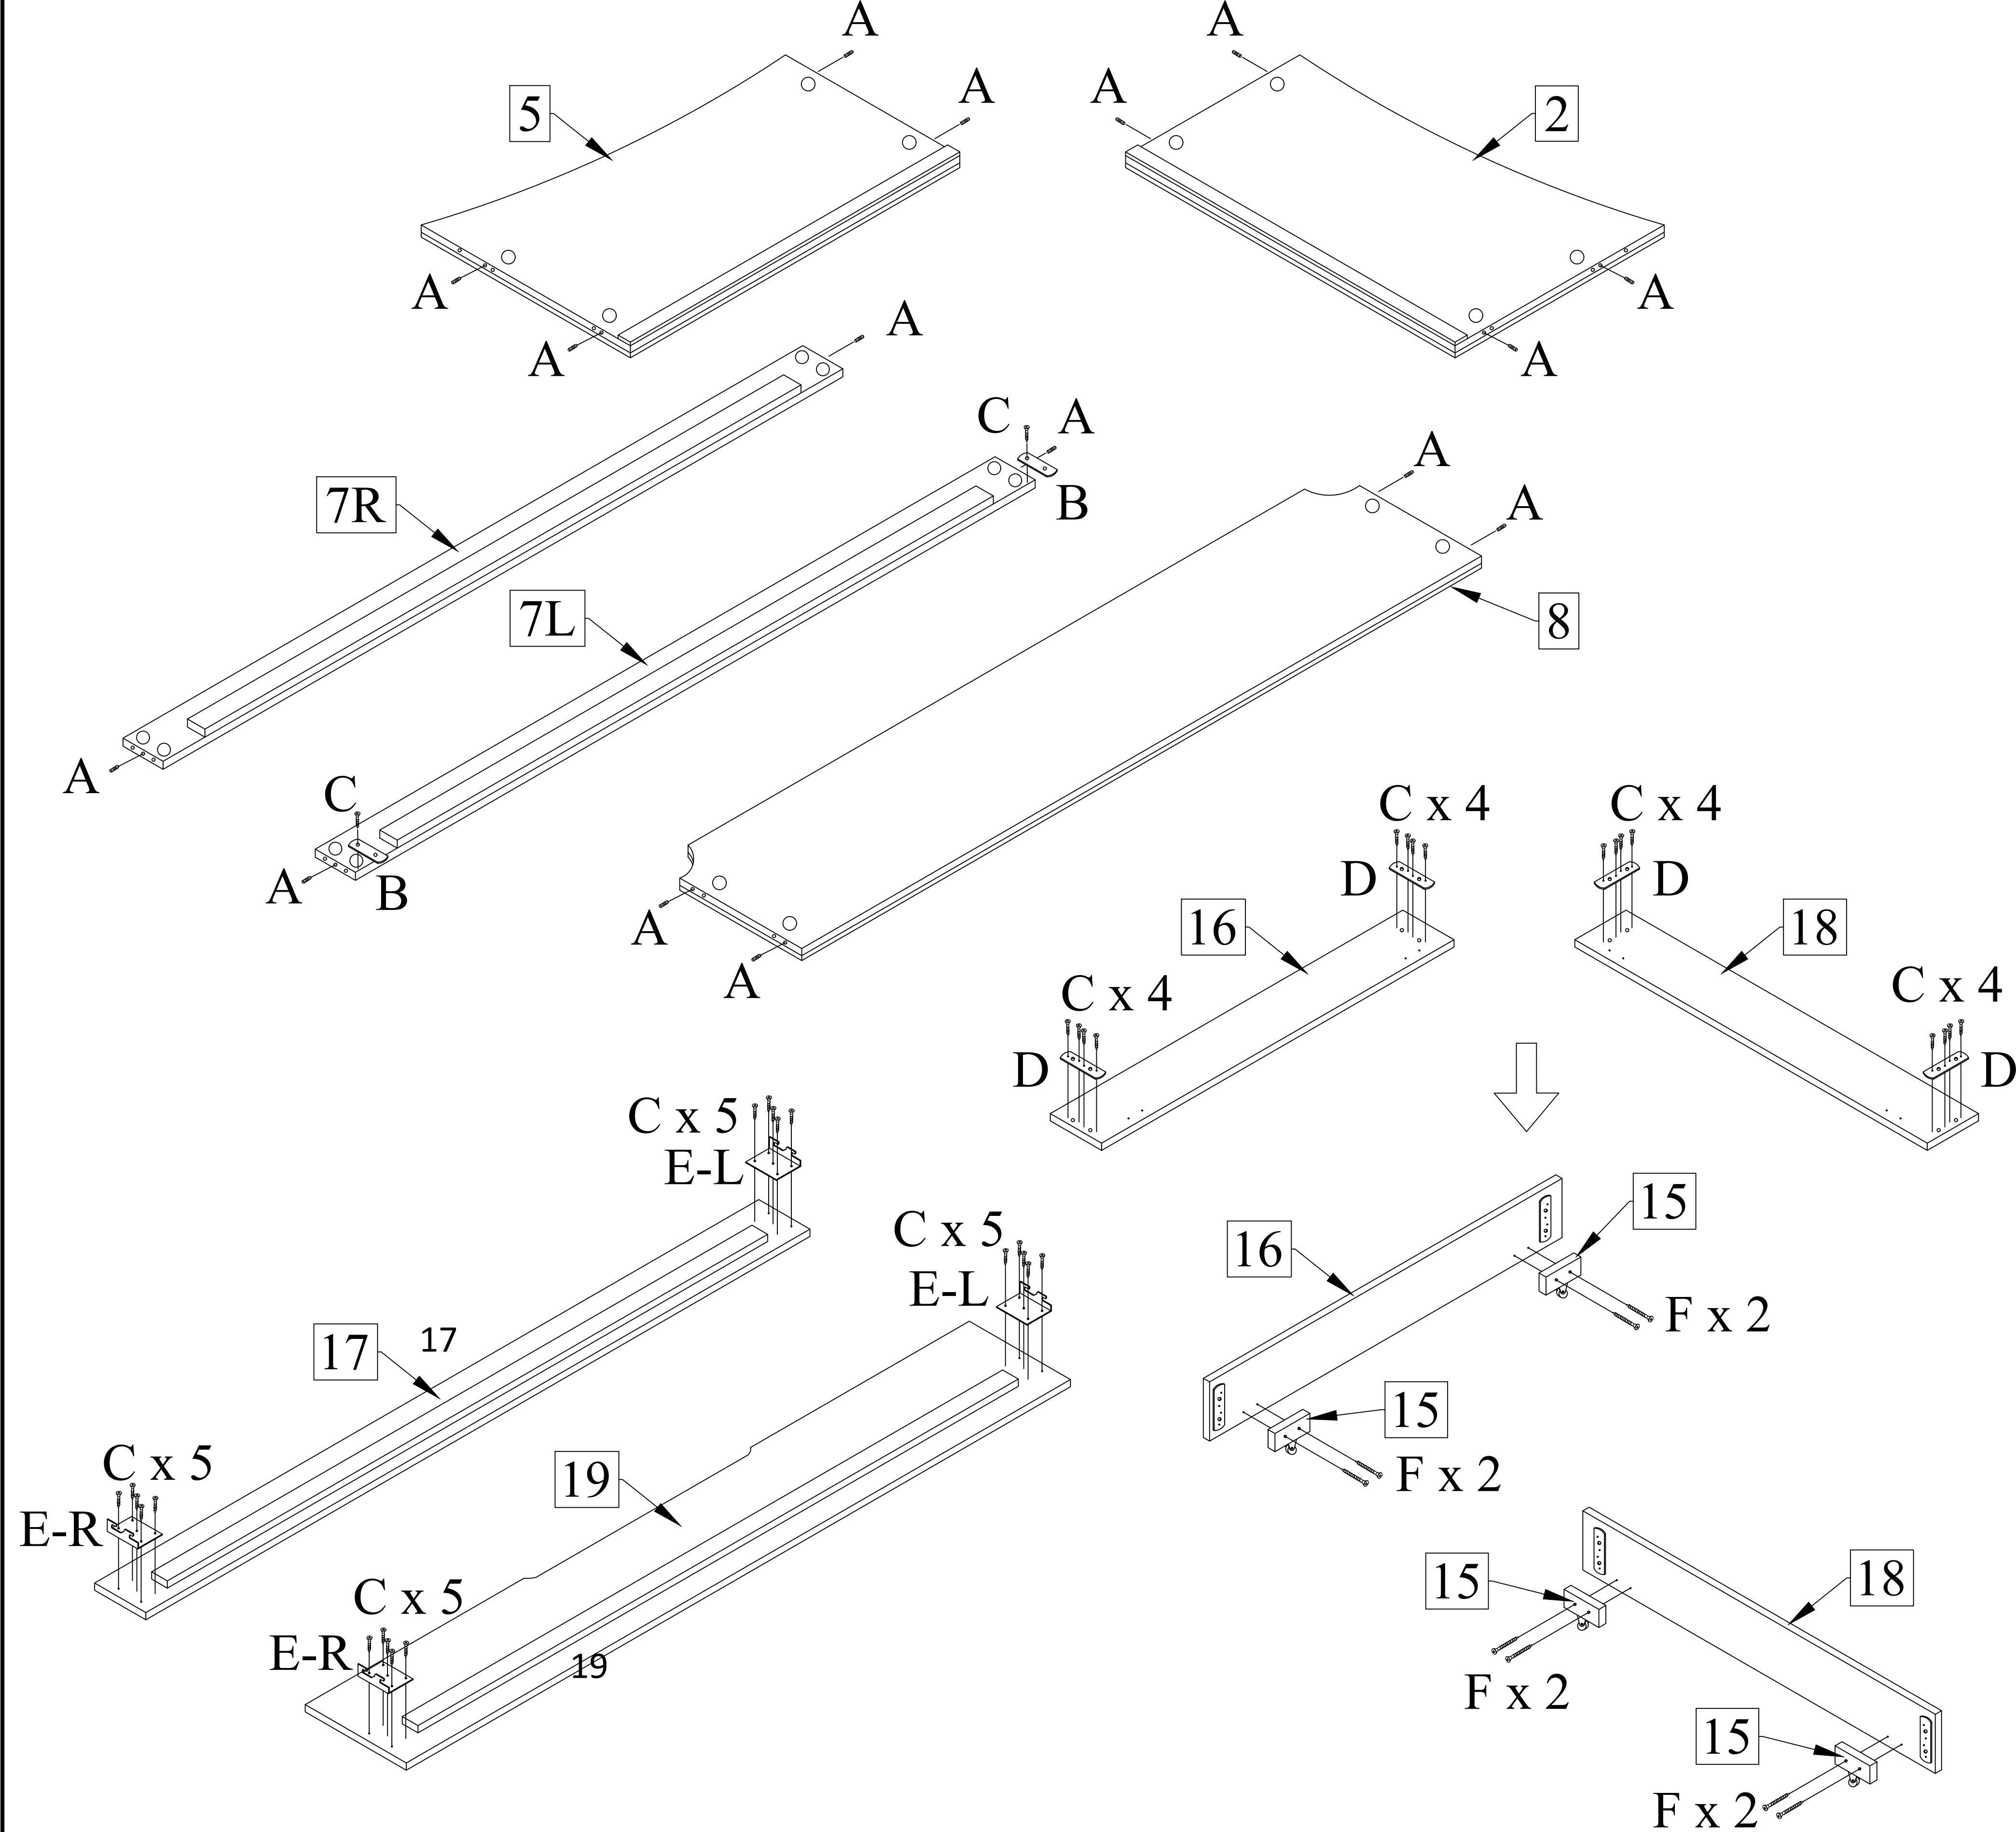




			A	Wood Dowel M8x30MM		16PCS
			B	I - Bracket		2PCS
			C	Screw M3.5x16MM		38PCS
			D	Iron Plate		4PCS
			E	Bed Bracket - 2L2R		4PCS
			F	Screw M4x32MM		8PCS

ASSEMBLY INSTRUCTIONS
Item No : WF299165AAK + WF299166AAK + WF299167AAK
Description : DAY BED



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 2 : Connect Side Panel L&R (2,5) to Lower Posts (1,3,4,6) and lock with Hex Nut (G) and Spring Washer (H) using Spanner (I) provided. Strengthen Back Lower Posts' connection (3,6) with JCBC (J), Spring Washer (H) and Flat Washer (K) using Allen Key M4 (L).

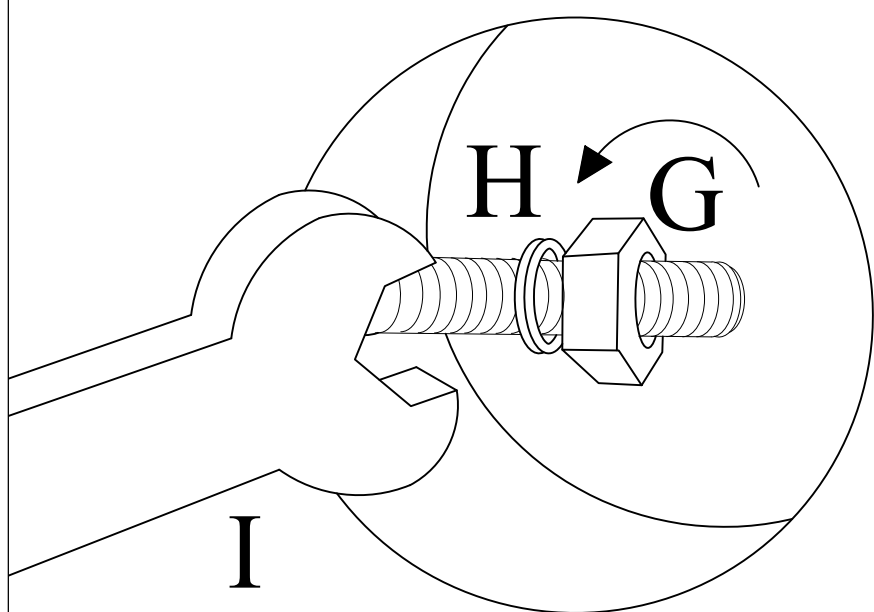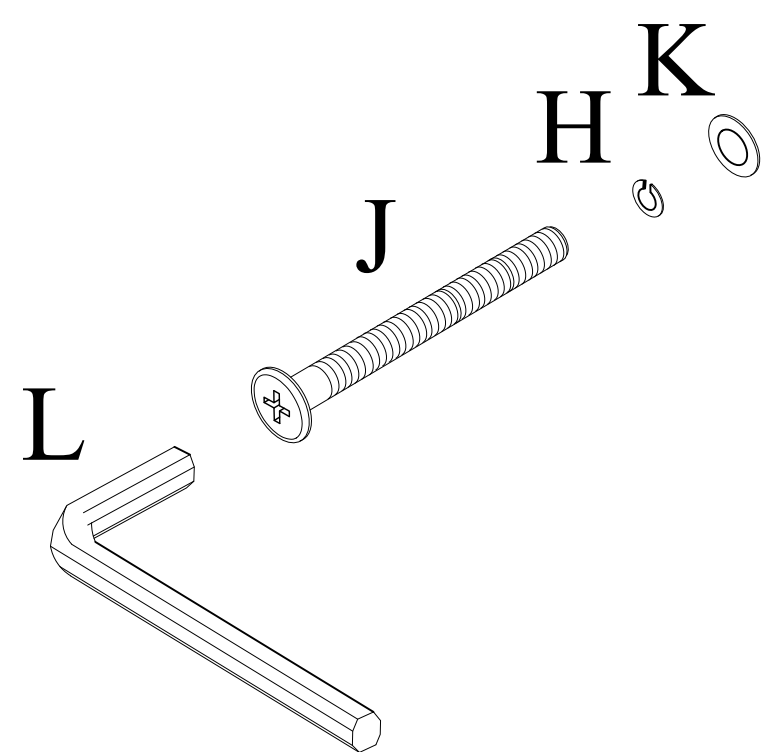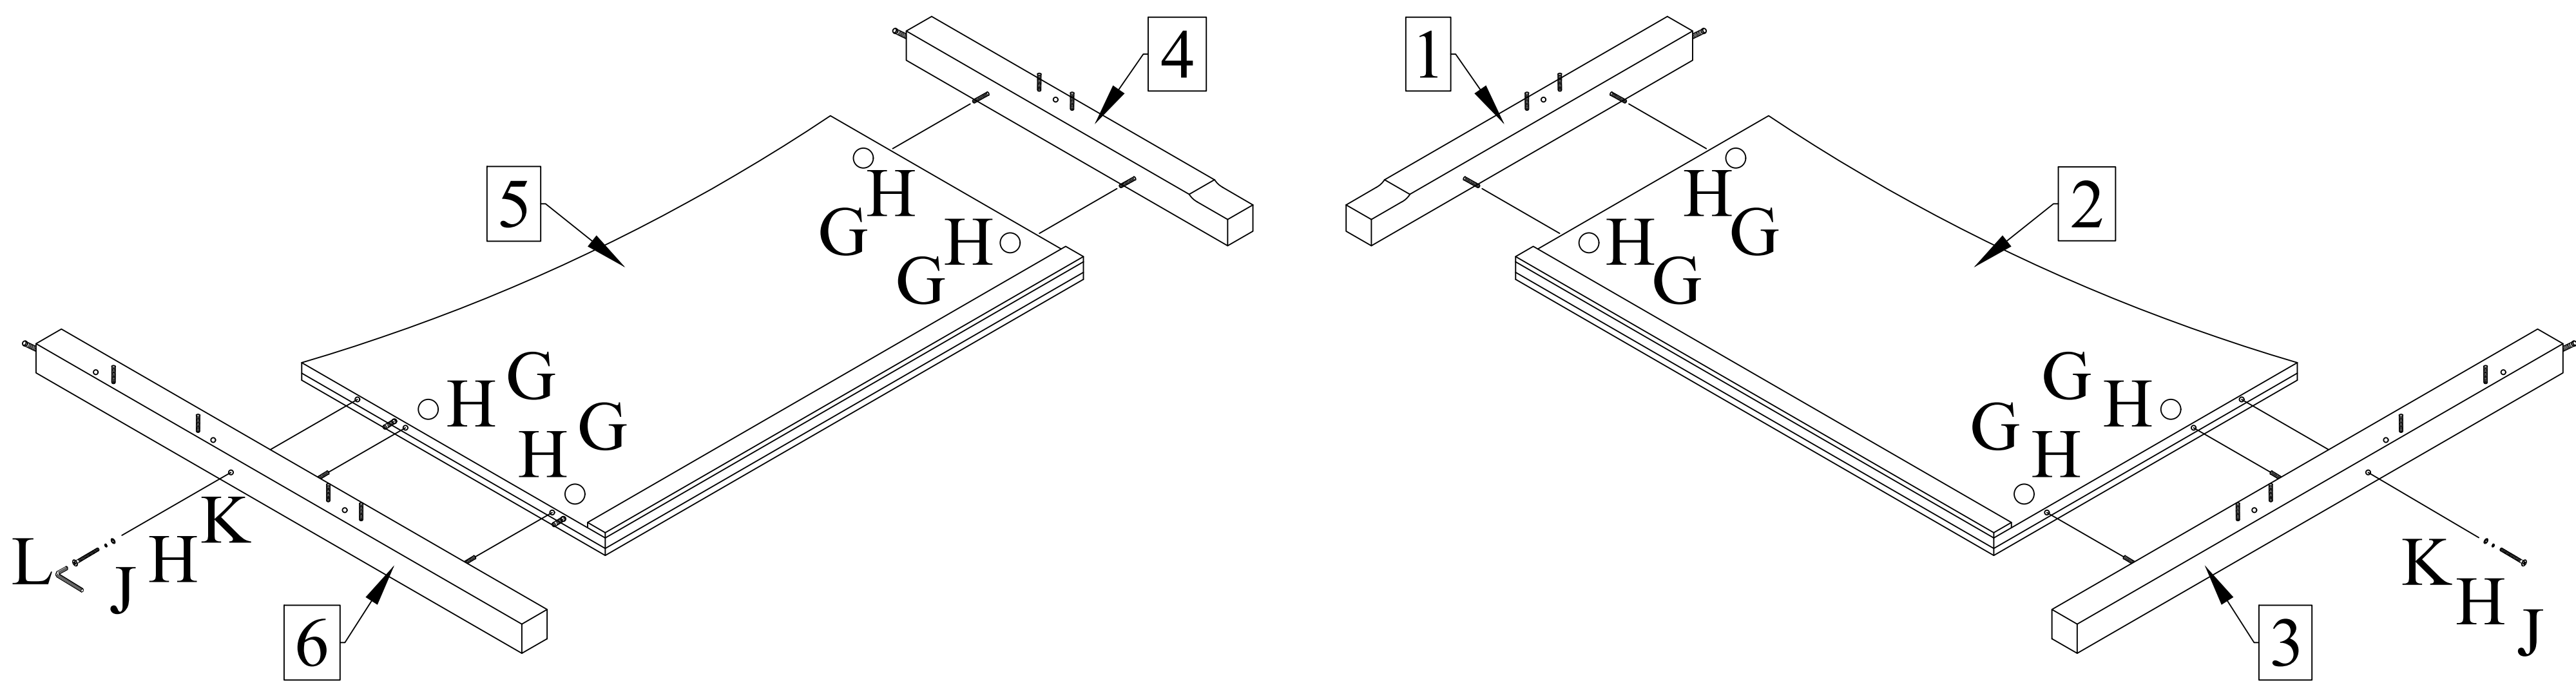

G	Hex Nut		8PCS
H	Spring Washer		10PCS
I	Spanner		1PC
J	JCBC M6x80MM		2PCS
K	Flat Washer		2PCS
L	Allen Key M4		1PC

Step 3 : Connect Bed Side Rails (7) and Headboard (8) to Side Panels and lock with Hex Nut (G) and Spring Washer (H) using Spanner (I) provided.

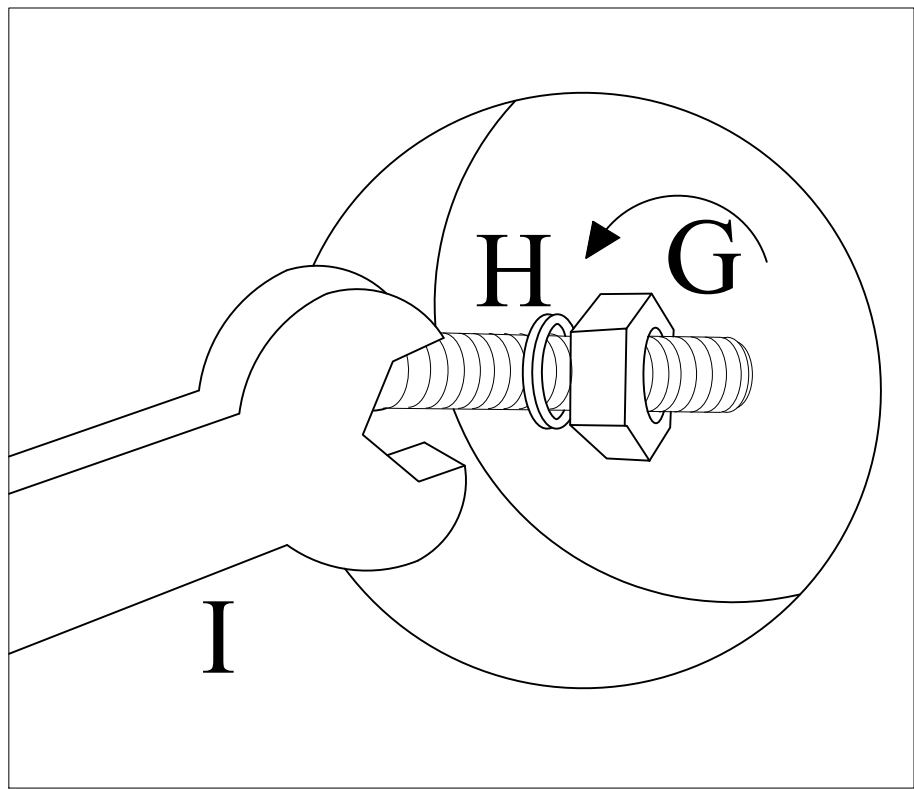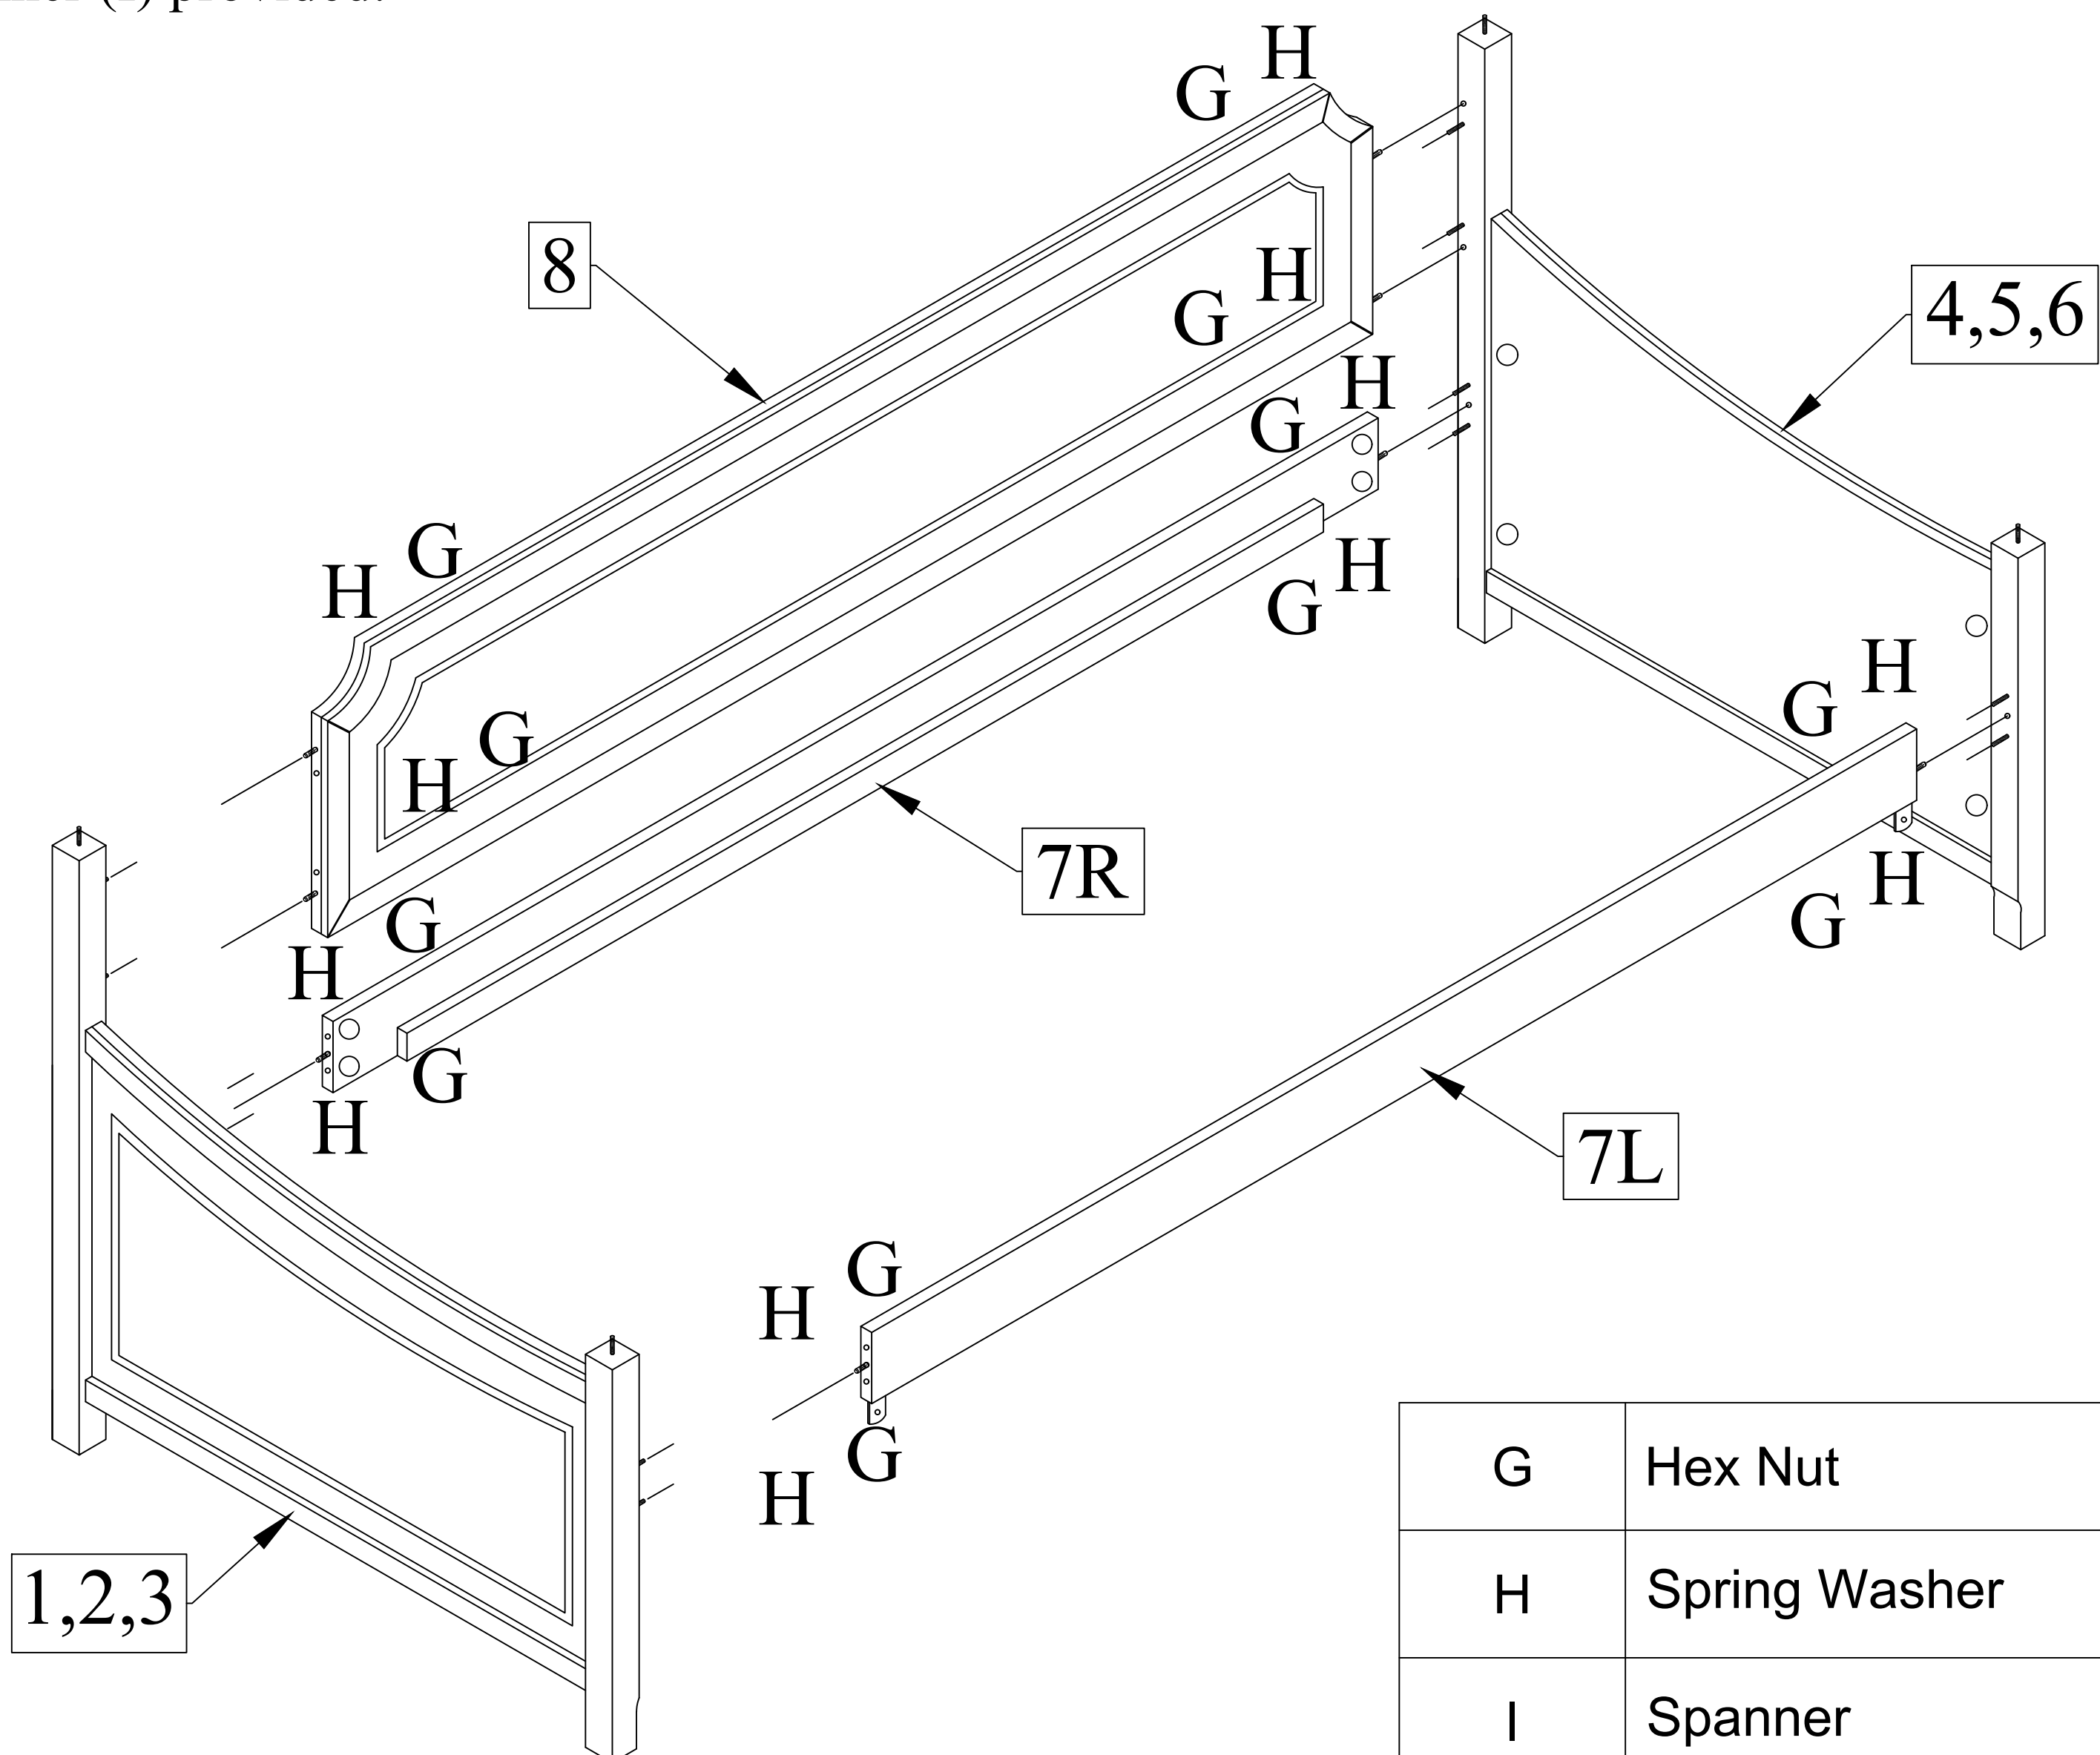

G	Hex Nut		12PCS
H	Spring Washer		12PCS
I	Spanner		1PC


ASSEMBLY INSTRUCTIONS

Item No : WF299165AAK + WF299166AAK + WF299167AAK


Description : DAY BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 4 : Connect Front & Back Posts (9,10) to Lower Post. Attach Top Frame - Side (11) through bolts and then attach Top Frame - Front & Back (12). Finally, attach Crowns (13).

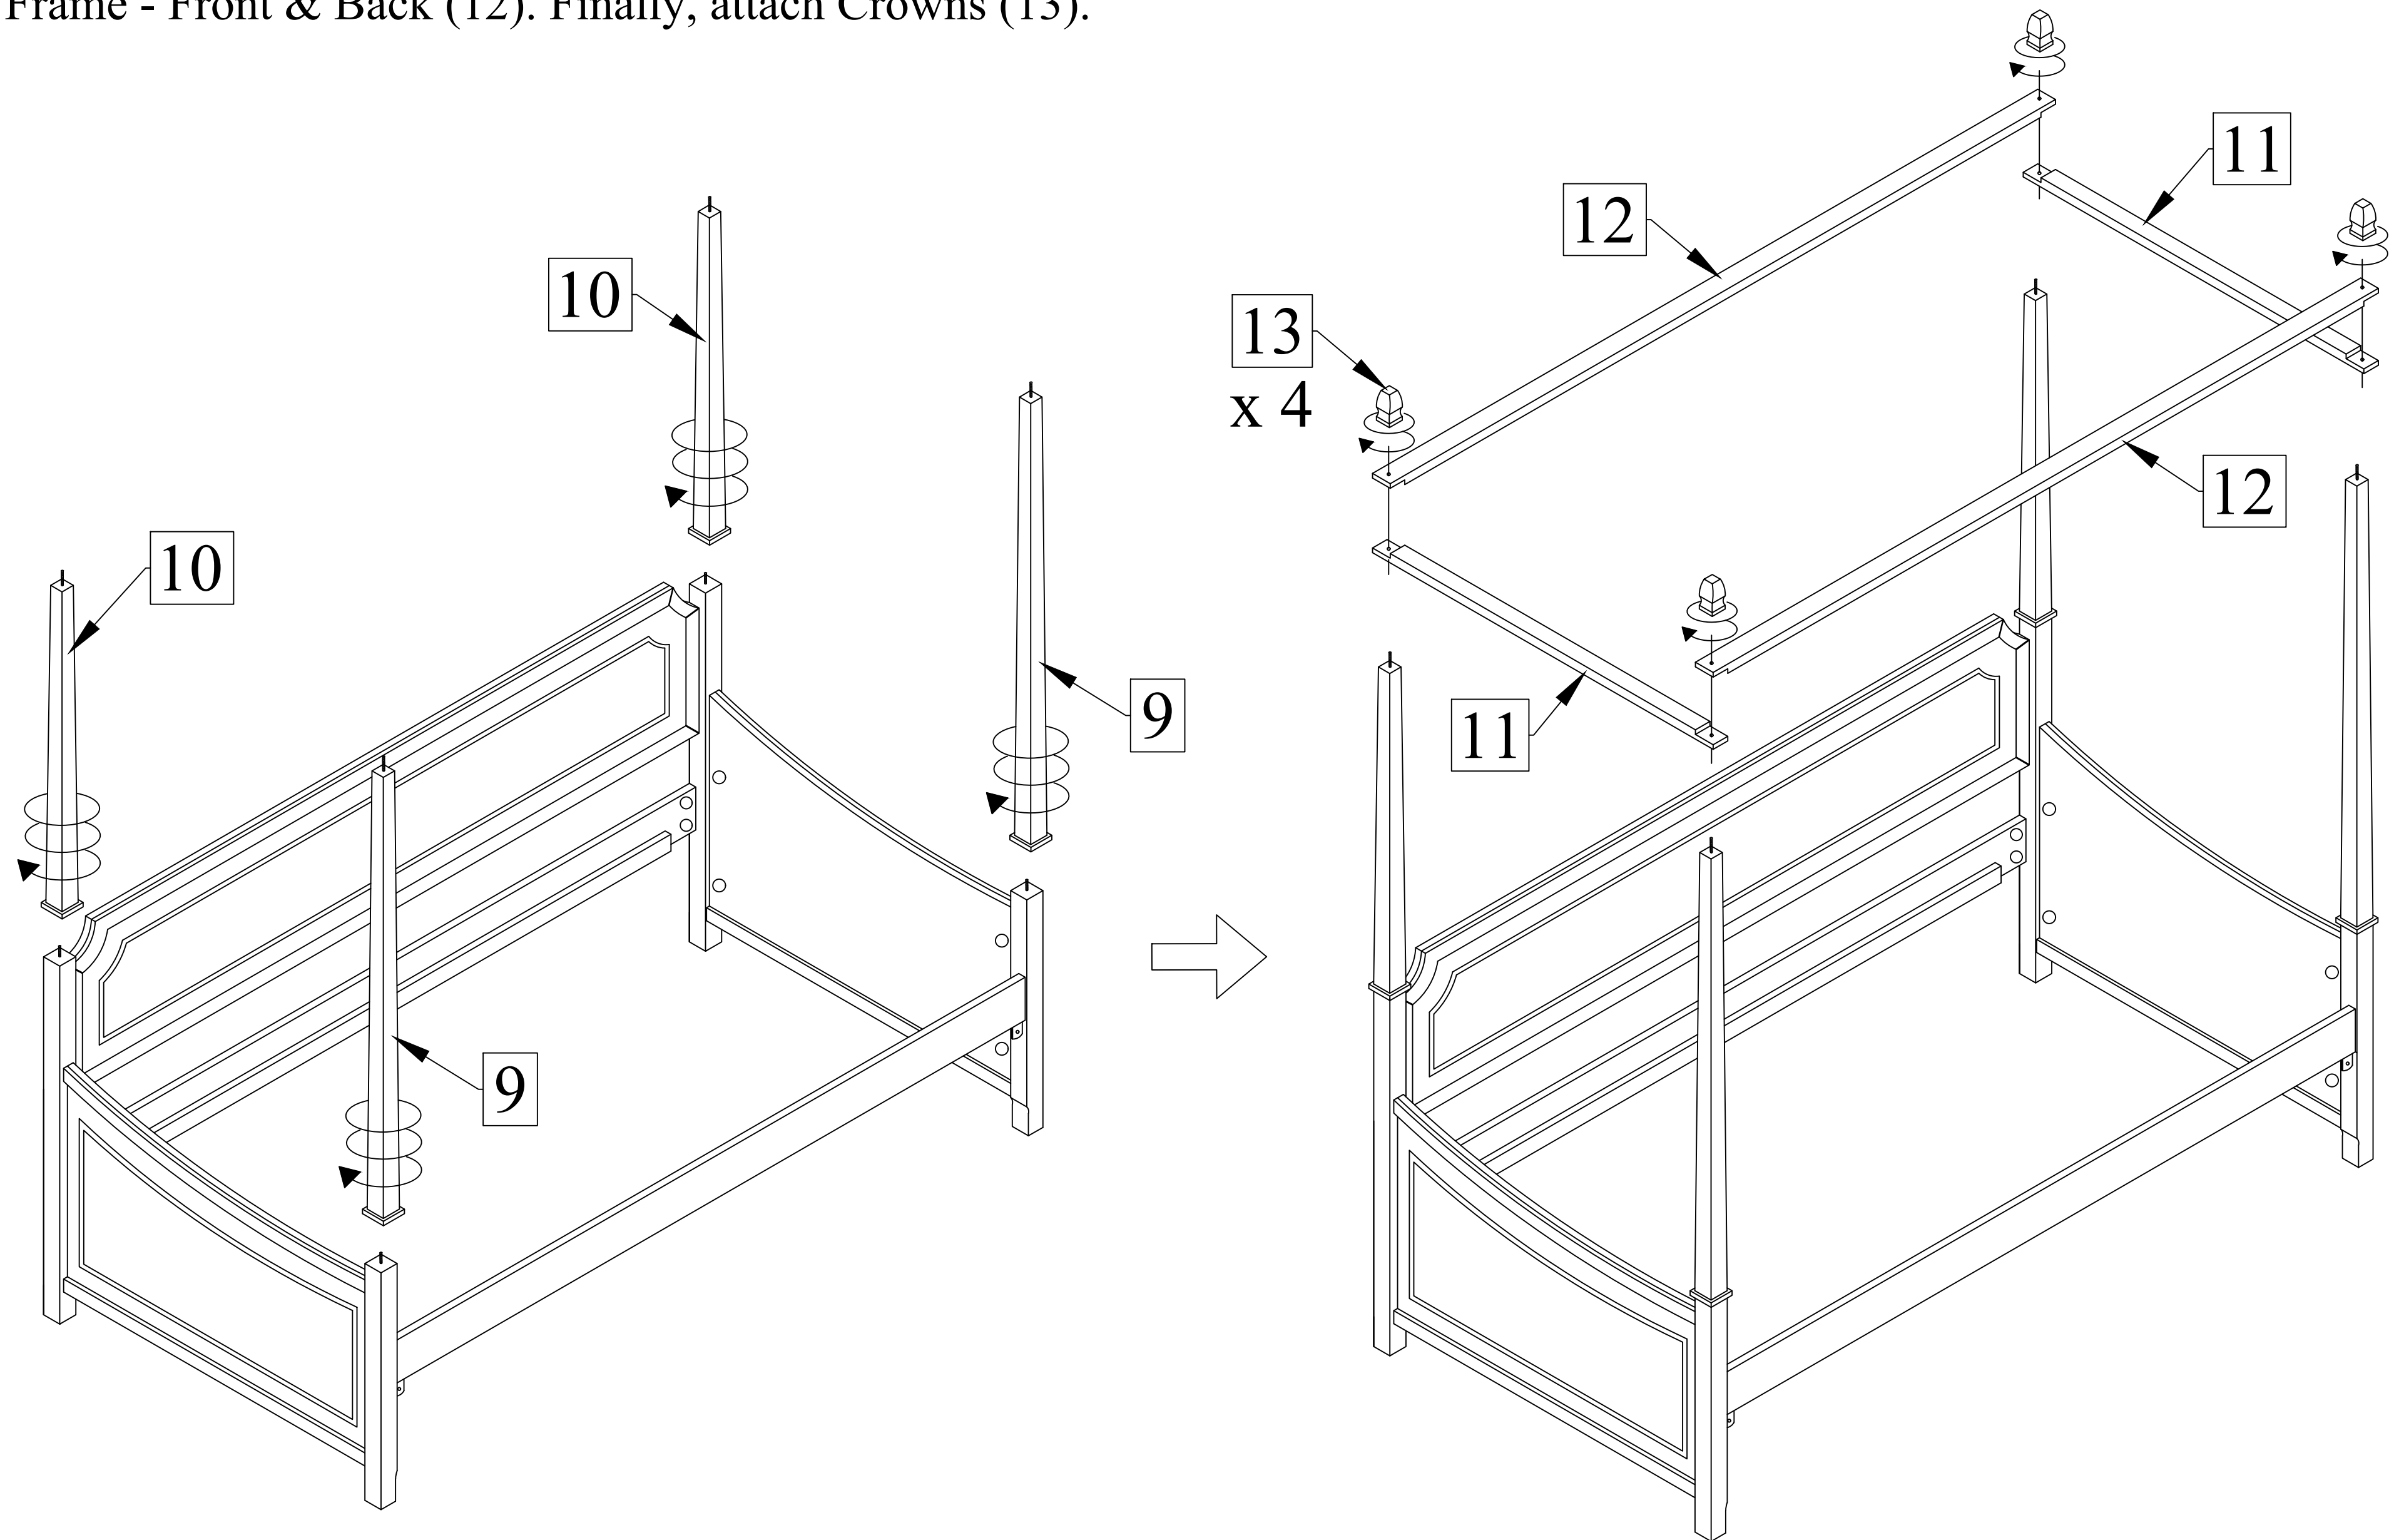

Step 5 : Attach Bed Slats (14) to the bed using Screw (J).




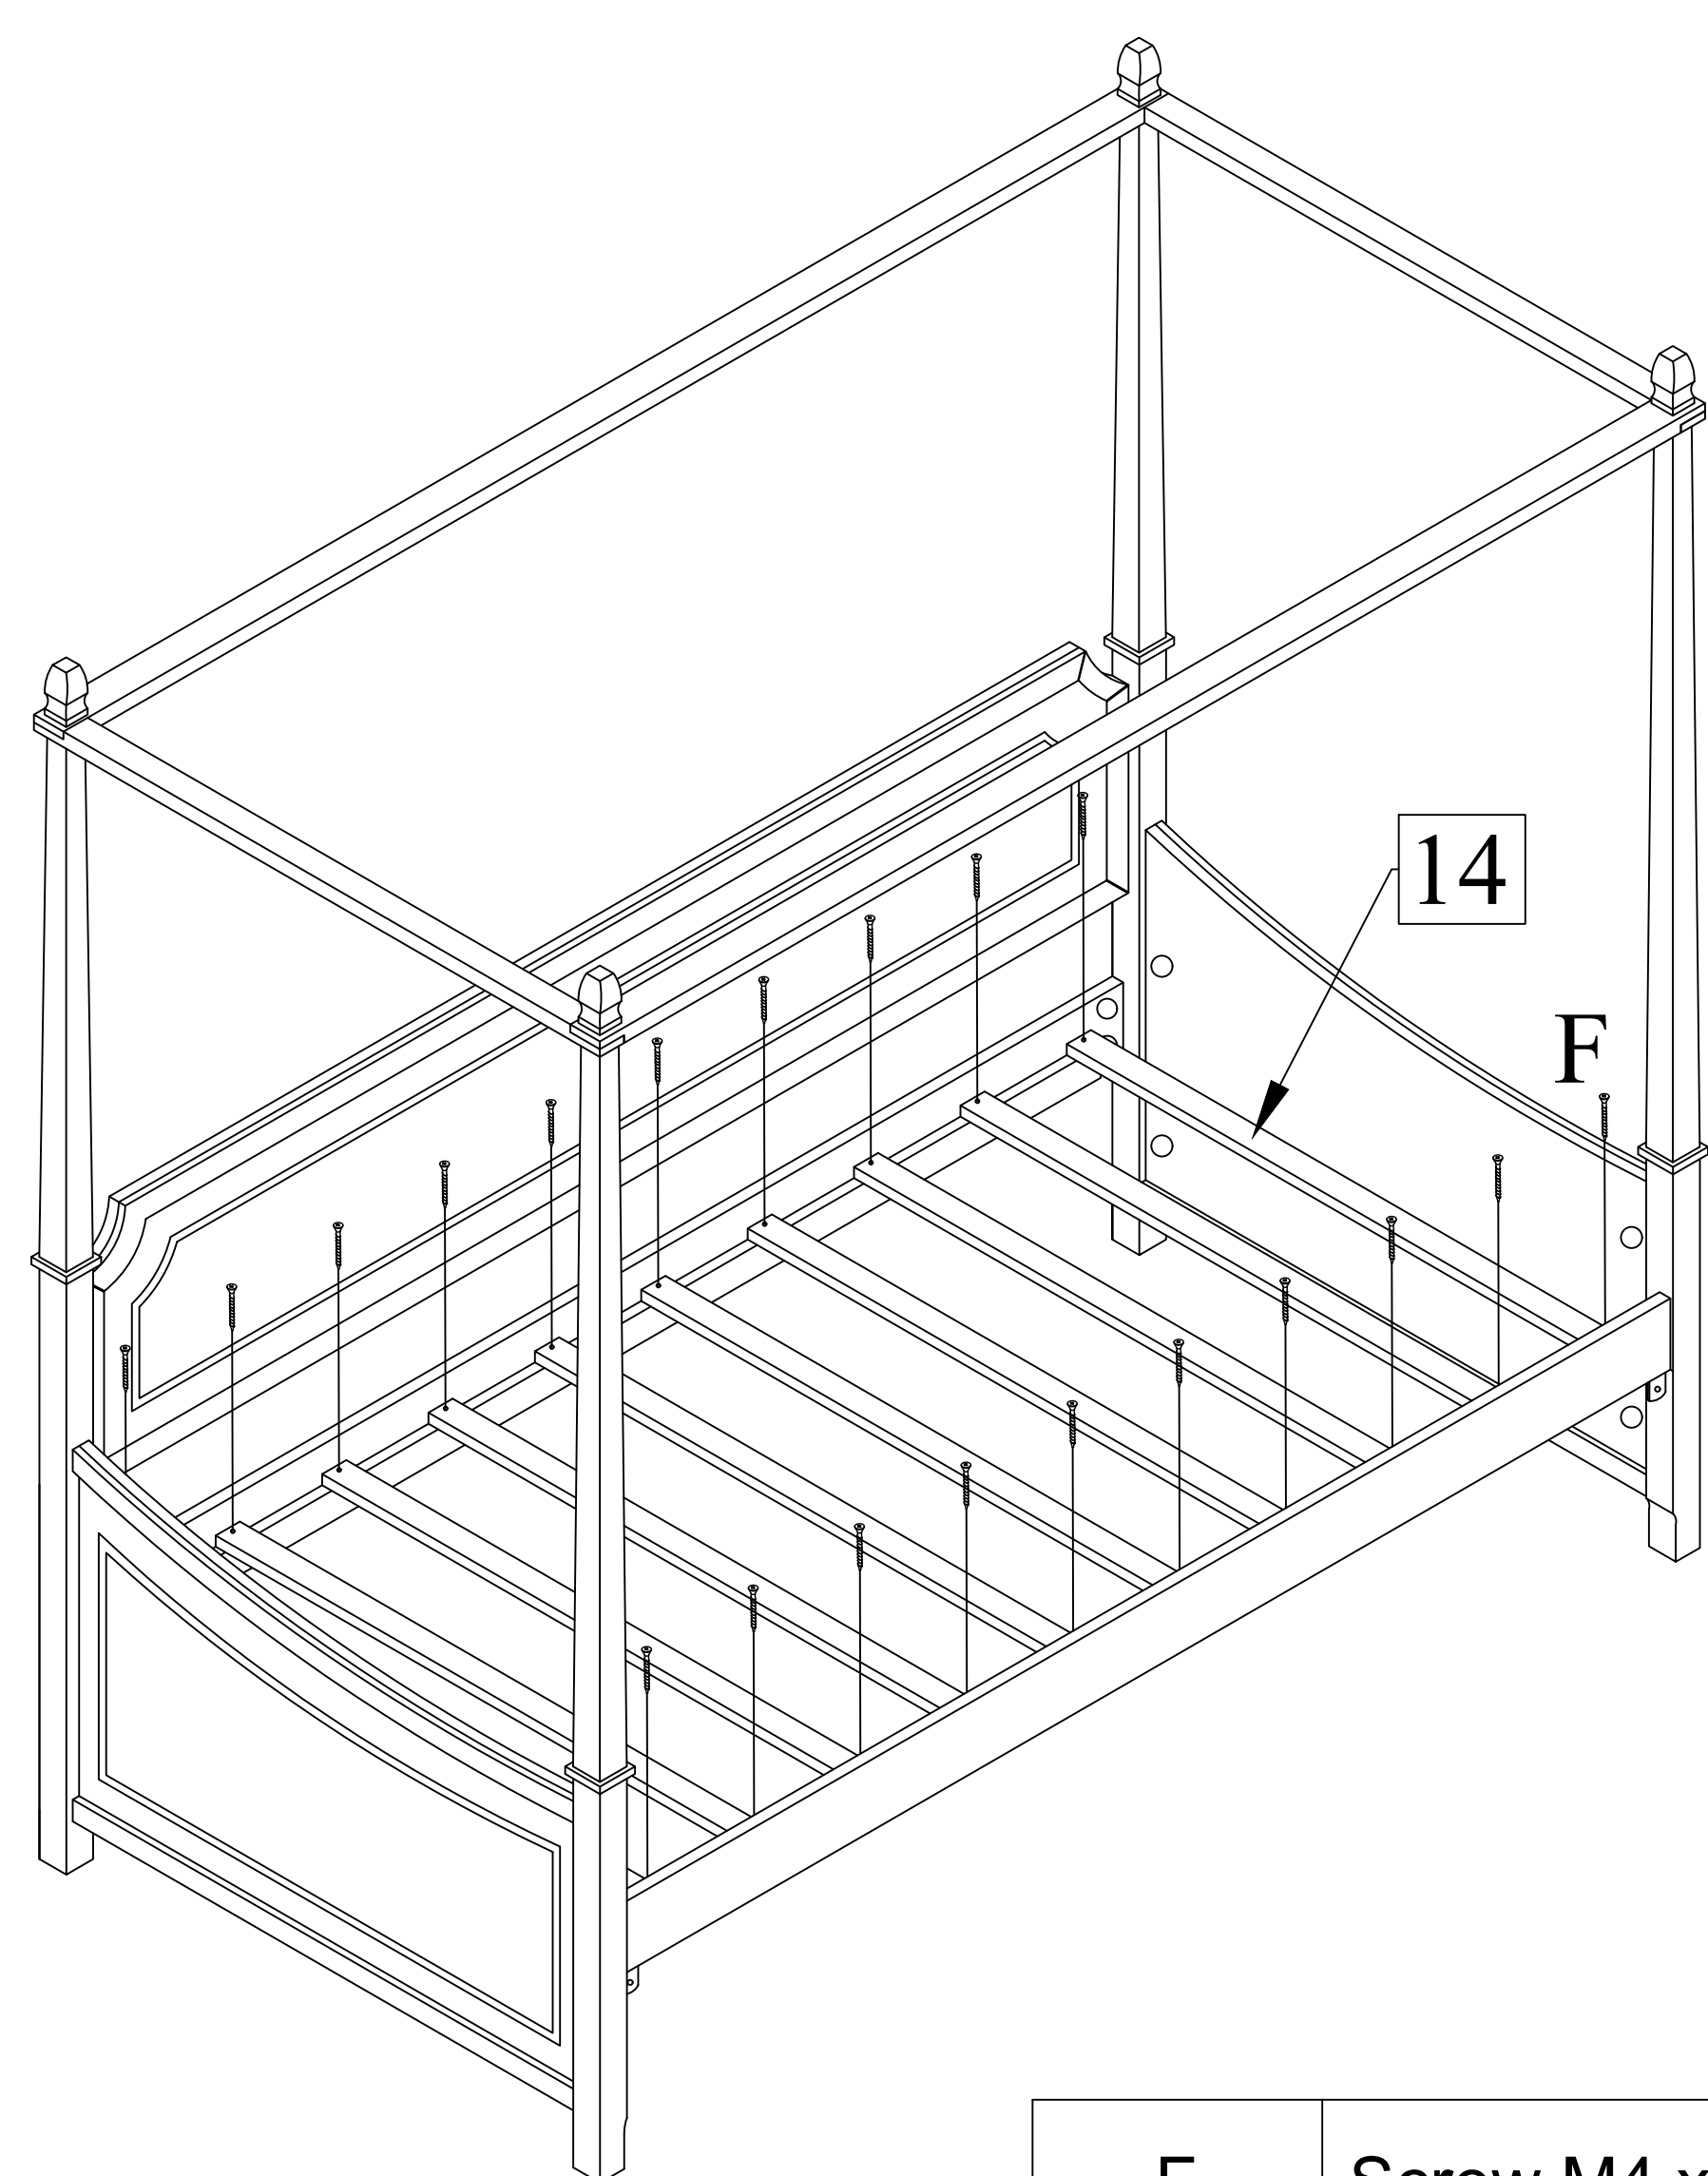



F	Screw M4 x 32MM		20PCS
---	-----------------	---	-------

ASSEMBLY INSTRUCTIONS
Item No : WF299165AAK + WF299166AAK + WF299167AAK
Description : DAY BED



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 6 : Connect Trundle Bed with Bolt (M) using Allen Key M5 (N), and attach Bed Slats (14) with Screw (F).

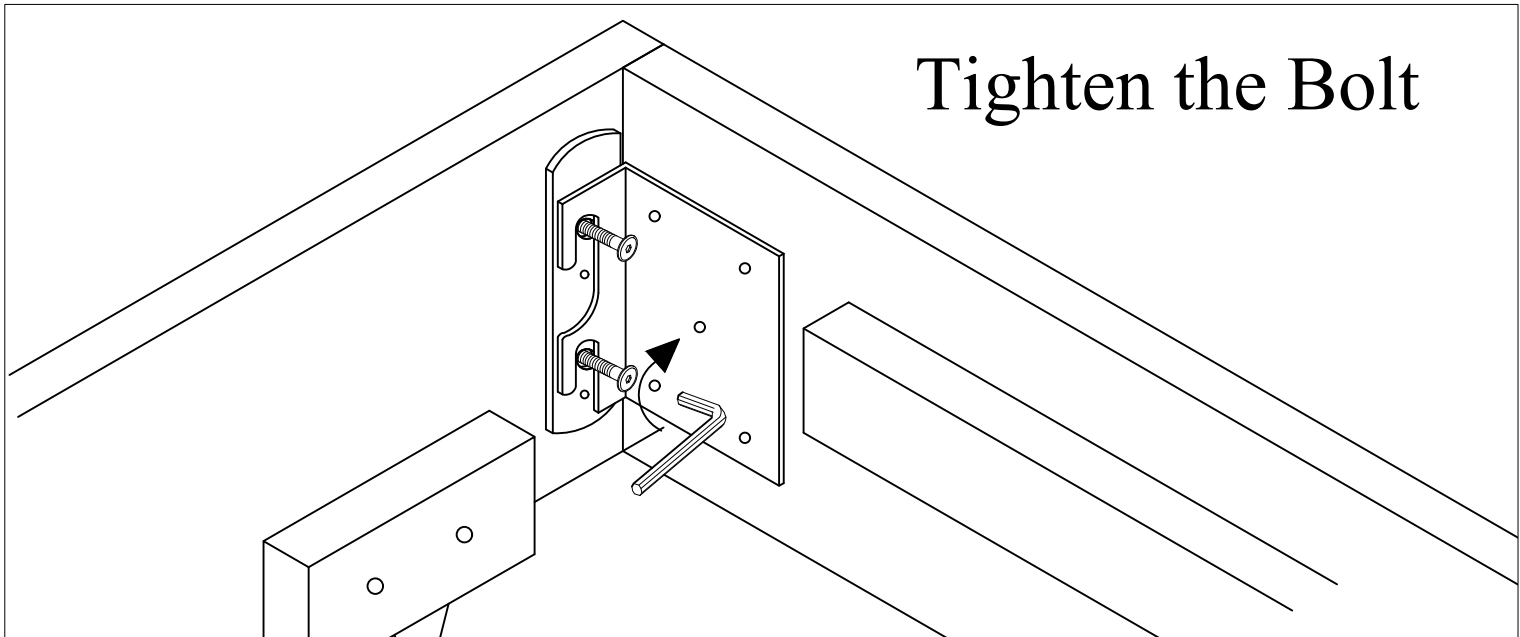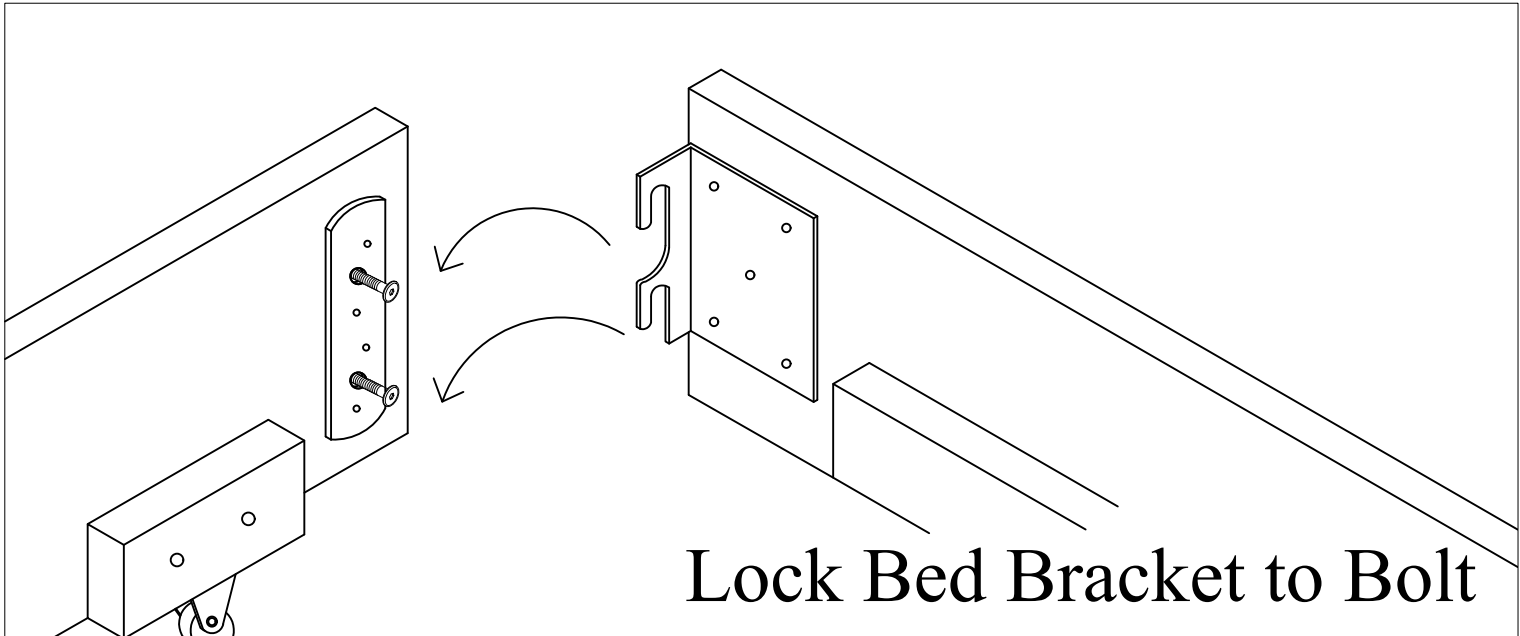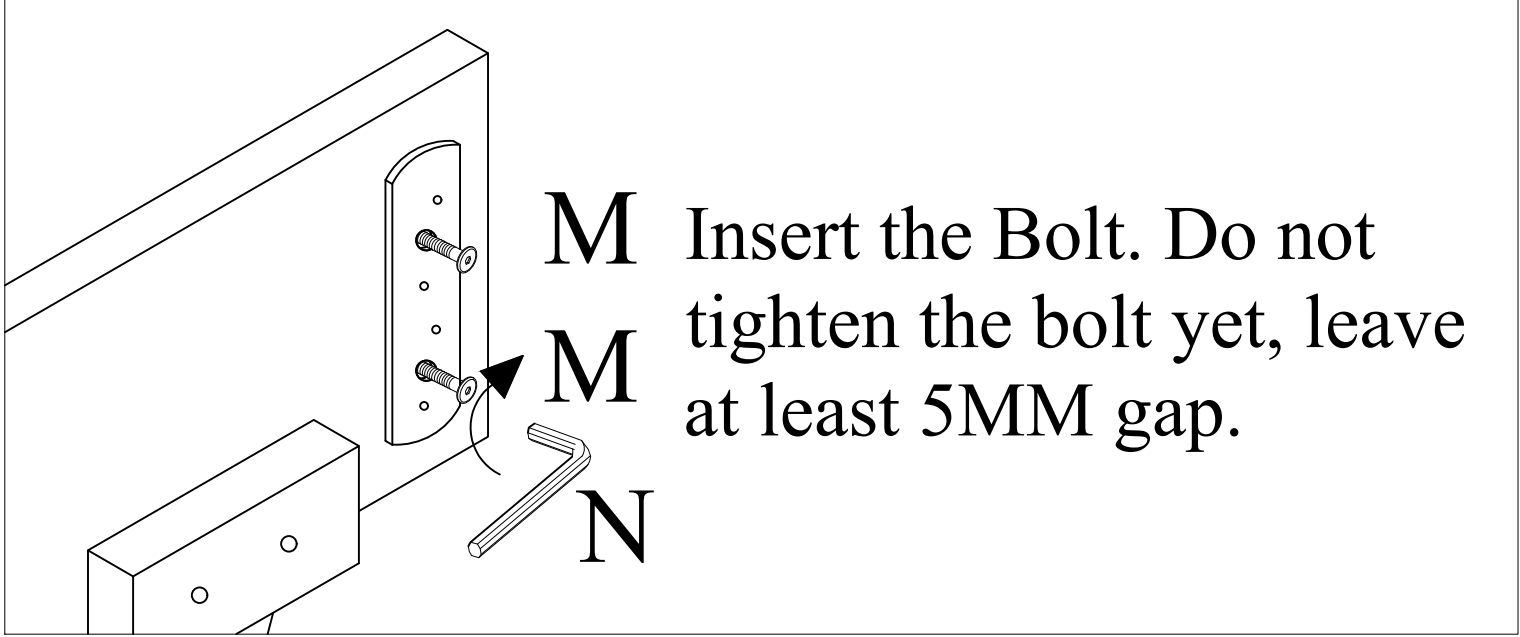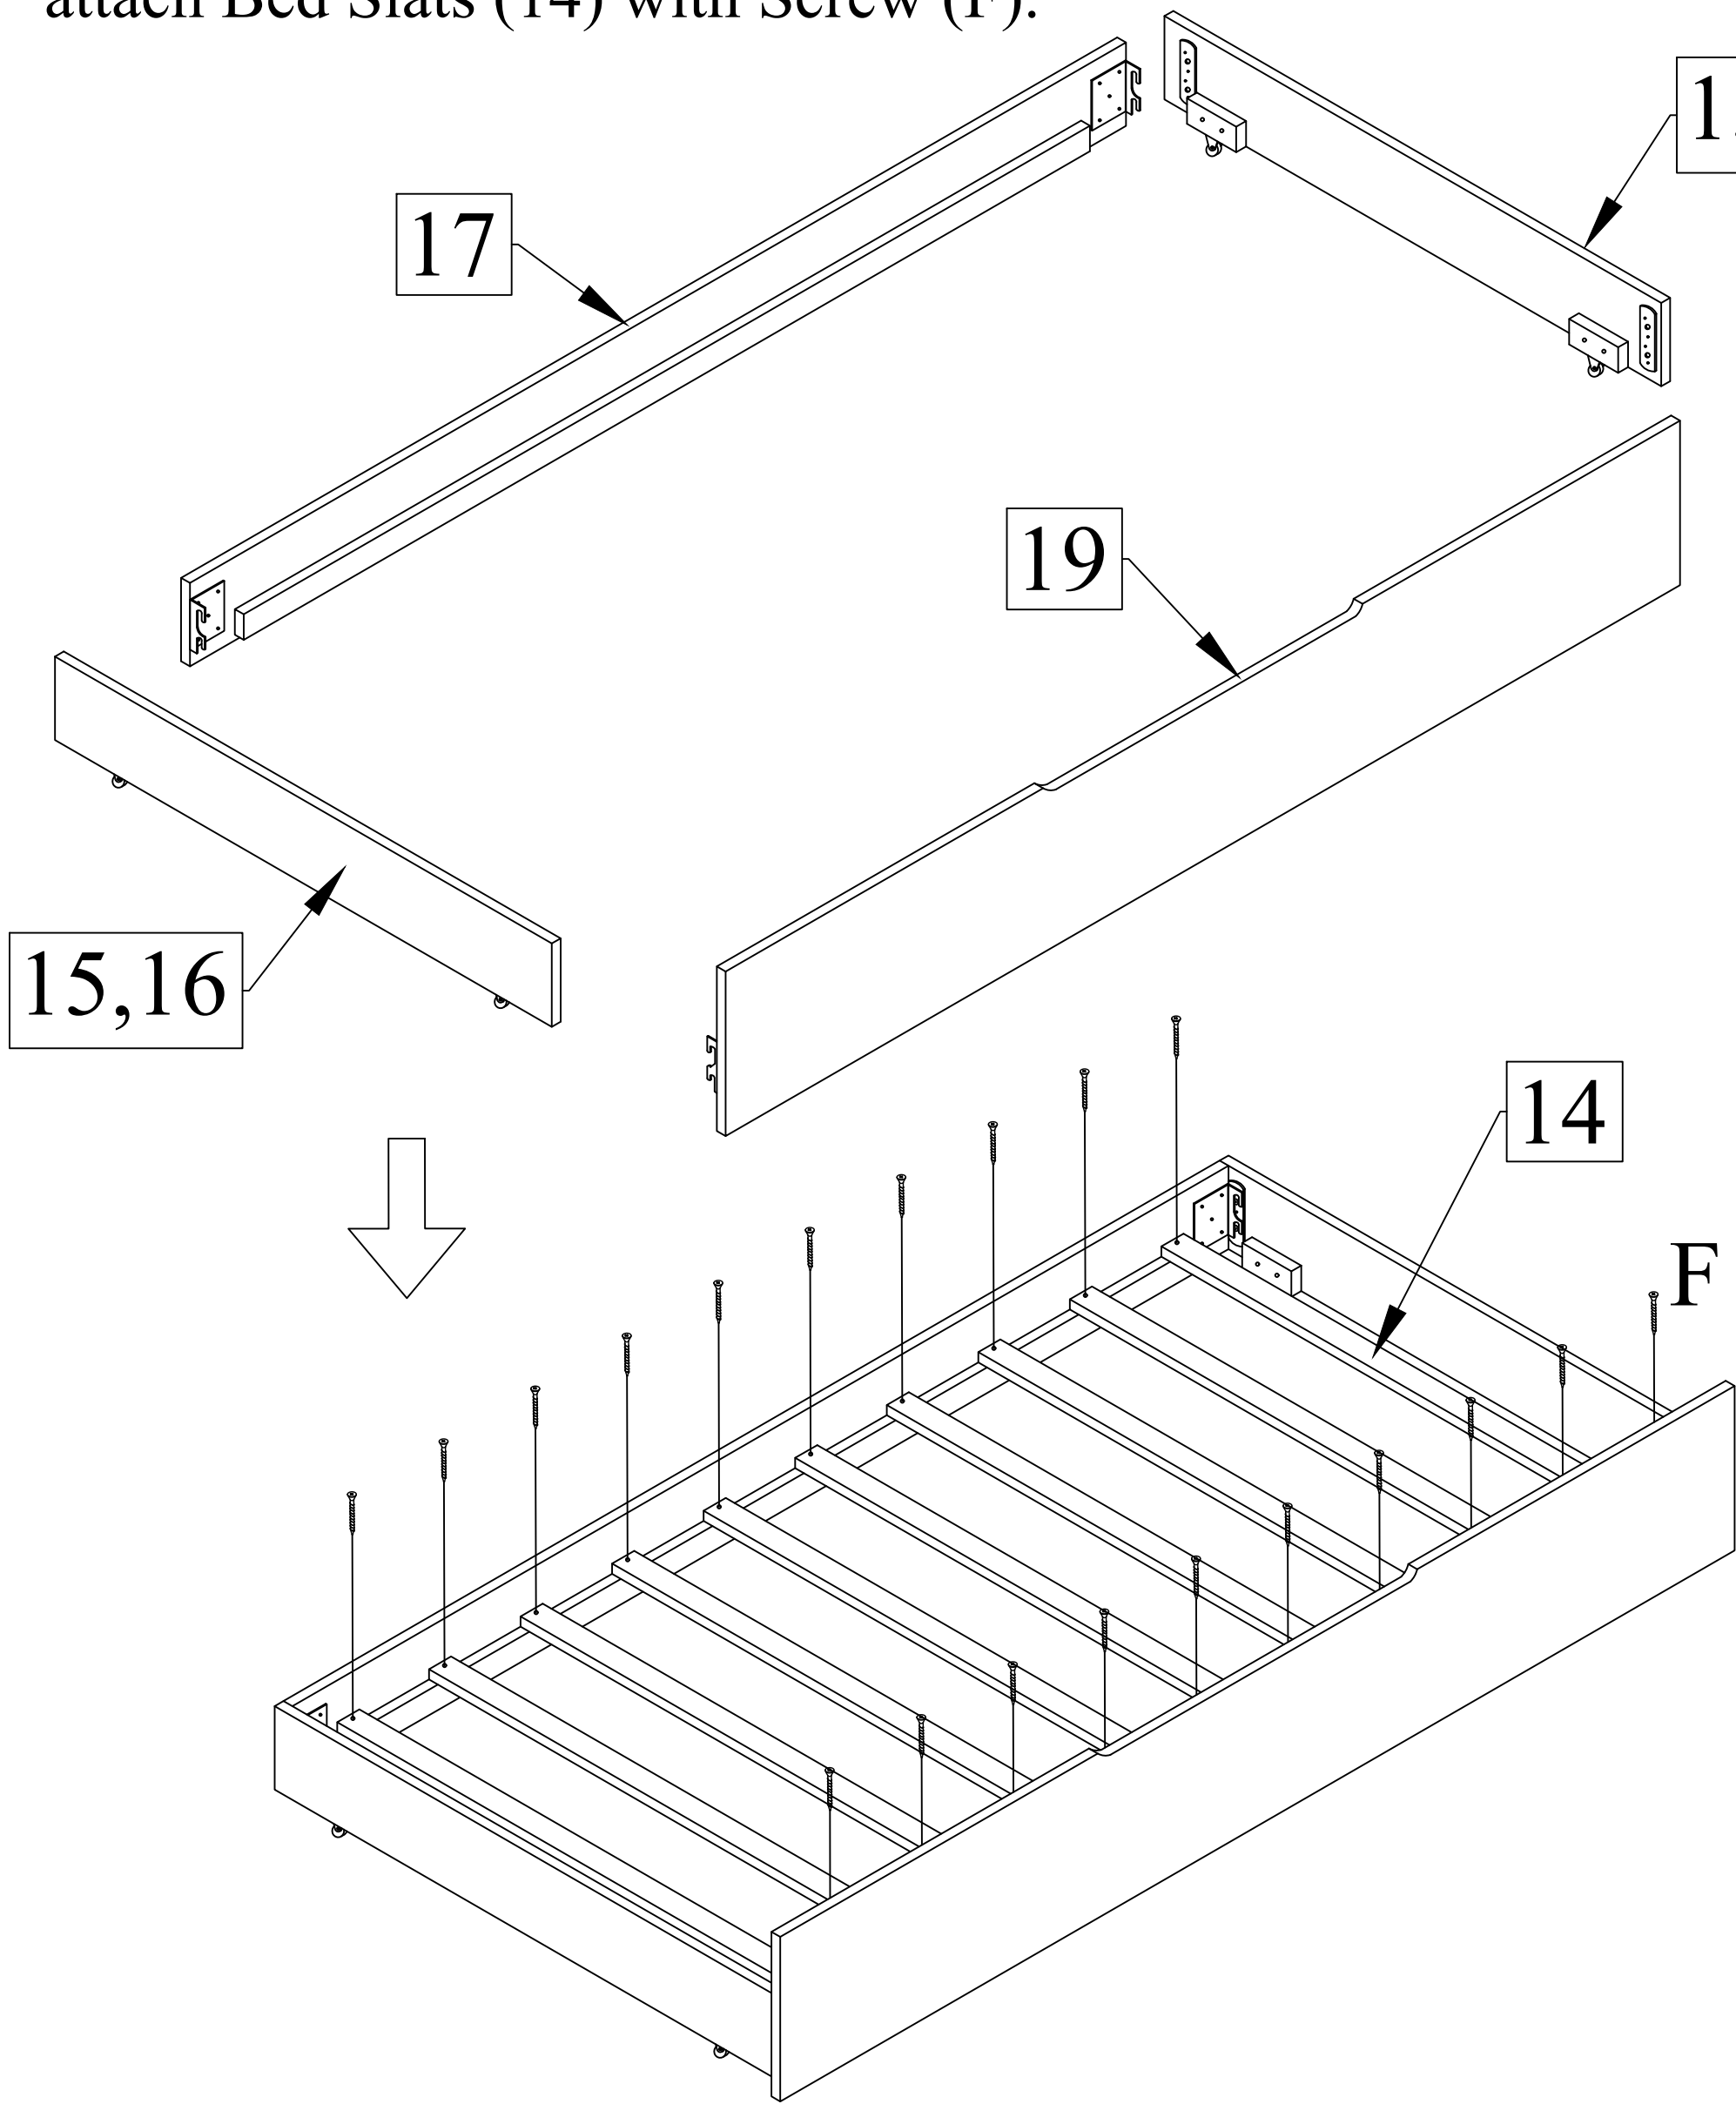


F	Screw M4 x 32MM		20PCS
M	Bolt		8PCS
N	Allen Key M5		1PC

Step 7 : Insert Trundle Bed, complete assembly.

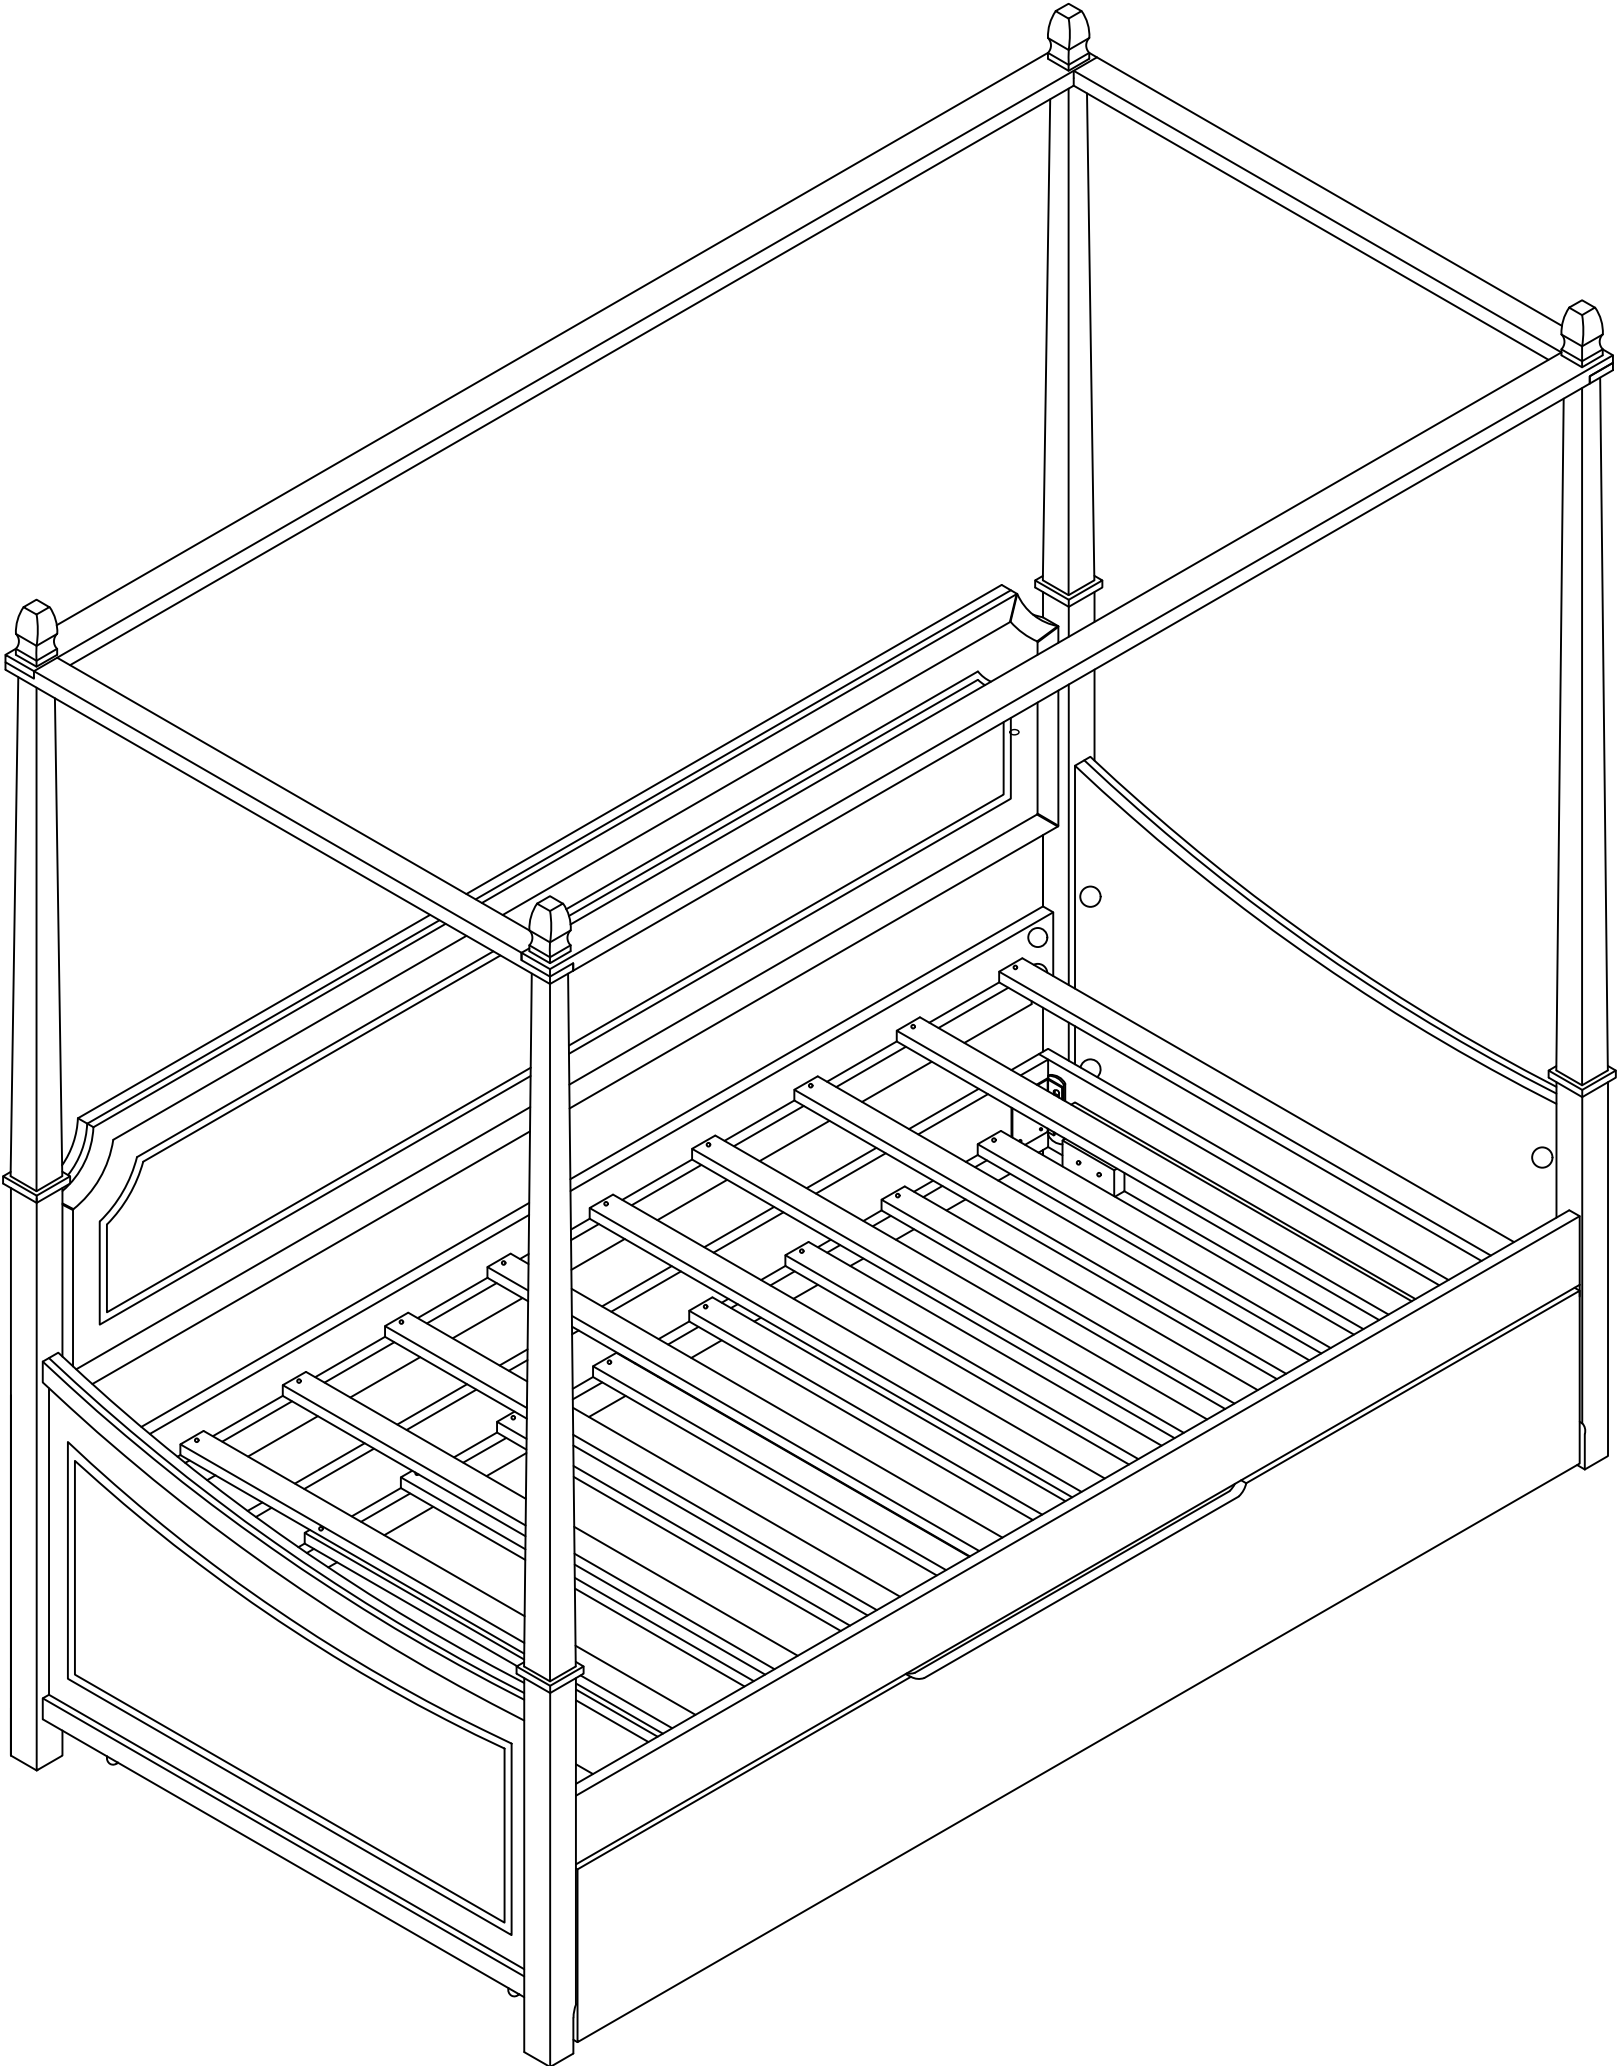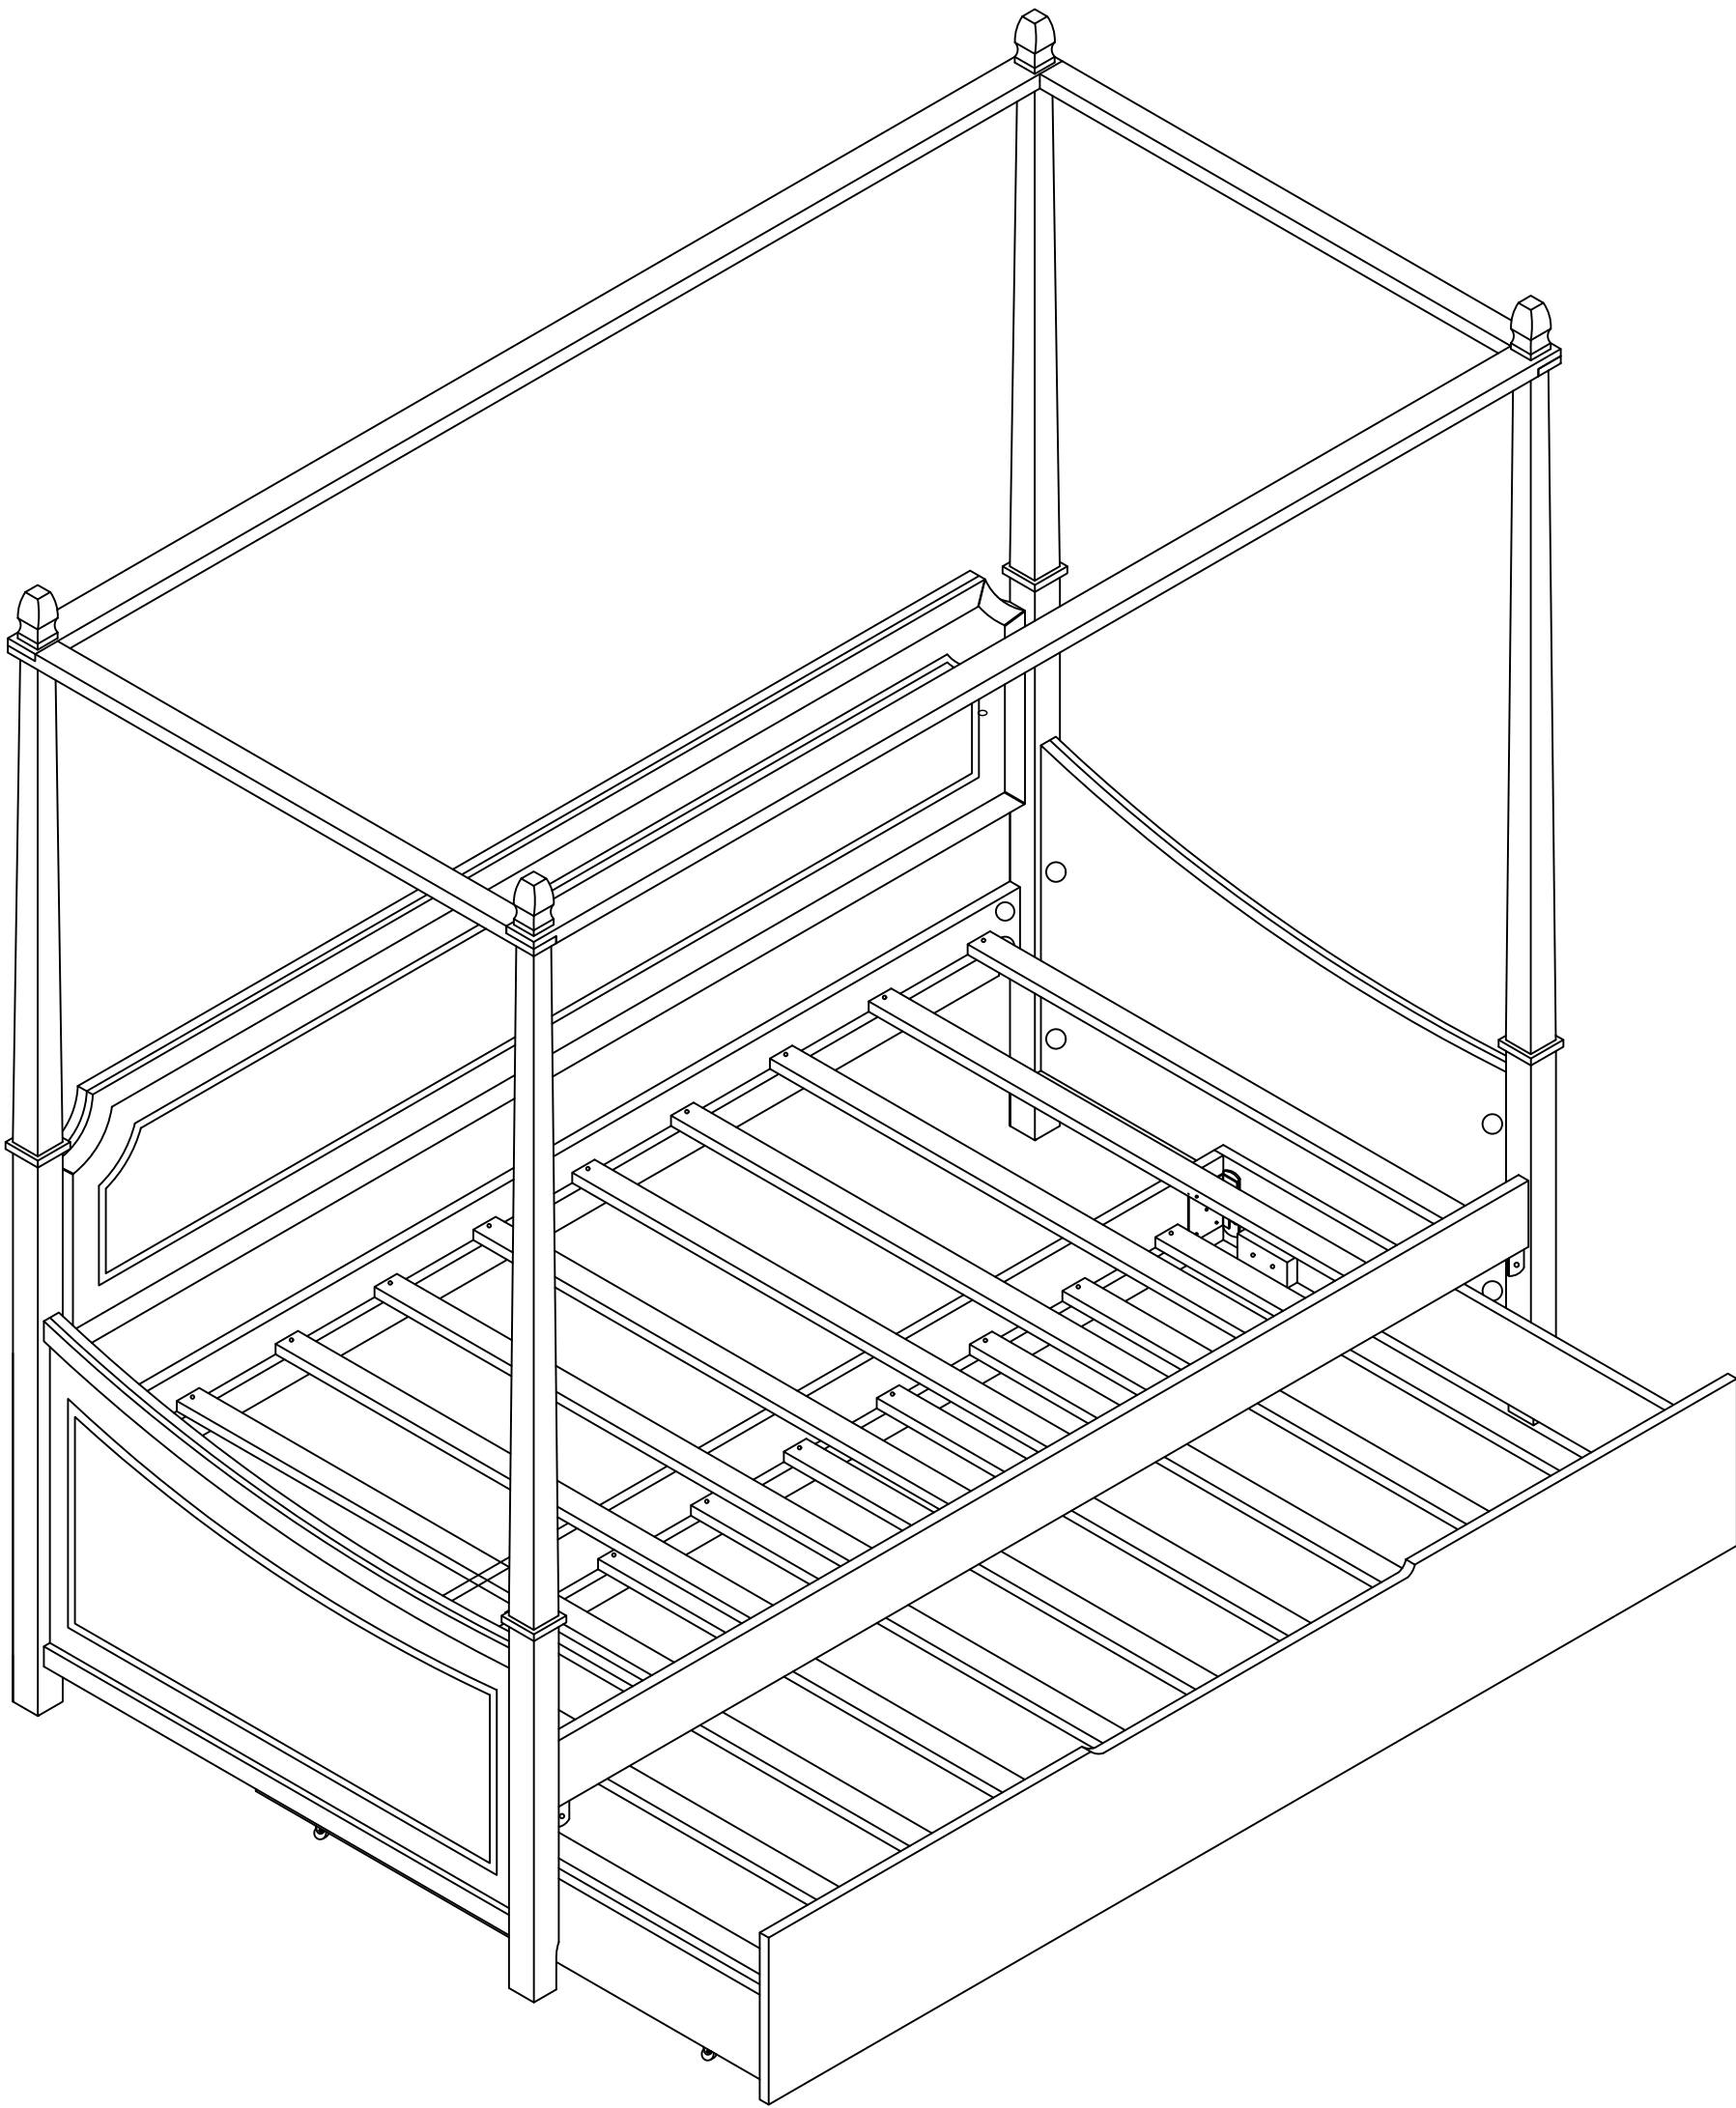

ASSEMBLY INSTRUCTIONS
Item No : WF299160AAK
Description : NIGHT STAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

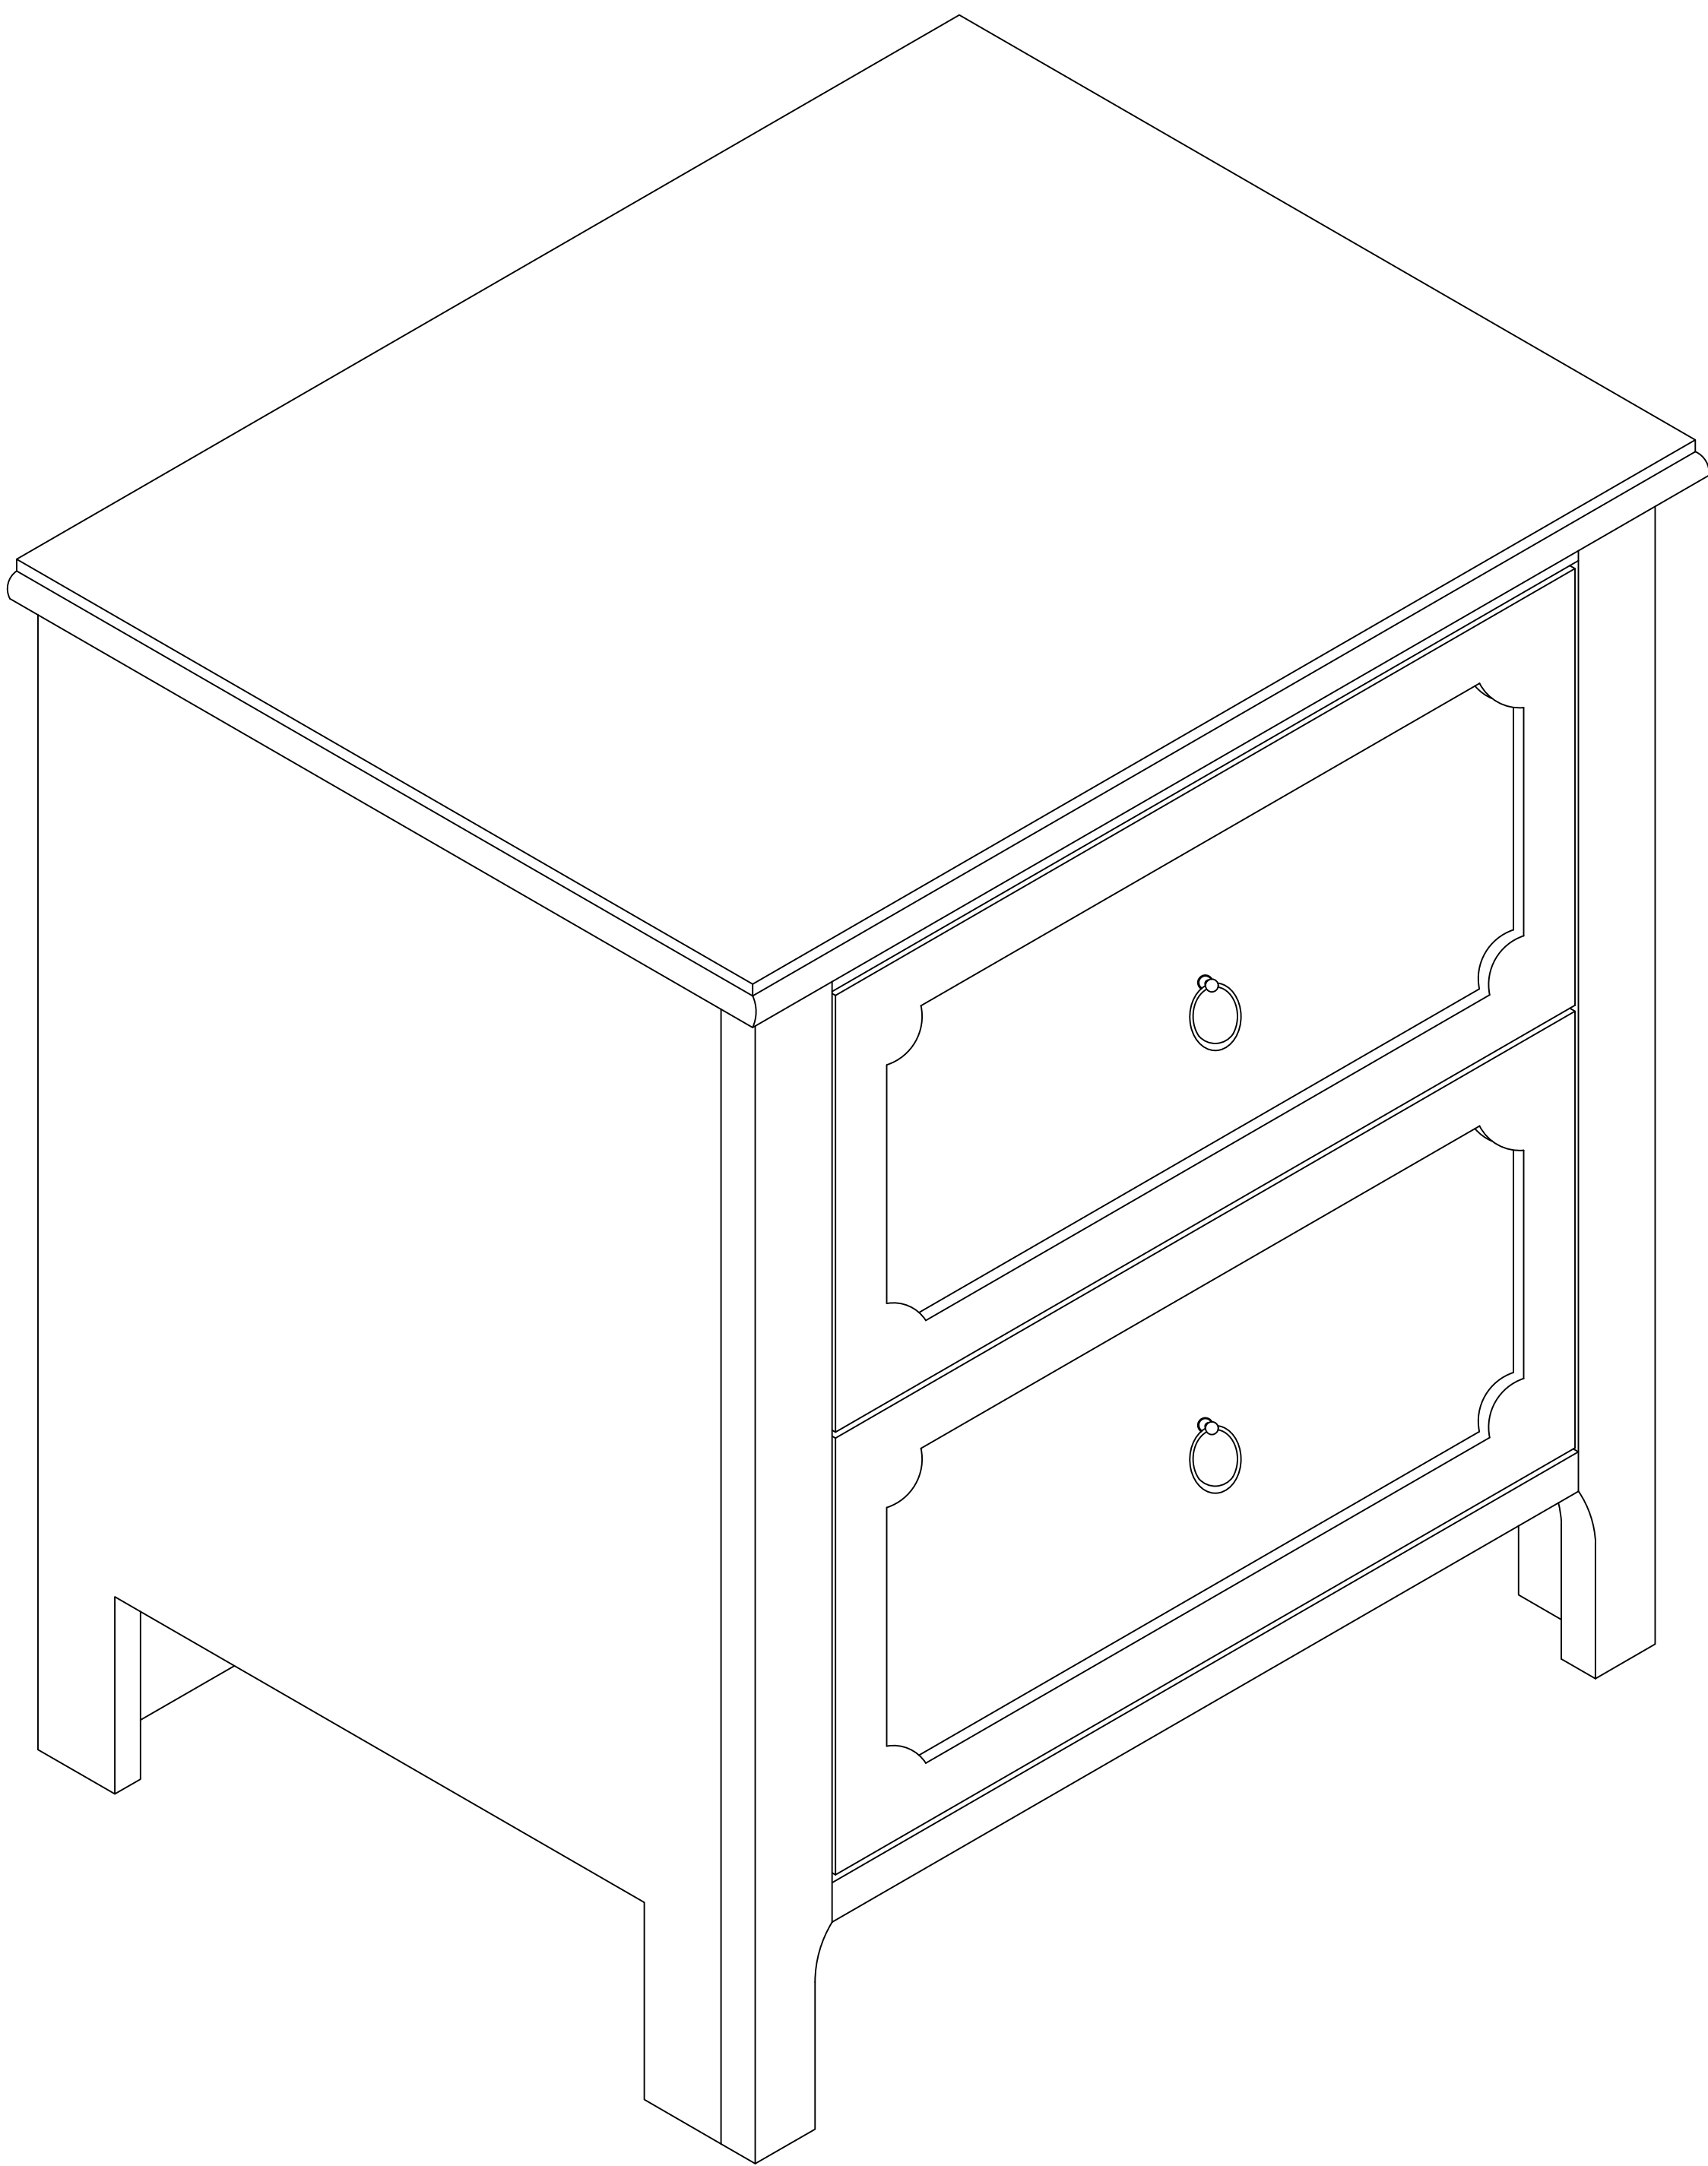


WF299160AAK

ASSEMBLY INSTRUCTIONS

Item No : WF299160AAK

Description : NIGHT STAND


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

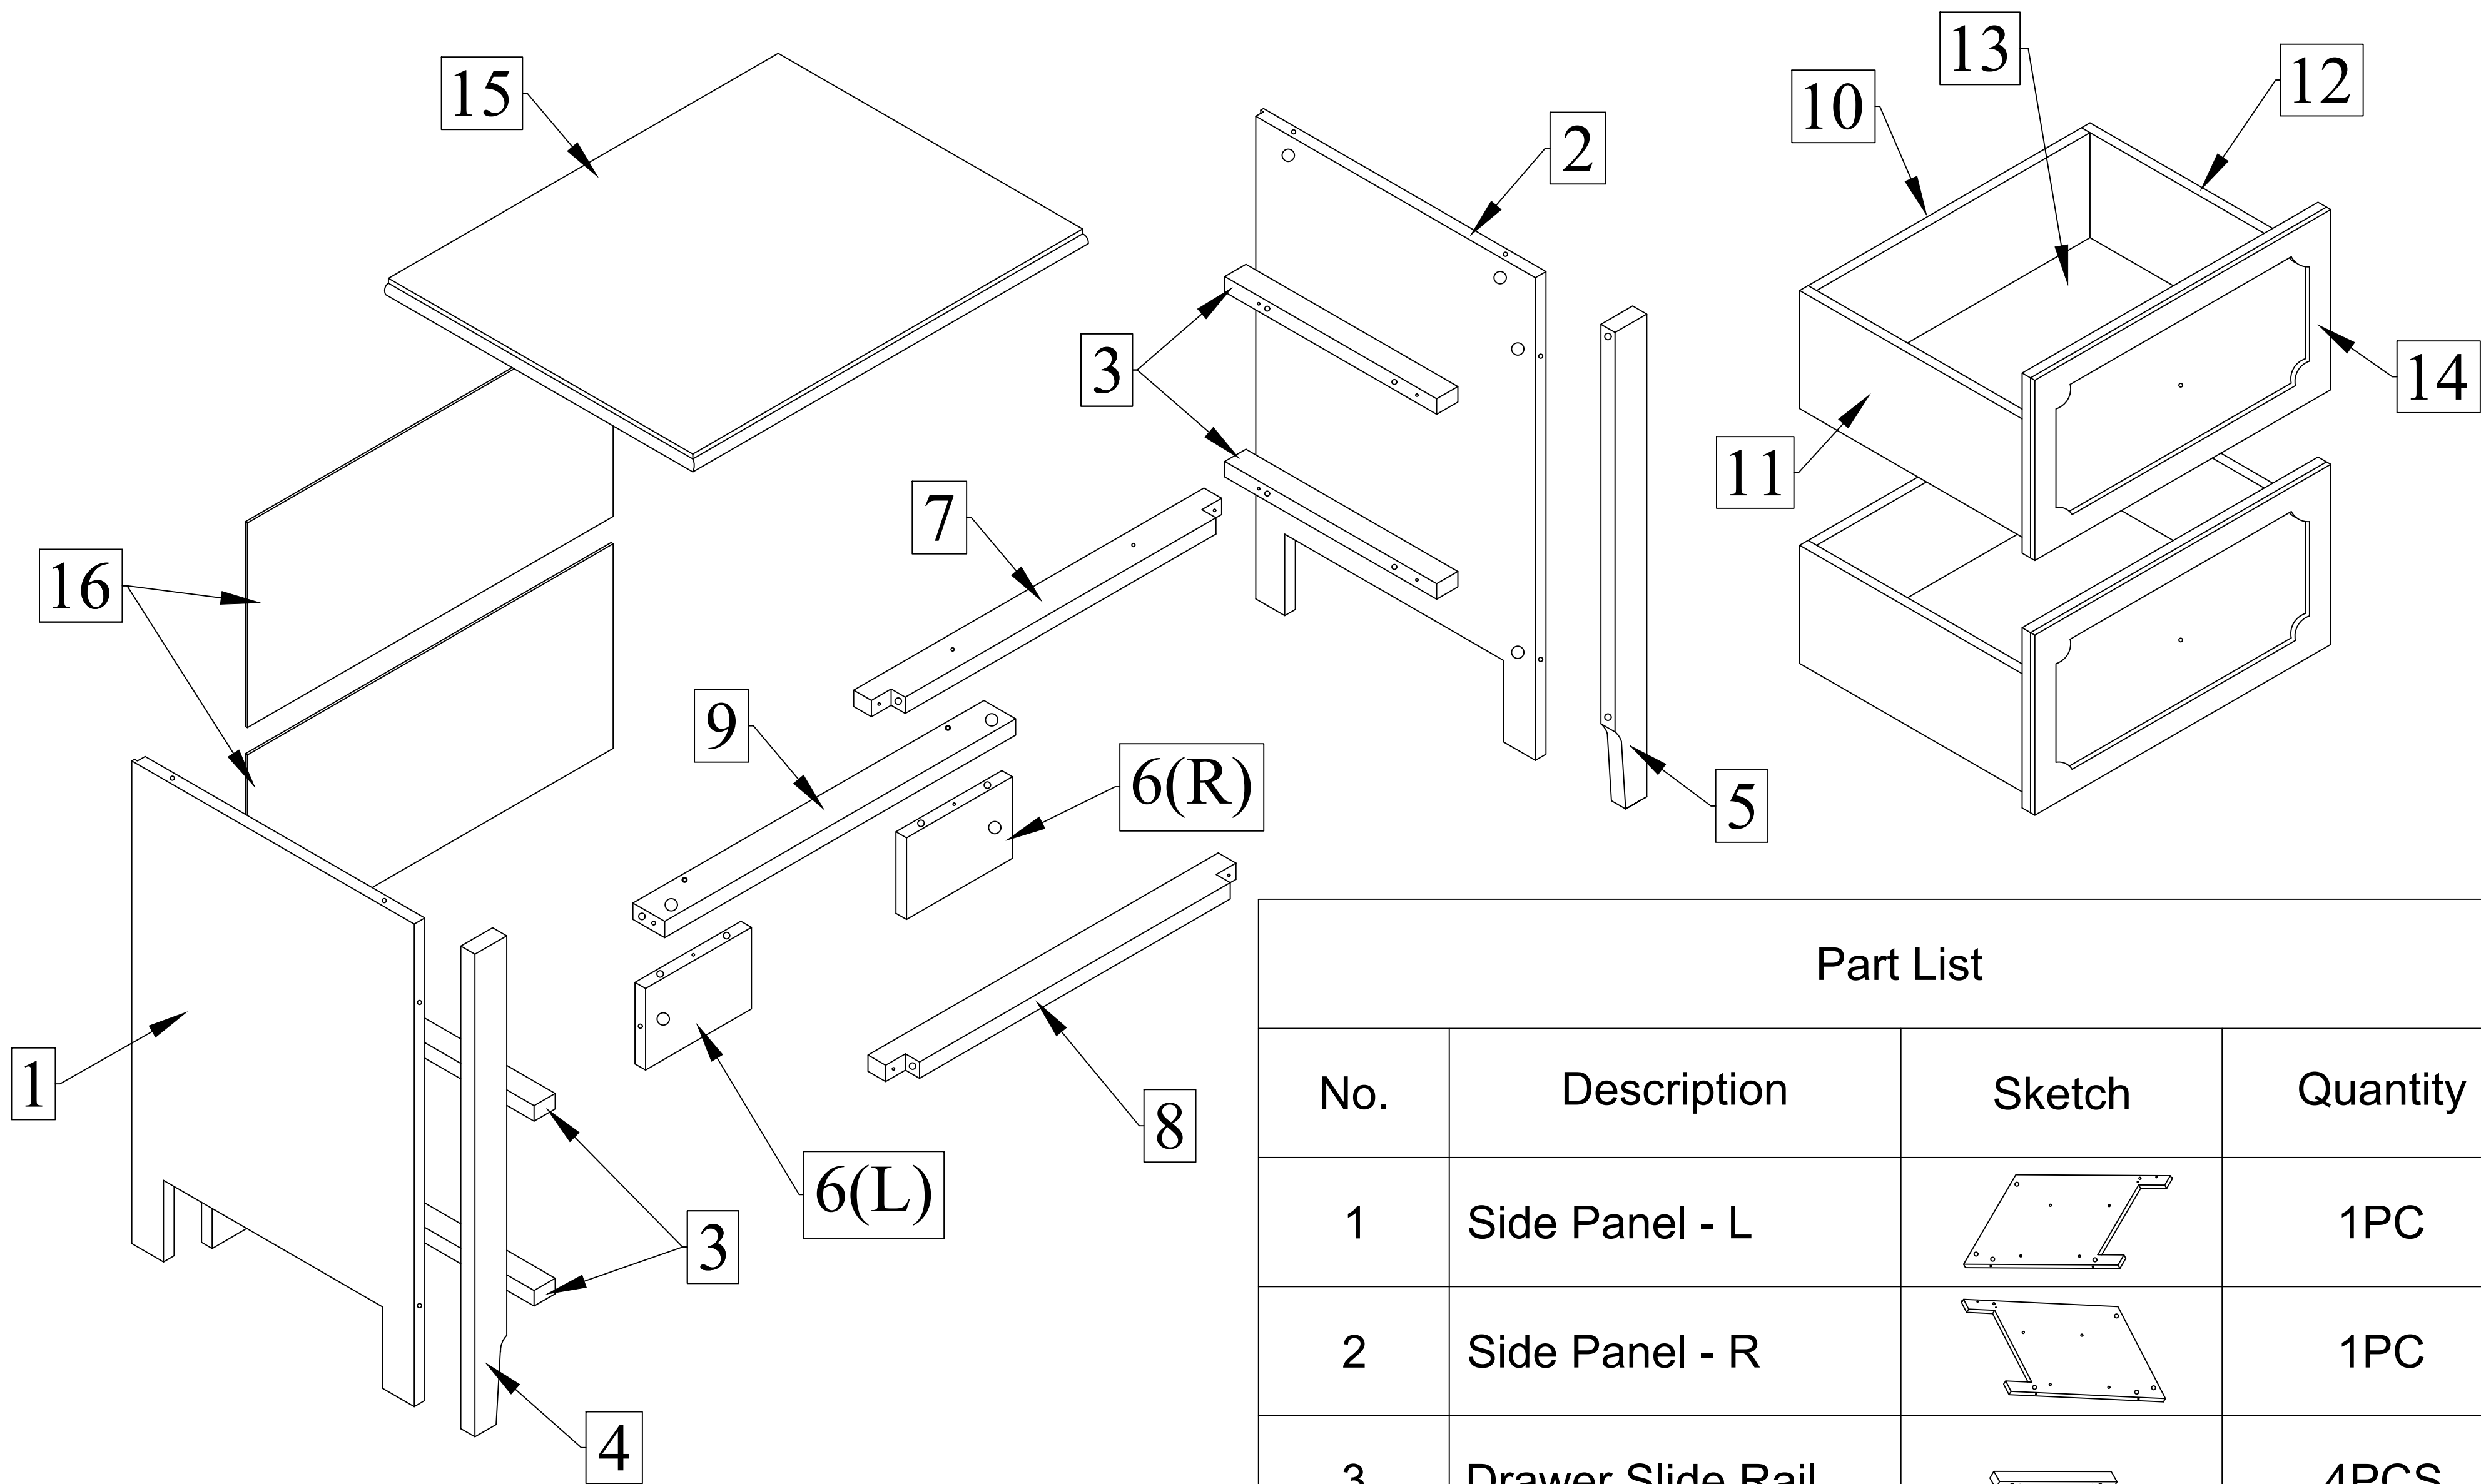

Part List

No.	Description	Sketch	Quantity
1	Side Panel - L		1PC
2	Side Panel - R		1PC
3	Drawer Slide Rail		4PCS
4	Pillar - L		1PC
5	Pillar - R		1PC
6	Leg (L & R)	L R	2PCS
7	Top Rail		1PC
8	Bottom Rail		1PC
9	Back Rail		1PC
10	Drawer Back		2PCS
11	Drawer Side - L		2PCS
12	Drawer Side - R		2PCS
13	Drawer Base		2PCS
14	Drawer Front		2PCS
15	Top Panel		1PC
16	Back Panel		2PCS

TOOLS REQUIRED (Not provided)



Screwdriver

Hardware List

No.	Description	Sketch	Quantity
A	Wood Dowel M8x30MM		18PCS
B	Minifix + Cap	B1 B2	12SETS
C	Wood Dowel M6x30MM		16PCS
D	Minifix + Cap [Drawer]	D1 D2	8SETS
E	H Connector		1PC
F	Screw M4 x 32MM		24PCS
G	Drawer Slide	G1 G2	2SETS
H	Screw M3 x 12MM		40PCS
I	Handle with screw	I1 I2	2SETS


ASSEMBLY INSTRUCTIONS

Item No : WF299160AAK


Description : NIGHT STAND


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 1 : Attach Wood Dowel (A) and Minifix (B1) to parts (1,2,3,4,5,6,7,8,9,15) accordingly. Attached Wood Dowel (C) and Minifix [Drawer] (D1) to drawer box parts (10,11,12,14) accordingly. Slot Back Panel (16) into H Connector (E).

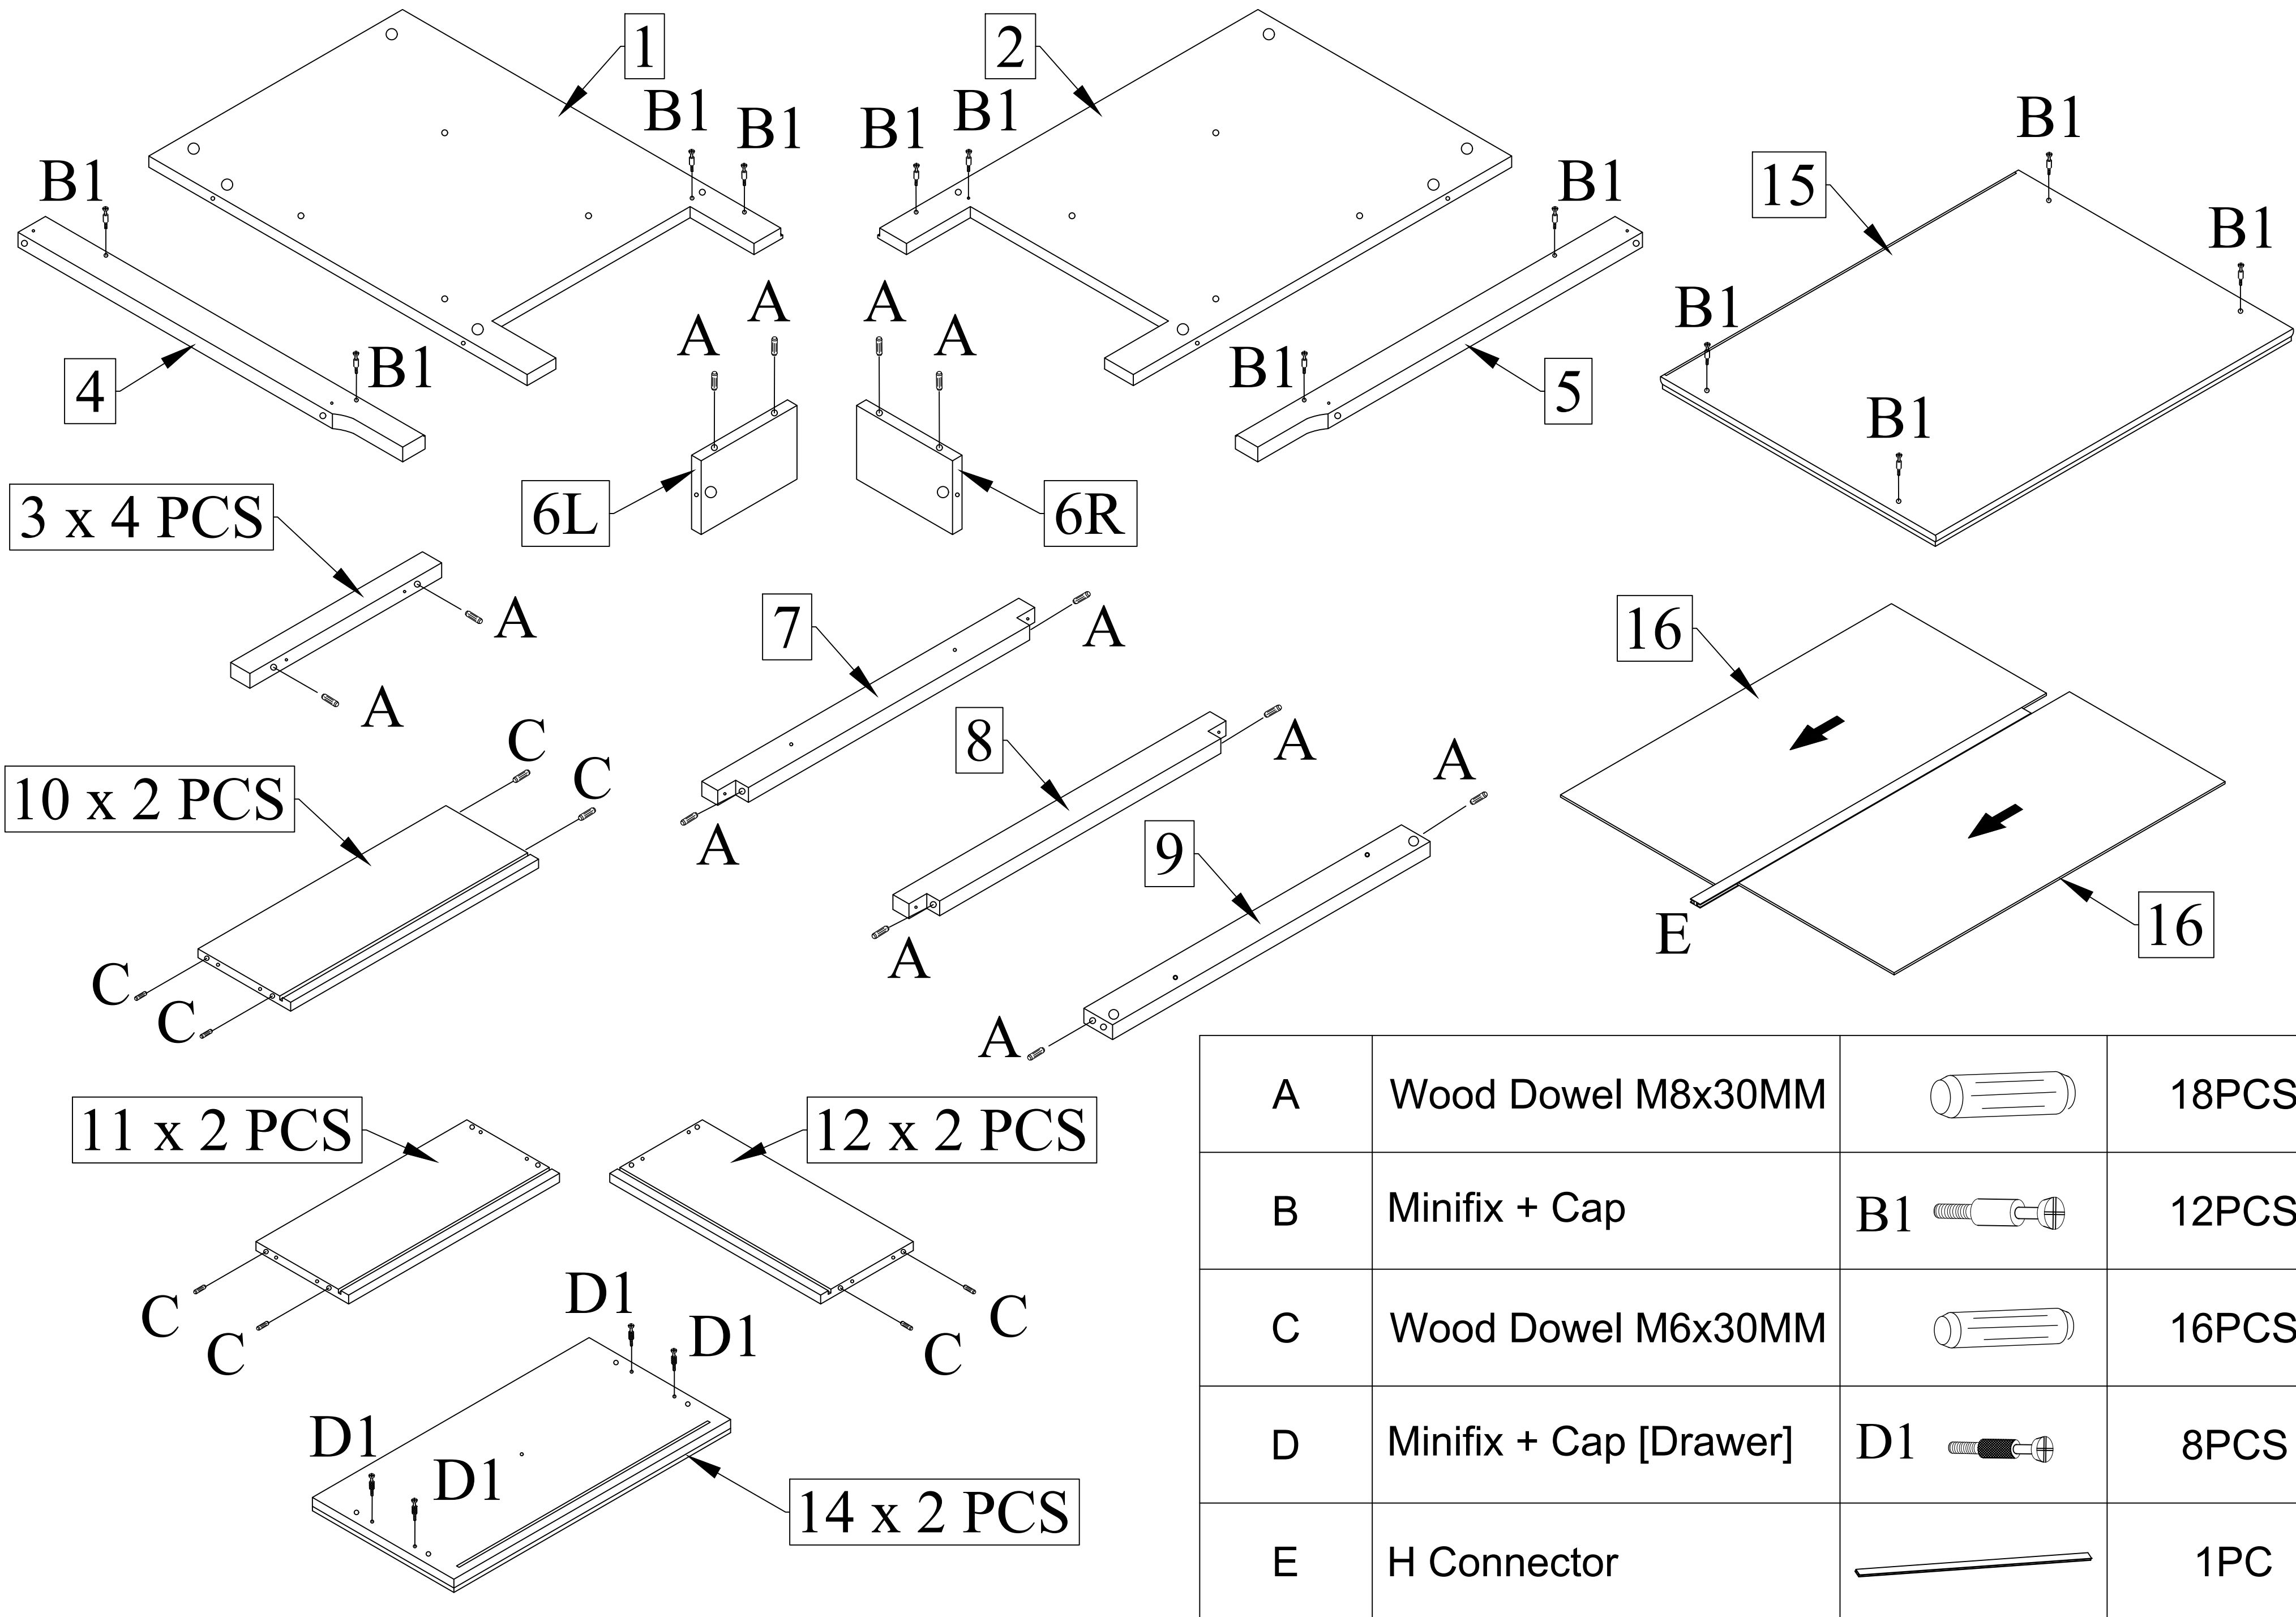

Step 2 : Connect Drawer Slide Rail (3) to Side Panel (1,2) with Screw (F).

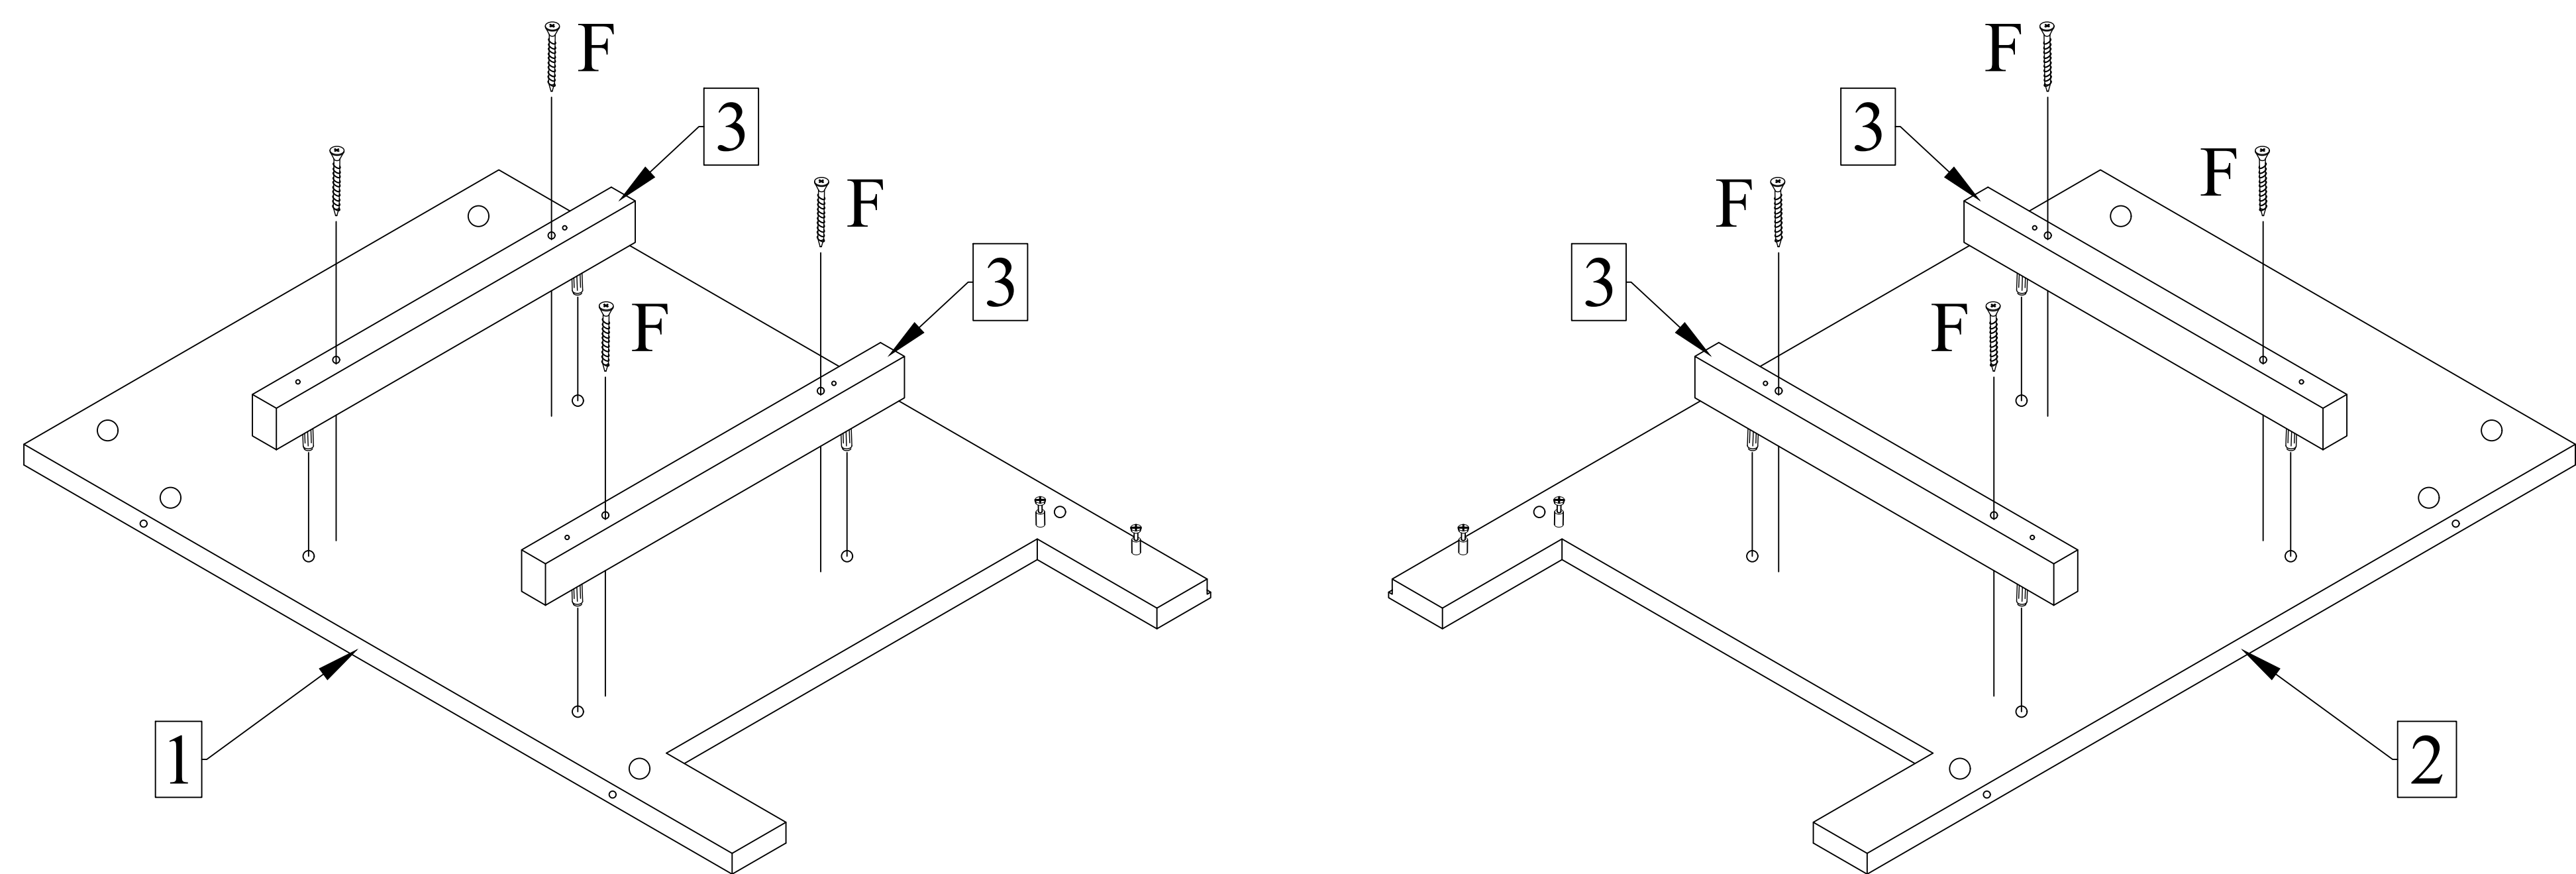




F	Screw M4 x 32MM		8PCS
---	-----------------	---	------

ASSEMBLY INSTRUCTIONS
Item No : WF299160AAK
Description : NIGHT STAND



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 3 : Attach Drawer Slide (G1) onto the Rail on Side Panel using Screw (H).

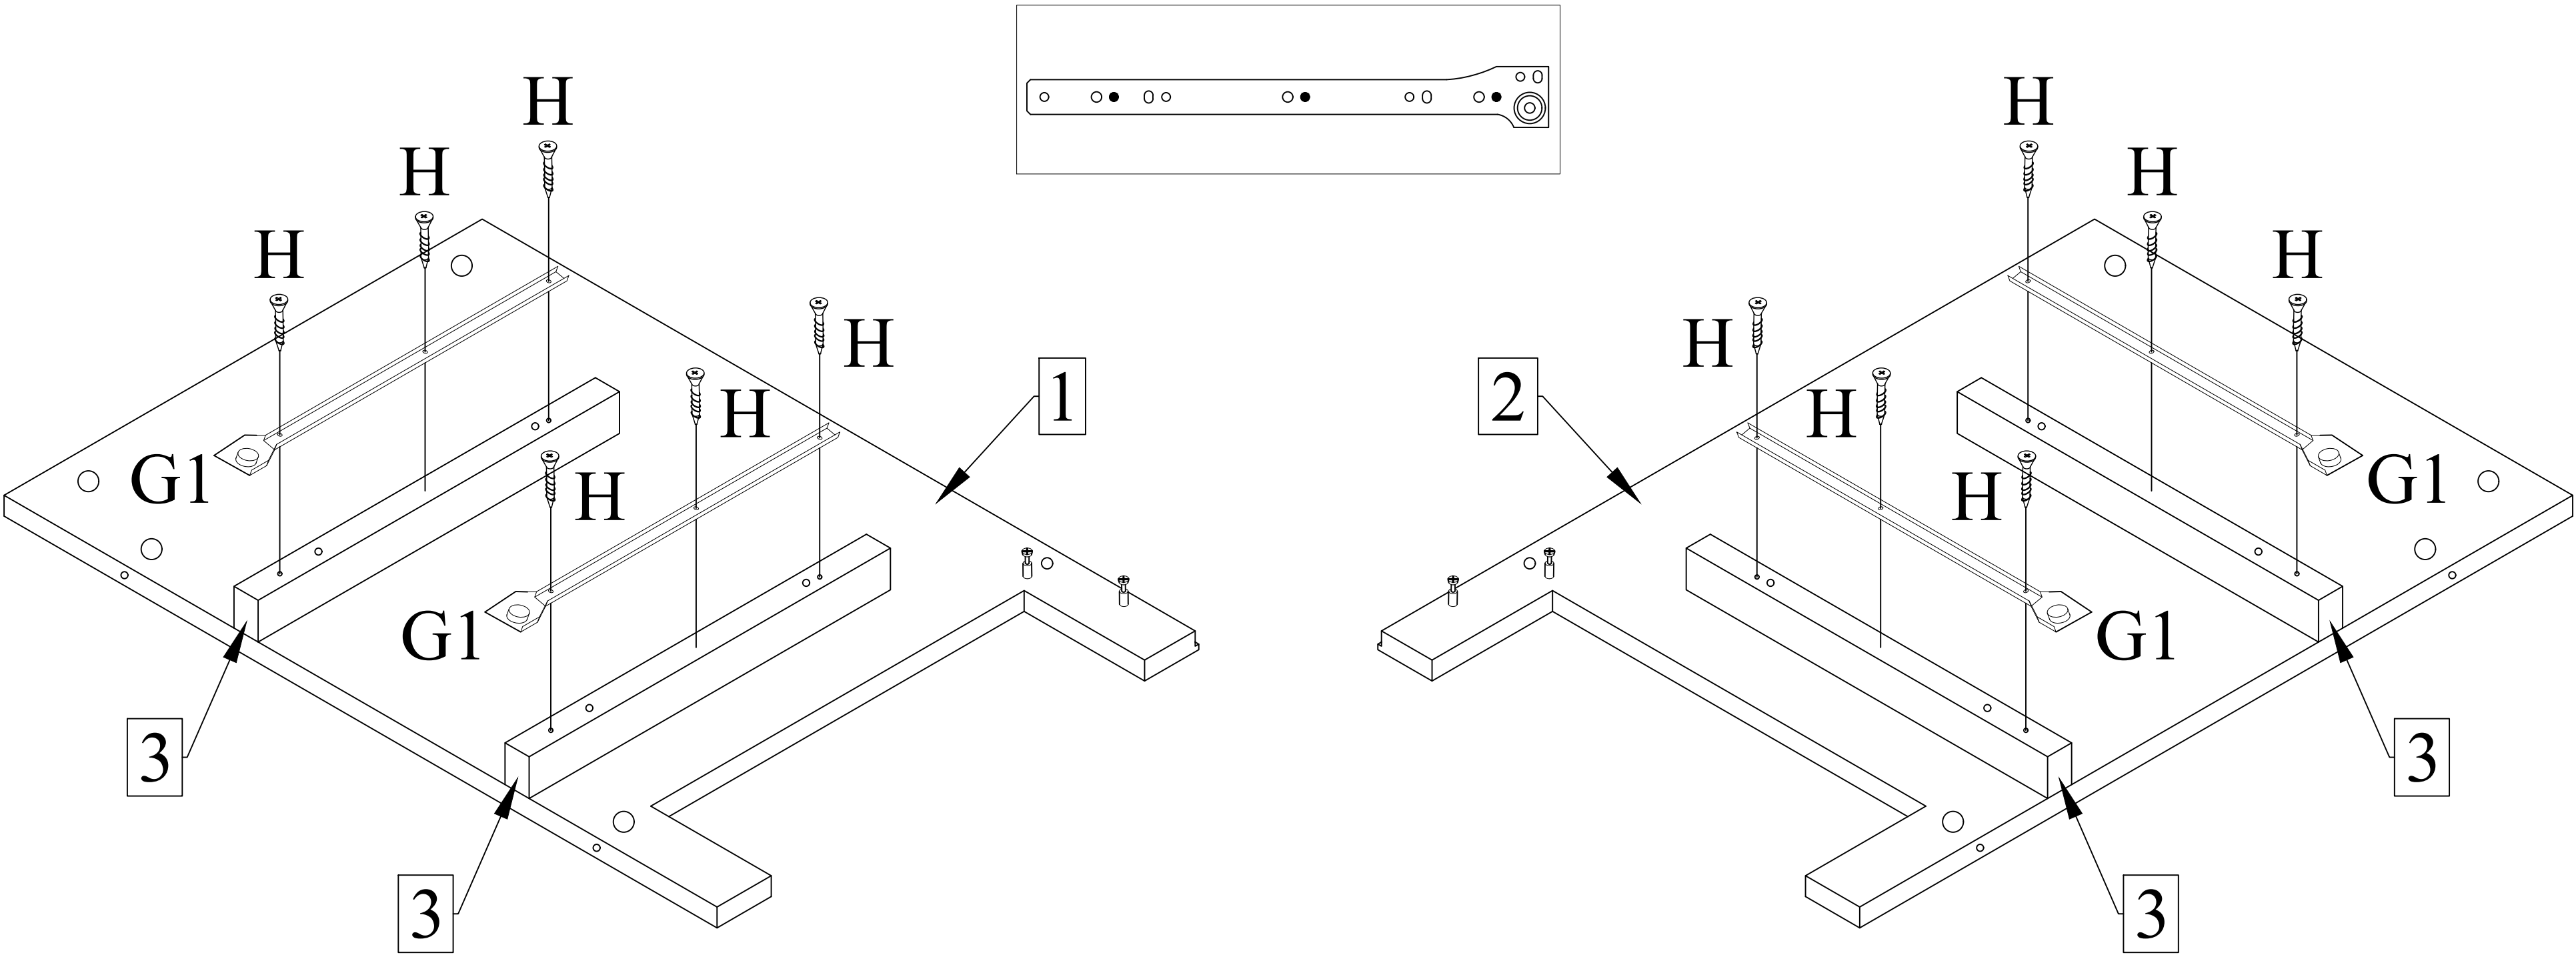


G	Drawer Slide	G1 	2SETS
H	Screw M3 x 12MM		12PCS

Step 4 : Connect Pillar (4,5) to Side Panel and lock Minifix Cap (B2).

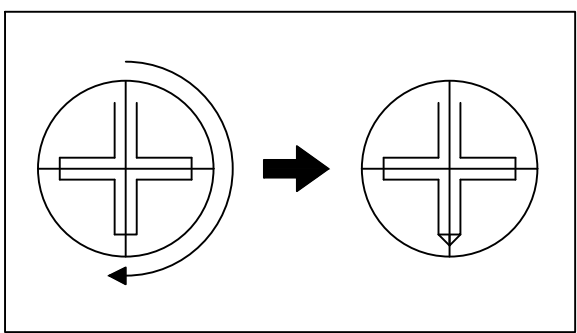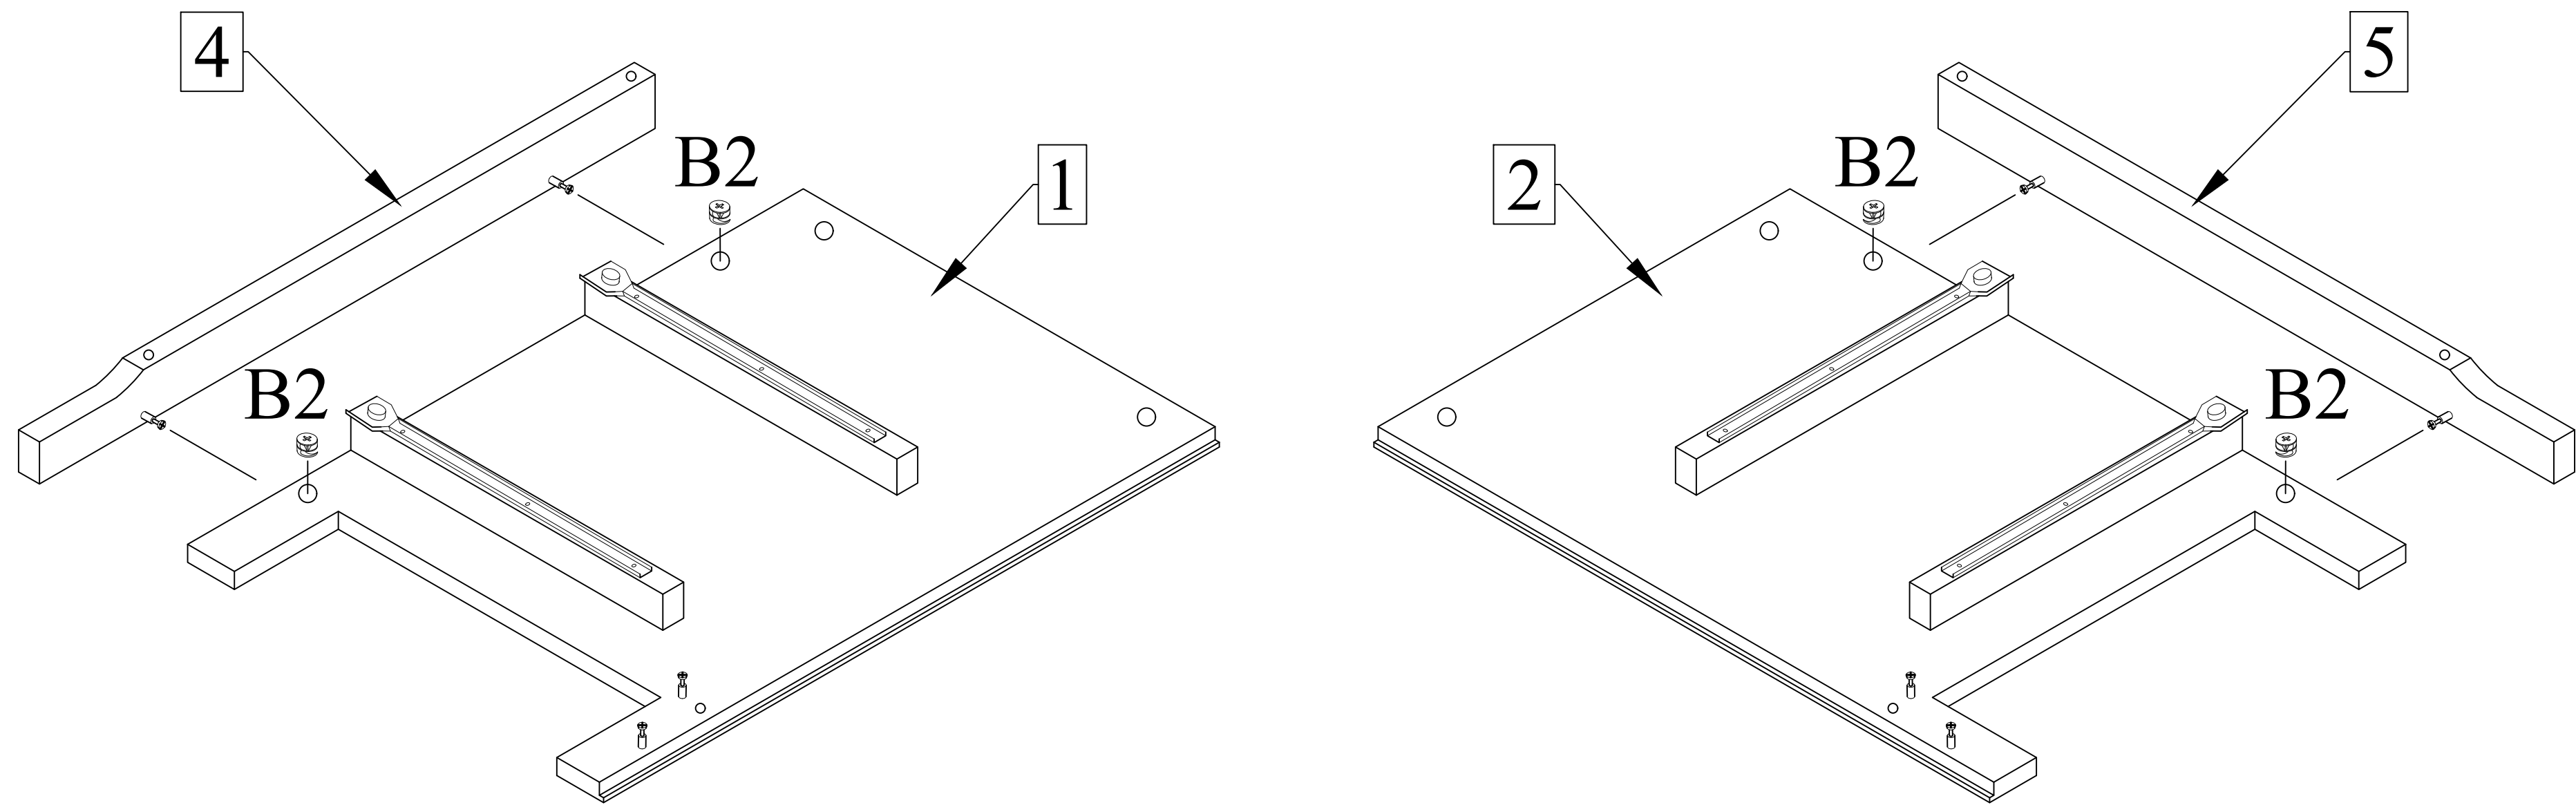

Lock Minifix cap clockwise

B	Minifix Cap	B2 	4PCS
---	-------------	--	------



ASSEMBLY INSTRUCTIONS

Item No : WF299160AAK



Description : NIGHT STAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.



Step 5 : Attach Leg (6) onto Back Rail (9) using Screw (F).
Connect Side Panels with Top Rail (7), Bottom Rail (8) and Back Rail (9,6).
Lock Back Rail (9) with Minifix Cap (B2).
Lock Top & Bottom Rails (7,8) with Screw (F).

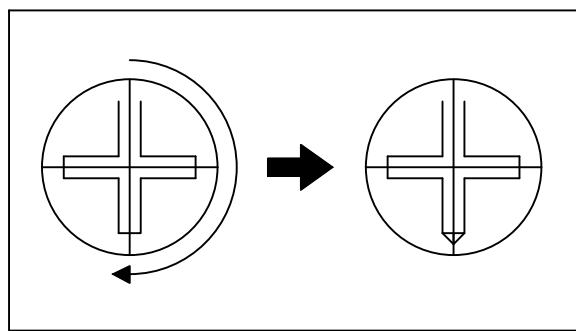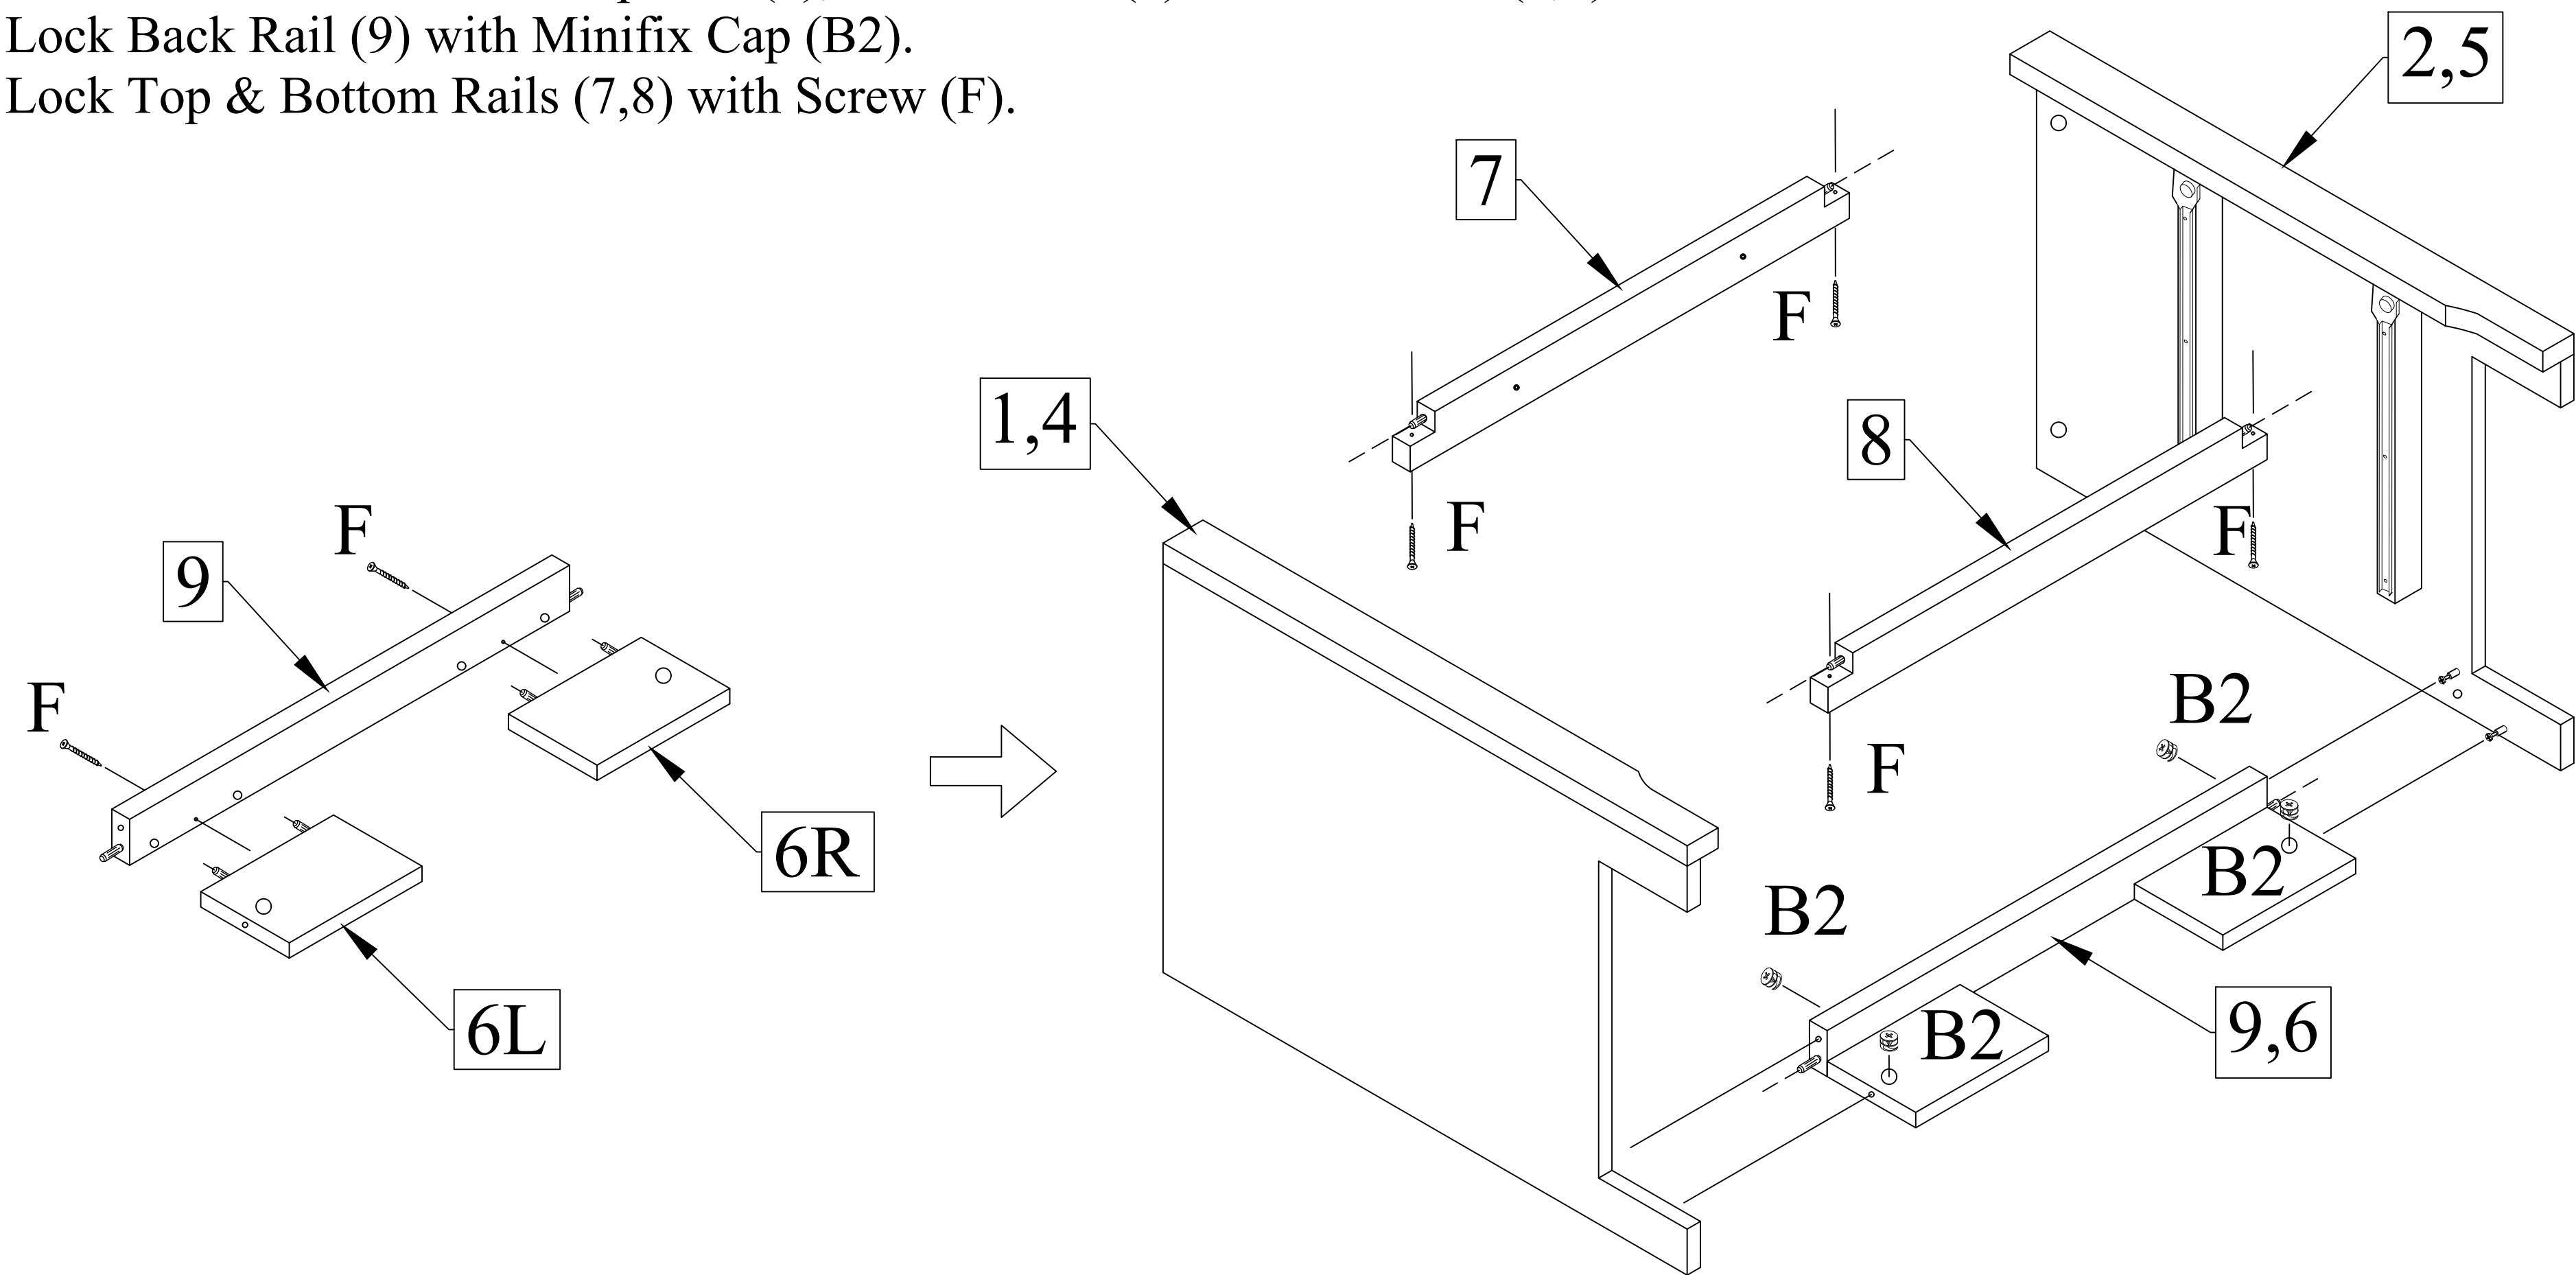


Lock Minifix cap clockwise

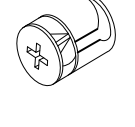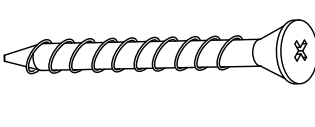B	Minifix Cap	B2 	4PCS
F	Screw M4 x 32MM		6PCS




Step 6 : Attach Top Panel (15) and lock with Minifix Cap (B2) and Screw (F). Attach Back Panel (16) with Screw (H).

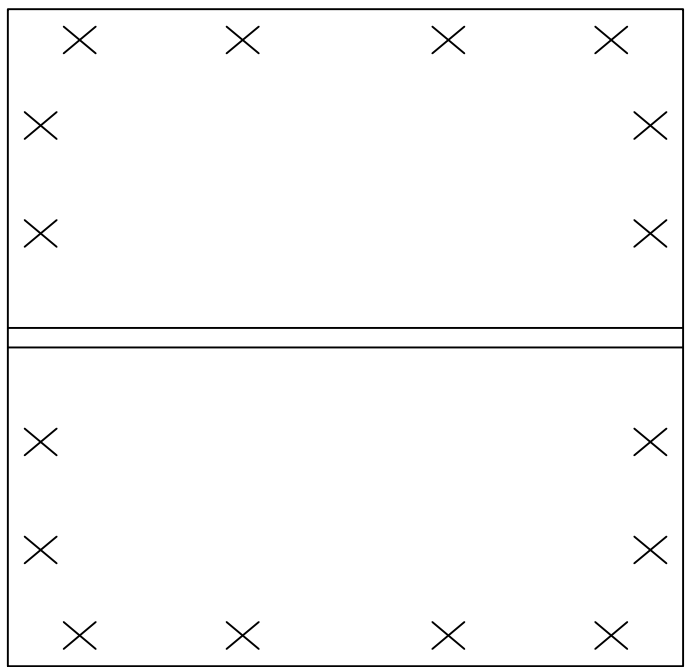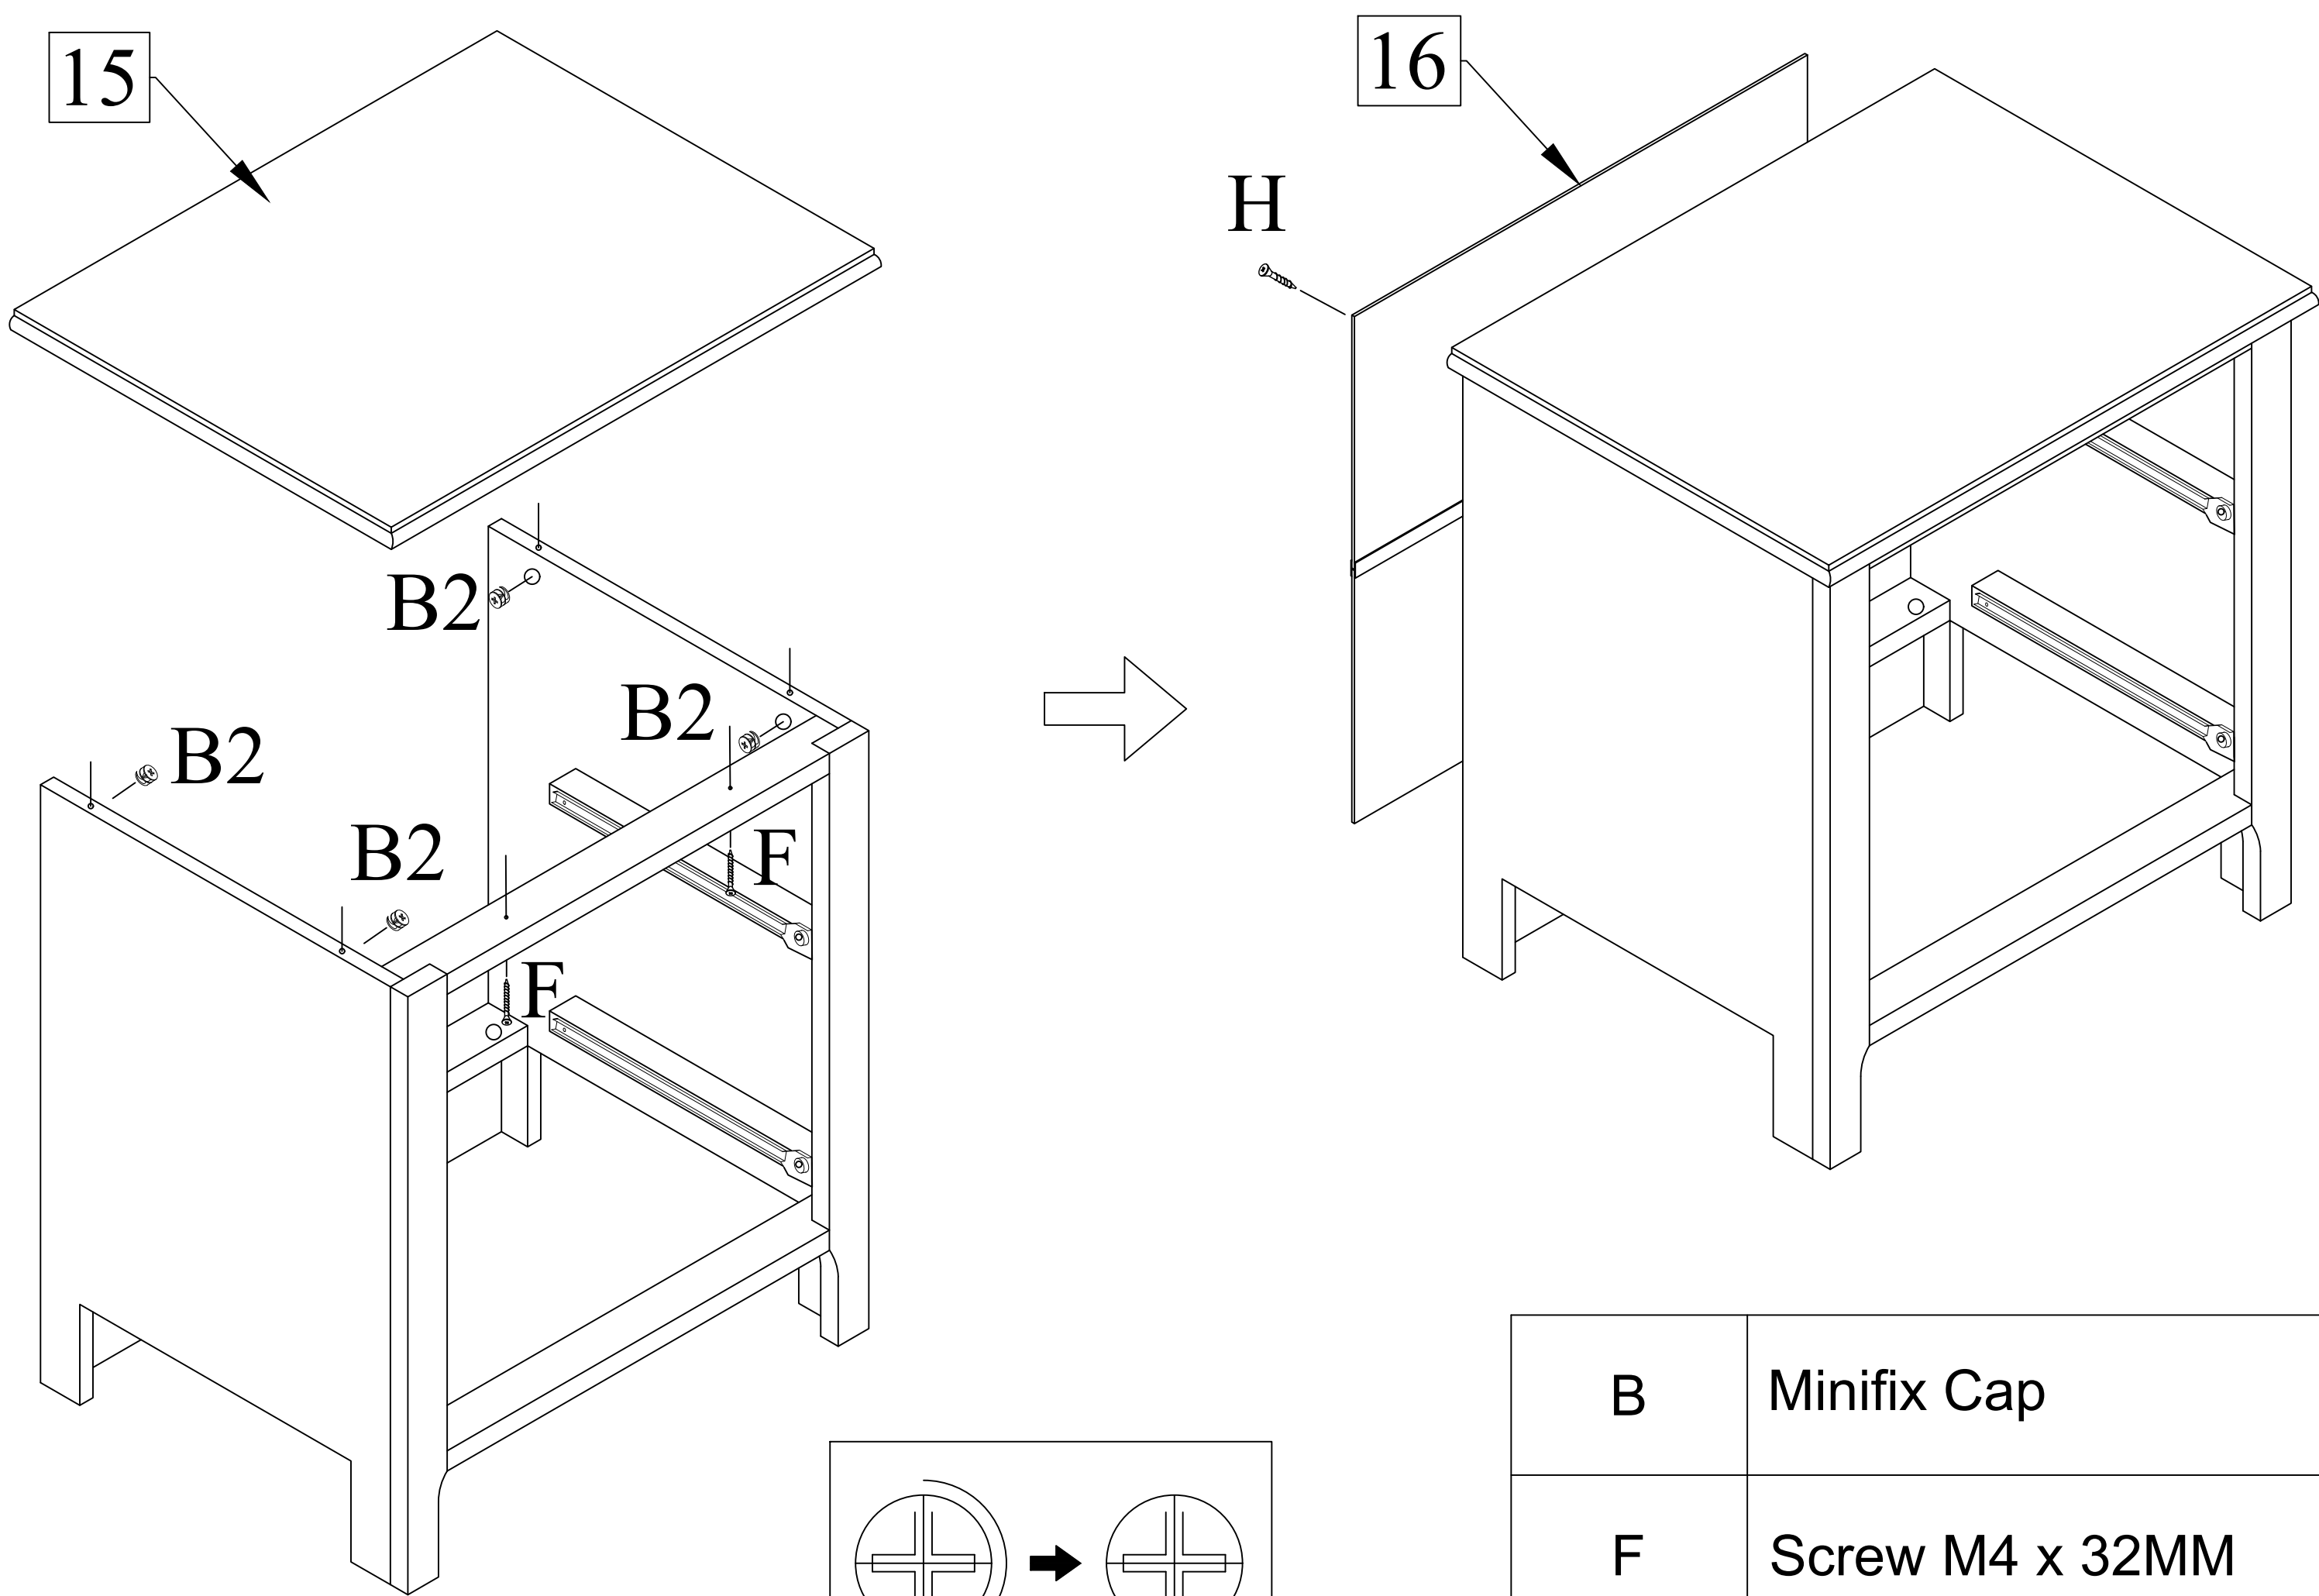

Guidance of screw array

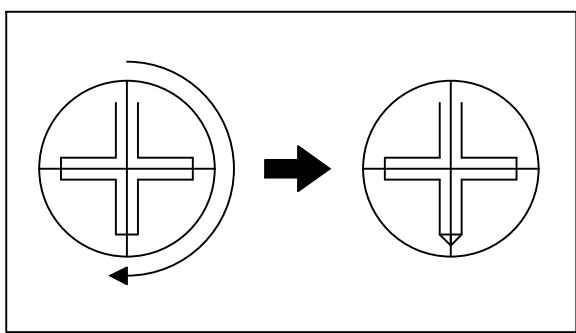

Lock Minifix cap clockwise

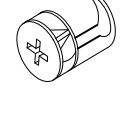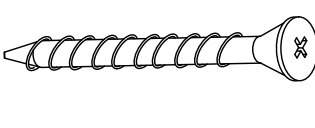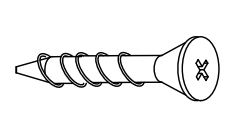B	Minifix Cap	B2 	4PCS
F	Screw M4 x 32MM		2PCS
H	Screw M3 x 12MM		16PCS

ASSEMBLY INSTRUCTIONS
Item No : WF299160AAK
Description : NIGHT STAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 7: Drawer assembly.


First connect Drawer Back (10) to Drawer Side - L (11) and Drawer Side - R (12) with Screw (F).

Next, slot in the the Drawer Base (13).


Then, install Handle with Screw (I1&I2) onto Drawer Front (14). Attach Drawer Front (14) to the drawer box and lock Minifix Cap [Drawer] (D2).

Finally, install Drawer Slide (G2) onto the drawer box using Screw (H).

Drawer assembly x 2

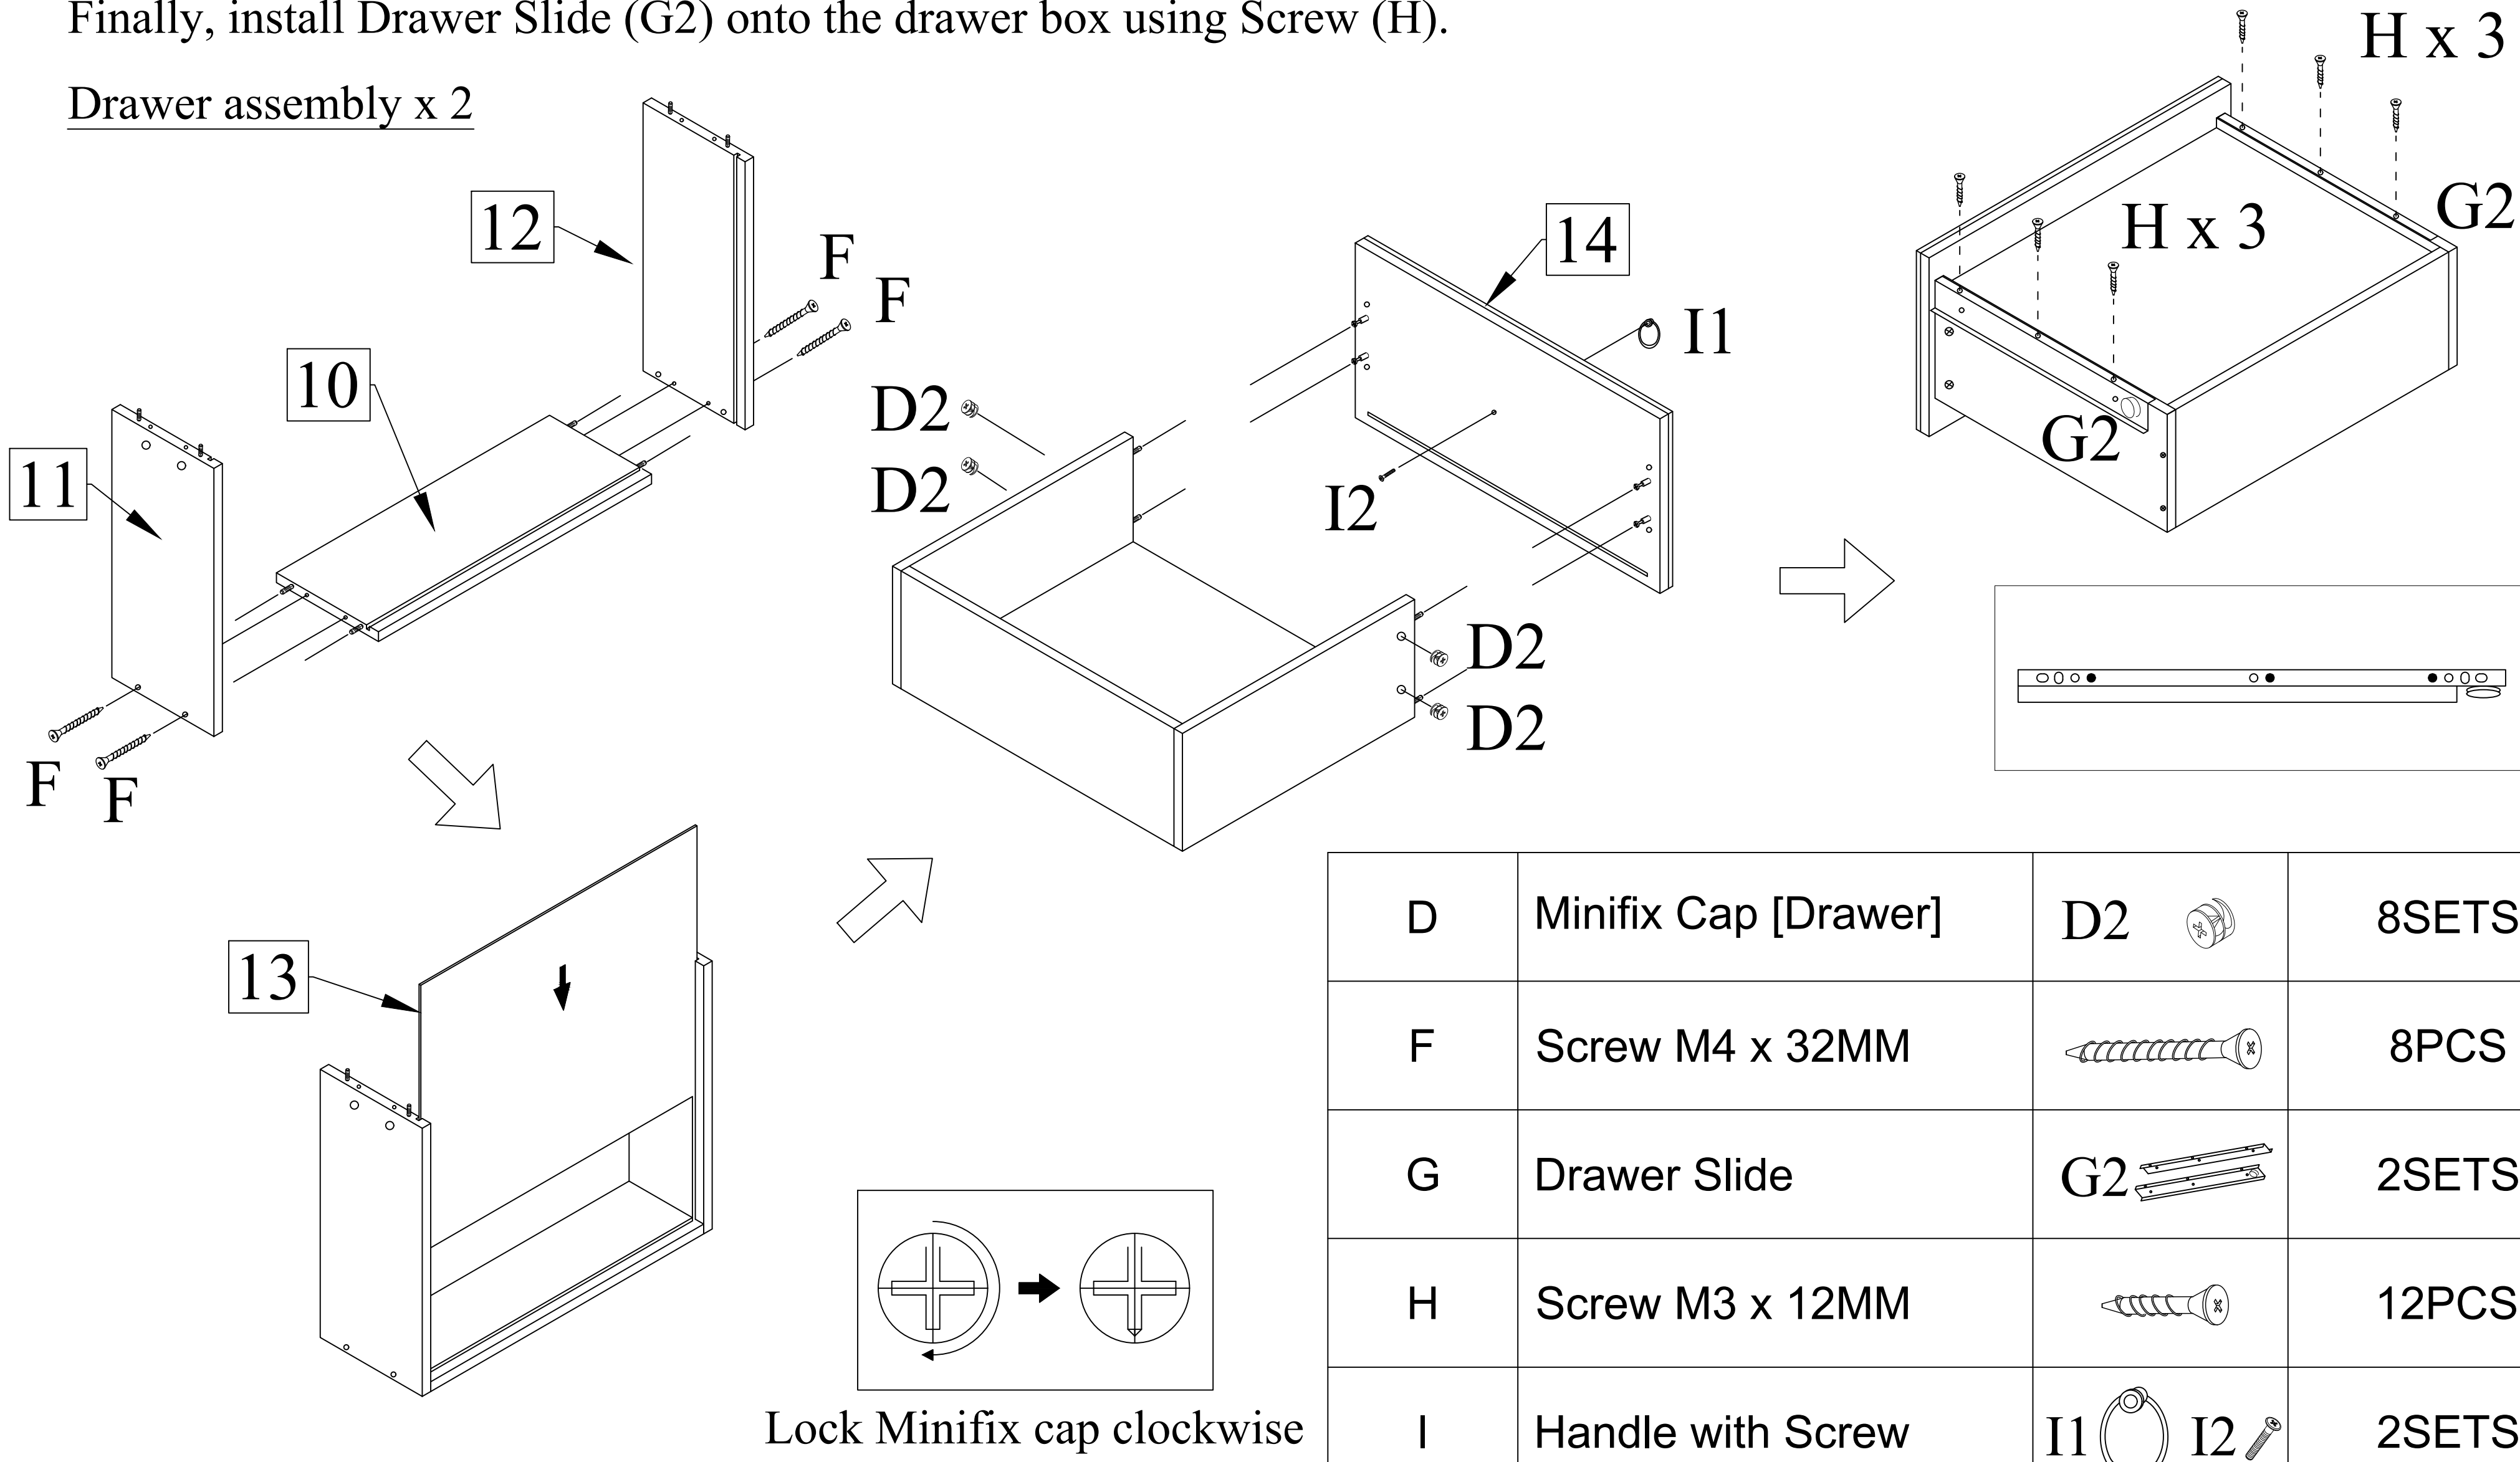

Step 8 : Insert the drawer box, complete assembly.

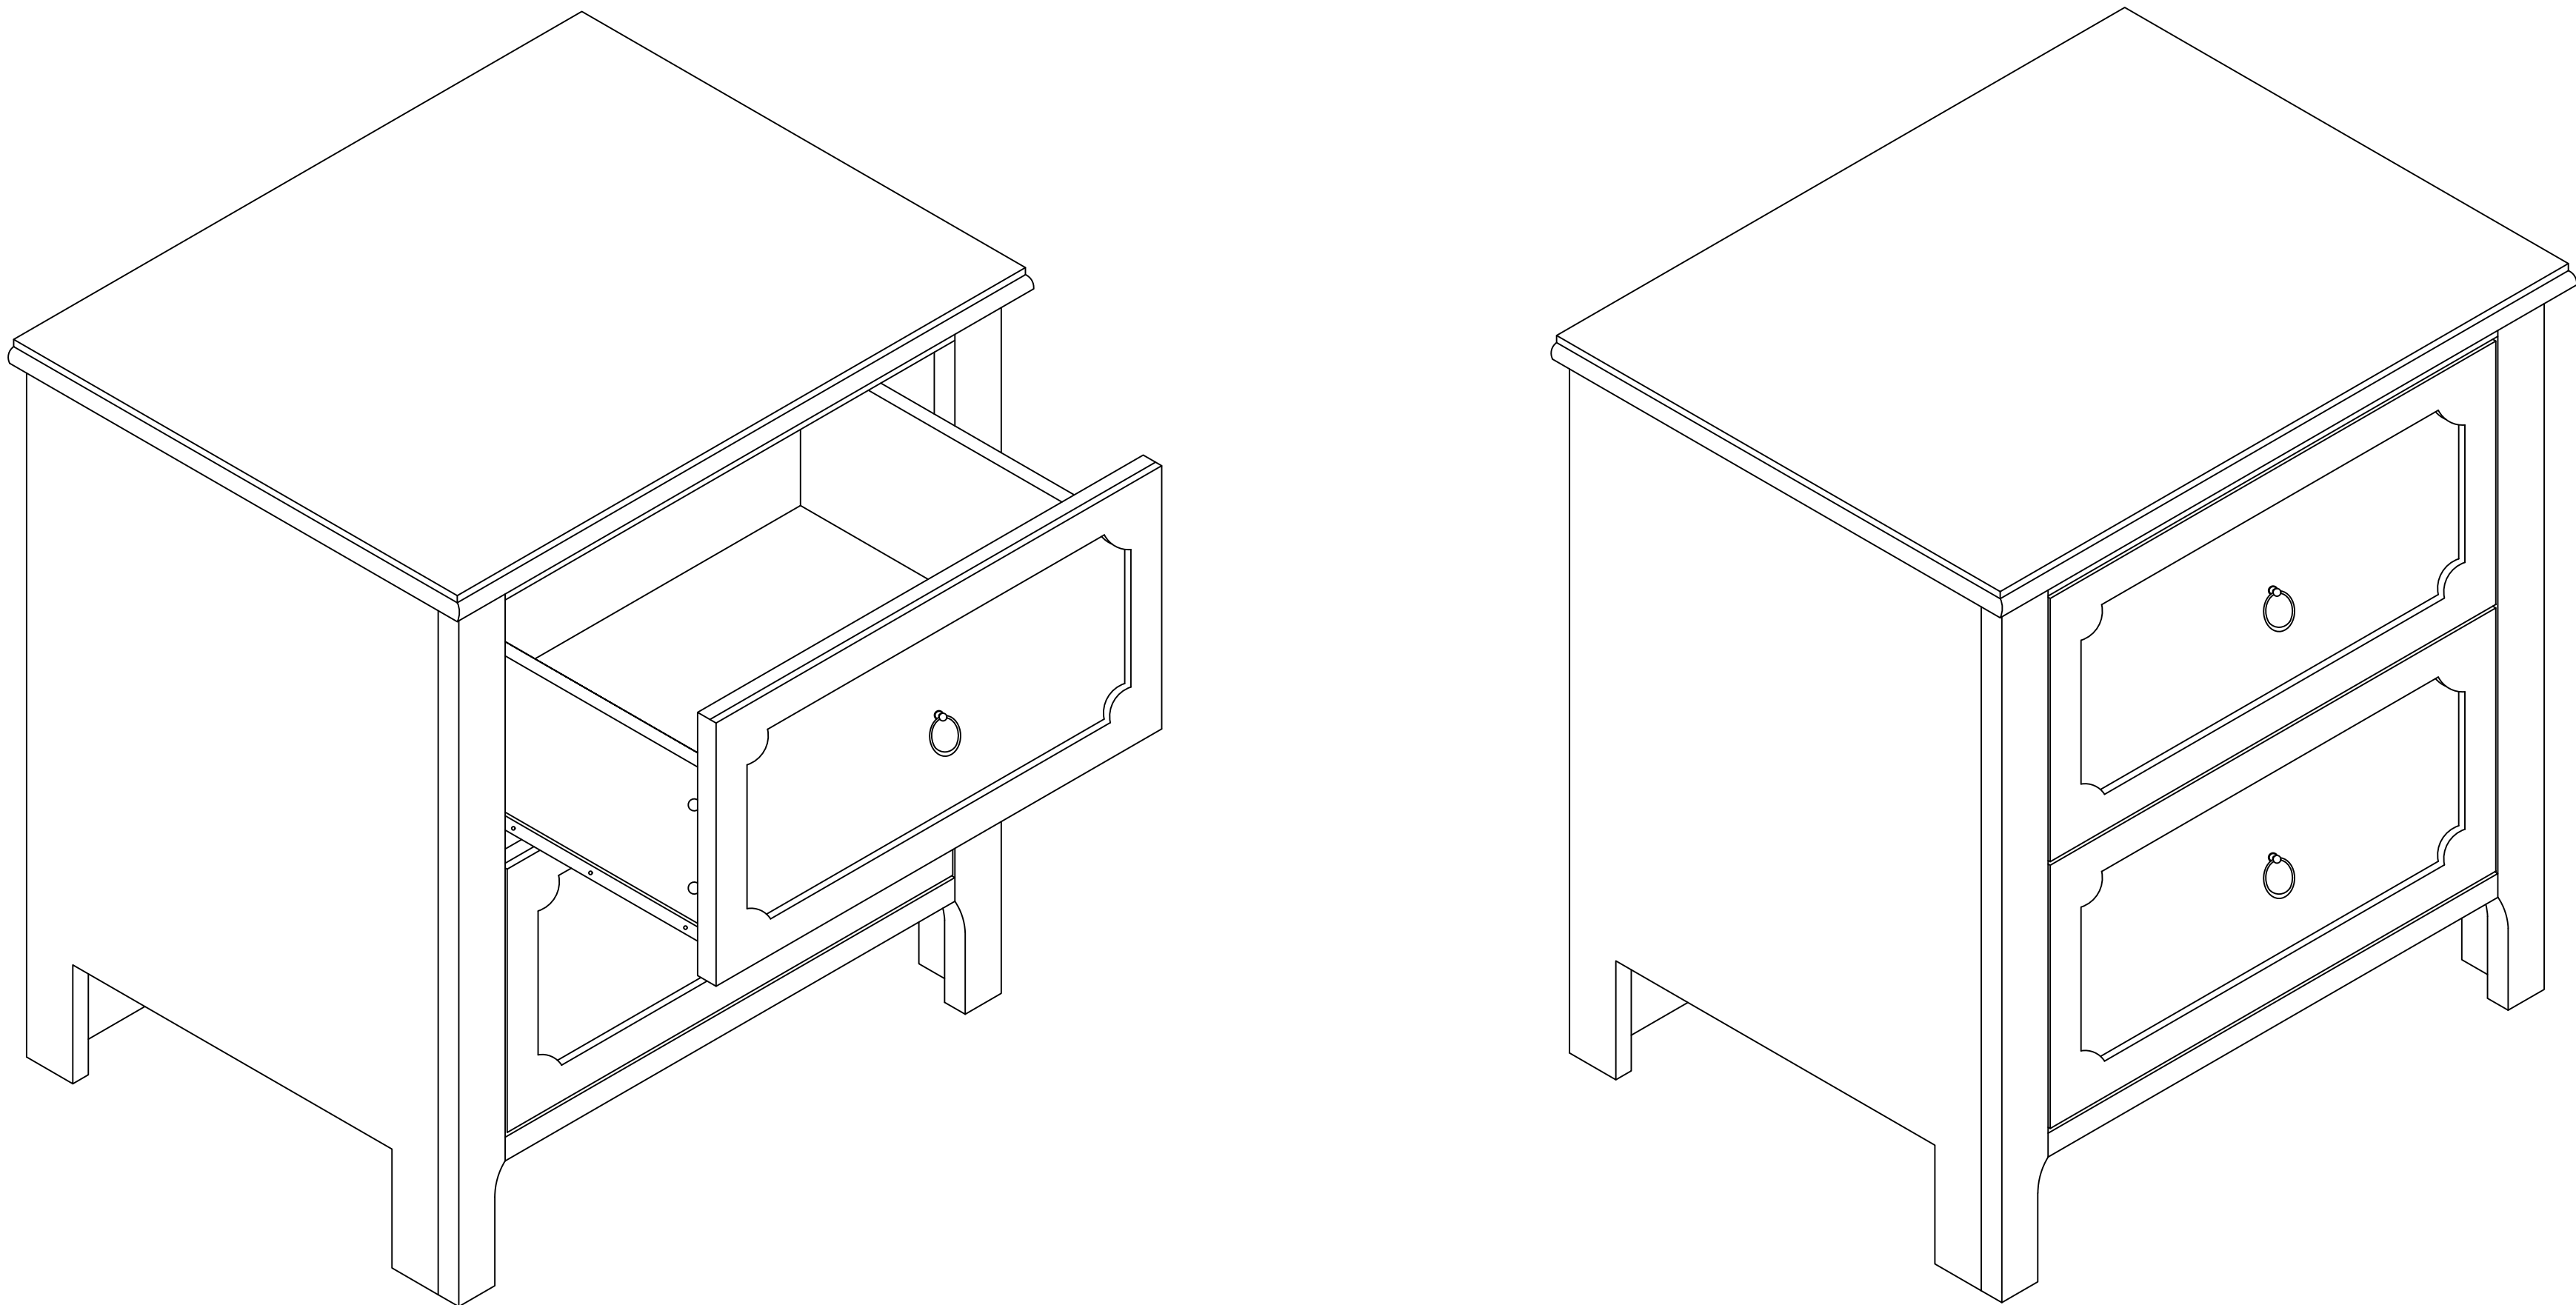

ASSEMBLY INSTRUCTIONS

Item No : WF299164AAK

Description : DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.




WF299164AAK

ASSEMBLY INSTRUCTIONS


Item No : WF299164AAK

Description : DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

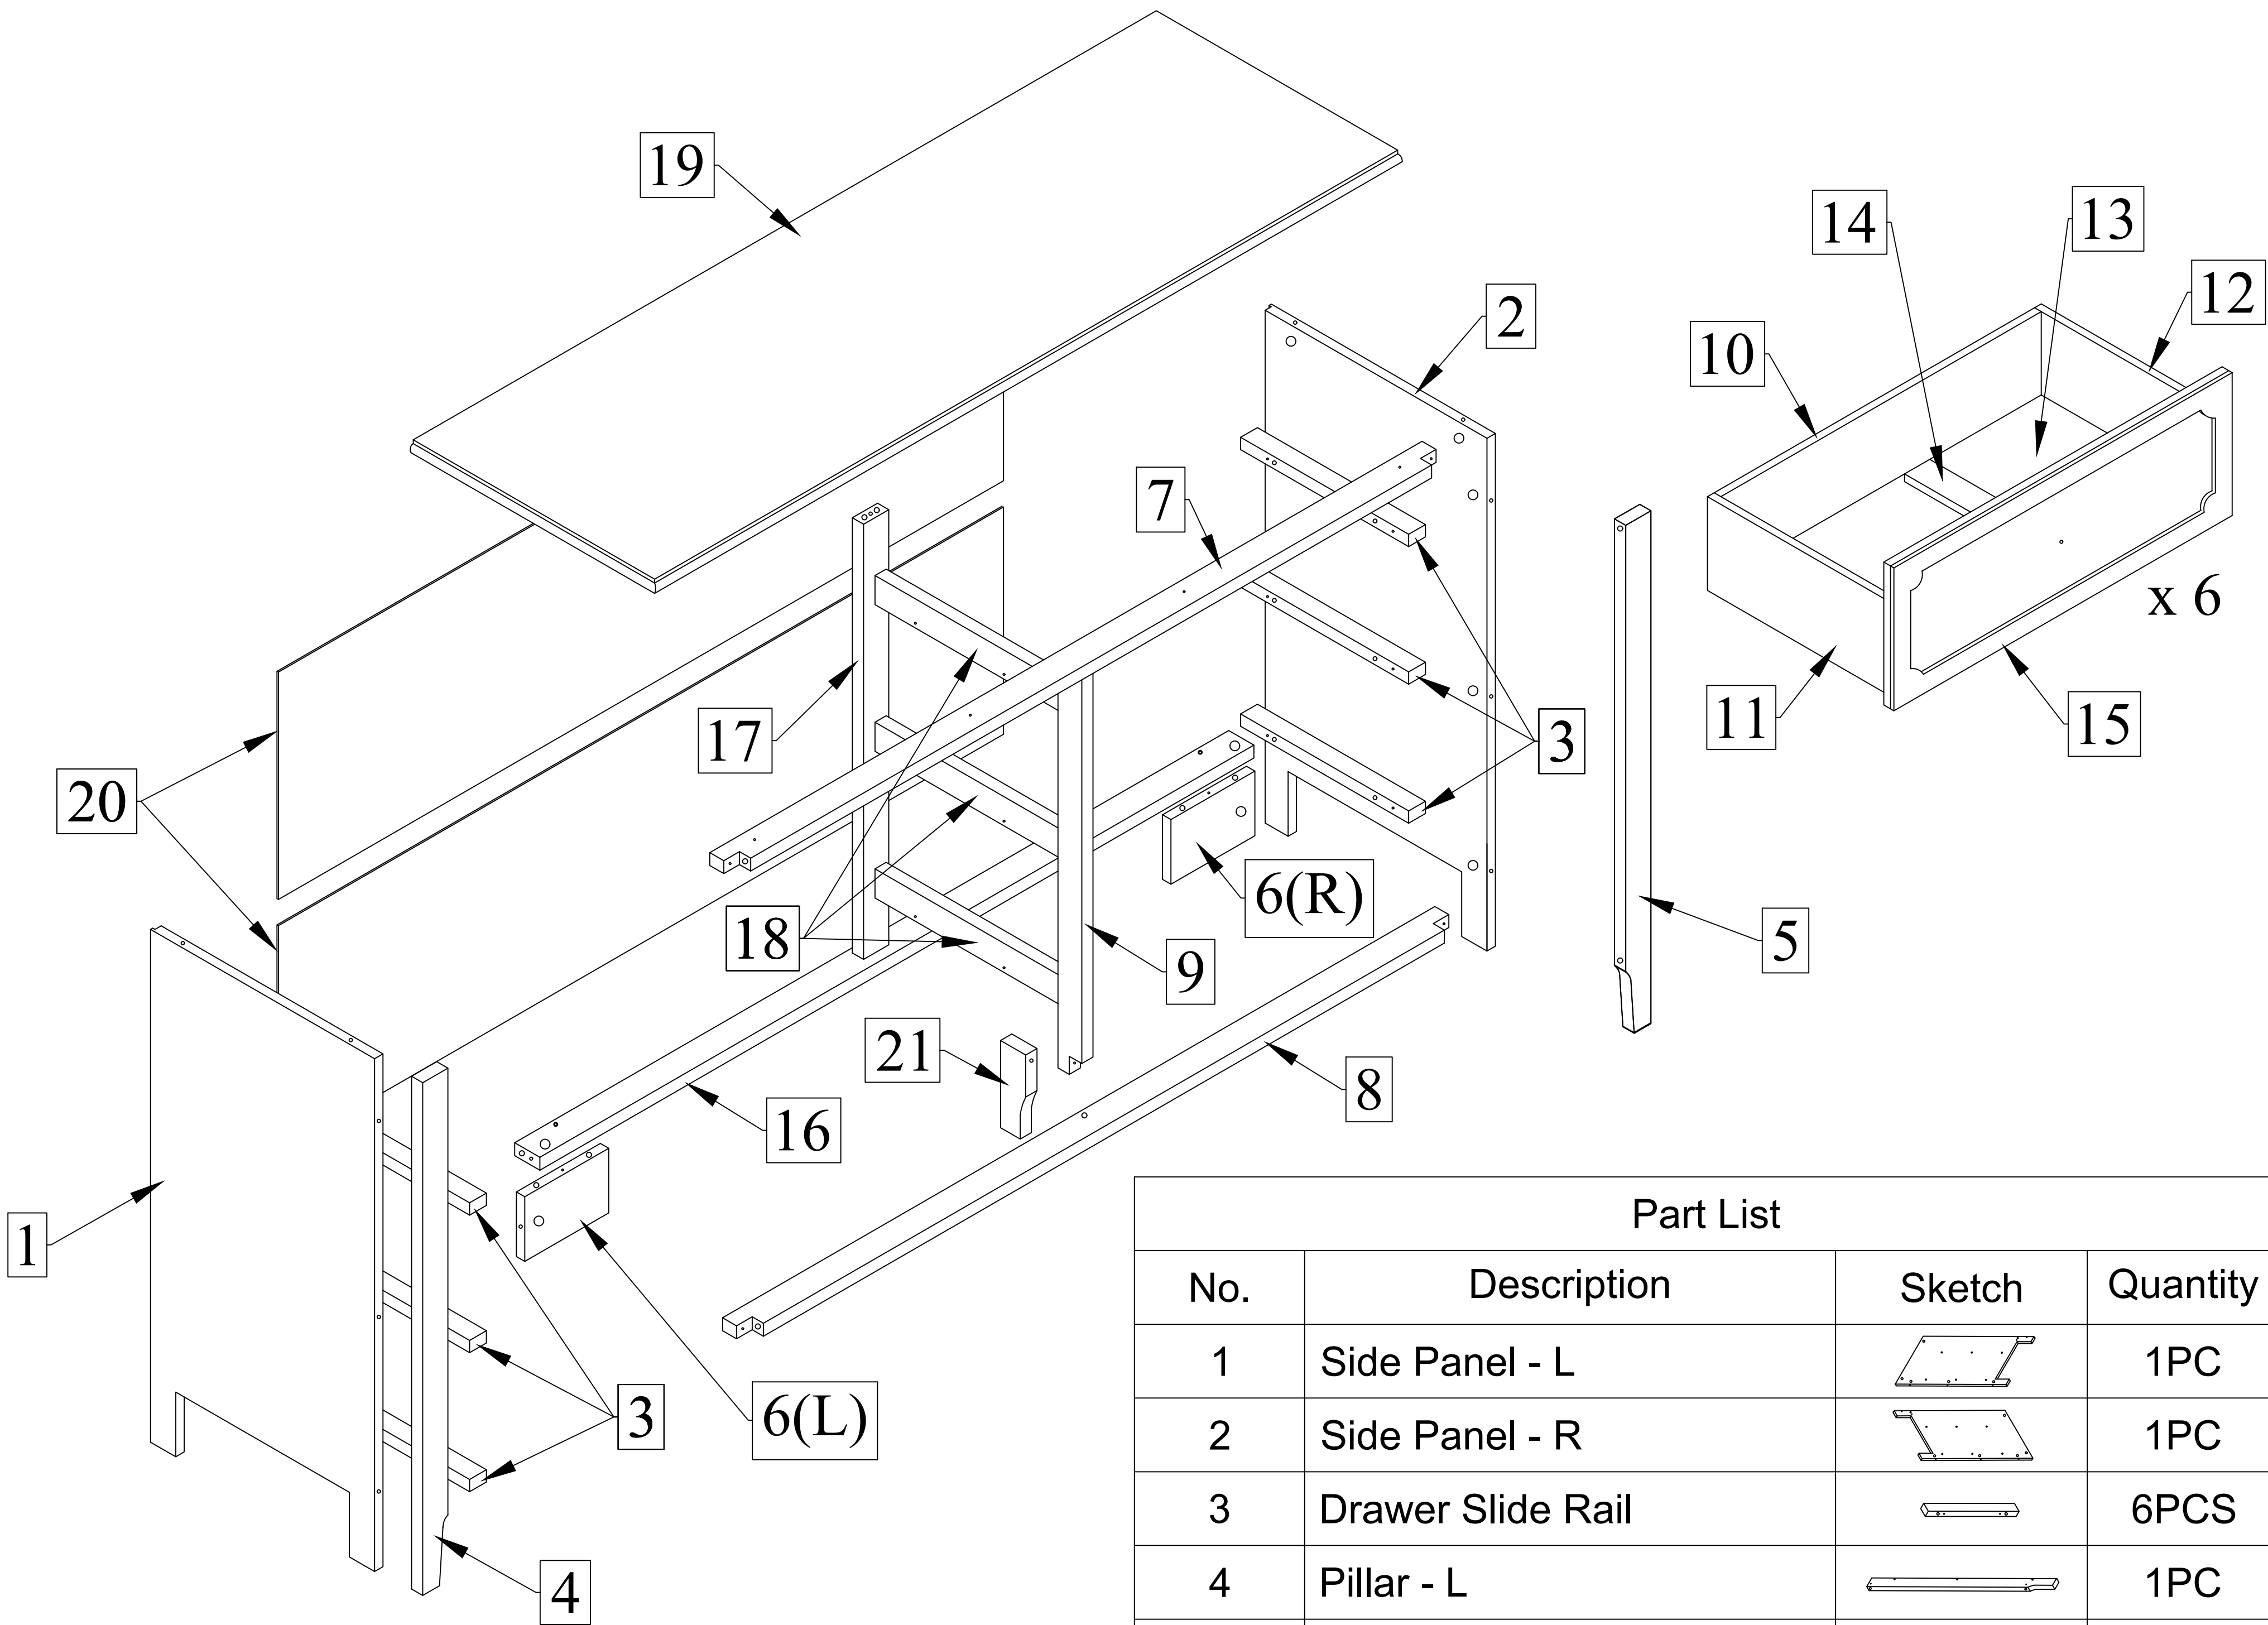

TOOLS REQUIRED (Not provided)



Screwdriver

Hardware List


No.	Description	Sketch	Quantity
A	Wood Dowel M8x30MM		40PCS
B	Minifix + Cap	B1 B2	14SETS
C	Wood Dowel M6x30MM		48PCS
D	Minifix + Cap [Drawer]	D1 D2	36SETS
E	H Connector		1PC
F	Screw M4 x 32MM		54PCS
G	Drawer Slide	G1 G2	6SETS
H	Screw M3 x 12MM		114PCS
I	Handle with Screw	I1 I2	6SETS

Part List

No.	Description	Sketch	Quantity
1	Side Panel - L		1PC
2	Side Panel - R		1PC
3	Drawer Slide Rail		6PCS
4	Pillar - L		1PC
5	Pillar - R		1PC
6	Leg (L & R)	L R	2PCS
7	Top Rail		1PC
8	Bottom Rail		1PC
9	Middle Rail (Front)		1PC
10	Drawer Back		6PCS
11	Drawer Side - L		6PCS
12	Drawer Side - R		6PCS
13	Drawer Base		6PCS
14	Drawer Base Support		6PCS
15	Drawer Front - 3L3R		6PCS
16	Back Rail		1PC
17	Middle Rail (Back)		1PC
18	Center Rail		3PCS
19	Top Panel		1PC
20	Back Panel		2PCS
21	Center Leg		1PC

Description : DRESSER


Step 1 : Attach Wood Dowel (A) and Minifix (B1) to parts (1,2,3,4,5,6,7,8,9,16,17,18,19) accordingly. Attached Wood Dowel (C) and Minifix [Drawer] (D1) to drawer box parts (10,11,12,15) accordingly. Slot Back Panel (20) into H Connector (E).

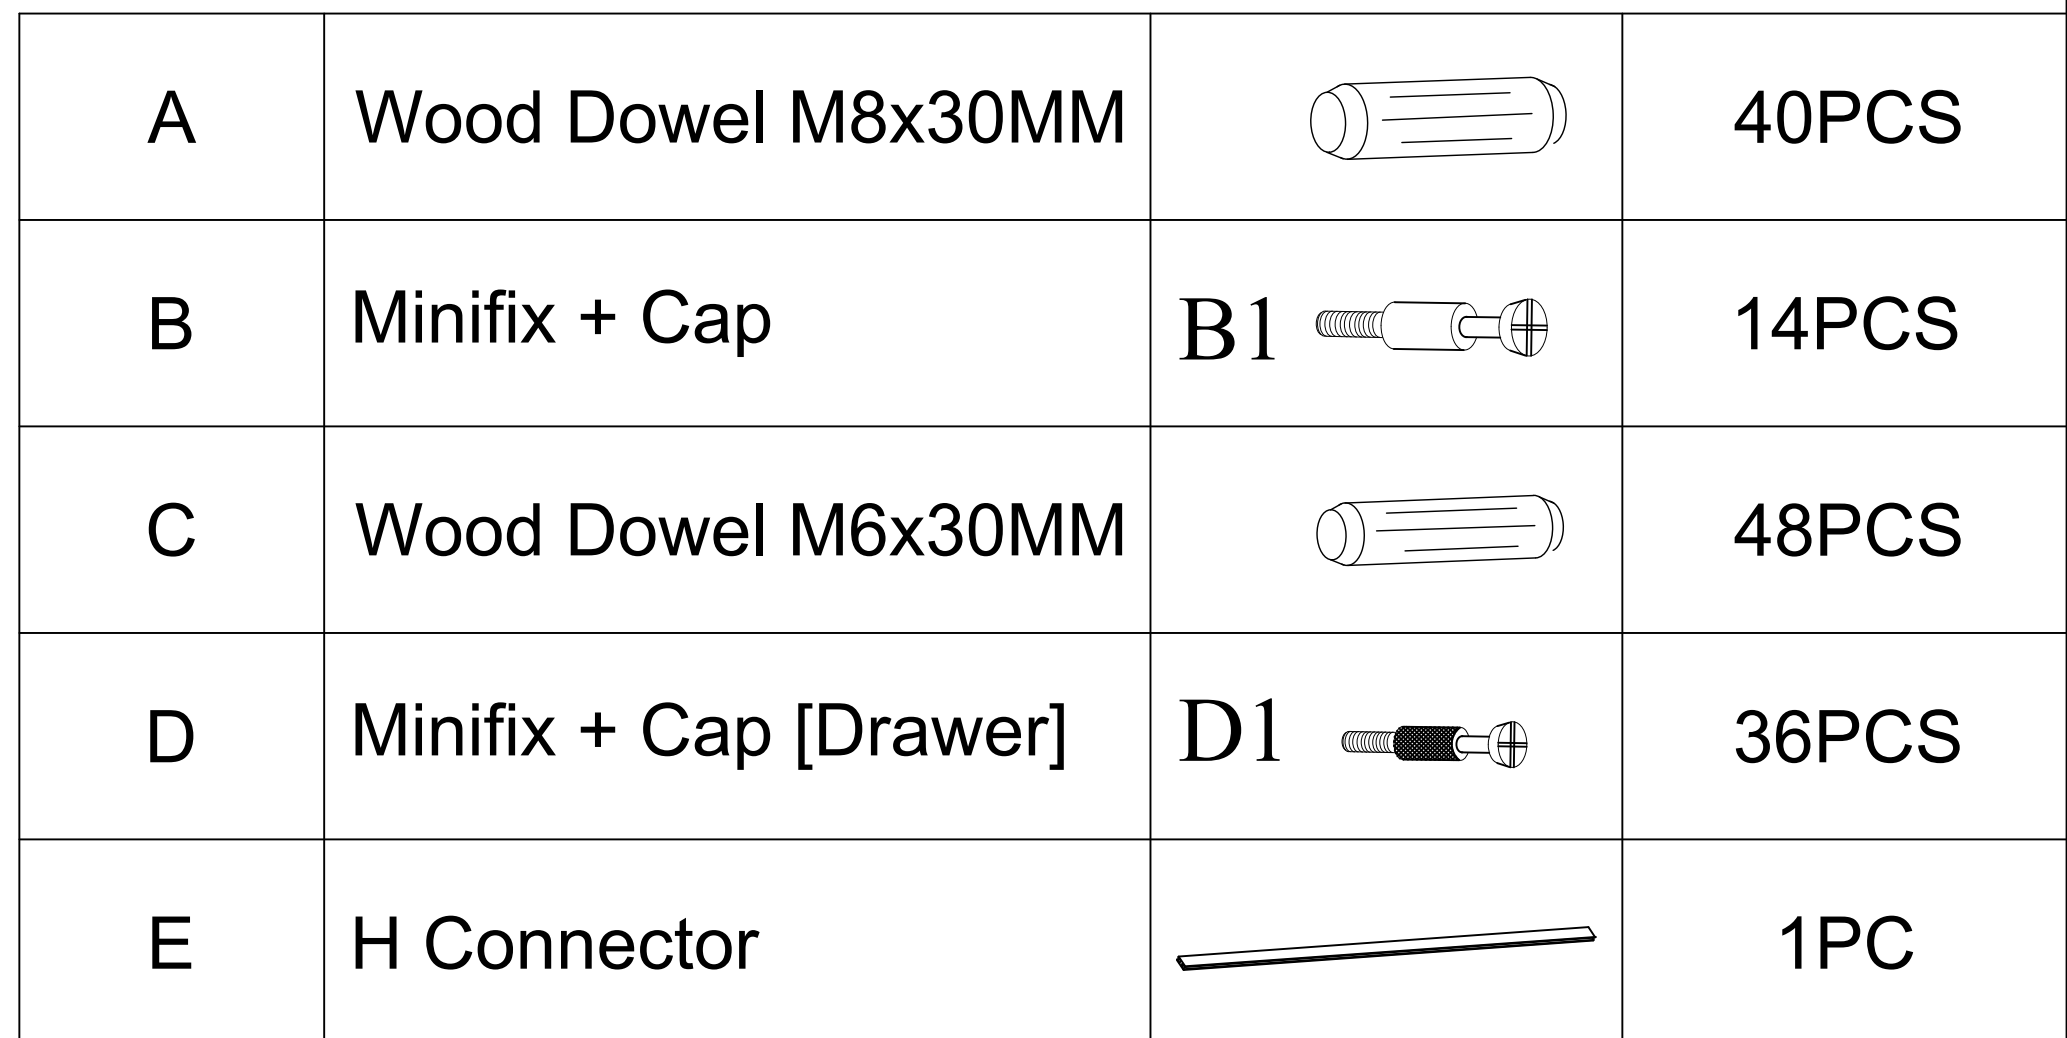

ASSEMBLY INSTRUCTIONS
Item No : WF299164AAK
Description : DRESSER


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.



Step 2 : Connect Drawer Slide Rail (3) to Side Panel (1,2) with Screw (F).

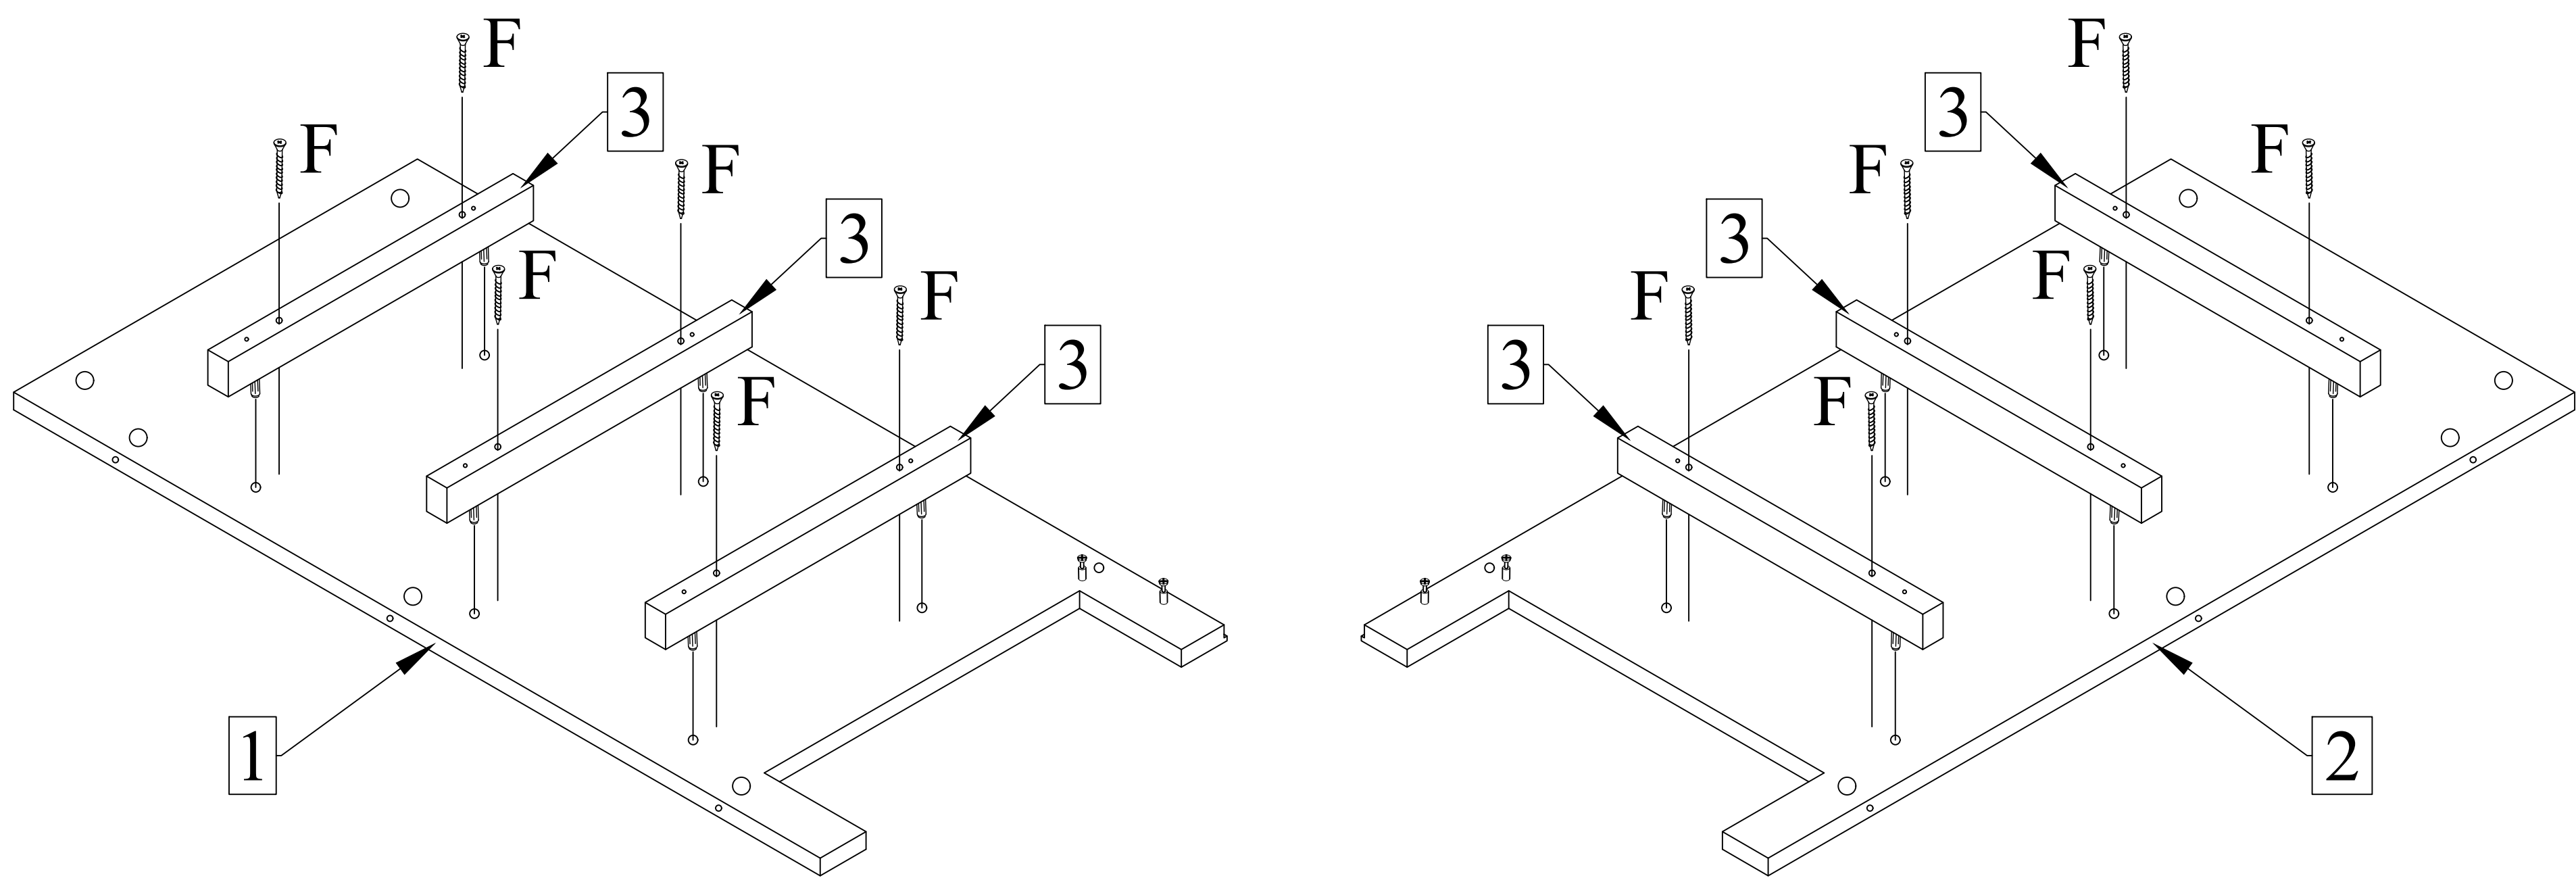

F	Screw M4 x 32MM		12PCS
---	-----------------	---	-------

Step 3 : Attach Drawer Slide (G1) onto the Rail on Side Panel using Screw (H).

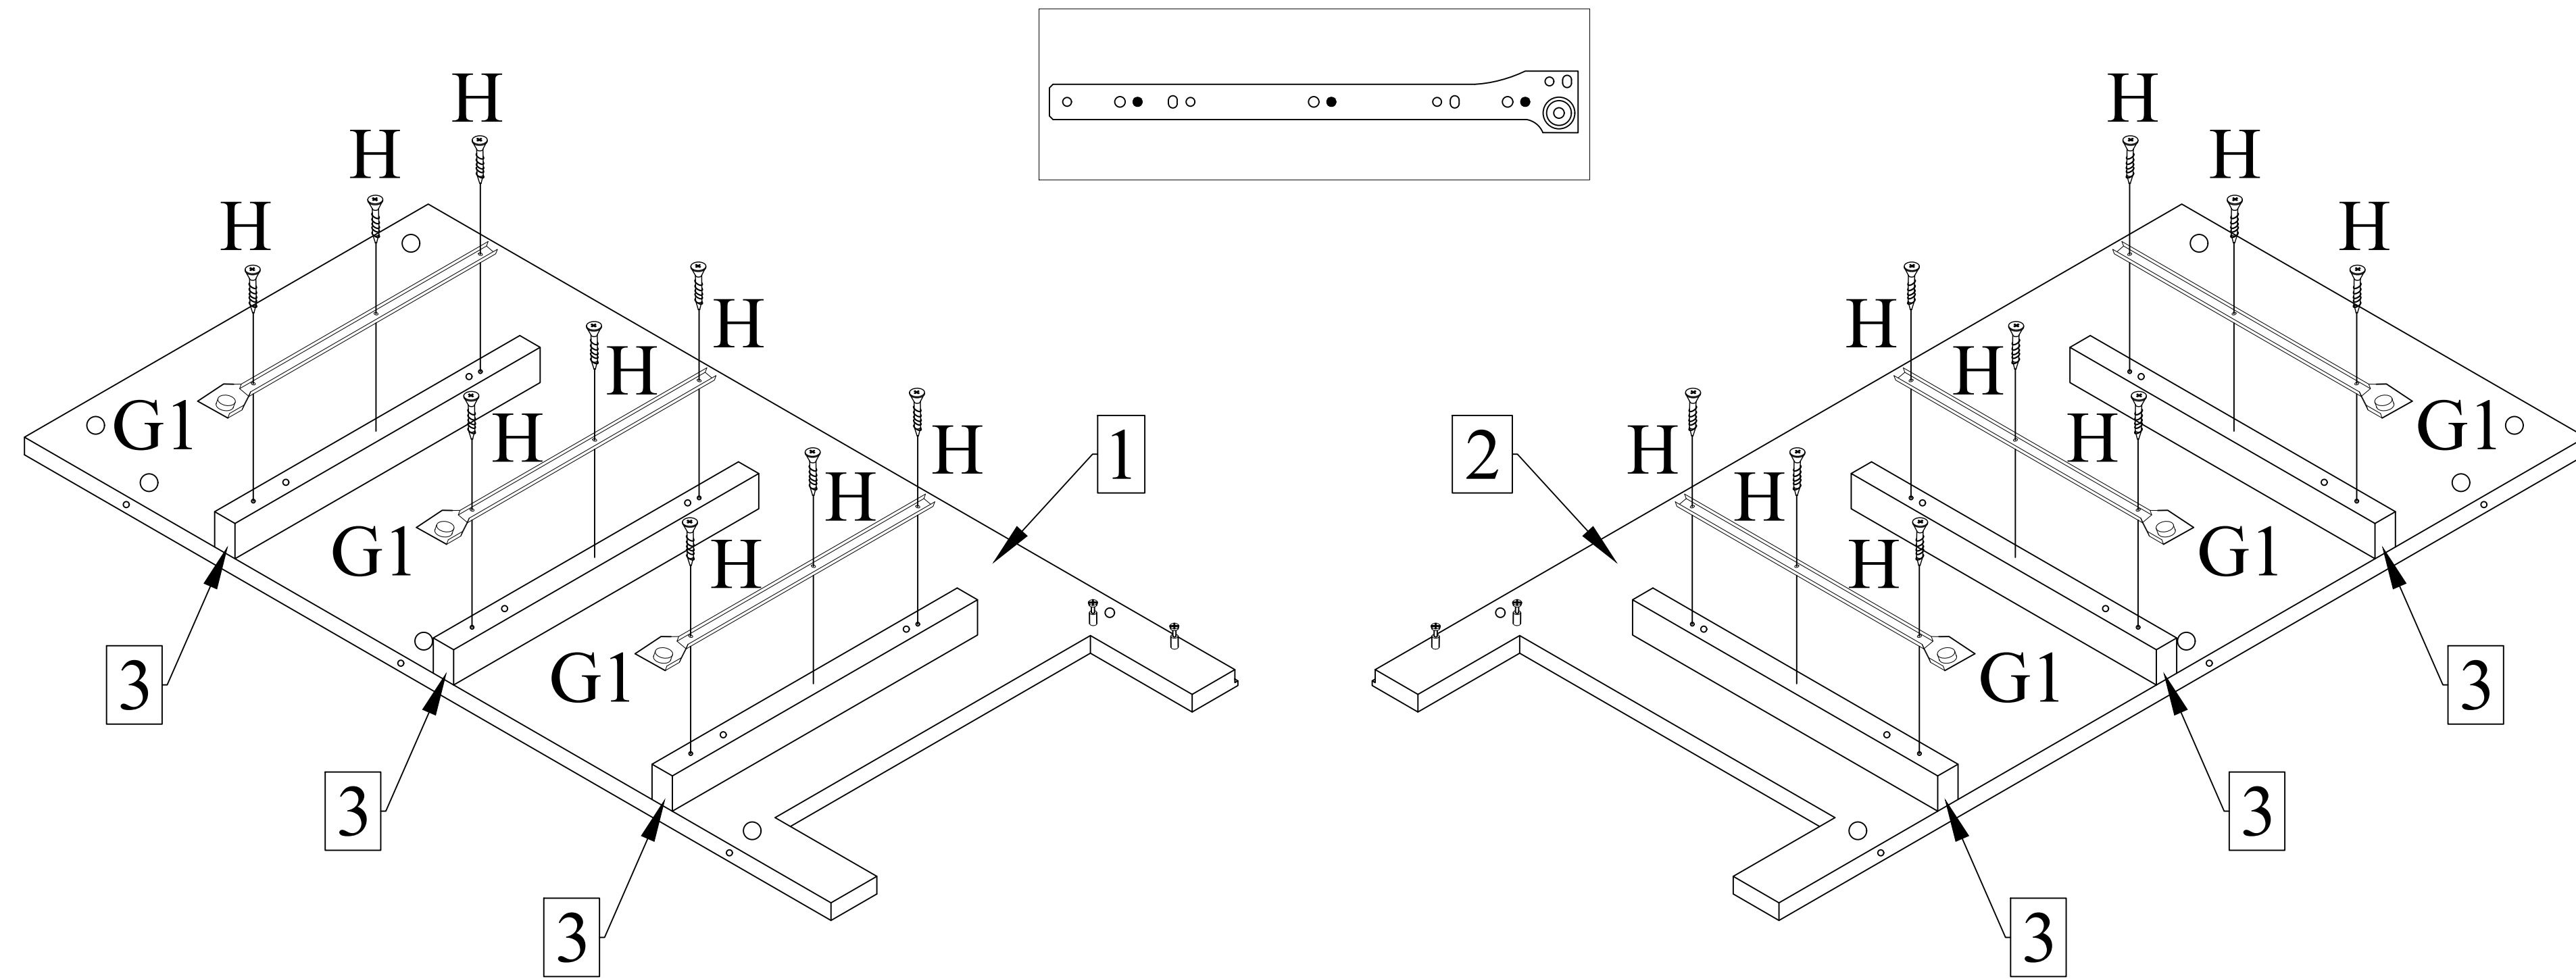

G	Drawer Slide	G1 	3SETS
H	Screw M3 x 12MM		18PCS



ASSEMBLY INSTRUCTIONS

Item No : WF299164AAK


Description : DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.




Step 4 : Connect Pillar (4,5) to Side Panel and lock Minifix Cap (B2).


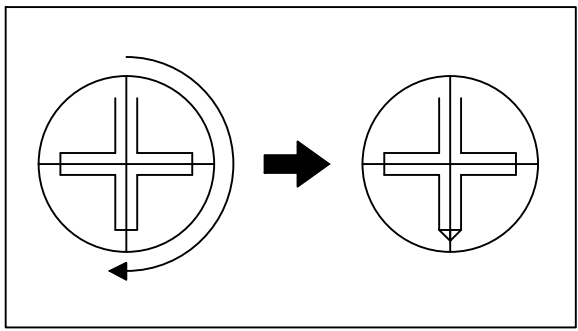
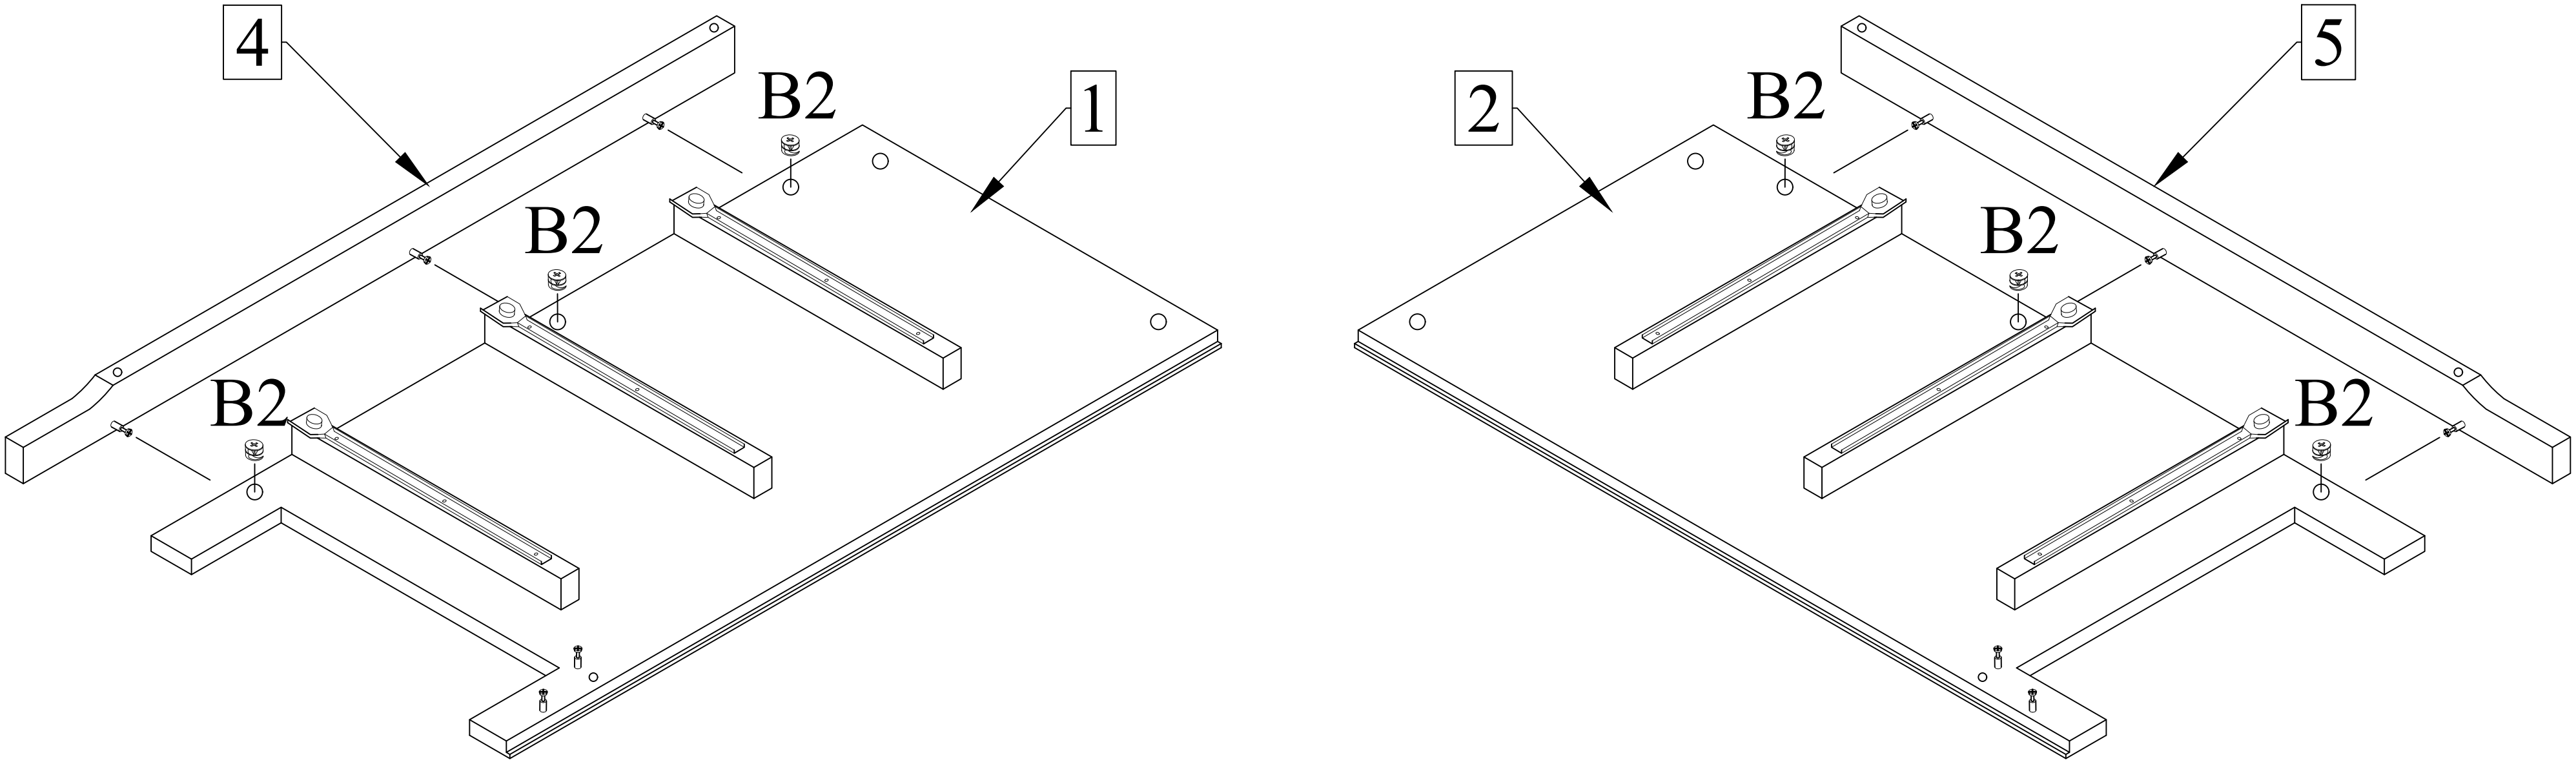


Lock Minifix cap clockwise

B	Minifix Cap	B2 	6PCS
---	-------------	--	------

Step 5 : Attach Drawer Slide (G1) to Center Rail (18) with Screw (H). Connect the Center Rail (18) to Middle Rails (9,17) with Screw (F,H). Attach Leg (6) onto Back Rail (16) using Screw (F). Then, connect these connected parts with Top & Bottom Rails (7,8) with Screw (F).

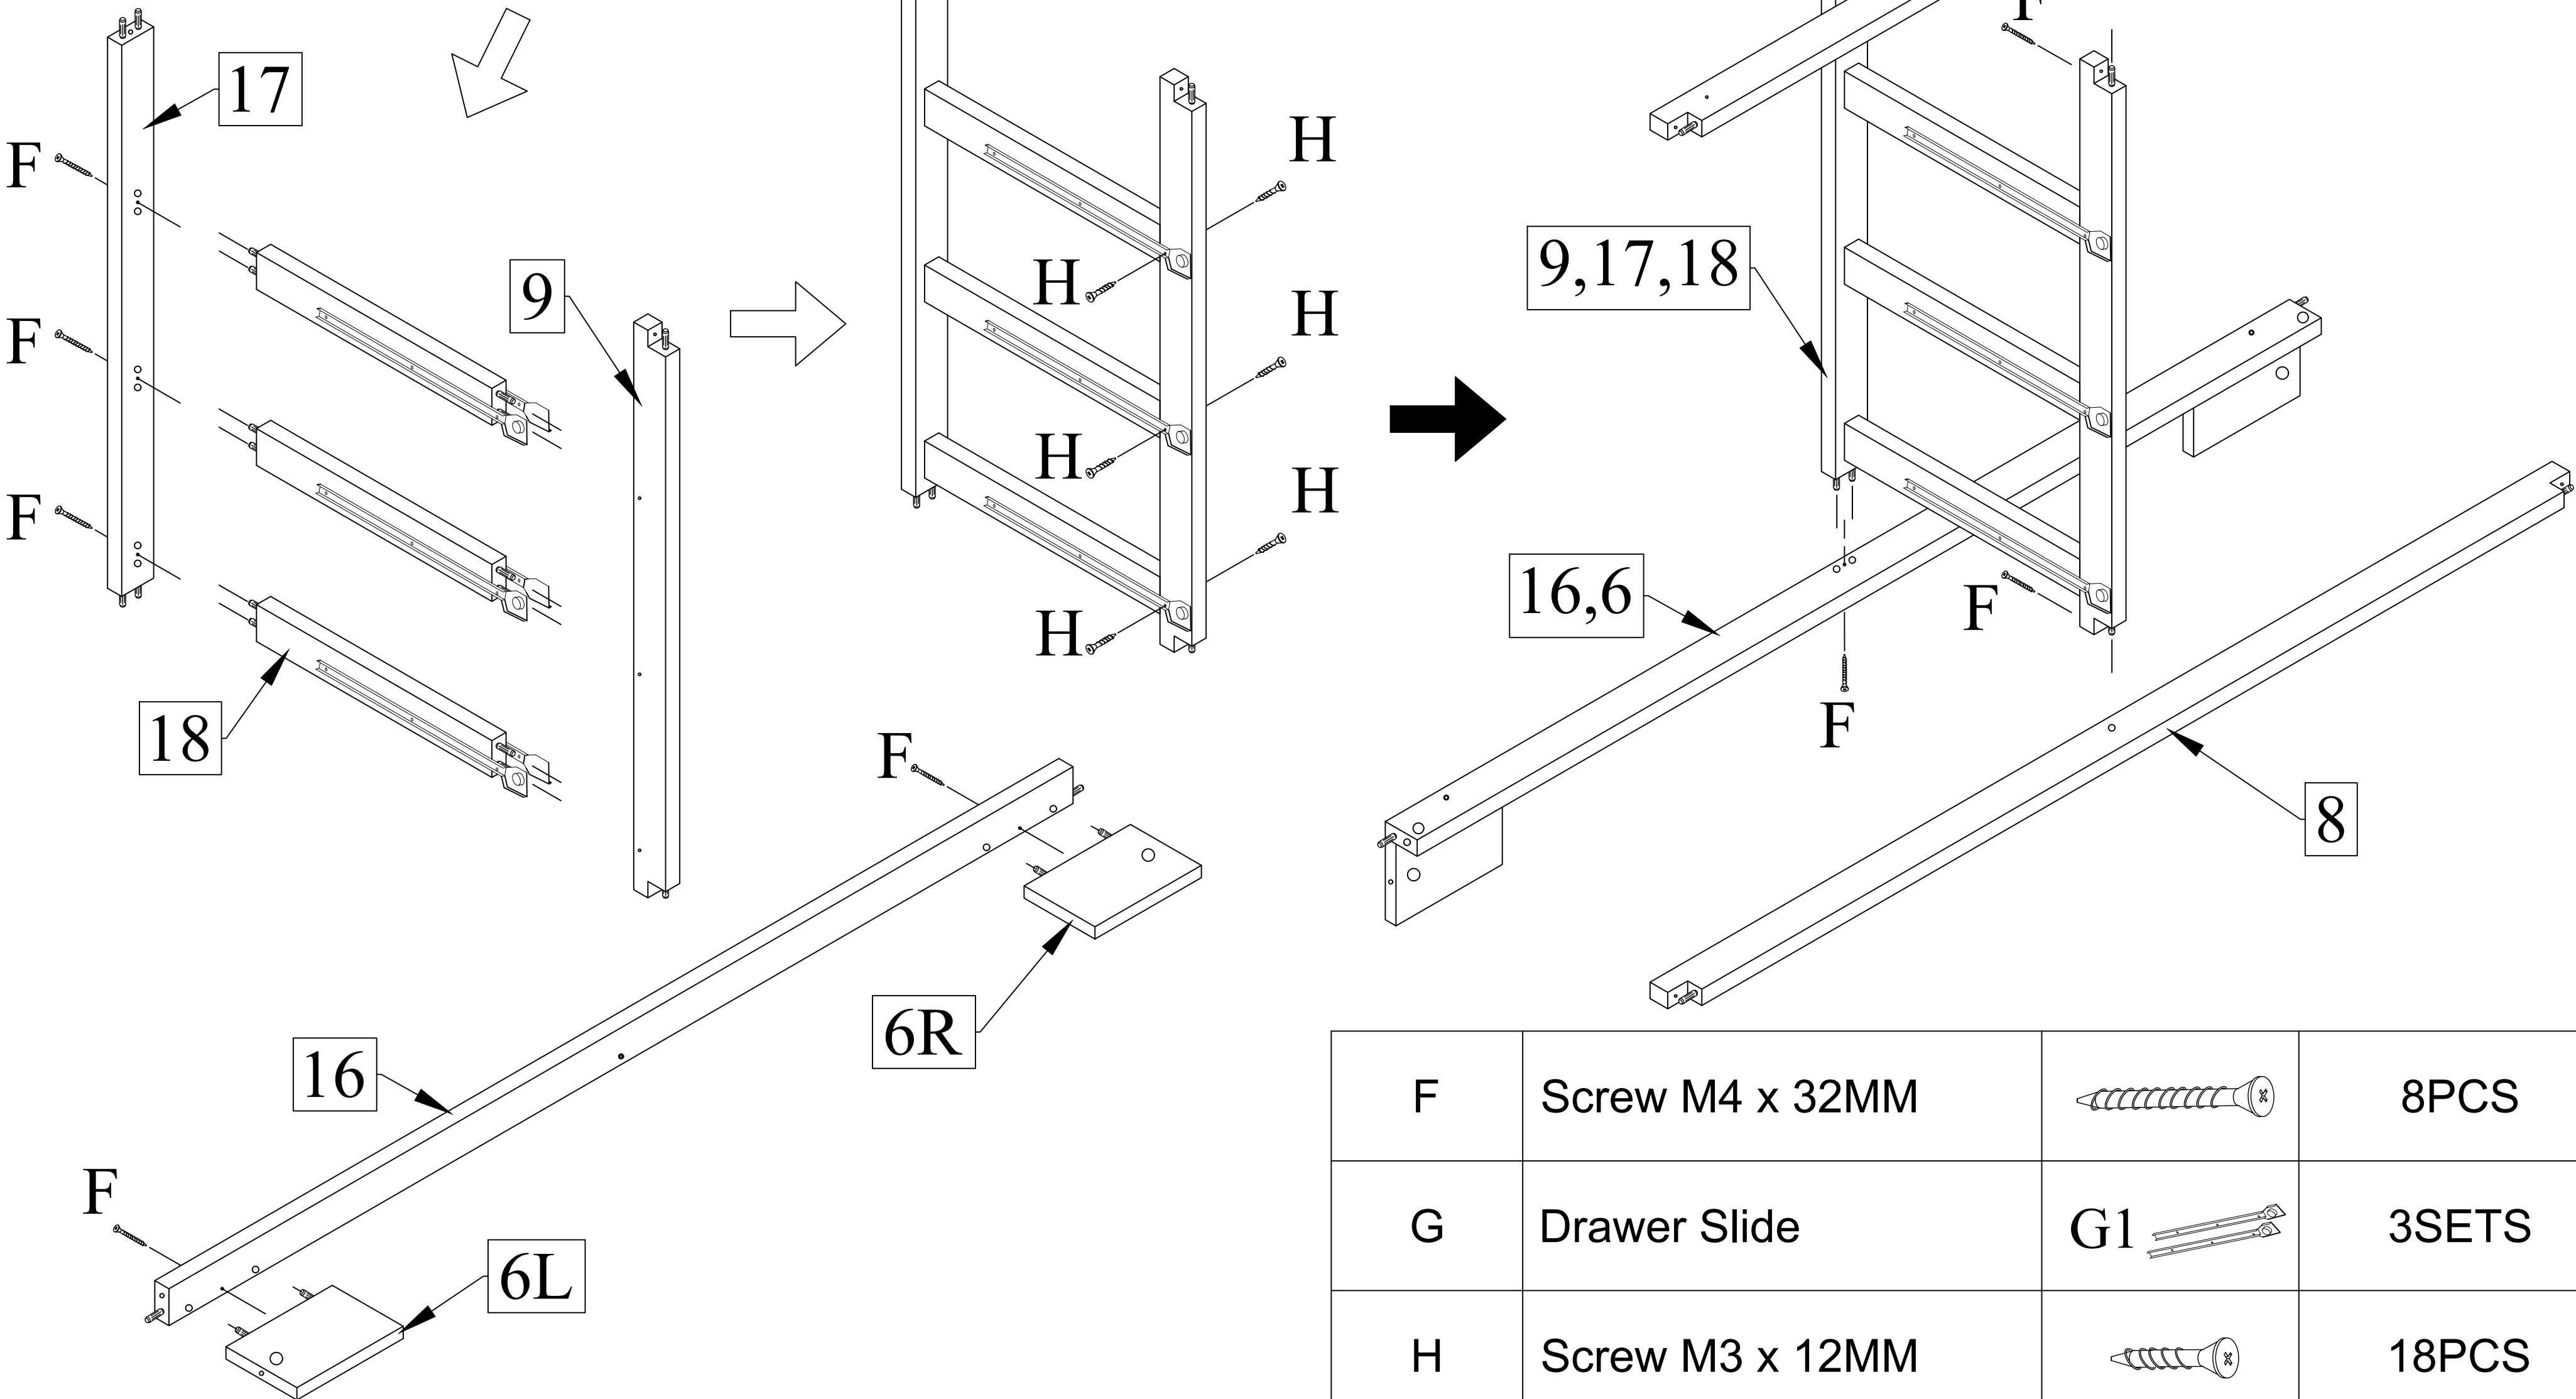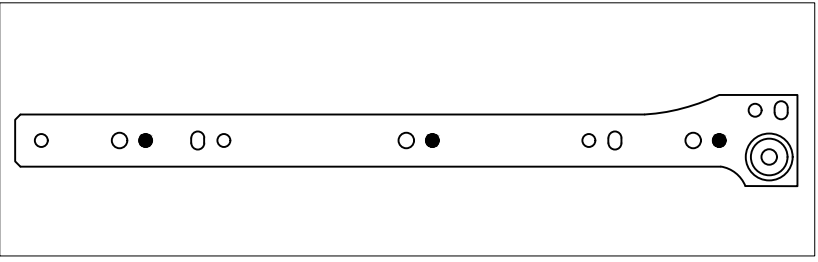
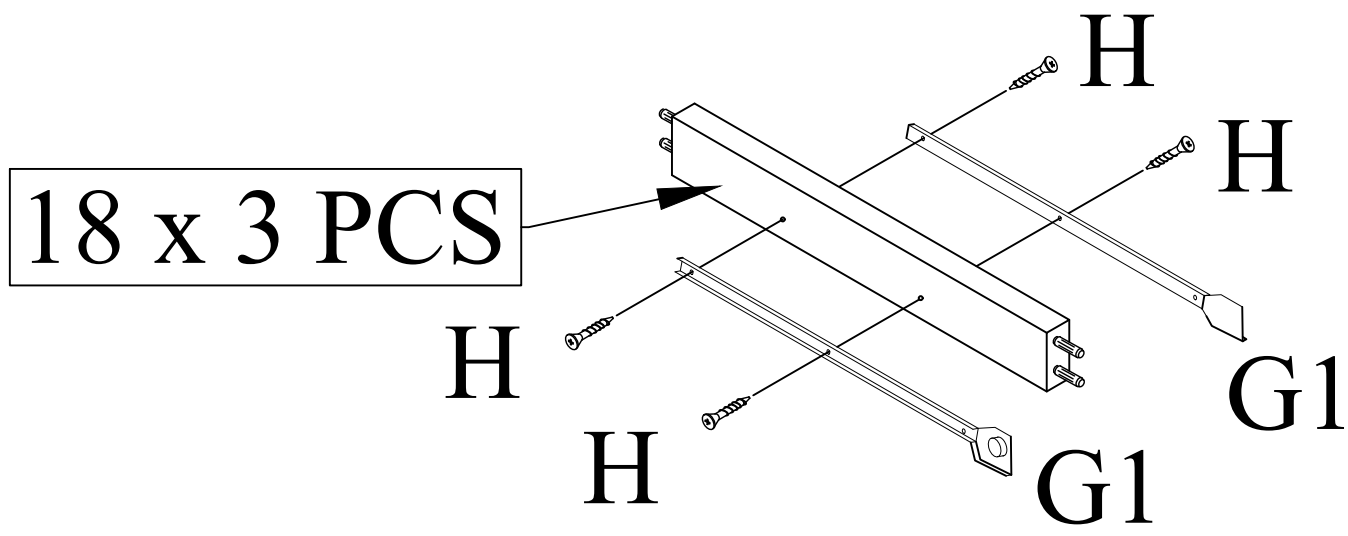


F	Screw M4 x 32MM		8PCS
G	Drawer Slide	G1 	3SETS
H	Screw M3 x 12MM		18PCS

ASSEMBLY INSTRUCTIONS
Item No : WF299164AAK
Description : DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.



Step 6 : Attach Center Leg (21) onto the connected parts with Screw (F).
Connect Side Panels (1,2) with Screw (F) and lock Minifix Cap (B2).

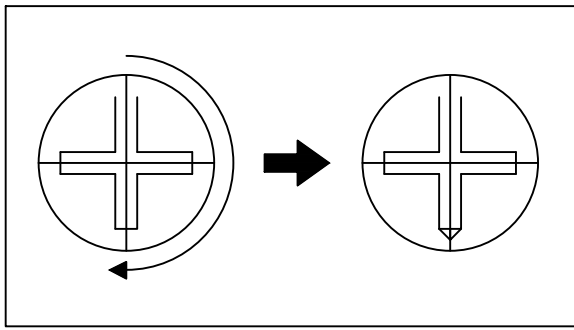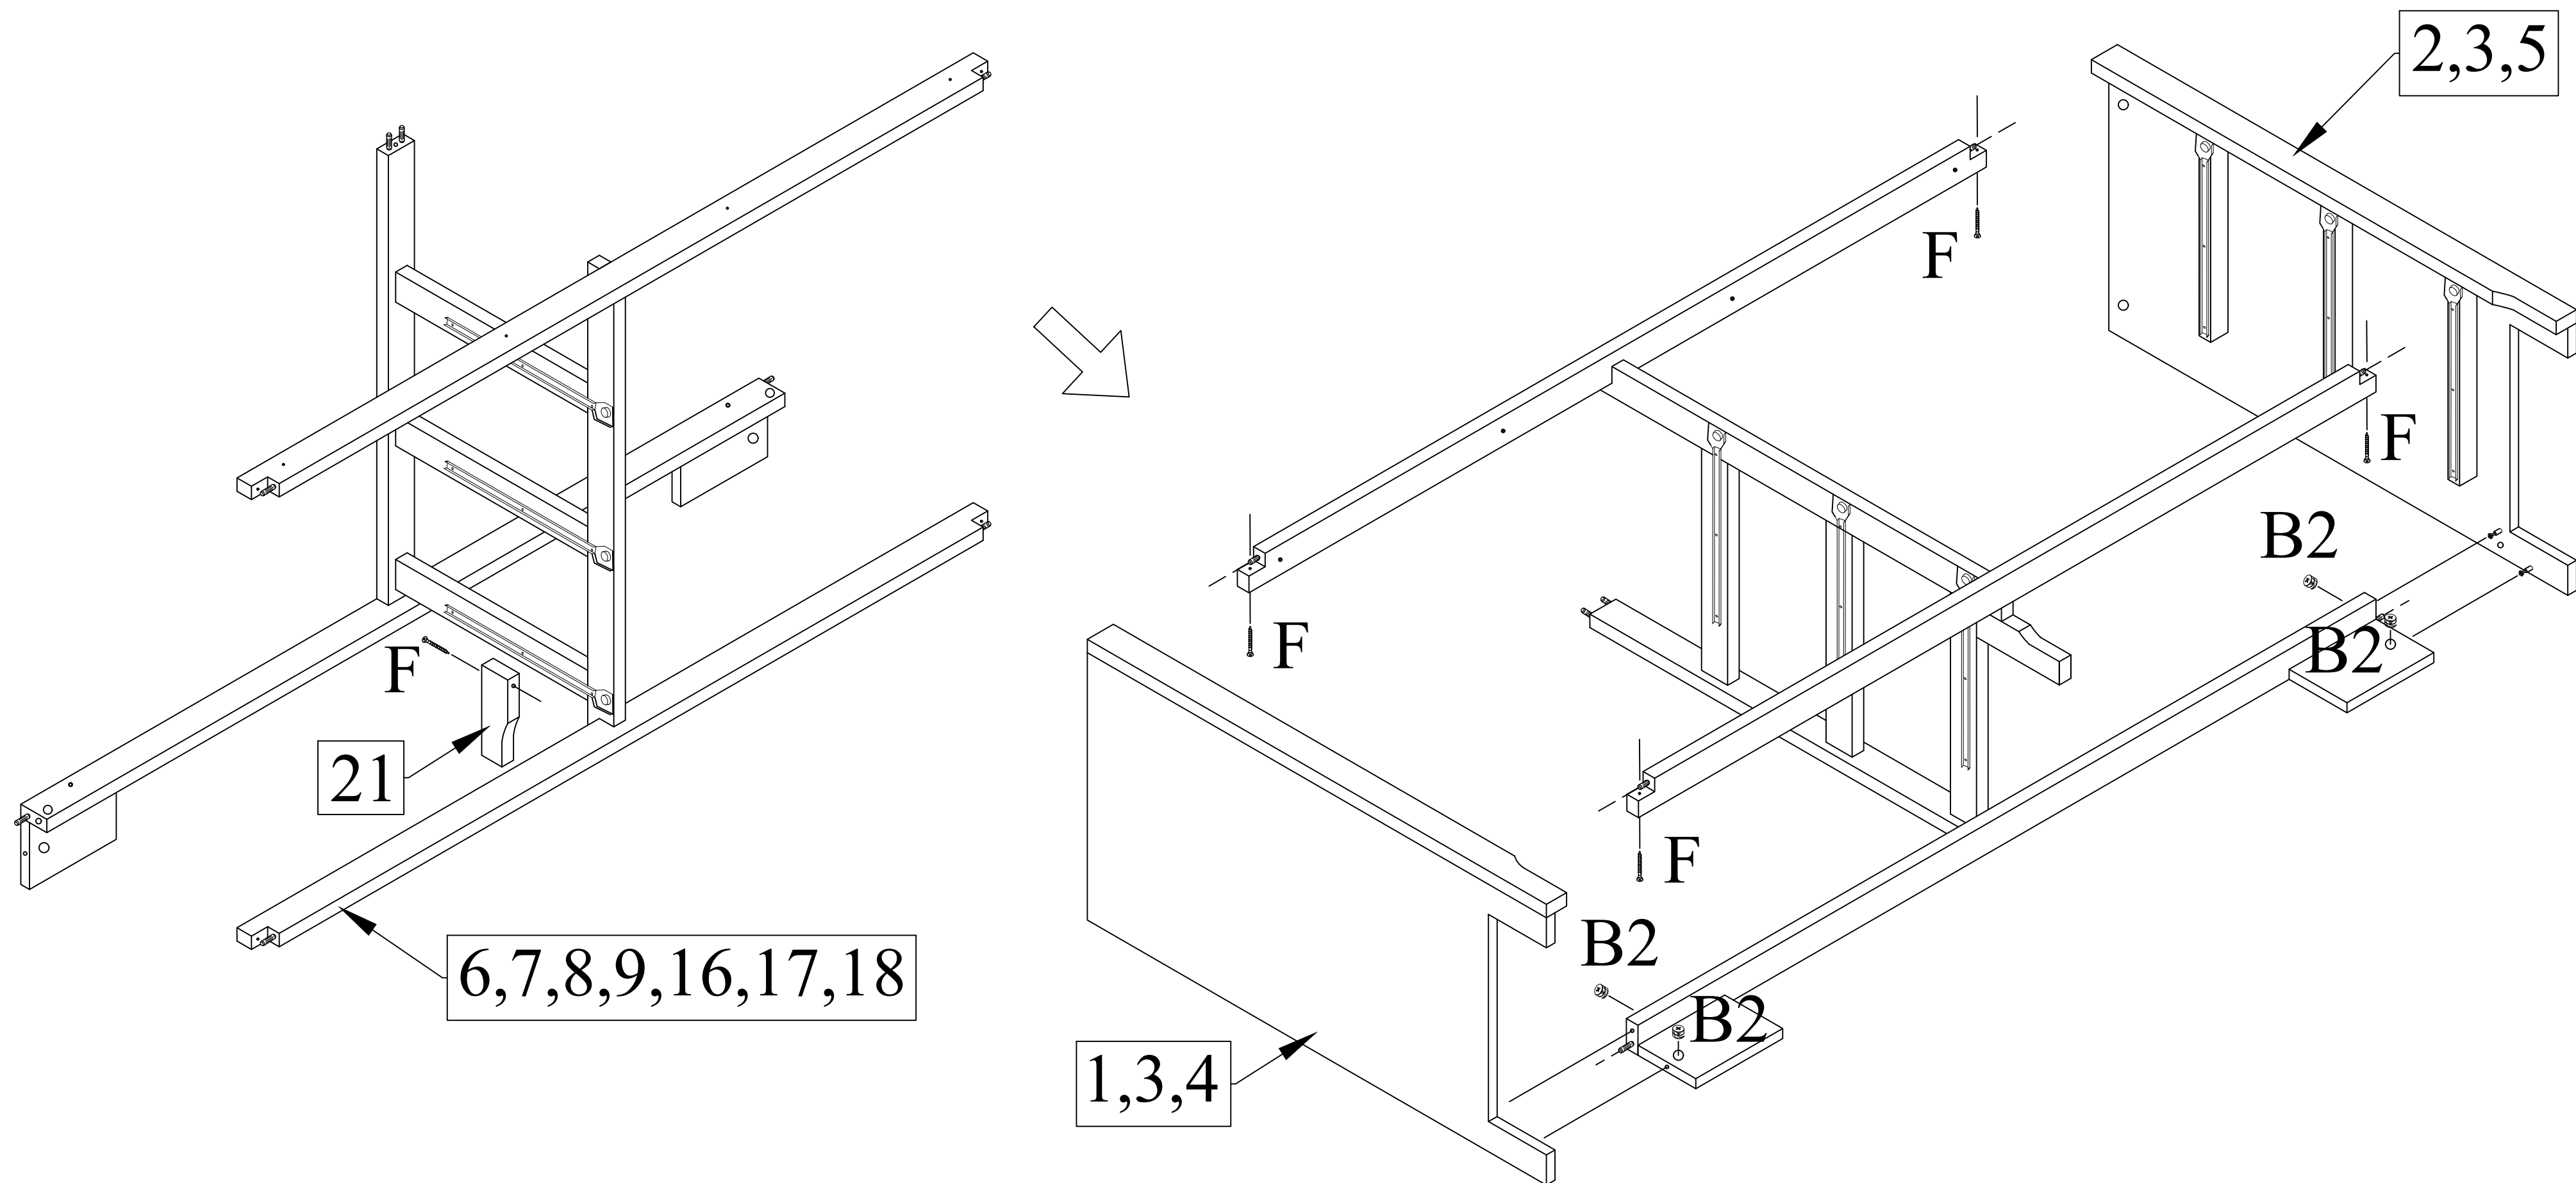

Lock Minifix cap clockwise

B	Minifix Cap	B2 	4PCS
F	Screw M4 x 32MM		5PCS

Step 7 : Attach Top Panel (19) and lock with Minifix Cap (B2) and Screw (F).

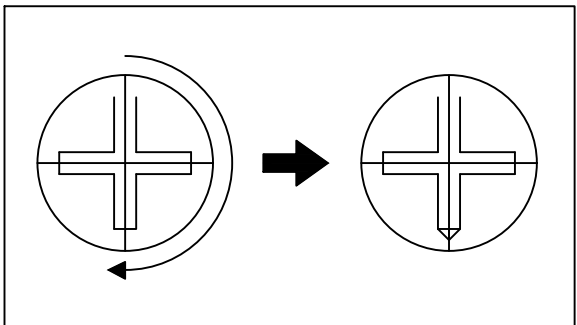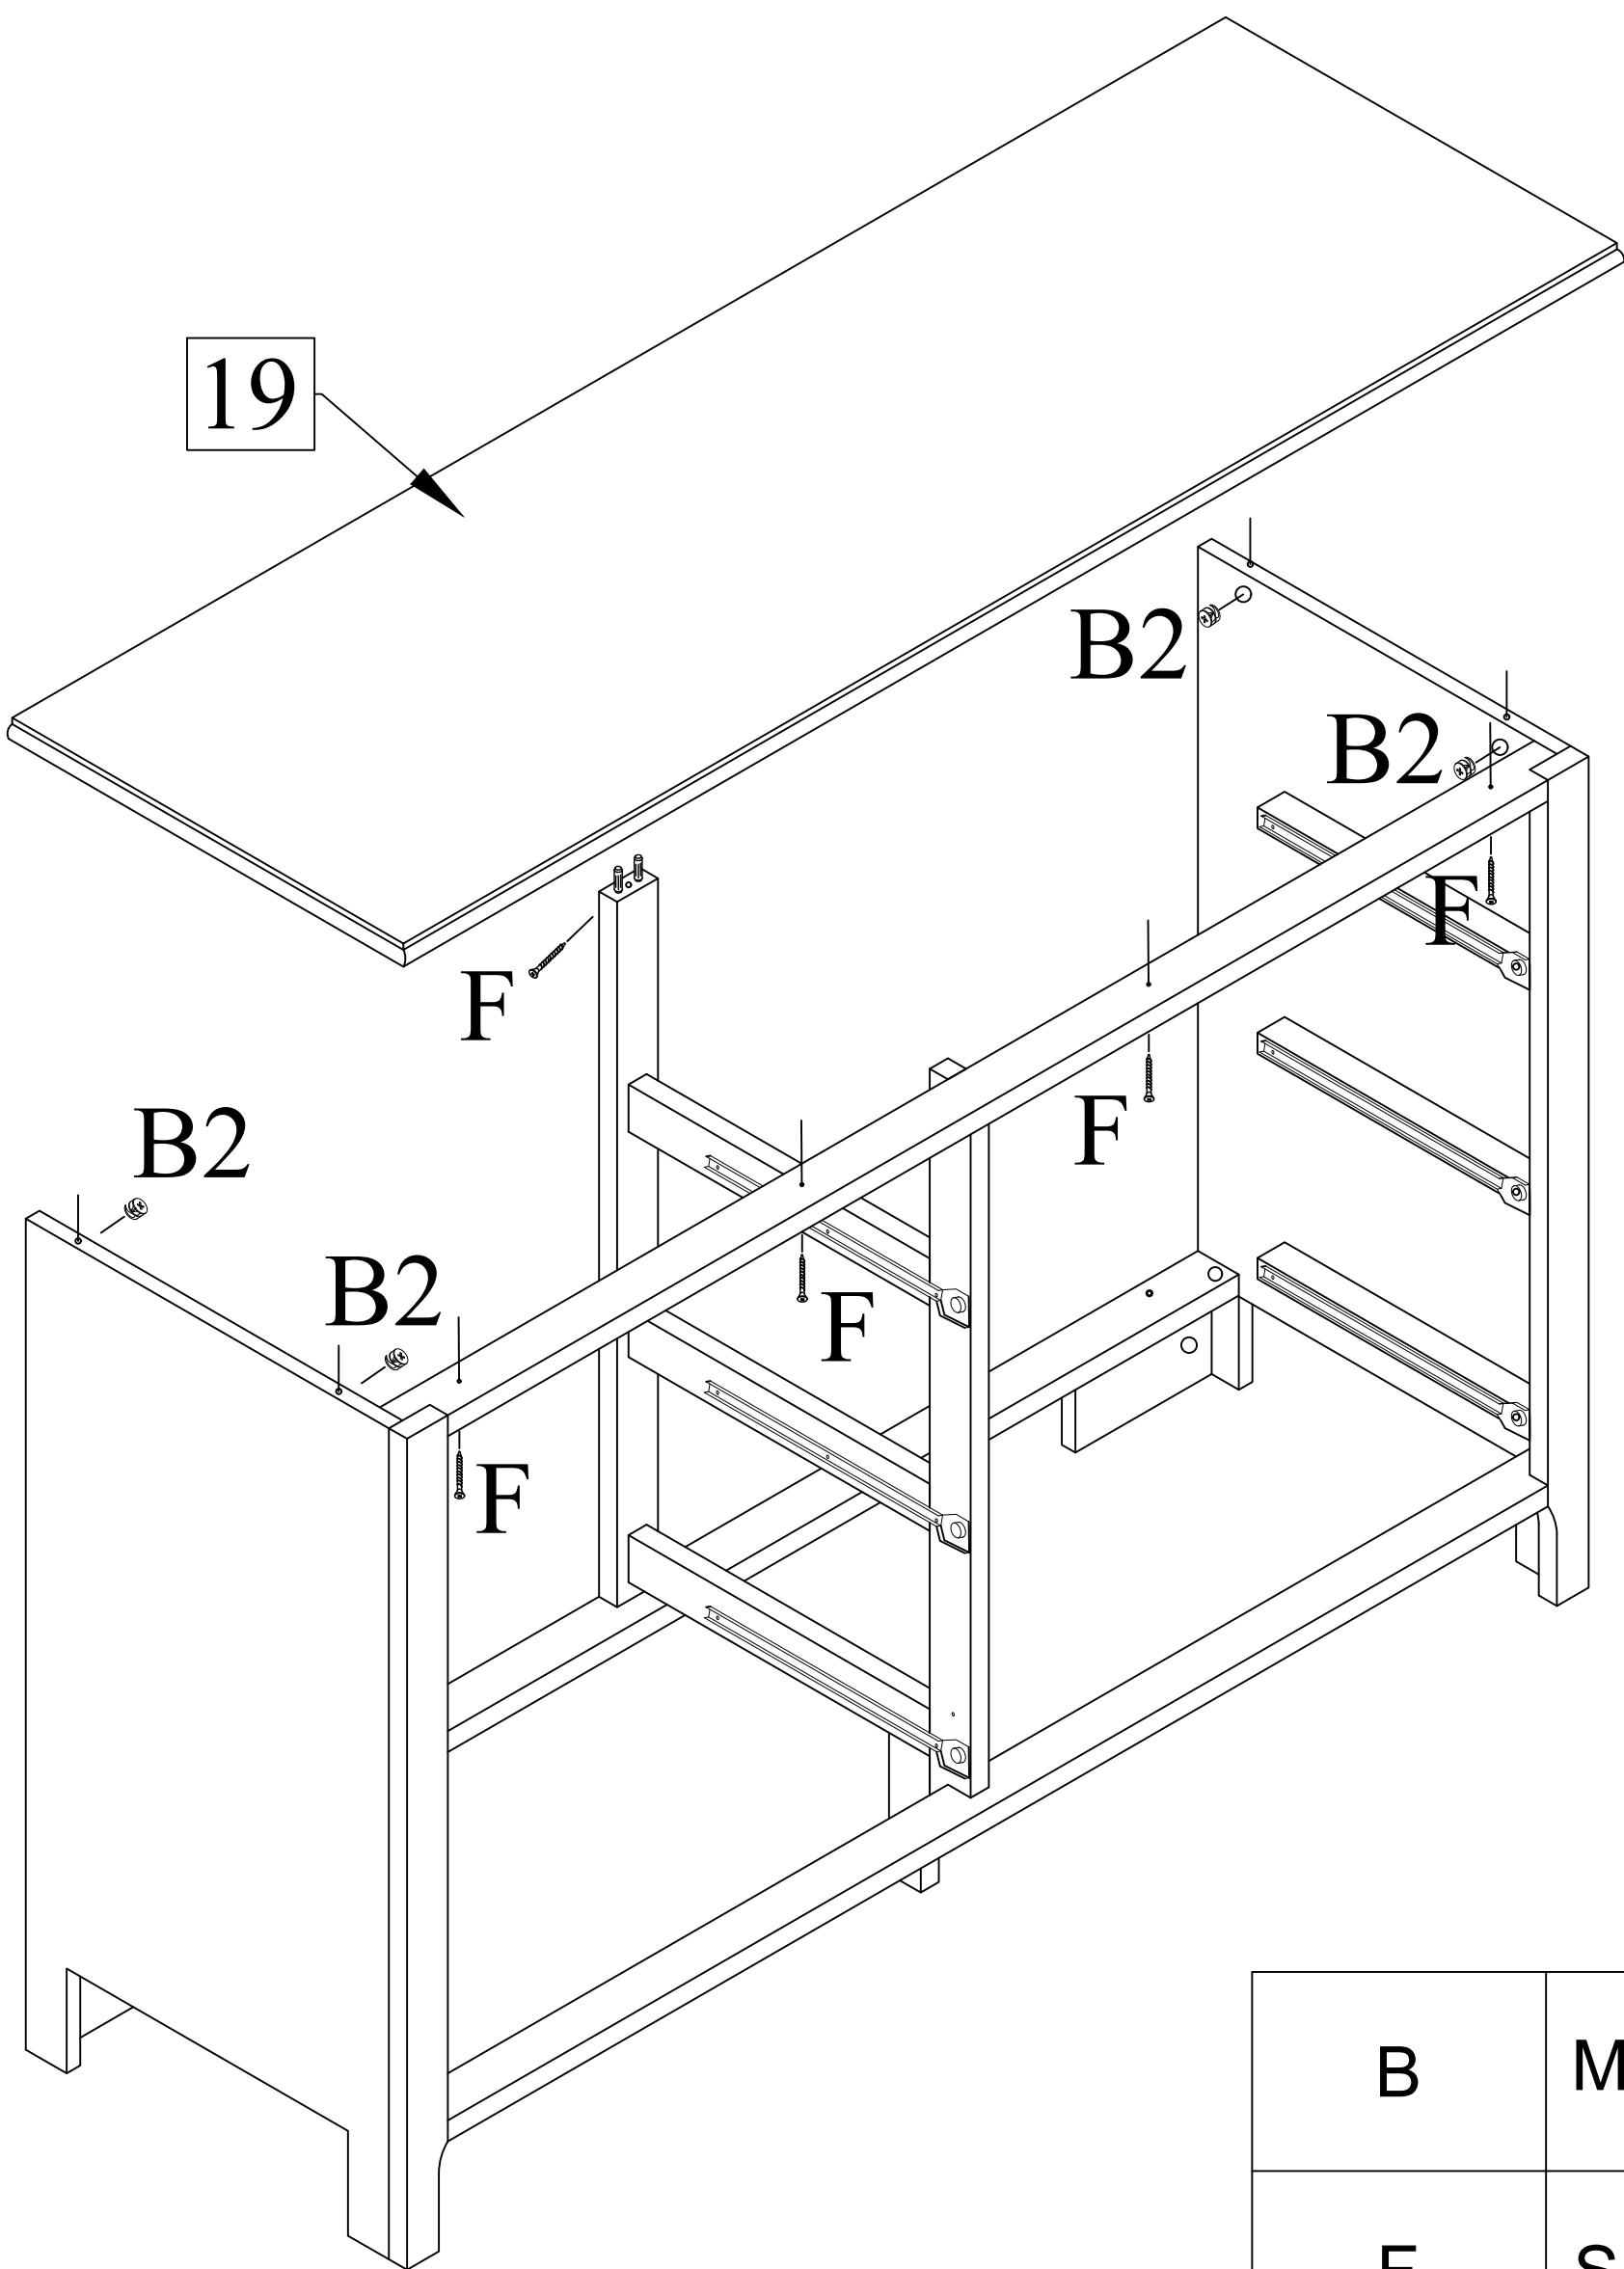

Lock Minifix cap clockwise

B	Minifix Cap	B2 	4PCS
F	Screw M4 x 32MM		5PCS

ASSEMBLY INSTRUCTIONS



Item No : WF299164AAK

Description : DRESSER


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 8 : Insert Back Panel (20) from behind using Screw (H).

Make sure marking line on back panel facing out, it will be a guidance to attach matching mirror WF299174AAK

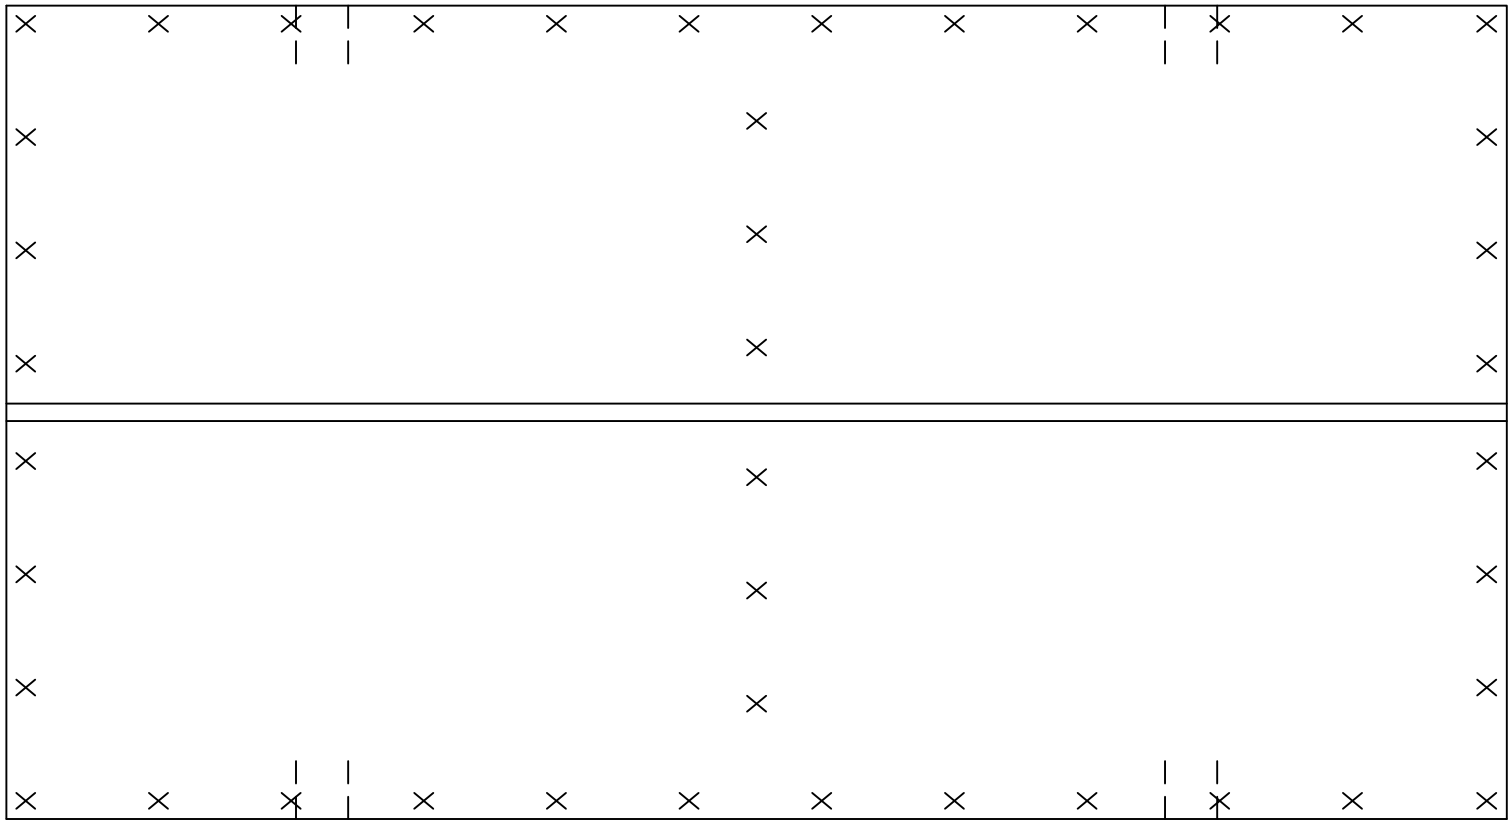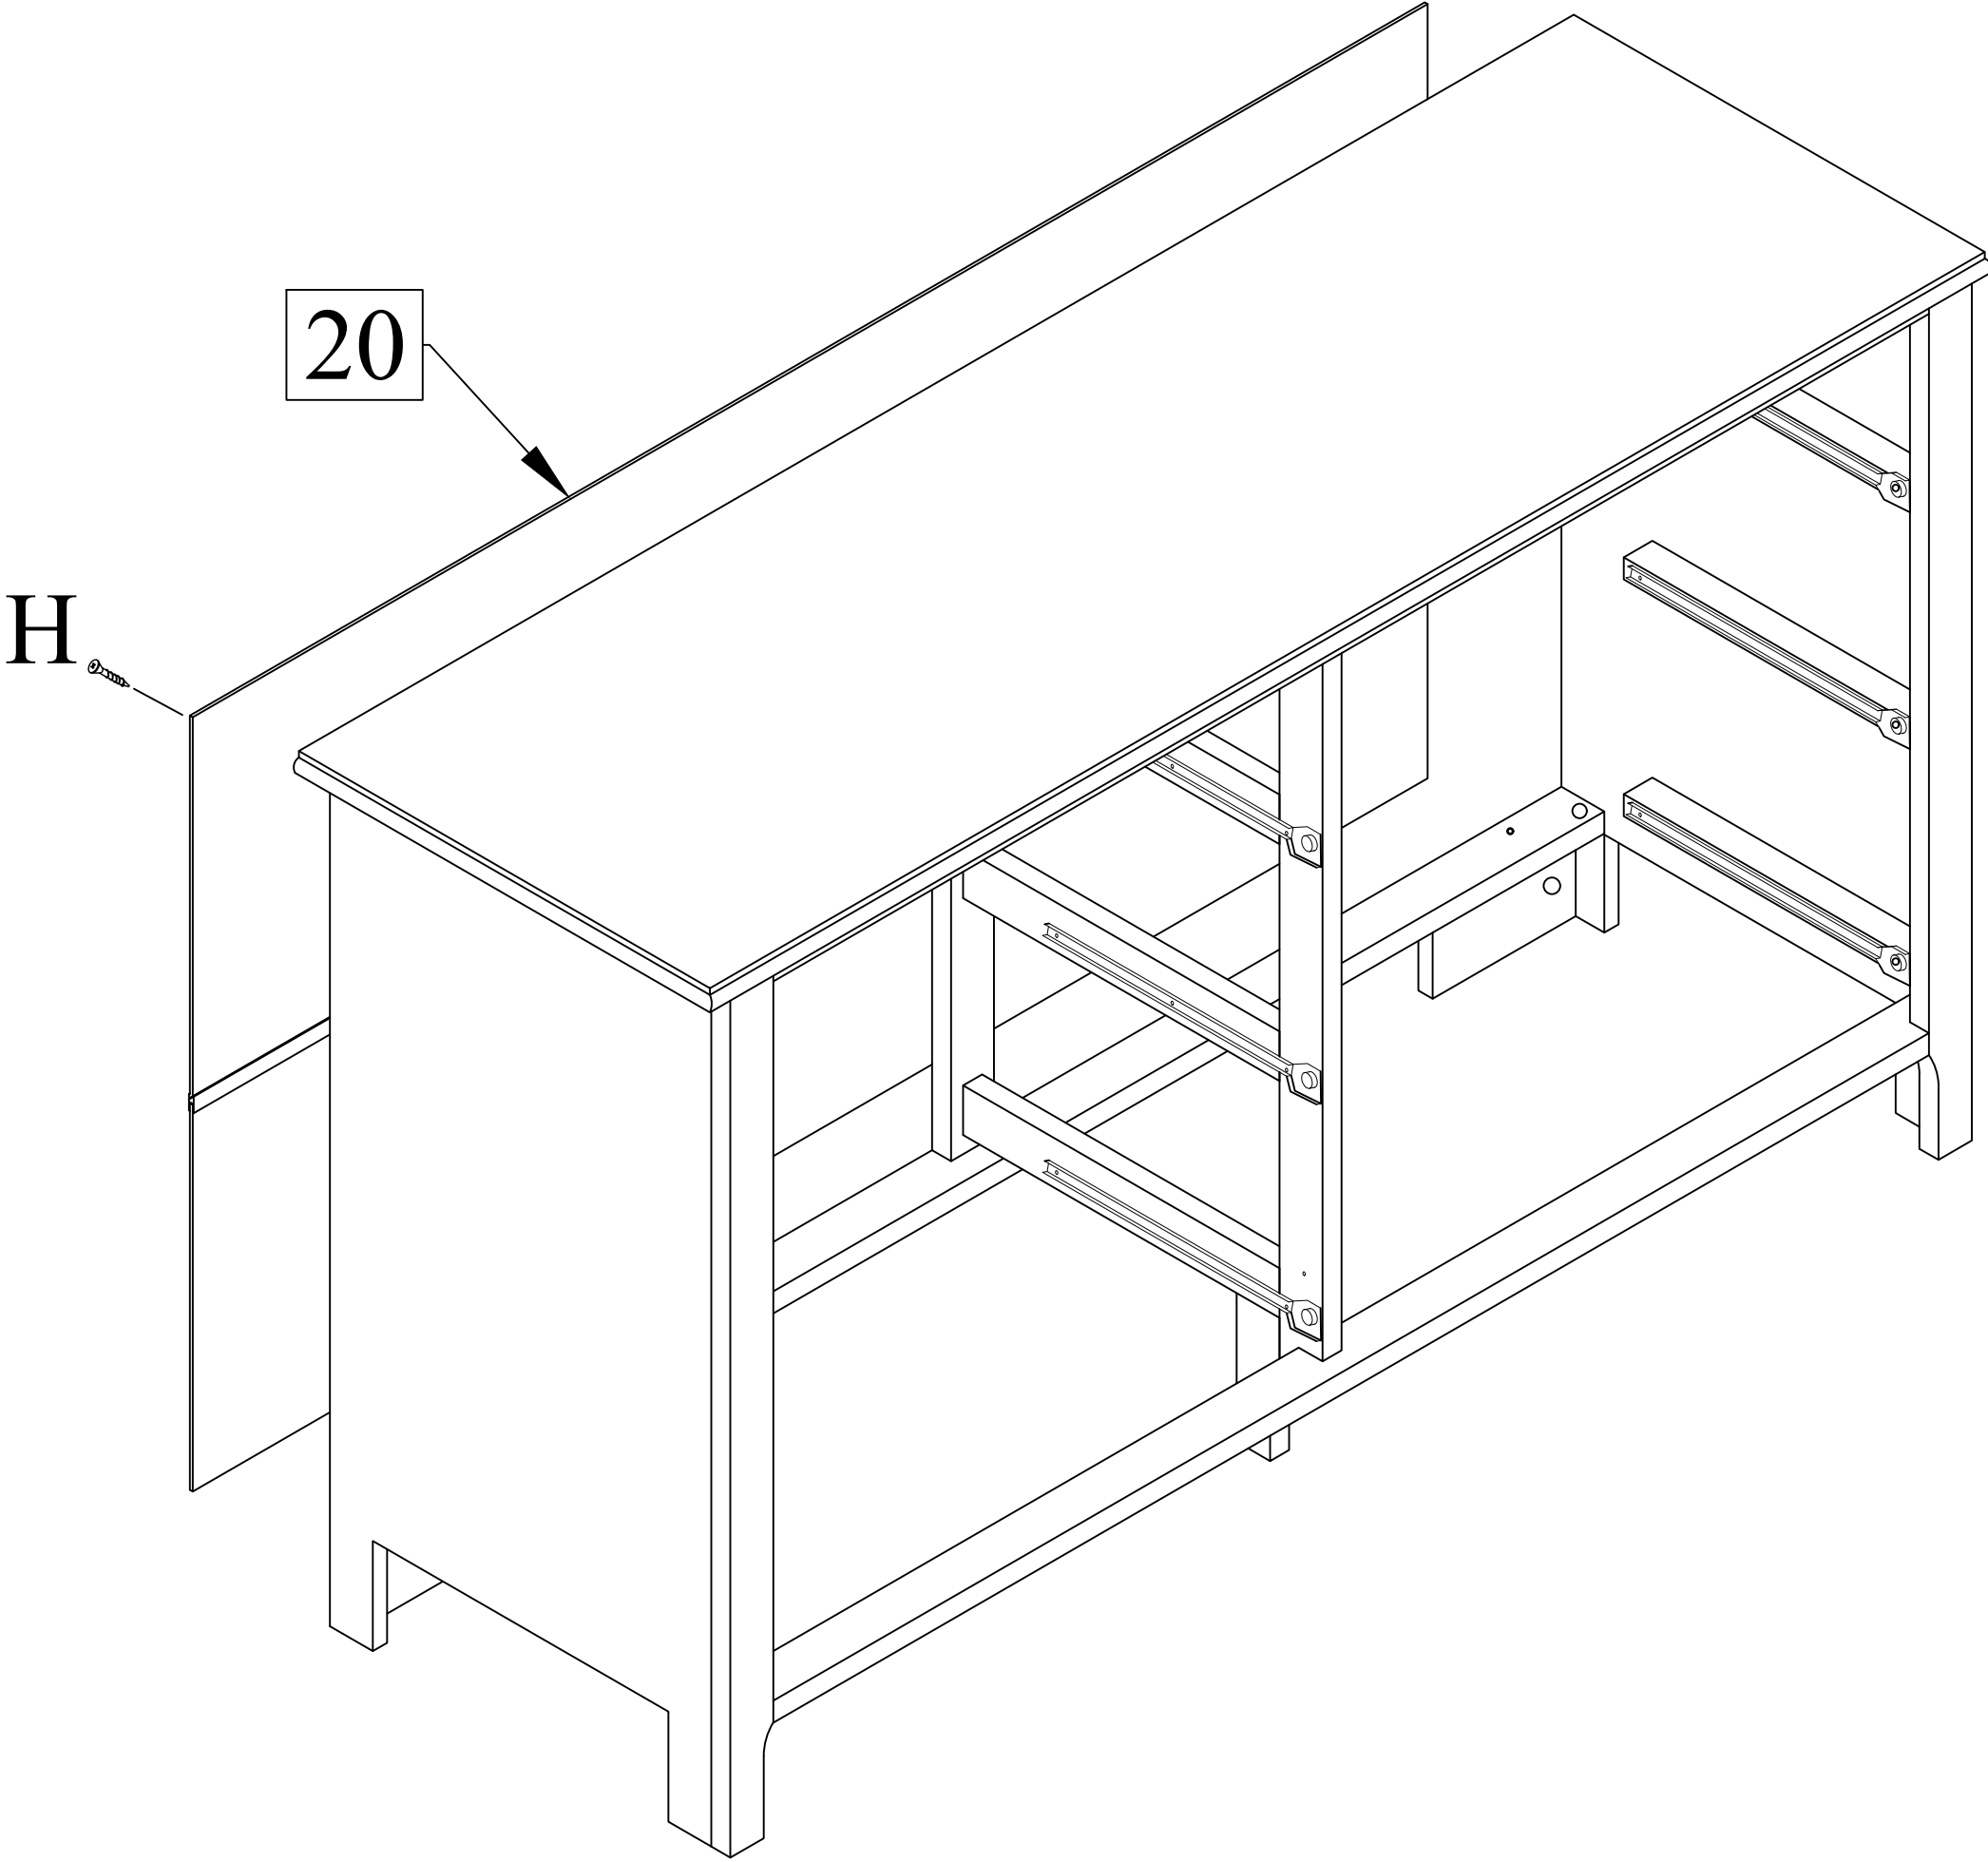

Guidance of screw array

H	Screw M3 x 12MM		42PCS
---	-----------------	---	-------

Step 9 : Drawer assembly.


First connect Drawer Back (10) to Drawer Side - L (11) and Drawer Side - R (12) with Screw (F).

Slot the Drawer Base Support (14) into Drawer Back (10). Next, slot in the Drawer Base (13).




Then, install the Handle with Screw (I1&I2) onto Drawer Front (15). Attach the Drawer Front (15) to the drawer box and lock Minifix Cap [Drawer] (D2).

Finally, install Drawer Slide (G2) onto the drawer box using Screw (H).

Drawer assembly x 6 (3L3R)

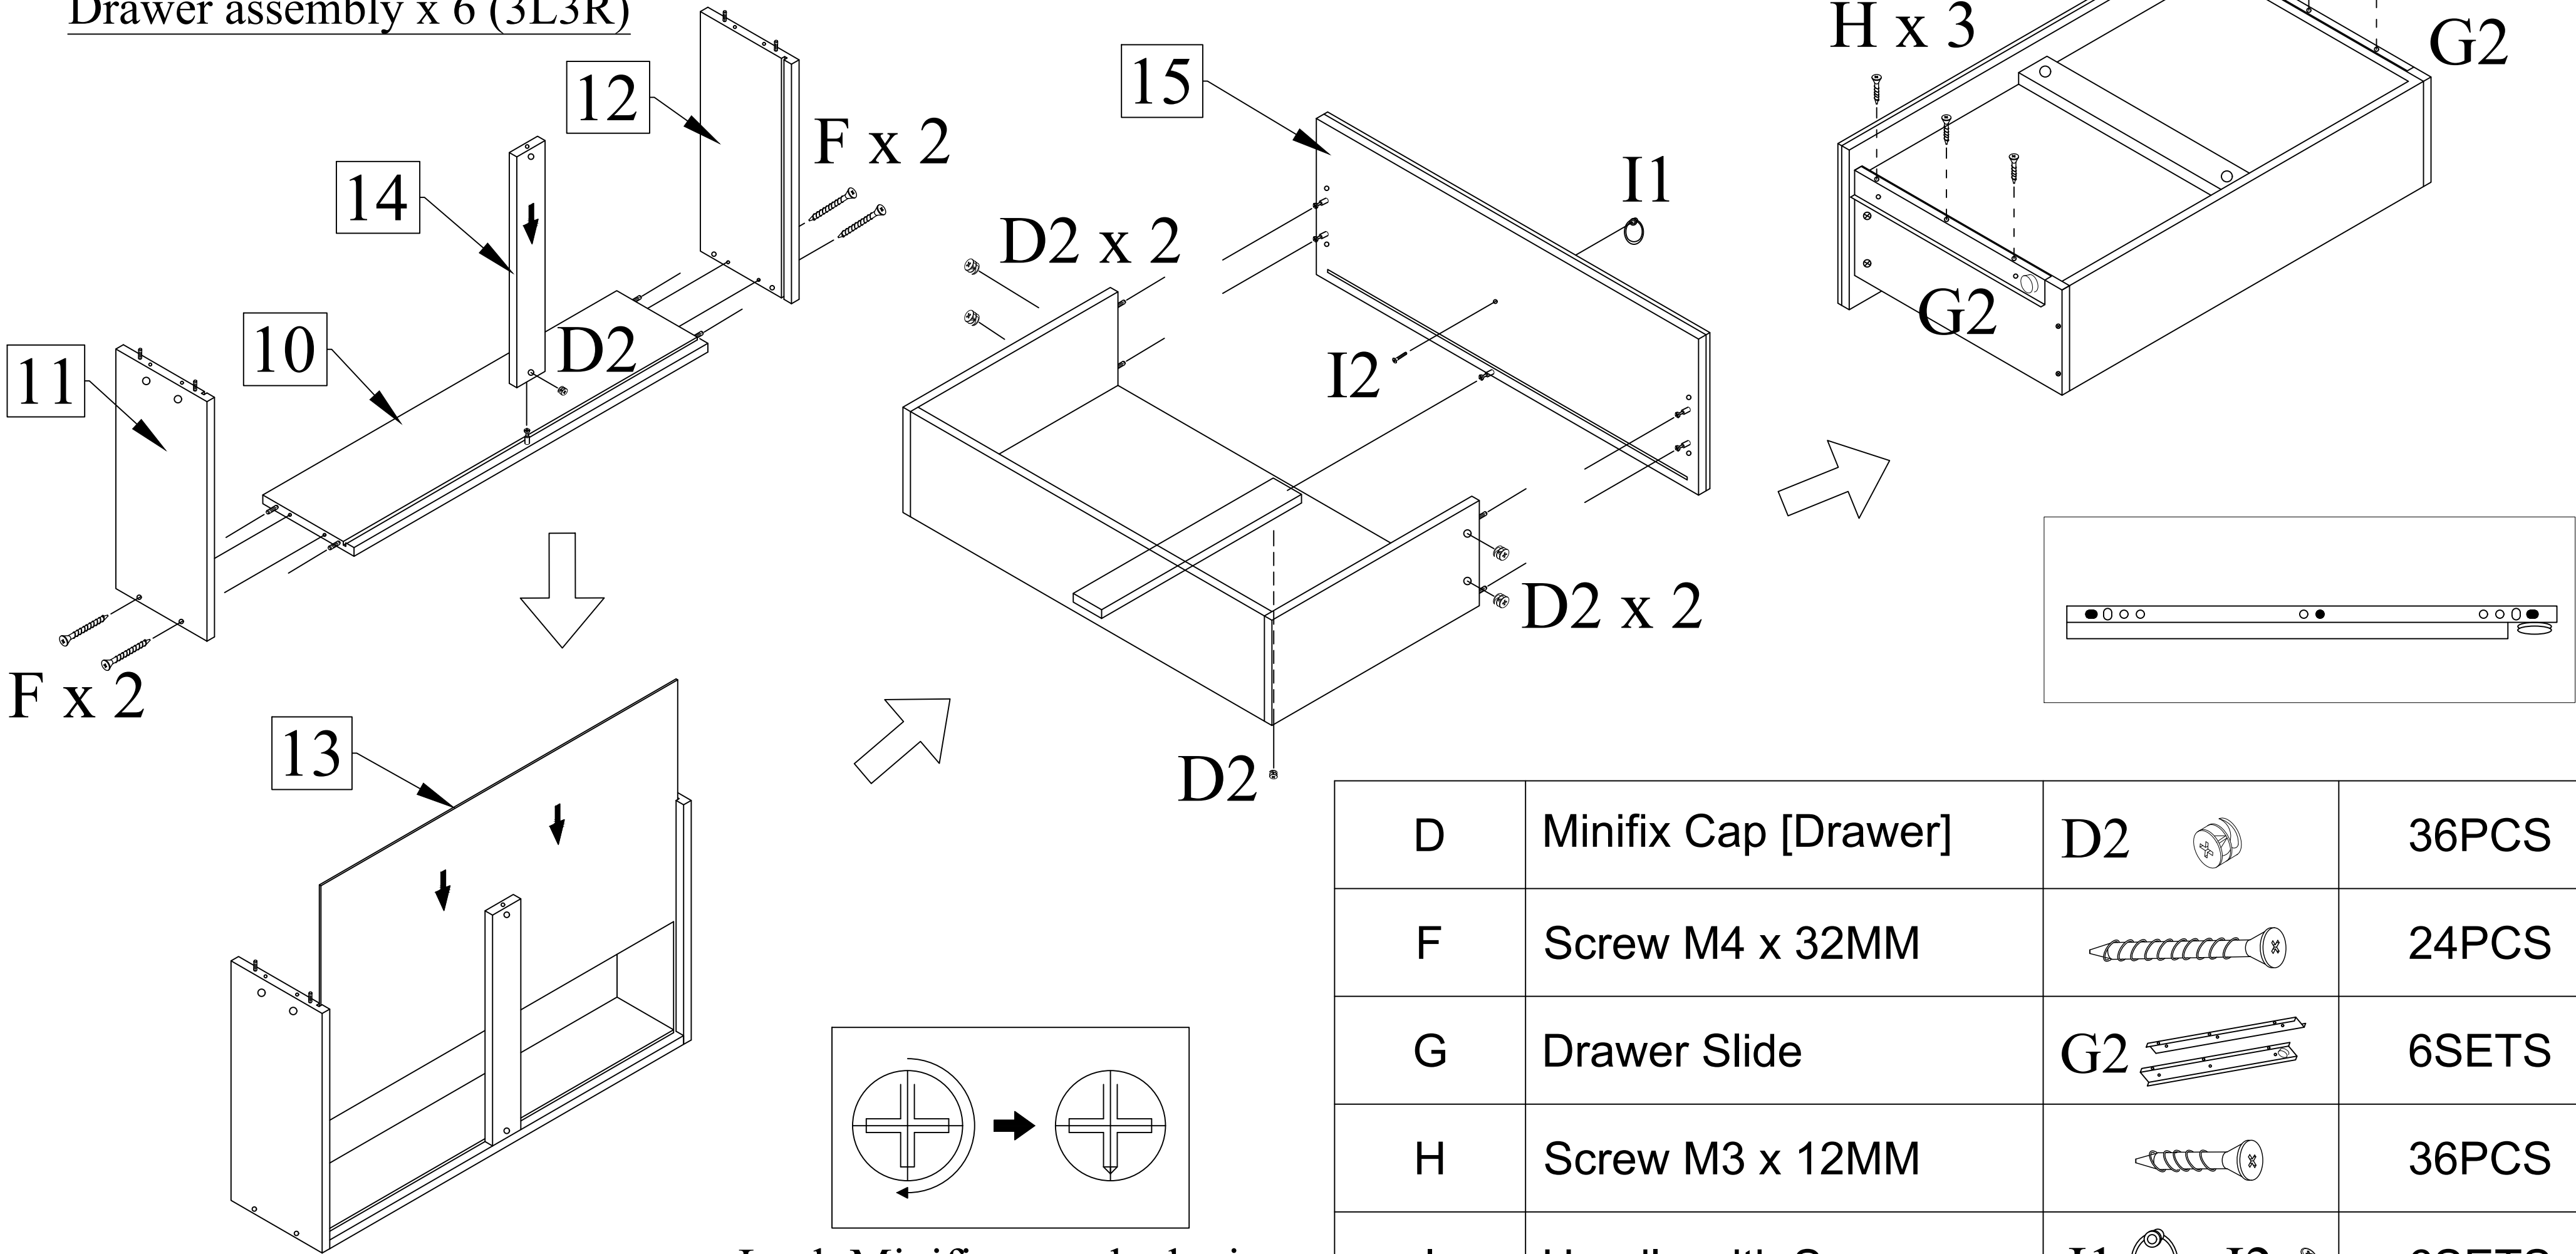


Lock Minifix cap clockwise

D	Minifix Cap [Drawer]	D2 	36PCS
F	Screw M4 x 32MM		24PCS
G	Drawer Slide	G2 	6SETS
H	Screw M3 x 12MM		36PCS
I	Handle with Screw	I1  I2 	6SETS

ASSEMBLY INSTRUCTIONS
Item No : WF299164AAK
Description : DRESSER


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 10 : Insert the drawer box.

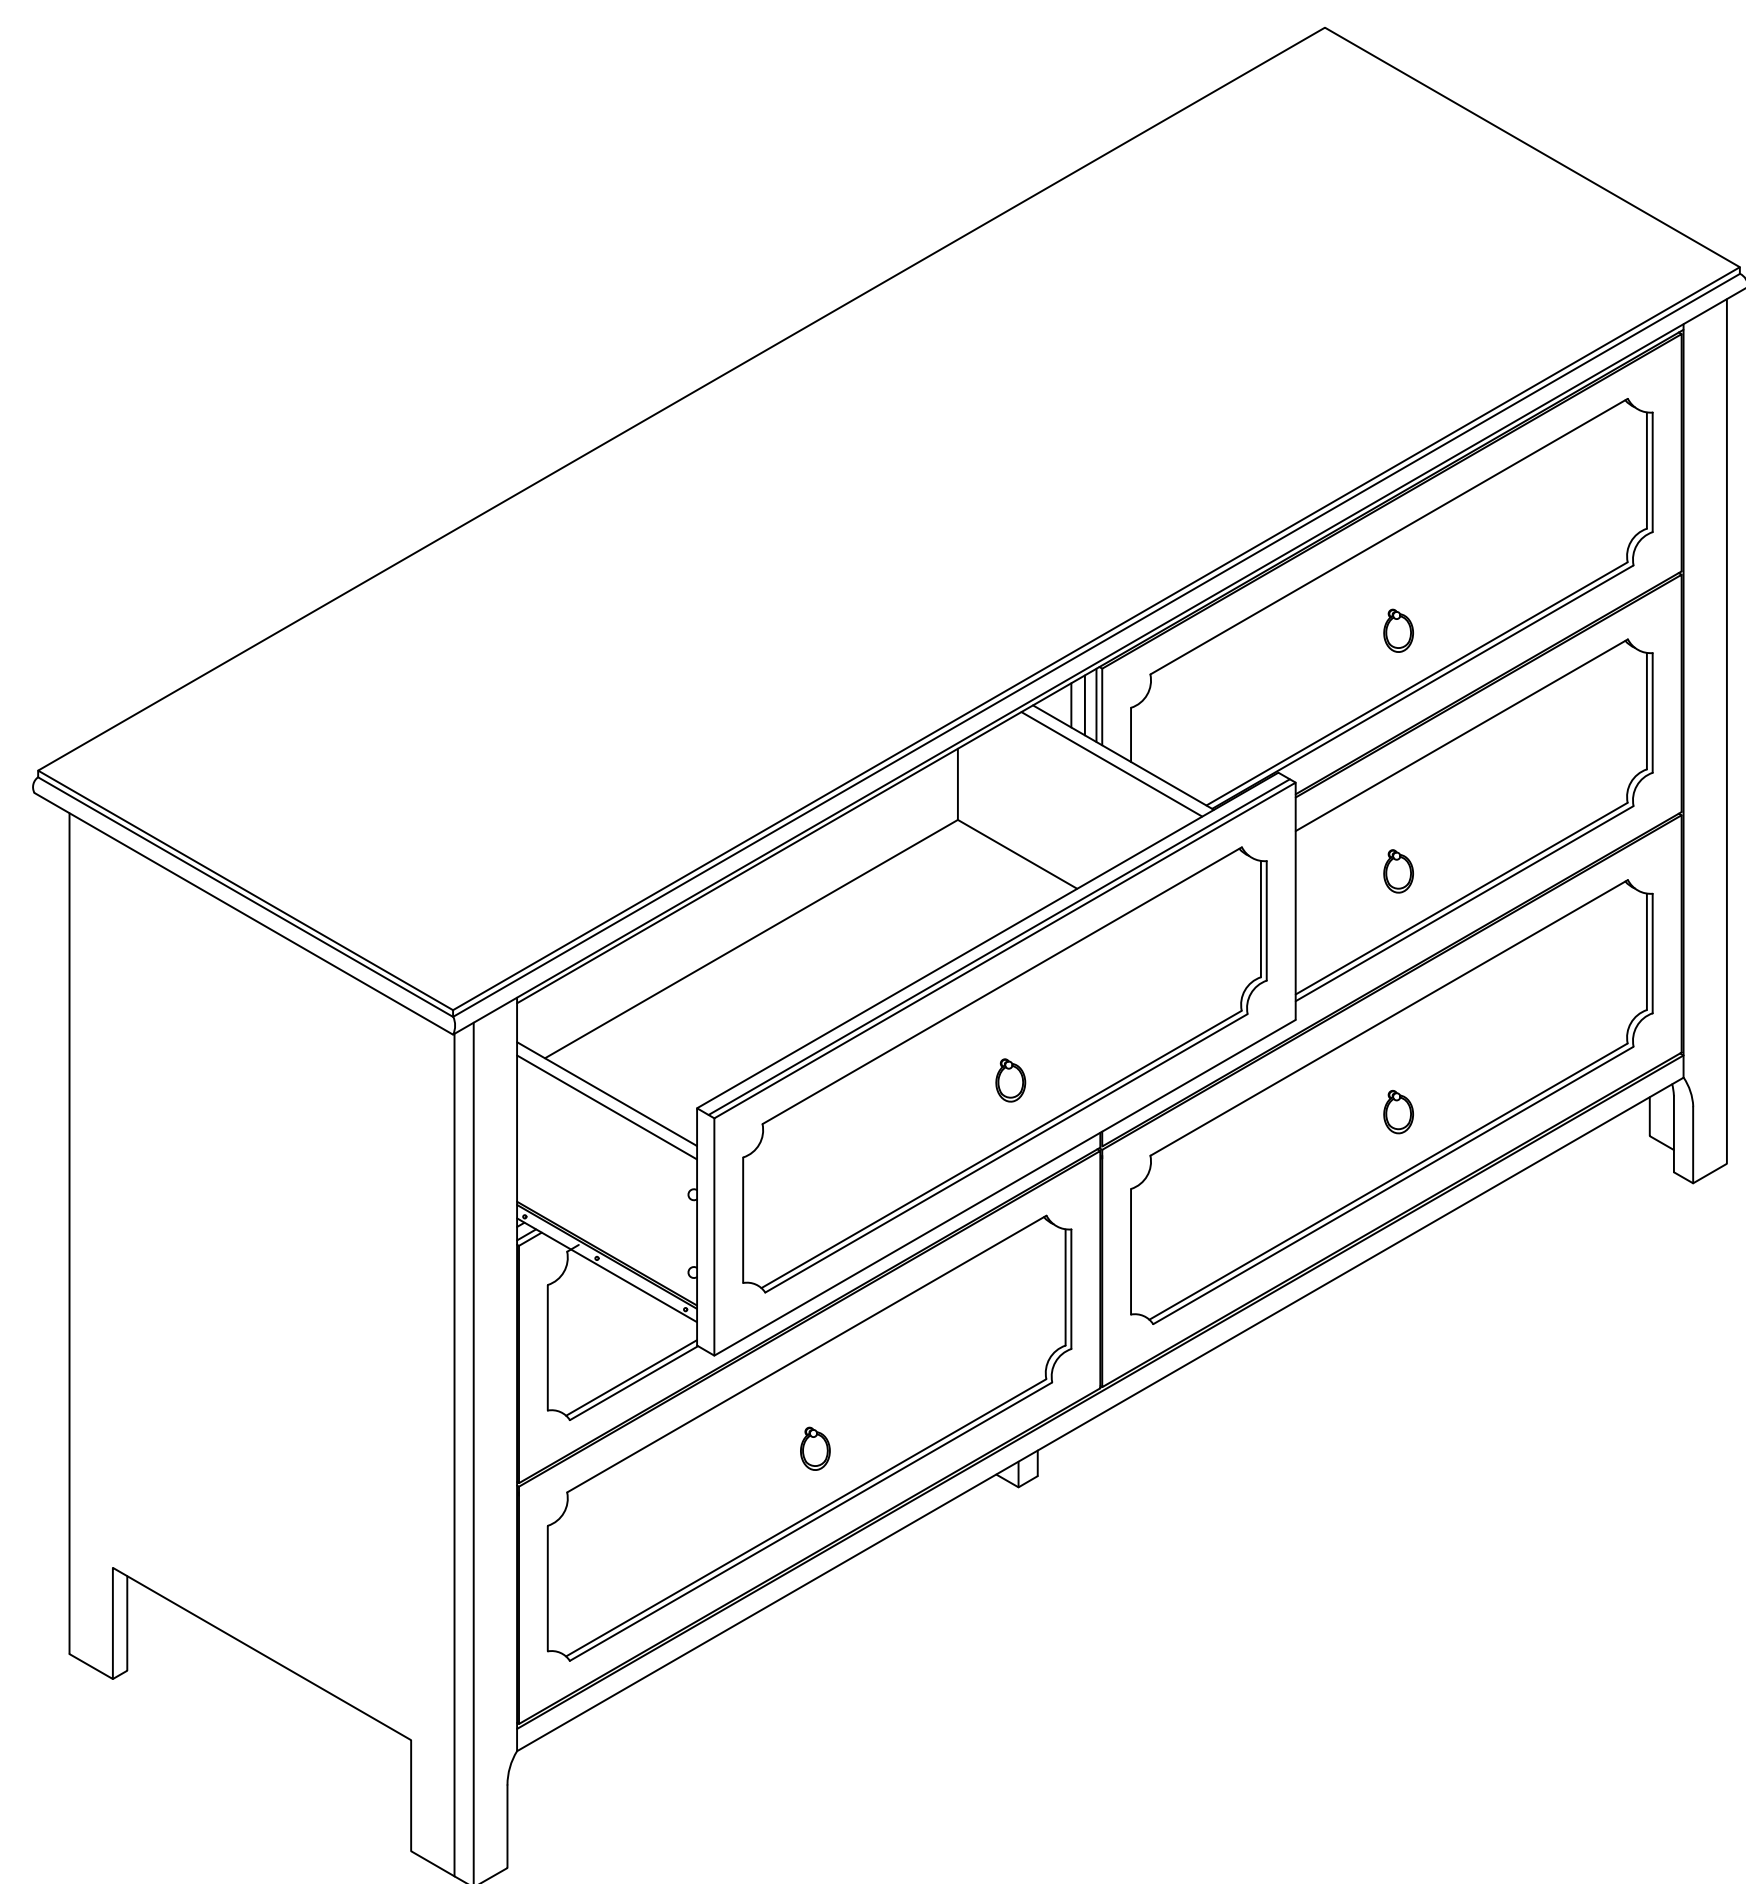

ANCHORING DRESSER

To anchor your dresser, use the anchor kit as seen in the diagram below. Choose a suitable wall fixing that matches your wall style and then fasten the strap to the wall as shown using appropriate fixings.

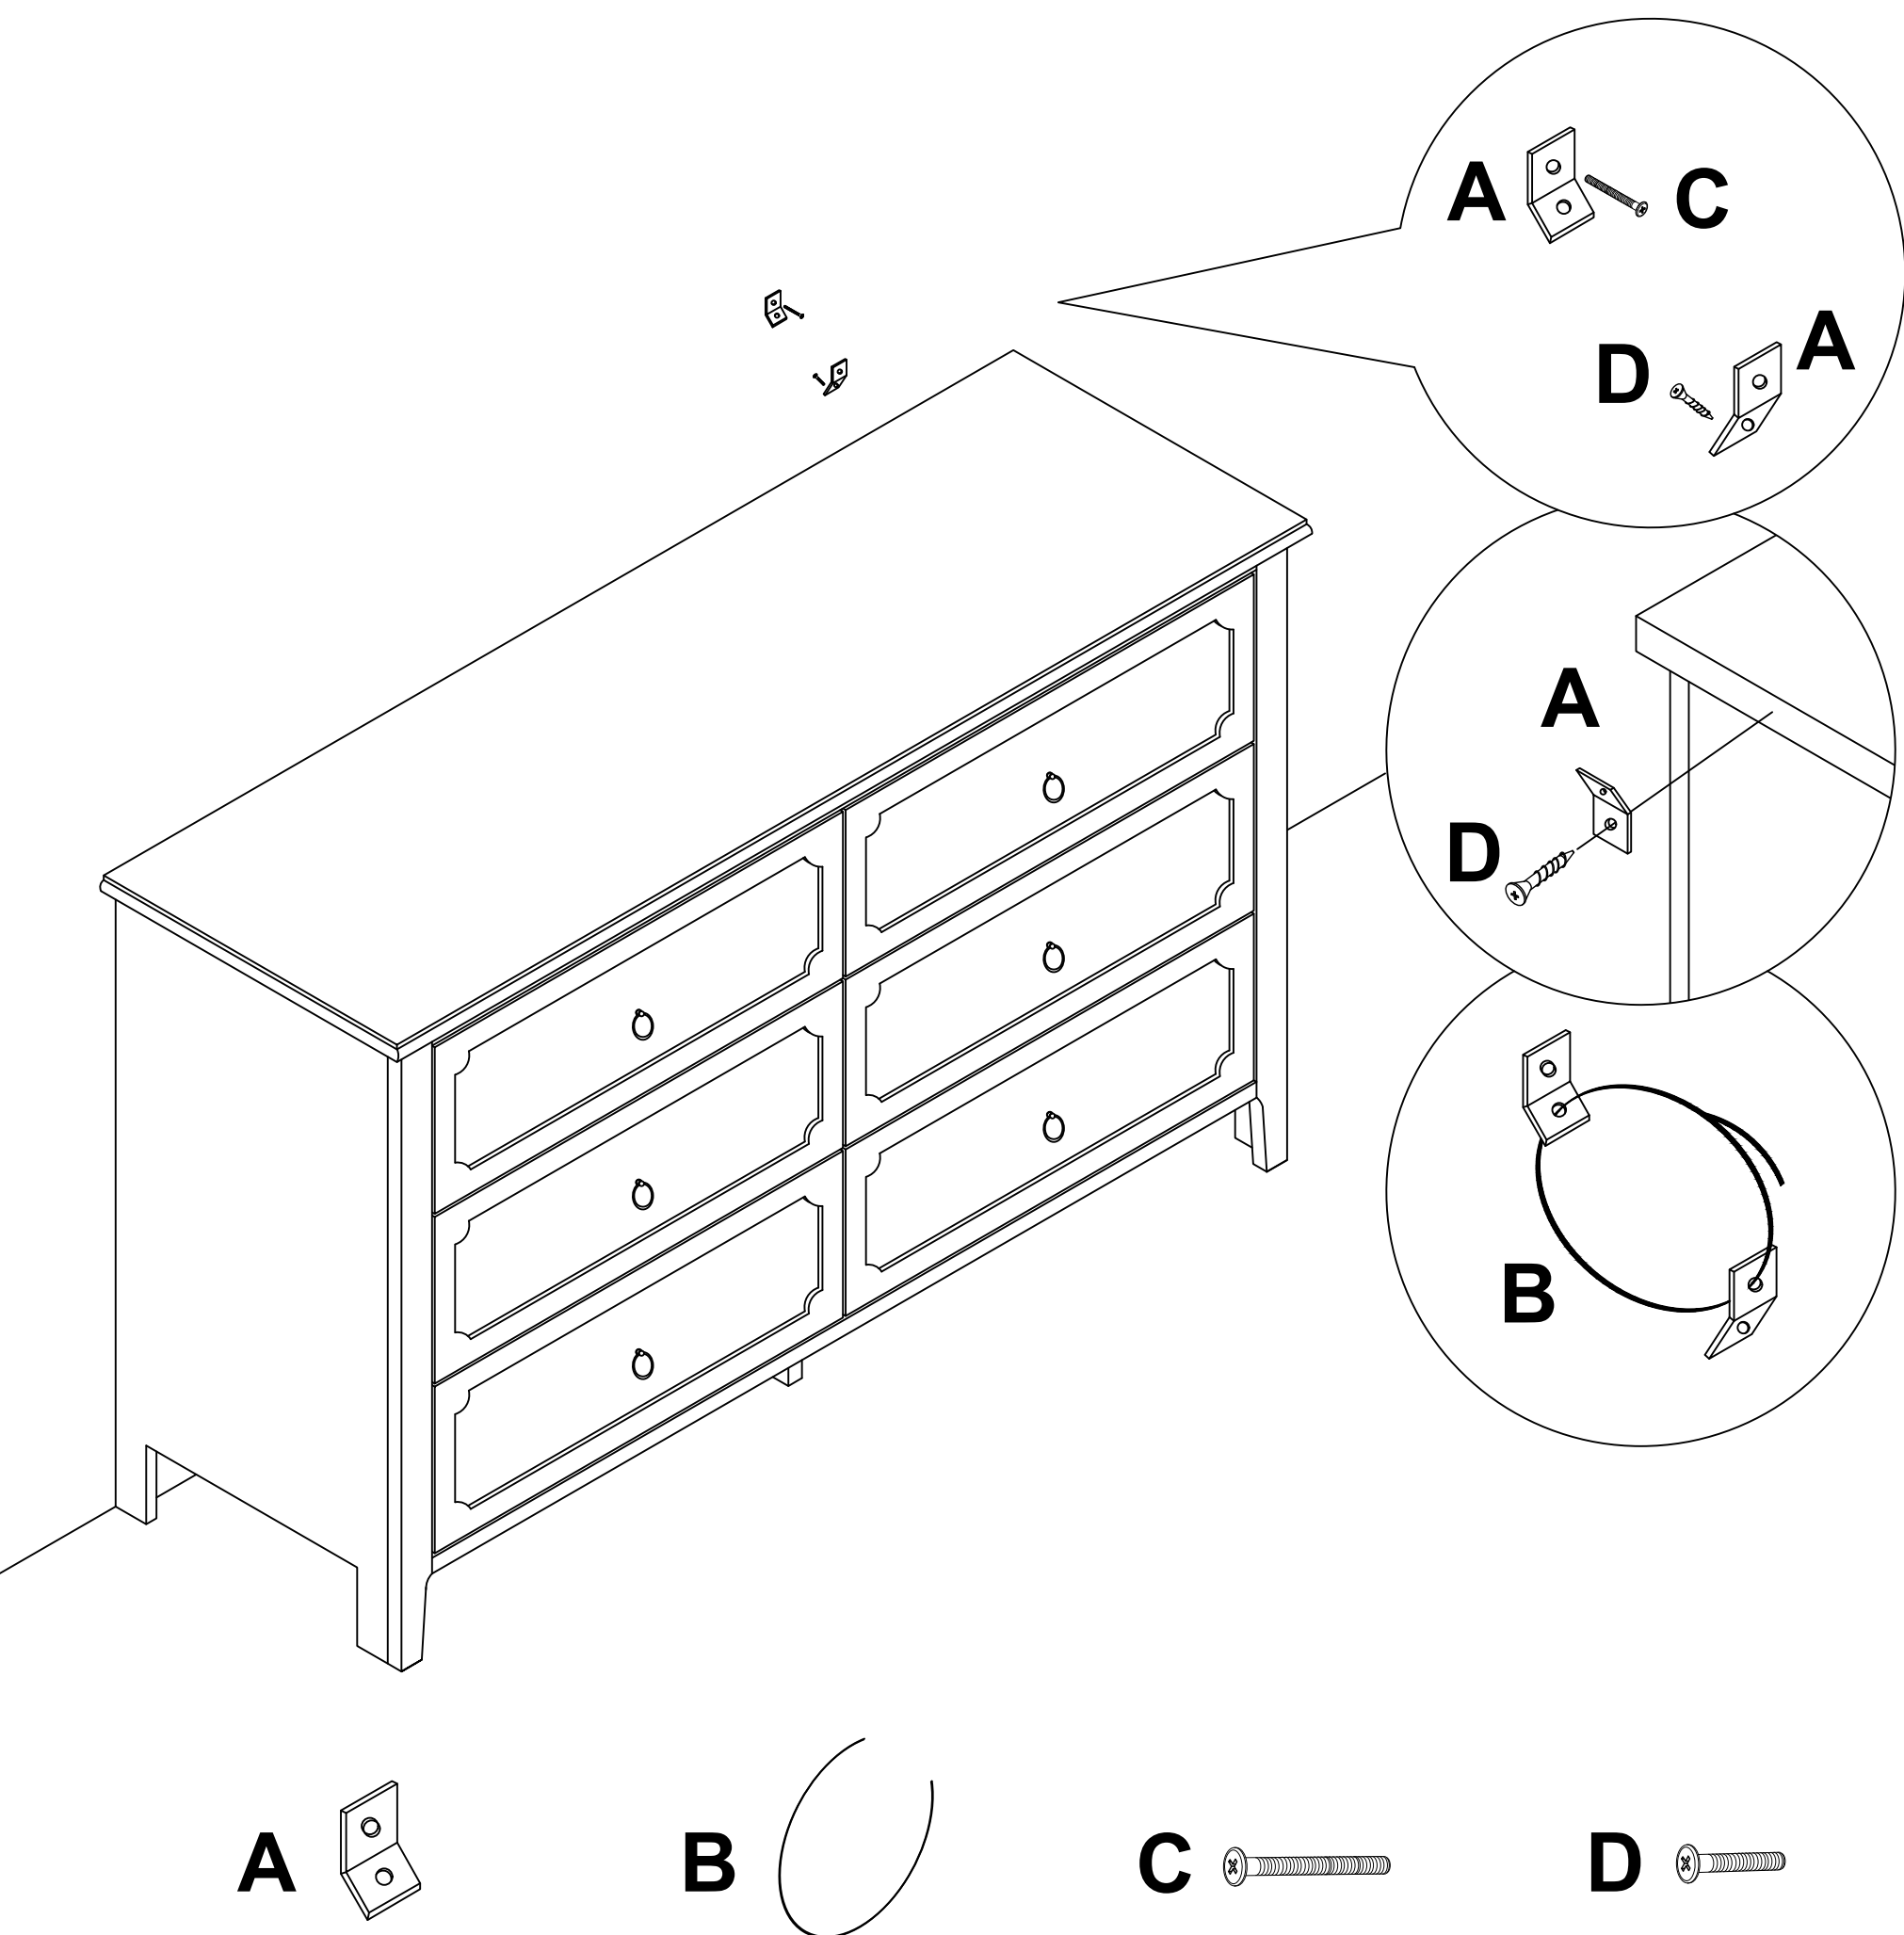

Completed assembly.

