




UphosteredHeadboard

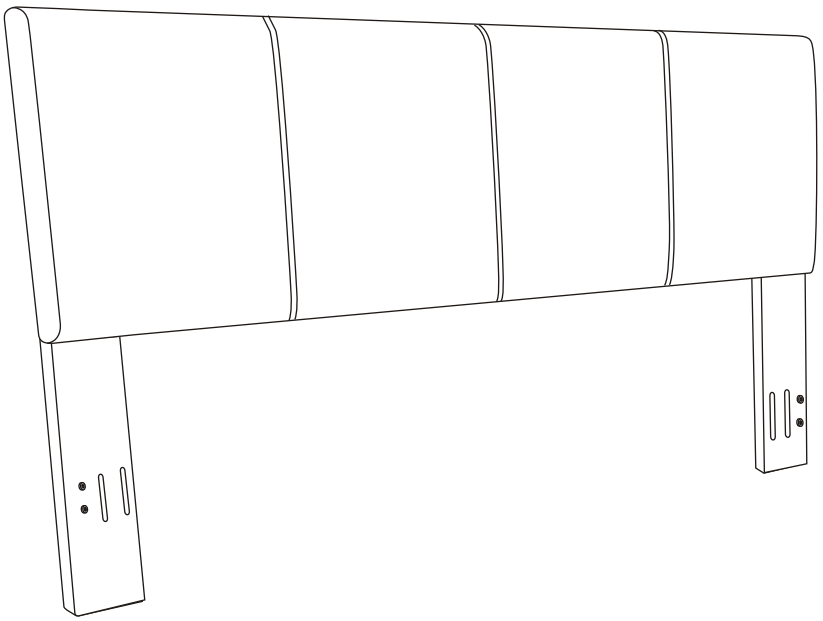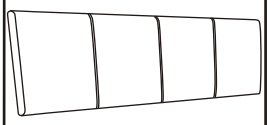

PART LIST

A	B	C
		
Headboard Panel 1 PC	Left Headboard Post 1 PC	Right Headboard Post 1 PC


HARDWARE LIST


#1	#2	#3	#4	#5
 5/16"x1-3/4"L				 M5
Bolt 15PCS(Extra1)	Spring Washer 19PCS(Extra1)	Flat Washer 19PCS(Extra1)	Nut 5PCS(Extra1)	Allen Key 1PC

#6

Allen Wrench 1PC

Step 1. Lay headboard panel (part A) down on a soft surface, such as carpet, as shown below. Attach left headboard post (part B) and right headboard post (part C) to headboard panel (part A) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen key (part #4).
NOTE: Please do not fully tighten bolts until unit is fully assembled.

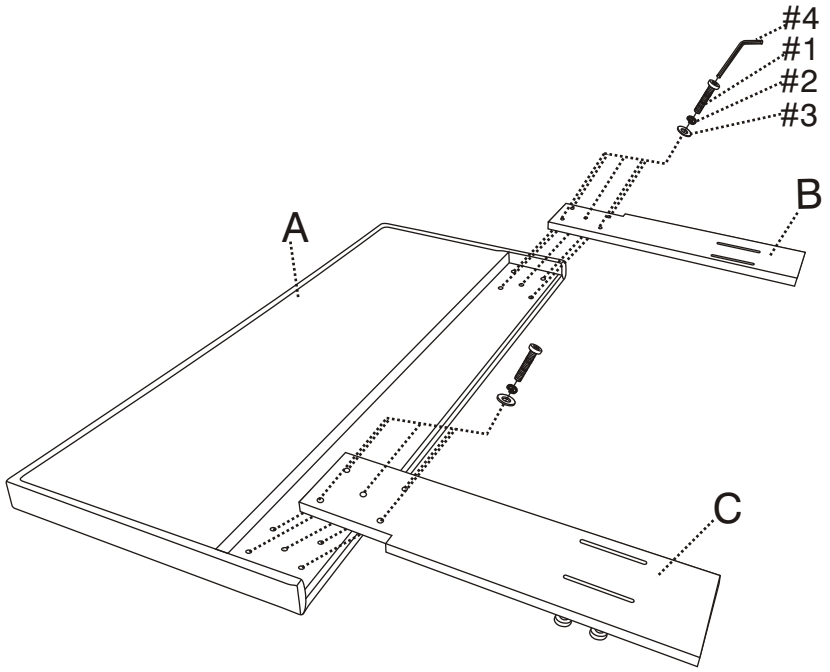

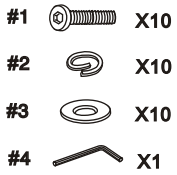

Step 2. Screw out the bolts on the headboard posts using allen key (part #5). Attach bed frame (*Not Included) to left headboard post (part B) and right headboard post (part C) using bolts (part #1), spring washers (part #2), flat washers (part #3), nuts (part #4), allen key (part #5) and allen wrench (part#6).

