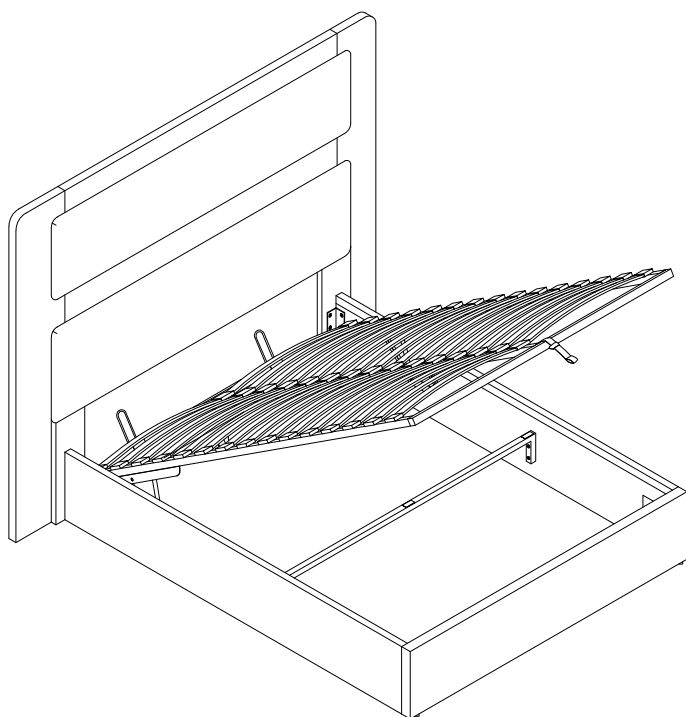


ASSEMBLY INSTRUCTION

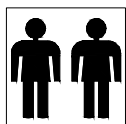
SIZE: Queen




Please **TEAR OFF** this shrink film from side!
DO NOT USE CUTTER!

IMPORTANT NOTE


1. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
2. Keep fittings out of children's reach and keep children well away from construction area.
3. When moving your assembled bed. it is best to lift the bed and never to drag it.
4. Do not use this product if parts are missing, damaged or worn.
5. This product should only be used on firm, level ground.
6. Please periodically check all fittings and re-tighten as necessary.
7. Do not use the bed unless all bolts and screws are firmly secured.
8. For further assistance, please provide a screenshot of your order and contact us via email













Minimum two
person assembly

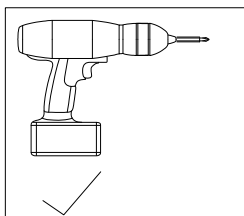












PART LIST

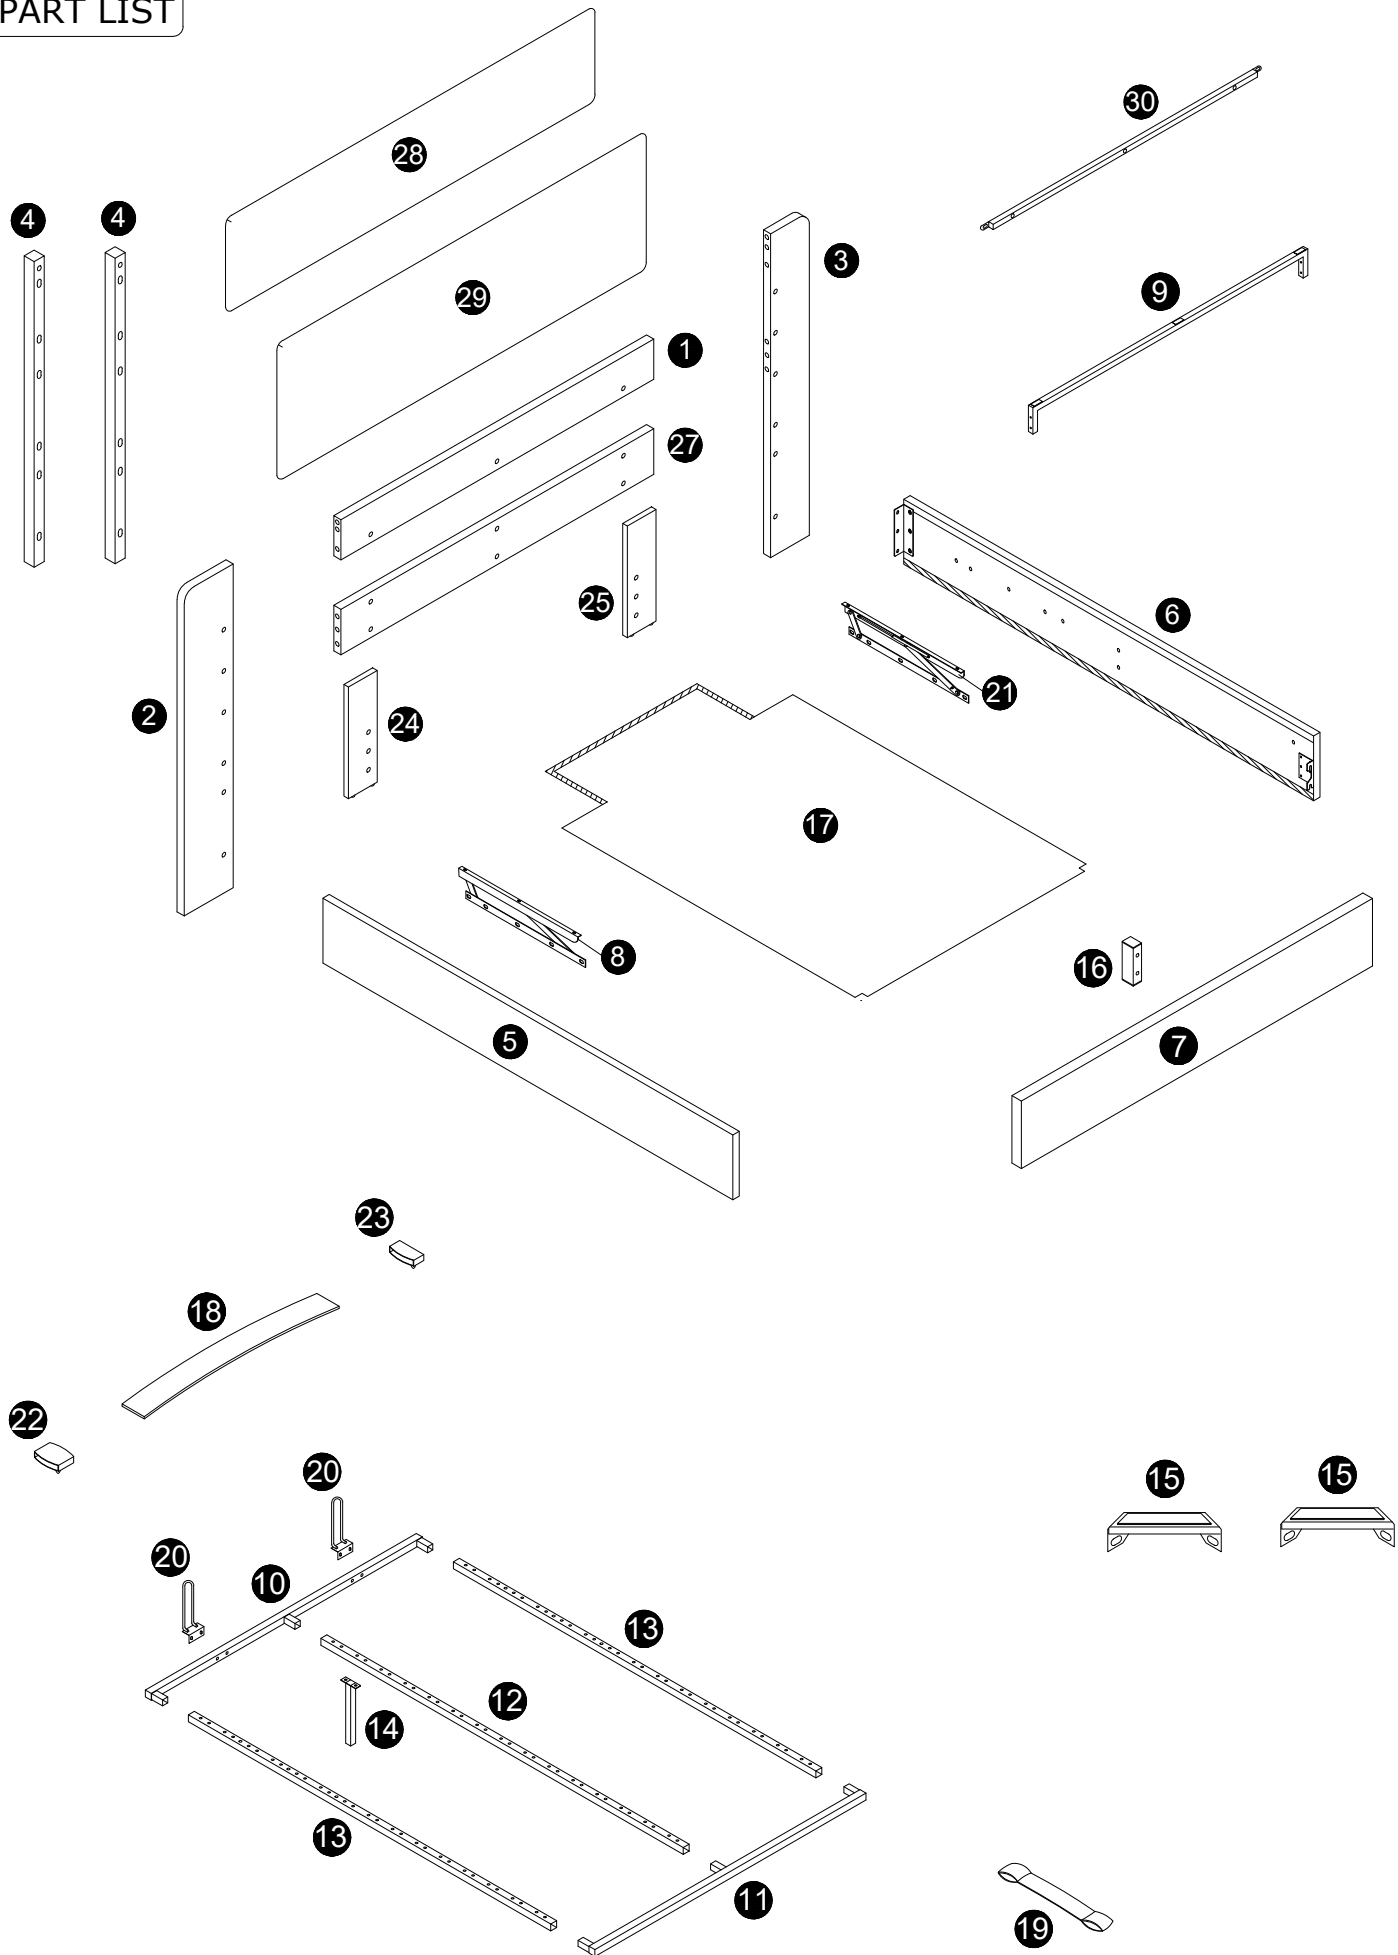







Components of Carton A

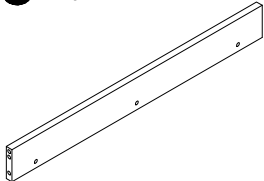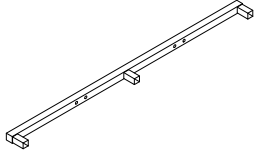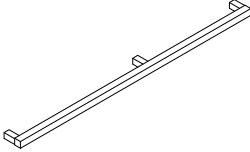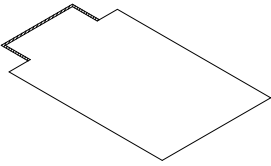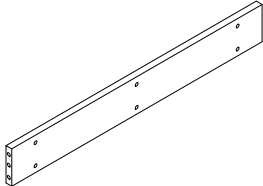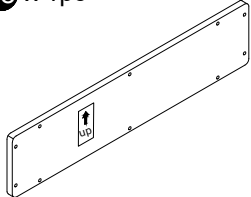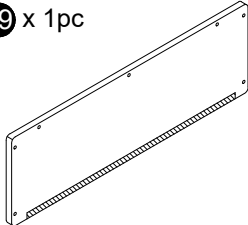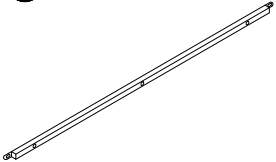1 x 1pc 	2 x 1pc 	3 x 1pc 	10 x 1pc 	11 x 1pc 
17 x 1pc 	24 x 1pc 	25 x 1pc 	27 x 1pc 	28 x 1pc 
29 x 1pc 	30 x 1pc 			

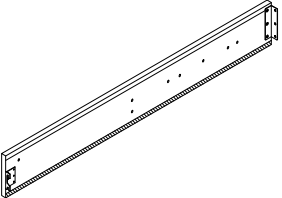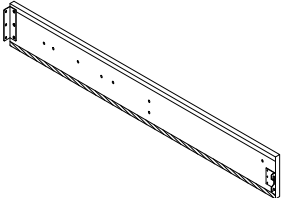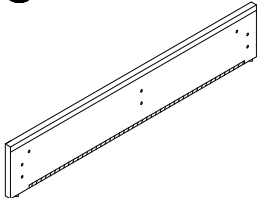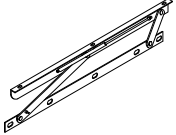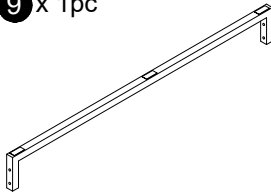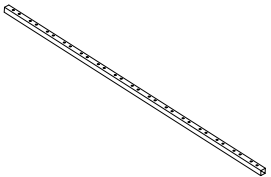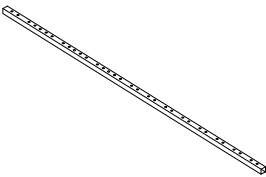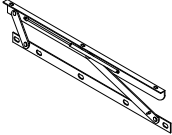
Components of Carton B

4 x 2pcs 	5 x 1pc 	6 x 1pc 	7 x 1pc 	8 x 1pc 
9 x 1pc 	12 x 1pc 	13 x 2pcs 	14 x 1pc (25x230mm) 	15 x 2pcs 
16 x 1pc 	18 x 30pcs 	19 x 1pc 	20 x 2pcs 	21 x 1pc 
22 x 15pcs 	23 x 30pcs 			

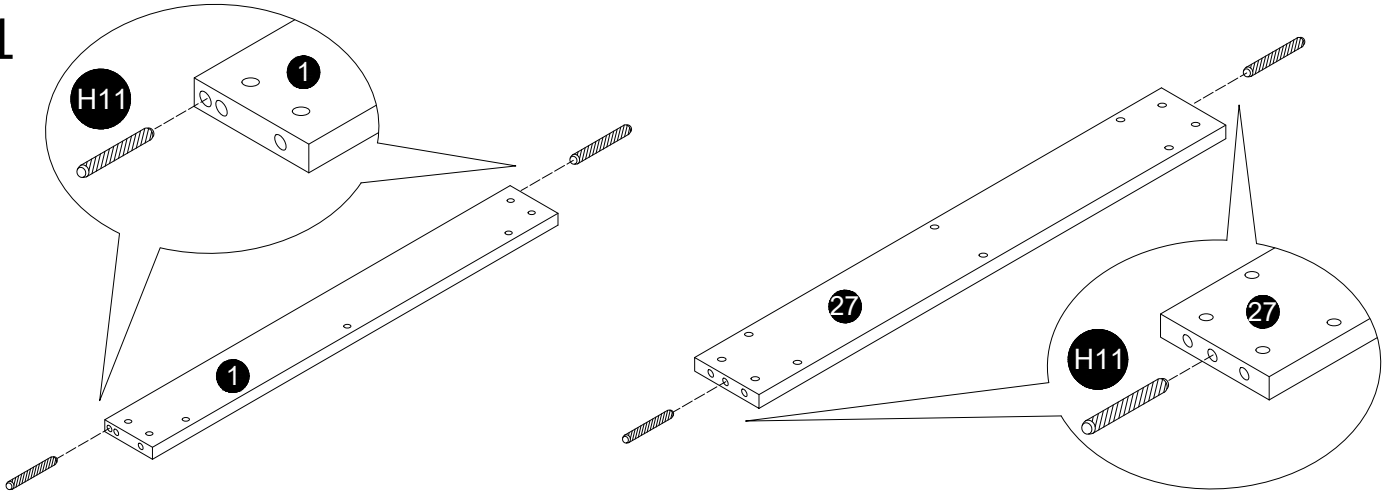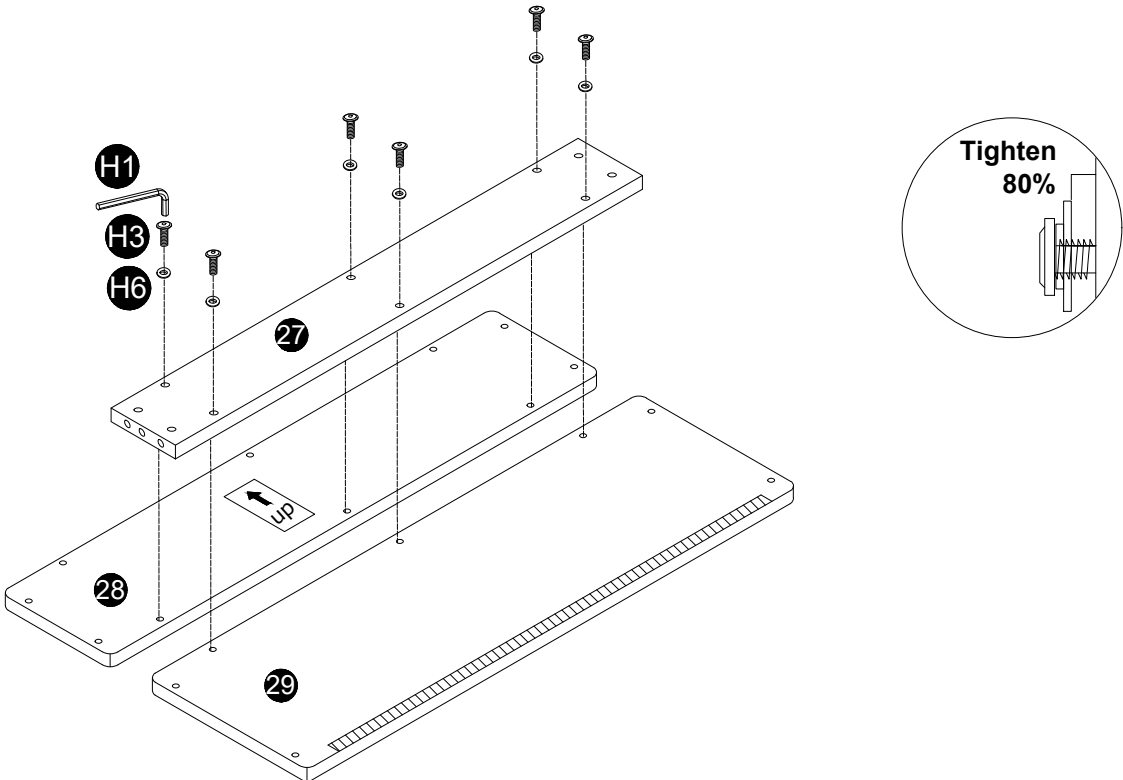
Please ensure to thoroughly inspect the small inner cardboard box containing the hardware, which are tied with a red string, before disposing of the box.

HARDWARE LIST		Components of Carton B	
 H1 M5 x 1pc	 H2 M8x25mm x 44pcs	 H3 M8x40mm x 6pcs	 H4 M8x50mm x 10pcs
 H5 M8 x 6pcs	 H6 M8x22mm x 27pcs	 H7 M8 x 6pcs	 H8 M8x65mm x 17pcs
 H9 x 8pcs	 H10 x 1pc	 H11 M8x40mm x 4pcs	 H13 x 16pcs
1 			
2 			

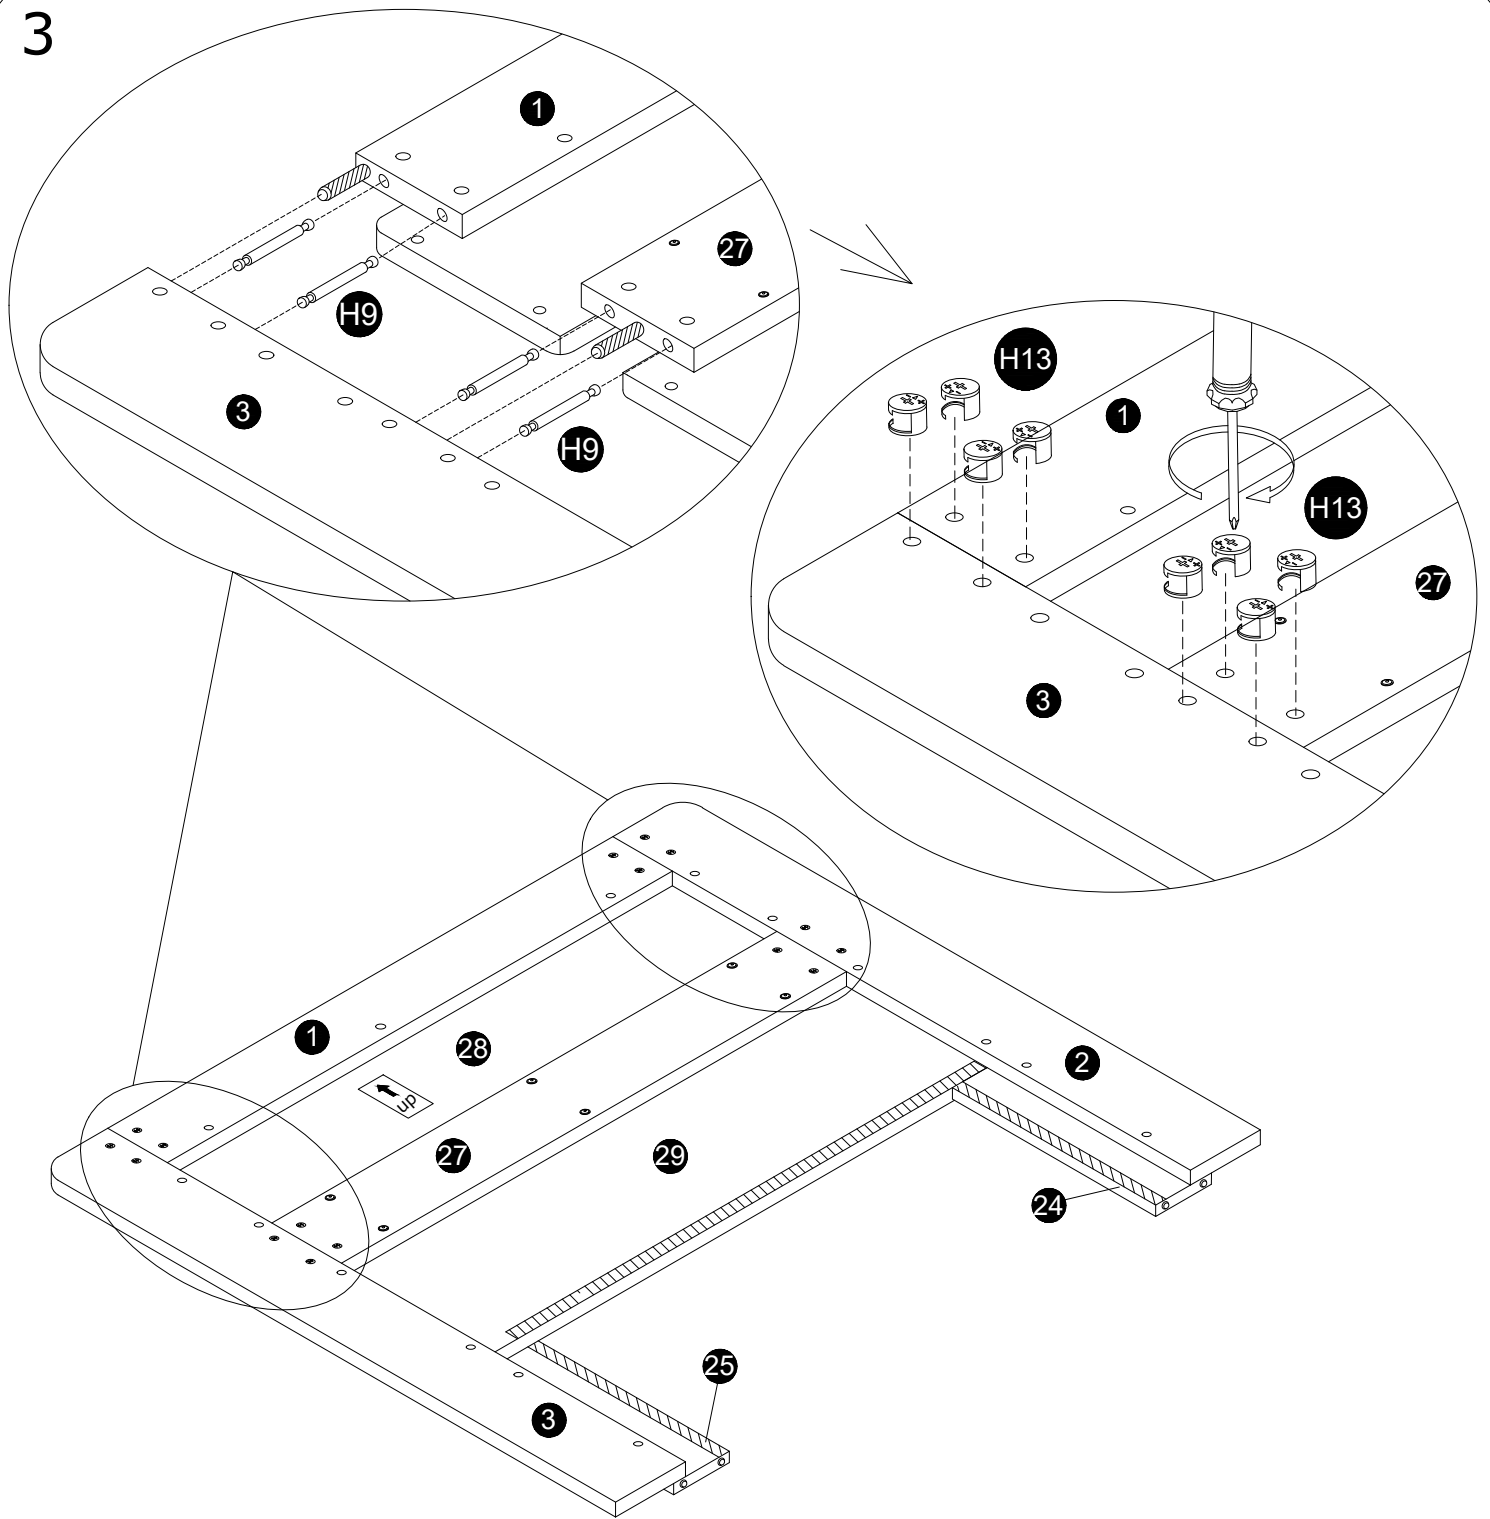
3




TURN THE CAM IN A CLOCKWISE DIRECTION

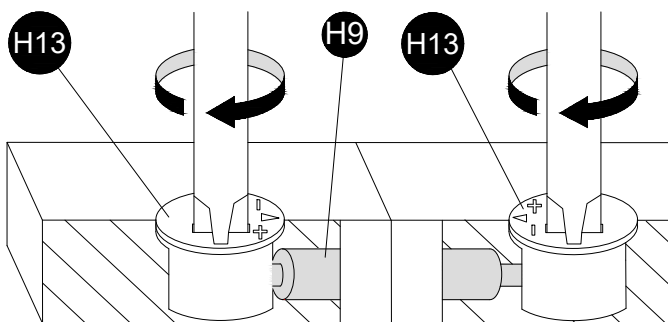

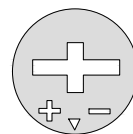DON'T STOP UNTIL THE 2 O'CLOCK LOCK
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE
ARROW POINTS IN THE POSITIONS SHOWN IN THE
DIAGRAMS BELOW




OPEN

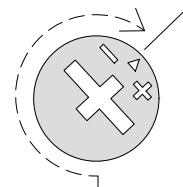

LOCKED


4

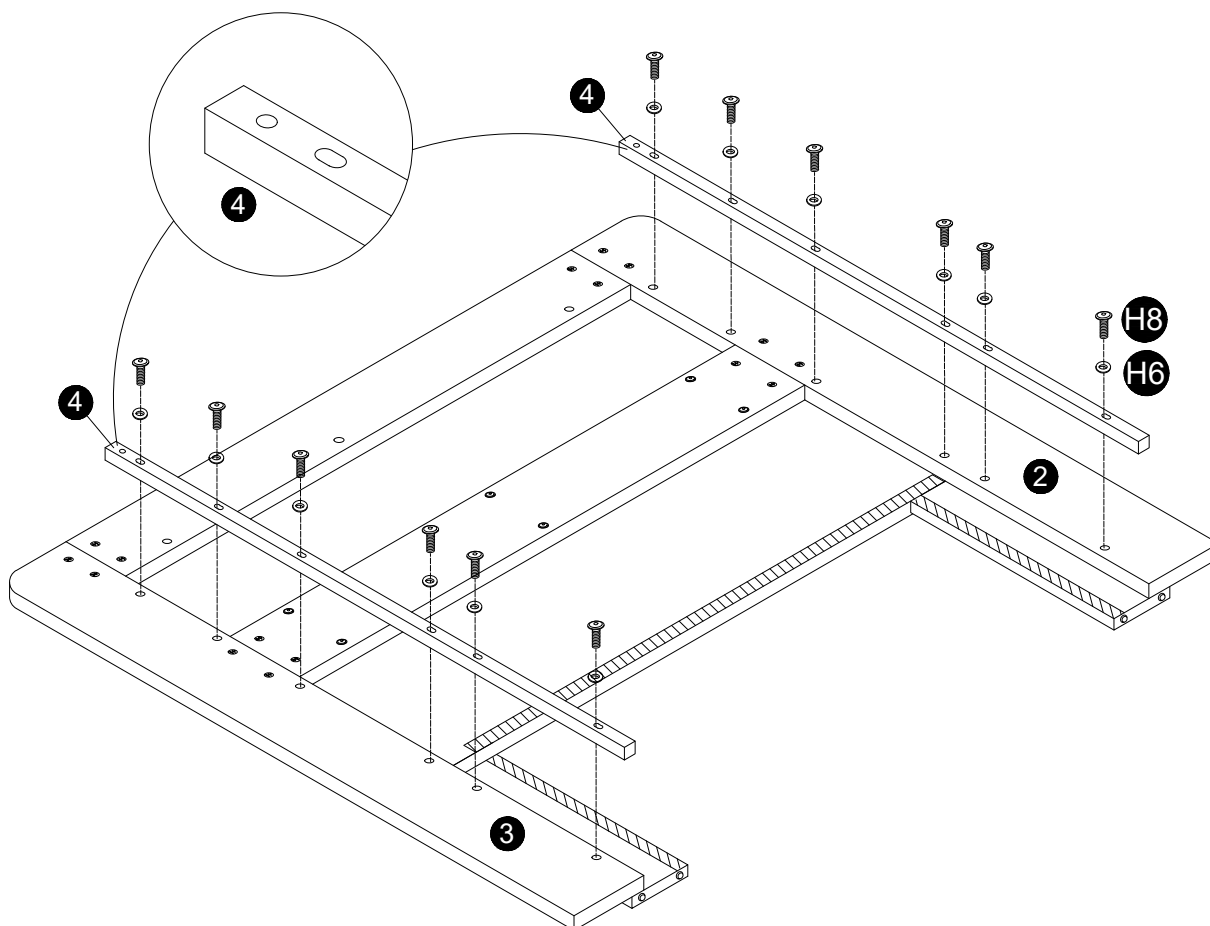As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.




5

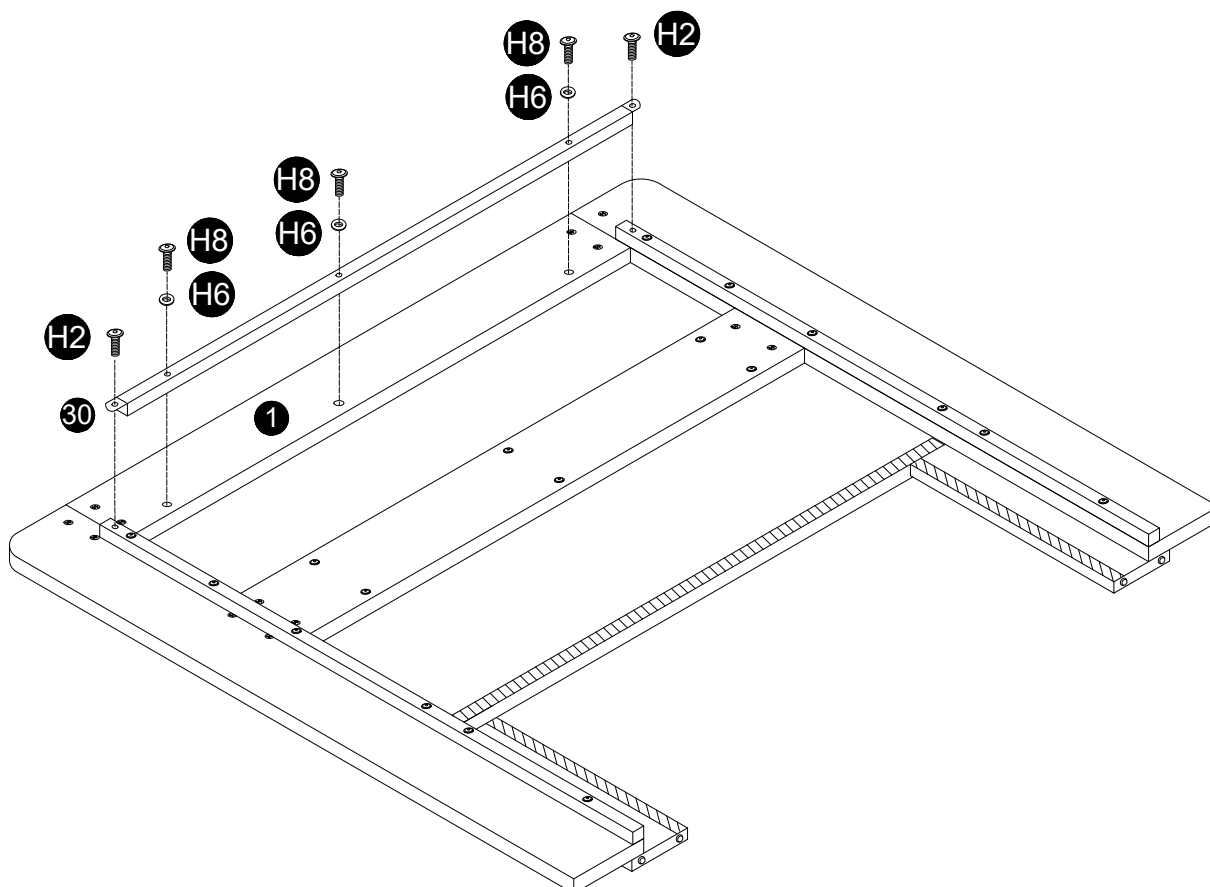
As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.




6

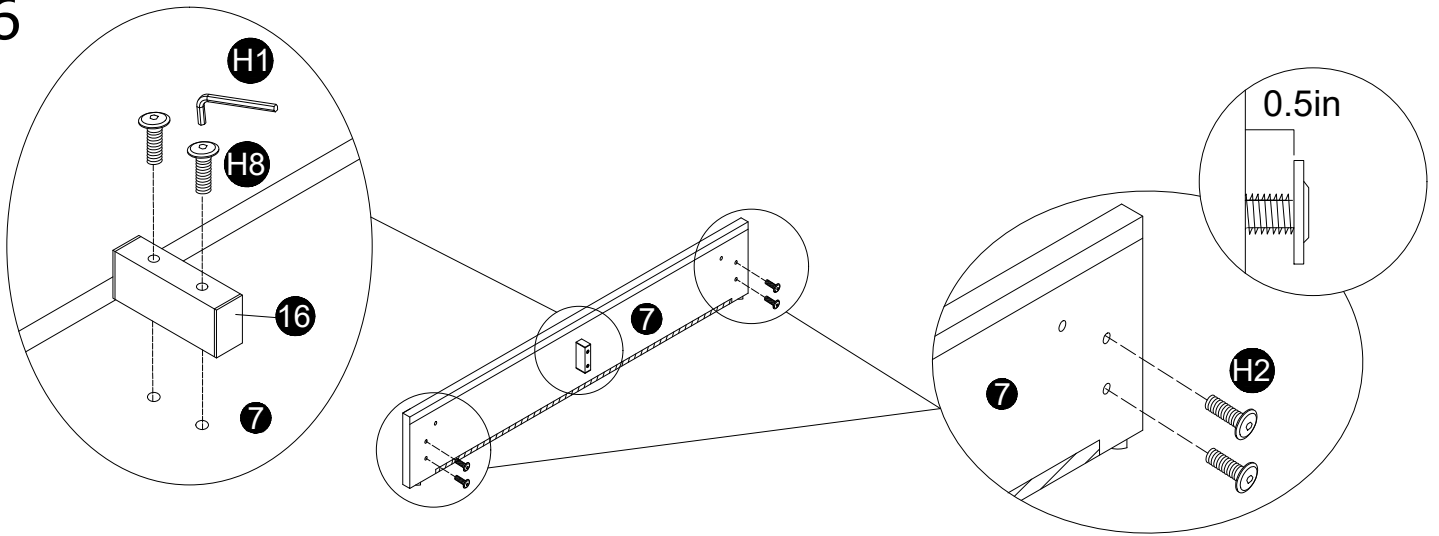

7

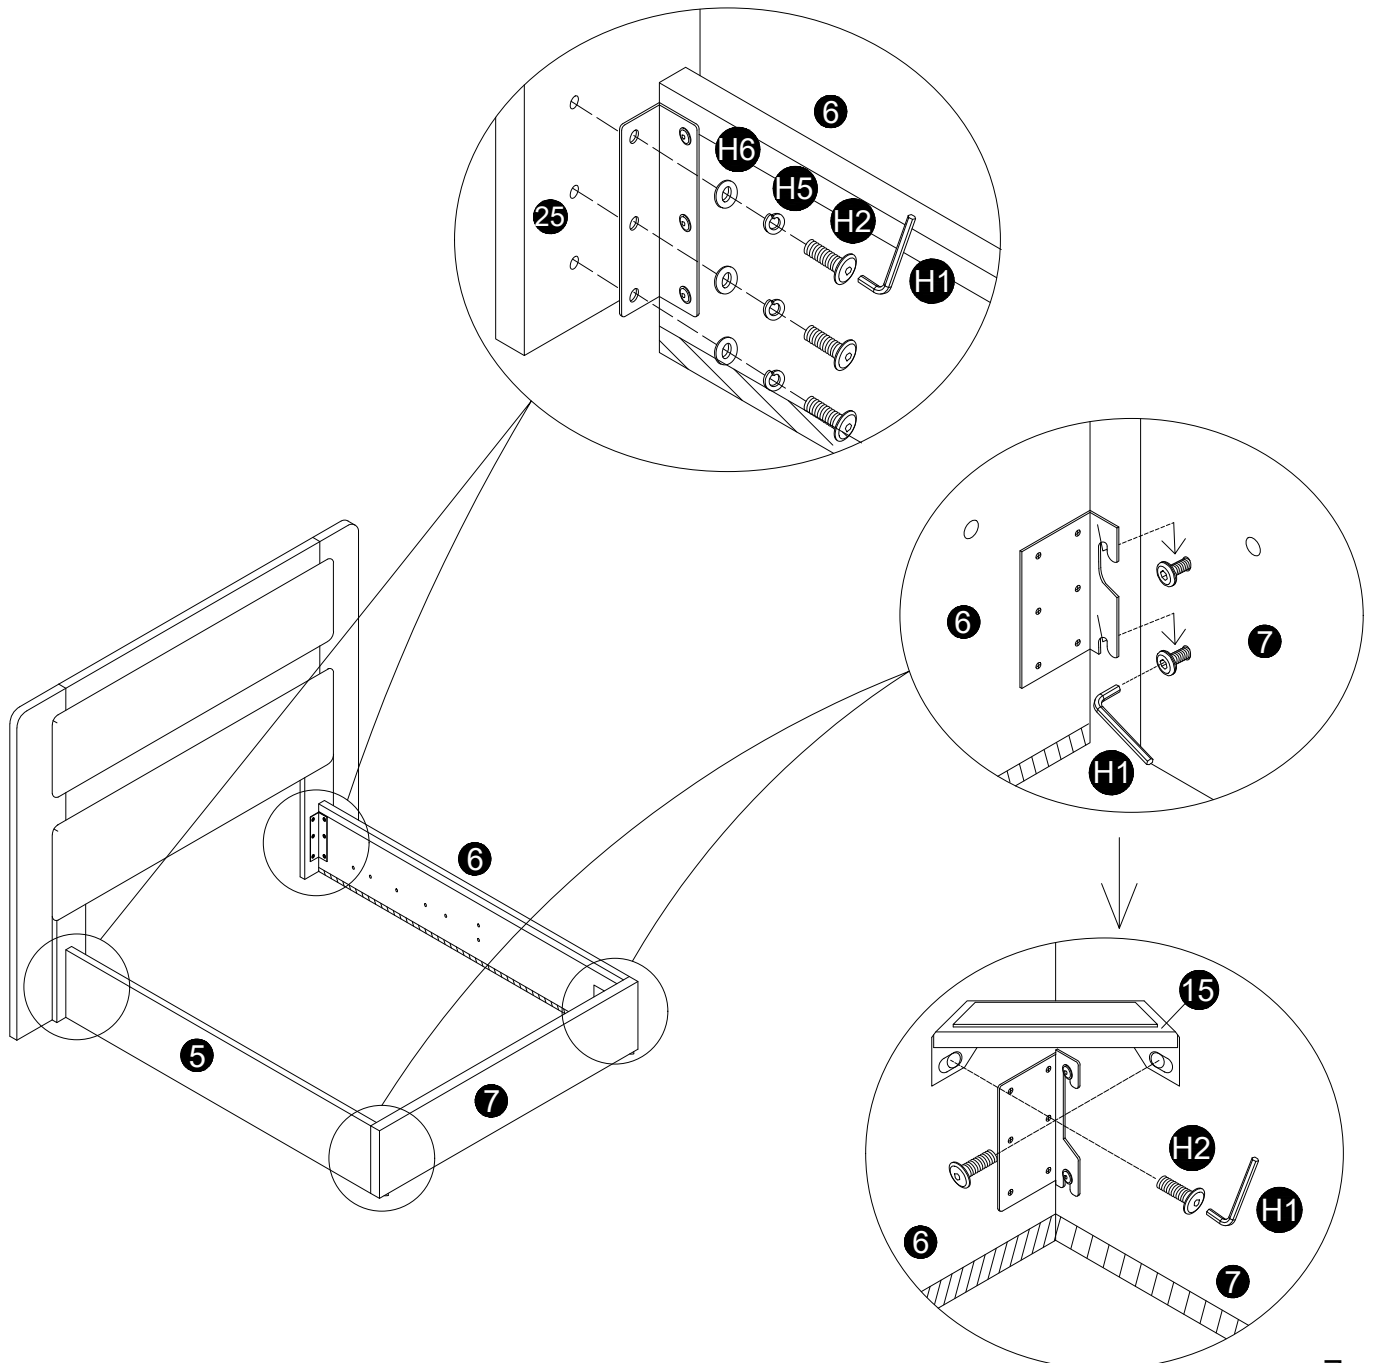


8

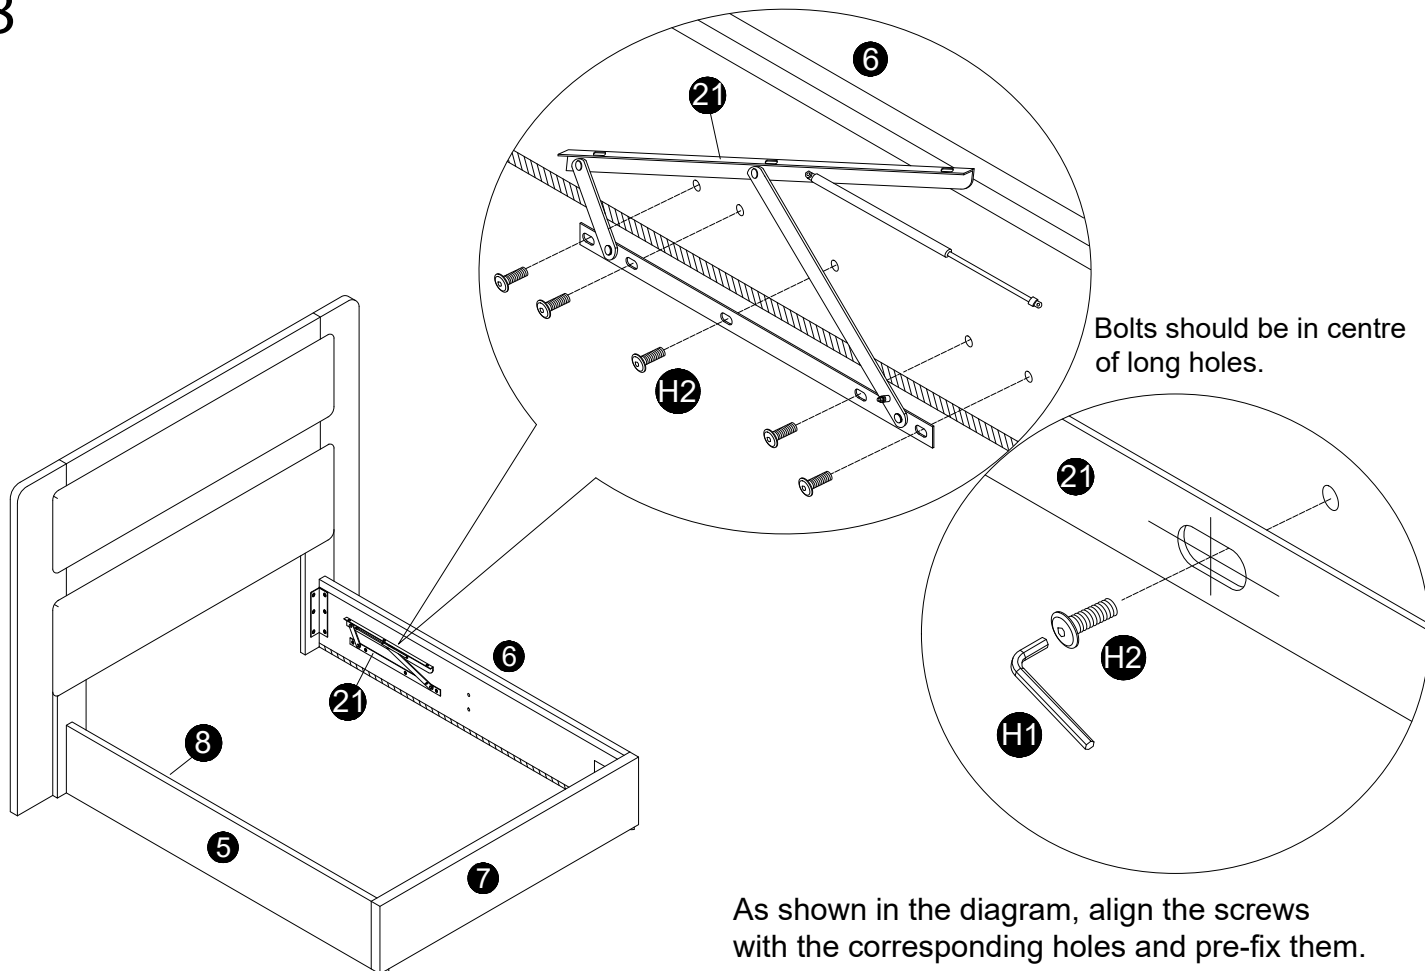


9

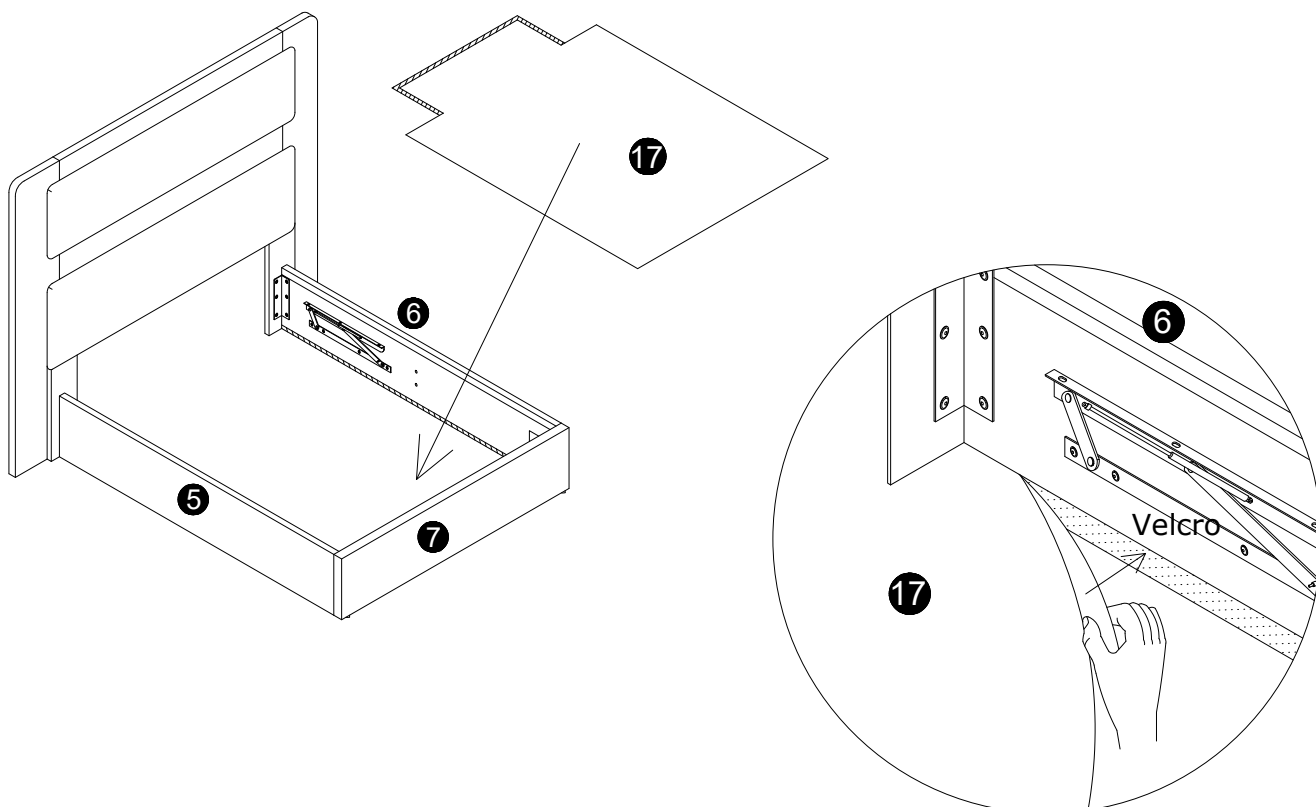
Locate fabric base into position using the hook and loop strips around the inside of the frame.




10

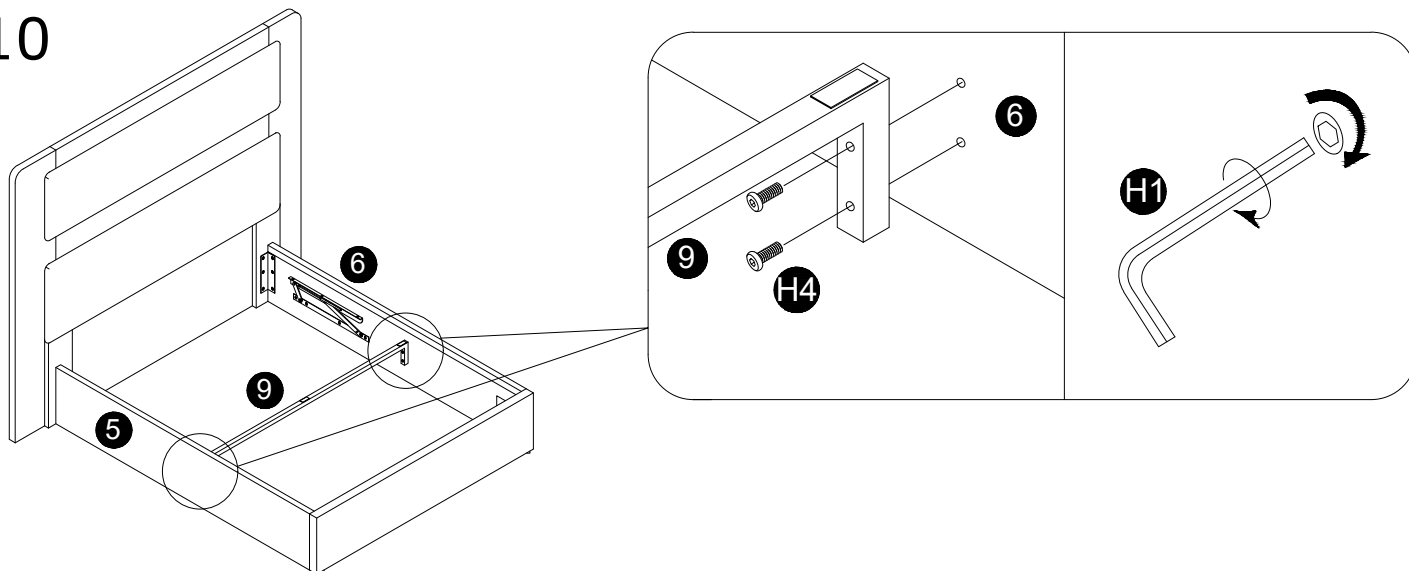

11

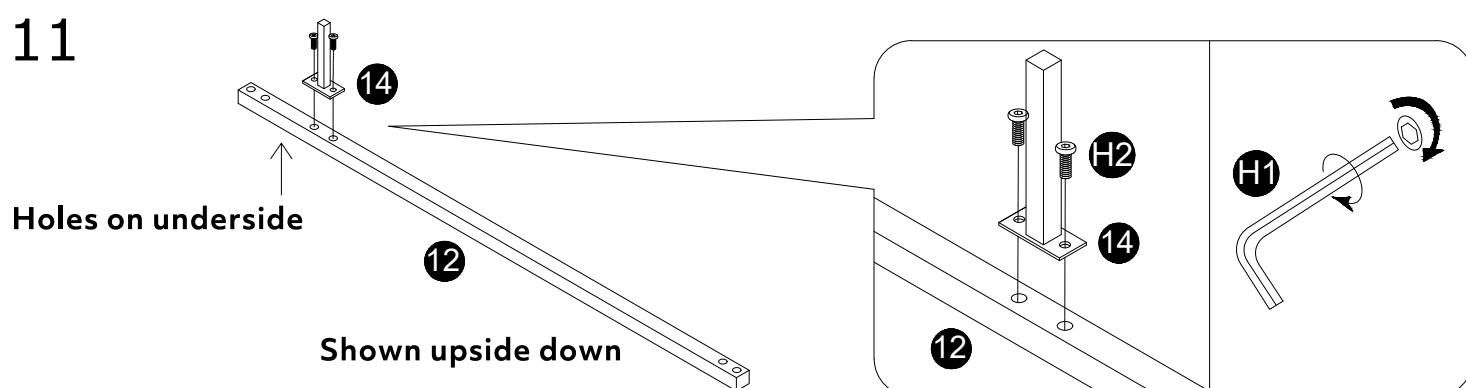


12


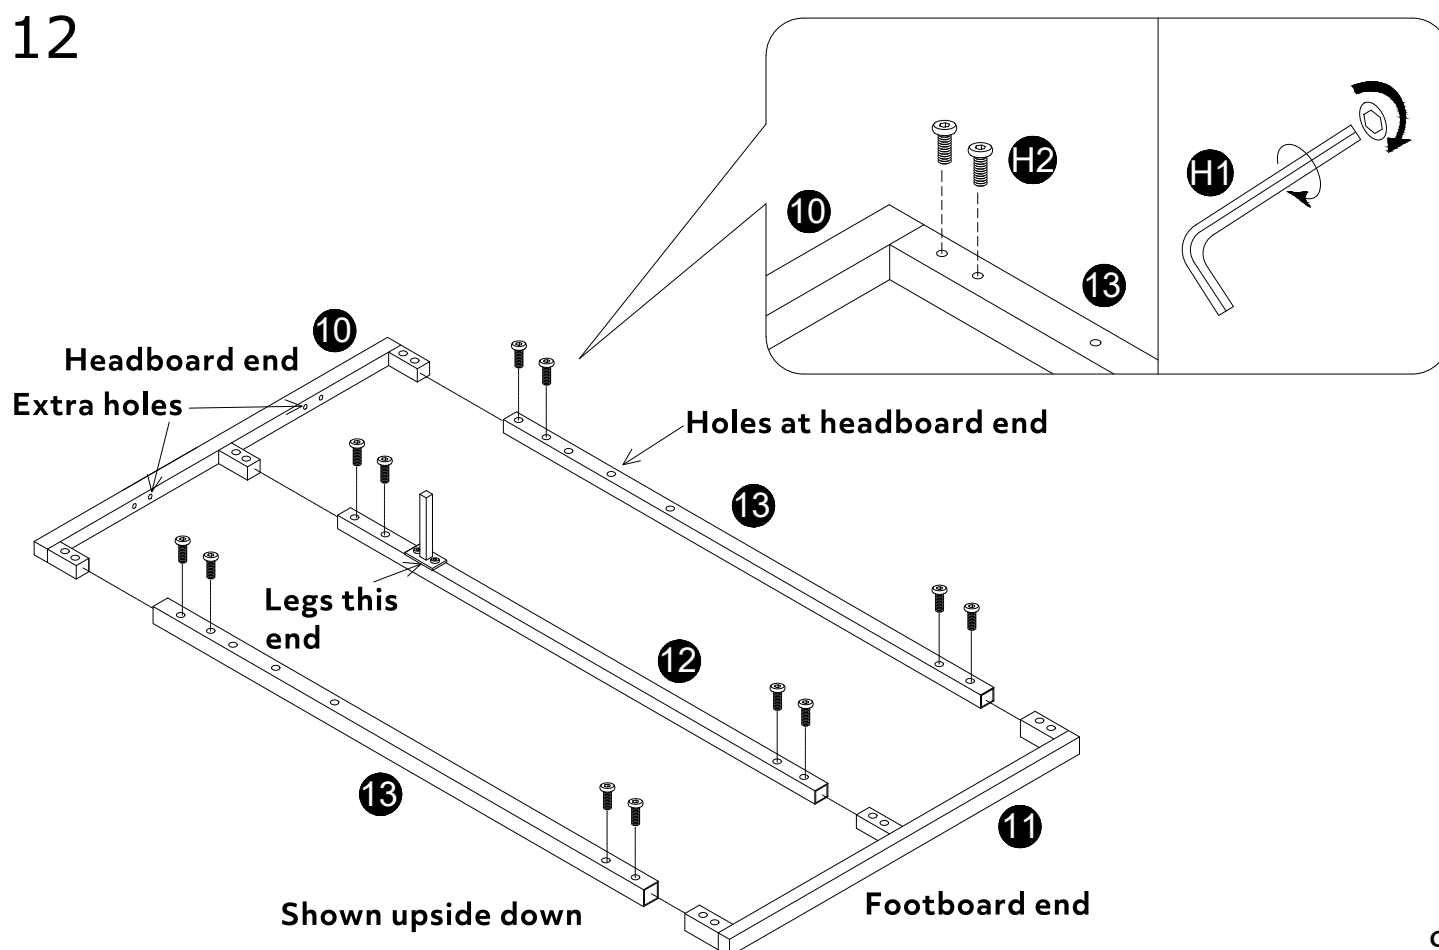


13

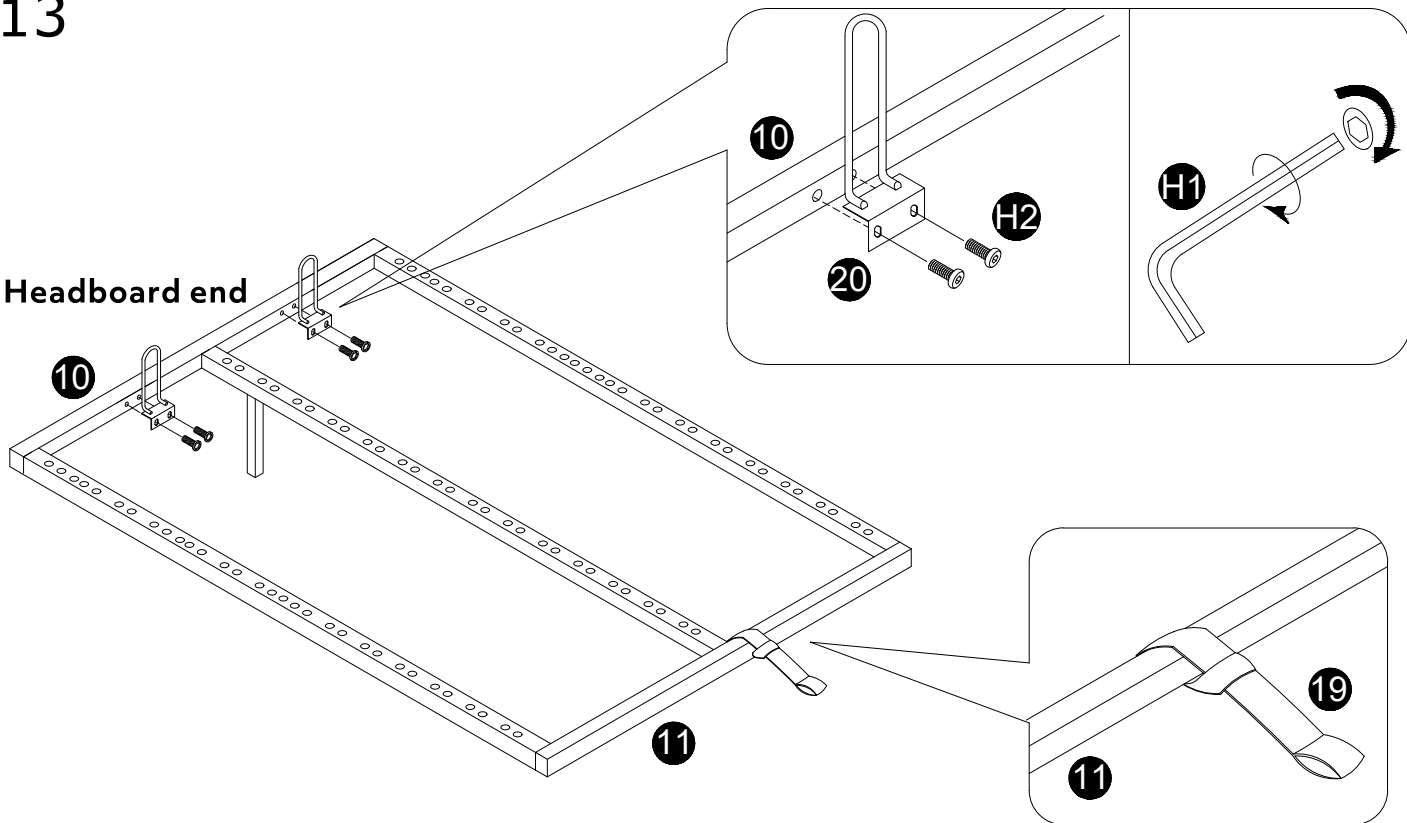Headboard end




14

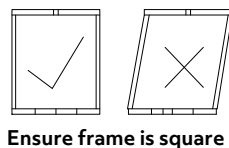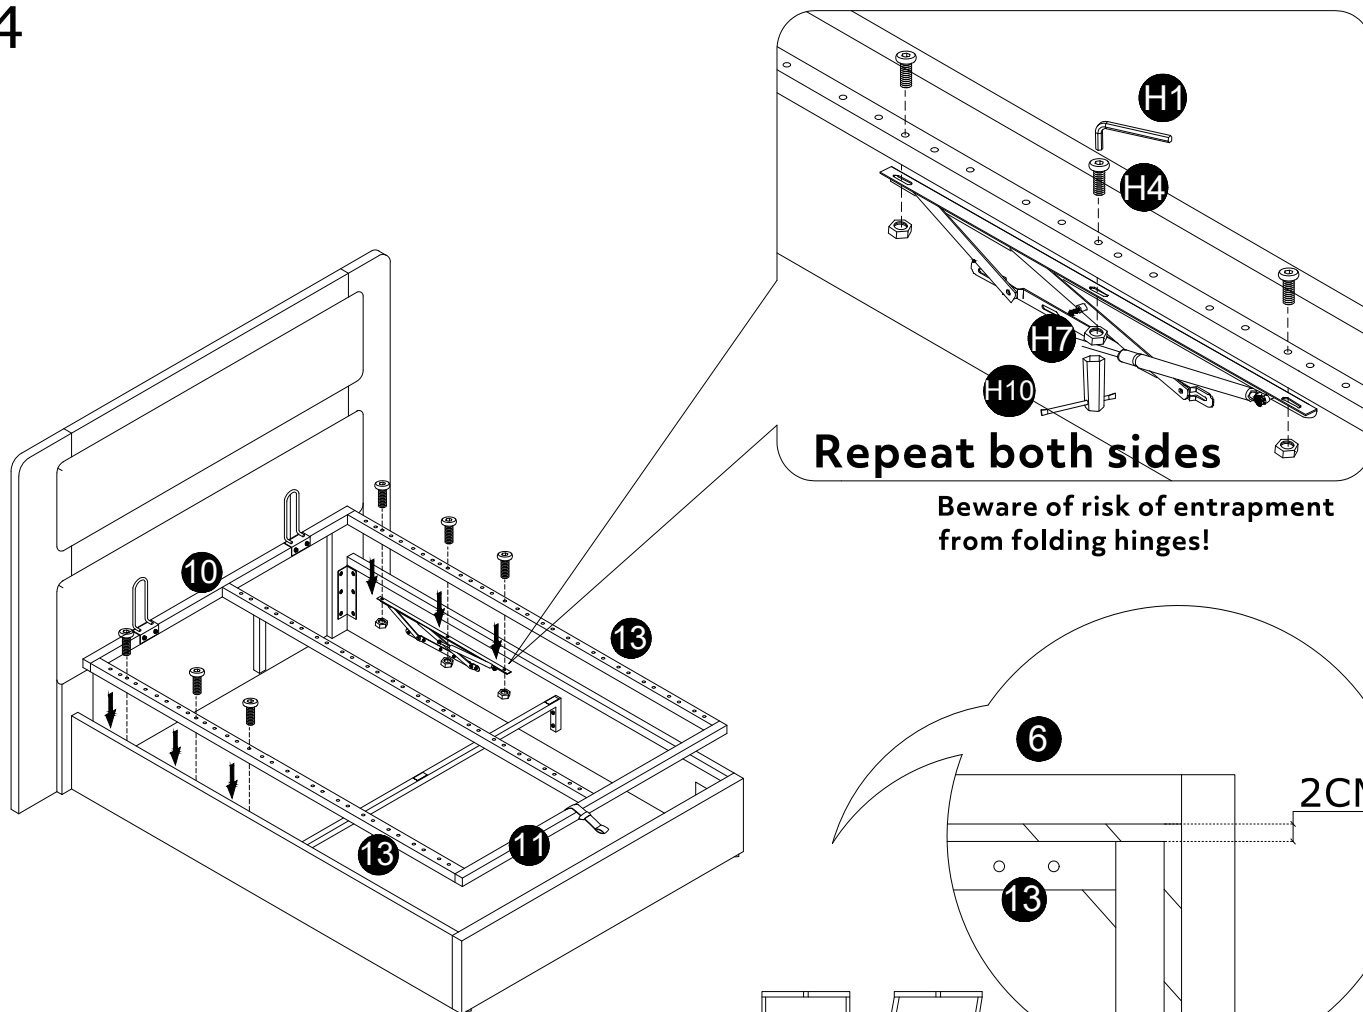

Ensure frame is square


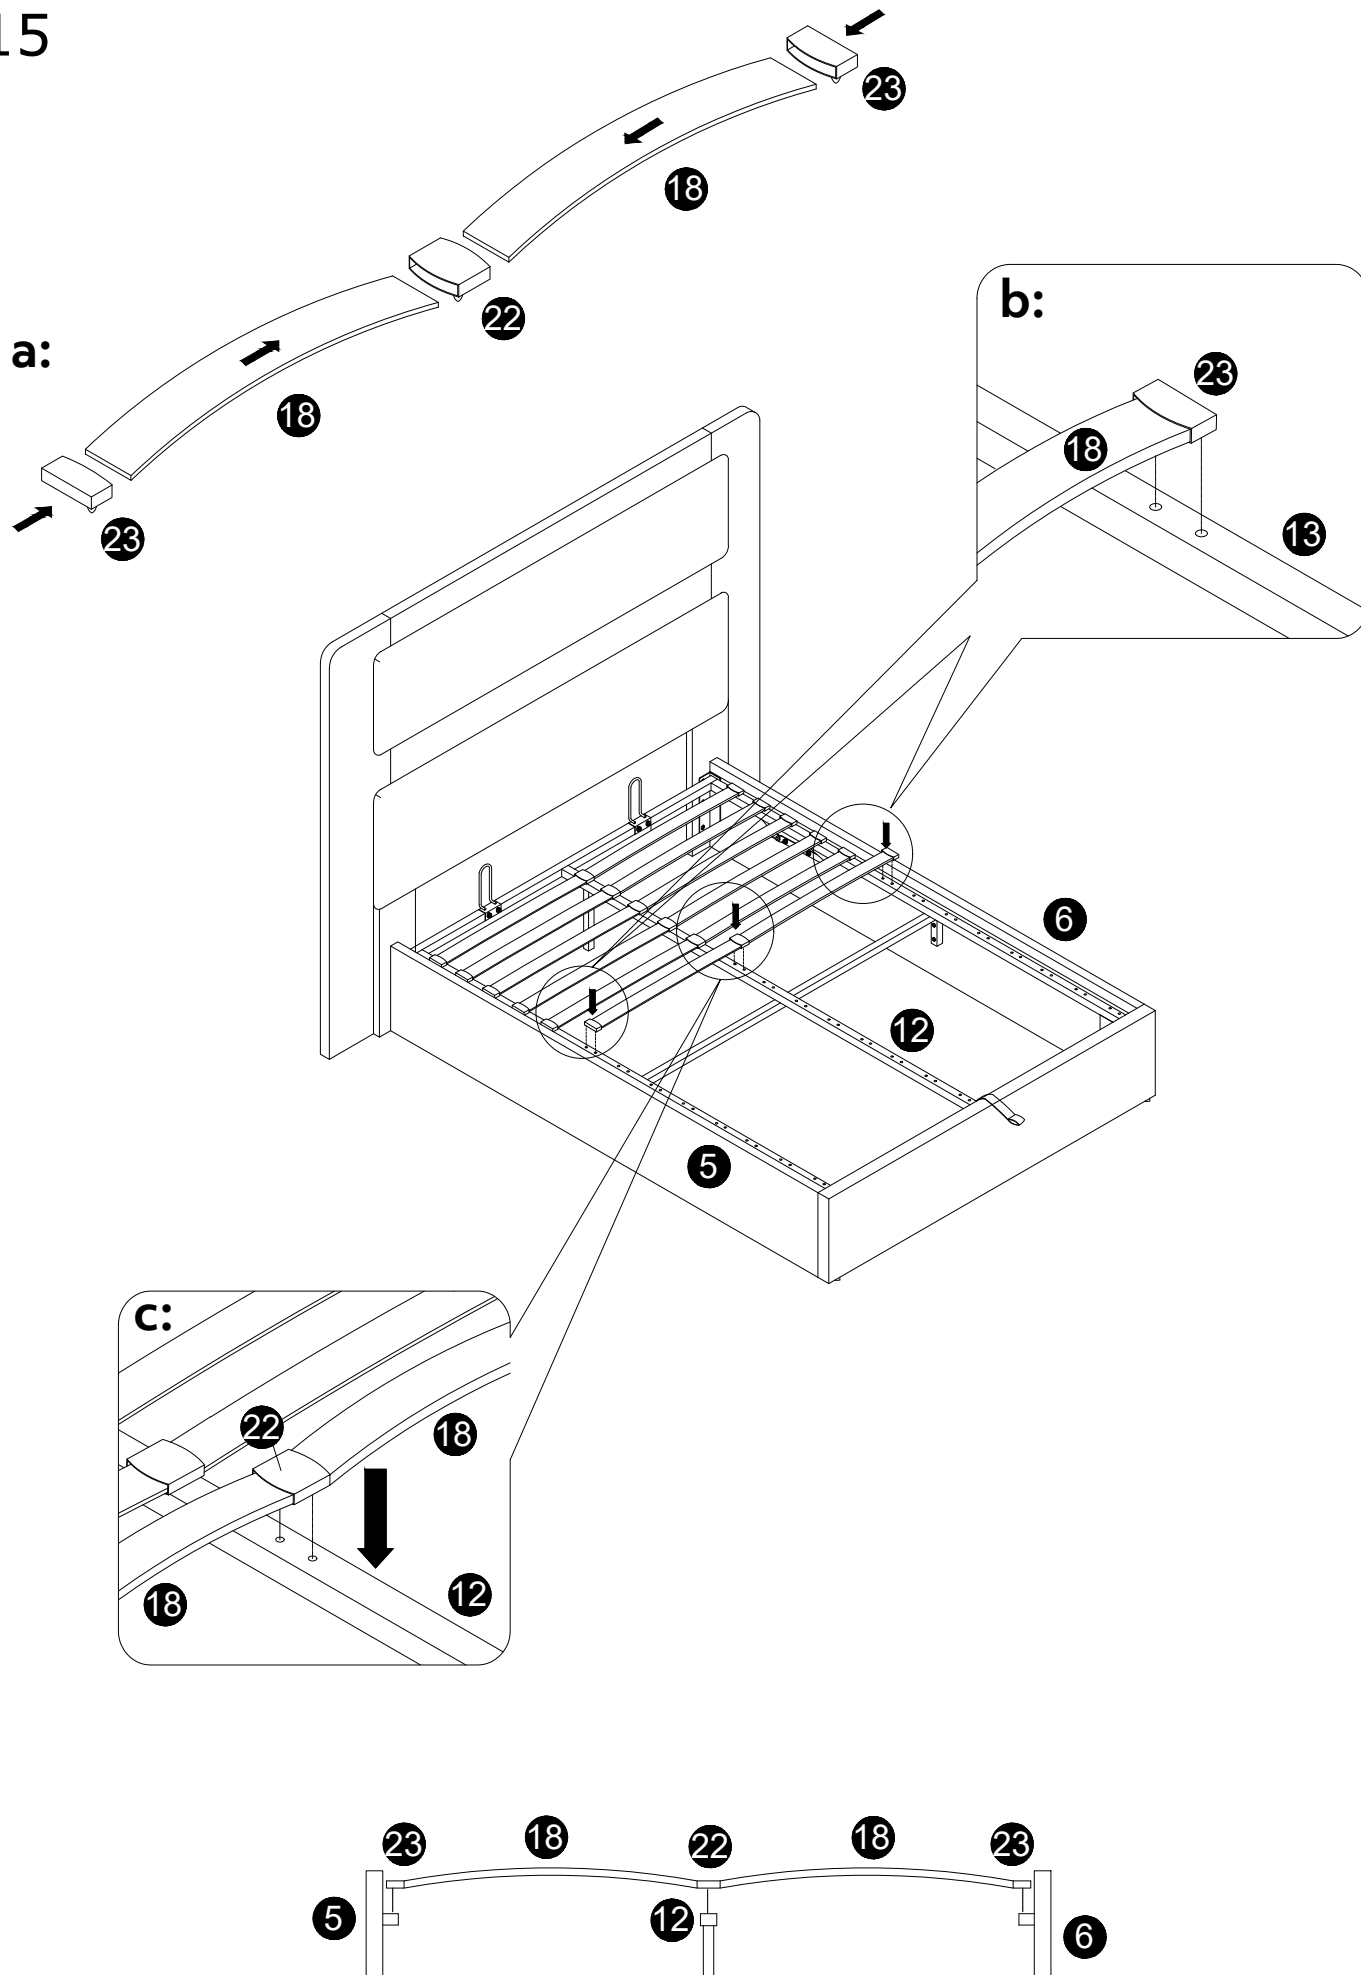
15



Slats to arch upwards



16

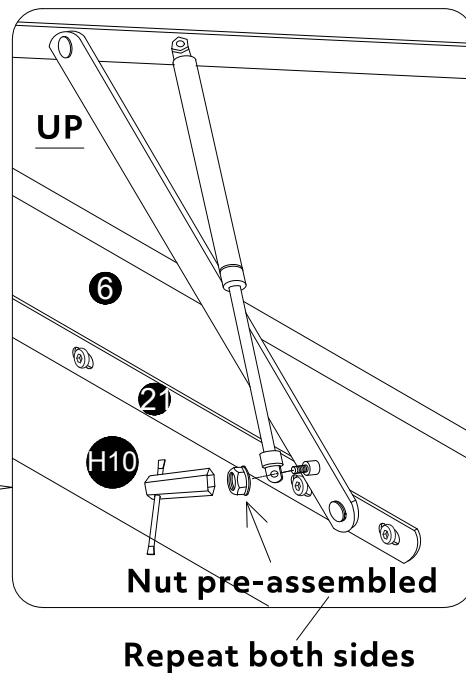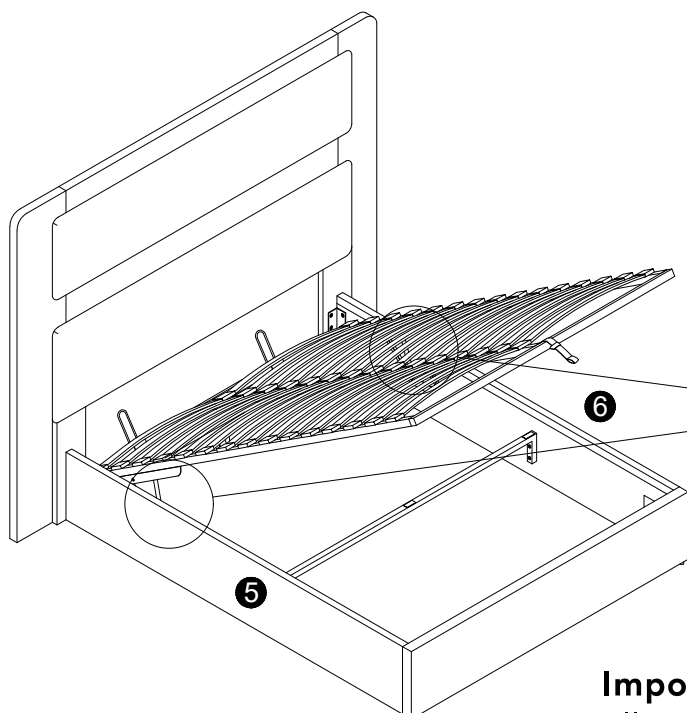**Warning: Two people required.
Frame to be fully supported at all times!**



Important: Before proceeding, check and ensure all screws and fixings are fully tightened.

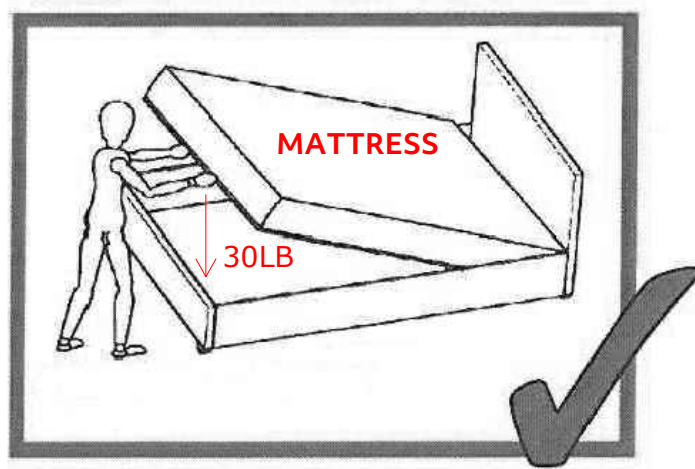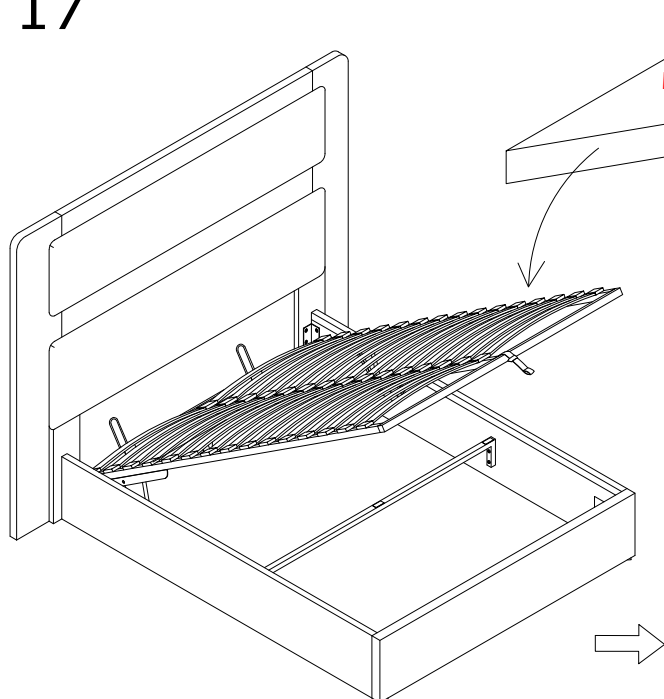17



Place the mattress on frame & Carefully lower the frame down.
Keep objects/body part & children away from moving parts.