


PLASTIC GARDEN SHED 8x8FT

If you have any questions about the product, please feel free to contact us.

E-Mail: Patiofurnitureserviceteam@outlook.com

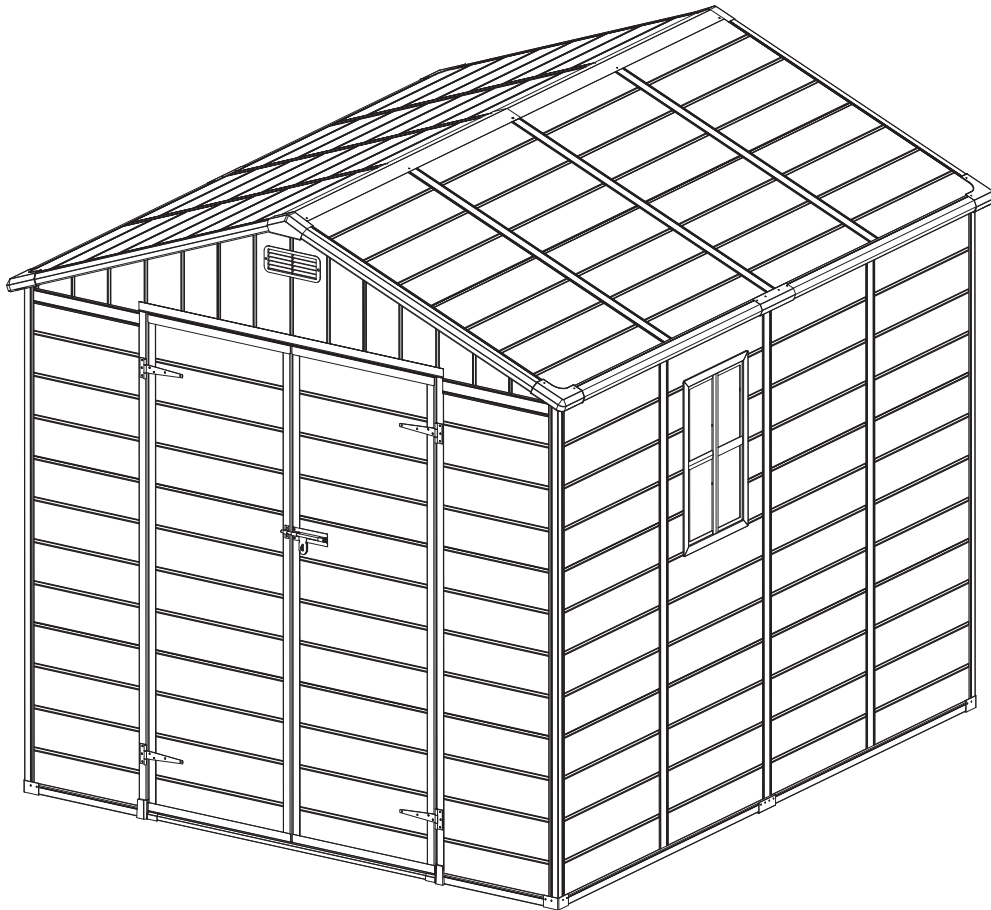

After-sales mailbox:
Patiofurnitureserviceteam@outlook.com

NOTICE

Please keep these instructions for future reference.

Dear Customer

● Thank you for your purchase. When you receive the product, please make sure that all the parts are intact. Then follow the entire installation instructions to install!

● **When installing, please be careful not to tighten the screws immediately! You need to make sure that all the screws are secured to 80%, then tighten them!**

● In order to protect the rattan from harm, and the screw hole from grind, do not use the electric drill, please use the manual screwdriver in the hardware package!

A . The outer box is damaged

B . The product is damaged / bent / cracked while you open the box

C . The parts / accessories / assembly tools are missing





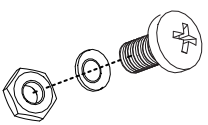
D . The instructions are not clear and can not be referred

E . The product has functional problems





































F . Other aspects that you are not satisfied with

Please feel free to contact us for help. Our after-sales team service (Patiofurnitureser-viceteam@outlook.com) will reply within 24 hours and will do our best to resolve the problem for you.





































HARDWARE LIST

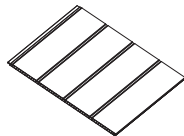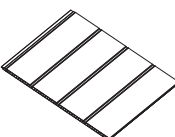Z410	Z420	ZW413	Z425	RF7
				
203 pc	164 pc	100 pc	4 pc	4 pc









PART LIST

QF1-2 	QF1-1 	QP6 	QP1 	QP3 	DP4 
4 pc	12 pc	4 pc	2 pc	2 pc	1 pc
QP8 	SG19 	SG6 	SG7-1 	SG7-2 	QW1-2 
6 pc	3 pc	4 pc	1 pc	1 pc	2 pc
QW1-3 	QW1-1 	QW2-2 	QW2-1 	QW3-1 	QW3-2 
2 pc	20 pc	2 pc	4 pc	4 pc	2 pc
QT1-1 	QT1-2 	QT1-3 	QT1-4 	QT1-5 	QT1-6 
1 pc	1 pc	1 pc	1 pc	1 pc	1 pc
QT1-7 	QT1-8 	QT1-9 	QT1-10 	DP5 	PS1 
1 pc	1 pc	1 pc	1 pc	4 pc	6 pc
PPA1 	QAP1 	PPA2 	QAP3 	QA3 	DA1L 
6 pc	2 pc	1 pc	2 pc	1 pc	1 pc

PART LIST

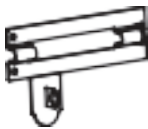
DA1R 	SS4 	SS3 	SS6 	PS5 	QS2 
1 pc	1 pc	1 pc	1 pc	2 pc	1 pc
BY 	SG27 	SG14 	SG10 	SG101 	SG102 
2 pc	2 pc	4 pc	2 pc	2 pc	2 pc
QR1-2 	QR1-1 	QP7 	QP4 	QAP2 	CS2-2 
8 pc	8 pc	4 pc	4 pc	6 pc	6 pc
CS4-1 	8-1 	8-2 	SG1 	SG2 	DD1-1 
3 pc	2 pc	2 pc	2 pc	4 pc	1 pc
DD1-2 	DD1-3 	DD1-4 	DD1-5 	DD1-6 	DA4 
1 pc	1 pc	1 pc	1 pc	1 pc	2 pc
DS1 	DA1 	DA2 	DA2R 	DA2L 	SG9 
2 pc	1 pc	1 pc	1 pc	1 pc	5 pc

PART LIST



SG8 	M01 	M03-6L 	M03-7 	M04 	Drill 
2 pc	4 pc	1 pc	1 pc	1 pc	1 pc
DC 	SG20 				
2 pc	2 pc				

1. Please ensure that all accessories are complete before starting the installation.
 2. Due to the variety of accessories, many accessories may be glued together, please check carefully
 3. If any accessories are missing or damaged, please contact the seller immediately.
- E-Mail: Patiofurniture Serviceteam@outlook.com




FLOOR ASSEMBLY

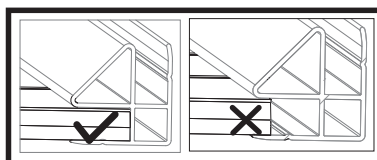



● Fully fit the panel inside the profile

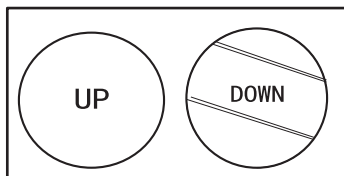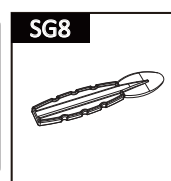

● The crease line of the floor must be underneath

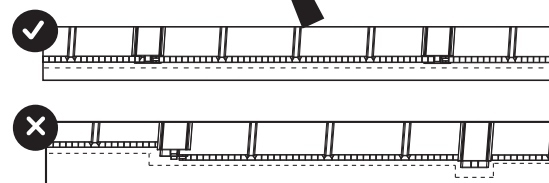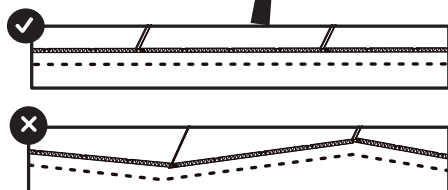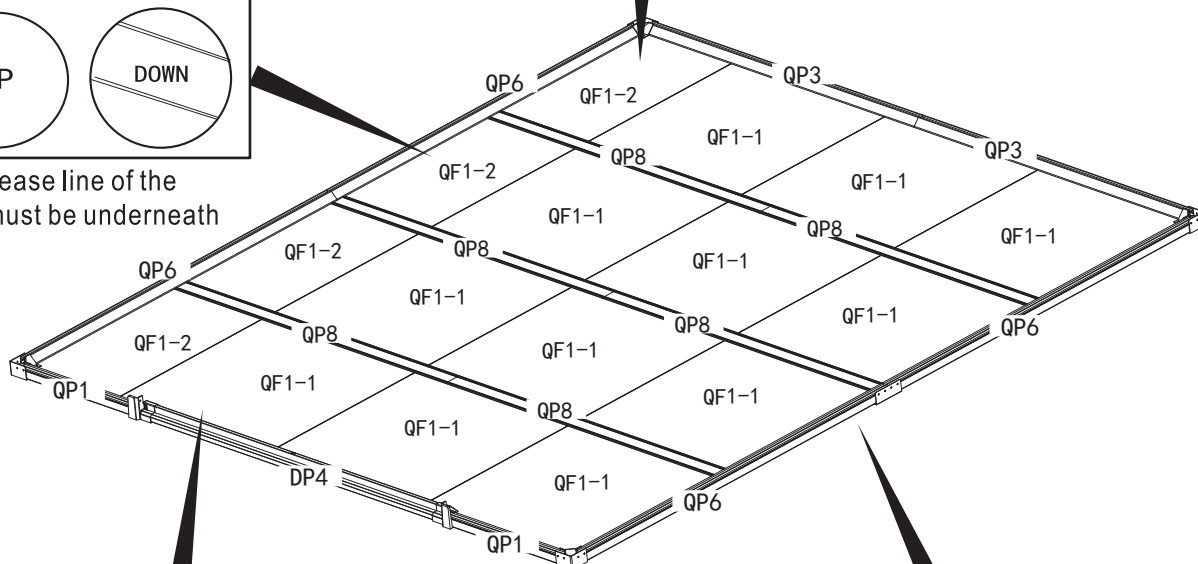


When installing the floor, when the textured face up to have the floor installed in a flat state.

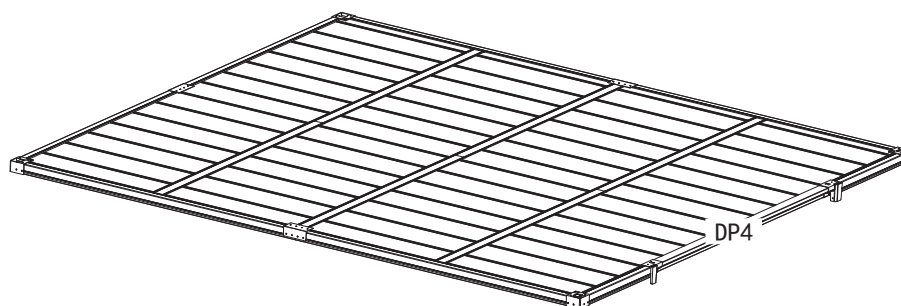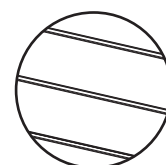

STEP 1


1-1

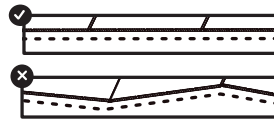

SG8




QF1-1

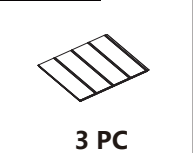


3 PC

QF1-2

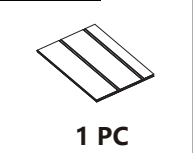


1 PC

QP3

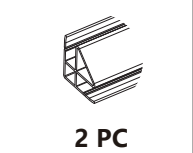


2 PC

SG6

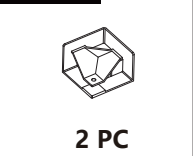

2 PC

1-2




- Fully fit the panel inside the profile

STEP 2

2-1




QP6

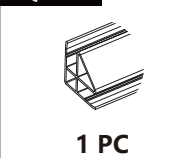


1 PC

QP8

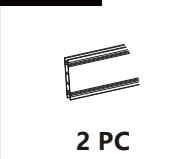

2 PC


2-2




- Fully fit the panel inside the profile



2-3




- Fully fit the panel inside the profile

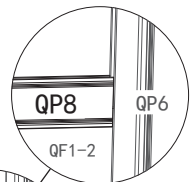


STEP 3

Pay attention to the direction of the board



3-1

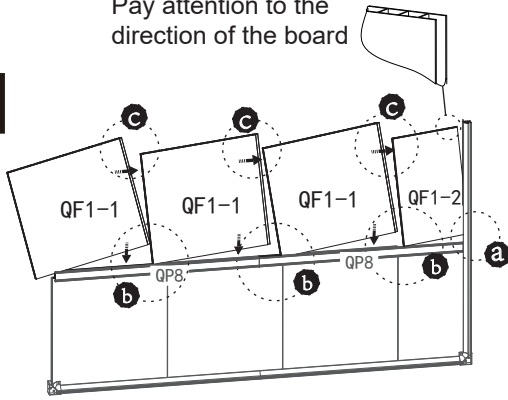


3-2

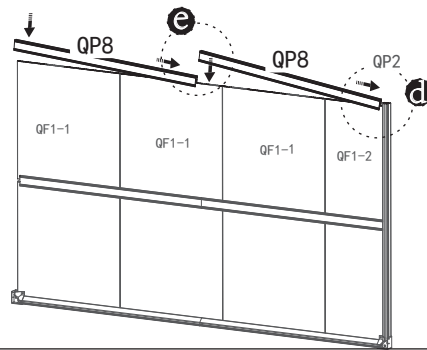


3-3

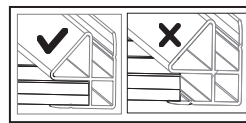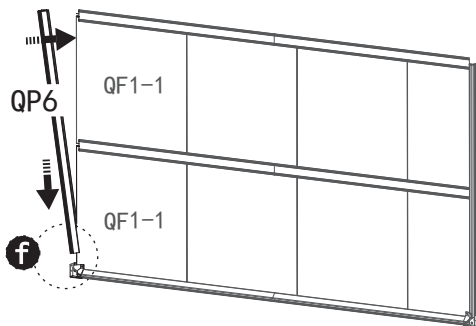


• Fully fit the panel inside the profile

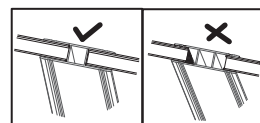

• Fully fit the panel inside the profile

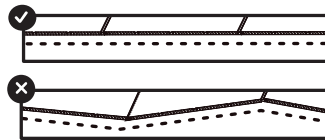


QF1-1



3 PC

QF1-2



1 PC

QP8




2 PC

QP6




1 PC

SG8


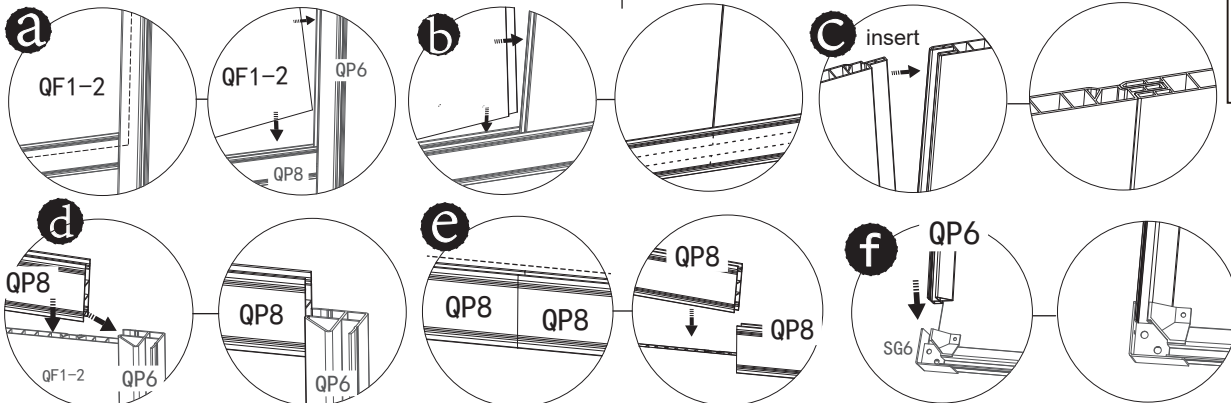


3-4

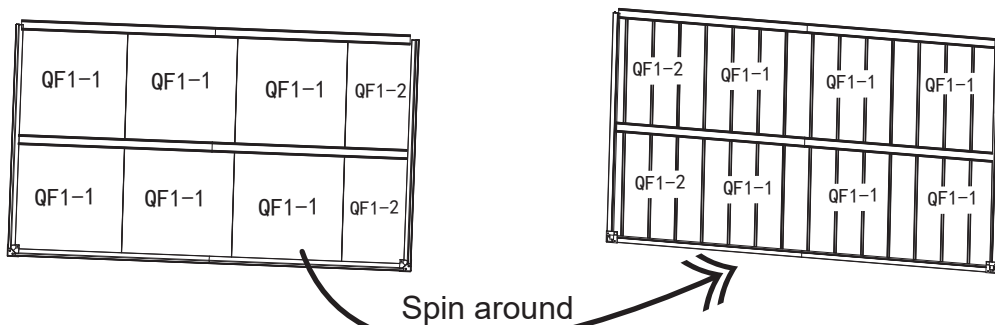


3-5

$ab=cd$

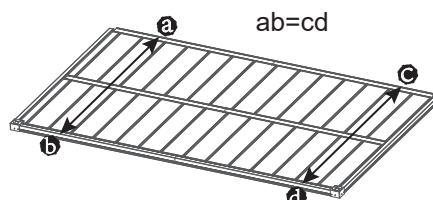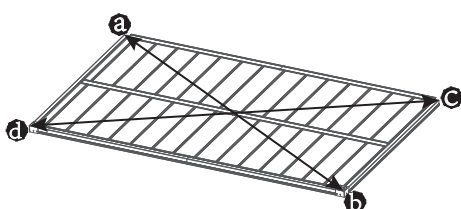


8

The panel texture should be aligned.

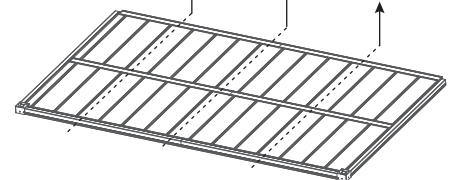

STEP 4

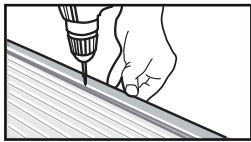


Screw along the marked lines in profile

Caution:
Please use Drill to predrill a hole at depth 1mm before screw.



SG19



1 PC

Z410




12 PC

Z420




16 PC


4-1

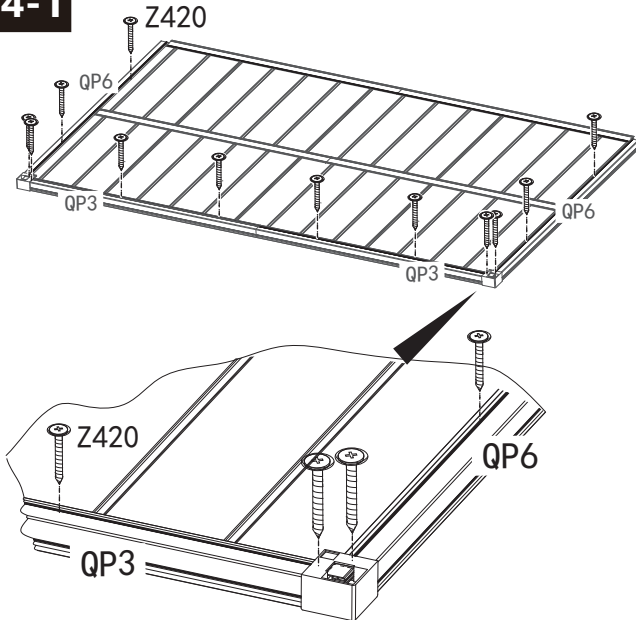


4-2

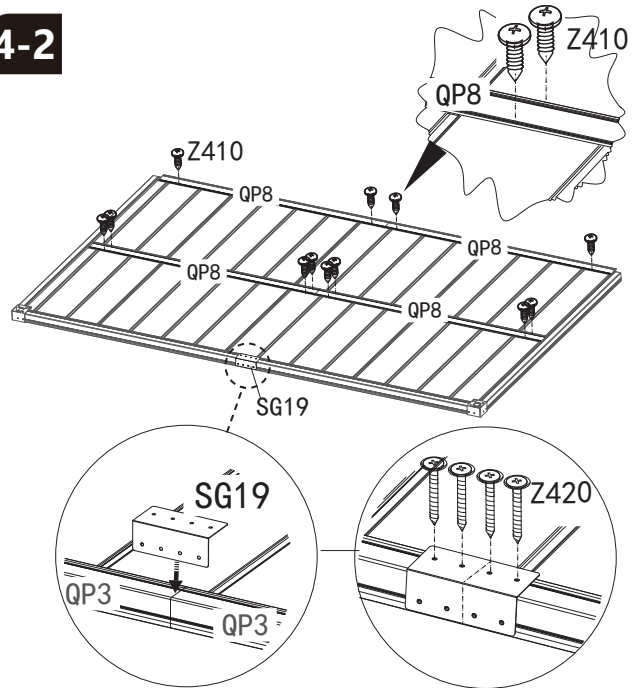


STEP 5

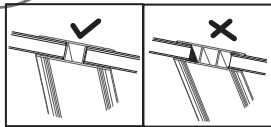






● Fully fit the panel inside the profile

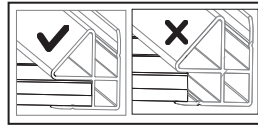


● Fully fit the panel inside the profile

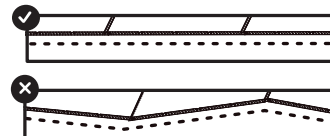





5-1

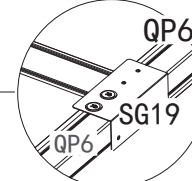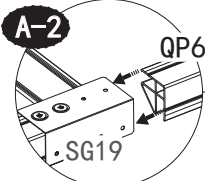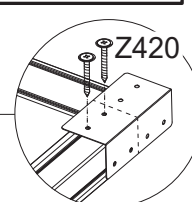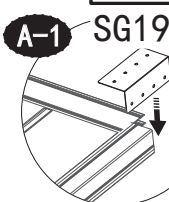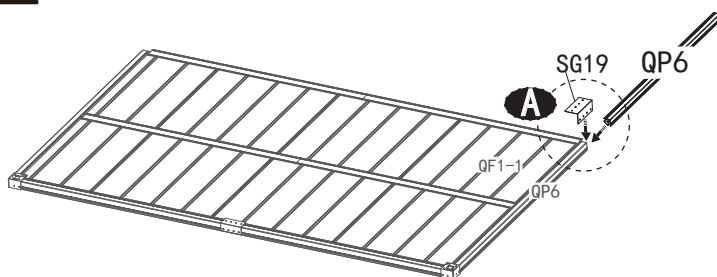

5-1

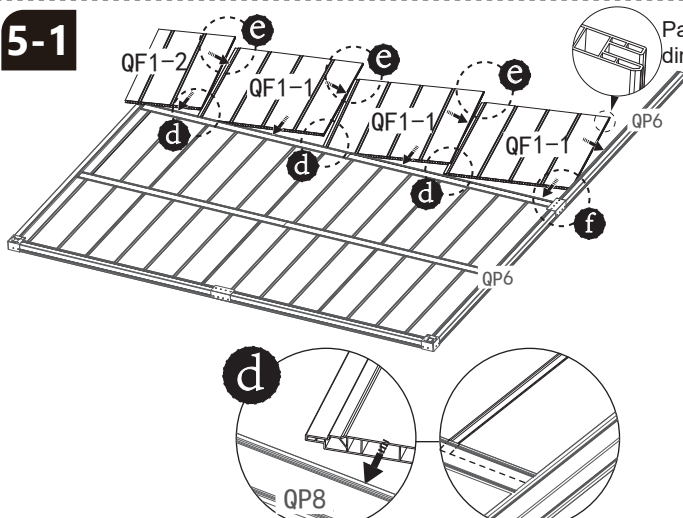

Pay attention to the direction of the board

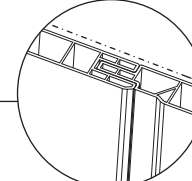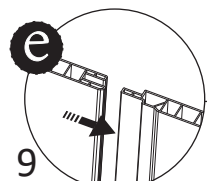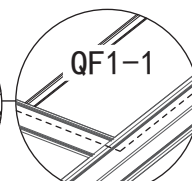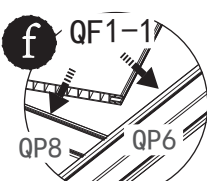


QP6



1 PC

SG19




1 PC

Z420



2 PC

QF1-1








3 PC

QF1-2




1 PC


STEP 6

QP6	QF1-2	QF1-1	QP8	SG8
				
1 PC	1 PC	3 PC	2 PC	


6-1

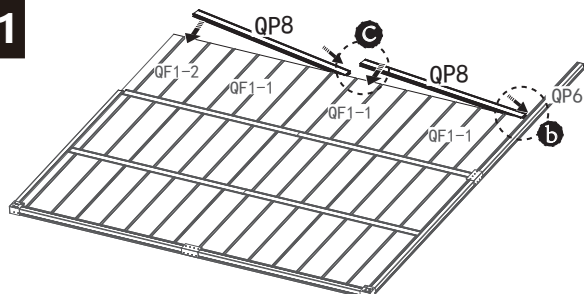


6-2

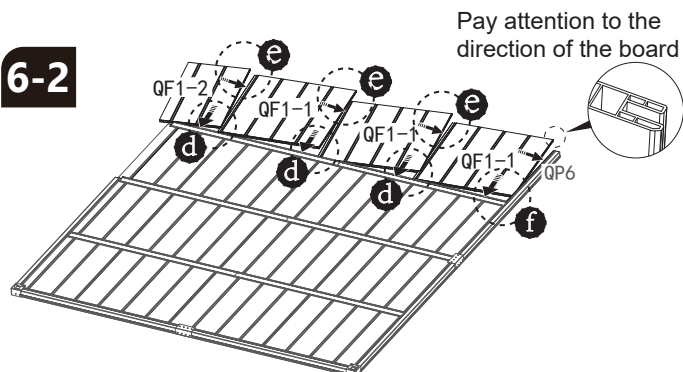


6-3

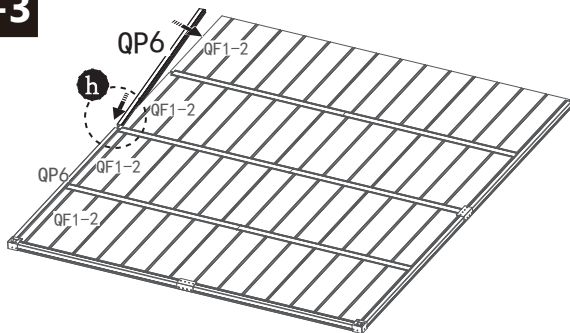




6-4

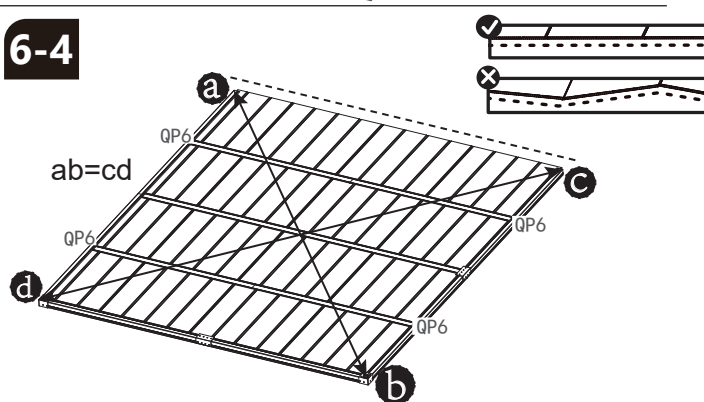


6-5

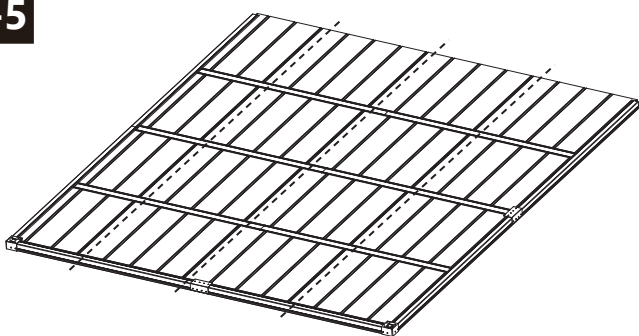

The panel texture should be aligned

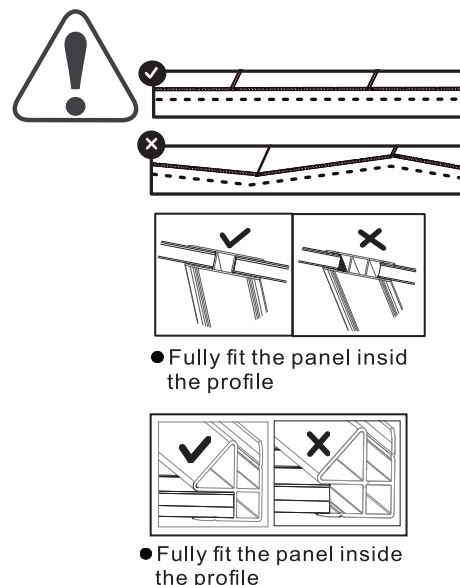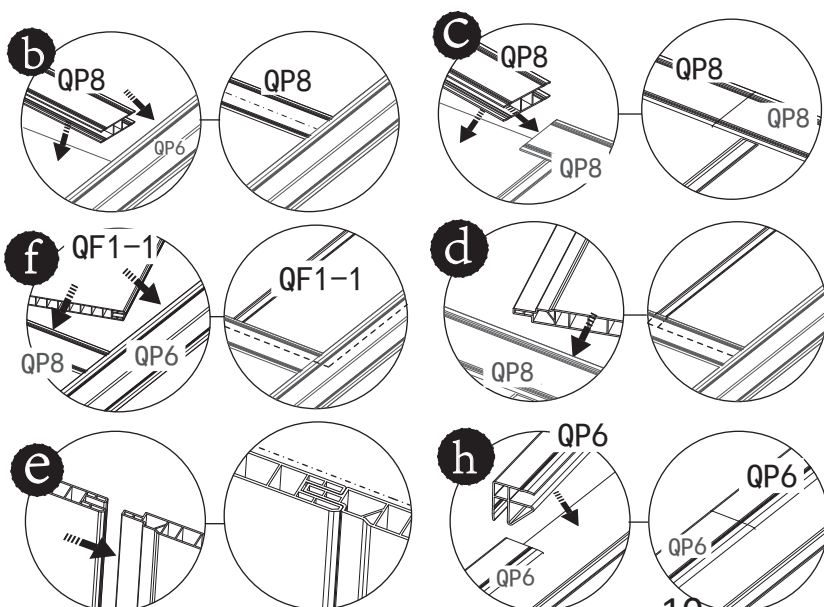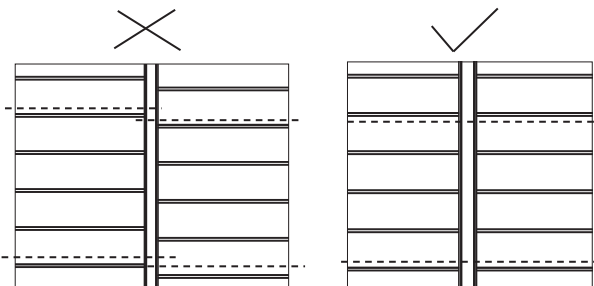

STEP 7





Screw along the marked lines in profile

Caution:
Please use Drill to predrill a hole at depth 1mm before screw.





SG19	Z410	Z420
1 PC	12 PC	10 PC

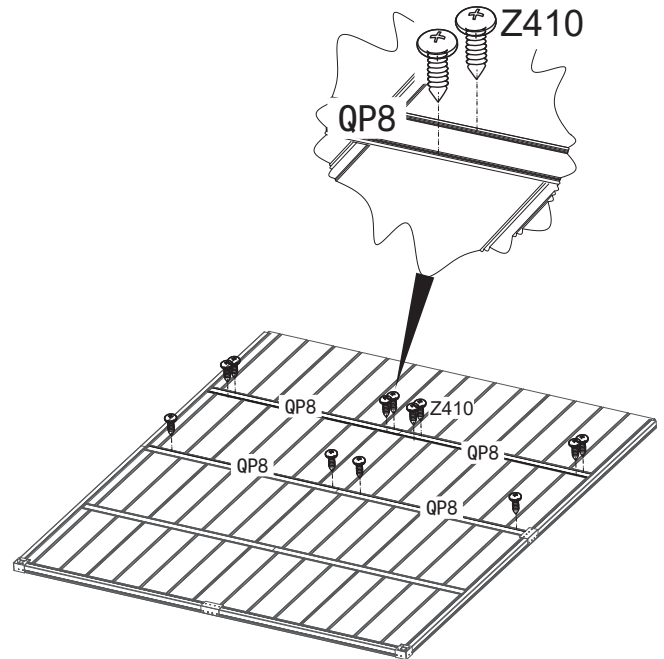
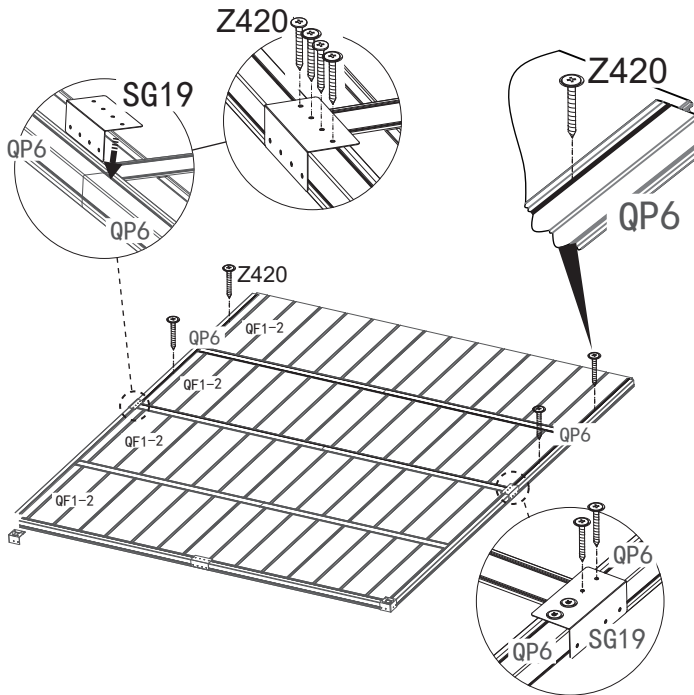


STEP 8

SG8	SG7-2	DP4	SG7-1	QP1	SG6
	1 PC	1 PC	1 PC	2 PC	2 PC

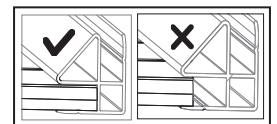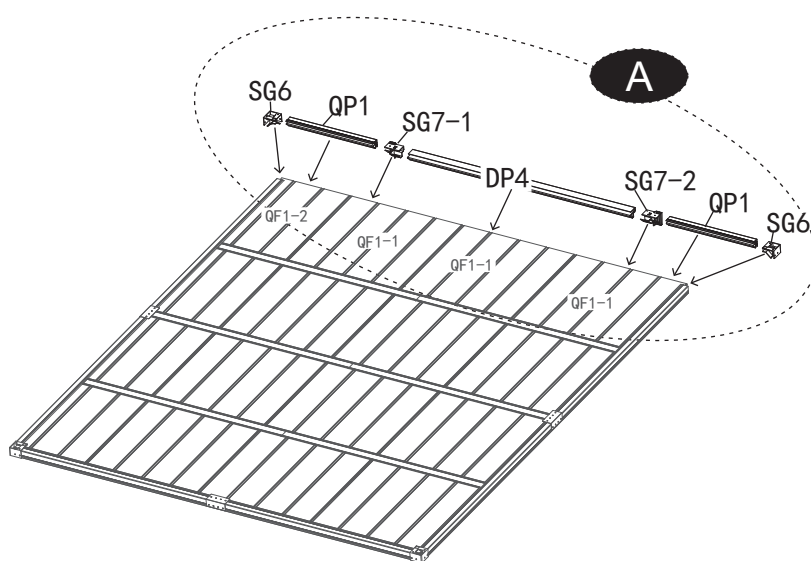


● Fully fit the panel inside the profile

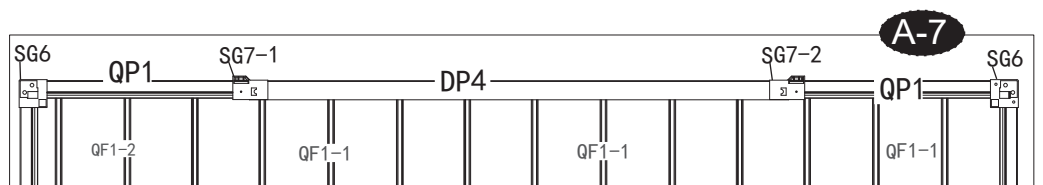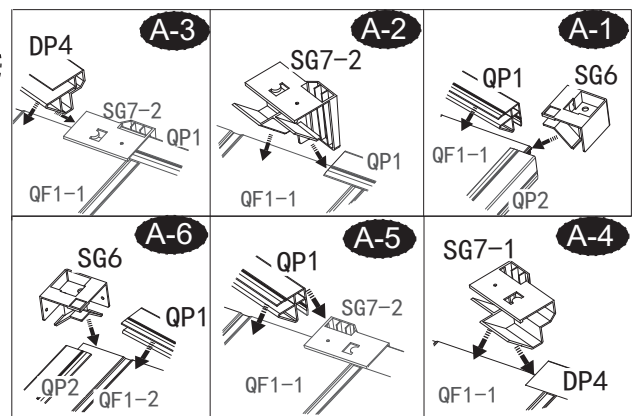


STEP 9


9-1

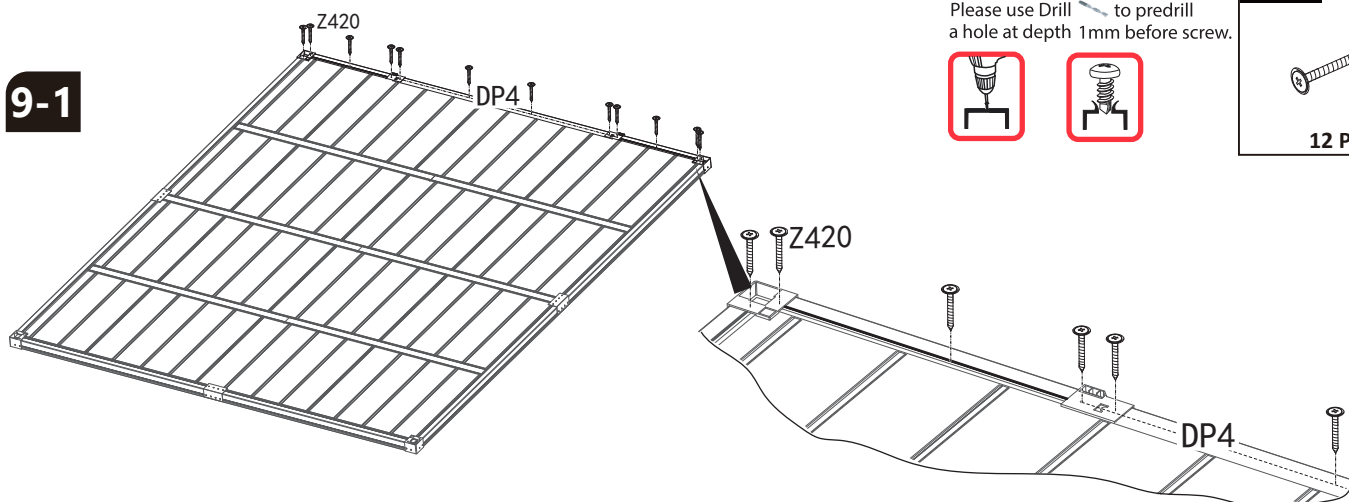


9-2

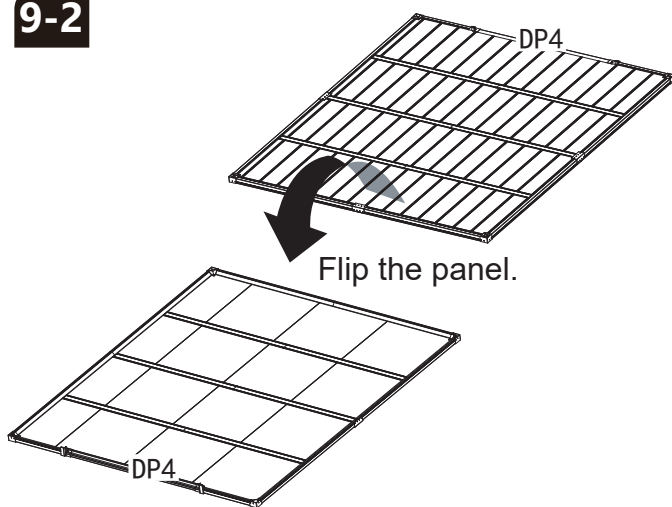

9-3

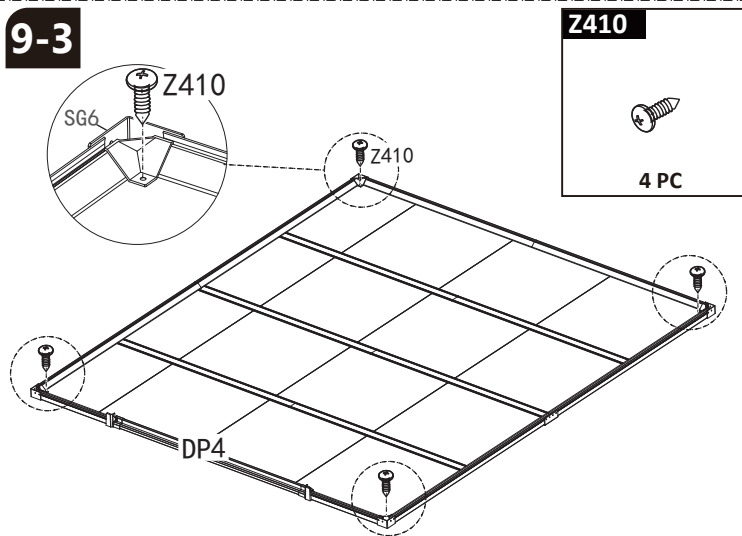








WALL ASSEMBLY

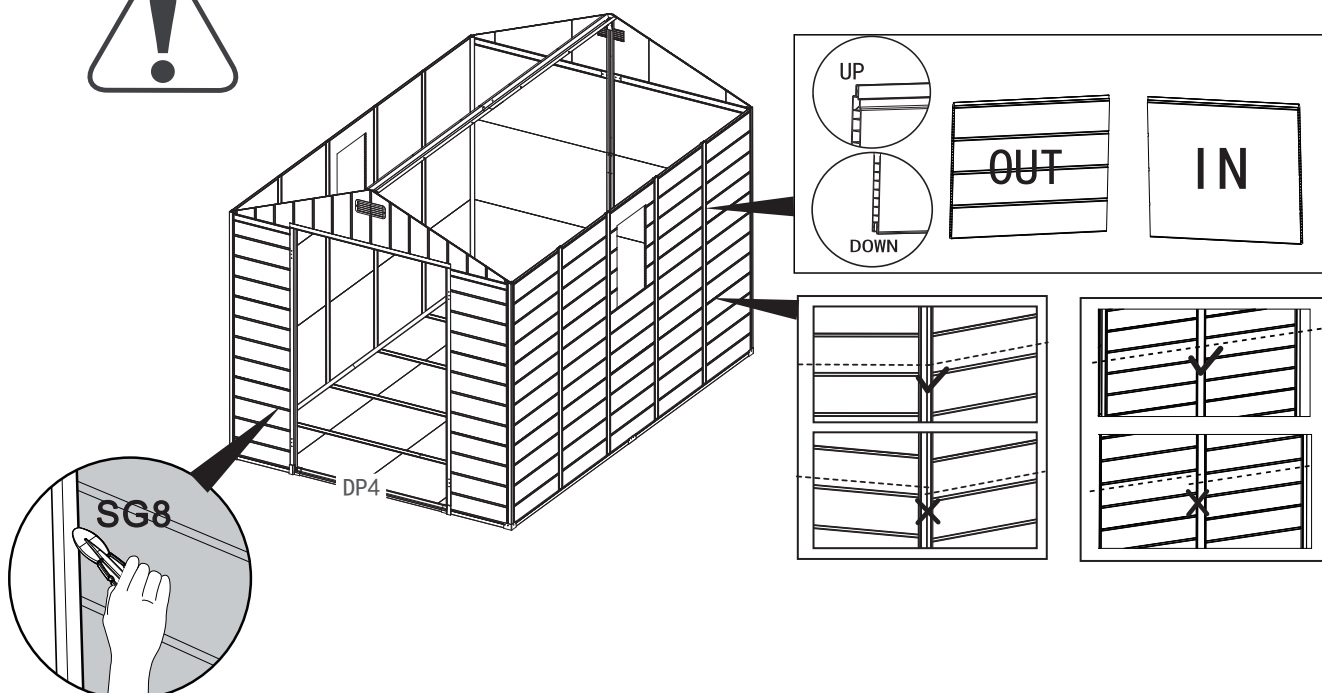


STEP 10

10-1

DP5	PPA2	PPA1	QW2-2	QW2-1	QW1-1
					
2 PC	1 PC	1 PC	2 PC	4 PC	6 PC

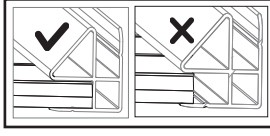


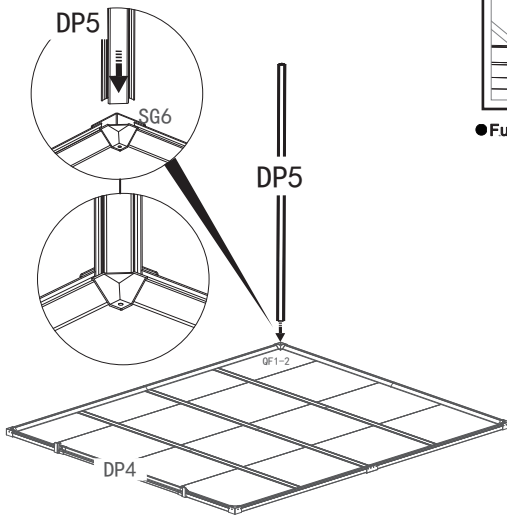
● Fully fit the panel inside the profile

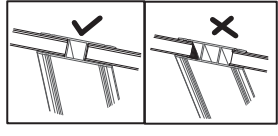


● Fully fit the panel inside the profile

SG8







10-2

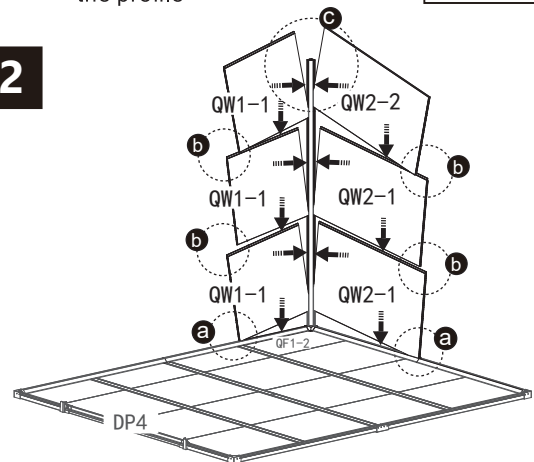



10-3

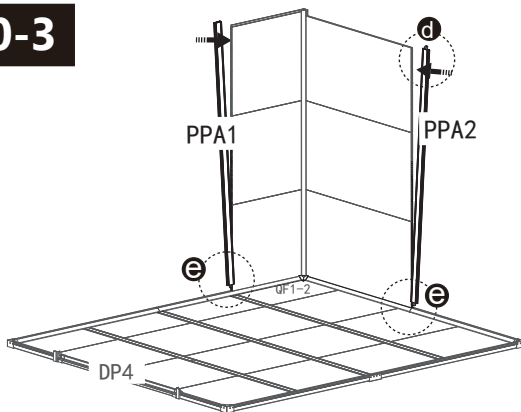


10-4

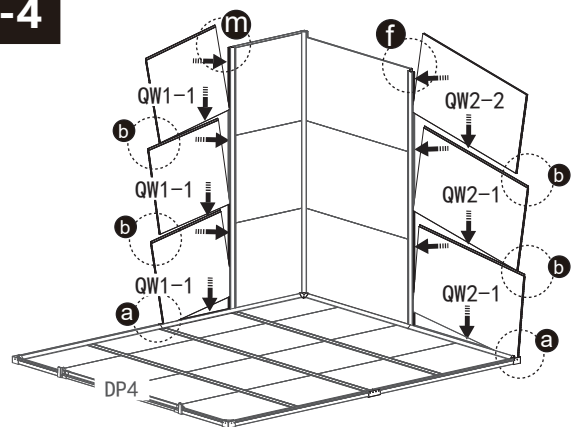


10-5

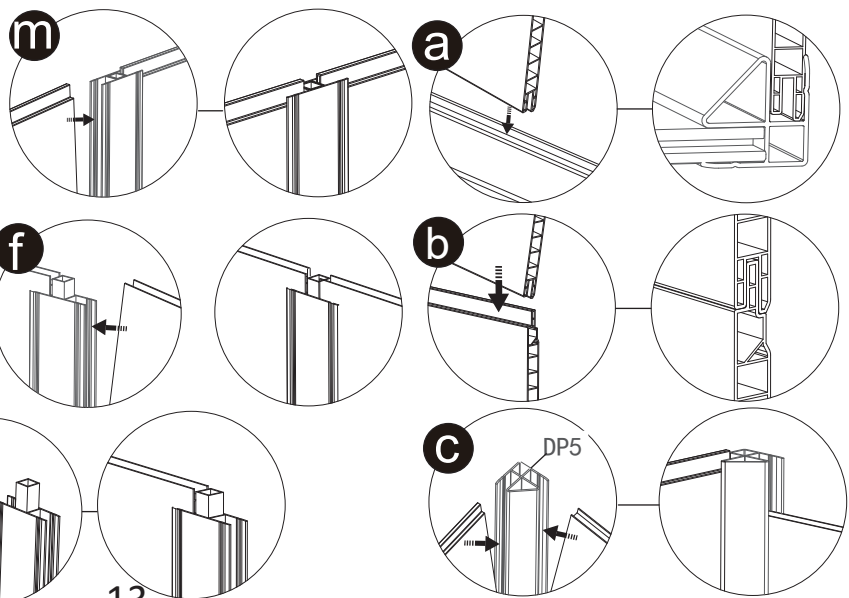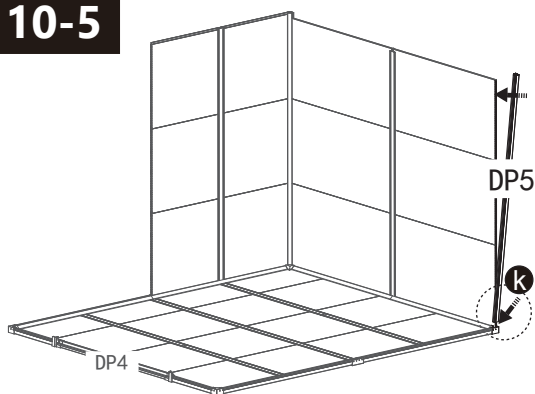

STEP 11

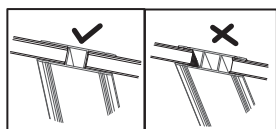


● Fully fit the panel inside the profile

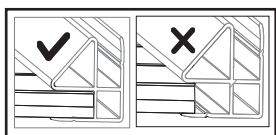


● Fully fit the panel inside the profile

PPA1 5 PC	QW1-2 2 PC	QW1-3 2 PC	QW1-1 8 PC
SG8 			


11-1

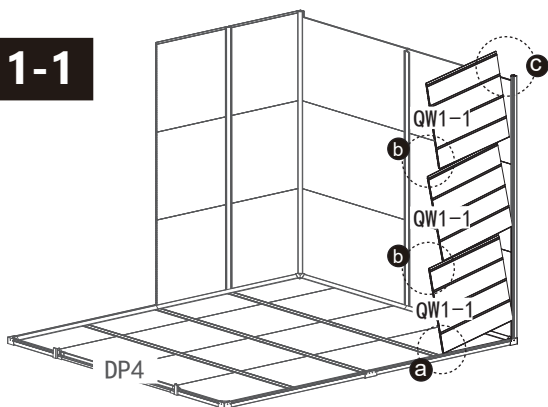


11-2

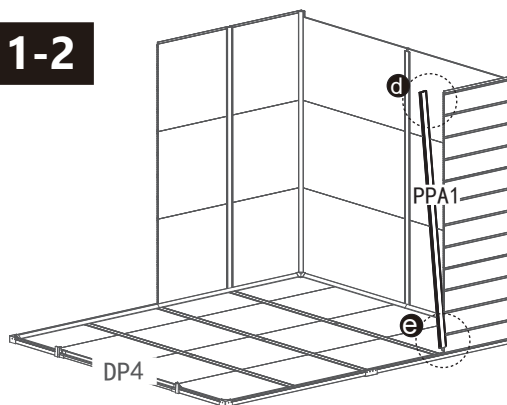


11-3

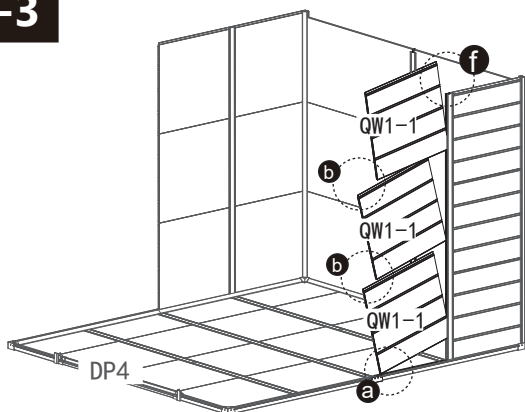



11-4

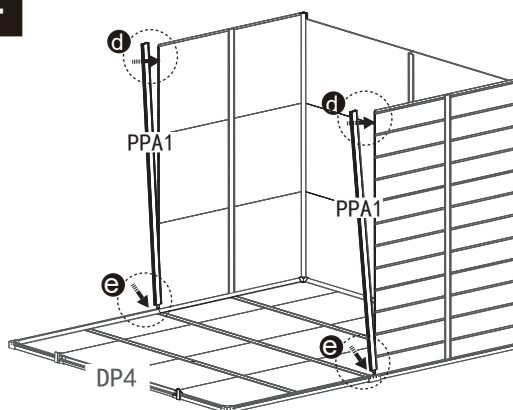


11-5

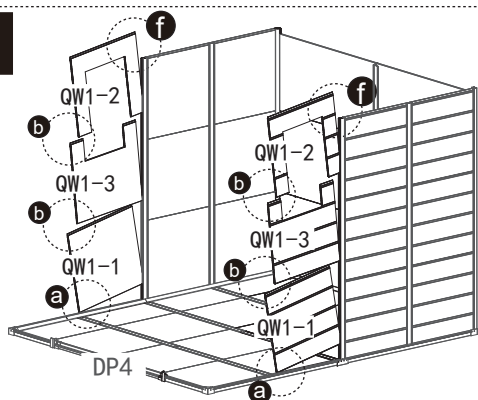

11-6

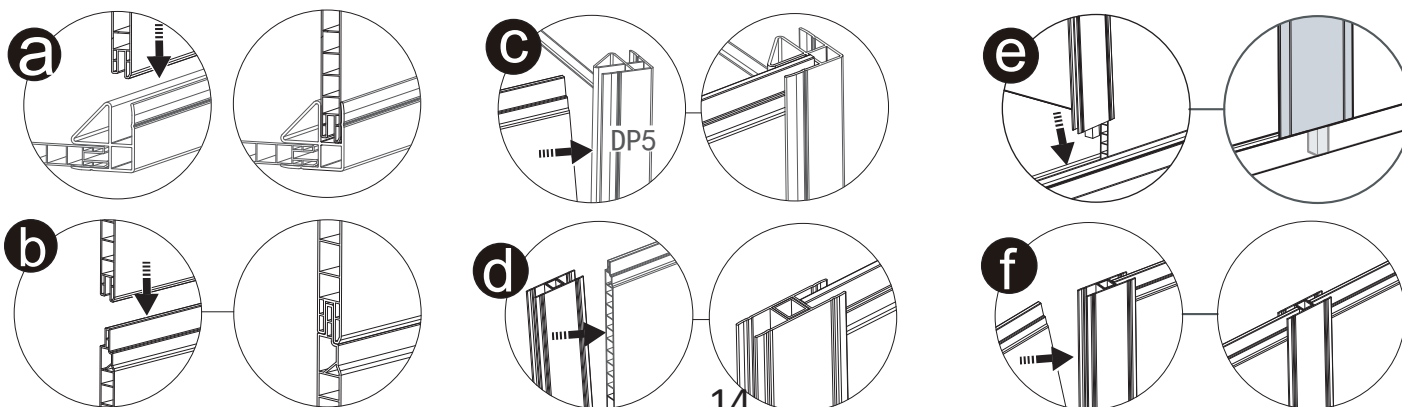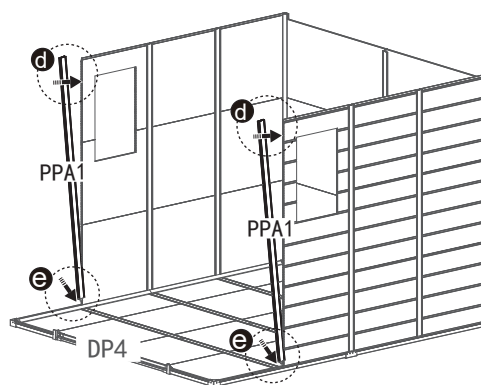


STEP 12

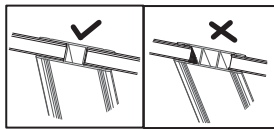


● Fully fit the panel inside the profile

SG8	QPA1	DP5	QW1-1
	2 PC	2 PC	6 PC


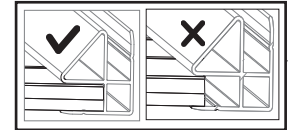


● Fully fit the panel inside the profile



12-1

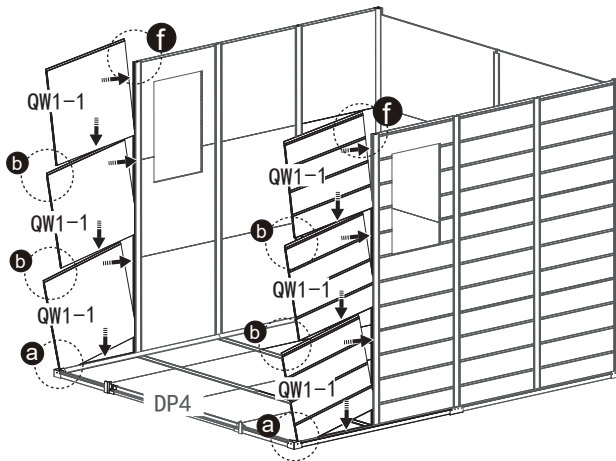




12-2

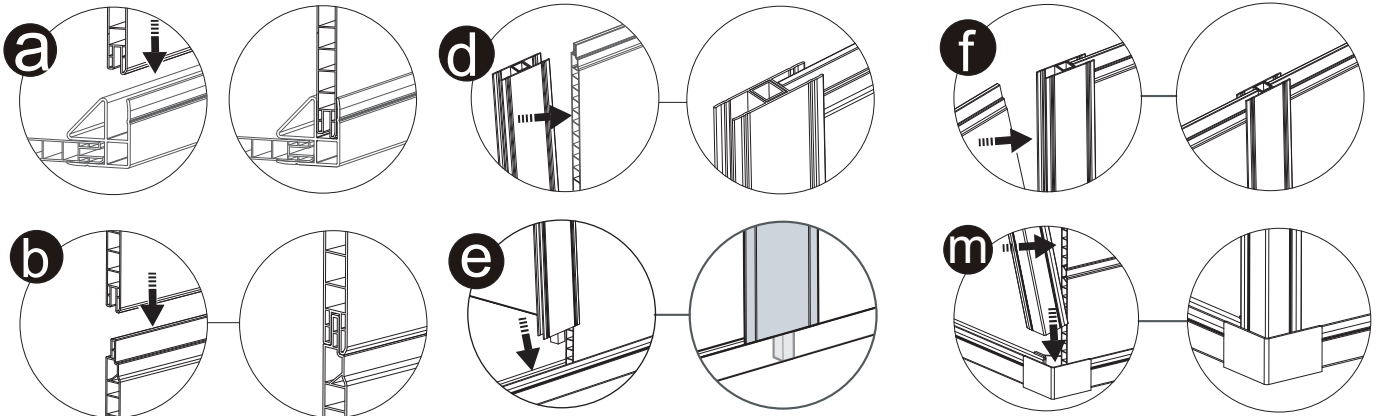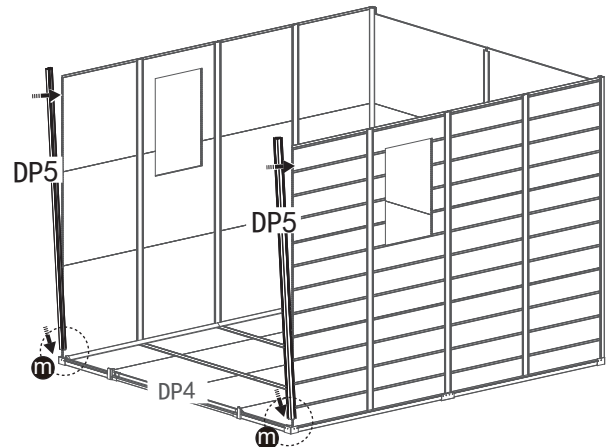

12-3

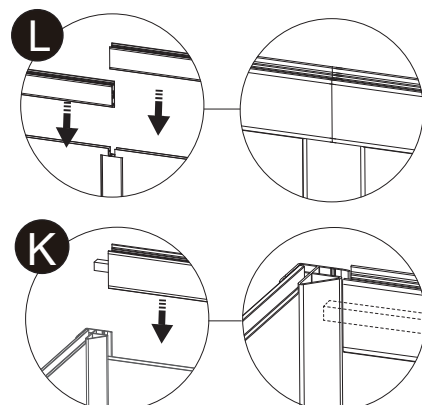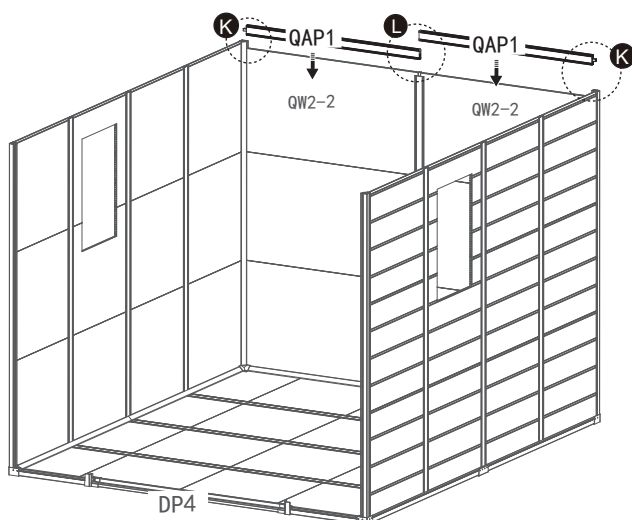


STEP 13

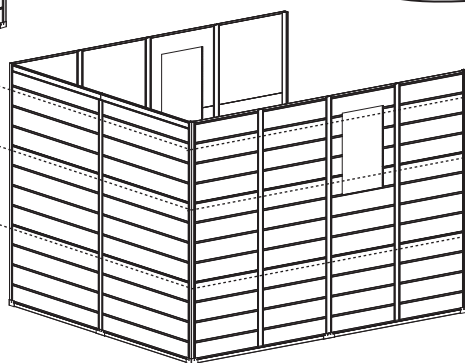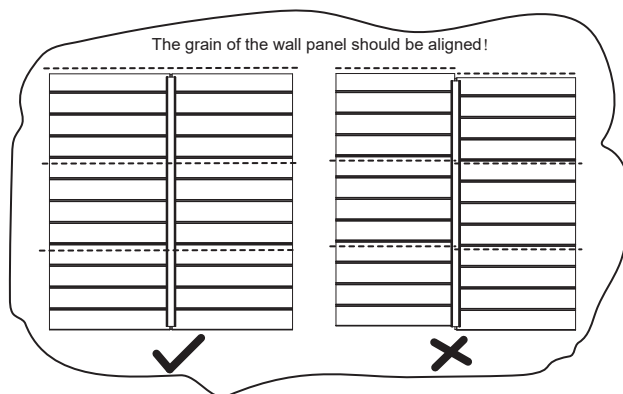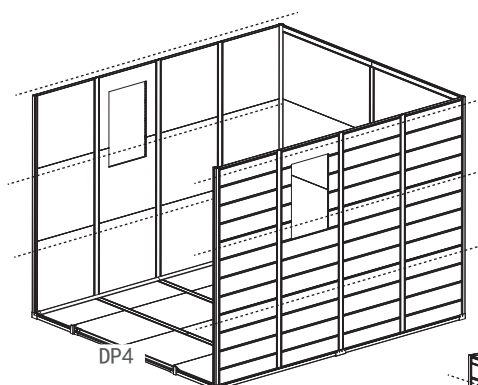


STEP 14

Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

14-1

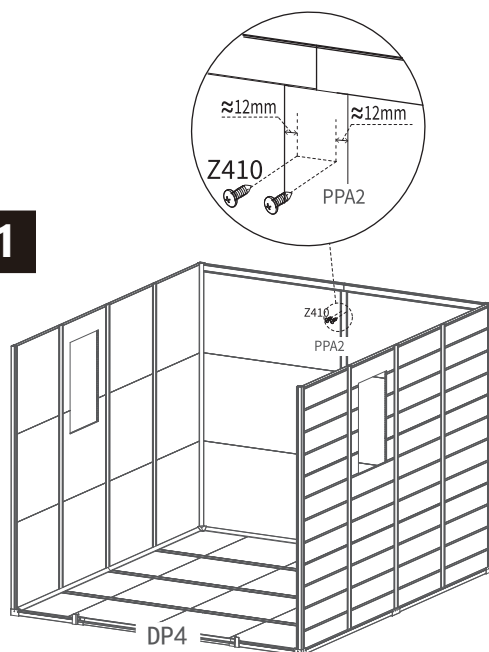

14-2

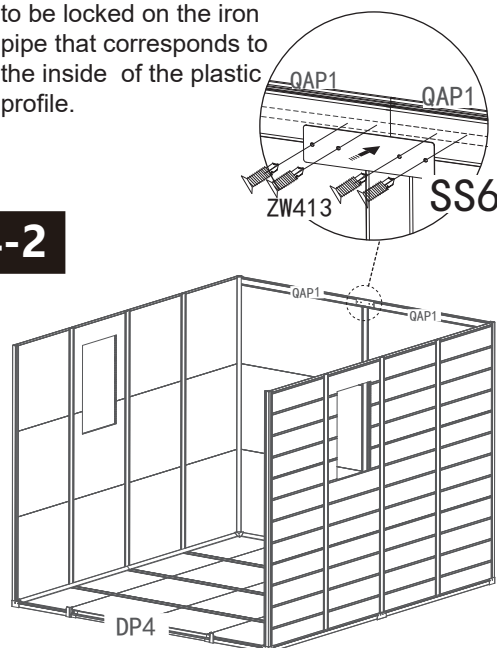

SS6



1 PC

ZW413






4 PC

Z410



14 PC

14-3

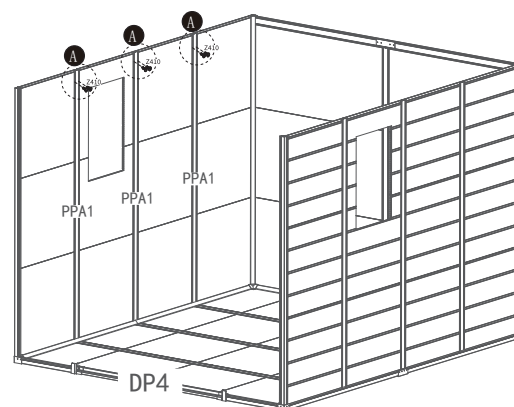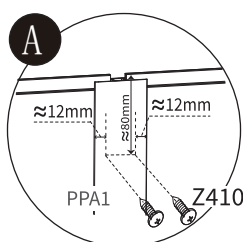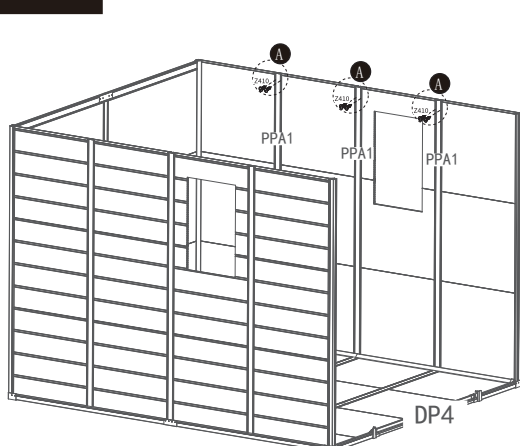

STEP 15

Caution:

Please use Drill to predrill a hole at depth 1mm before screw.




ZW413




2 PC

Z420





46 PC

15-1

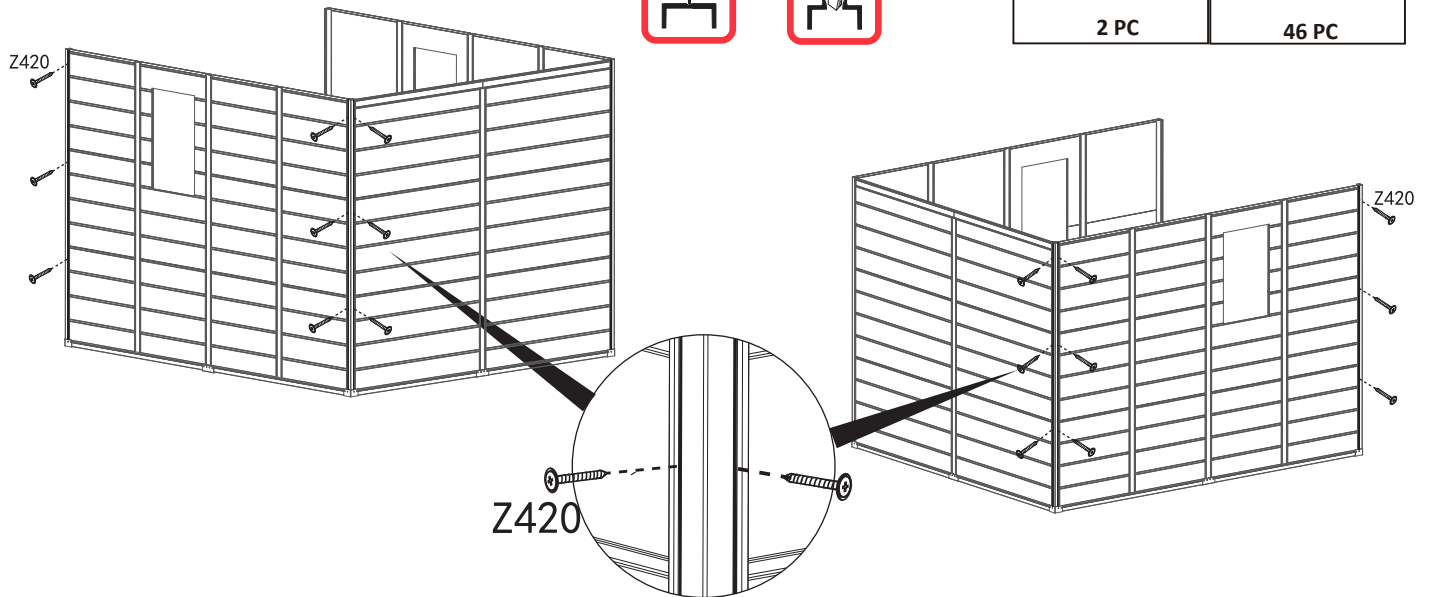


15-2

Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

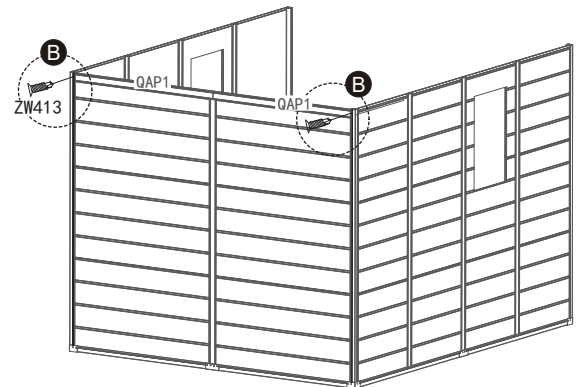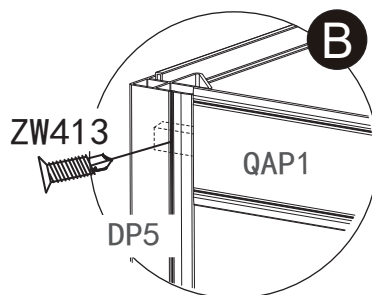


15-3

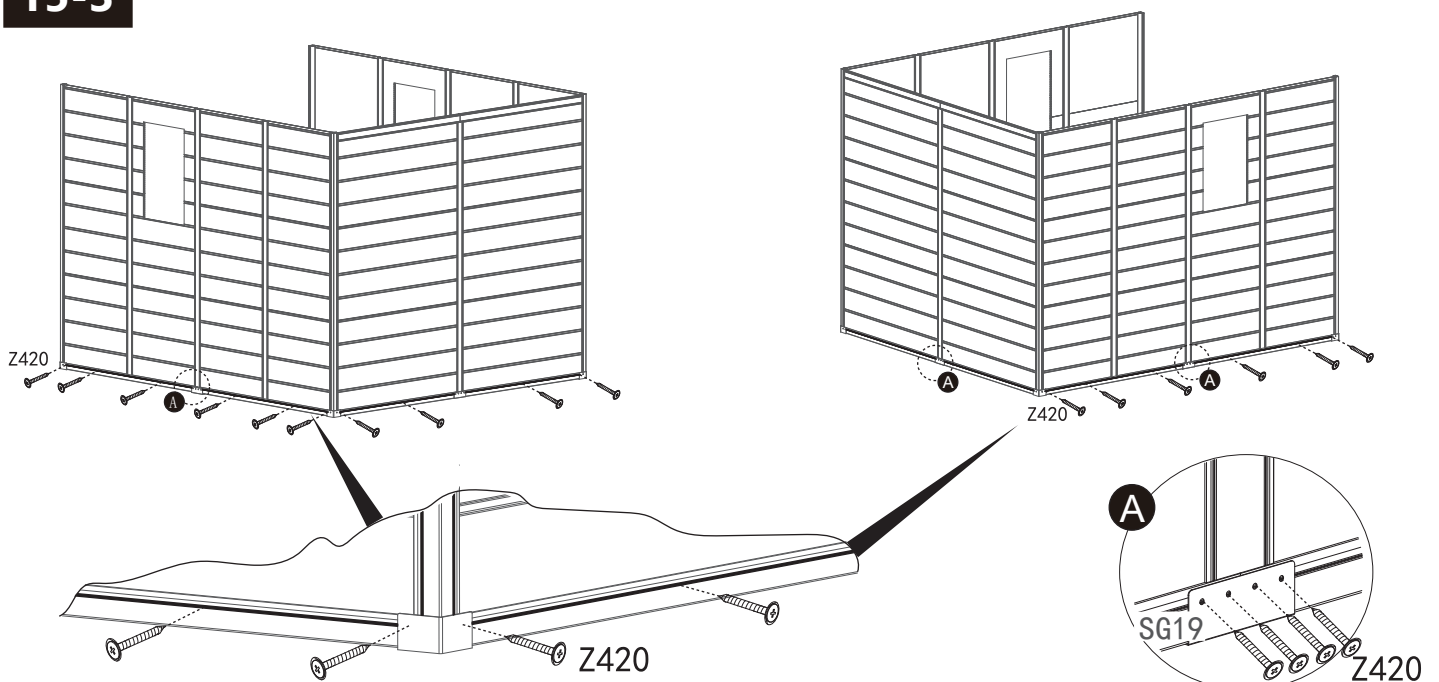


STEP 16


16-1

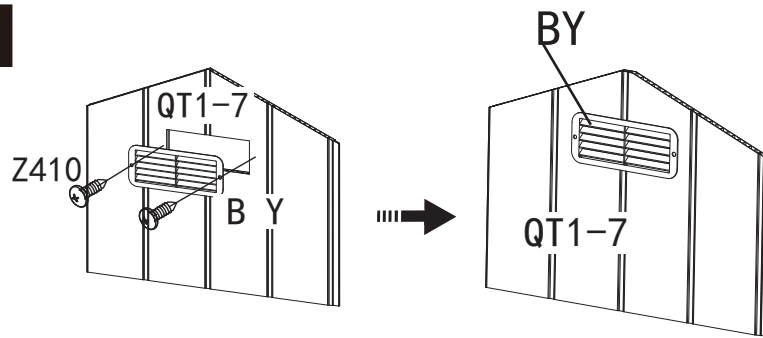


16-2

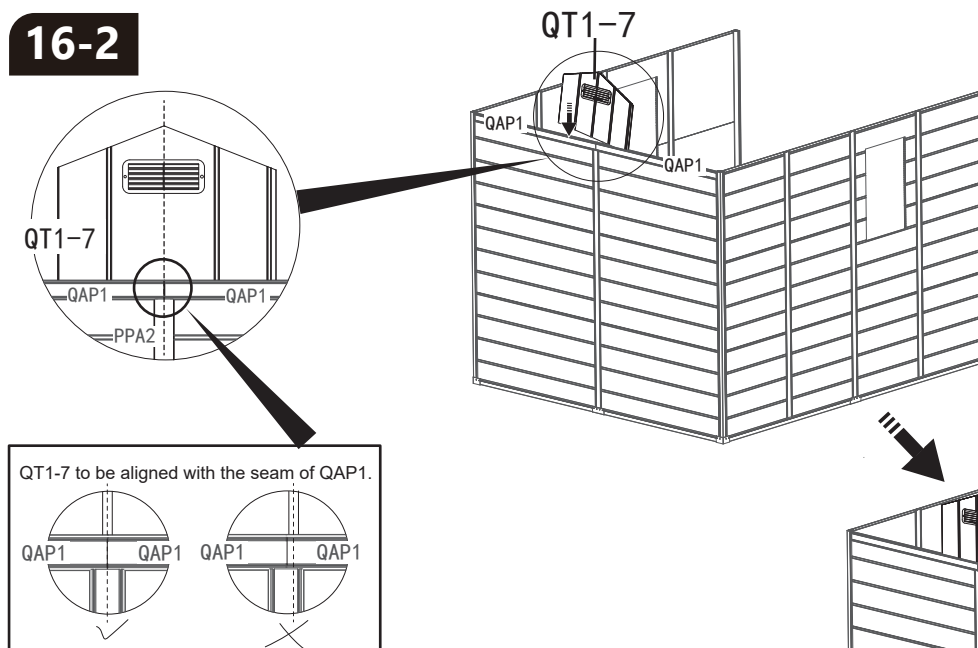

16-3

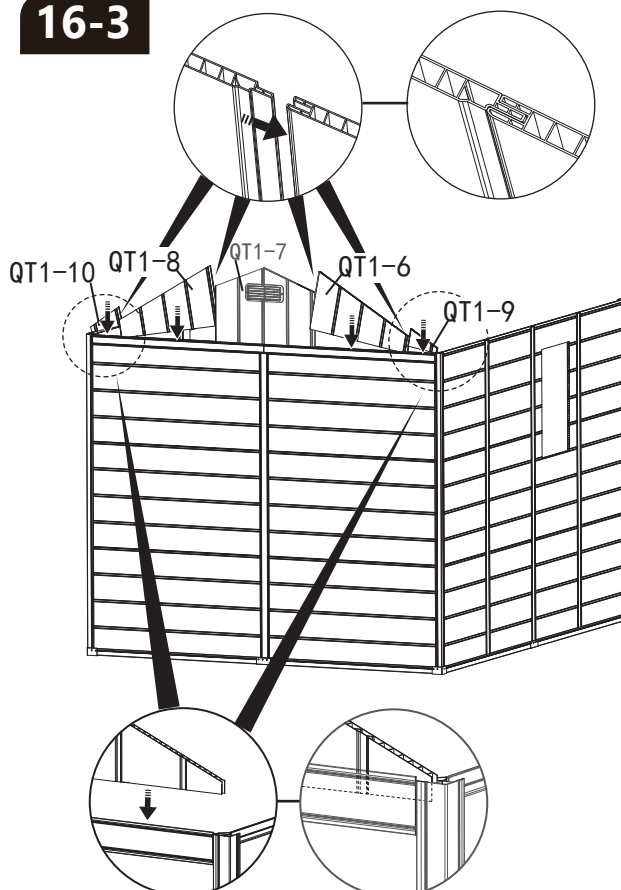


QT1-6 1 PC	QT1-7 1 PC
QT1-9 1 PC	B Y 1 PC
QT1-10 1 PC	Z410 2 PC
	QT1-8 1 PC

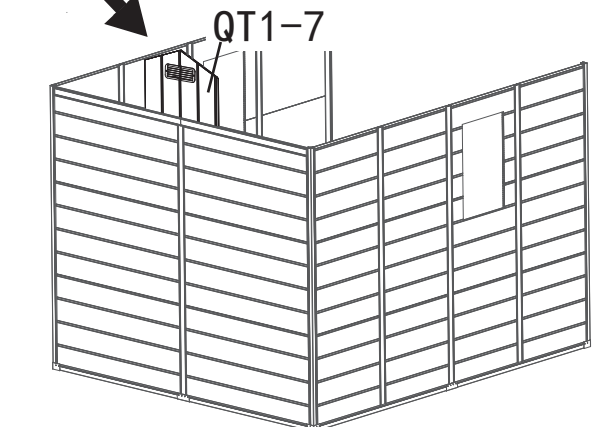

STEP 17

17-1

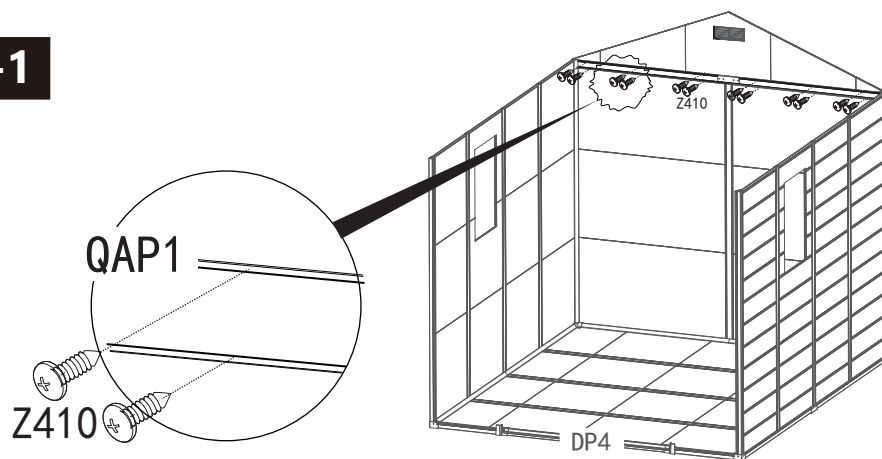

SG8



Z410



14 PC

QW3-2



2 PC

QW3-1



4 PC

DA1L



1 PC

DA1R




1 PC

QAP3




2 PC




17-2

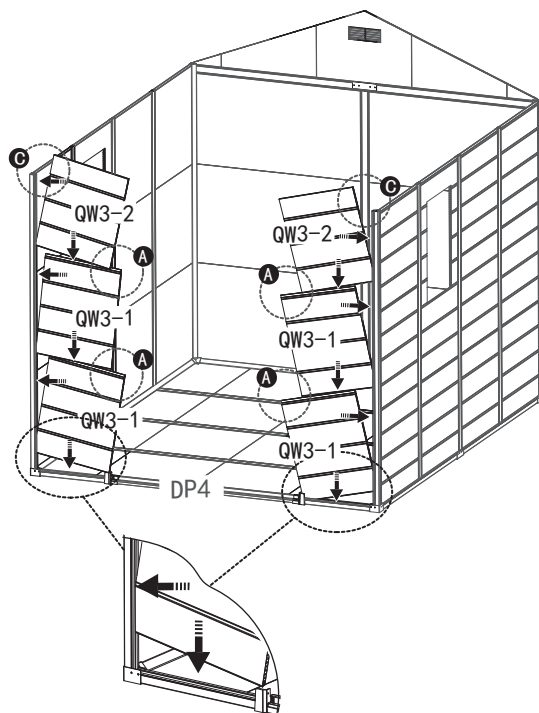

17-3





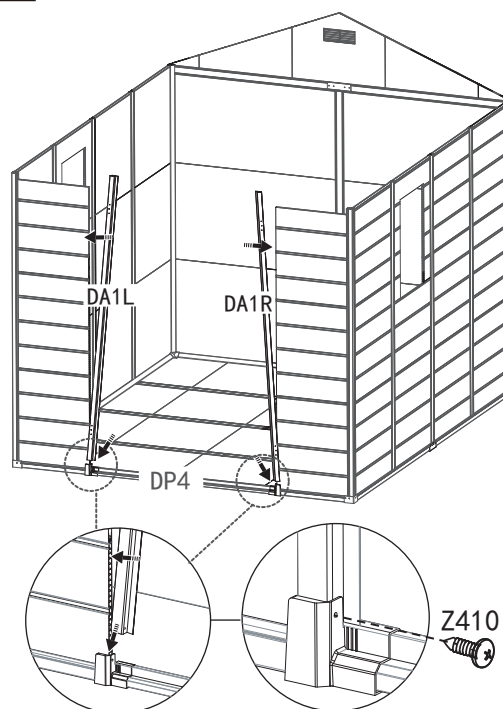


17-4

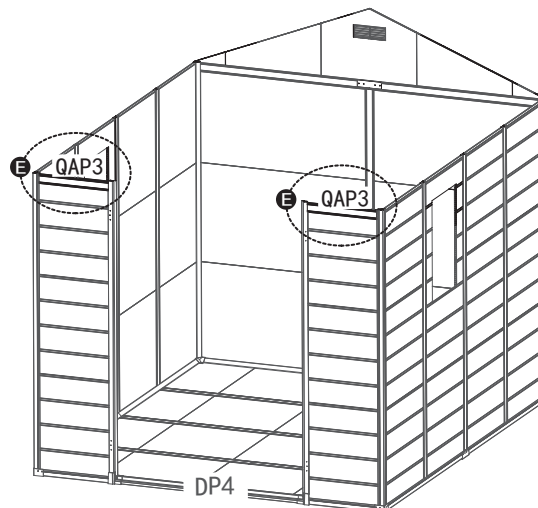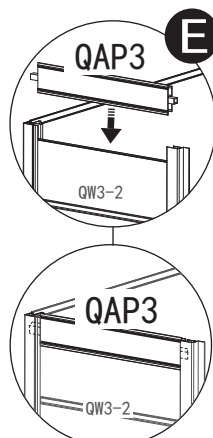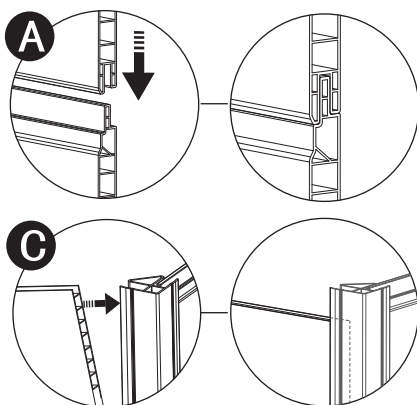


STEP 18


18-1

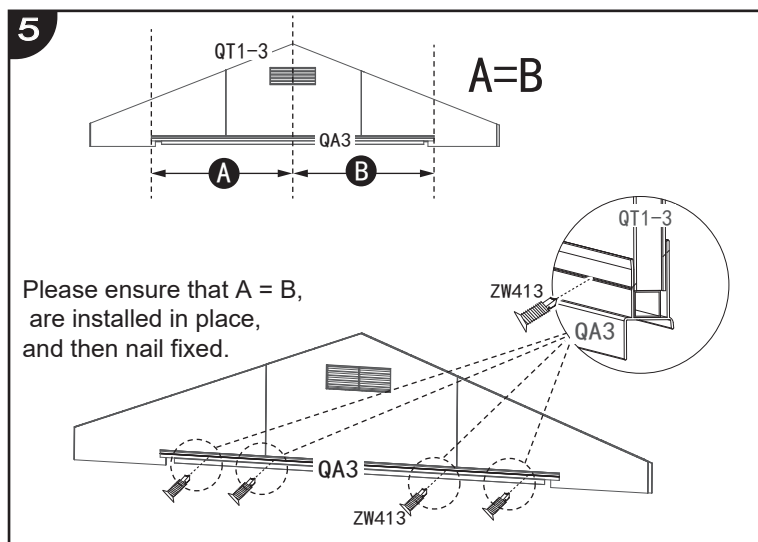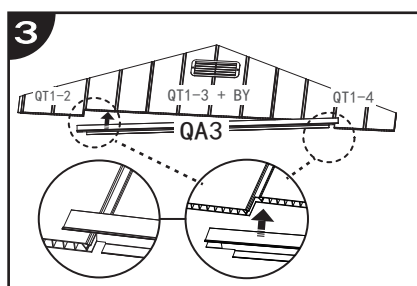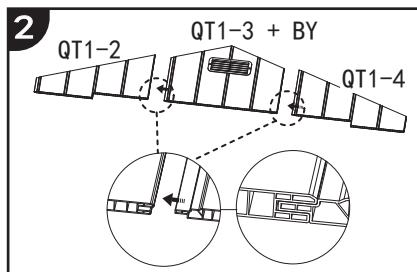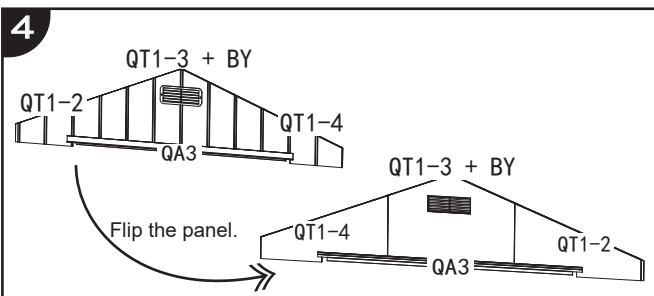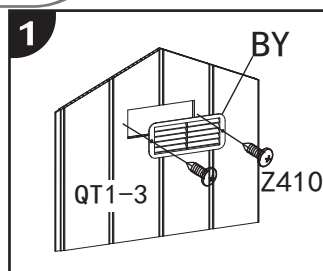

18-2

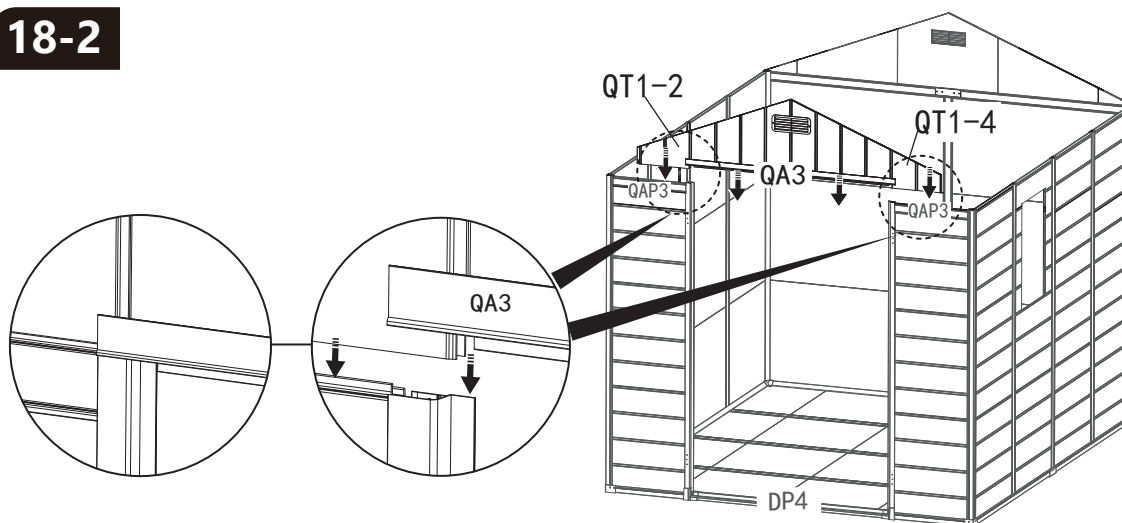

18-3

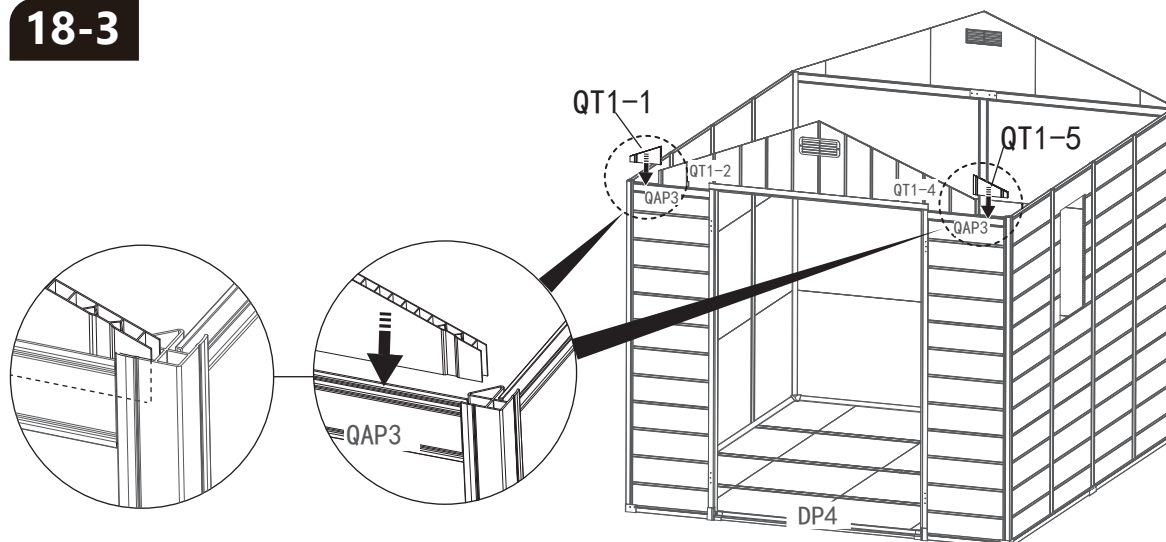

QT1-3		1 PC
Z410		2 PC
BY		1 PC
QT1-2		1 PC
QT1-4		1 PC
QA3		1 PC
QT1-1		1 PC
QT1-5		1 PC
ZW413		4 PC

STEP 19

19-1

Caution:

Please use Drill  to predrill a hole at depth 1mm before screw.



Z420



10 PC

ZW413




8 PC

SG27




2 PC


AB=CD

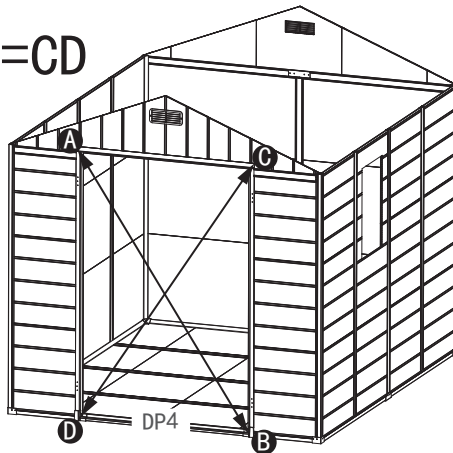


Please keep both sides QAP3 on a line

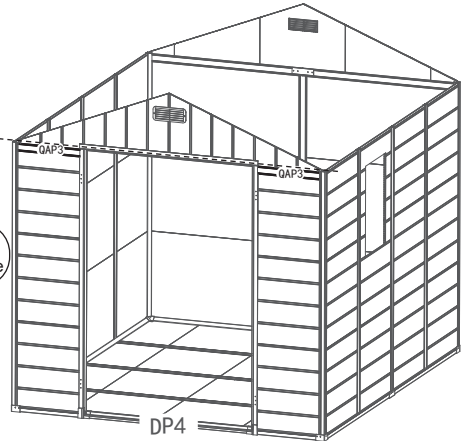


19-2

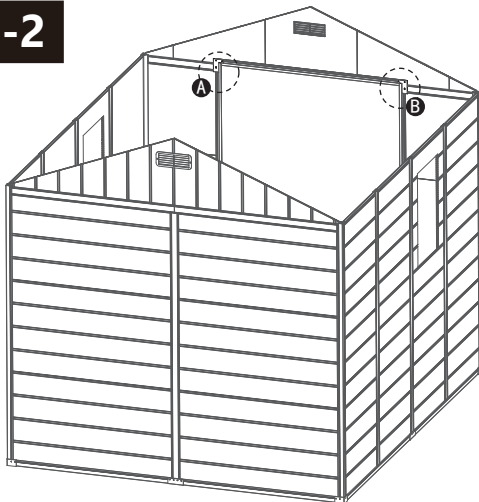

A


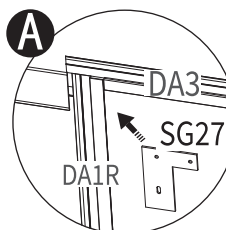


B

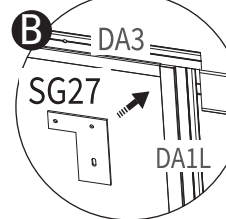


Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

19-3



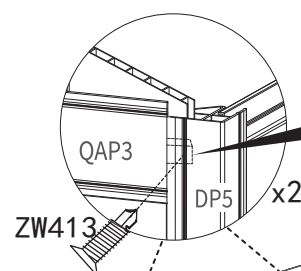
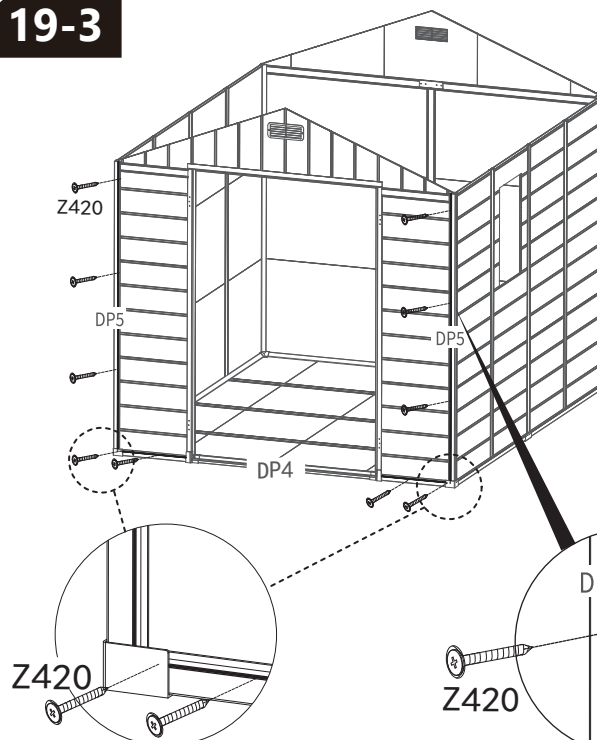


Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.


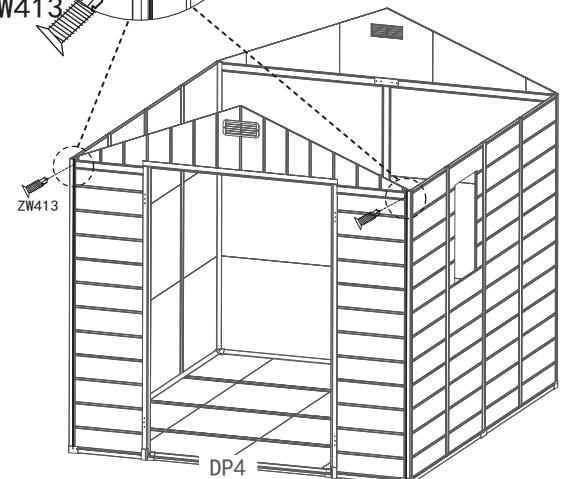


STEP 20

20-1

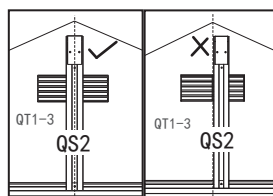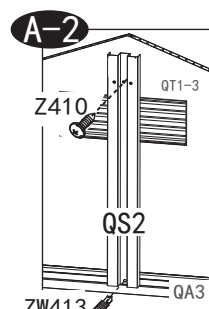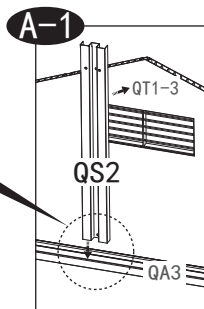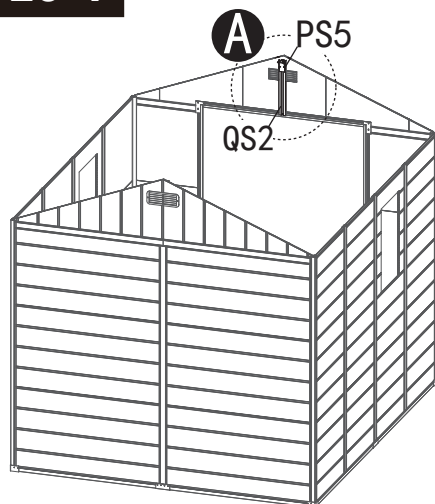

Pay attention to the placement of QS2

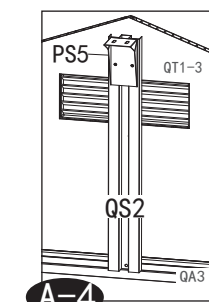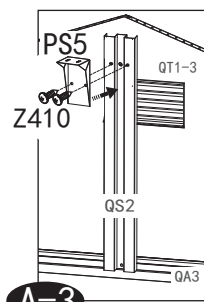

Z410



7 PC

ZW413



8 PC

PS5



2 PC

QS2



1 PC

SS4




1 PC

SS3








1 PC





20-2

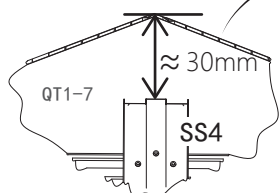

Pay attention to the placement of SS4

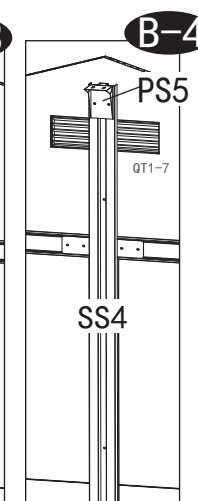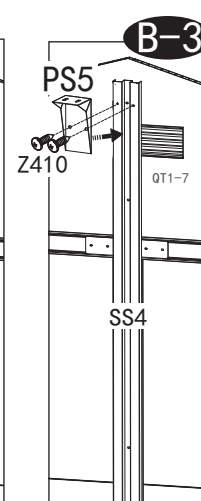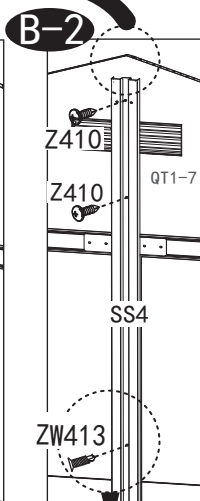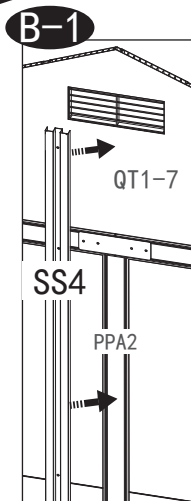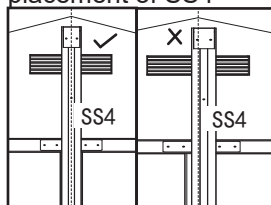


Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

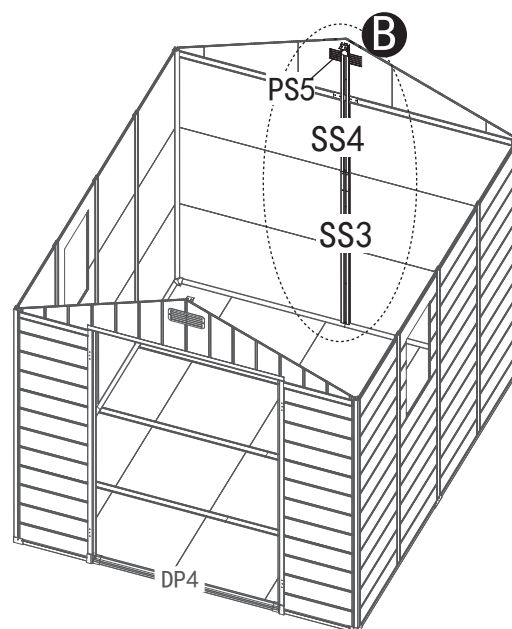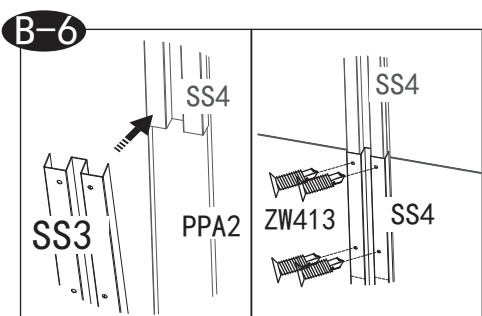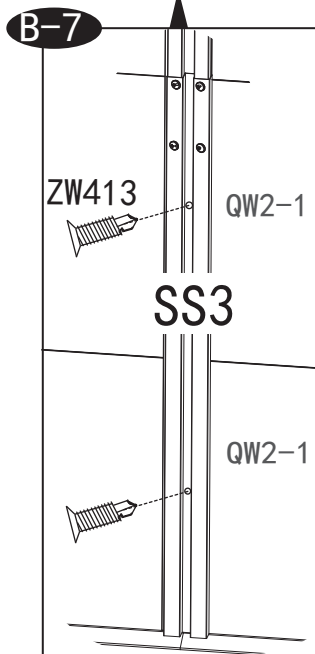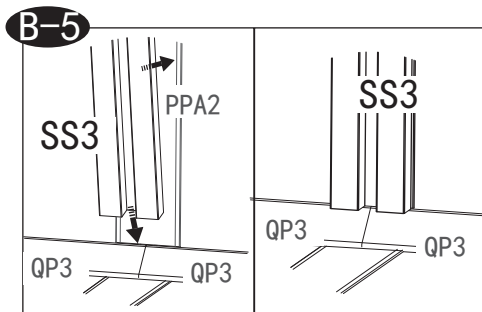


STEP 21


21-1

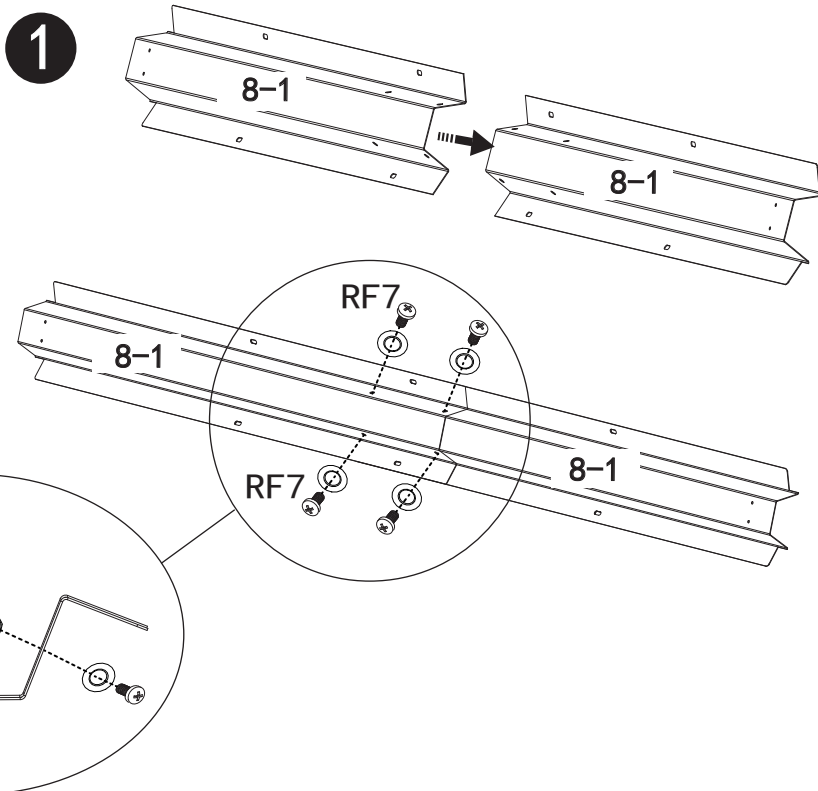


8-1




RF7

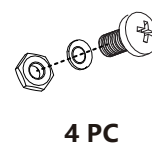


Z410







21-2

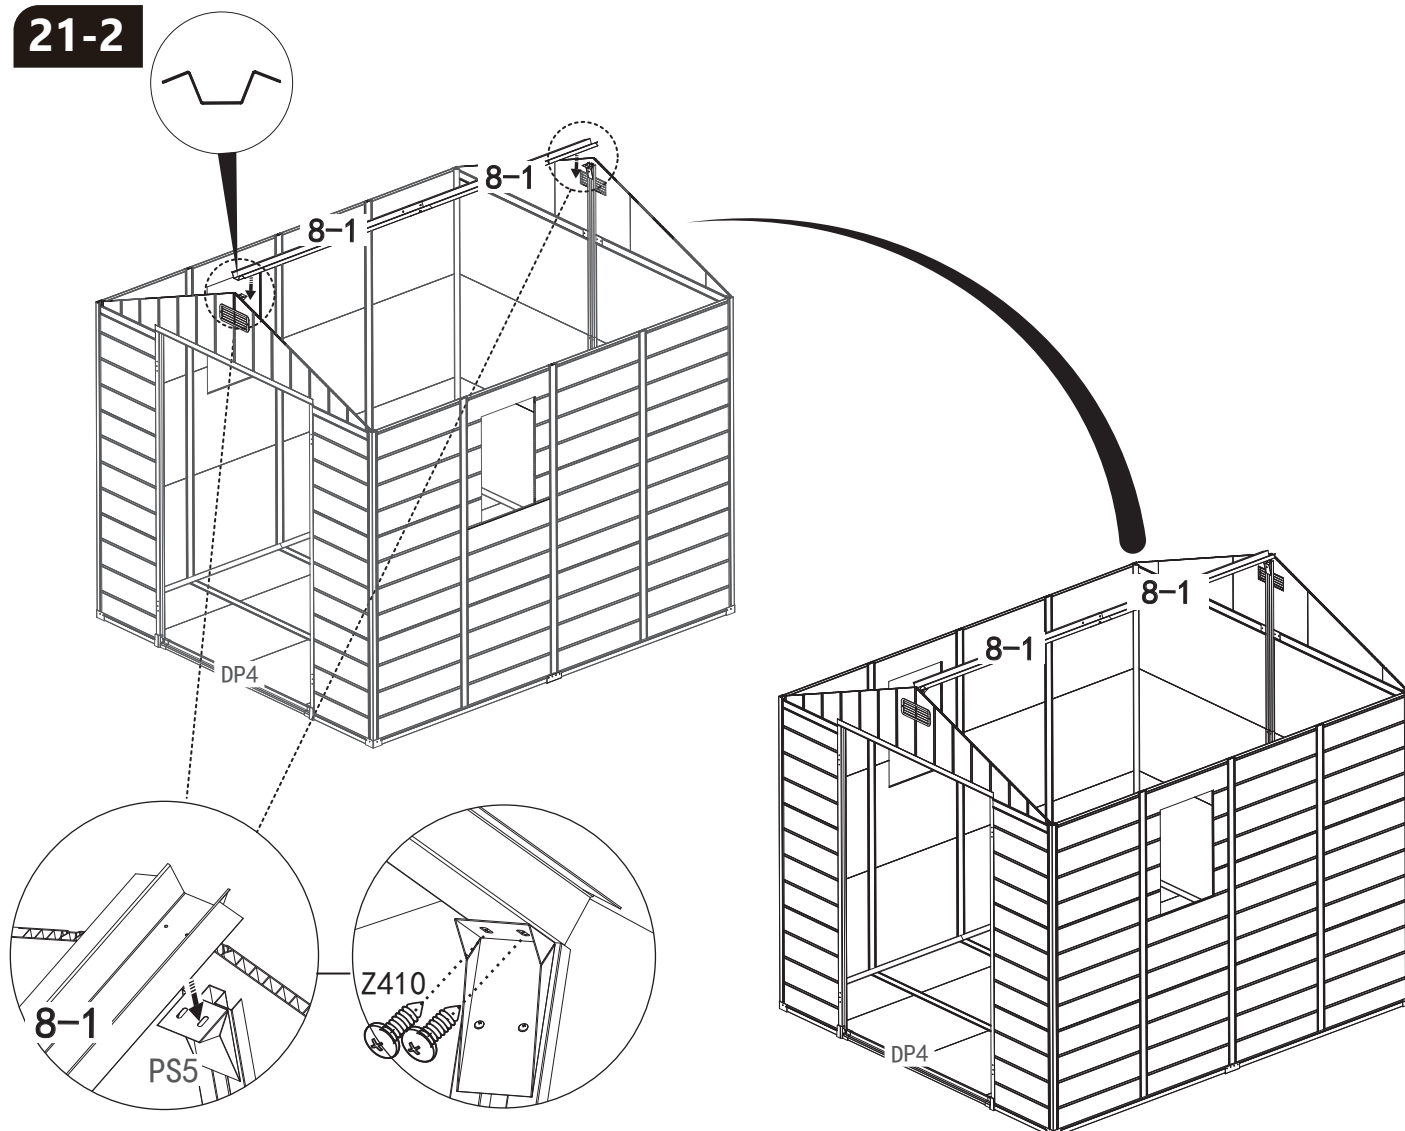


ROOF PARTS

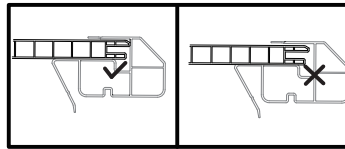




Fully fit the panel inside the profile

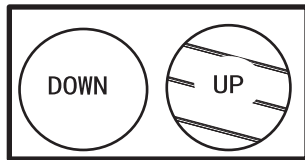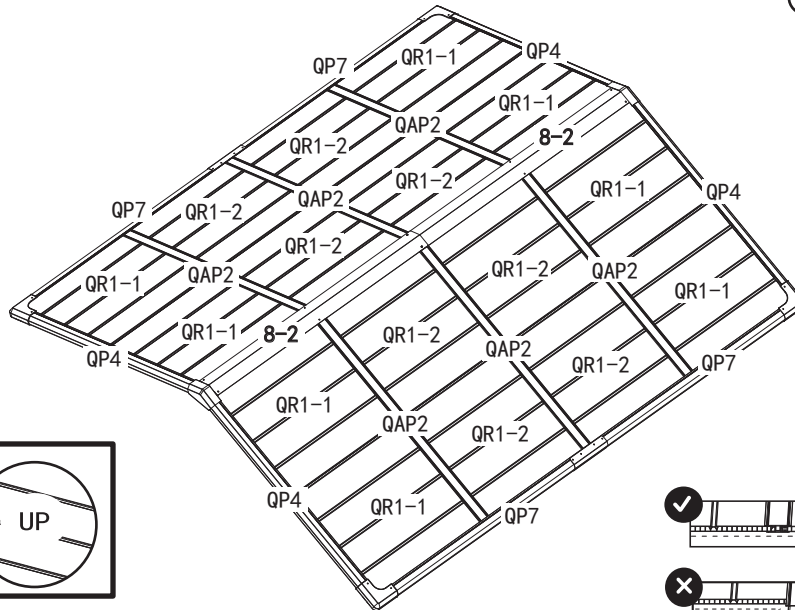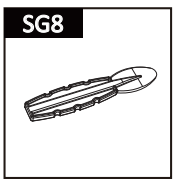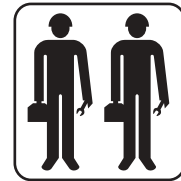





The stripes should be upwards

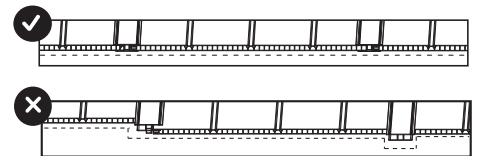




STEP 22

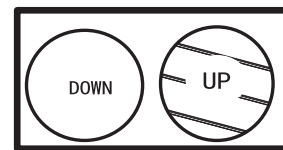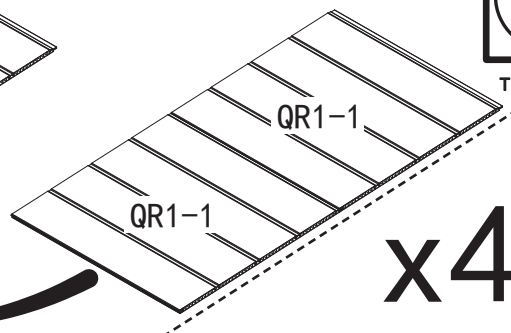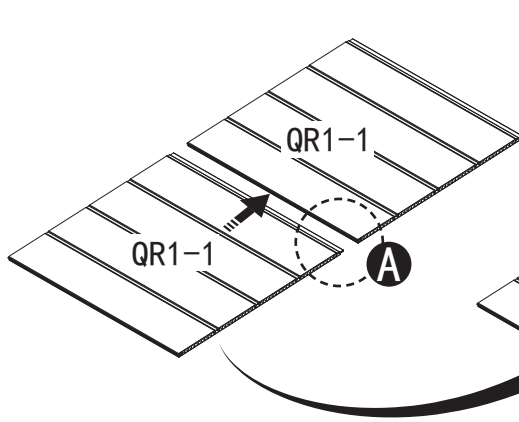

The stripes should be upwards

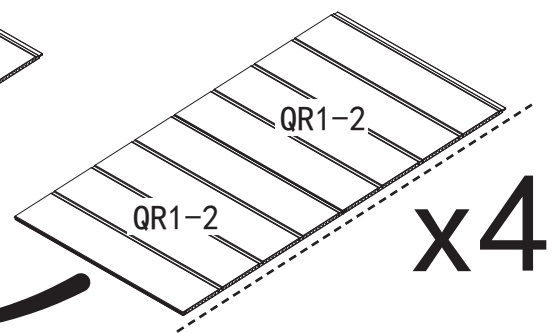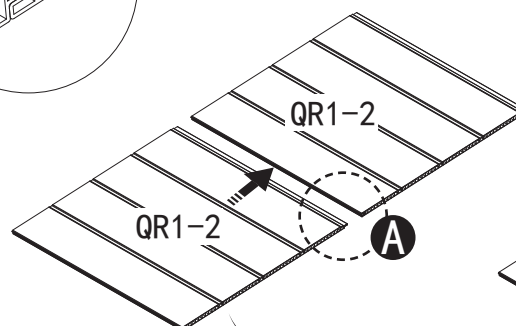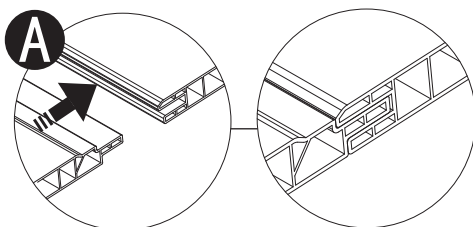
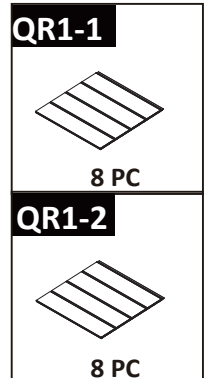


STEP 23

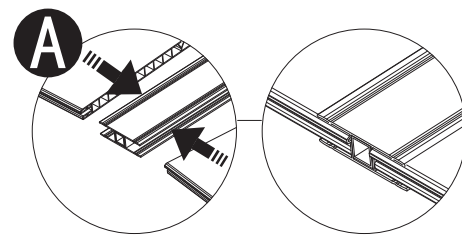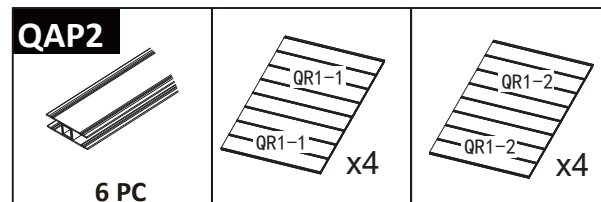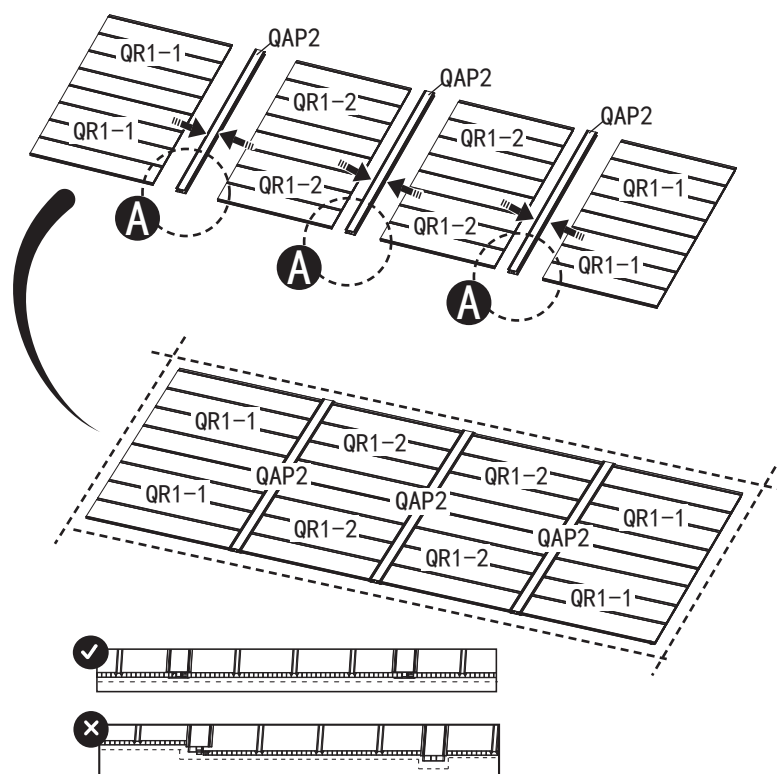


x2

STEP 24

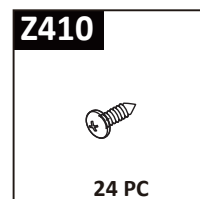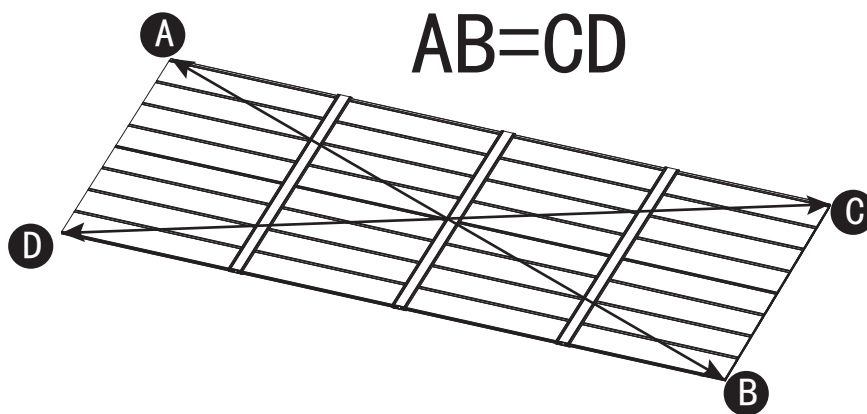





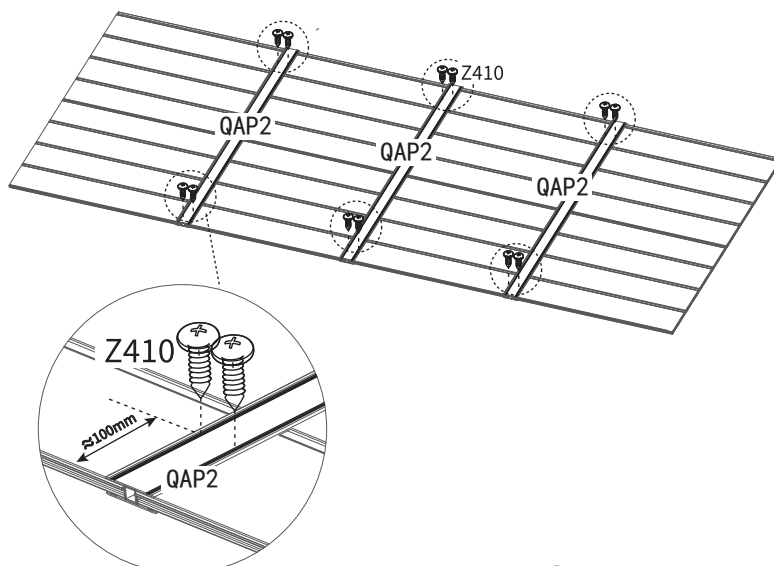


Make sure the sheet and profiles are in place before nailing




x2

STEP 25

QP7  4 PC	Z410  16 PC
QP4  4 PC	SG20  2 PC
SG2  4 PC	SG8  4 PC

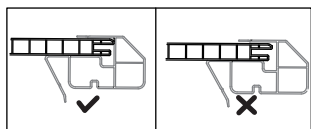


Fully fit the panel inside the profile

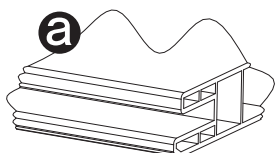

Please note the installation location


25-1

Flip the panel.

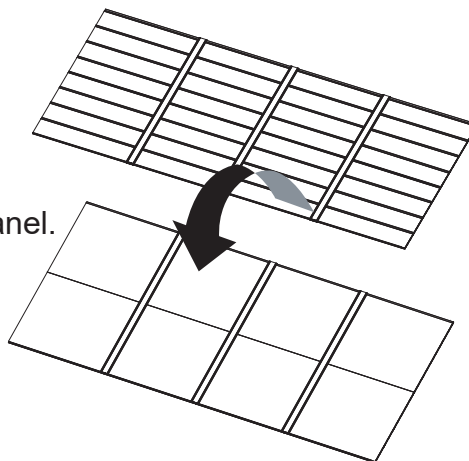

x2


25-2

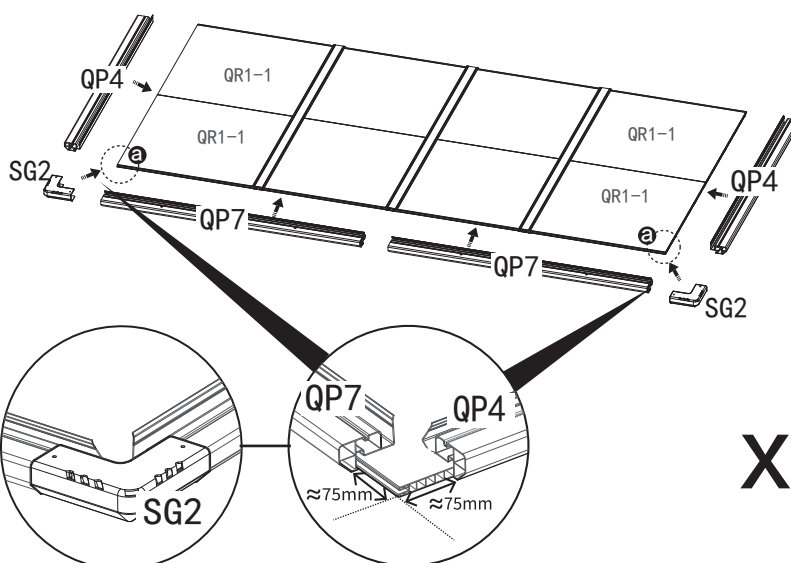

x2


25-3

A=B
C=D


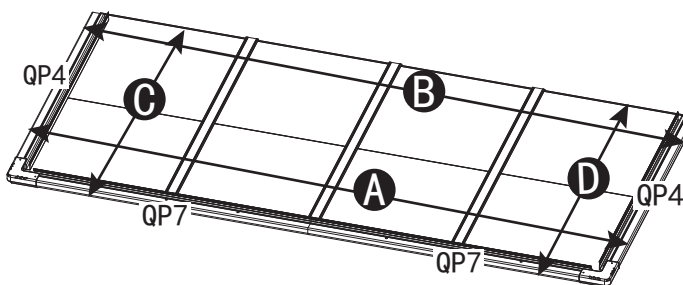


x2

25-4

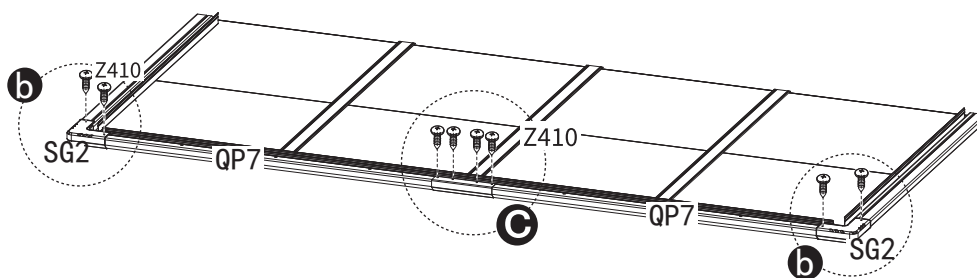


x2

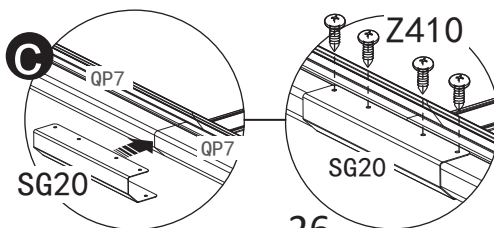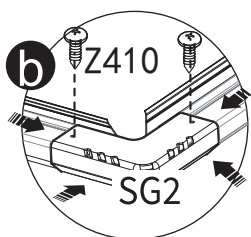

STEP 26

26-1

Flip the panel.

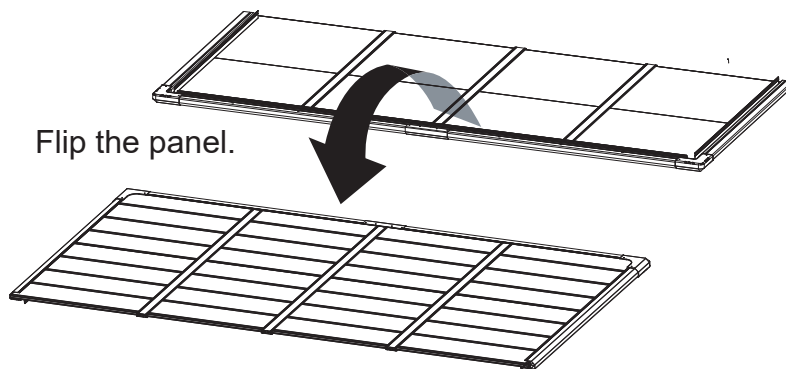

Z420




32 PC

x2



26-2

Caution:
Please use Drill to predrill
a hole at depth 1mm before screw.

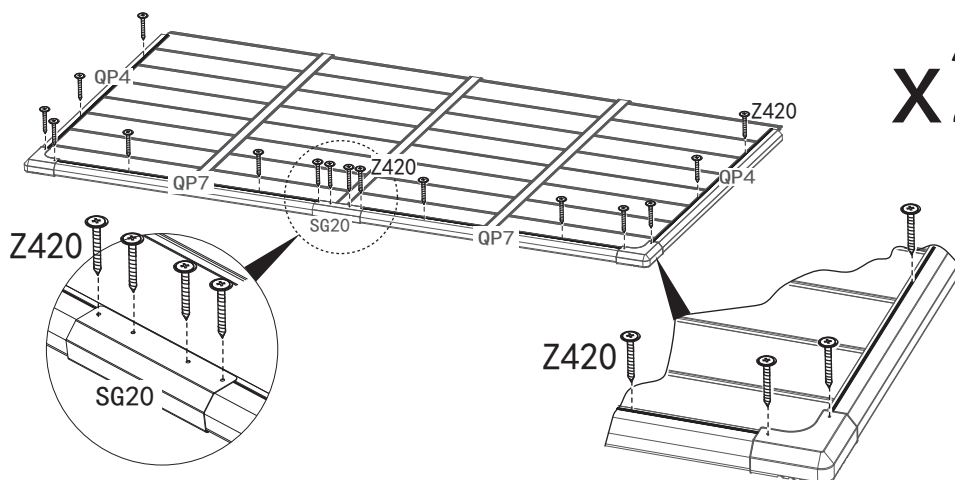

x2

26-3

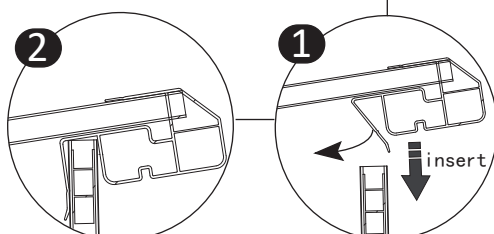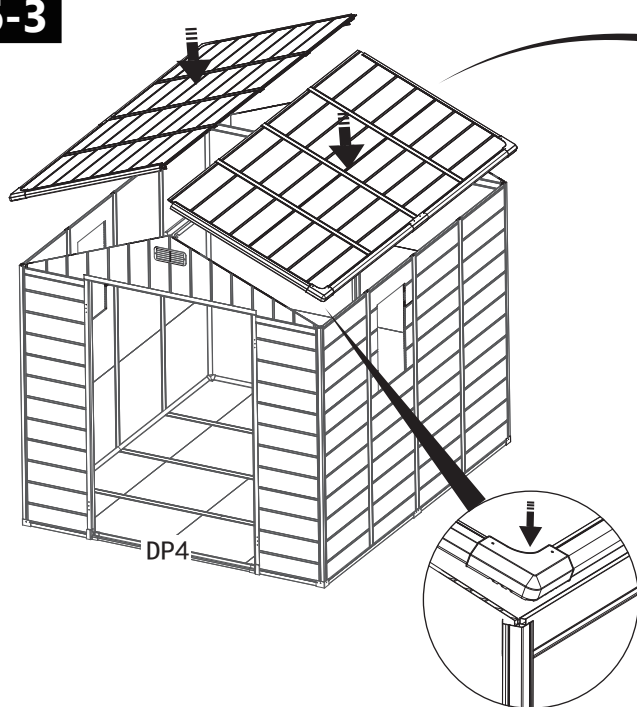

Fully fit the panel inside the profile


STEP 27

SG8





27-1

Fully fit the panels inside the profiles of roof



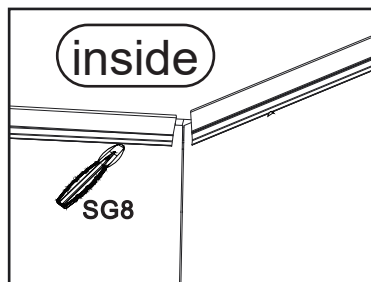


outside

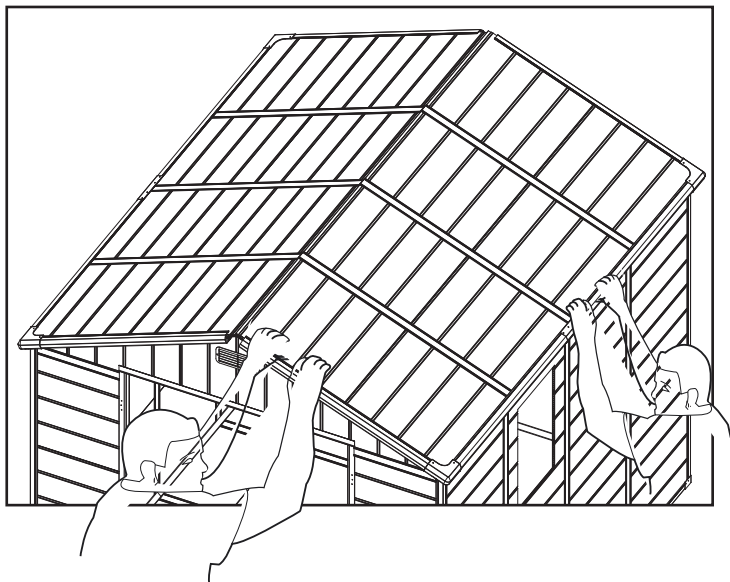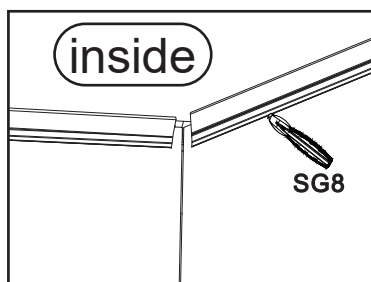


27-2

QAP2 and PPA1 should be aligned once the roof is installed.

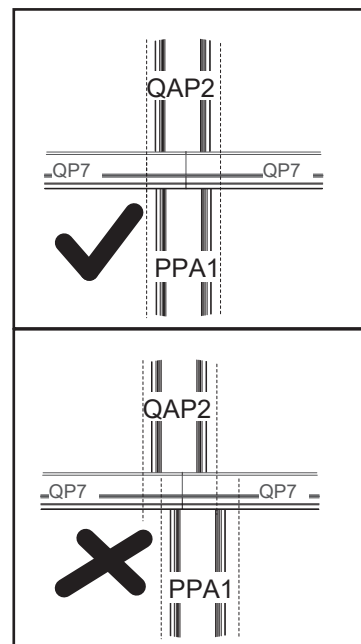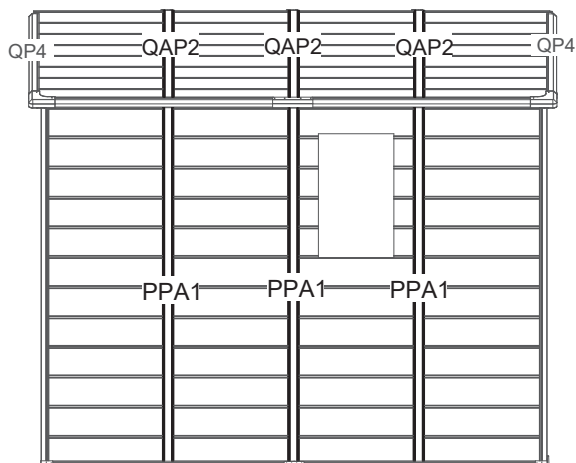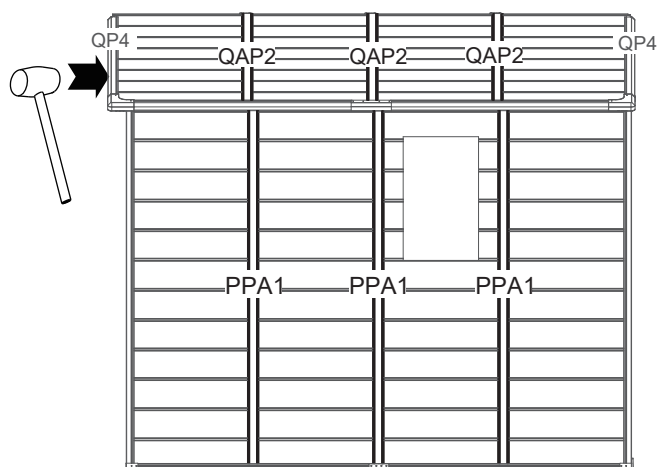


STEP 28

28-1

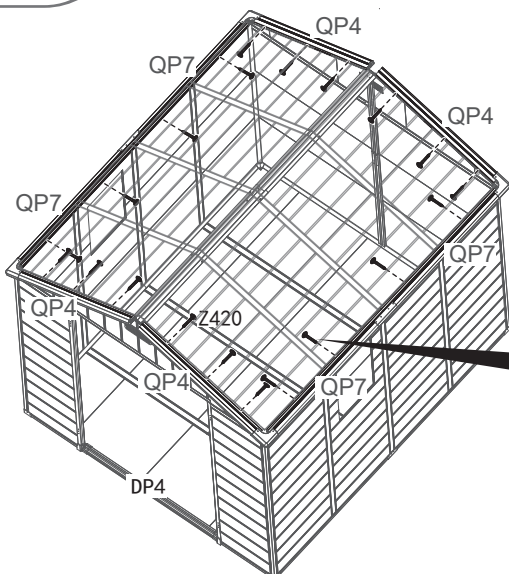

Caution:
Please use Drill to predrill
a hole at depth 1mm before screw.



Z420



20 PC

ZW413



12 PC

8-2




2 PC

Z410




4 PC

28-2

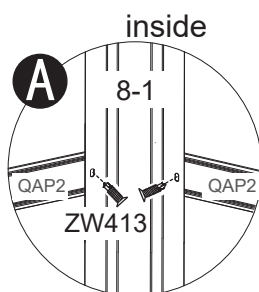


inside

Attention to the location
of the screws: they need
to be locked on the iron
pipe that corresponds to
the inside of the plastic
profile.

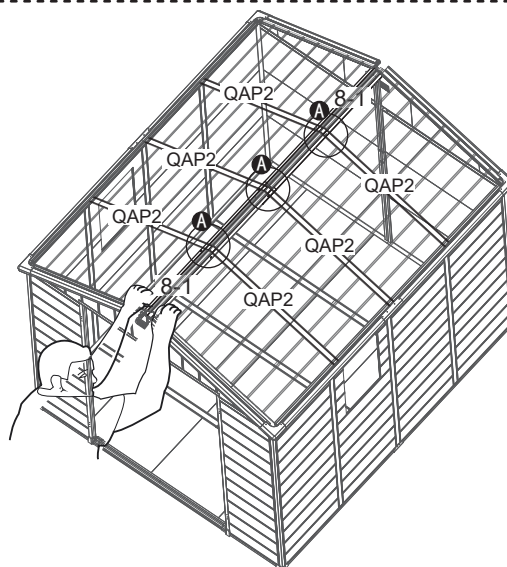


Attention: for the
convenience of
screwing, please
press the board
when you screw.




28-3

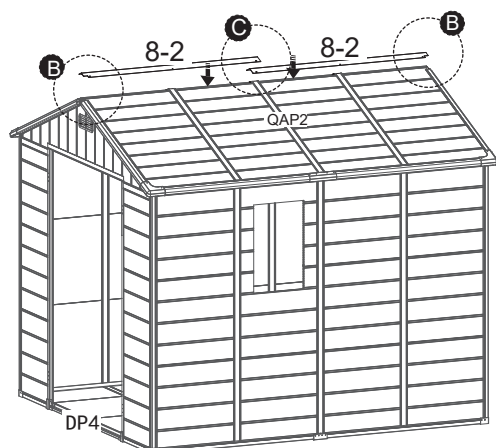




28-4

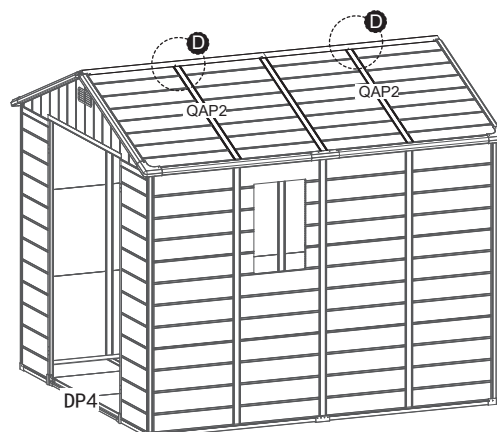


Attention to the location
of the screws: they need
to be locked on the iron
pipe that corresponds to
the inside of the plastic
profile.

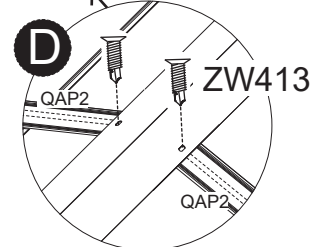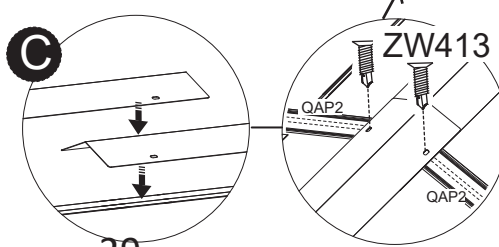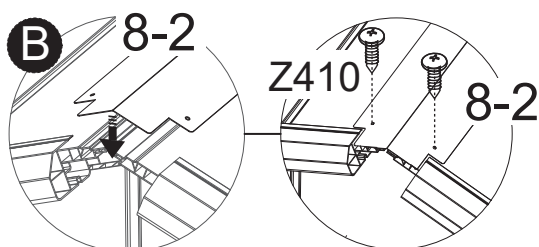

STEP 29

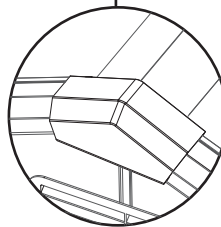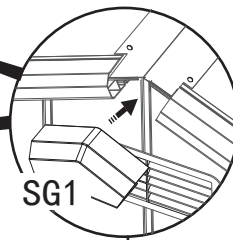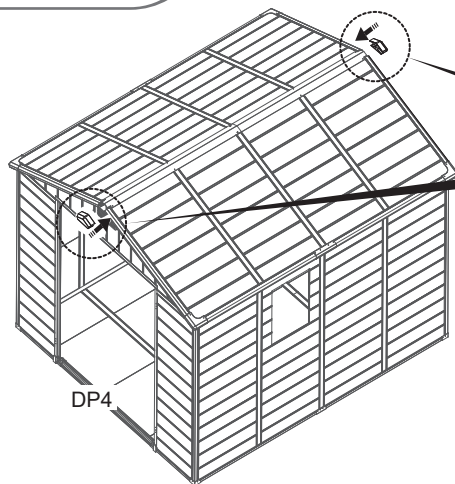

SG1




2 PC

Z425




4 PC

STEP 30

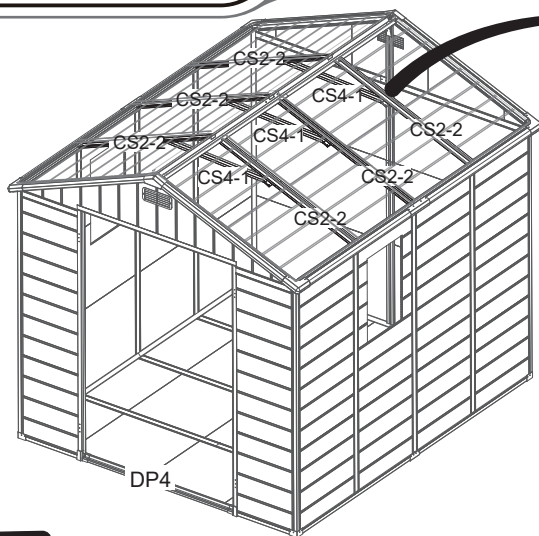

inside

A

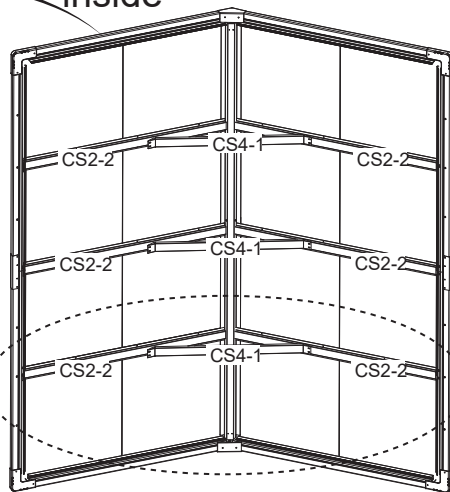

CS4-1



3 PC

Z420




12 PC

ZW413



24 PC

CS2-2




6 PC

Z410




24 PC

A-1

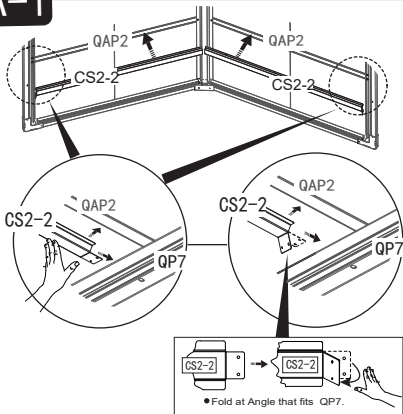


A-2

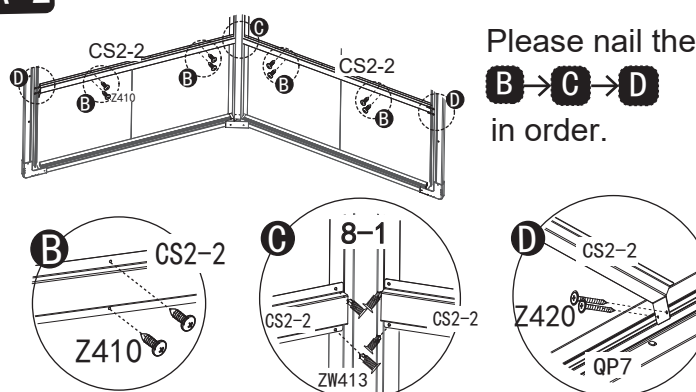


Please nail the **B** → **C** → **D** in order.

A-3



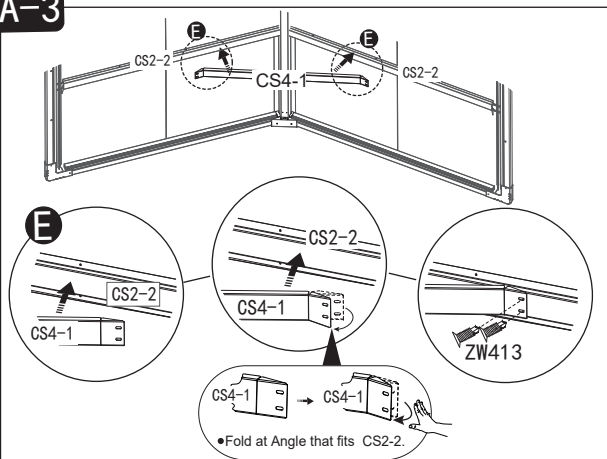


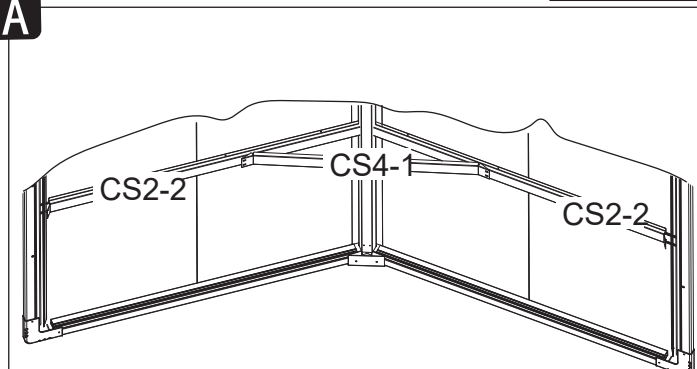

A





x3

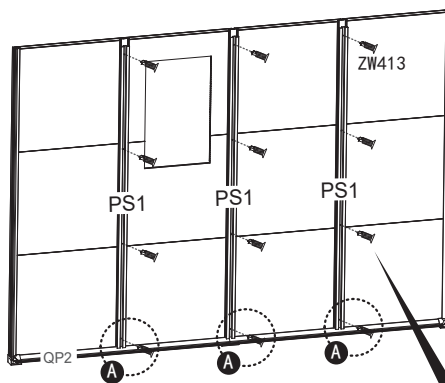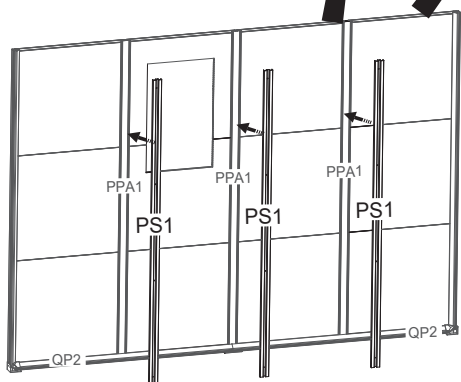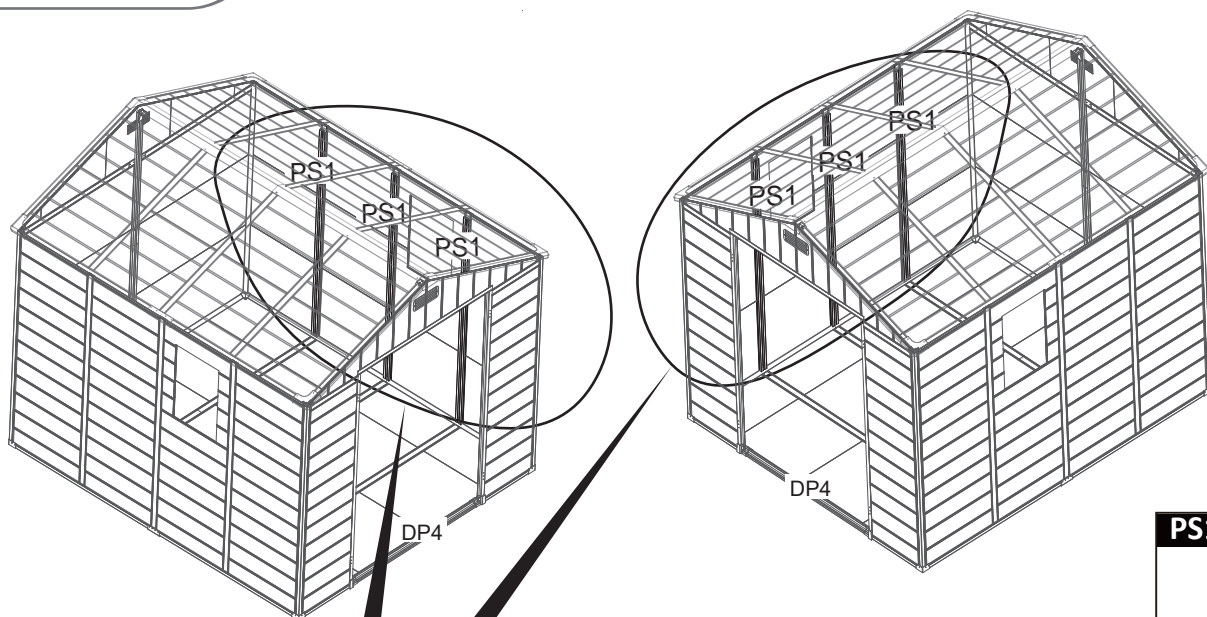
STEP 31






PS1

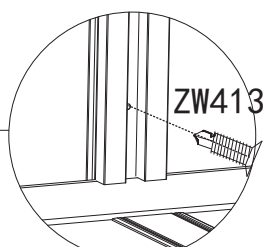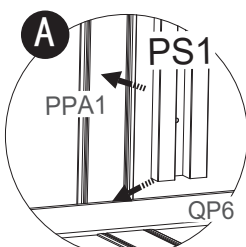6 PC
ZW413

24 PC


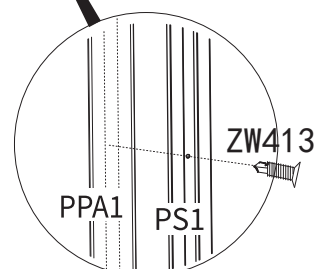


Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

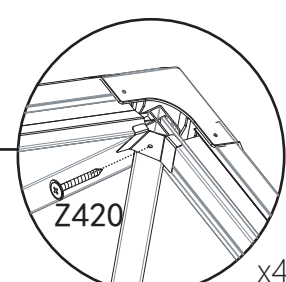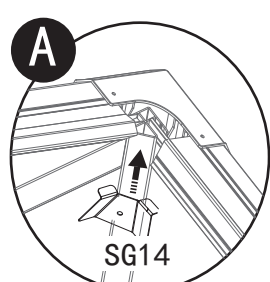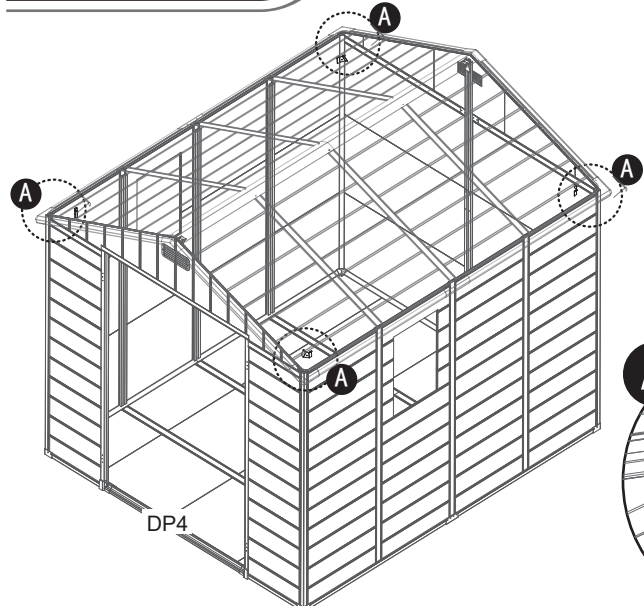



STEP 32



SG14

4 PC
Z420

4 PC

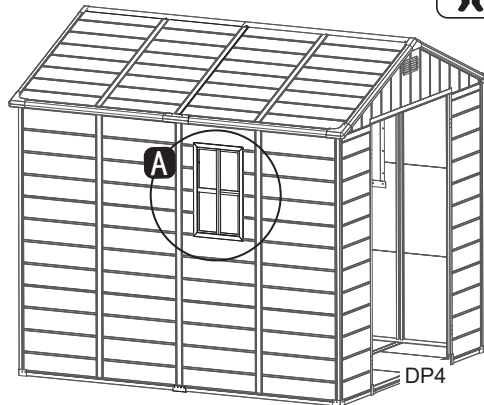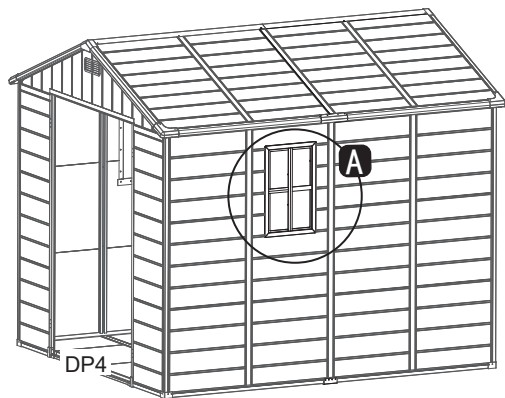STEP 33

Window section




SG10



2 PC

SG101



2 PC

SG102




2 PC

Z410




32 PC

A-1


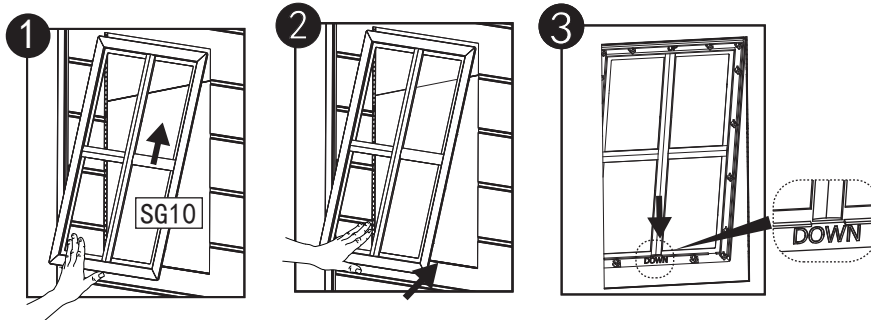


A-2




- Remove the film before fixing SG101

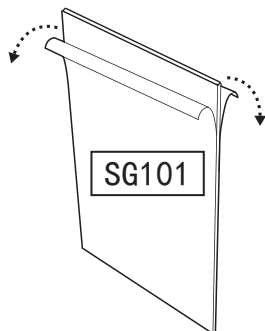

- Two persons are needed for this step, to press SG10 from outside and inside.

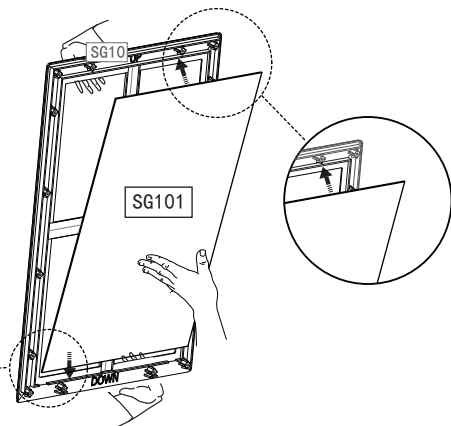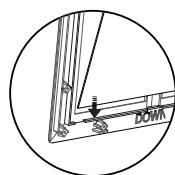



A-3

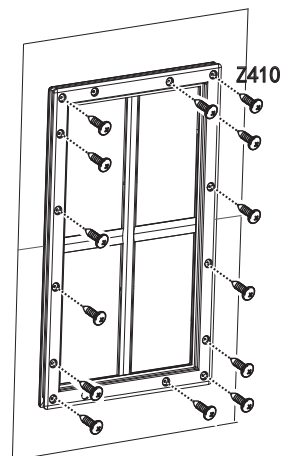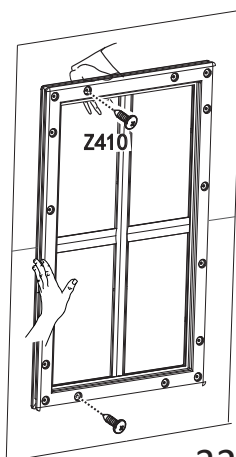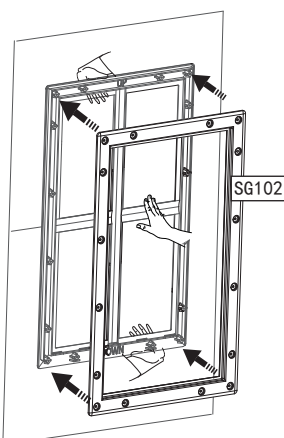



DOOR SECTION



Door mount this is above

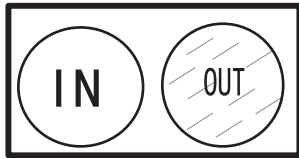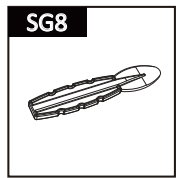




The stripes should be outside

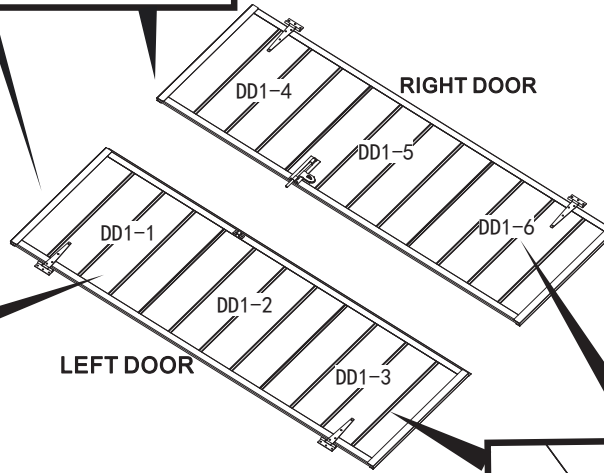

The boards must be straight



STEP 34

34-1

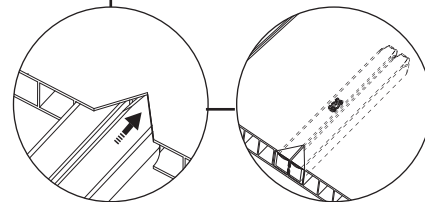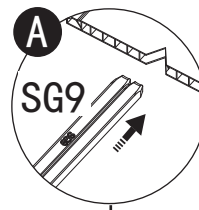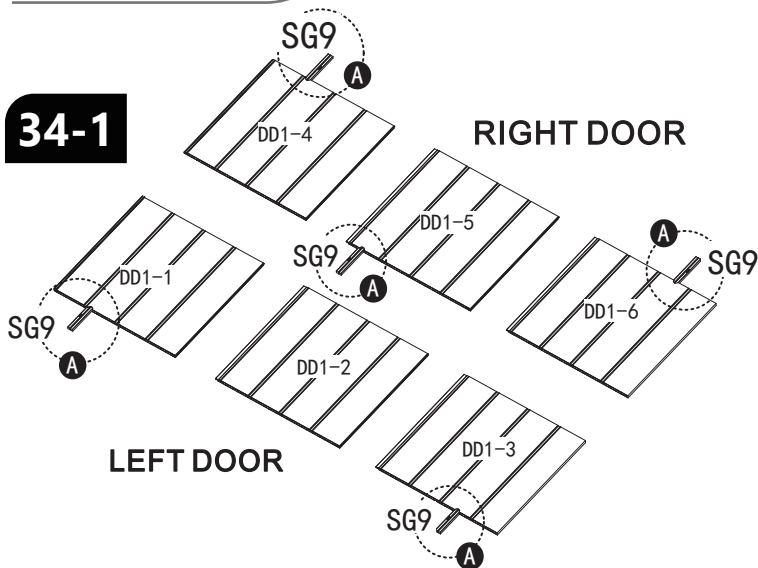


DD1-3 1 PC	DD1-2 1 PC
DD1-5 1 PC	DD1-6 1 PC
	DD1-1 1 PC
	DD1-4 1 PC
	SG9 5 PC


34-2

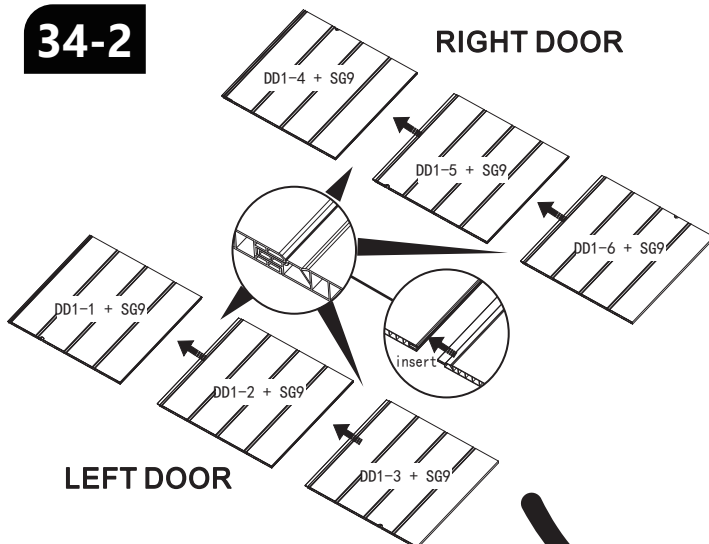

The boards must be straight

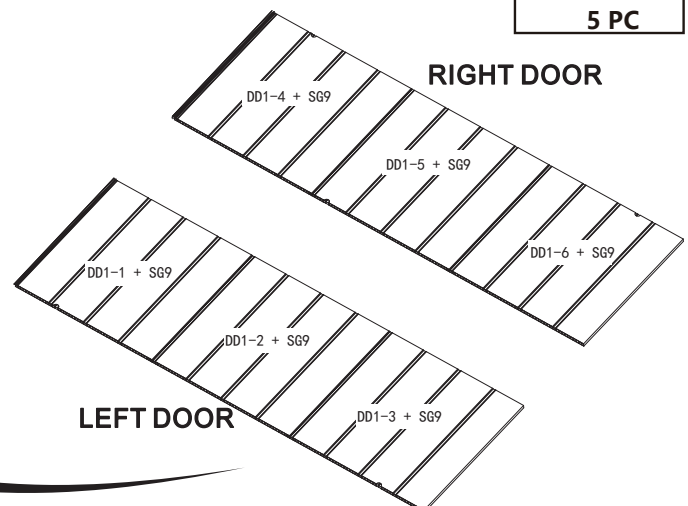


STEP 35

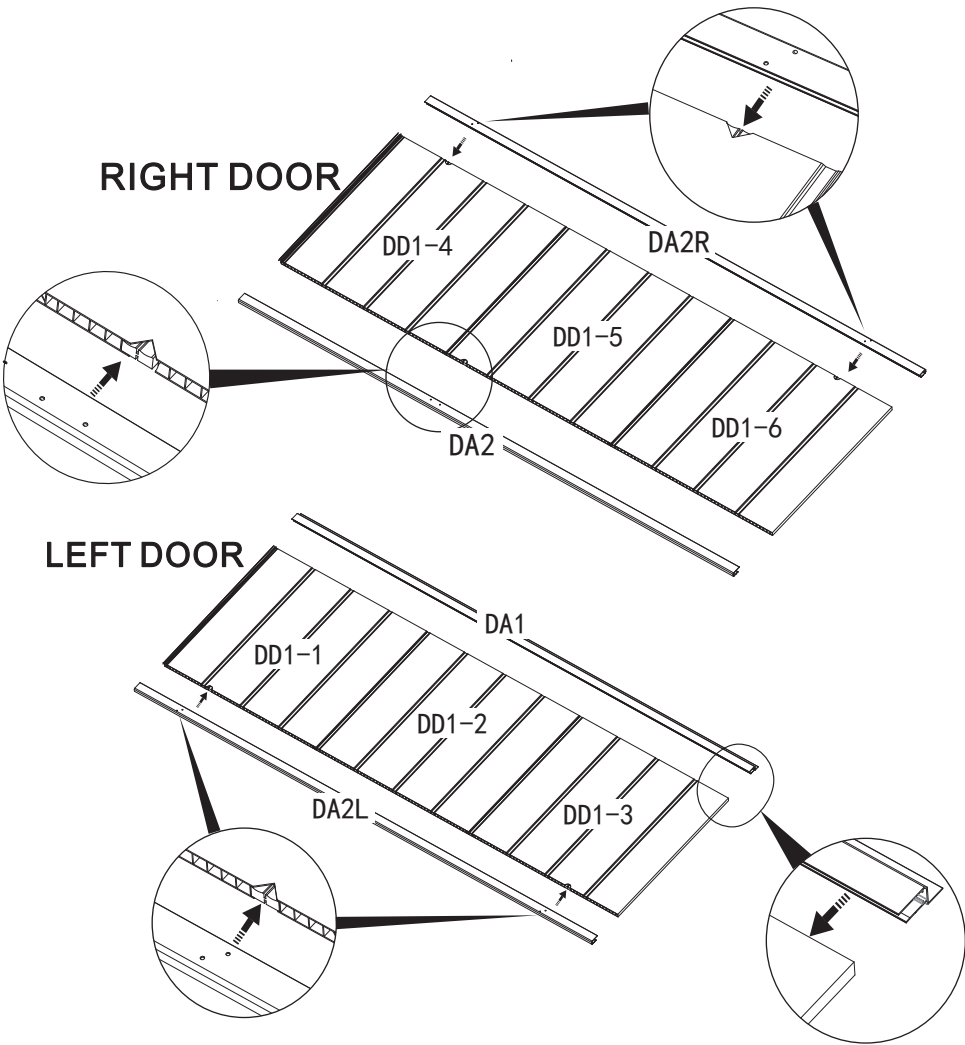

DA2R
1 PC
DA2
1 PC
DA2L
1 PC
DA1
1 PC

STEP 36

LEFT DOOR

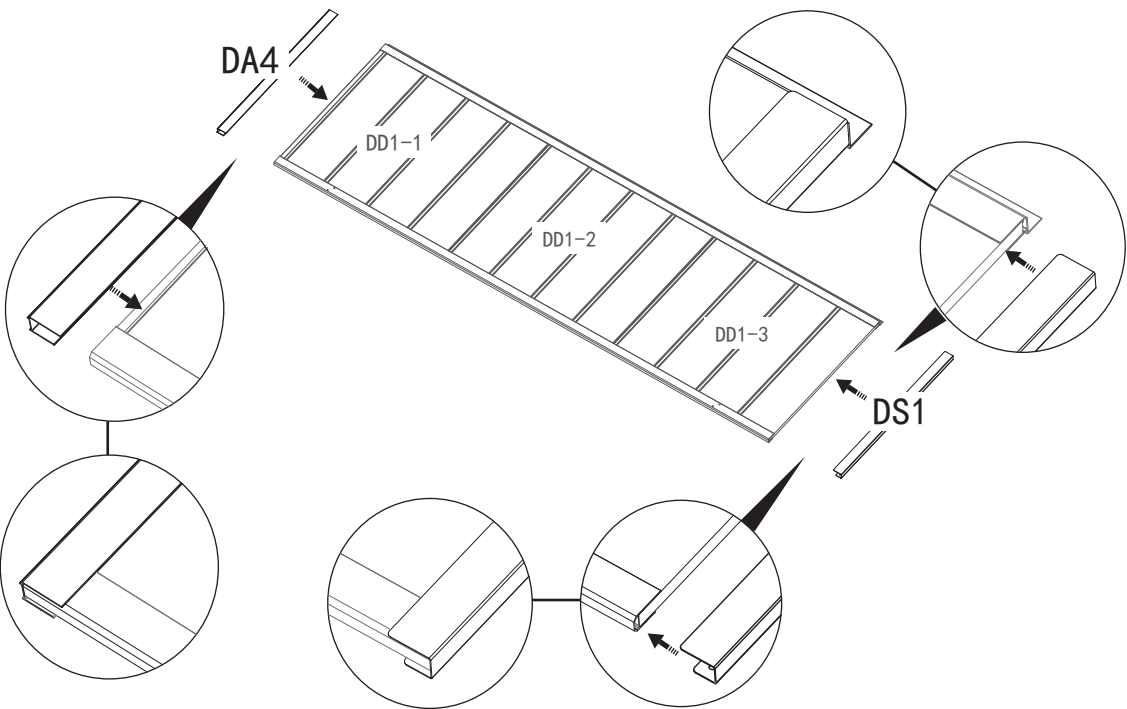


DA4
1 PC
DS1
1 PC

STEP 37

RIGHT DOOR

37-1

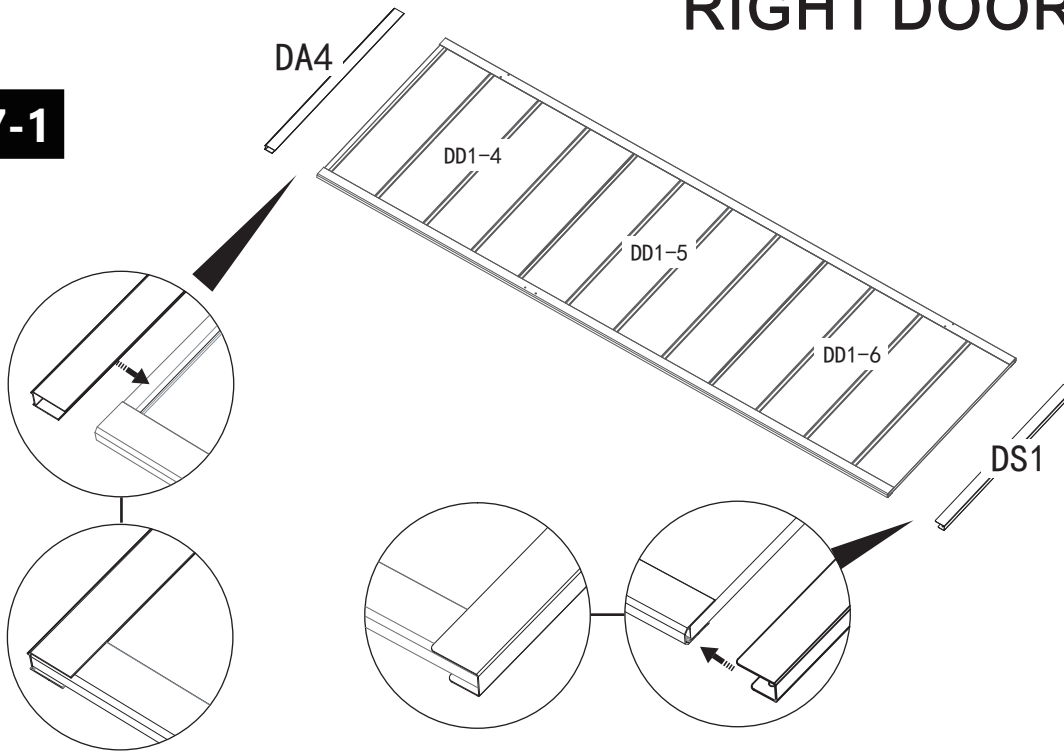

DA4

1 PC


DS1

1 PC

37-2

RIGHT DOOR

LEFT DOOR

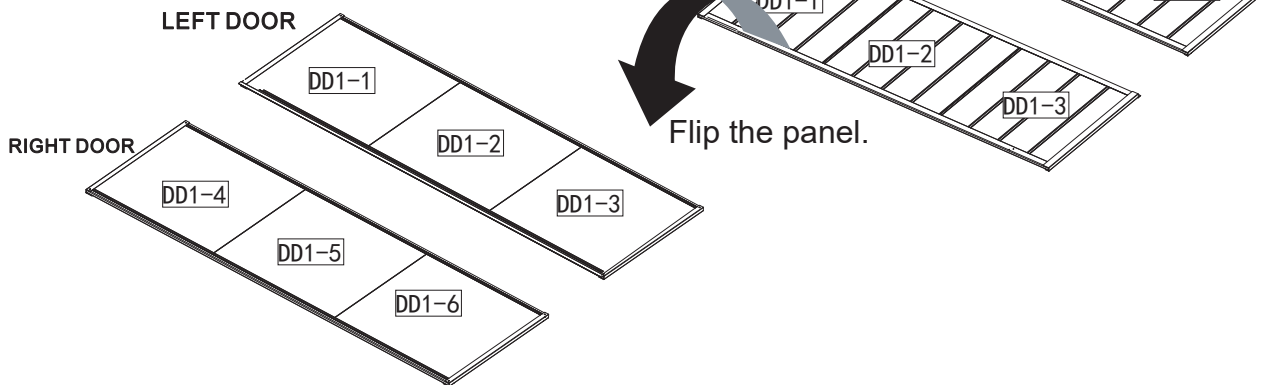


RIGHT DOOR

LEFT DOOR

Flip the panel.

37-3

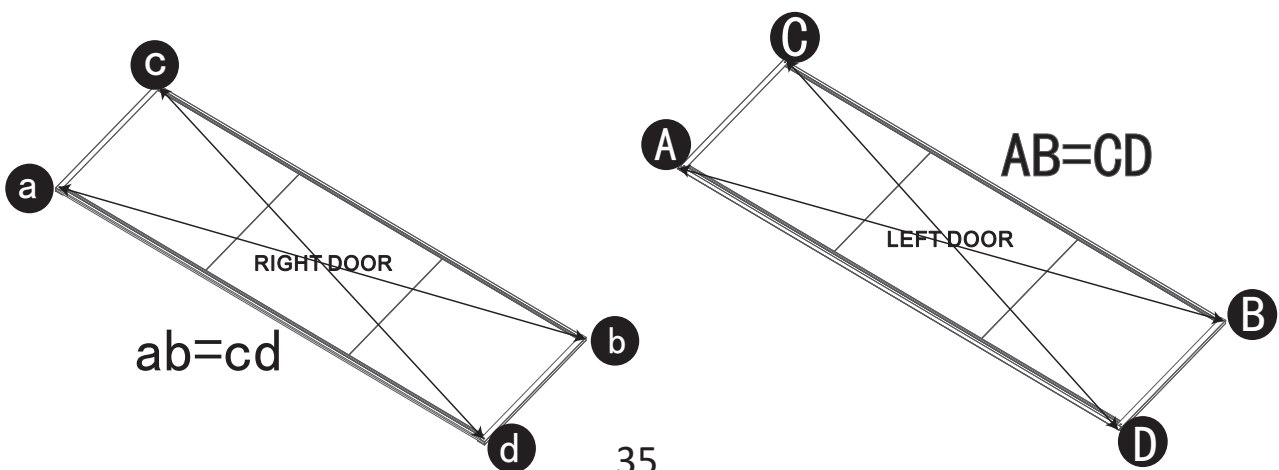

STEP 38




LEFT DOOR




STEP 40

40-1



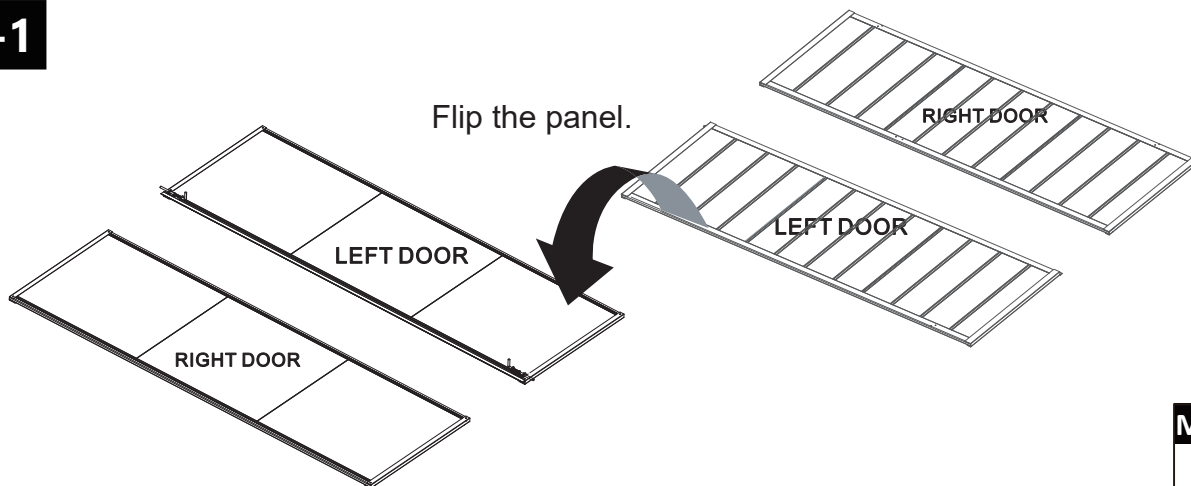


40-2

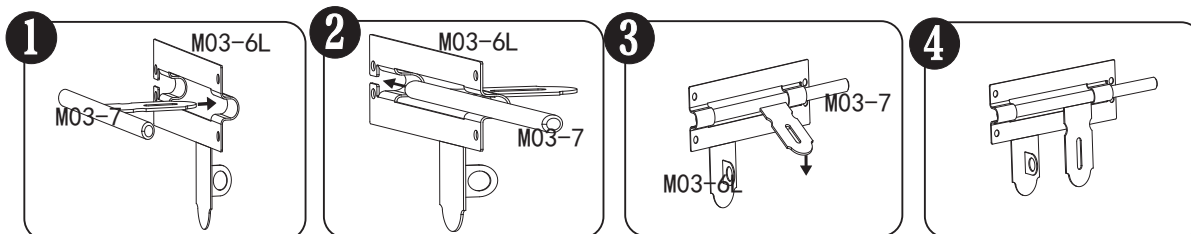




M03-6L
1 PC
M03-7
1 PC
Z410
12 PC
MO1
4 PC
M03-6L + M03-7

40-2

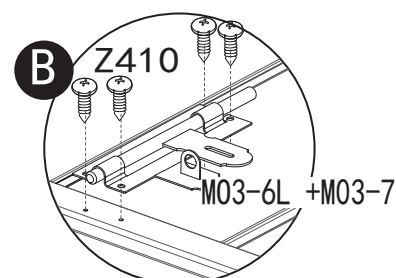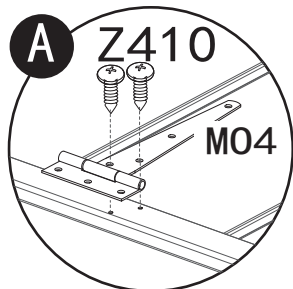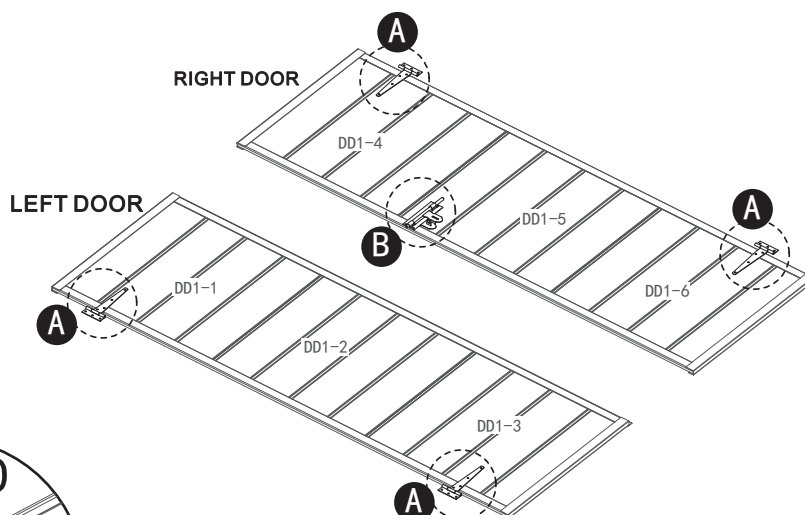




Don't fasten the screws in this step to adjust the positions of doors

STEP 41

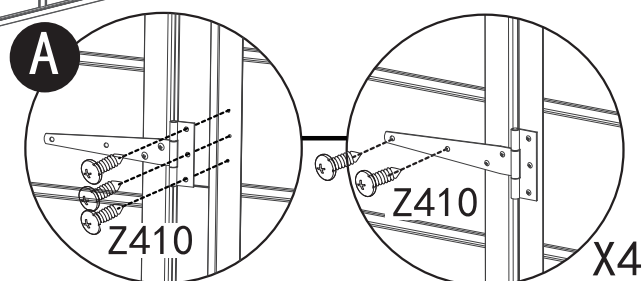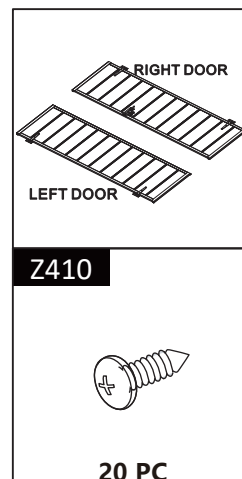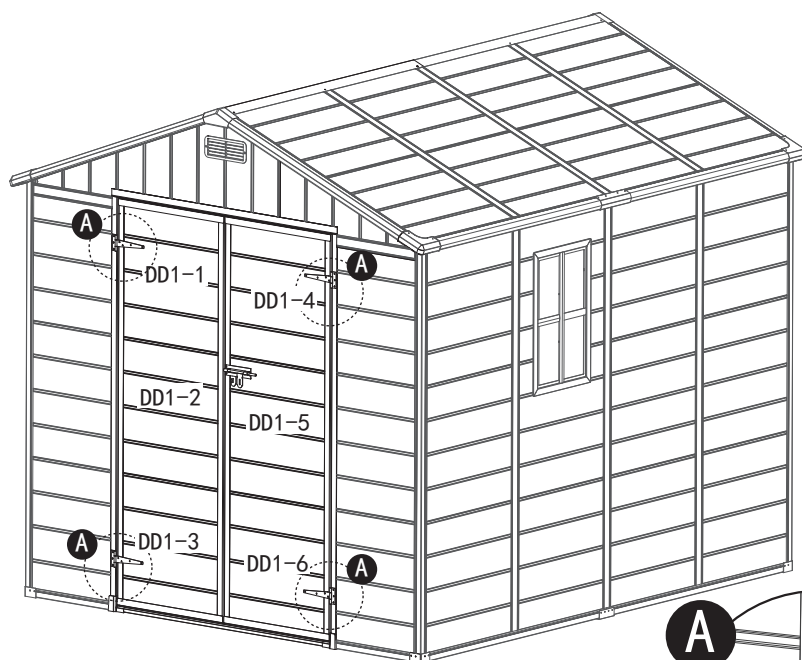

Nail the door after place adjustment and fasten all the screws.

STEP 42

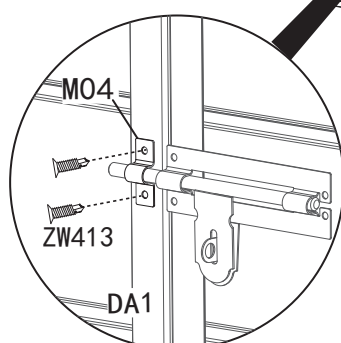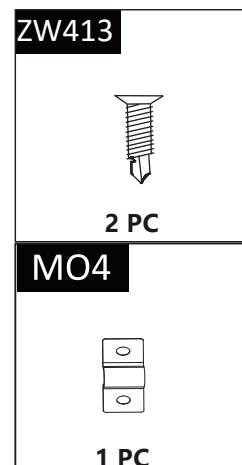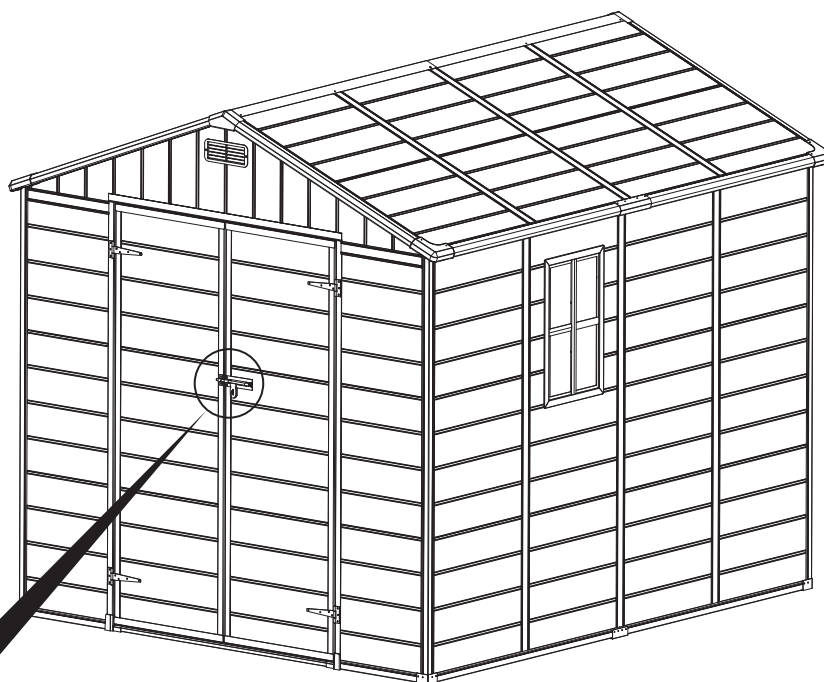

AFTER-SALE SERVICE CARD

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna share how wonderful our smart products makes your home?
Share your pictures with us.
Any suggestions? **Contact us!**
We gotcha back!

✉ Patiofurnitureserviceteam@outlook.com

