




# ASSEMBLY INSTRUCTION : MODE D'EMPLOI:INSTRUCCIONES DE ENSAMBLE

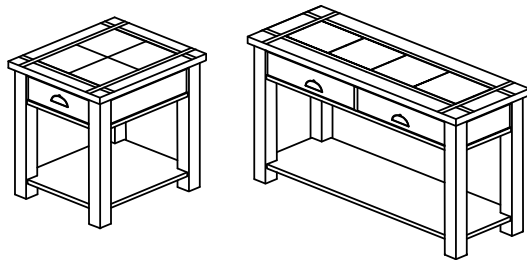

## Step1:

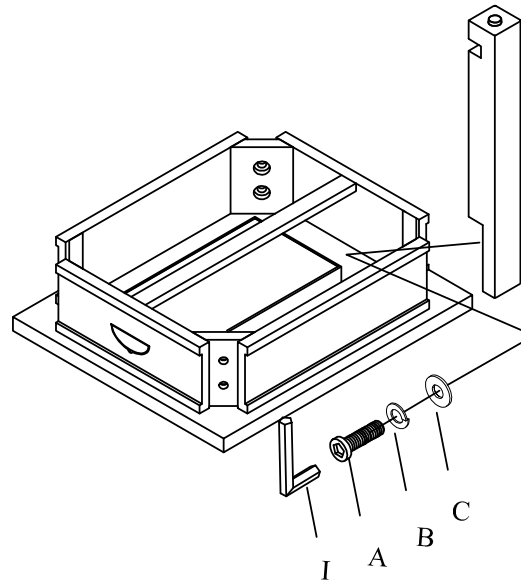

## Step2:

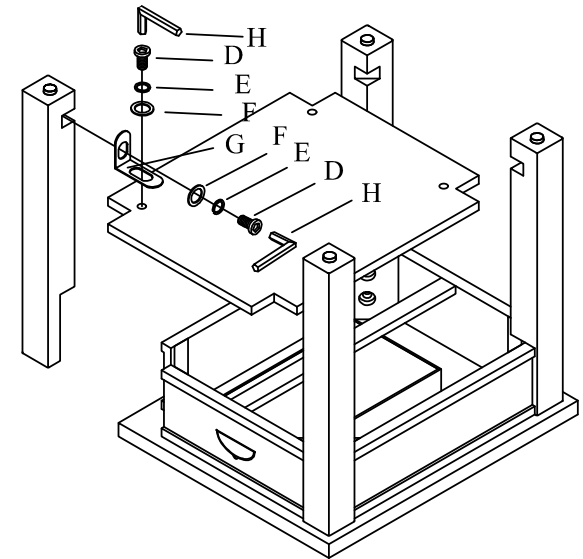

| No. | PART | DESCRIPTION  | MAG. CODE | QTY. | PART | QTY. |
|-----|------|--------------|-----------|------|------|------|
| 1   |      | Leg          |           | 4    |      | 4    |
| 2   |      | Bottom Shelf |           | 1    |      | 1    |
| 3   |      | Top Frame    |           | 1    |      | 1    |

## ASSEMBLY HARDWARE

| No. | PART | DESCRIPTION           | QTY. | QTY. |
|-----|------|-----------------------|------|------|
| A   |      | Bolt Ø5/16"*2"L       | 8    | 8    |
| B   |      | Lock Washer Ø5/16"    | 8    | 8    |
| C   |      | Flat Washer Ø5/16"*19 | 8    | 8    |
| D   |      | Bolt Ø1/4"*5/8"L      | 8    | 8    |
| E   |      | Lock Washer Ø1/4"     | 8    | 8    |
| F   |      | Flat Washer Ø1/4"*16  | 8    | 8    |
| G   |      | Metal Puck            | 4    | 4    |
| H   |      | Allen Wrench(4mm)     | 1    | 1    |
| I   |      | Allen Wrench(5mm)     | 1    | 1    |

## NOTE:

ASSEMBLE UNIT ON A SOFT SURFACE.  
 ASSEMBLEZ L'UNITÉ SUR UNE SURFACE MOLLE.  
 ENSAMBLE LA UNIDAD EN UNA SUPERFICIE PLANA Y SUAVE.

DO NOT TIGHTEN BOLTS UNTIL THE UNIT IS COMPLETELY ASSEMBLED.  
 NE SERREZ PAS LES BOULONS JUSQU'À CE QUE L'UNITÉ SOIT COMPLÈTEMENT ASSEMBLÉE.  
 KD FURNITURE SHOULD BE TIGHTENED PERIODICALLY TO AVOID BREAKAGE/DAMAGE. ANOID OVER TIGHTENING.  
 LOS SUJETADORES DE LOS MUEBLES KD SE DEBEN APRETAR PERIODICAMENTE A FIN DE EVITAR FOTURAS/DANOS.  
 PROCURENO APRETAR EN EXCESO.