



<3>


Long spacing
between eyelets

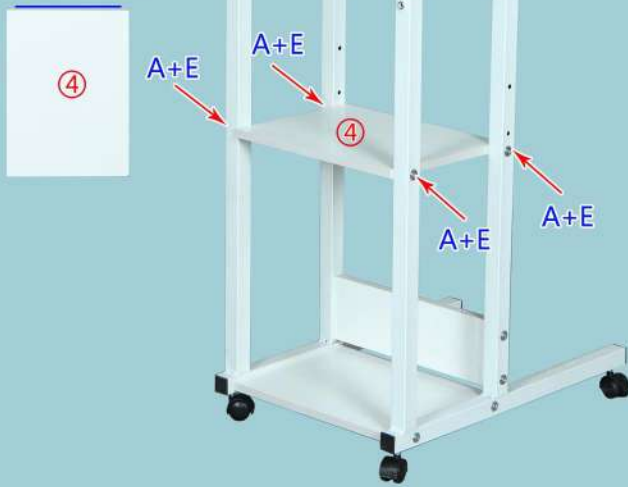

<4>

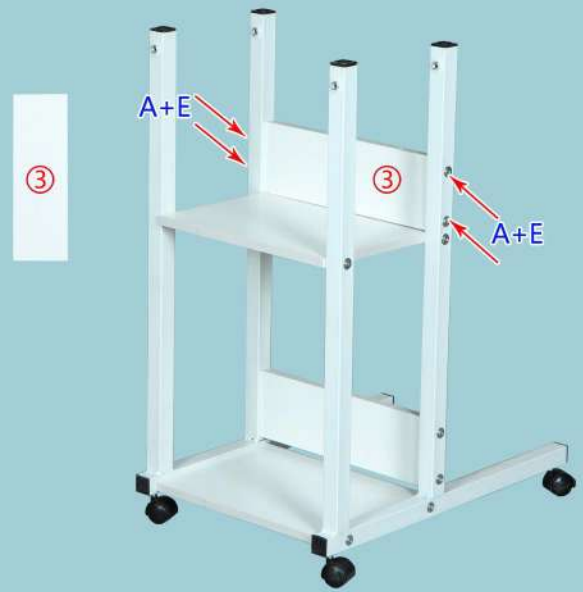


<5>

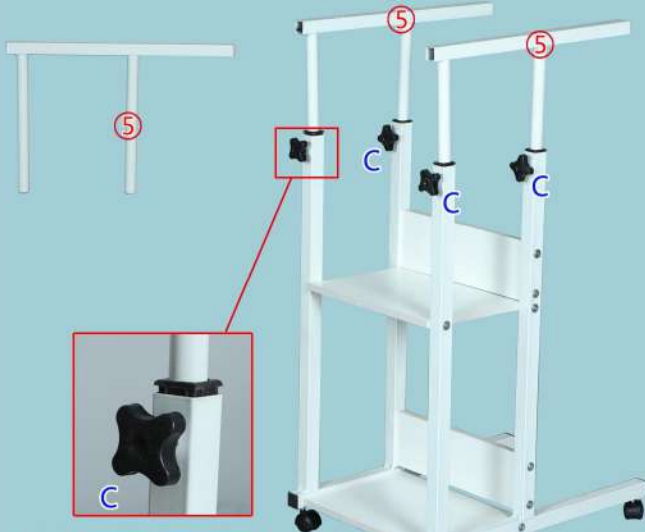

Adjust the height to parallel and
tighten the plum blossom screw

<6>

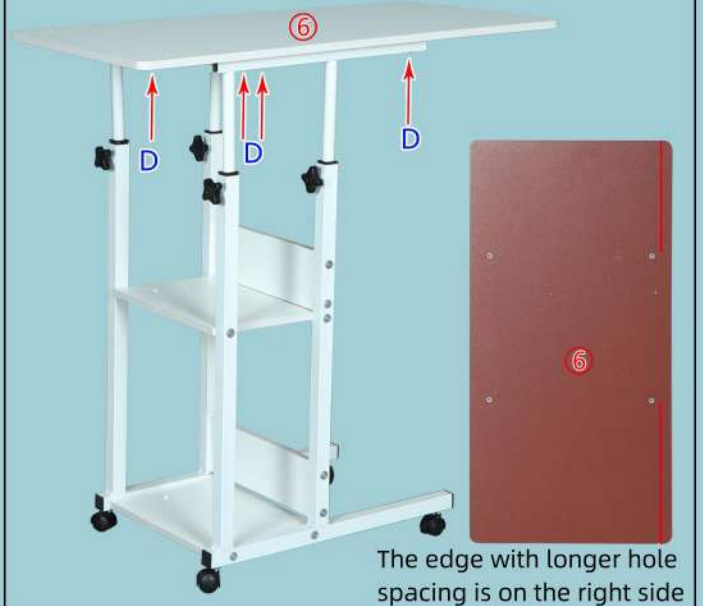

<7>



Installation completed!