


INSTRUCTION MANUAL

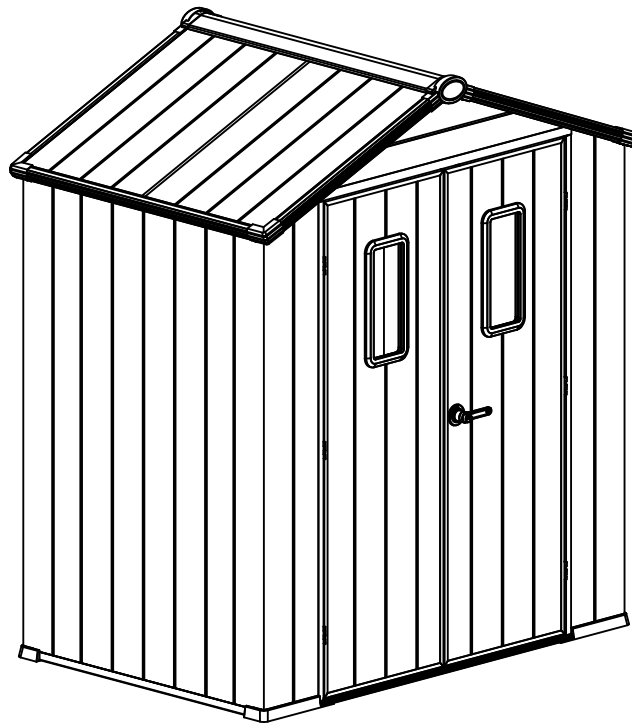

OUTDOOR 6'x4' STORAGE SHED

IF YOU PURCHASED THE OUTDOOR STORAGE SHED ONLINE
AND HAVE ANY QUESTIONS OR CONCERNS
CONTACT US VIA EMAIL, TEXT, OR PHONE

EMAIL: service2outdoor@gmail.com

TEXT(SMS ONLY): +1 628-263-4608

PHONE: +1 877-561-6450

Date of Manufacture: 25W11

Warnings and Cautions

Thank you for choosing our outdoor storage shed. Please read and understand this entire manual before attempting to assemble or install the product.

The shed is intended for storage purposes only. It is not designed for habitation.

GENERAL BEST PRACTICES FOR ASSEMBLY

1. Please check with your local governing authority/local municipal codes regarding installation and permitting of such structures before assembly.
2. The assembled outdoor storage shed should be located at least 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry lines or electrical wires.
3. It is strongly recommended to secure the shed to an immovable object or anchor to the ground by drilling holes in the shed floor (at the pre-marked locations) and inserting proper screws into the ground (screws are not included).
4. Familiarize yourself with the product and check all parts against the packing list. If any parts are missing or damaged, do not install. Contact us immediately.
5. Always wear work gloves, safety goggles and long sleeves when assembling or performing any maintenance on your shed.
6. Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
7. Require two or more people to assemble and install safely and correctly.

WARNINGS



To reduce the risk of serious injury, read the following safety instructions thoroughly before assembling and using the outdoor storage shed.

8. The product is required to be installed on a level solid surface and is not intended for unsecured use. The outdoor storage shed is to be anchored to the surface with appropriate bolts or anchors. Do not assemble the shed on soil, earth, or bare ground.
9. Keep children and pets away from the working area during assembly and adjustments.
10. Please ensure that there is no snow or leaves on the roof. A large amount of snow on the roof can damage the cabin and make it unsafe. This product has passed the level 8 (46 miles per hour) of the wind resistance, and the roof load test with a capacity of 800 pounds.
11. On snowy days, it is necessary to regularly clear the accumulated snow. You can use plastic rakes to remove the excessive snow and ice blocks on the roof. Take corresponding safety precautions to prevent the fallen snow from causing damage.
12. Do not leave children unattended around or inside outdoor storage sheds.
13. The weight of the items hung on the hooks inside the roof should not exceed 30 pounds.
14. Avoid using a lawnmower or mechanical scythe near the shed.
15. Wash the shed with a garden hose or a mild detergent solution. Do not use a metal brush or abrasive cleaners, including degreasers and oil- or acetone-based cleaning materials, as these may stain or damage the shed.
16. Do not store hot items, such as recently used grills and blowtorches, and volatile chemicals in the shed.

17. Wind direction is an important factor to consider when determining the location of the shed. Reduce exposure to the wind, in general, and of the door side in particular. Keep doors closed and locked when the shed is not in use to prevent wind damage.

18. Do not stand on the roof.

WARRANTY

WHAT IS COVERED?

The limited warranty is extended to the original purchaser and applies to material and manufacturer's defect provided the item is maintained with care and used only for personal residential purposes.

Warranty: 6 months

Lost Accessories or Parts Policy:

Lost accessories or parts costs will be incurred after 90 days of the date of purchase.


TIP: Our products have been designed for safety and quality. Any modifications made to the original product could damage the structural integrity of the product leading to failure and possible injury. We can not assume any responsibility for modified products. Furthermore modifications void any and all warranties.

Site preparation


1. Leveling the ground.




2. Recommendation: Construct a wooden or concrete base as a foundation.

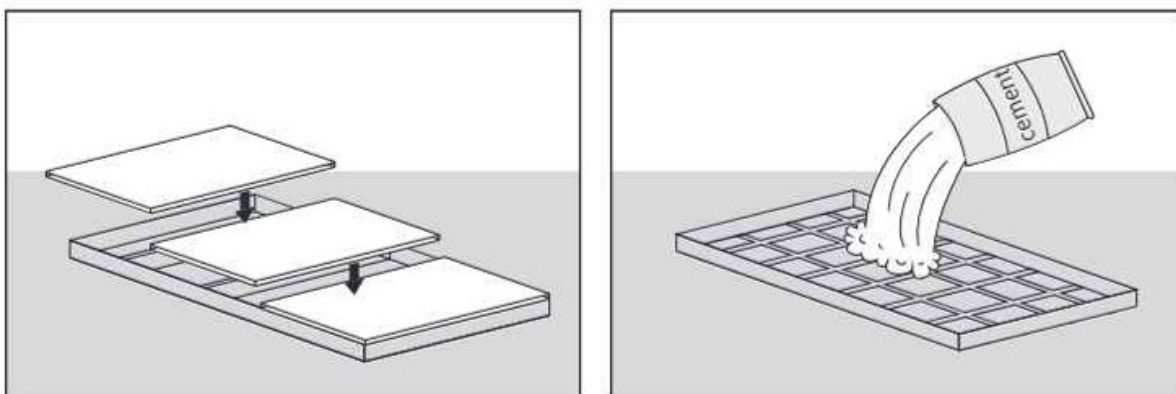












3. Parts are placed after unpacking.

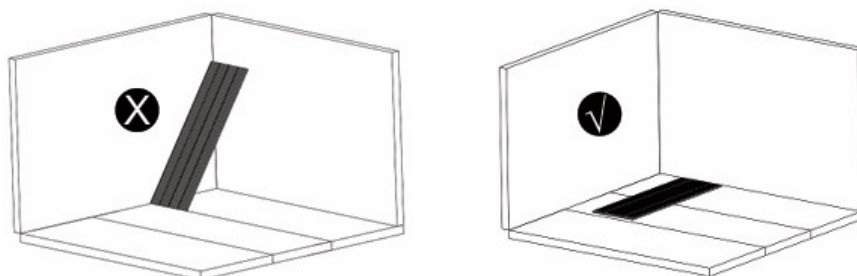













Tools Needed (Not Included)




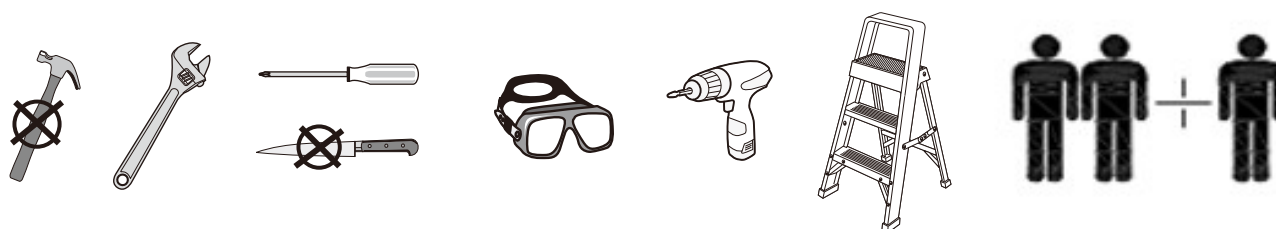


Parts List (Box 1)

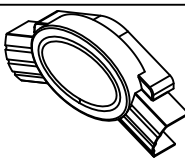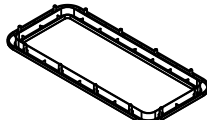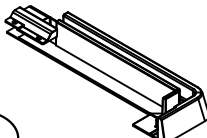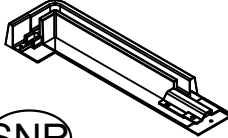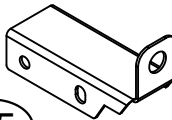
 (DR) 1x	 (DL) 1x	 (U1) 1x	
 (R2) 2x	 (D2) 1x	 (F2) 1x	
 (N2) 1x	 (Q3) 1x	 1755x603 (A3) 1x	 1755x568 (A4) 1x
 1850x617 (B1) 1x	 1850x617 (B2) 1x	 1865x604 (B4L) 1x	 1865x604 (B4R) 1x
 1775x617 (B7) 2x	 1865x589 (B9L) 1x	 1865x589 (B9R) 1x	 (B10A) 1x
 (B10B) 1x	 1825x598 (B14L) 1x	 1825x598 (B14R) 1x	 923x617 (C5) 4x
 (SA) 2x	 (SE) 2x	 (SEI) 2x	 (SEO) 2x
 (SH) 2x	 (SNL) 1x	 (SNR) 1x	 (SK) 1x
 (Y7) 1x	 (X1) 2x	 (X2) 6x	 (X3) 1x
06	 (X5) 1x	rubber sealing strip  (X7) 1x	 (X8) 2x
			 (X9) 2x

Parts List (Box 2)

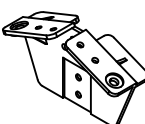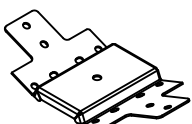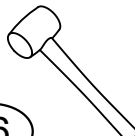
 (DT2) 1x	 (P4) 2x	 (U6) 1x	
 (D4) 2x	 (E2) 1x	 (F5) 2x	 (F8L) 1x
 (F8R) 1x	 (H1) 2x	 (J2) 4x	 (K2) 4x
 (SCA) 2x	 (SCB) 2x	 (SJ) 2x	 (SP) 2x
 (X4) 1x			
TOOL:			
NOTE: The plastic pieces are guide pieces to assist in inserting wall panels.  (Y8) 2x	 (Y1) 1x	 (Y2) 5MM 1x	 (Y3) 1x
	 (Y6) 1x		
 1 ST3.8x12 28x	 2 ST3.8x14 156x	 3 ST3.8x12 36x	 4 ST4.8x32 31x
 5 ST4.2x16 4x	 6 ST2.8x12 30x	 7 M6x15 14x	 8 M6x40 4x
07	 9 M6 5x	 11 M6 5x	 12 M8x80 5x
			 13 1x

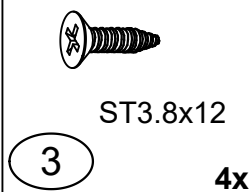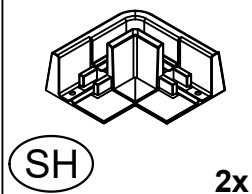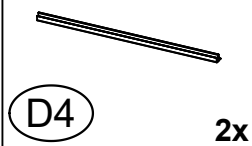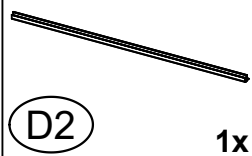



<1>

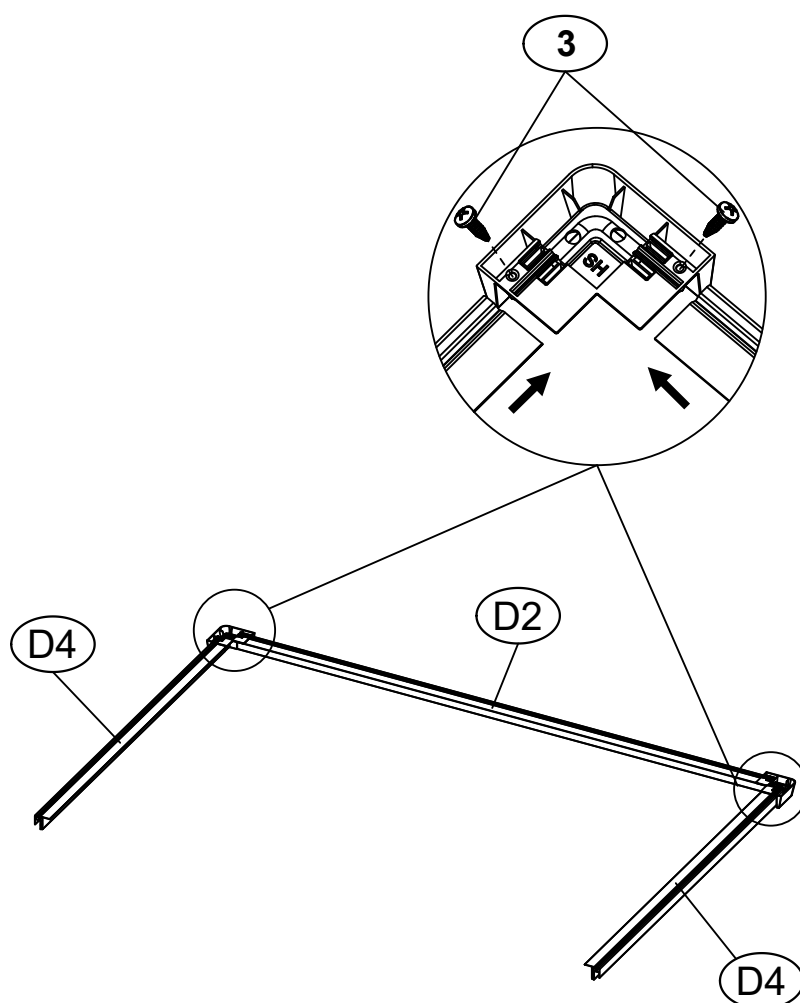


After the components are assembled, they need to be turned over and fixed with screws.

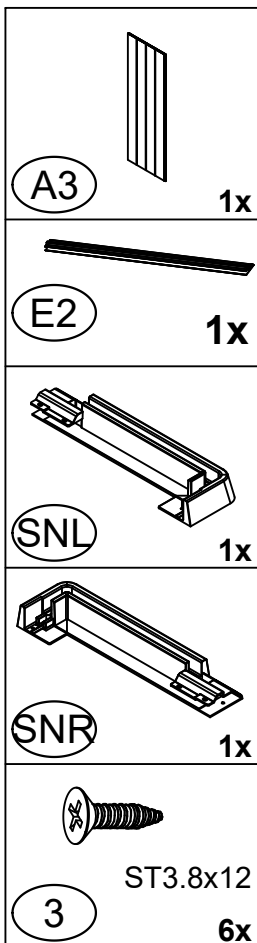



<2>

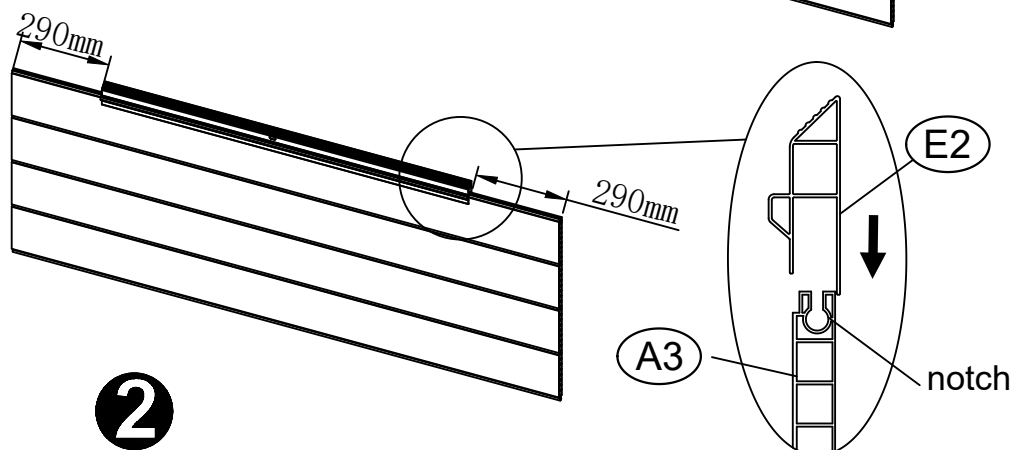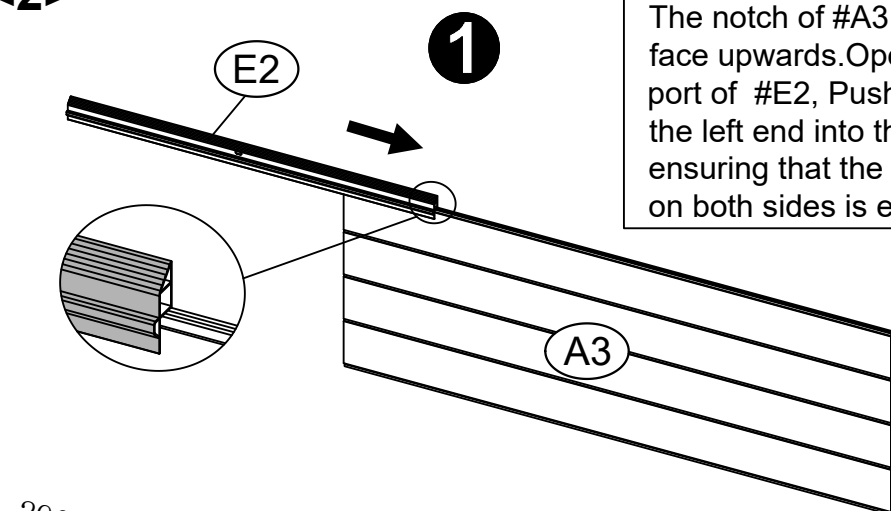


2

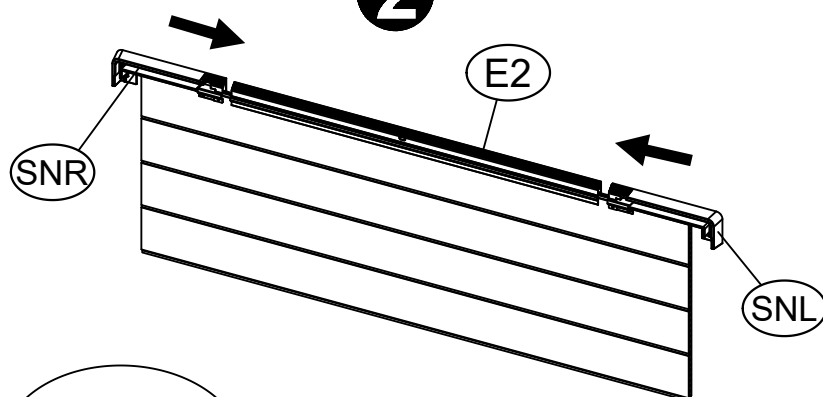


Insert the #E2 card into the left threshold #SNL and the right threshold #SNR of the front door. Gently tap the left and right thresholds as shown in the enlarged picture to ensure that the bottom plate #A3 is flush with both sides of the left and right thresholds, fix the above components with 6pcs #3 screws.

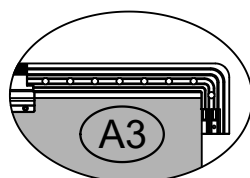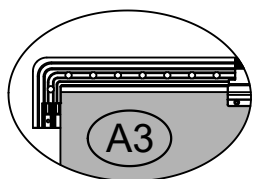


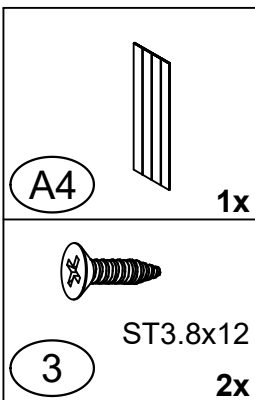


<3>

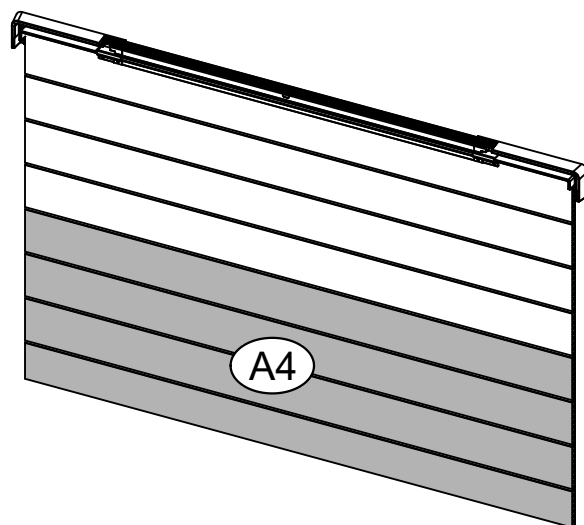

1







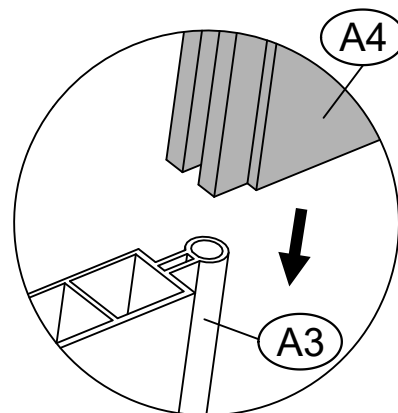


2




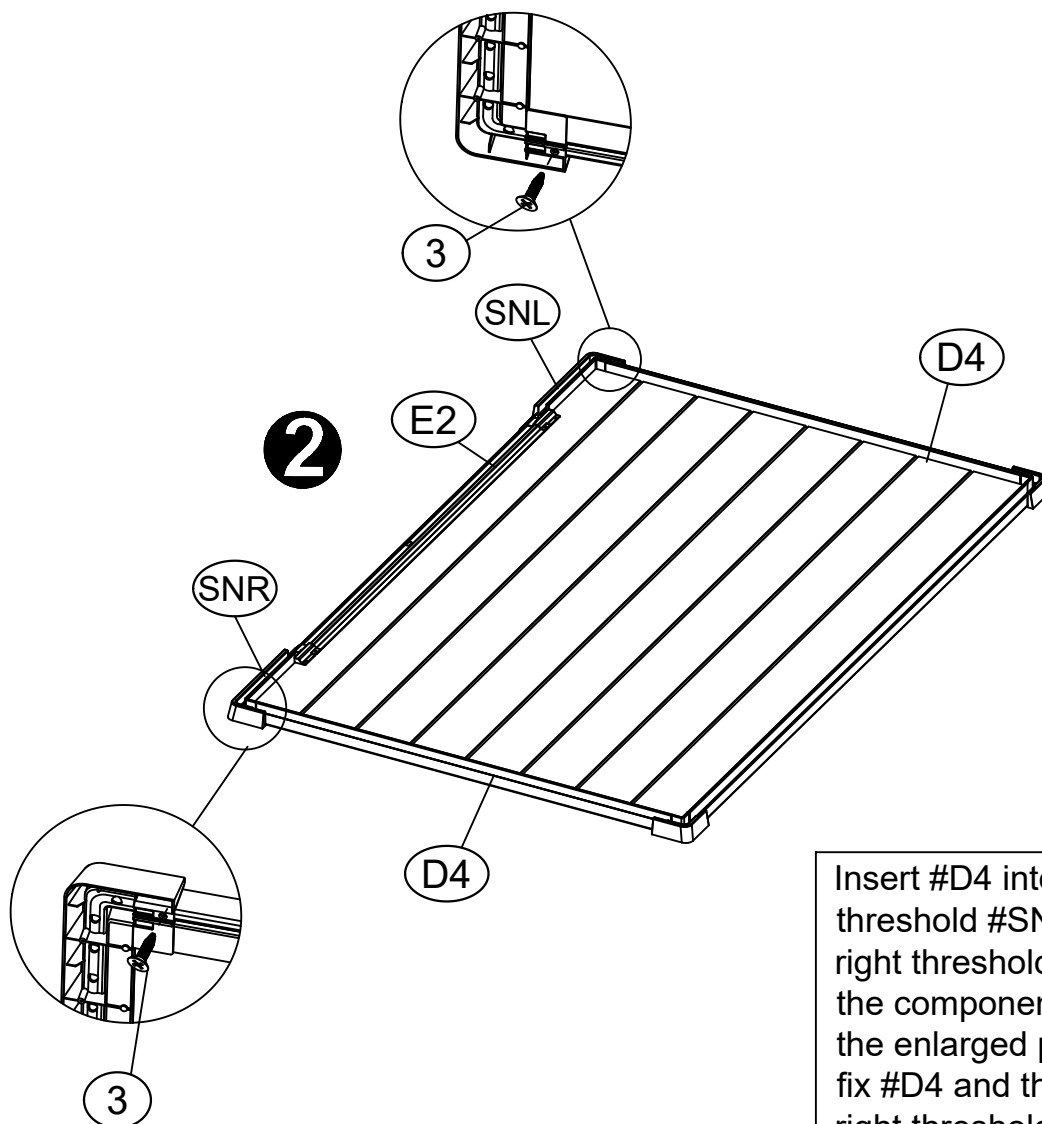


Insert #D4 into the left threshold #SNL and the right threshold #SNR. Lift the component circled in the enlarged picture and fix #D4 and the left and right thresholds with 2pcs #3 screws. This step requires the assistance of 2 to 3 people.





<4>

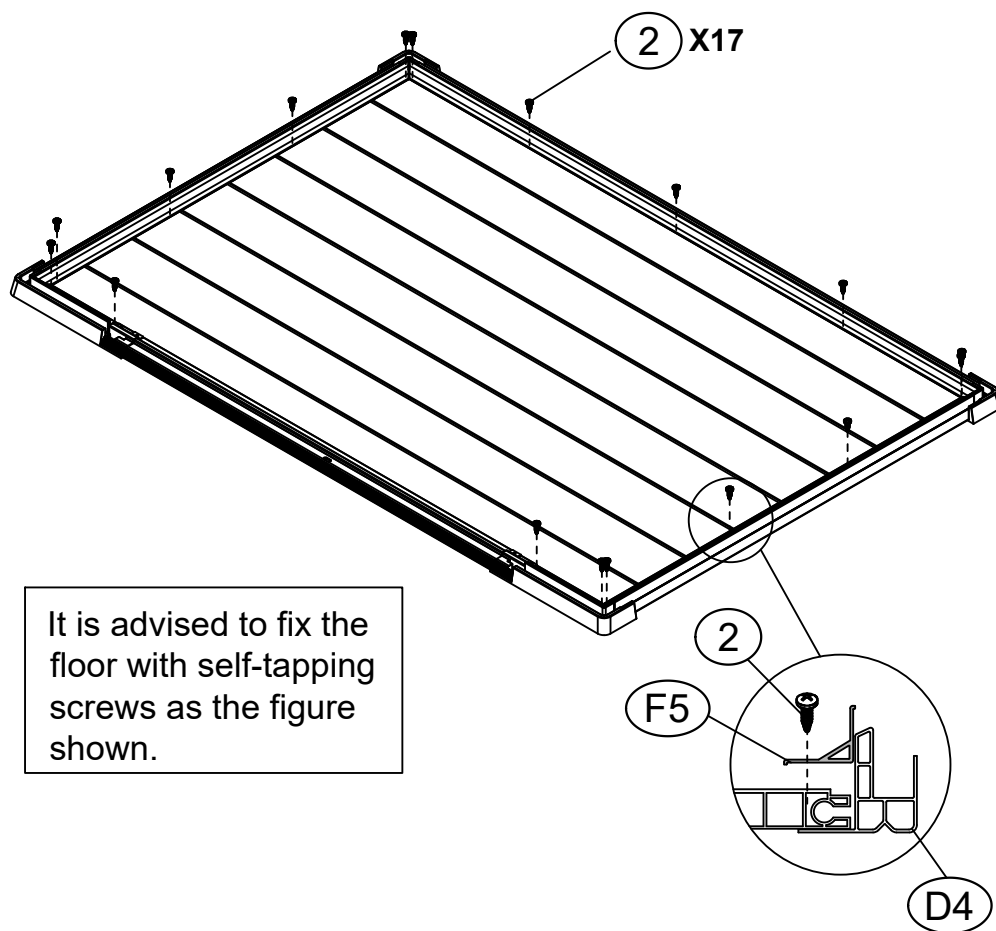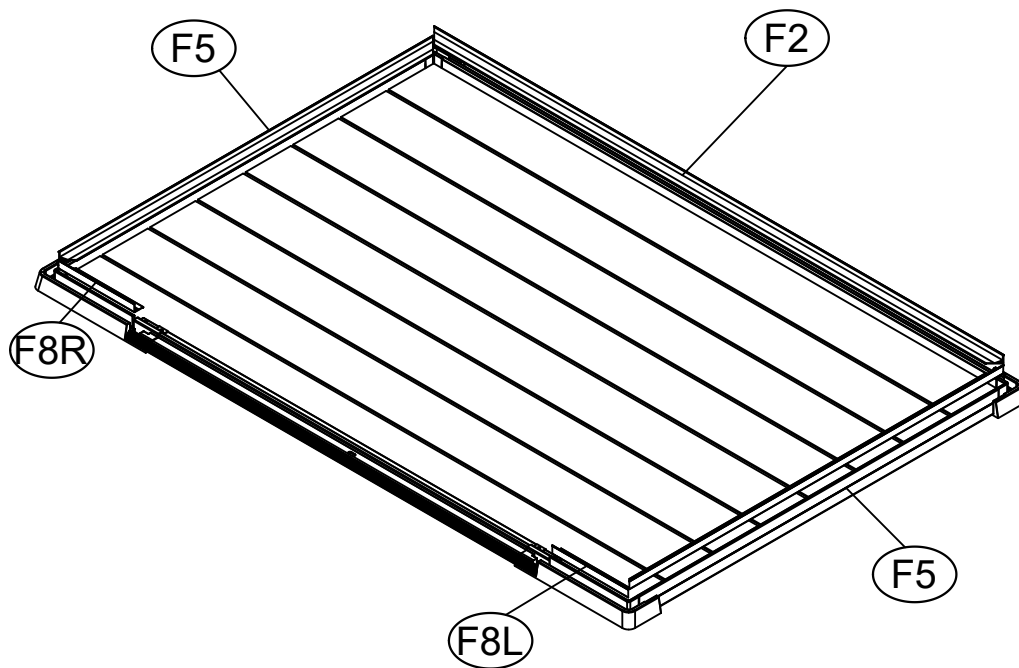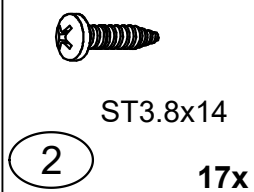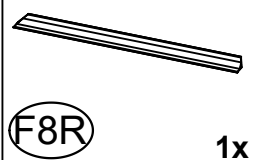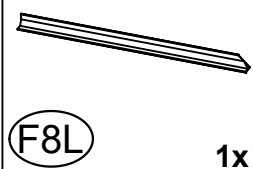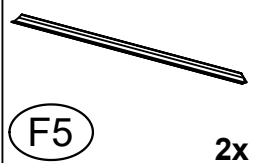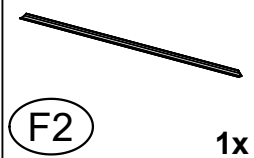



It is advised to fix the floor with self-tapping screws as the figure shown.

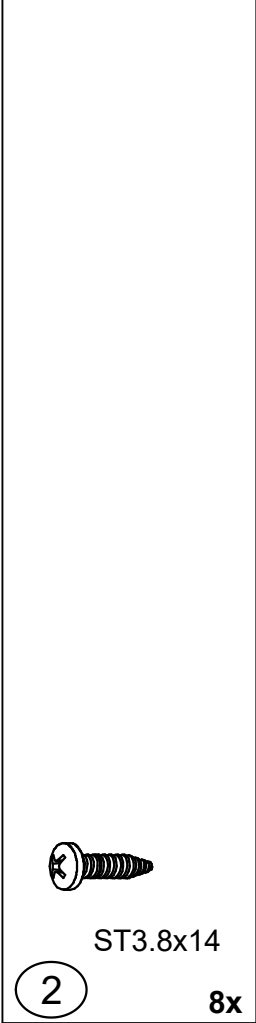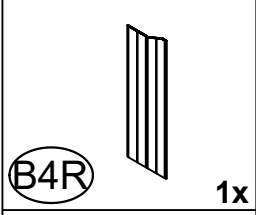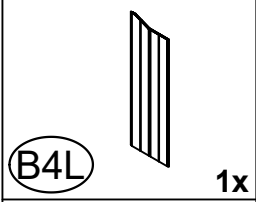







<5>

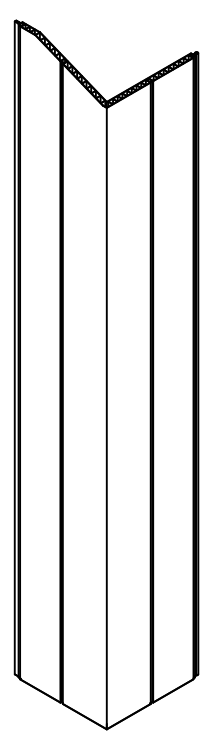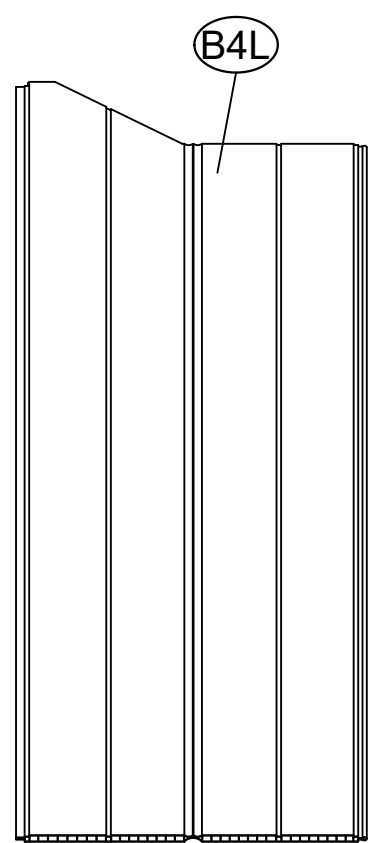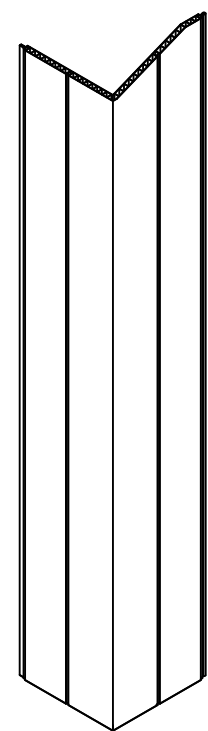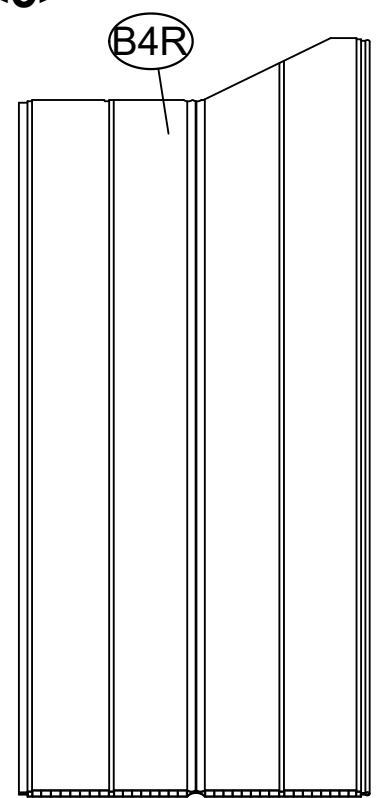

NOTE: Bend inward, the smooth surface is on the inside. Please use the plastic guide pieces to help insert the wall panels to the bottom

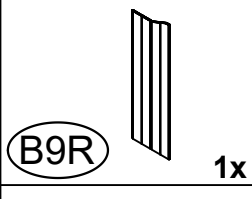
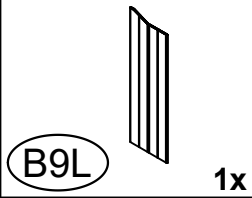


<6>

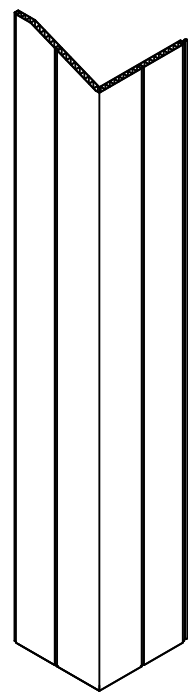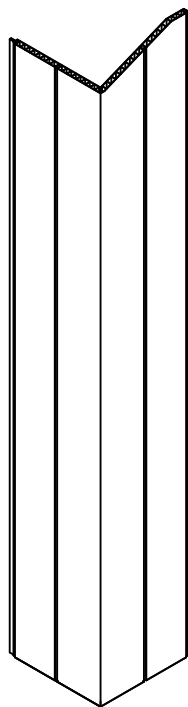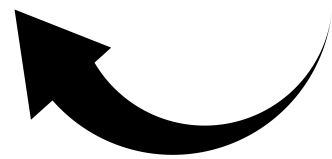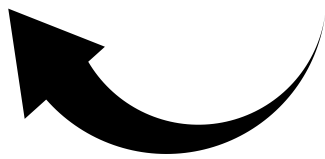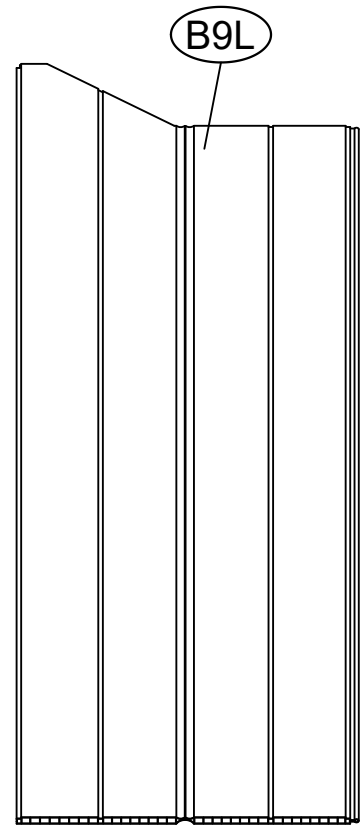
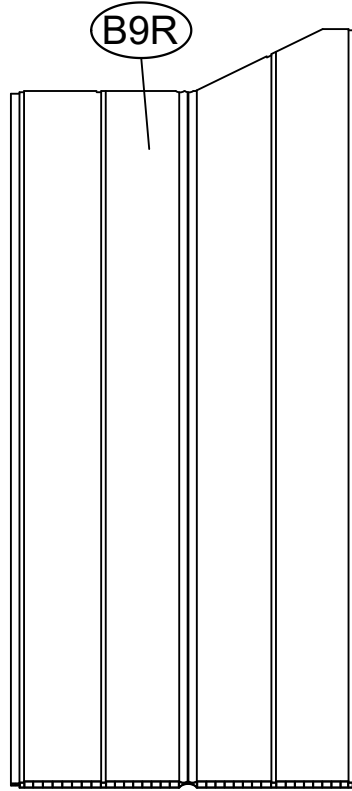



NOTE: Bend inward, the smooth surface is on the inside. Please use the plastic guide pieces to help insert the wall panels to the bottom

<7>

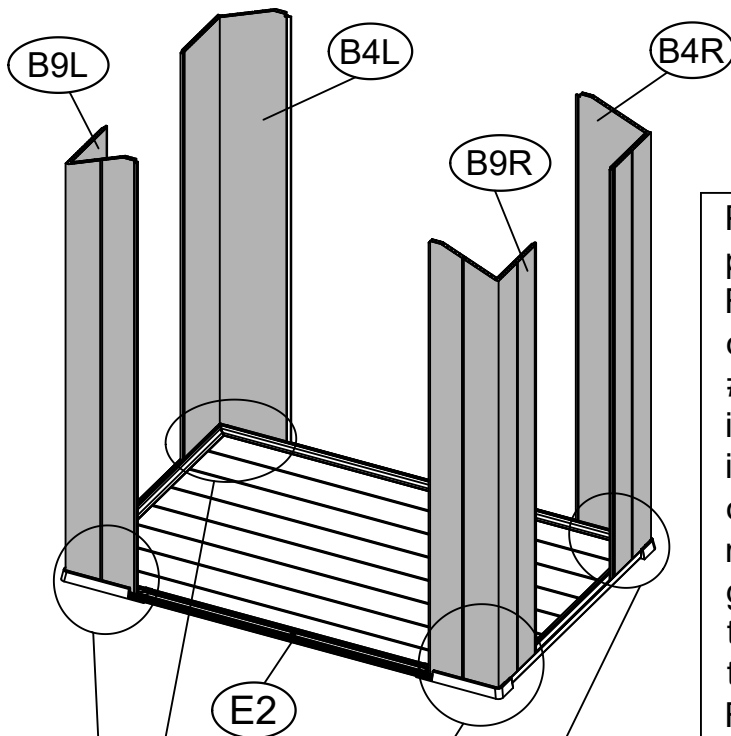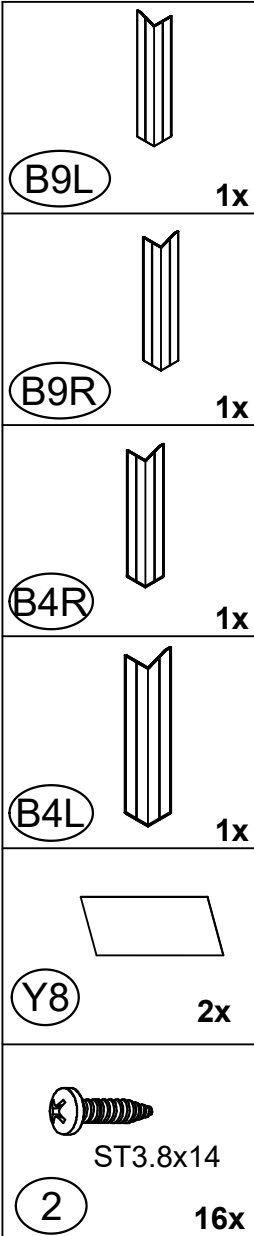


Place 2pcs #Y8 at the position shown in Figure 1. First, tilt #B4L or #B4R or #B9L or #B9R and insert them into one side, then insert them into the other side. After that, remove the #Y8. After gently tapping the turning corners until they are in place, follow Figure 2 to fix the left and right turning corners with the bottom frame using #2 screws.

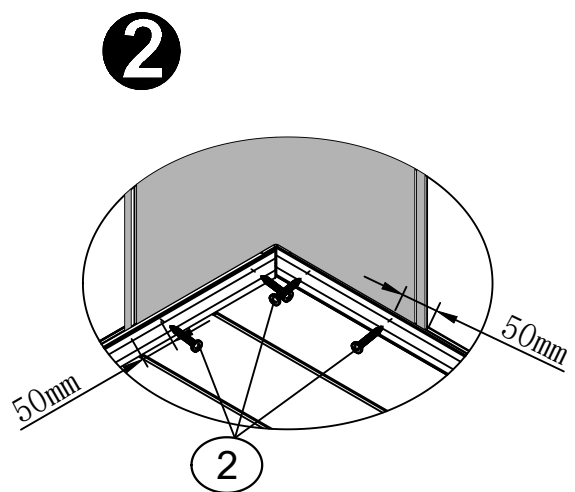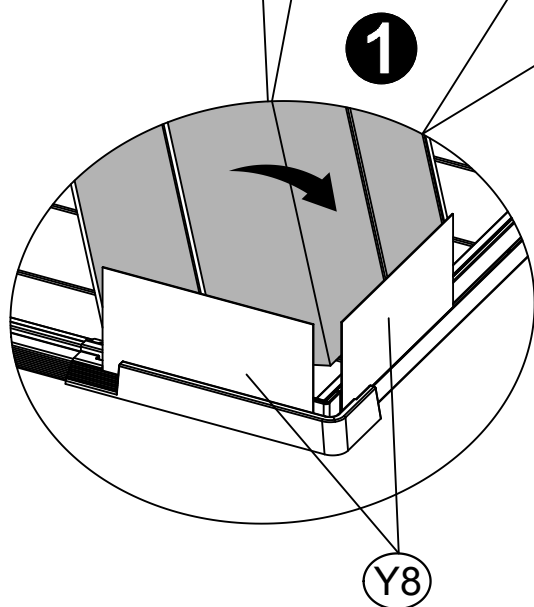

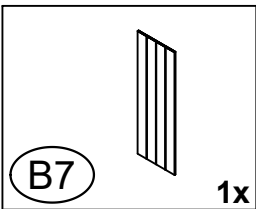

<8>

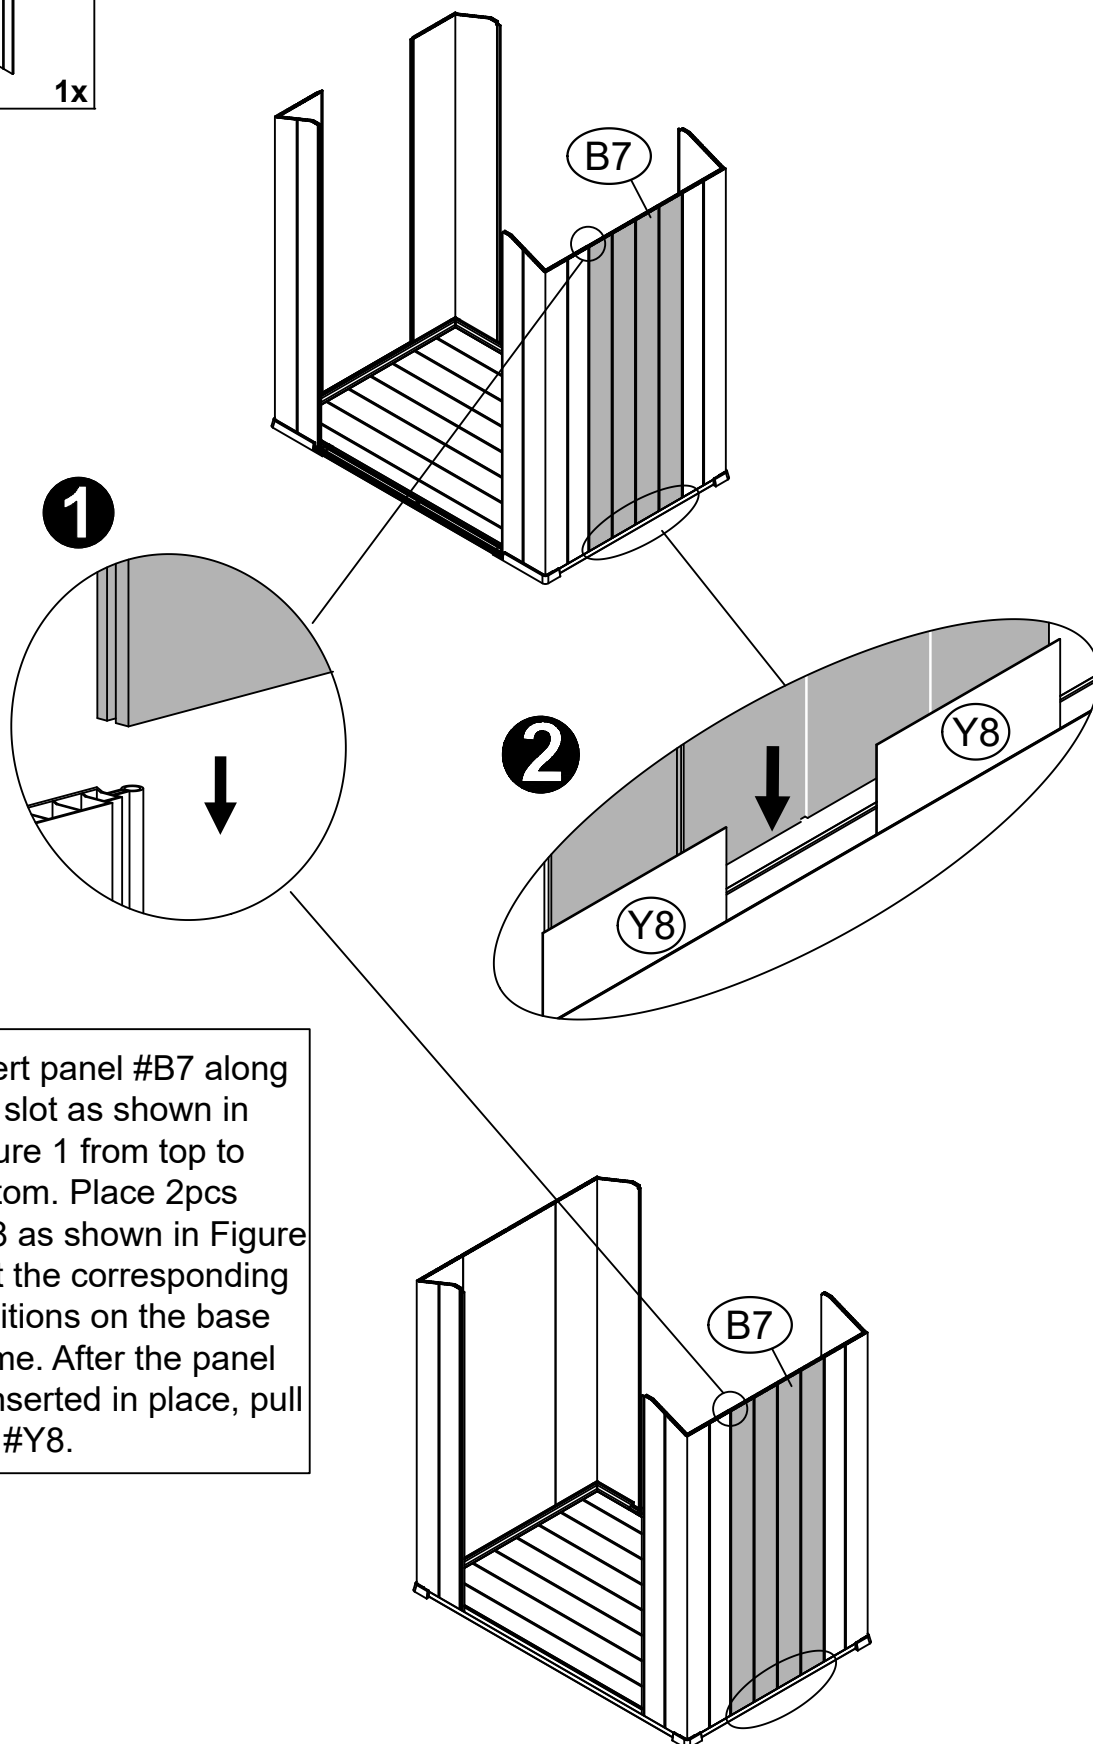

Insert panel #B7 along the slot as shown in Figure 1 from top to bottom. Place 2pcs #Y8 as shown in Figure 2 at the corresponding positions on the base frame. After the panel is inserted in place, pull out #Y8.


<9>

B1




1x

B2




1x

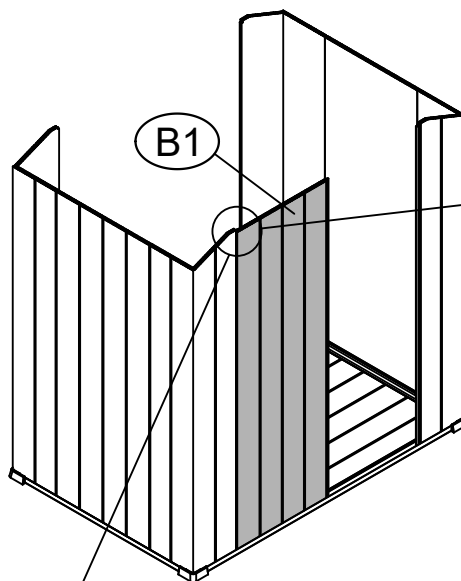


After installation
here, the top is
uneven


1

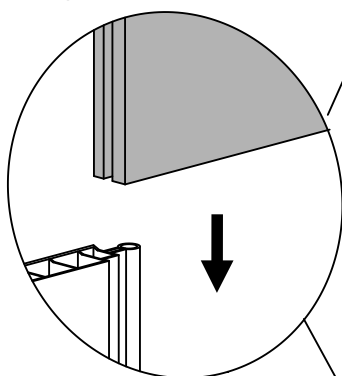

2

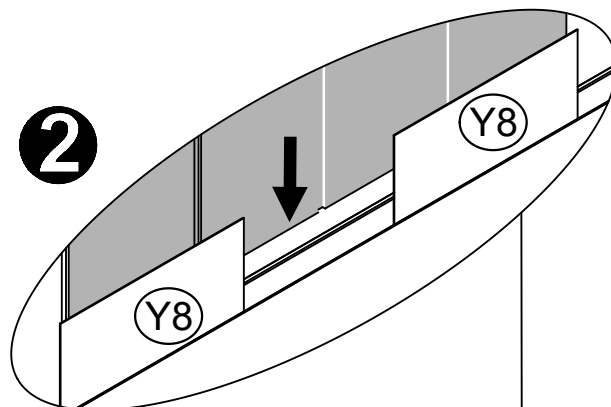

Repeat step 8 to
assemble #B1
and #B2 on the
other side.

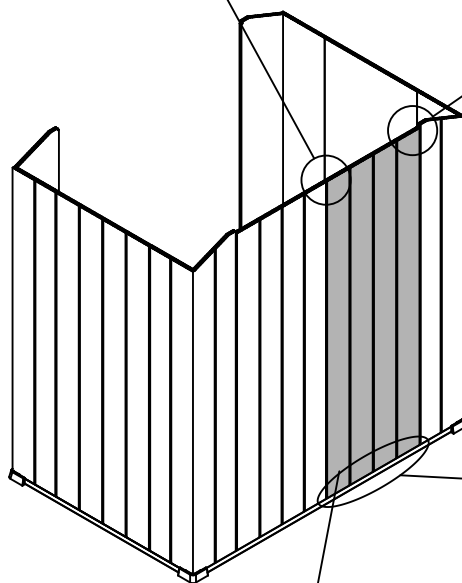

B2



ST3.8x12

1

28x




ST3.8x14




2

7x

<10>

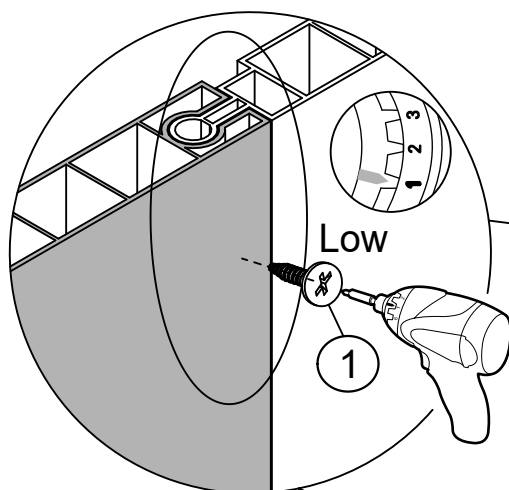




The screw is screwed in at the junction of the board

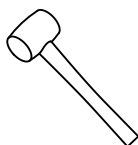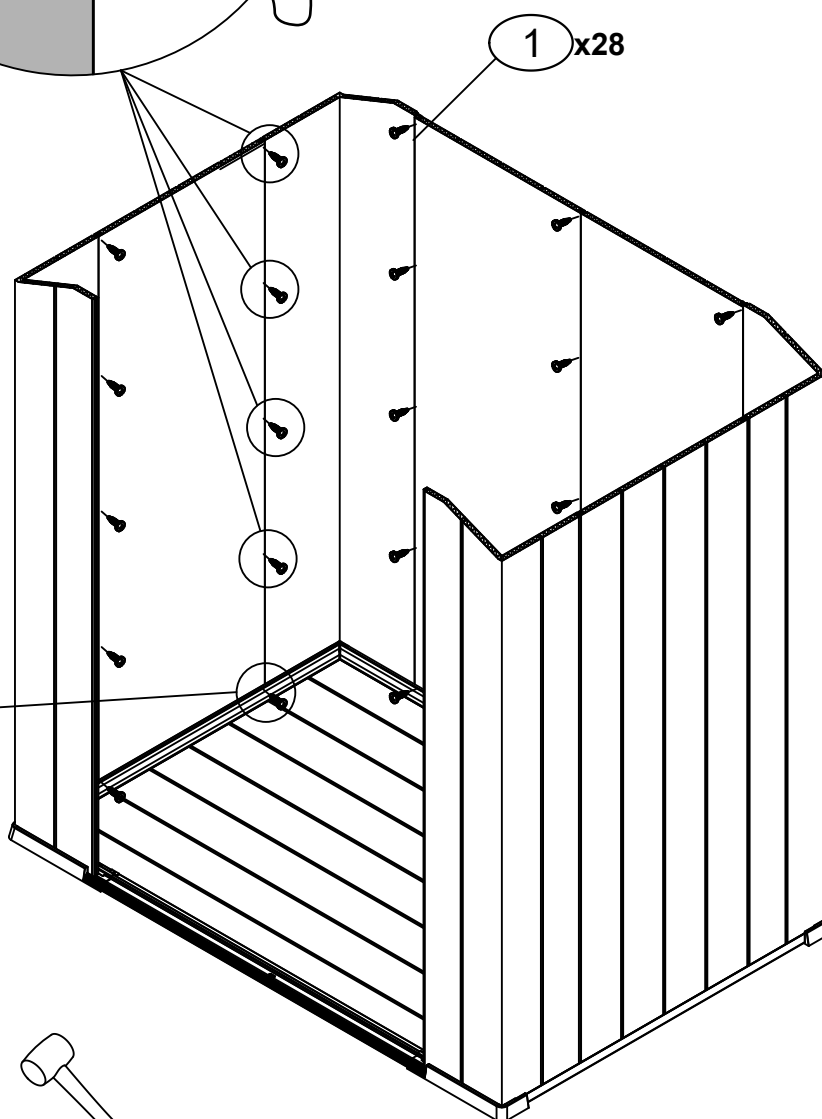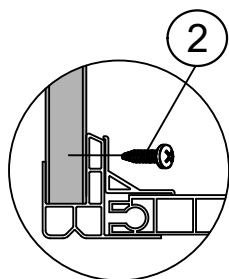

Tool:


Gently tap the top of each panel with a hammer to ensure they are all at the same level (except for the specially marked positions). Then screw in the screws for fixation. If there is slight deformation or damage at the ends of the components due to the tapping, it will not affect the assembly and use.

<11>





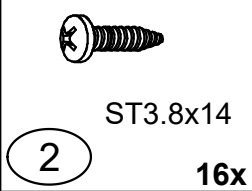
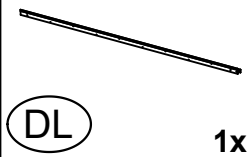
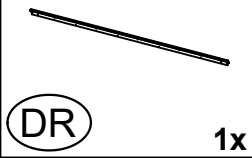


Do not screw the screw into the top hole first

Ensure proper installation before screwing in the self tapping screws

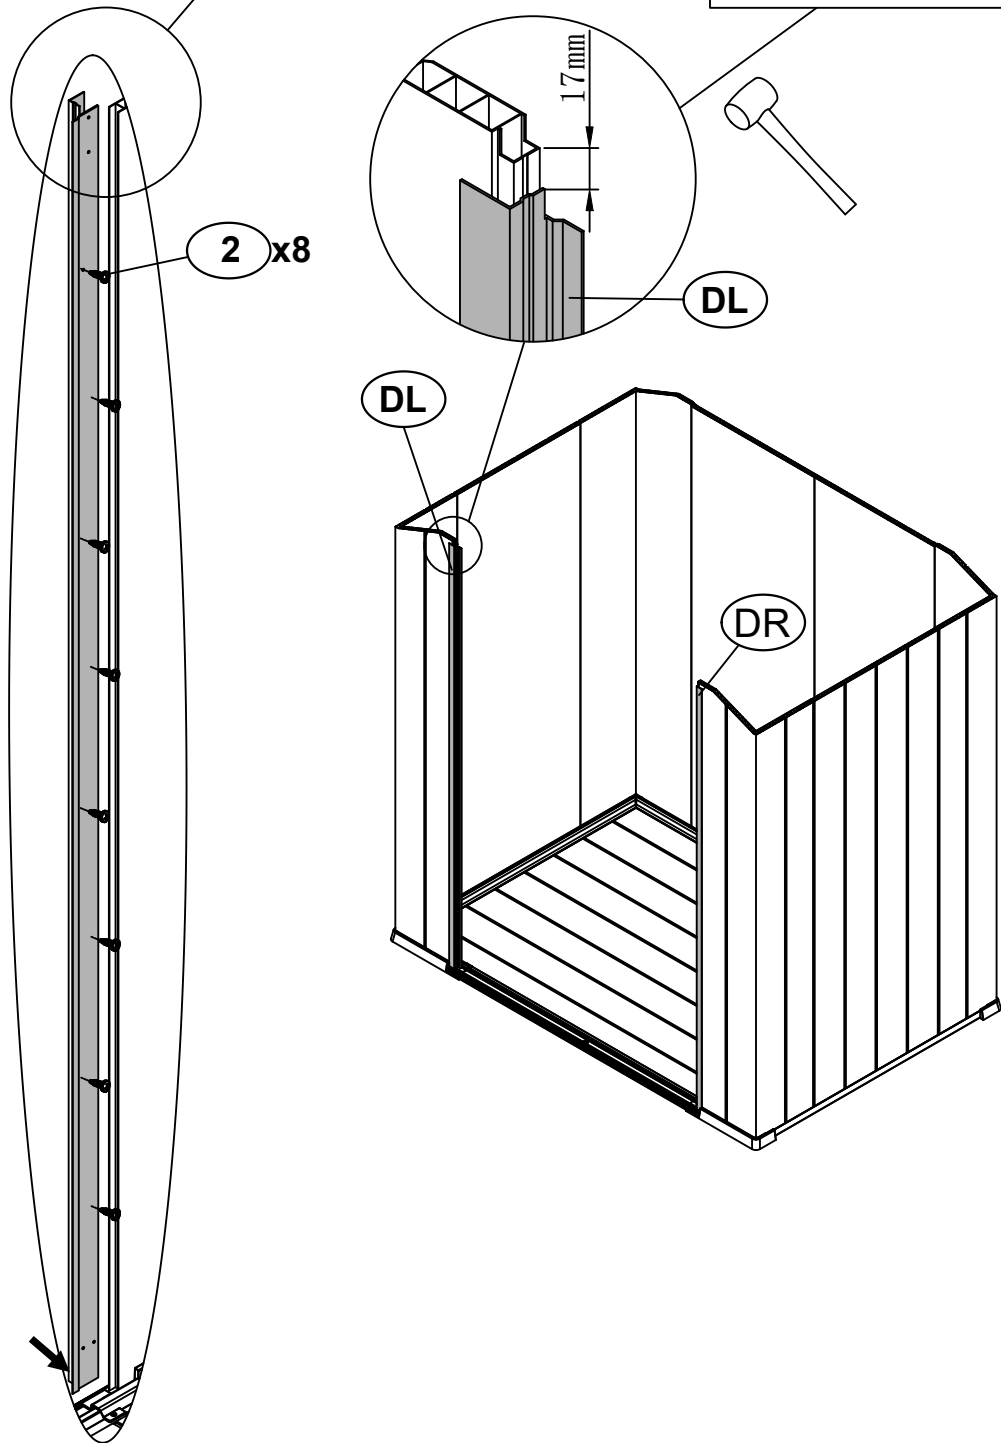

<12>

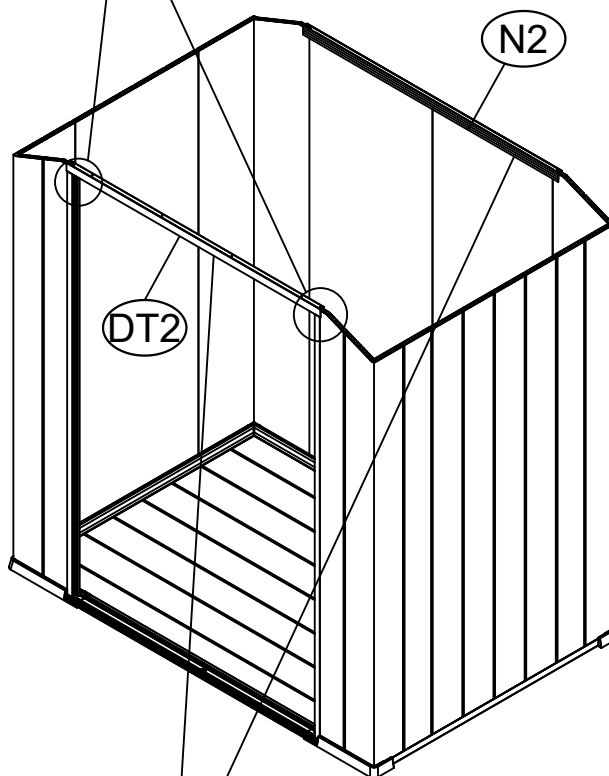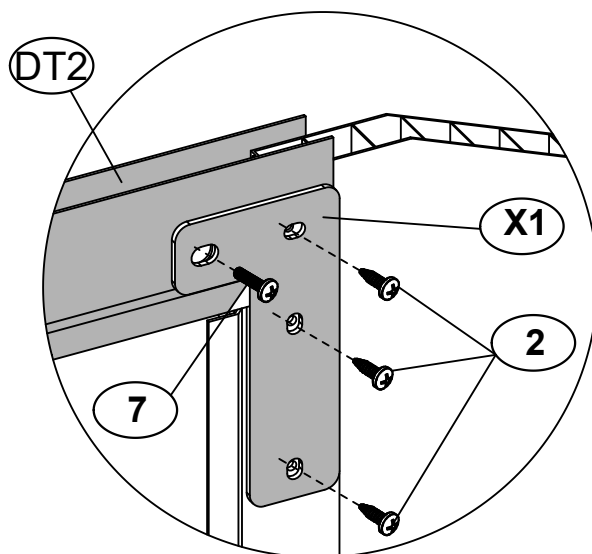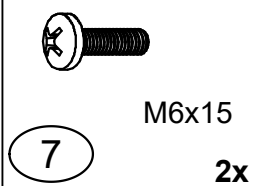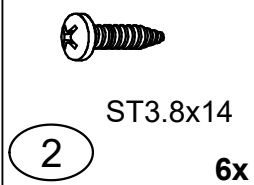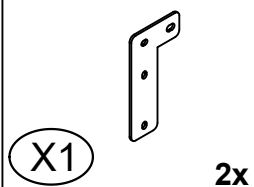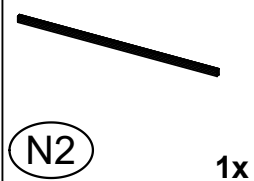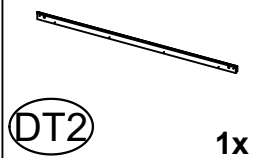

#DT2# and #N2# should be placed into the center as much as possible

<13>



B10A

1x



B10B

1x



ST3.8x14

2

8x





ST4.2x16

5

4x

Try to place it into the center as much as possible

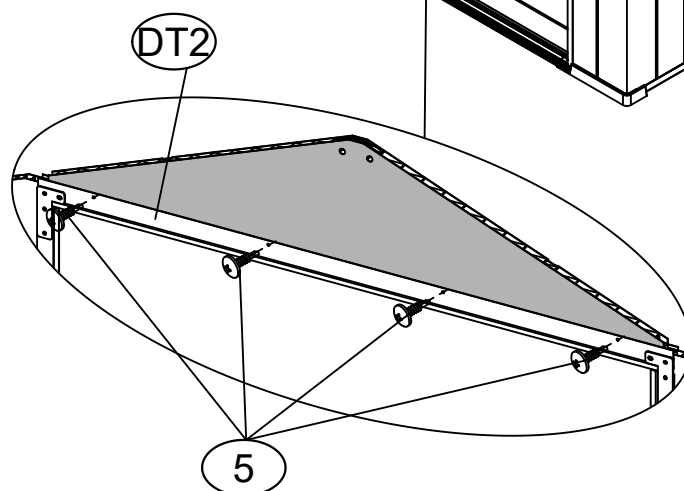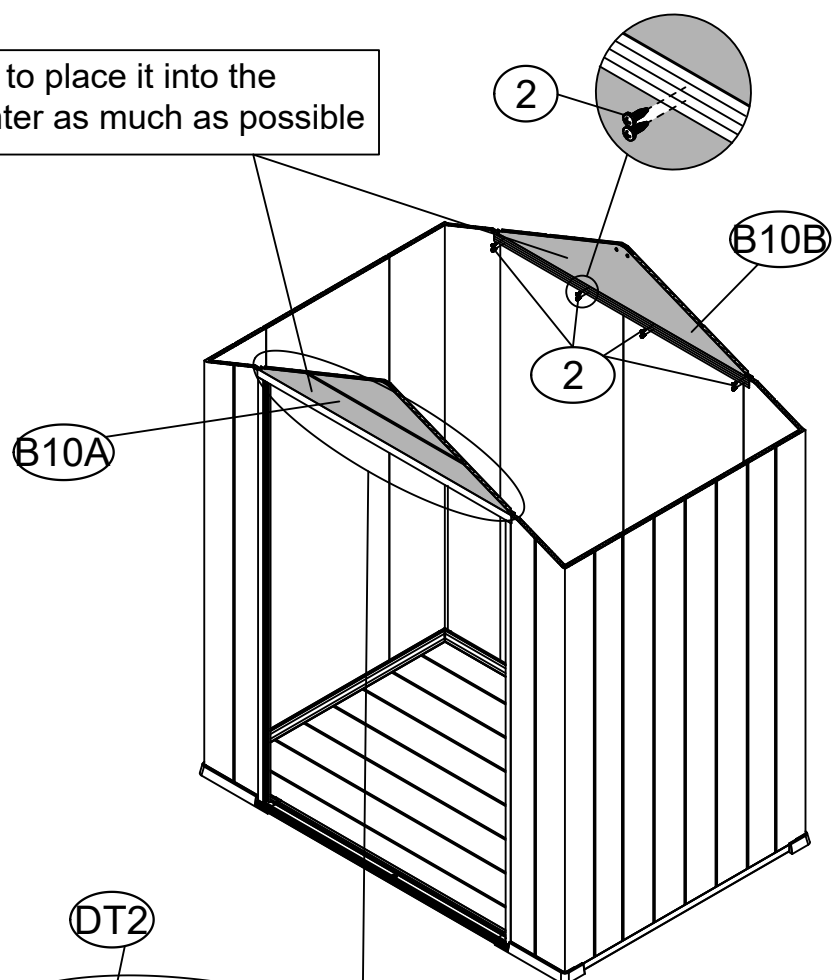


<14>




P4

2x

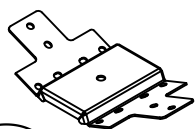

X4

1x

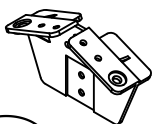

SJ




2x



M6x15

7

8x

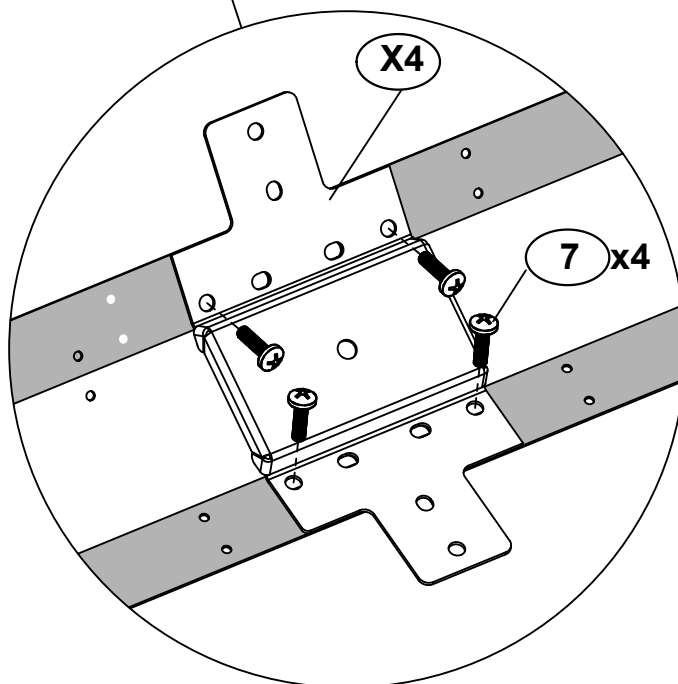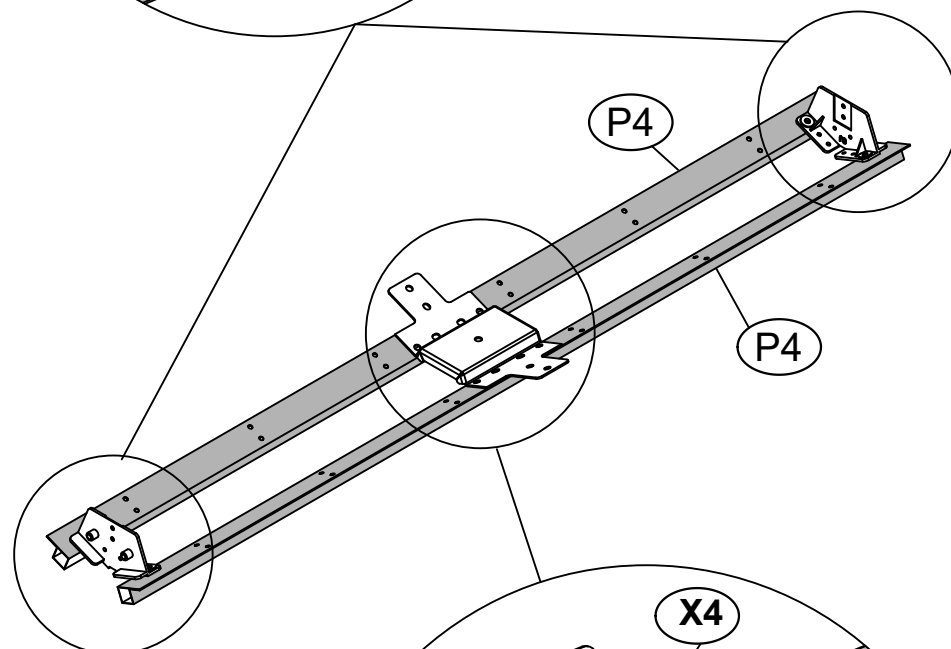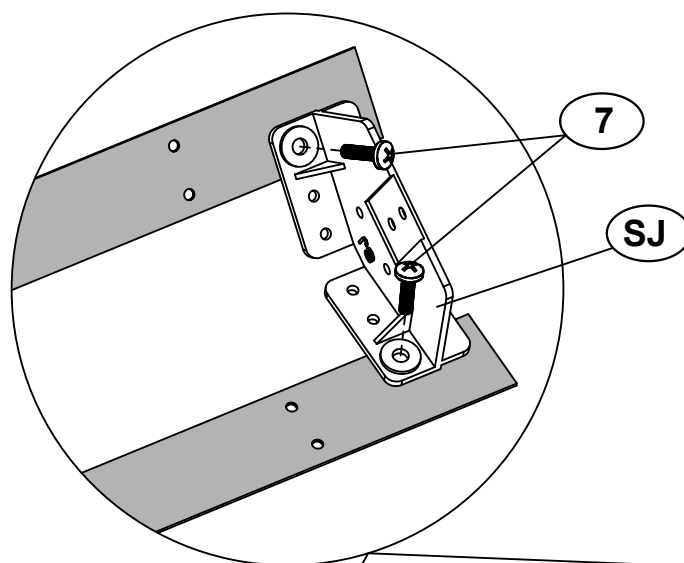




ST3.8x14

2

6x



13

1x



9

M6

1x







11




M6

1x


<15>

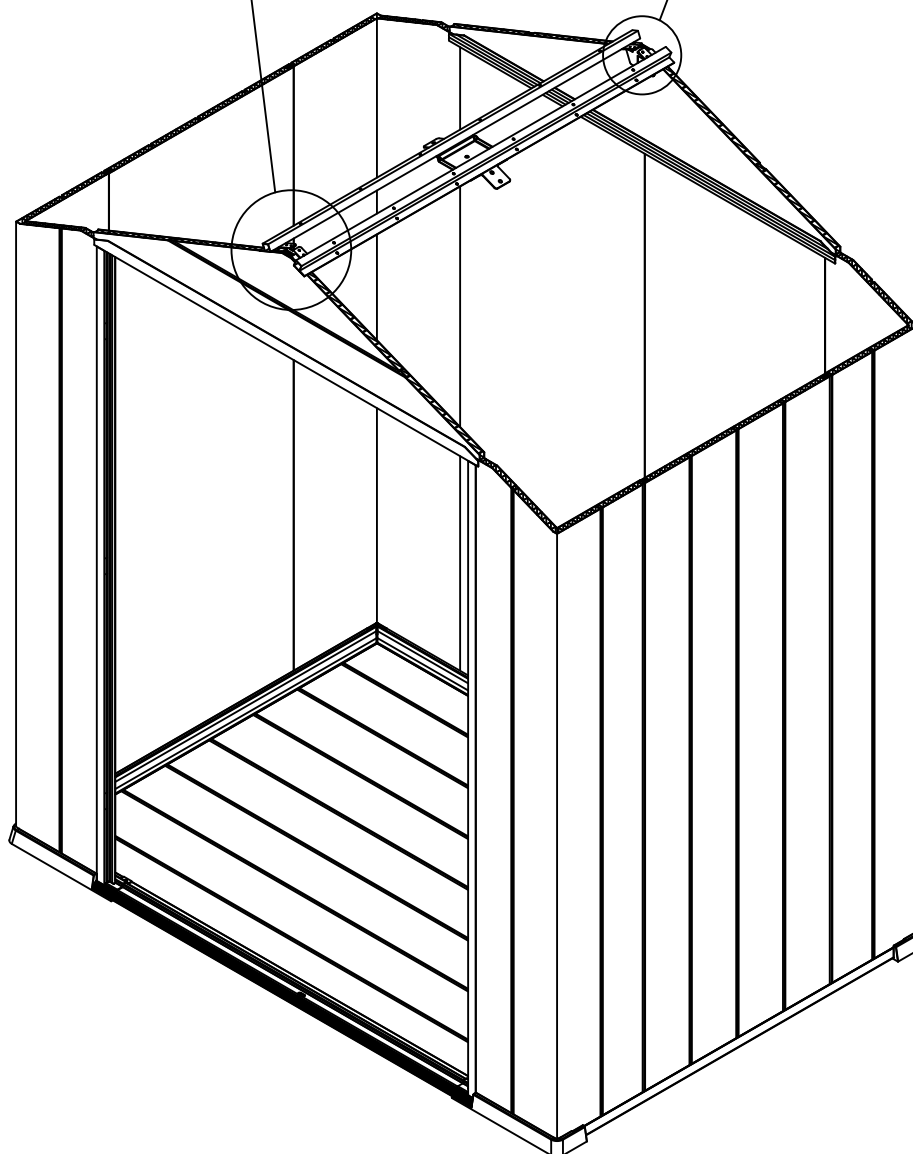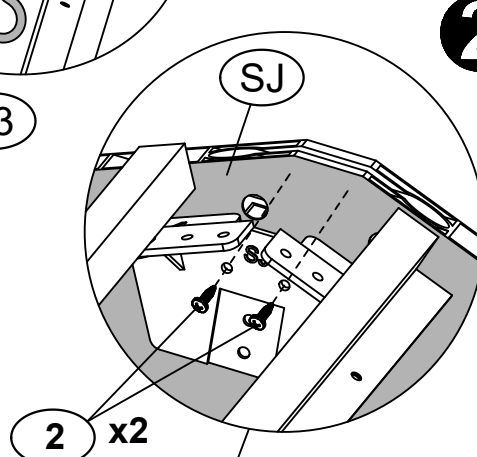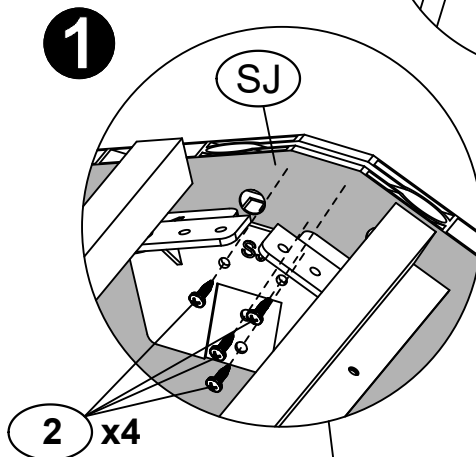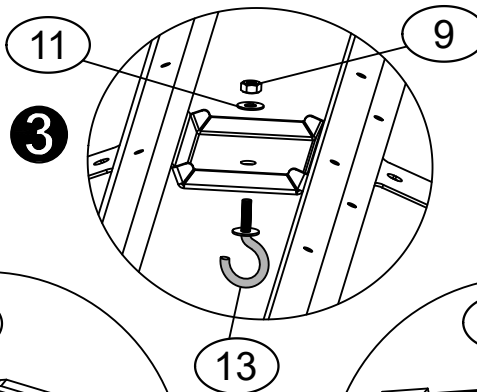

<16>

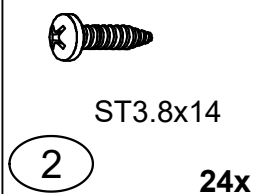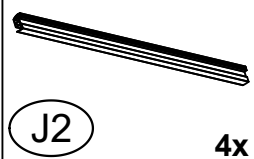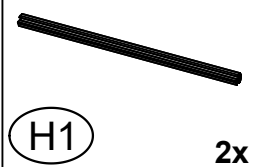

Note that #J2 is placed outside of #DT2 and #N2. The #Y8 component can be utilized for this purpose.

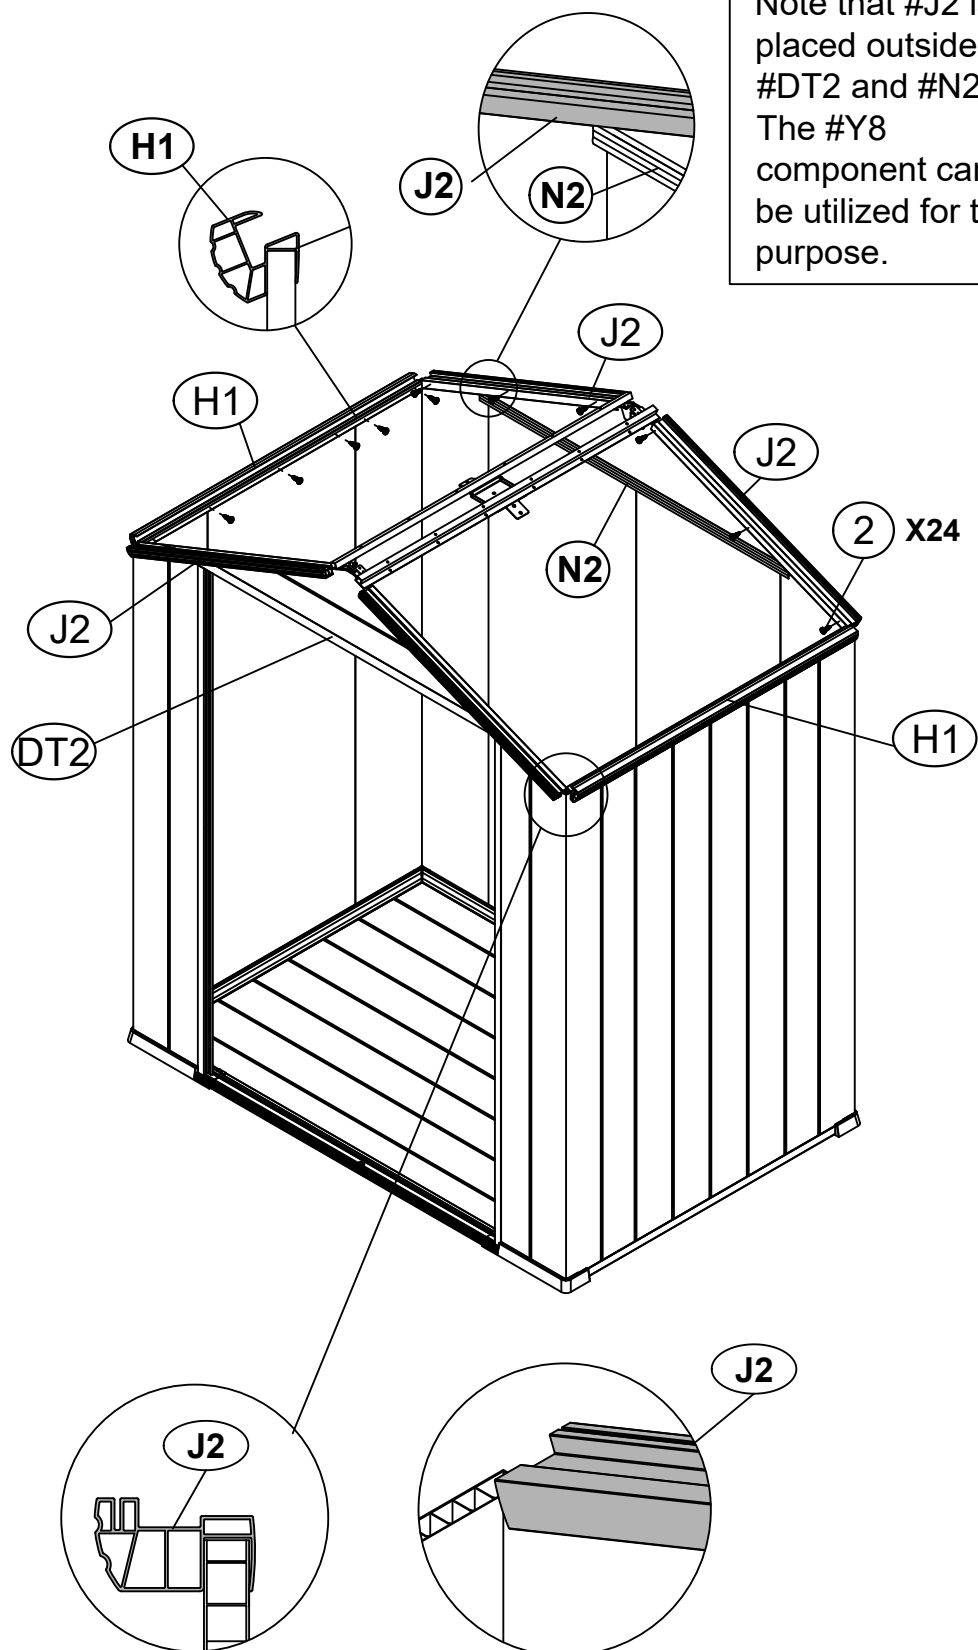


#J2 is placed tightly against the bottom edge



R2

2x




M6x15

7


4x

<17>


2

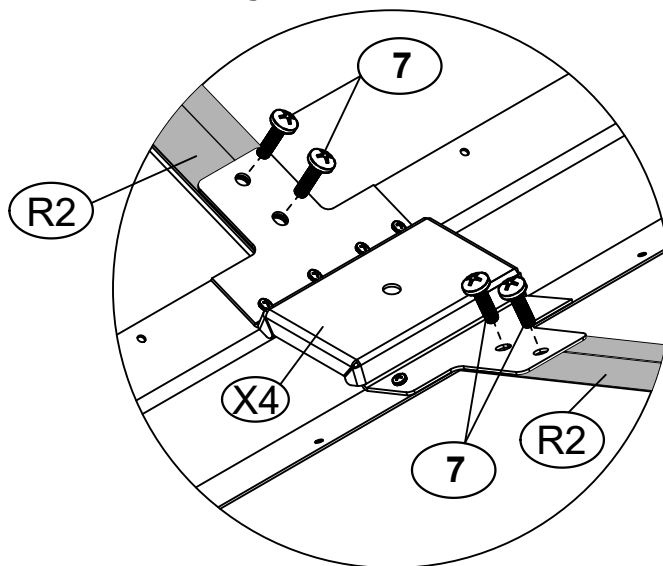


Insert the end of #R2 into the horizontal tube #H1 and position it centrally. Then, assemble #R2 and #X4 together using 4pcs #7 screws.

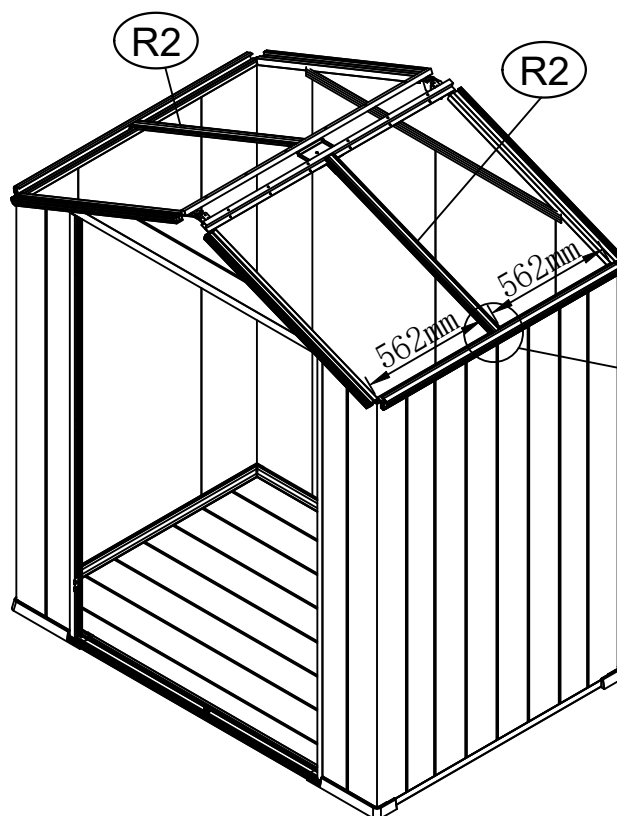



1

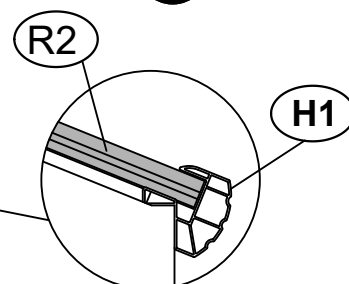

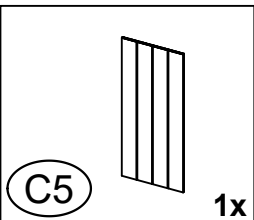


<18>

As shown in Figure 1, one person lifts and tilts #C1 towards #H1, while the other person gently tap #H1 with hammer #Y6 until #C5 is fully inserted into #H1. Then, as shown in Figure 2, gently tap #C5 with hammer #Y6 until the flat end of #C5 is fully inserted into #R2.

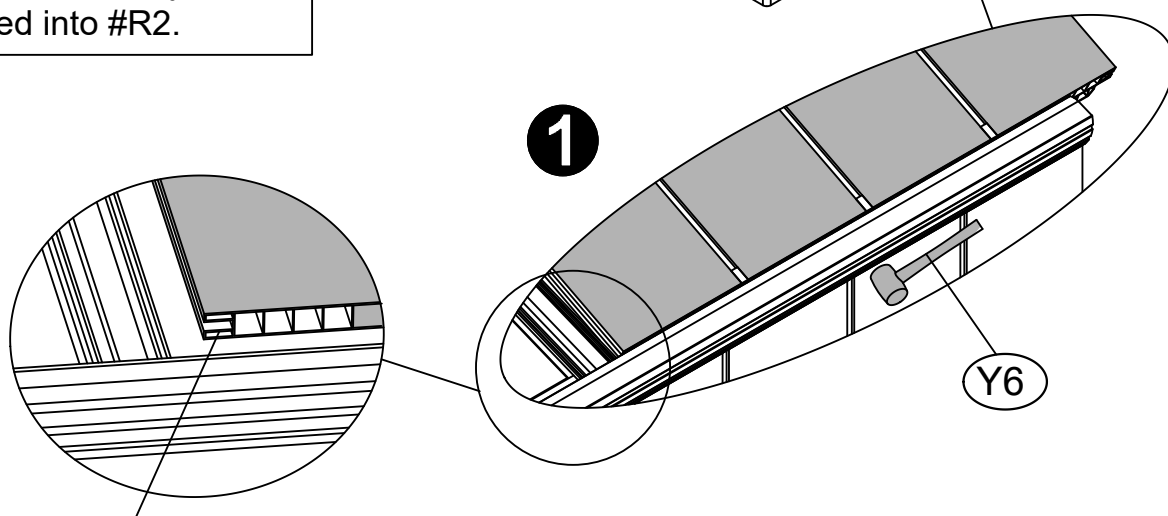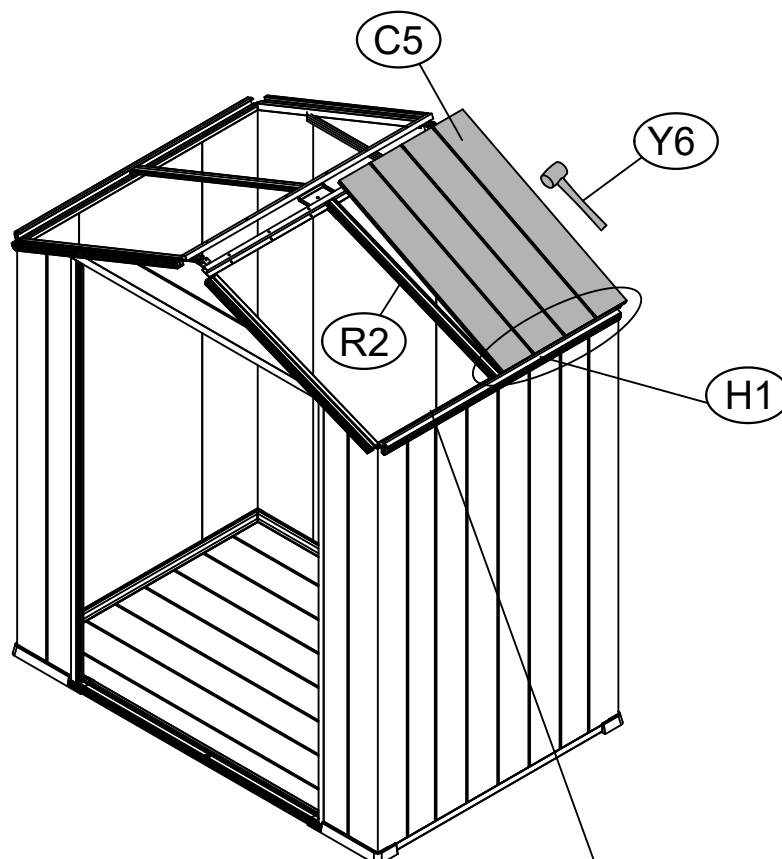


Flat opening

C5



3x

<19>

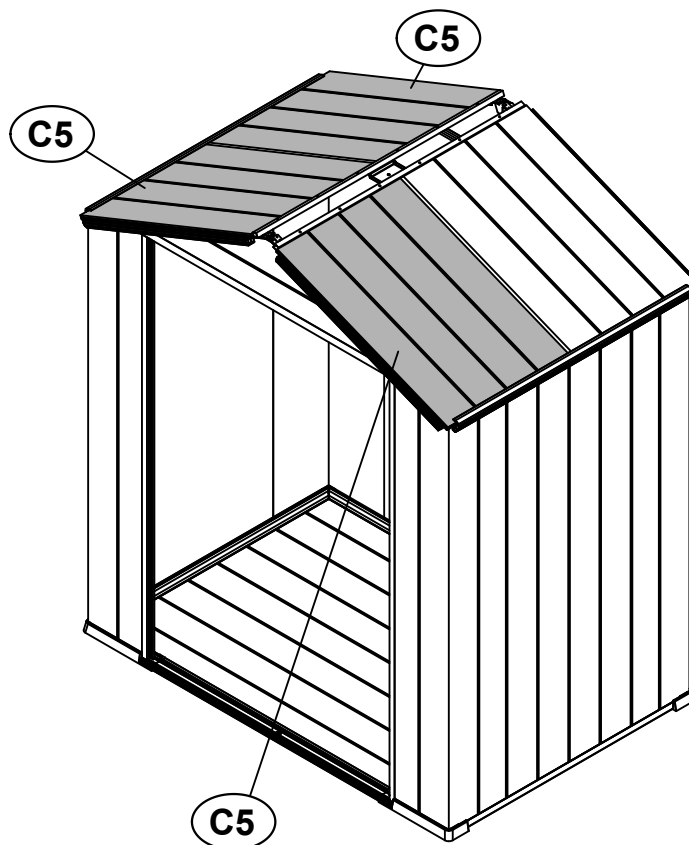

Repeat step 18, use #Y5 and a hammer to assemble the other three #C5 pieces together.



Q3

1x



ST3.8x14

2

20x





ST4.8x32

4



12x

<20>

1

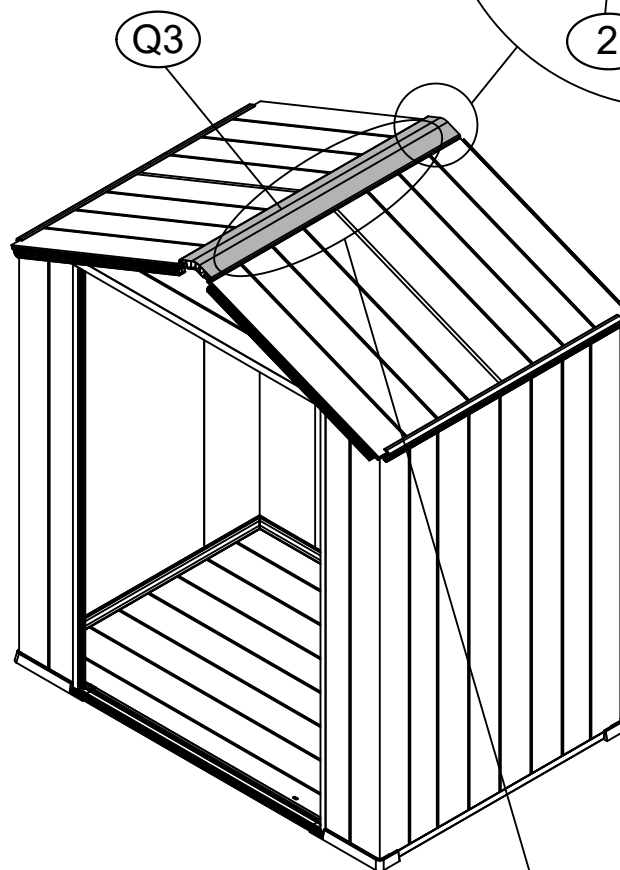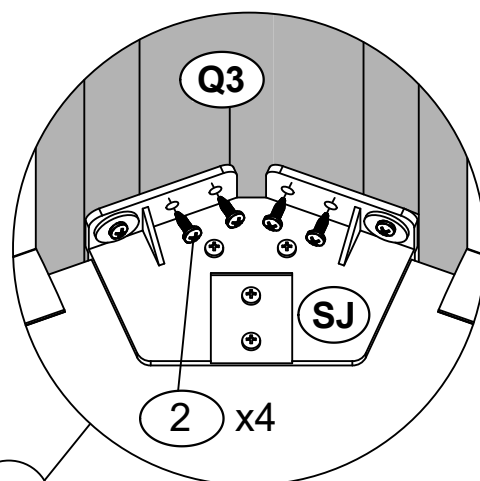

2

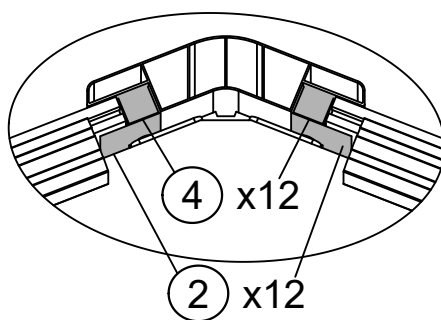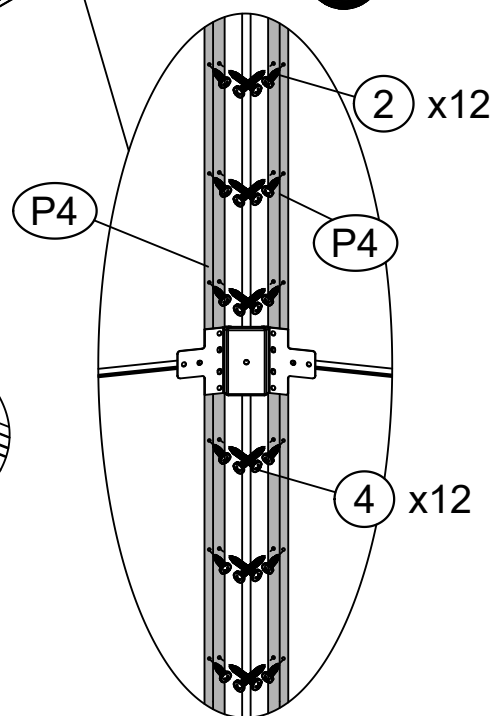



K2

4x






ST4.8x32

4

12x


<21>

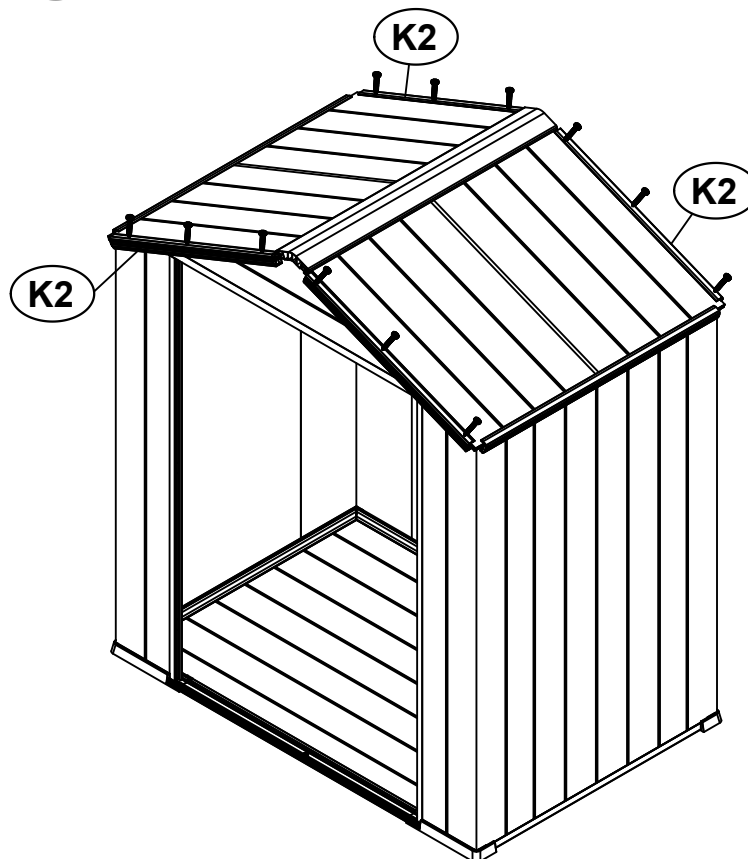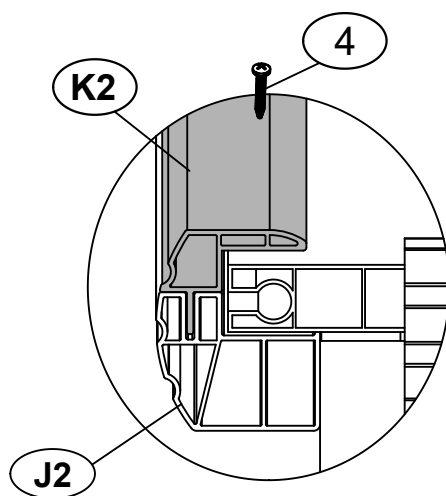

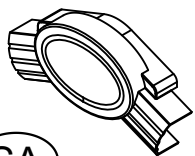


SA

2x



SCA

2x



SCB

2x




ST3.8x14

2

24x

<22>

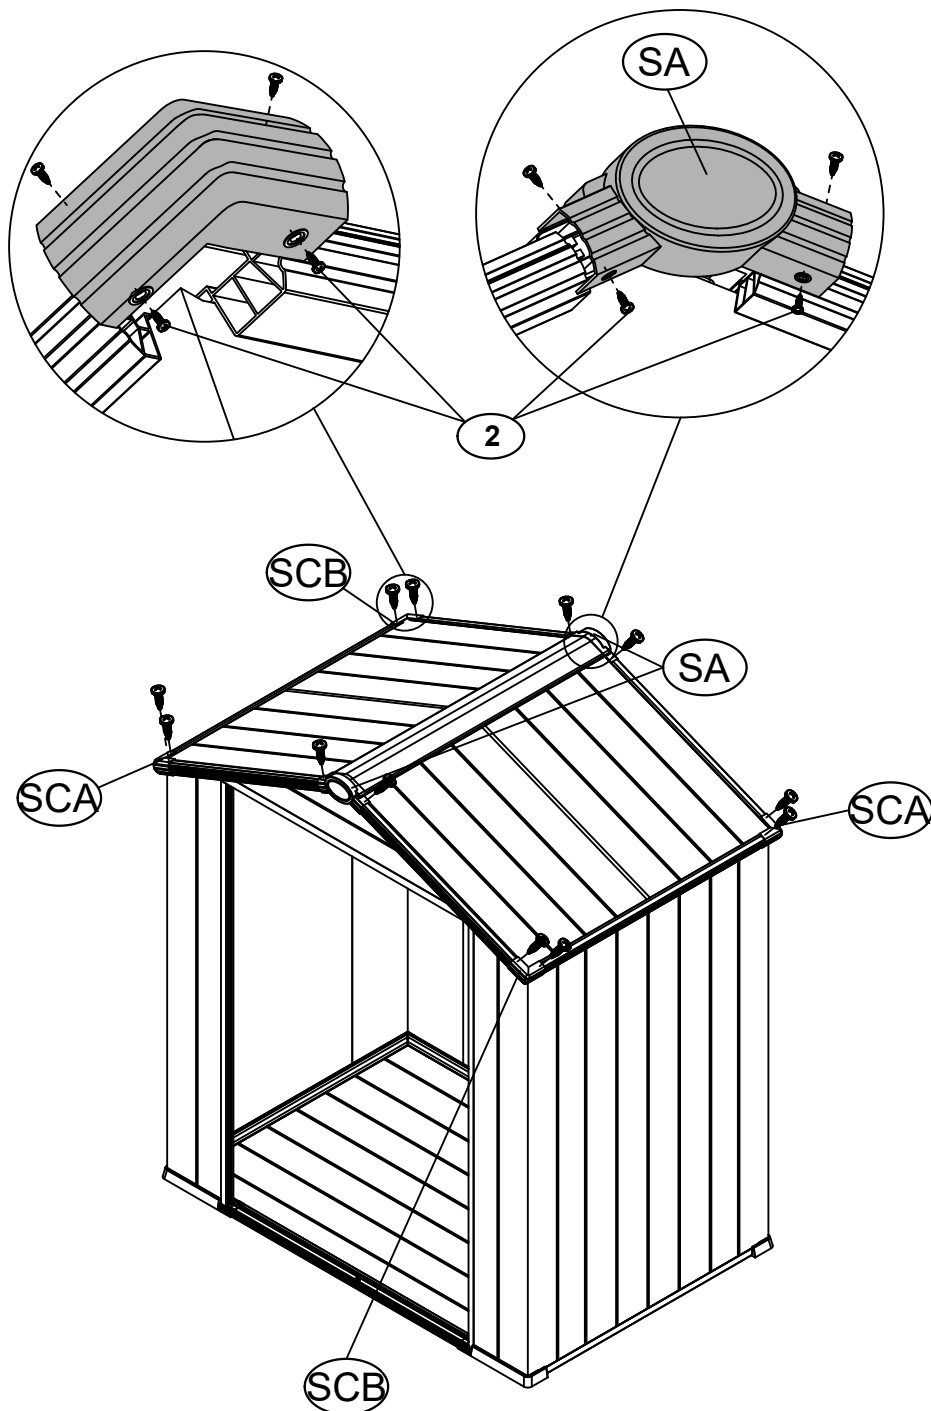

<23>

U1 1x


U6 1x

X5 1x

8 M6x40 4x

9 M6 4x

11 M6 4x

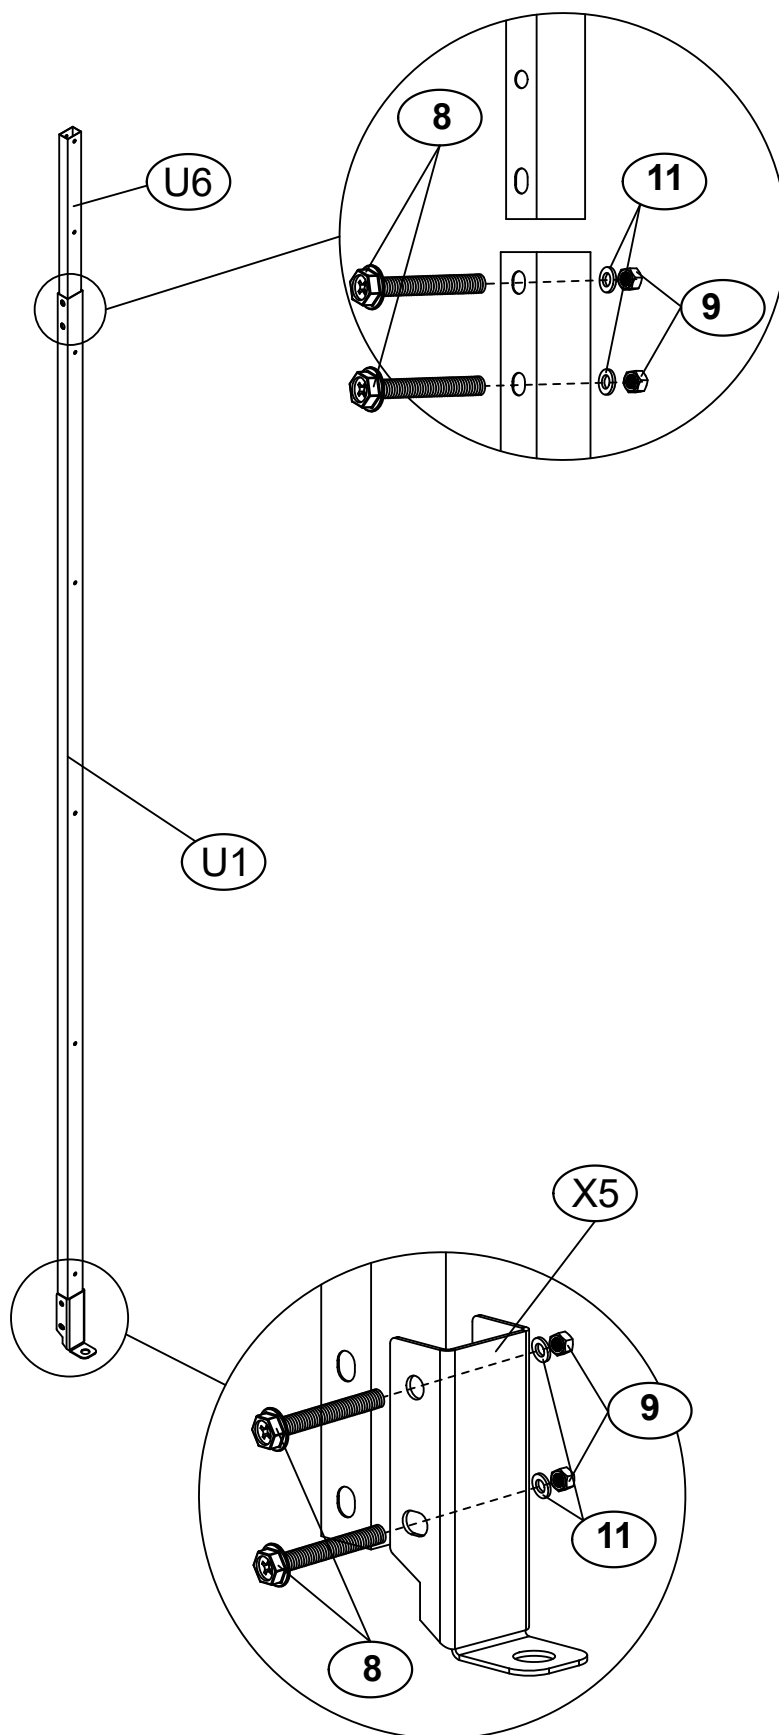







ST4.8x32

4

7x

<24>

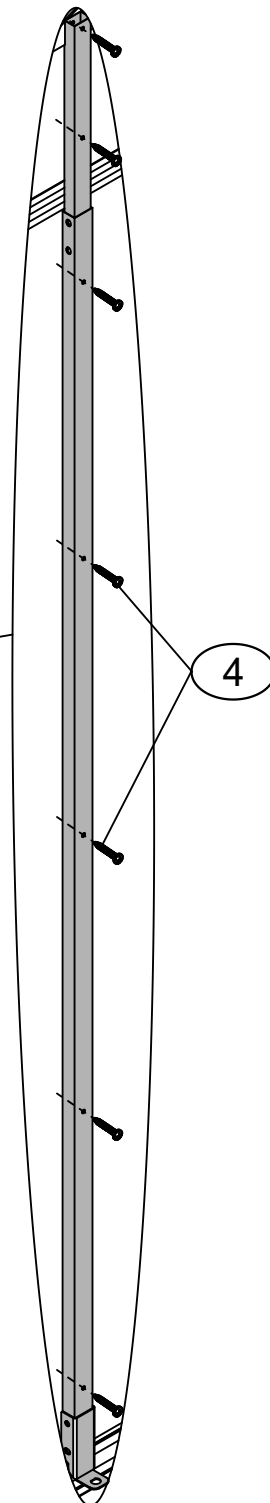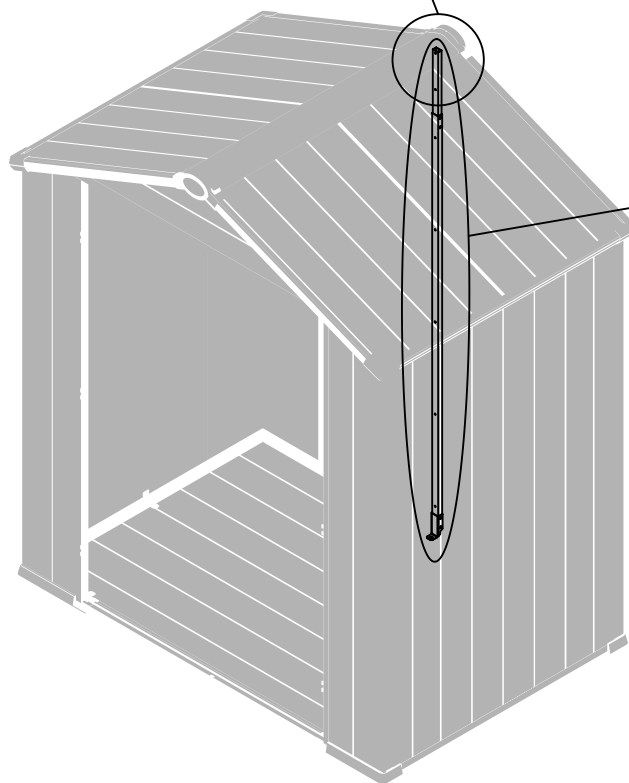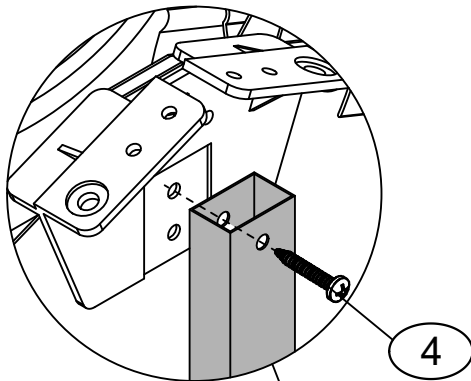

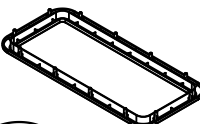	(SE)	2x
	(SEI)	2x
	(SEO)	2x
	(B14L)	1x
	(B14R)	1x
	ST2.8x12	
(6)	6	24x
	(X7)	1x
32		


<25>

1

rubber
sealing
strip

(X7)

(SEO)

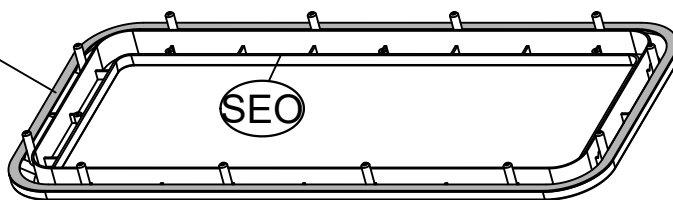



2

6 x12


(SEI)

(SE)


(SEO)

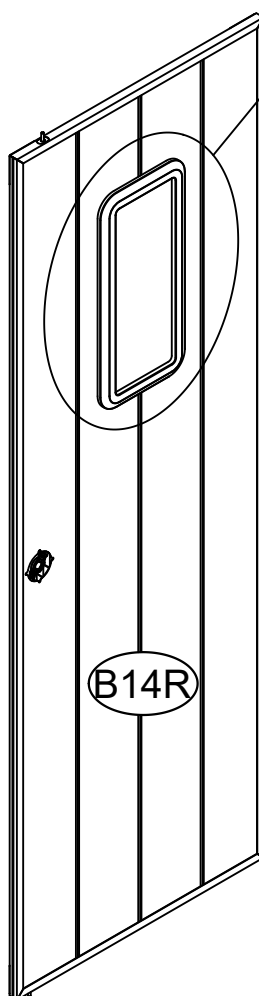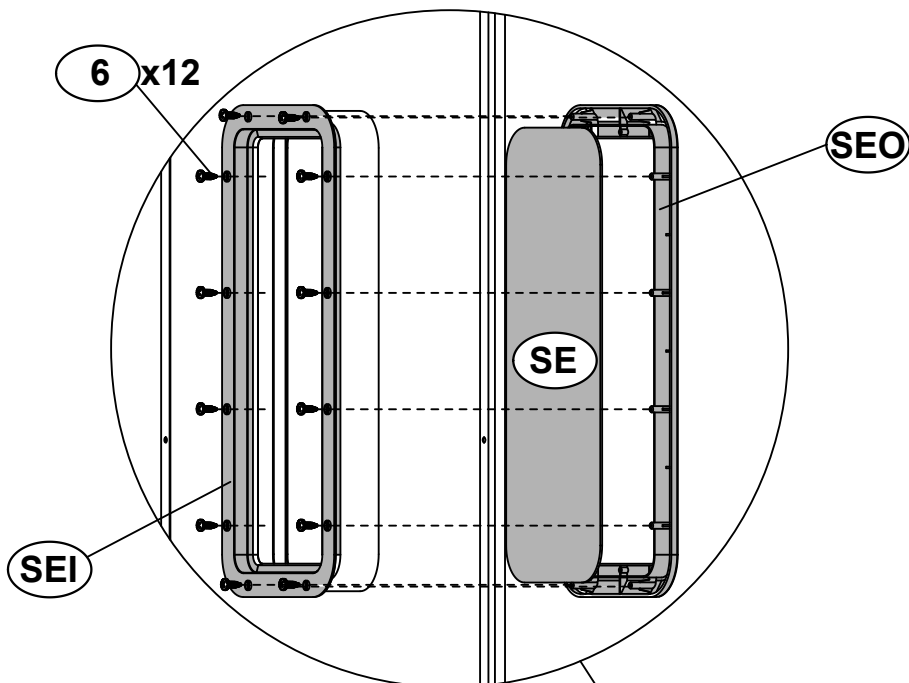



(B14R)

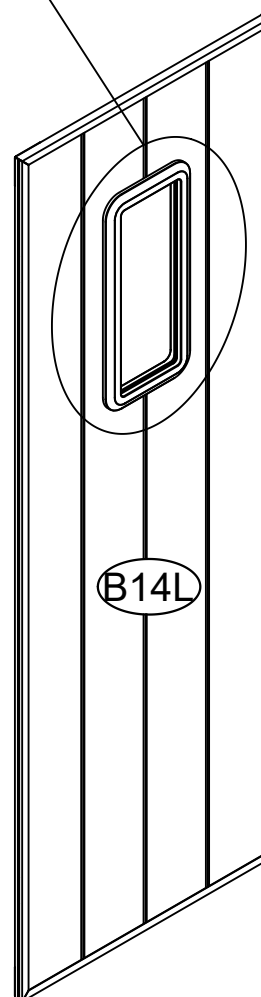


(B14L)

	
(SK)	1x
	
ST2.8x12	
(6)	6x
	
(X3)	1x


<26>

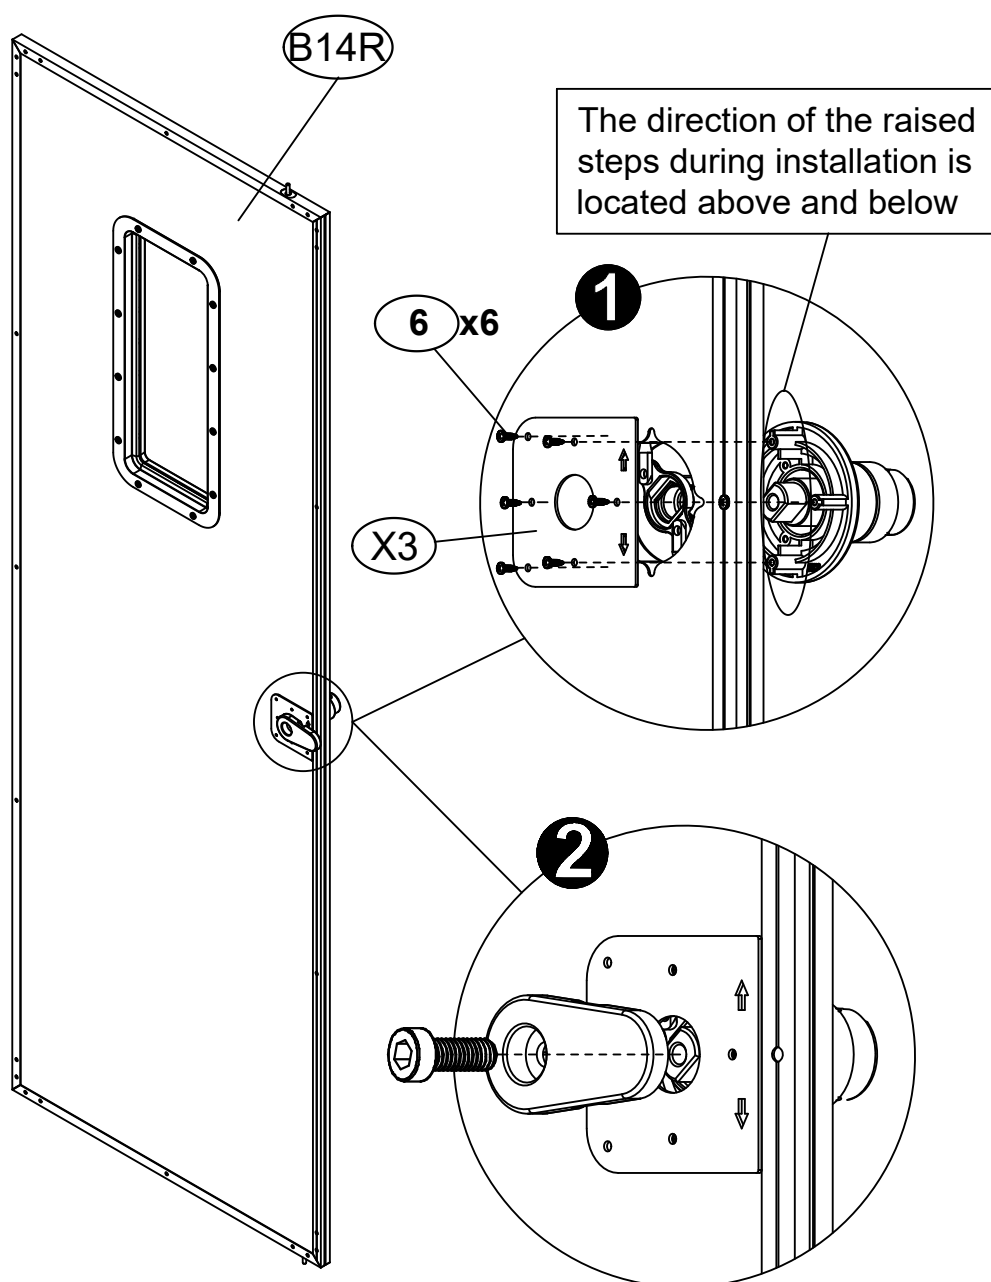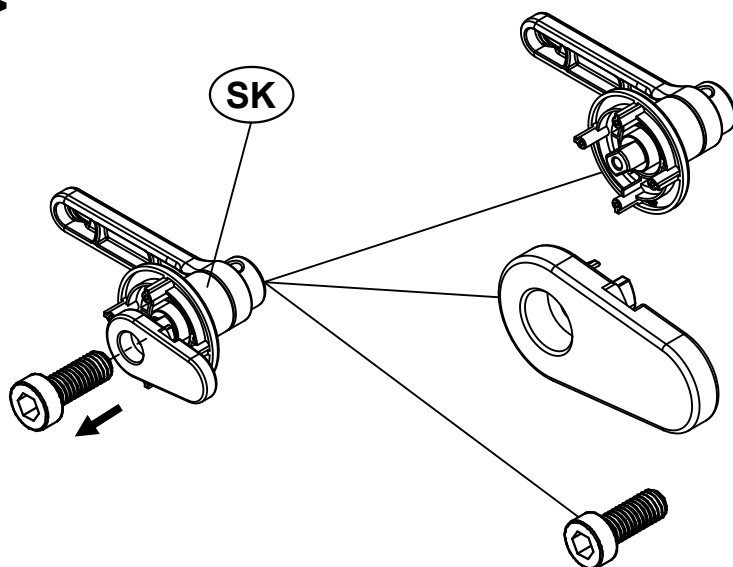

<27>

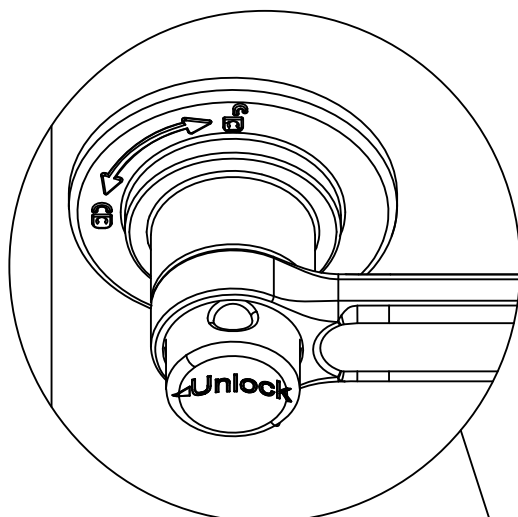


When the door lock button is in this state, the door handle is in the locked state and cannot be rotated

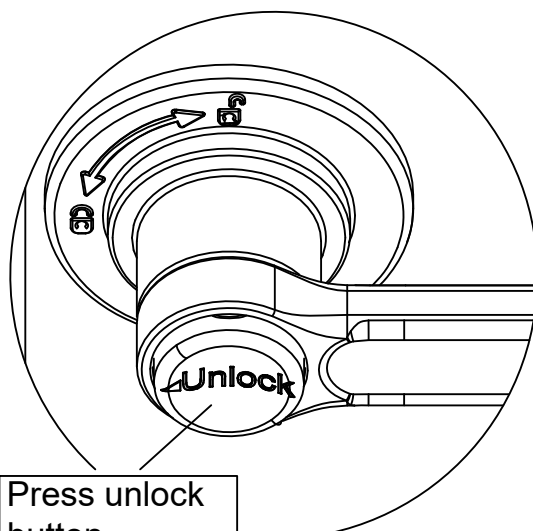

Press unlock button

When the door lock button is in this state, the door lock is unlocked and can be opened by pressing the door knob

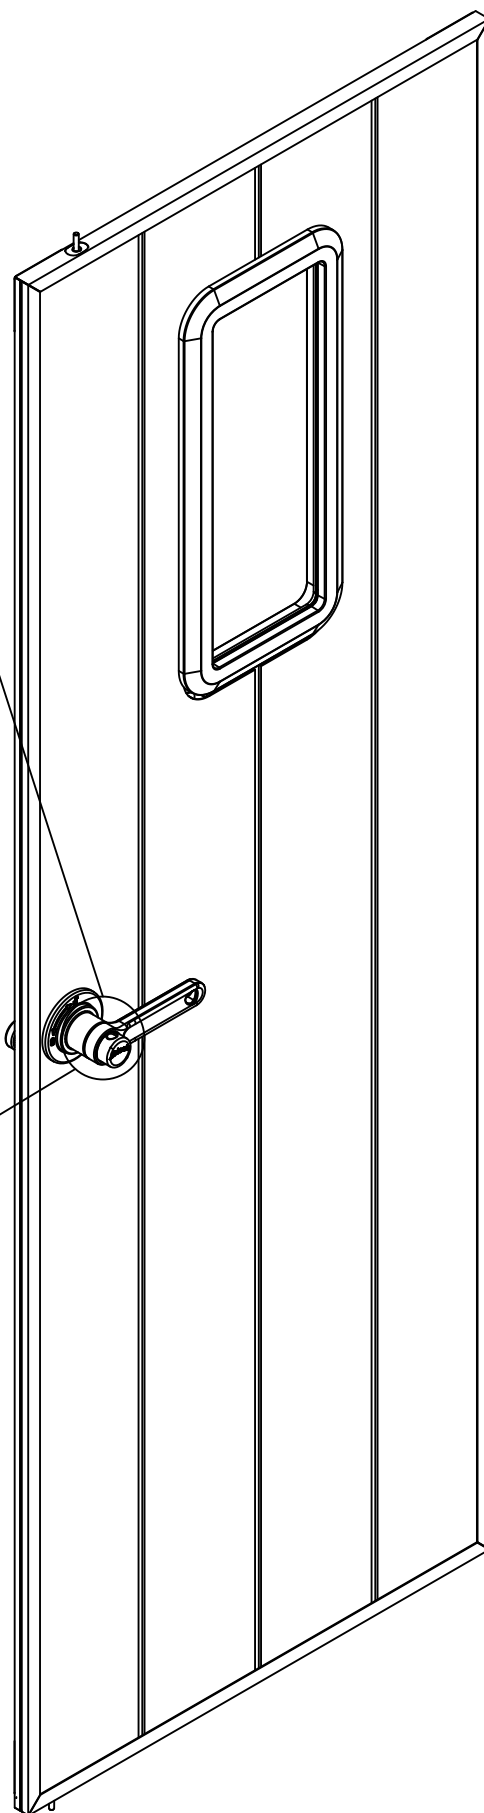



ST3.8x12

3


12x



X2

6x

<28>

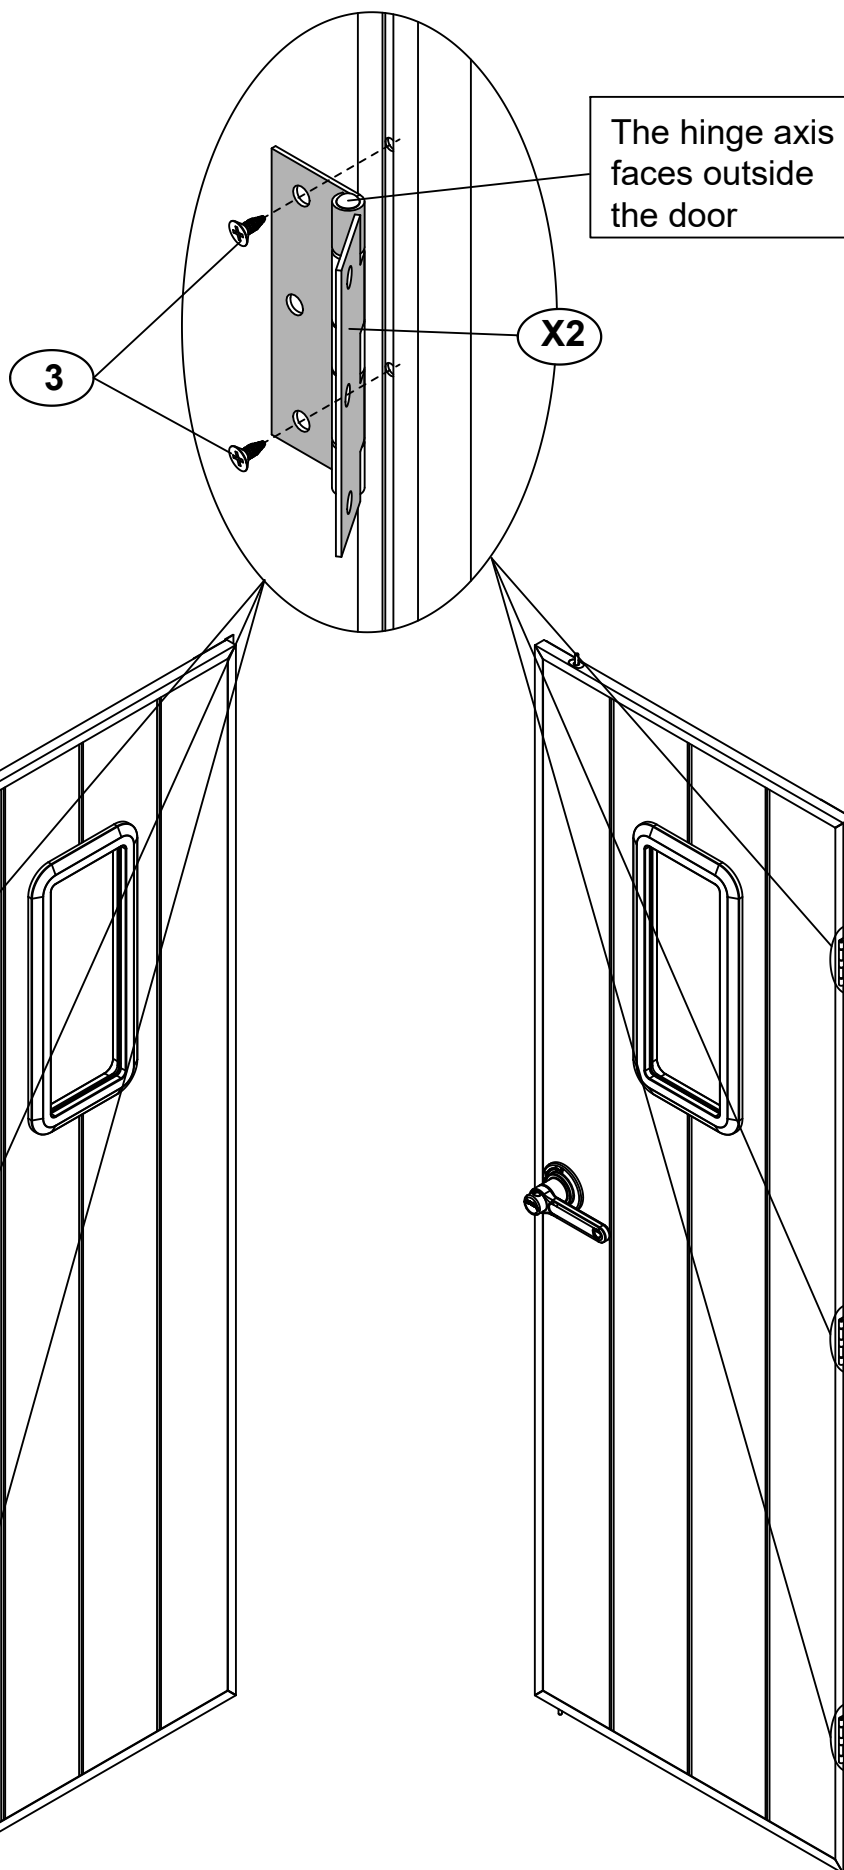





ST3.8x12

3

12x

<29>


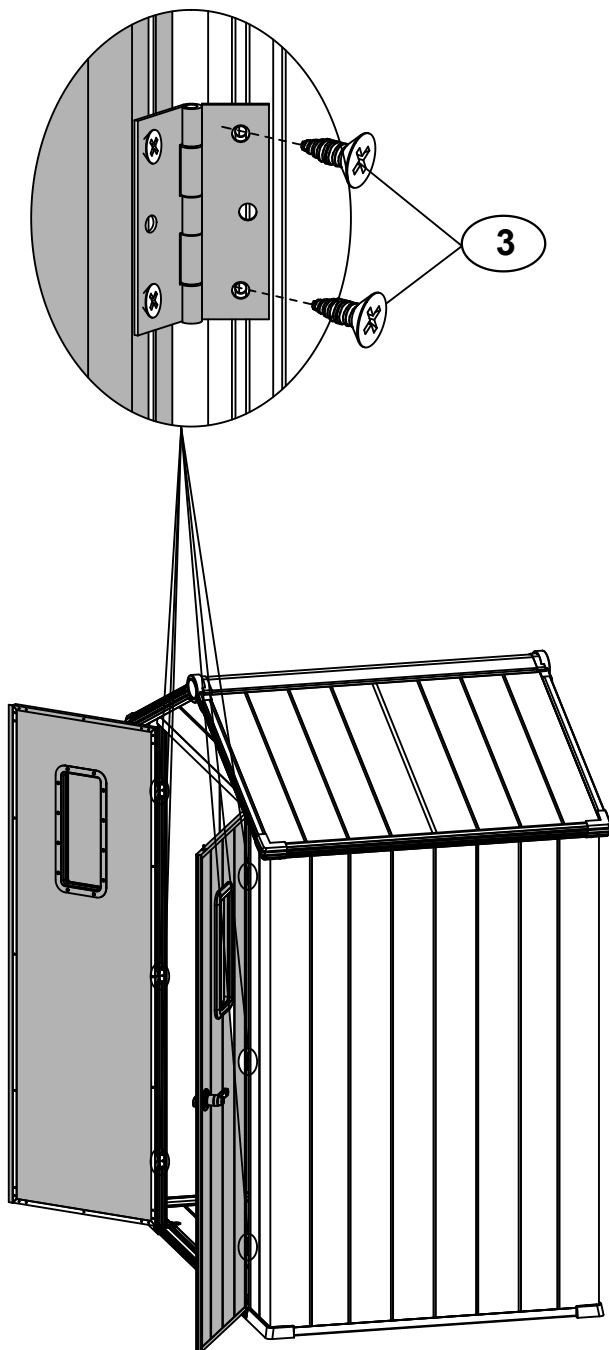




SP




2x

<30>

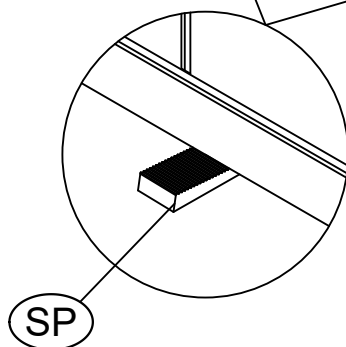
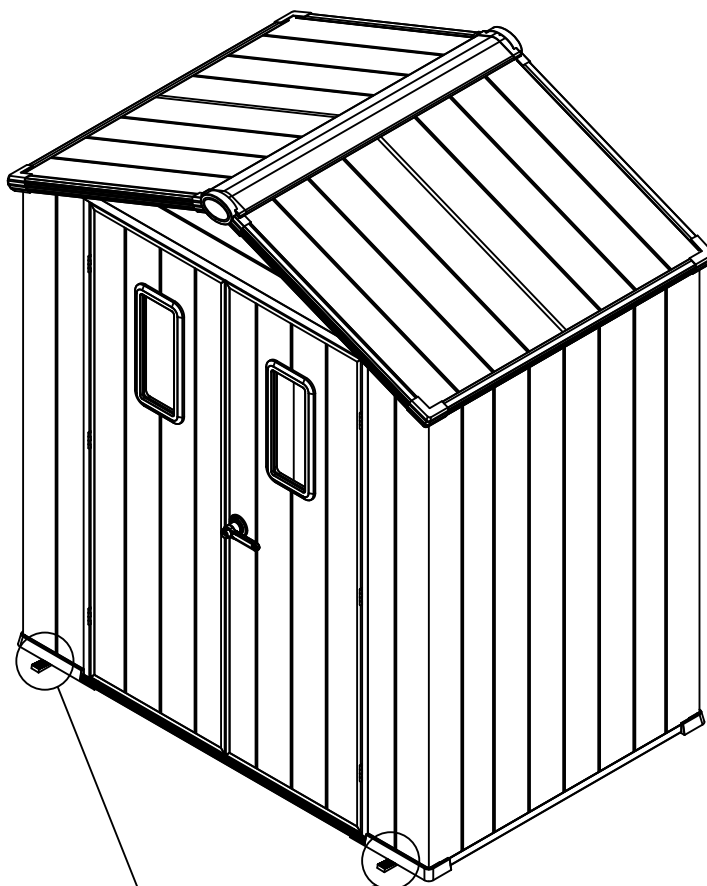


SP


If the assembled rear door frame is tilted, the #SP# part can be placed on the left or right side of the tool house as shown.

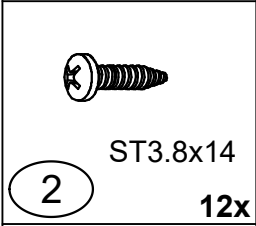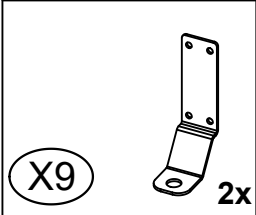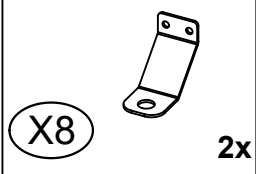


<31>

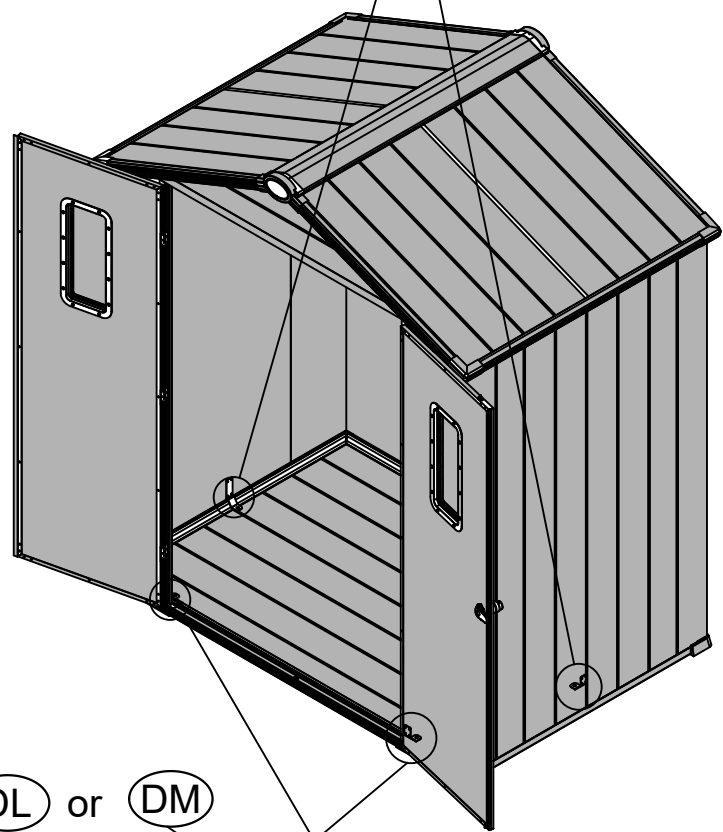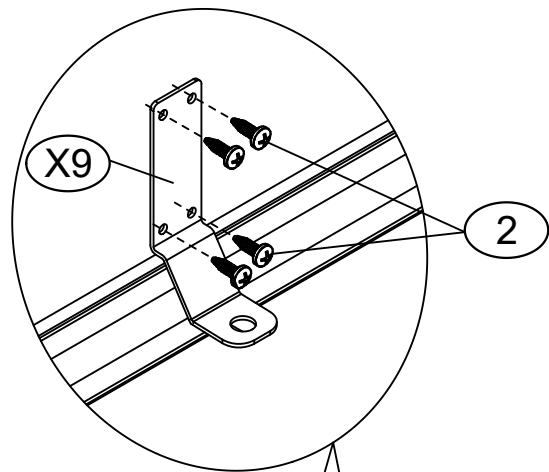

(DL) or (DM)






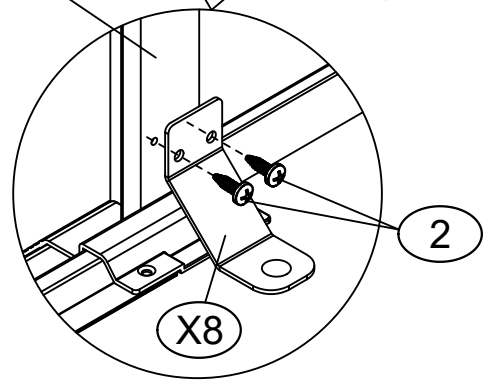




M8x80
5X

12

<32>

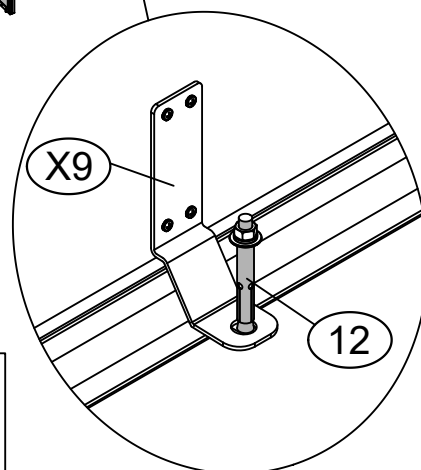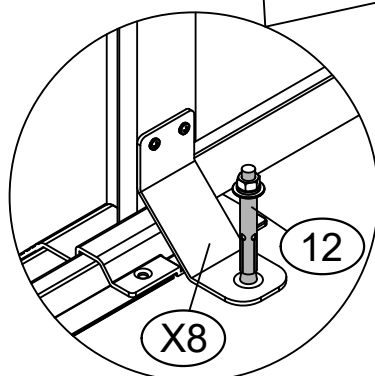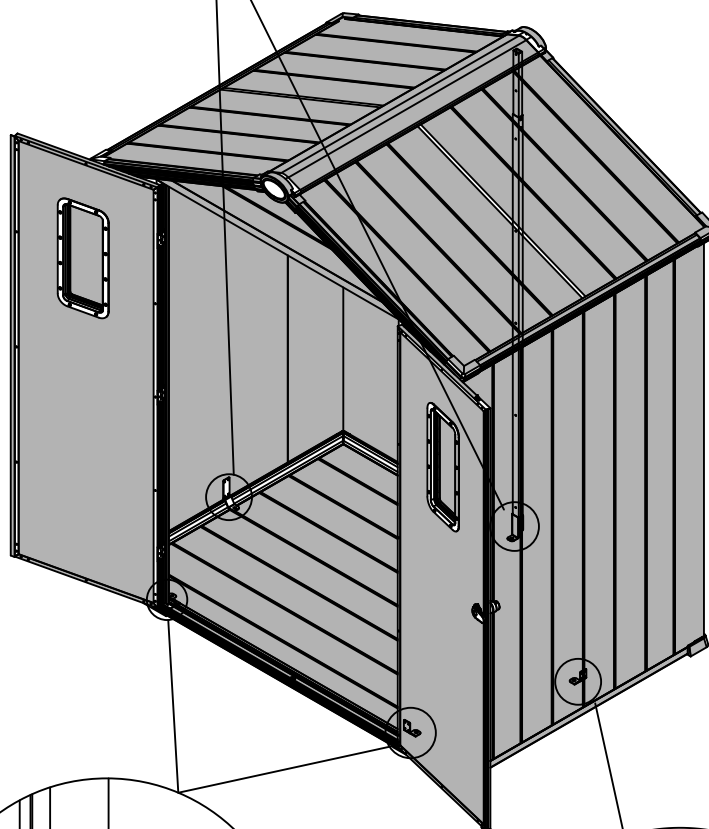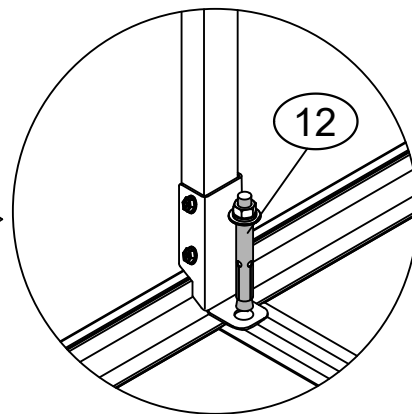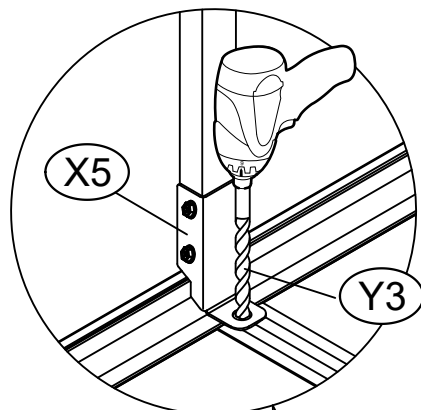

You need to prepare
your own electric drill
to assist in drilling.