


# Six-layer large shelf installation diagram

				
Spiral with bias	Bias bolt	3.5CM self-tapping screws	Foot mat	Metal pin
A*12	B*12	C*50	D*4	E*3


Caution: When installing, tighten the screws to a moderate degree. Finish the installation process and then fully tighten them!


## Principle of eccentric component installation:

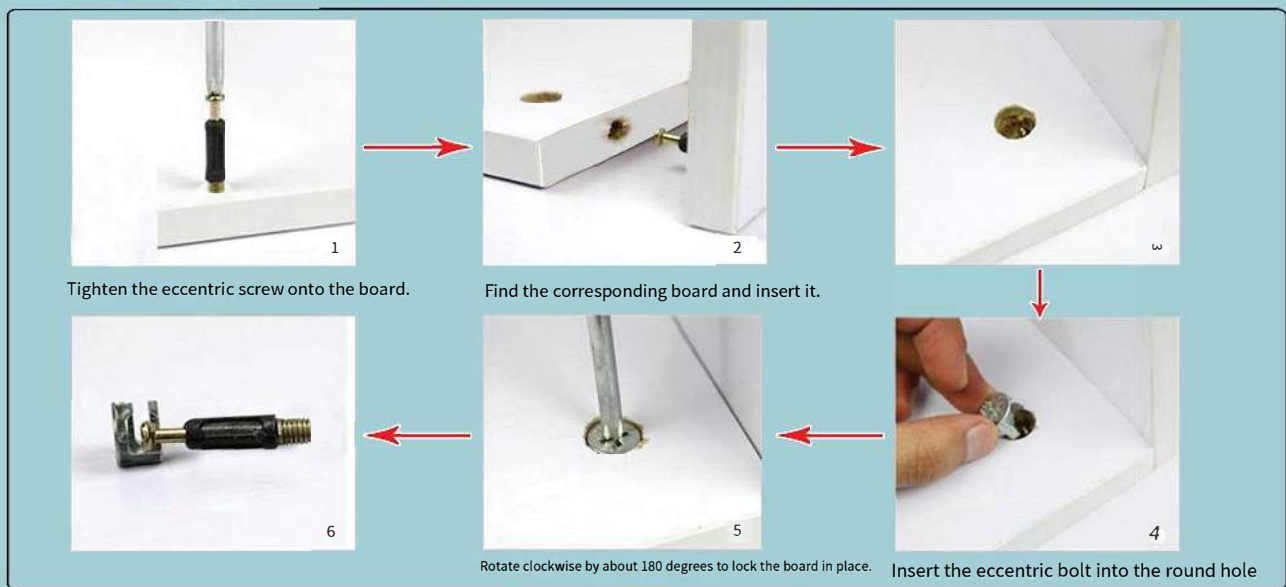

## Board name and serial number:




The incorrect sequence of the numbers in the installation diagram does not mean that the boards are missing. You just need to install them according to the sequence.

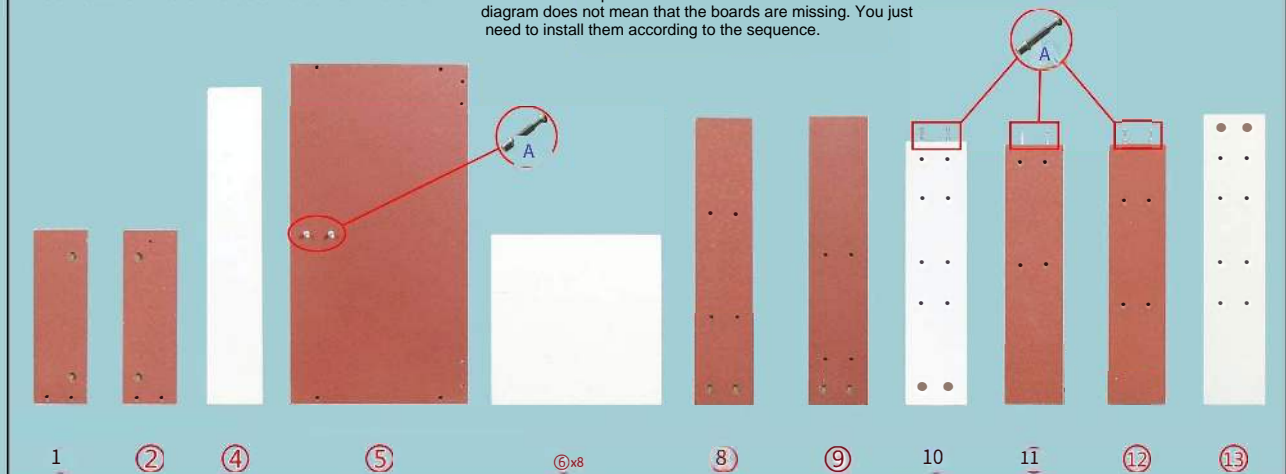

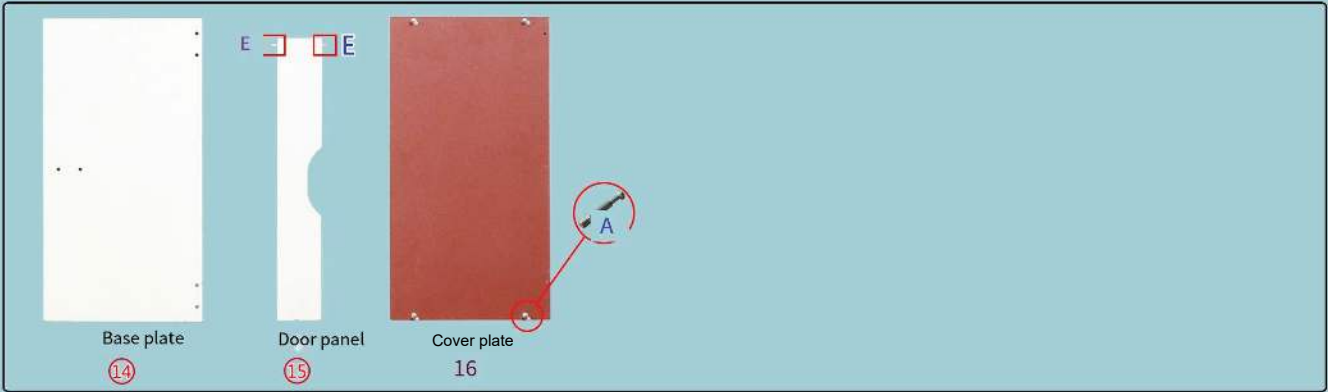


Step 1: Installation of the overall part


Note: Please read all the steps carefully to avoid rework!!!

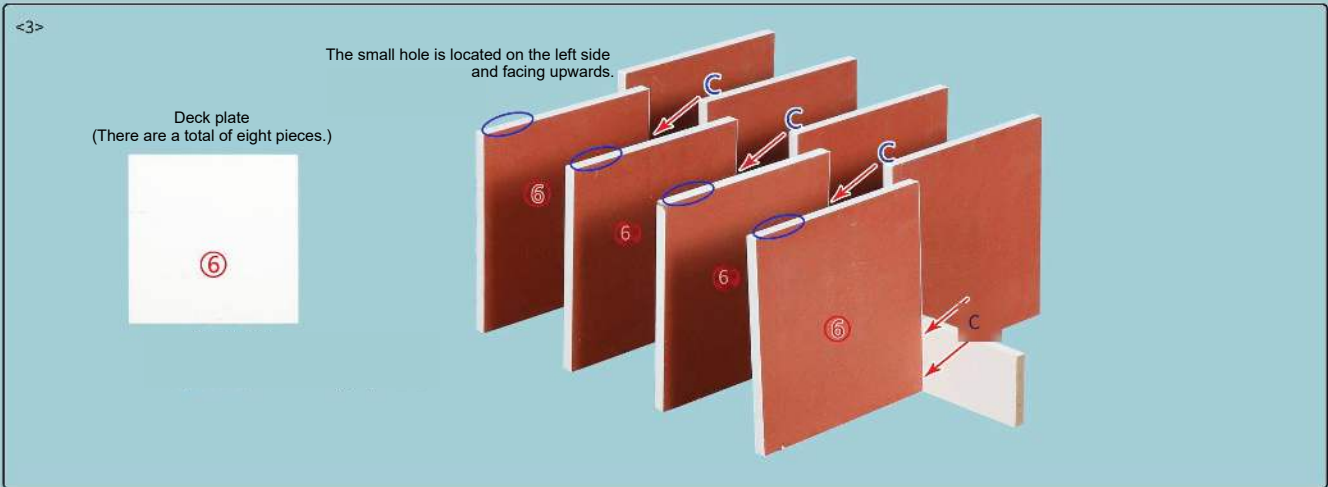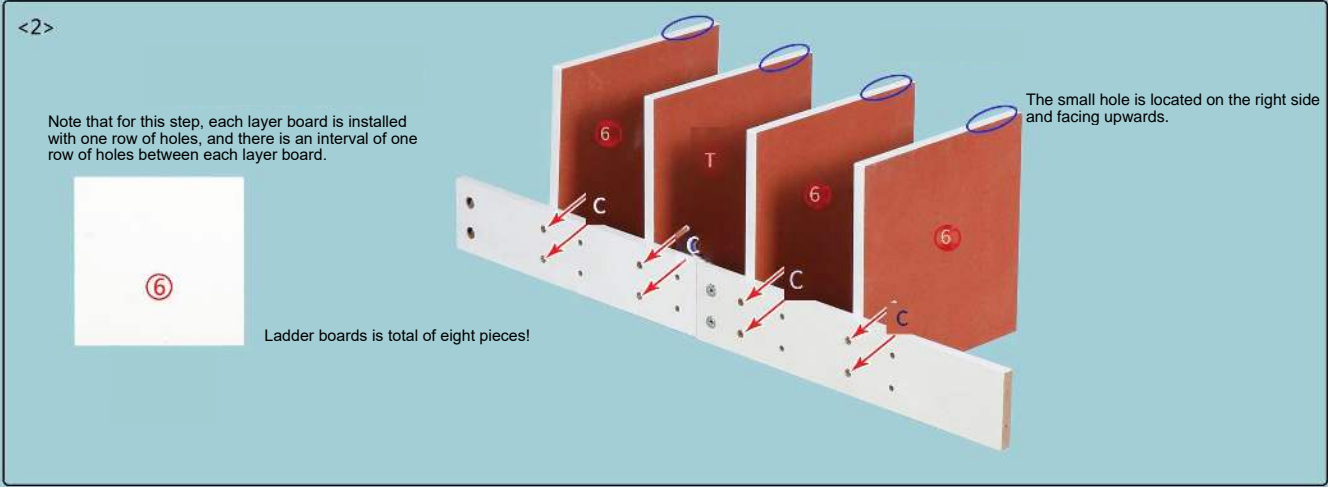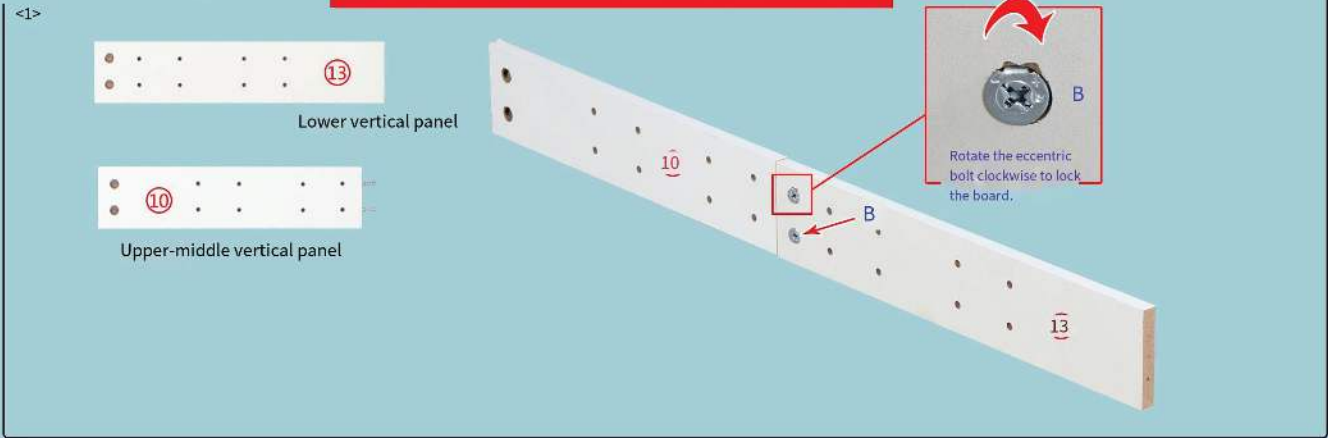


<4>

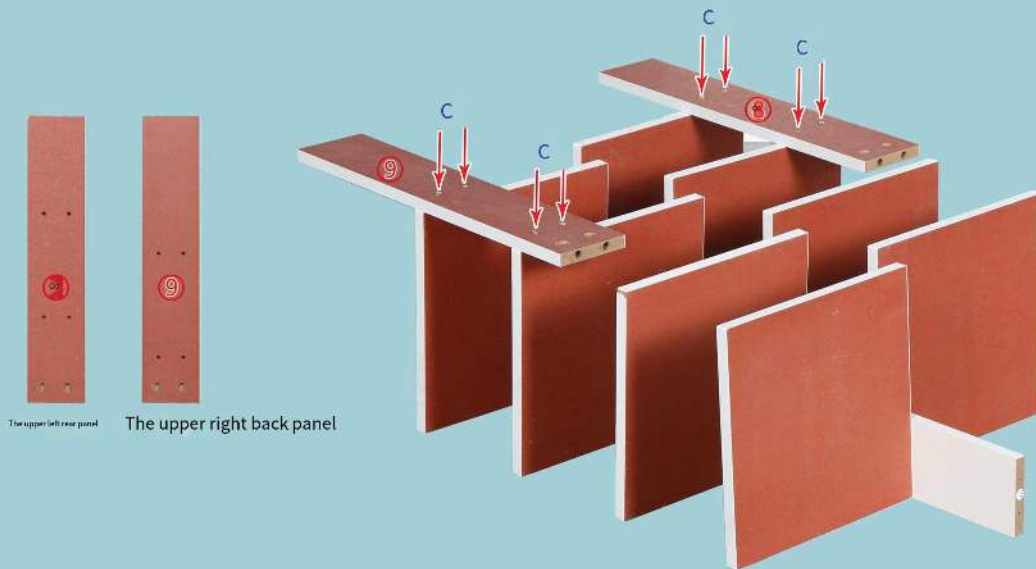


<5>

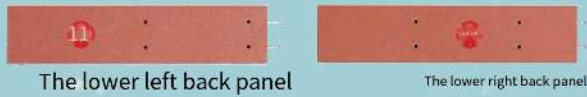



Pay attention to fixing the screws first, then fix the eccentric bolts.

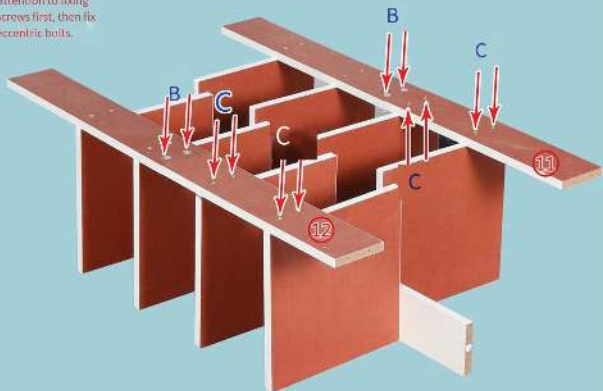

<6>

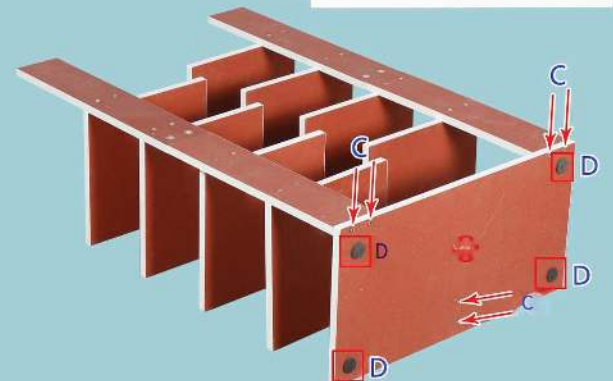

<7>

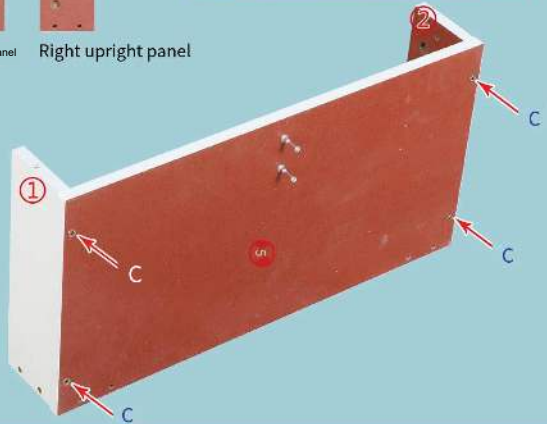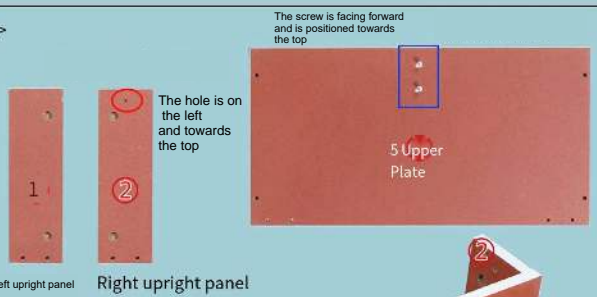

<8> Align the whole structure properly, with the front facing forward.



