JAMIE YOUNG Cº

CHAMBORD MIRROR LARGE

SAFETY,INSTALLATION AND CARE INSTRUCTIONS

NAME : CHAMBORD MIRROR LARGE	FINISH : ANTIQUE
ITEM NO : 6CHAM-LGAG	ITEM NET WEIGHT : 62.8 Lbs

PARTS INCLUDED

(A) Toggle Anchors (2)

(B) Toggle EZ Mini Anchors (2)

(C) Toggle Screws (2)

(D) Toggle EZ Screws (2)

(E) Stud Mounting Screws (12)

(F) Bubble Level (1)

(G) Wall Bracket (1)


(H) Panel (1)


(A) 

(B) 

(C) 

(D) 

(E) 

(F) 


TOOLS NEEDED
(IF APPLICABLE)

(a) Electronic Stud Finder

(b) Drill with #2 Phillips Bit

(c) Pencil

(G) 

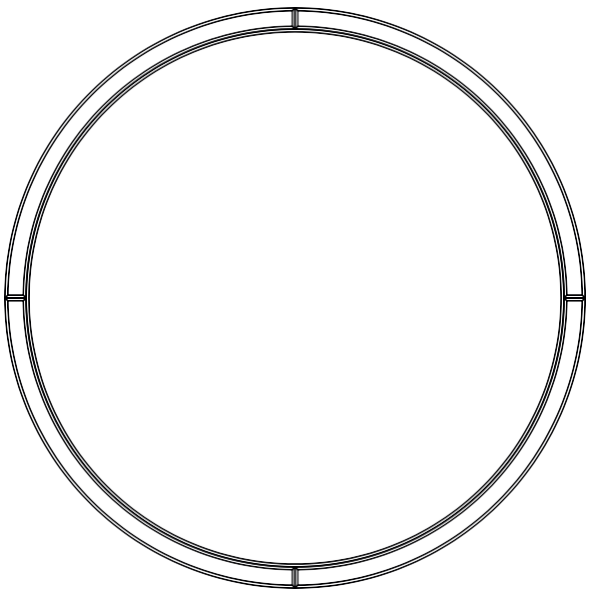(H) 


JAMIE YOUNG Co

CHAMBORD MIRROR LARGE

SAFETY,INSTALLATION AND CARE INSTRUCTIONS


WARNING

YOUNG CHILDREN MAY BE INJURED BY TIPPING PRODUCTS, SO THE USE OF TIPPING RESTRAINTS IS HIGHLY RECOMMENDED. THIS PRODUCT IS ONLY A DETERRENT AND NOT A SUBSTITUTE FOR PROPER ADULT SUPERVISION. THE MANUFACTURER ASSUMES NO LIABILITY FOR IMPROPER INSTALLATION OR EXCESSIVE LOADS PLACED ON SCREWS, BRACKETS, OR STRAPS. WHEN PROPERLY INSTALLED, THIS RESTRAINT WILL HELP PREVENT THE PRODUCT FROM TIPPING OVER.

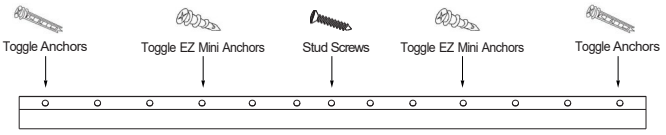


SAFETY INSTRUCTIONS


THIS HANGING SYSTEM IS INTENDED FOR DRYWALL STUD MOUNTING ONLY. IF YOUR WALLS ARE MADE OF CONCRETE, BRICK, OR PLASTER, PLEASE CONSULT YOUR LOCAL HARDWARE STORE FOR ASSISTANCE. FOR SAFETY AND EASE OF INSTALLATION, WE RECOMMEND HAVING TWO PEOPLE PERFORM THE INSTALLATION.

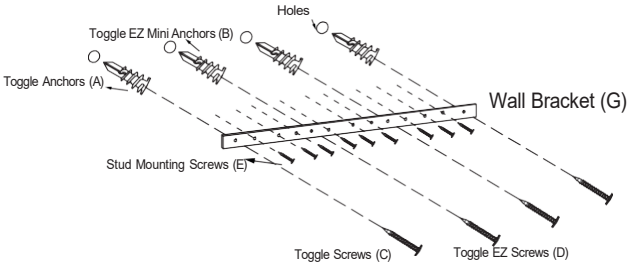

ASSEMBLY INSTRUCTIONS

1. Unpack all the parts and place them on a protected work surface.
2. Hold panel (H) at desired location, so that mounting bracket (G) will be over a stud. With a pencil, mark the center-top of the panel (H) on the wall.
3. Measure down from the center-top of the panel to the center-top of the mounting bracket on the back of the panel, and mark this point on the wall. Make a hole in the wall with the use of a drill. Before drilling additional holes, put the bubble level (F) into the groove of wall bracket (G) to test and make sure the wall bracket is level. Then hold the wall bracket (G) against the wall and drill holes for all anchors (A, B) as shown in the illustration. Place the respective anchors (A, B) in the holes, then set the wall bracket (G) on top of them.
4. Attach the wall bracket (G) by screwing toggle screws (C) into the inserted toggle anchorsa(And) toggle EZ screws (D) into the inserted toggle EZ mini anchors (B). Then, tightly screw all stud mounting screws (E) through remaining holes of wall bracket (G).
5. Mount the panel (H) to the wall by sliding the panel until the mounting bracket rests on the wall bracket (G).
6. Installation is complete.

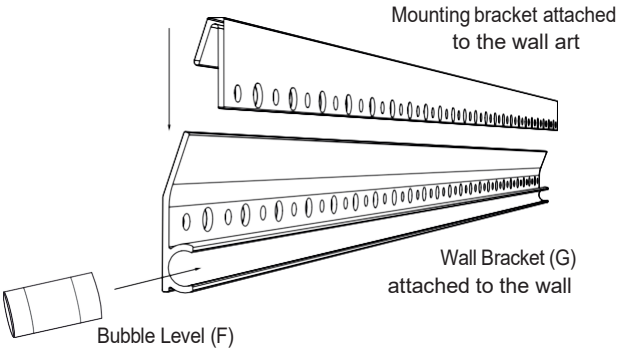

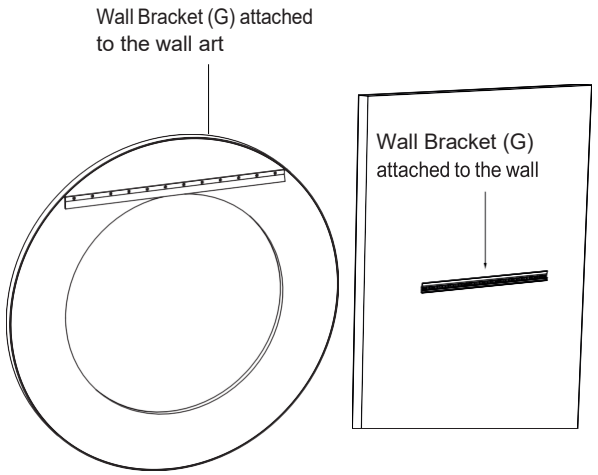

JAMIE YOUNG Co

CHAMBORD MIRROR LARGE

SAFETY,INSTALLATION AND CARE INSTRUCTIONS

CARE INSTRUCTIONS

To clean, wipe gently with soft, dry cloth. Avoid the use of harsh chemicals or abrasive cleaners, as they may damage the finish.