







(1) Top  1PC	(2) End Panel  1PC	(W) Grommet  1PC	(S2) Flat bracket  4PCS	(A) Dowel  4PCS+1	(B) Cam Pin  3PCS+1	(C) Cam Lock  3PCS+1	(P) Adhesive Cam Cover  3PCS+1	(E6) Wood Screw  4PCS+1	(E9) Wood Screw (4*20)  24PCS+2
--	---	---	--	--	---	---	---	--	--


STEP 1

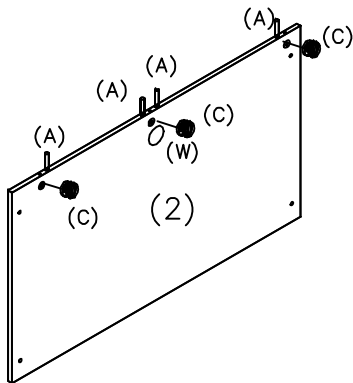

STEP 2

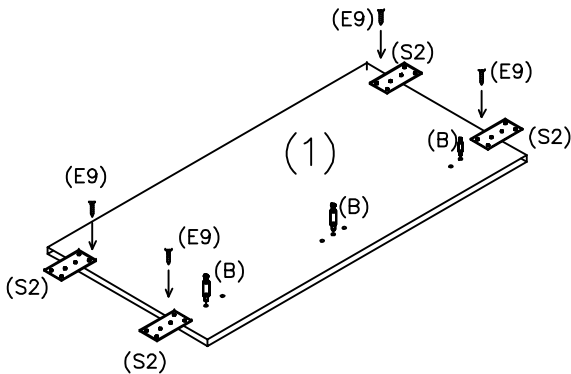

STEP 3

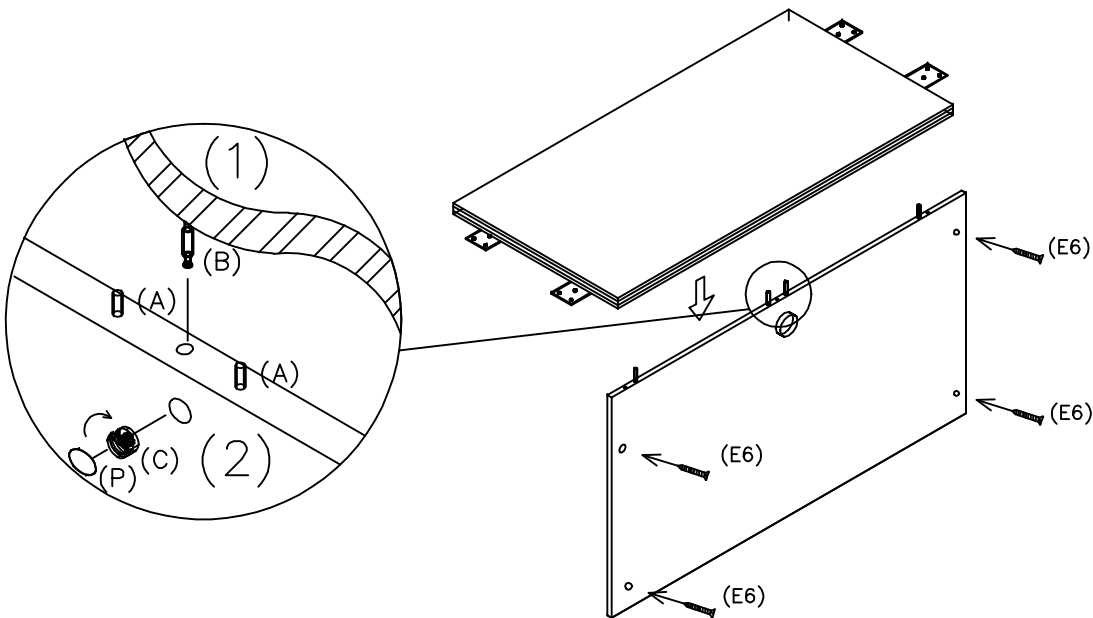

BRIDGE,48*24
48"W*24"D*29"H

*Always lay components on A clean,
soft-cushioned surface during assembly.*