


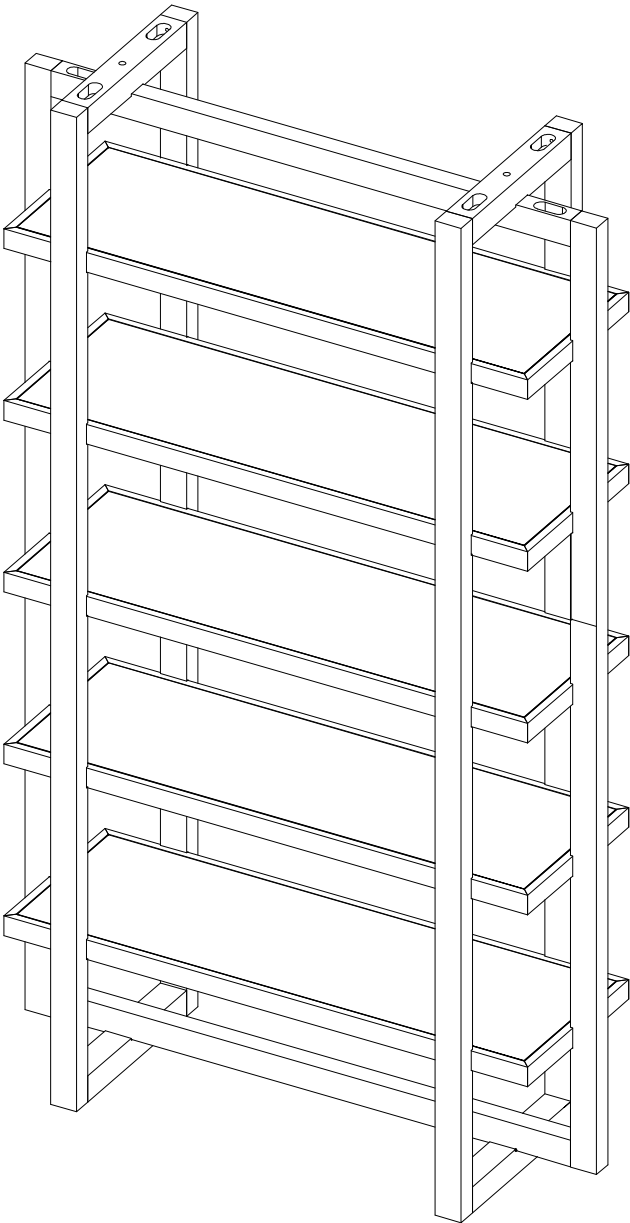
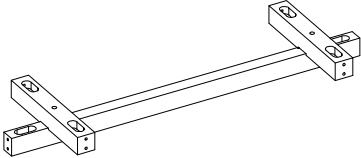
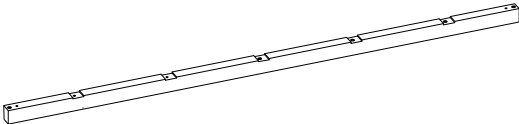


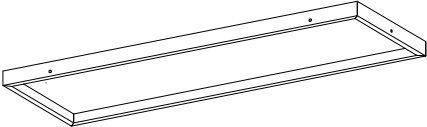


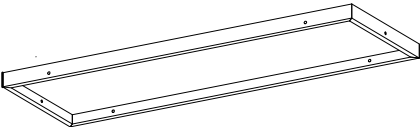




ASSEMBLY AND ANTI TIP KIT INSTALLATION INSTRUCTIONS


PRODUCT NAME : CVFDR1209 ETAGERE



PARTS LIST:			QTY
1	Top		2pcs
2	Leg A		4pcs
3	Shelf A		2pcs
4	Shelf B		3pcs
5	Leg B		2pcs
HARDWARE:			QTY
A.	Ø8 x 40mmL Dowel		24pcs
B.	Ø6 x 32mmL Machine Screw		18pcs
C.	Ø6 x 50mmL Machine Screw		12pcs
D.	Lock Washer		30pcs
E.	Flat Washer		30pcs
F.	Half Moon Nut		12pcs
G.	Ø4mm Allen Wrench		1pc
H.	Tipping - Restraint		1set


STEP 1

NOTE: Place leg A (2) on the flat soft surface. Additional soft cloth layer may require to prevent unnecessary scratches or damages on the table top during installation. Carefully place the leg (2) and locate the position on the top (1) and shelf A (3). make sure the position are all correctly place and insert the Dowel (A), Bolt (C), Lock Washer (D), Flat Washer (E), Half Moon (F) as shown, and tighten with the Allen Key (G) provided. Repeat for the leg bellow the same as the top.

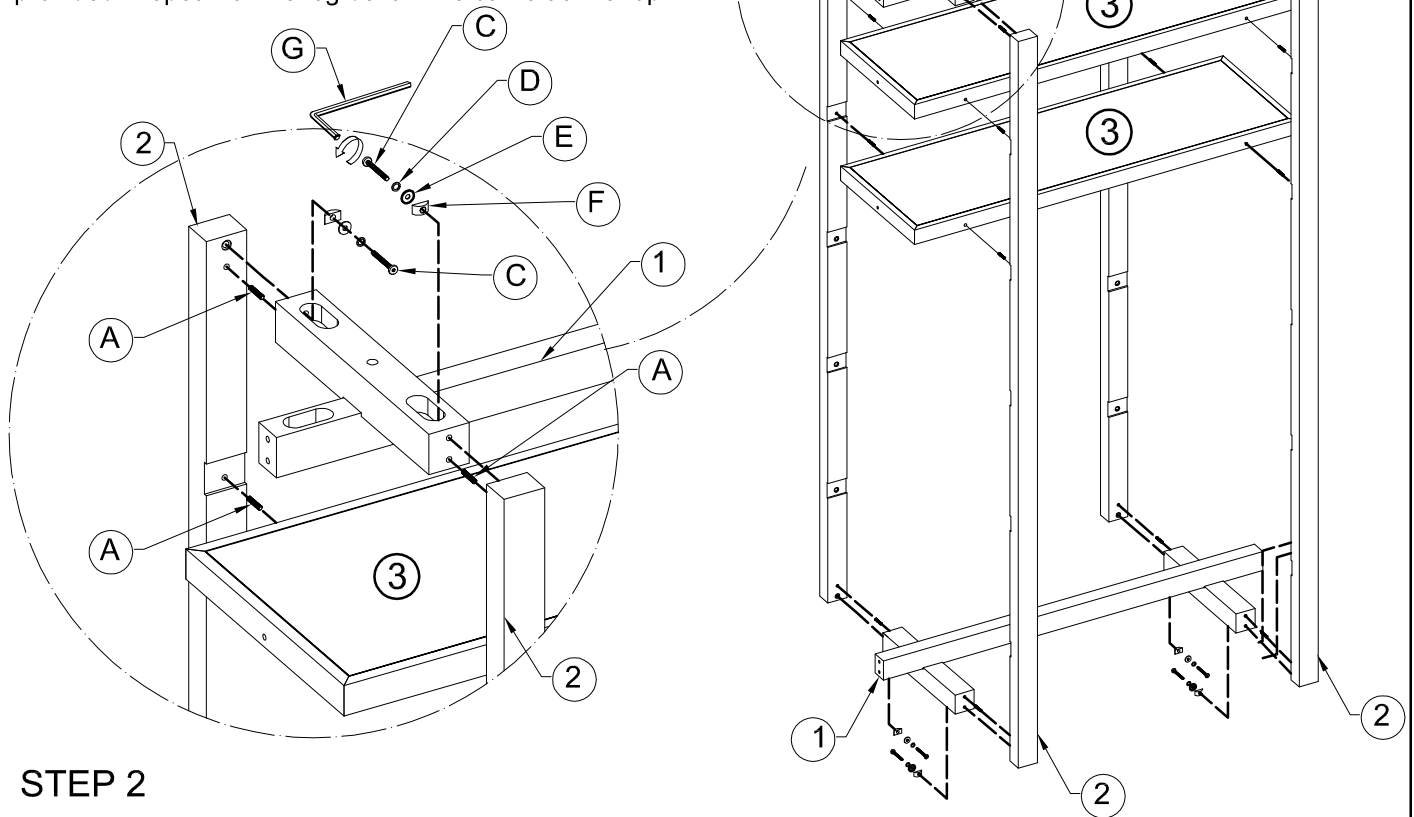


STEP 2

NOTE: Assemble Shelf B (4) to the preform body assembly, through the side, and secure it from the inside using Bolt (B), Lock Washer (D), Flat Washer (E), as shown, and tighten with the Allen Key (G) provided. Repeat on the other shelf B (4)

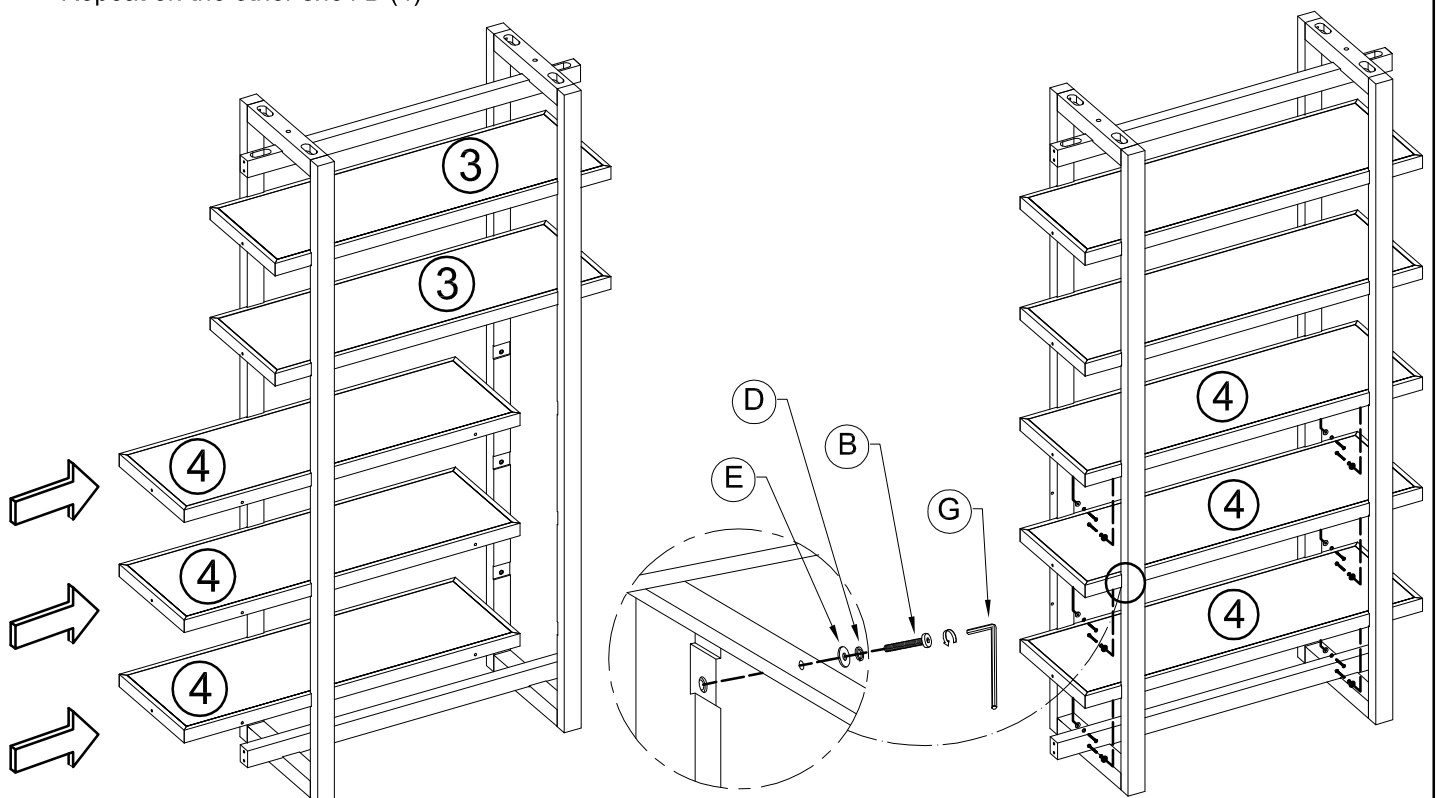


STEP 3

NOTE: Assemble leg B (5) on the side with top (1), shelf A (3), using Bolt (C), Lock Washer (D), Flat Washer (E), and tighten with the Allen Key (G) provided as shown. Repeat on the other side.

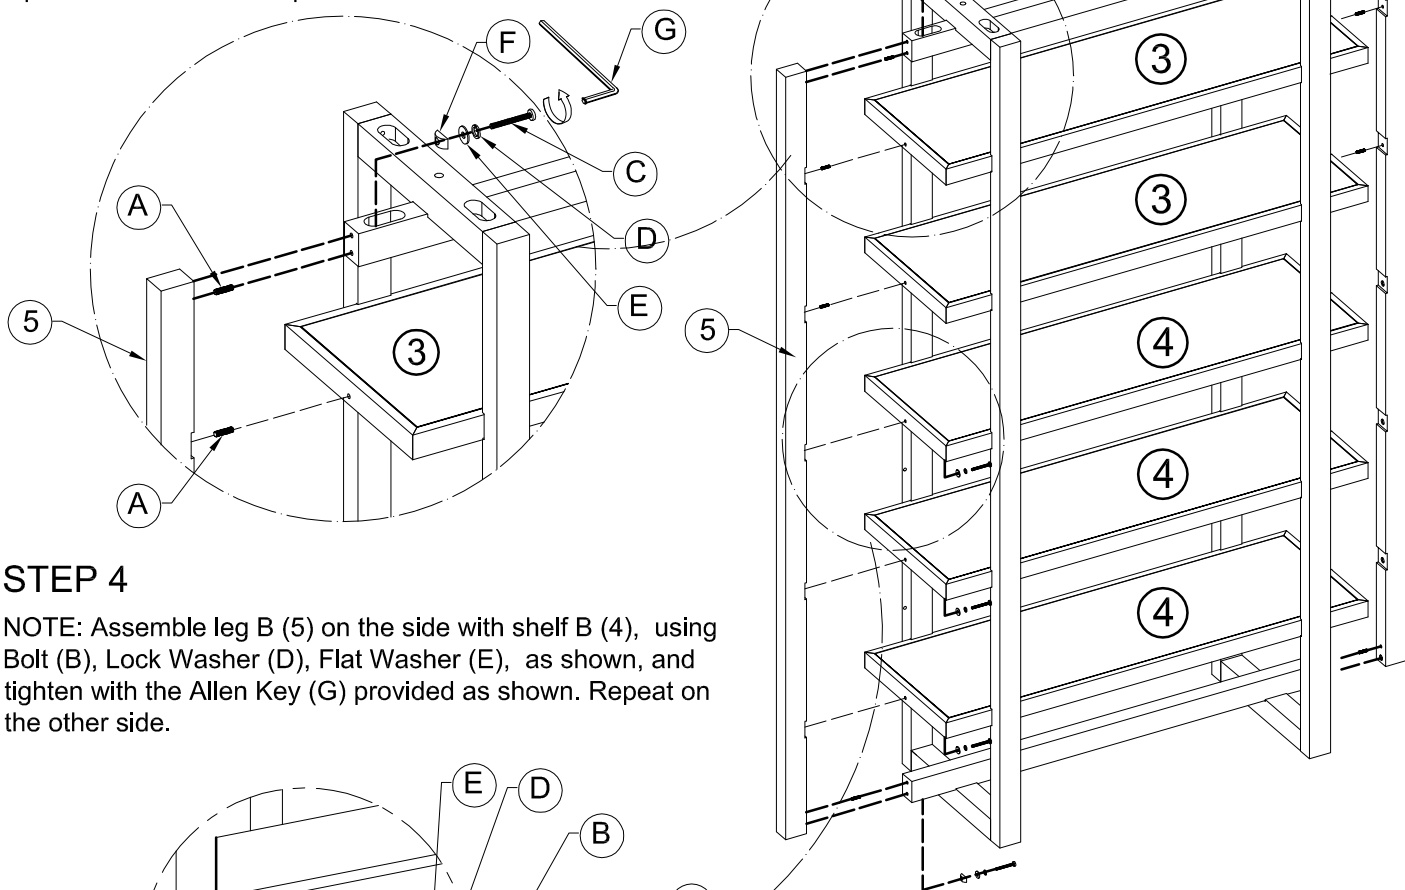


STEP 4

NOTE: Assemble leg B (5) on the side with shelf B (4), using Bolt (B), Lock Washer (D), Flat Washer (E), as shown, and tighten with the Allen Key (G) provided as shown. Repeat on the other side.

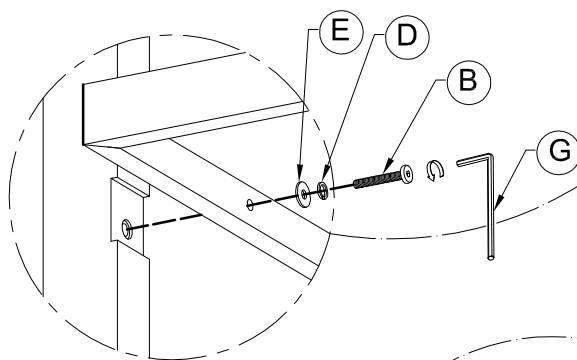

STEP 5

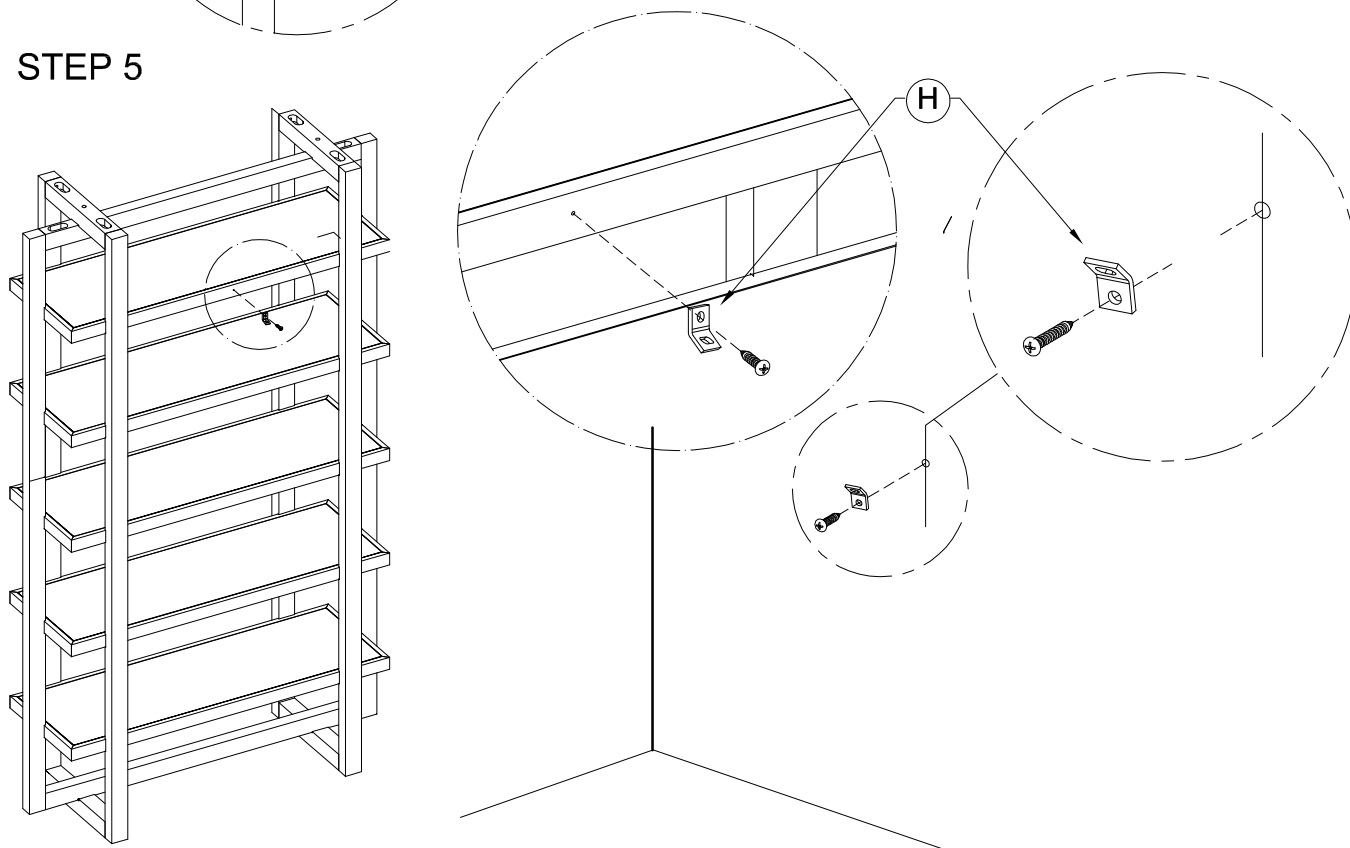

STEP 6

