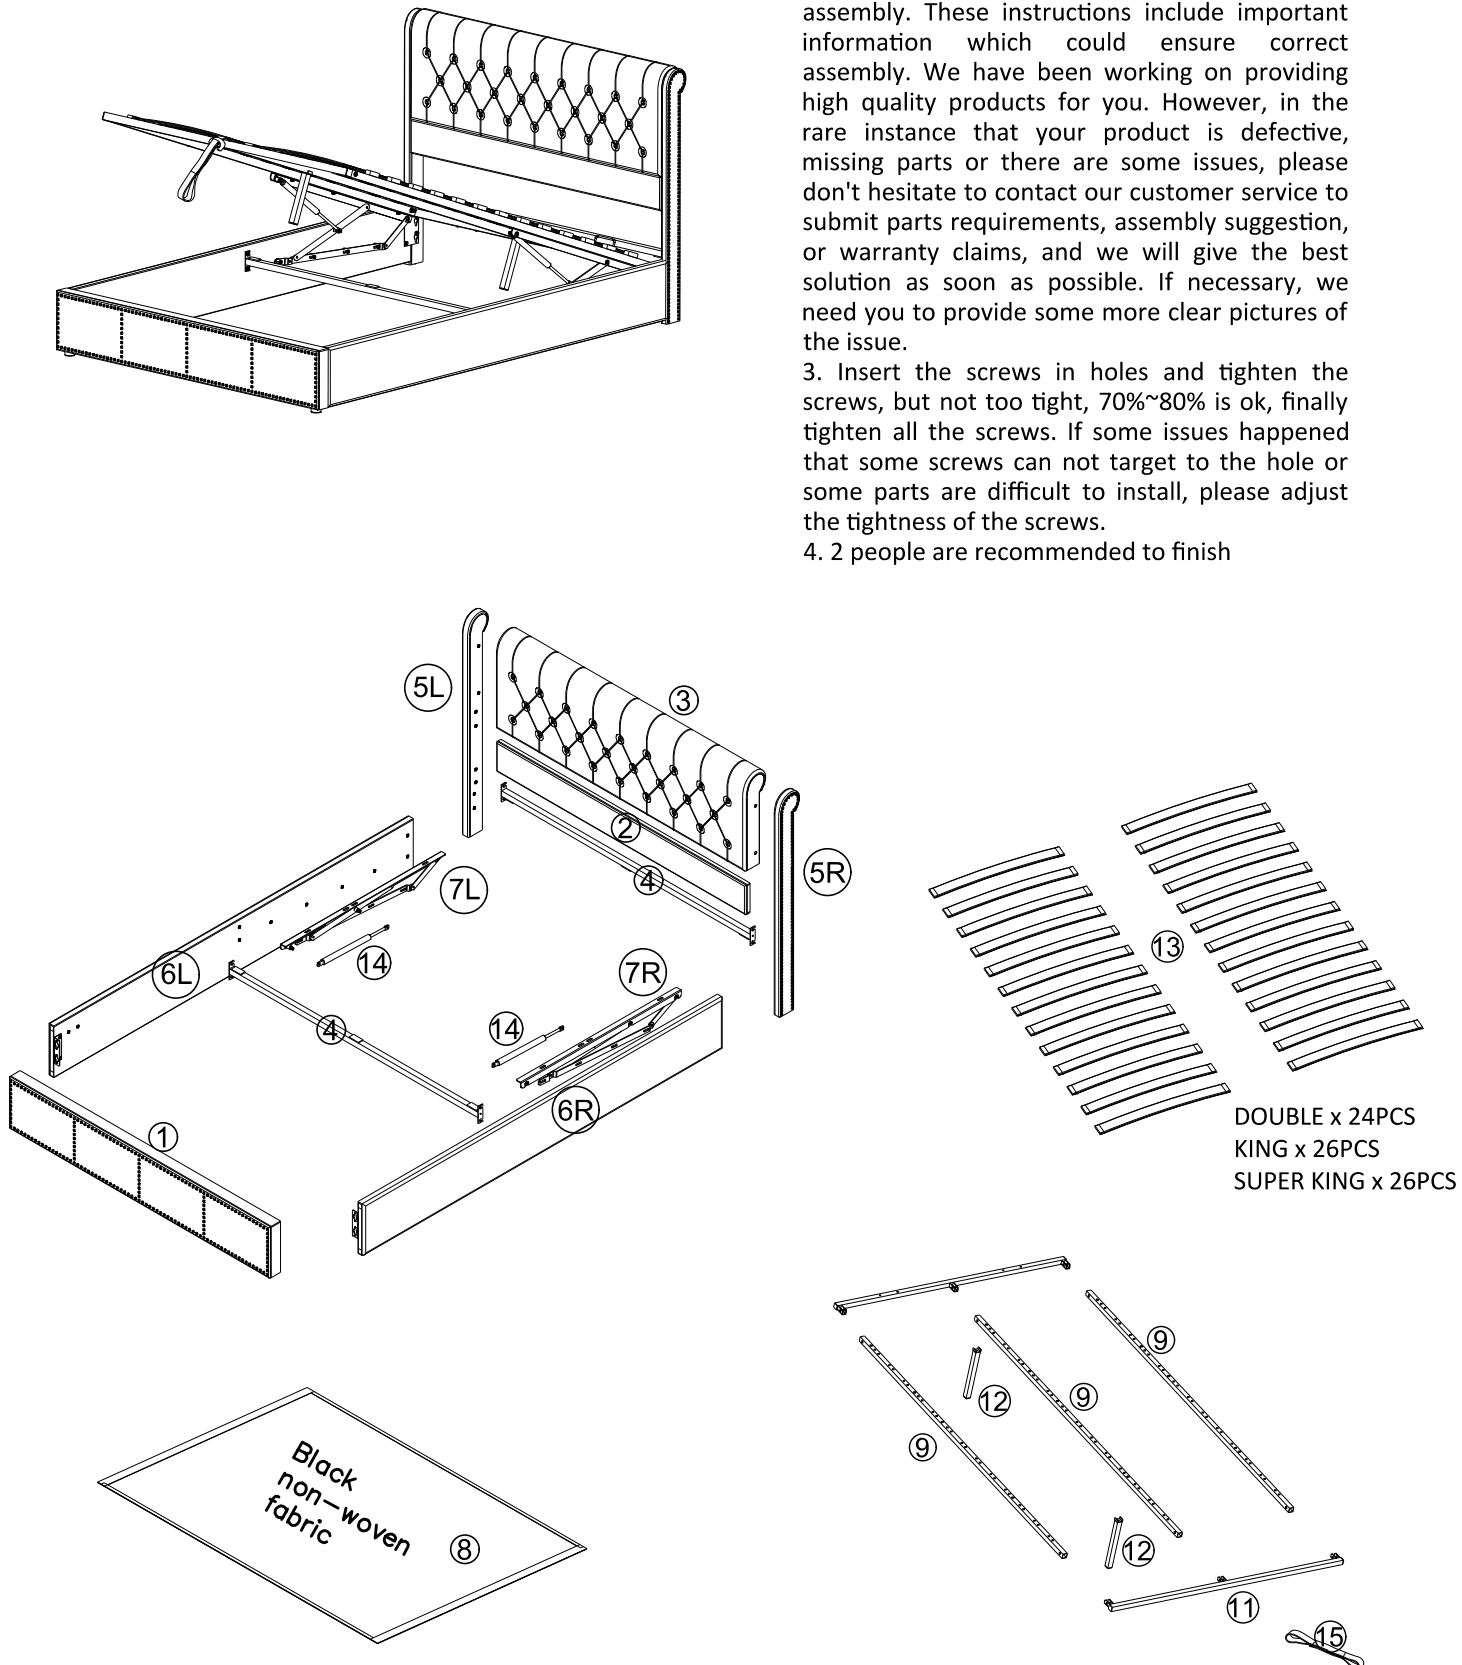


ASSEMBLY INSTRUCTION

Item Number: N606P198113 N606P198114-4ft6-DOUBLE
N606P198115 N606P198116-5ft-KING
N606P198117 N606P198118-6ft-SUPER KING

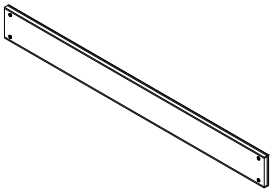
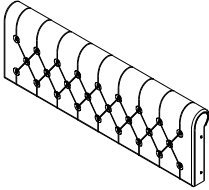
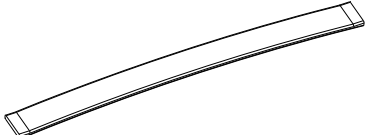
TIPS

1. This product is divided into 2 parcels for delivery. They may not arrive at the same time. Please wait patiently.
2. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
3. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
4. 2 people are recommended to finish















Part List

N606P198113 / N606P198115 / N606P198117








2 1pc 	3 1pc 	5L 1pc 
5R 1pc 	13 DOUBLE x 24PCS KING x 26PCS SUPER KING x 26PCS 	

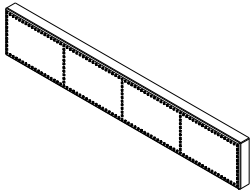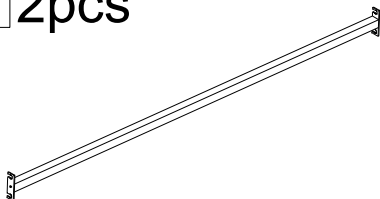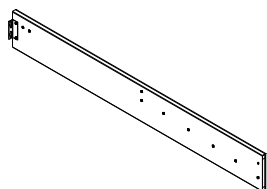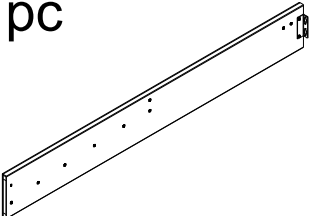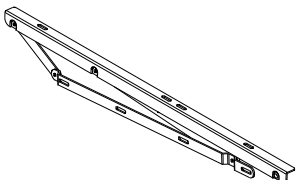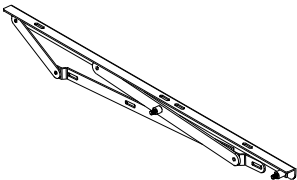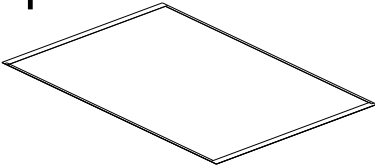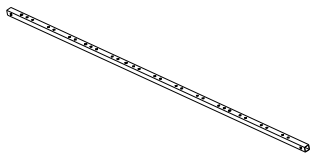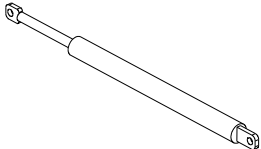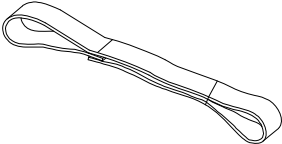N606P198114 / N606P198116 / N606P198118










1 1pc 	4 2pcs 	6L 1pc 
6R 1pc 	7L 1pc 	7R 1pc 
8 1pc 	9 3pcs 	10 1pc 
11 1pc 	12 2pcs 	14 2pcs 
15 1pc 		

Hardware List

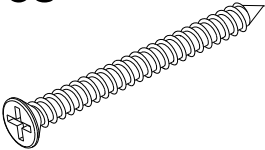
N606P198113 / N606P198115 / N606P198117

A1pc 	B2pcs  M4x40mm	D30pcs  M8x20mm
G16pcs  M8x45mm	H12pcs 	J8pcs  M8x25mm
L4pcs  M4x15mm	N8pcs  M8x30mm	P8pcs 
R16pcs  M8	S1pc 	T2pcs  M6x40mm

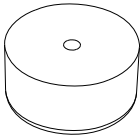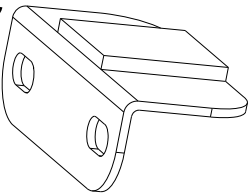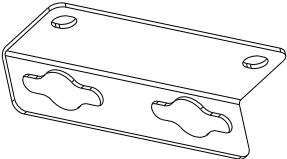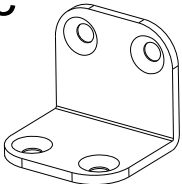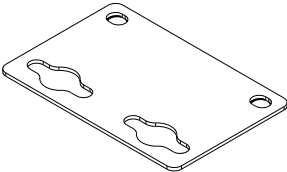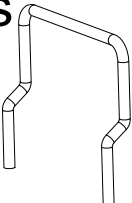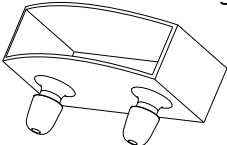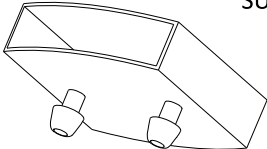N606P198114 / N606P198116 / N606P198118


C2pcs 	E1pc 	F2pcs 
K1pc 	M2pcs 	Q2pcs 
U2pcs 	V DOUBLE x 24PCS KING x 26PCS SUPER KING x 26PCS 	W DOUBLE x 12PCS KING x 13PCS SUPER KING x 13PCS 

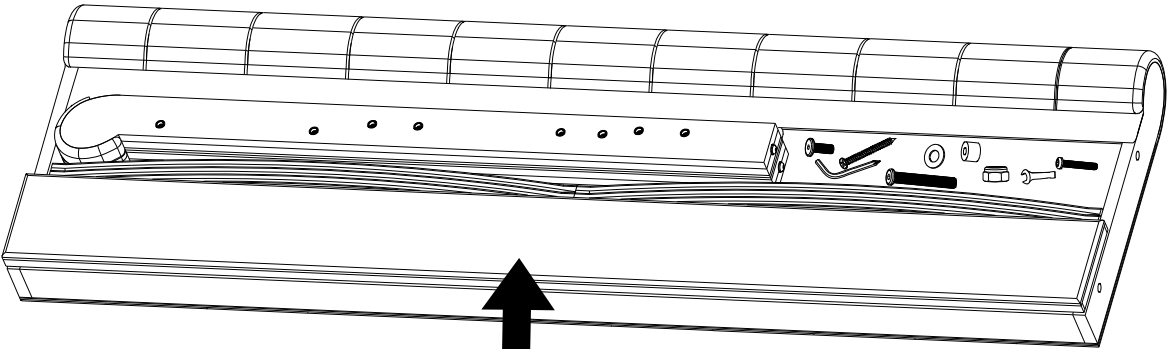Step 1




②③⑤L⑤R⑬
A/B/D/G/H/J/L/N/P/R/S/T

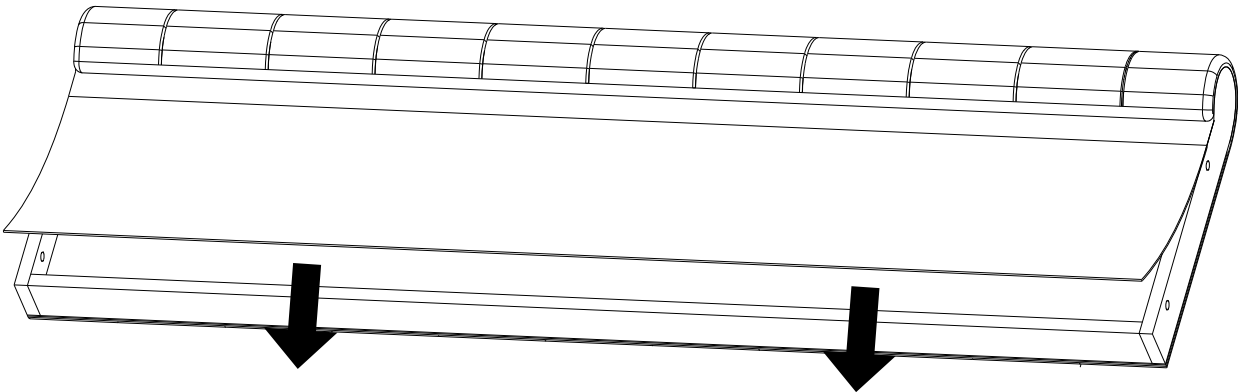Step 2




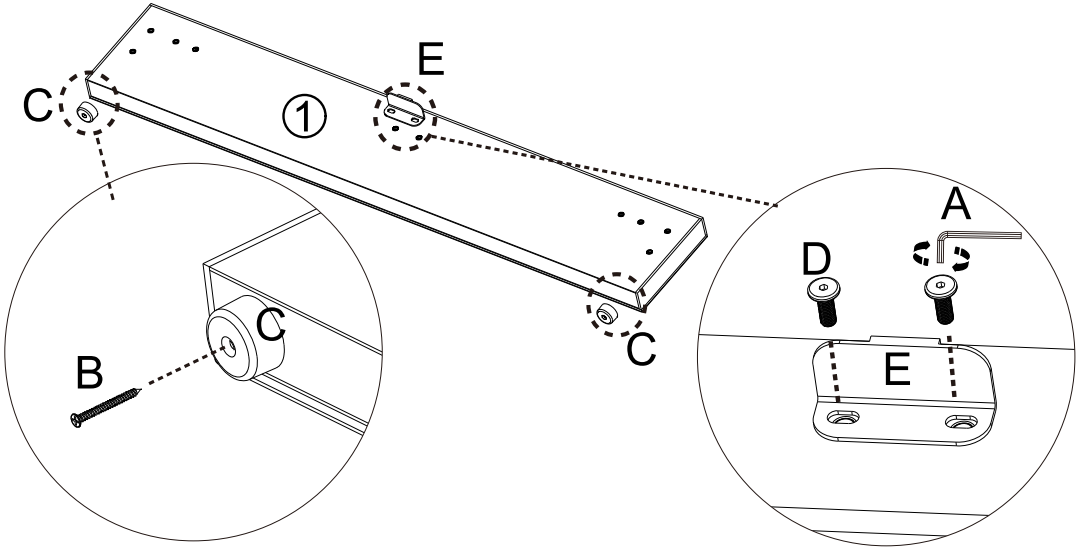Step 3




A x 1	B x 2	C x 2	D x 2	E x 1
	M4X40mm		M8X20mm	

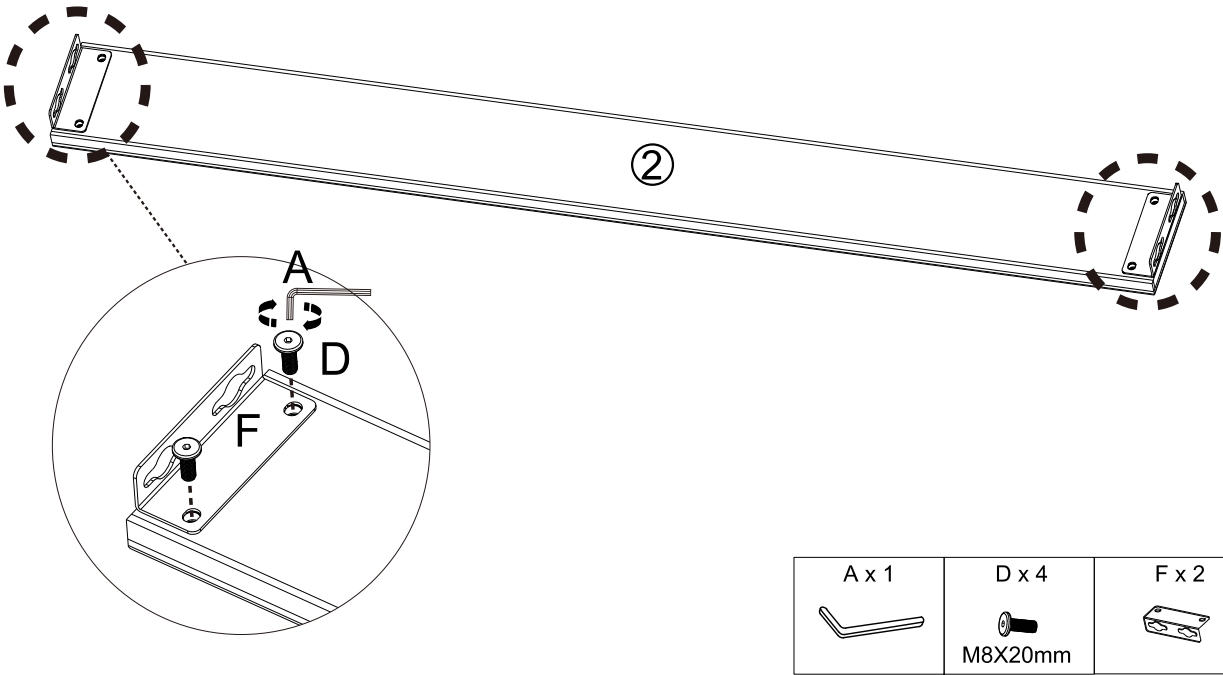
Step 4



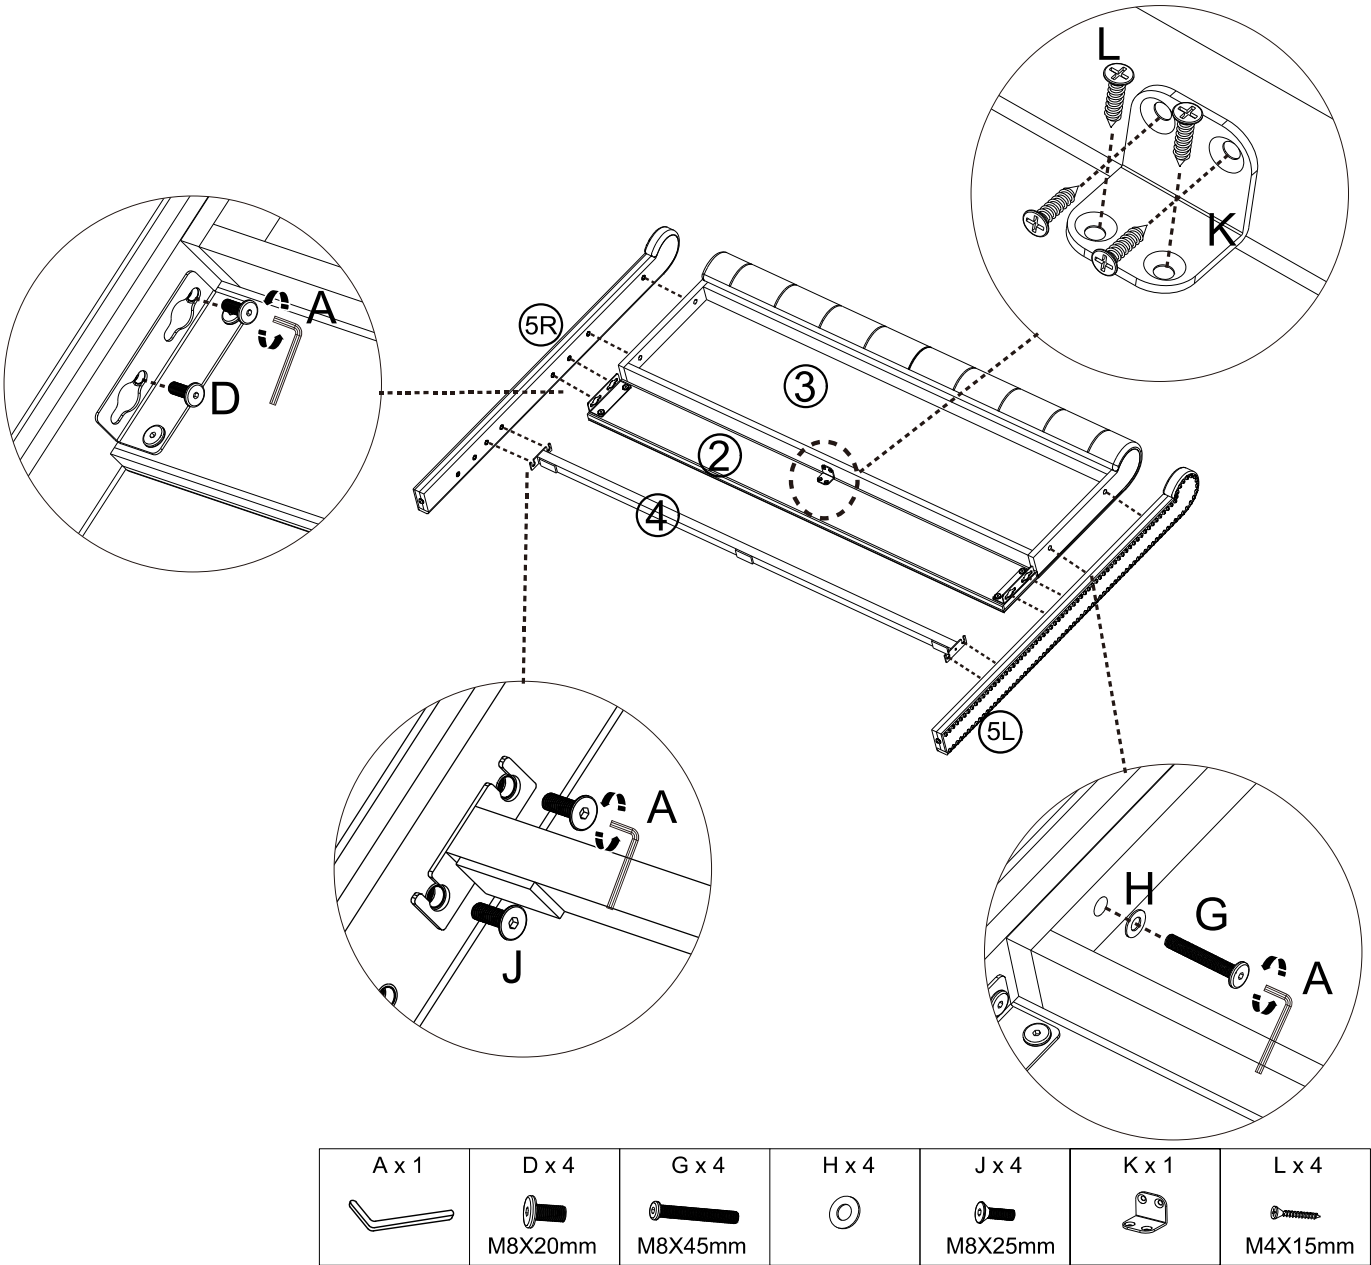
Step 5



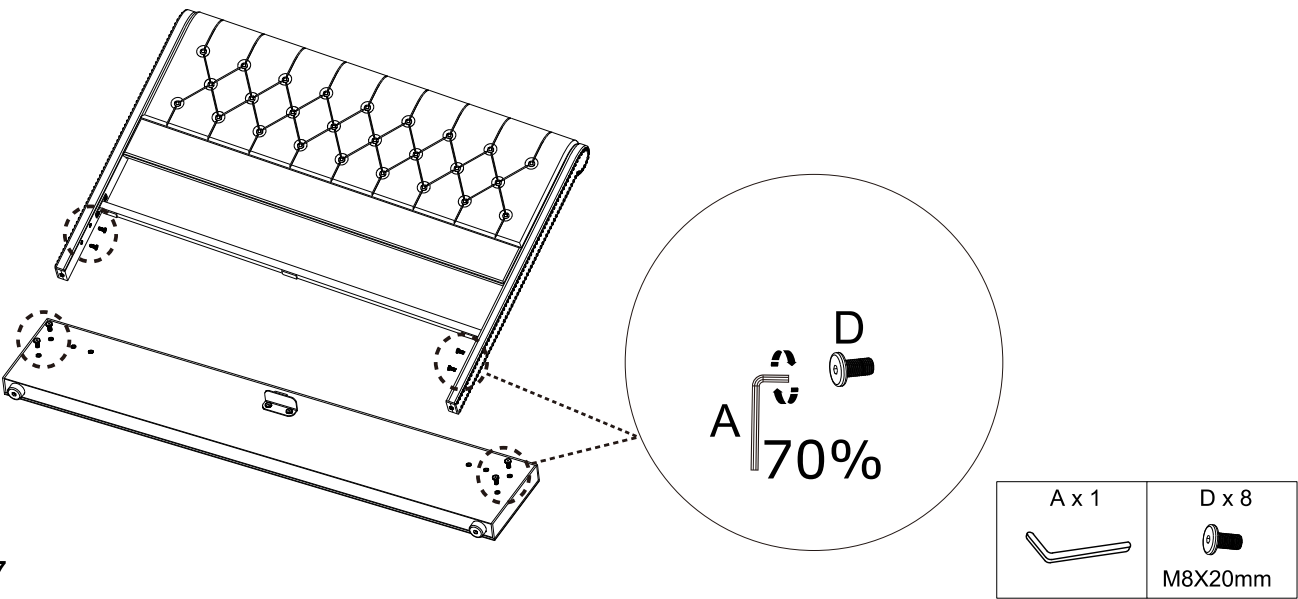
Step 6



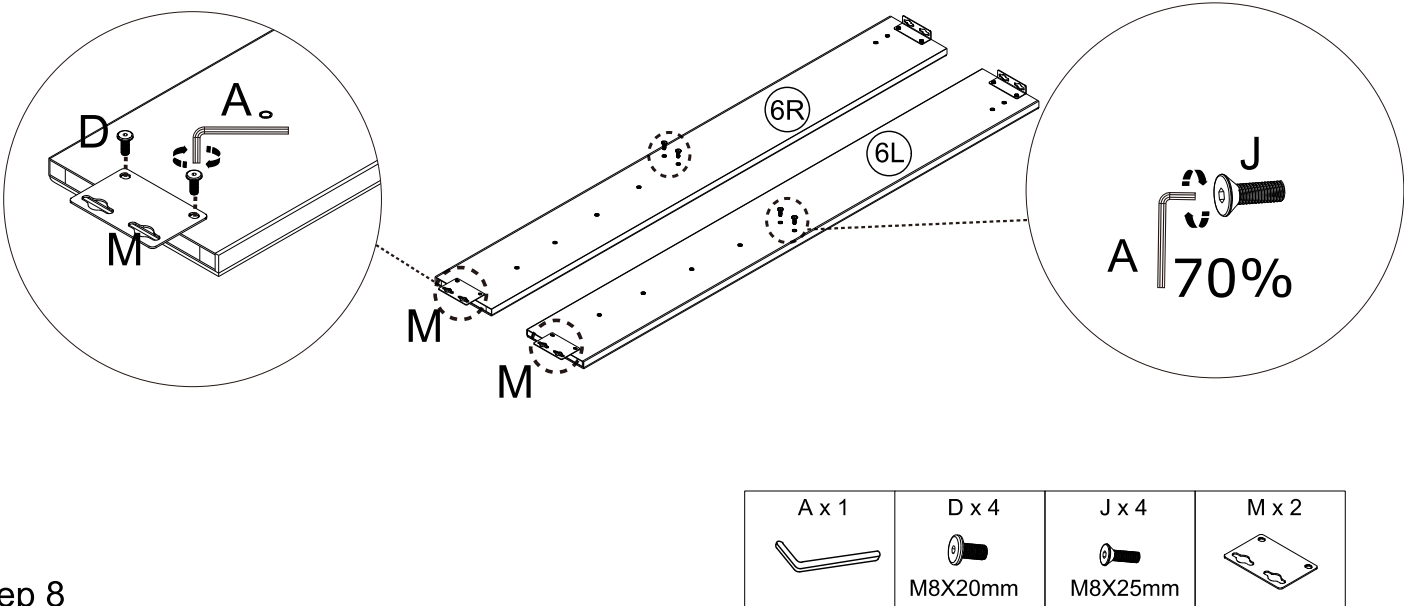Step 7




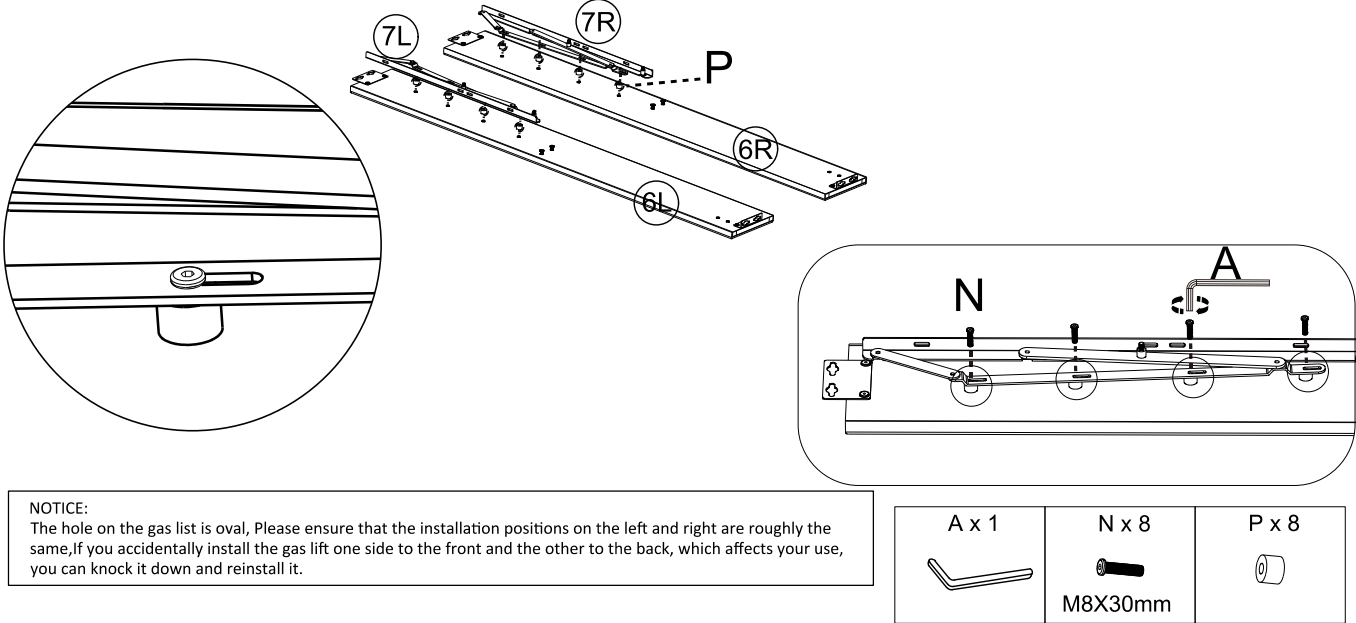Step 8




NOTICE:
The hole on the gas list is oval, Please ensure that the installation positions on the left and right are roughly the same, If you accidentally install the gas lift one side to the front and the other to the back, which affects your use, you can knock it down and reinstall it.

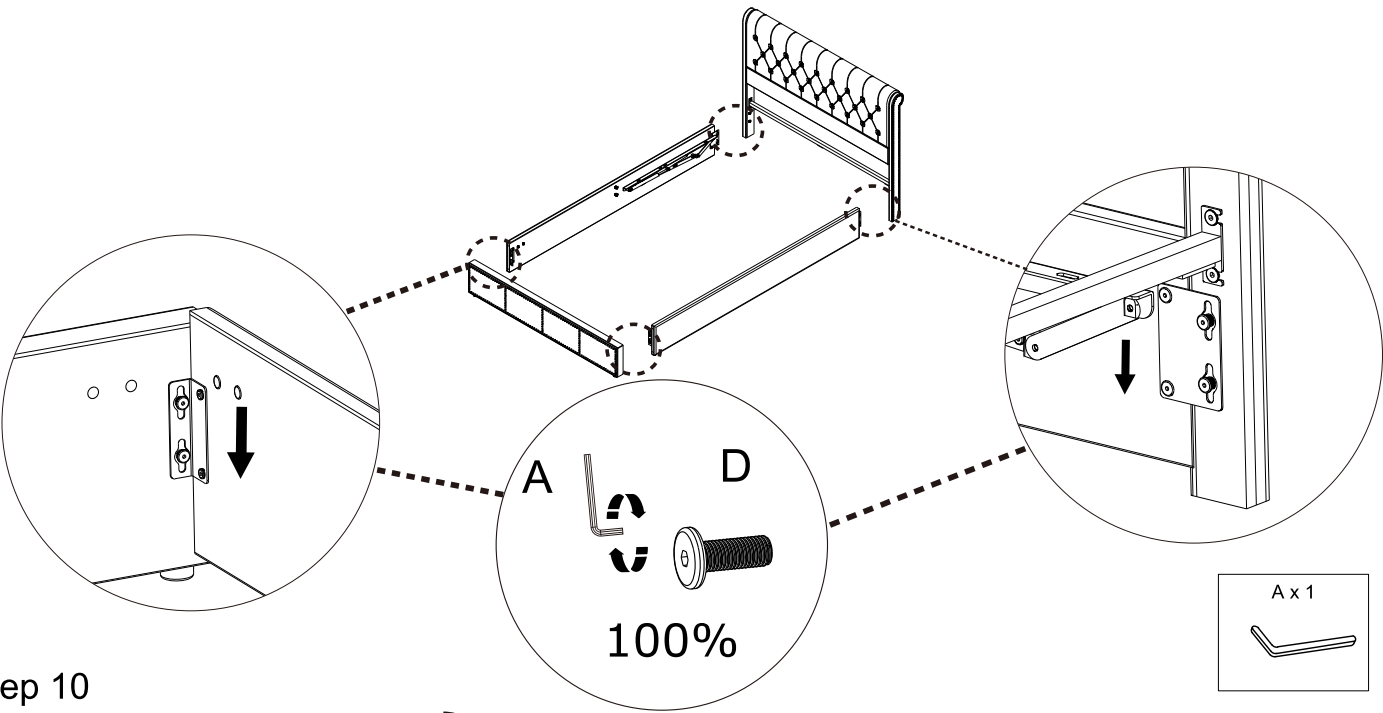
Step 9



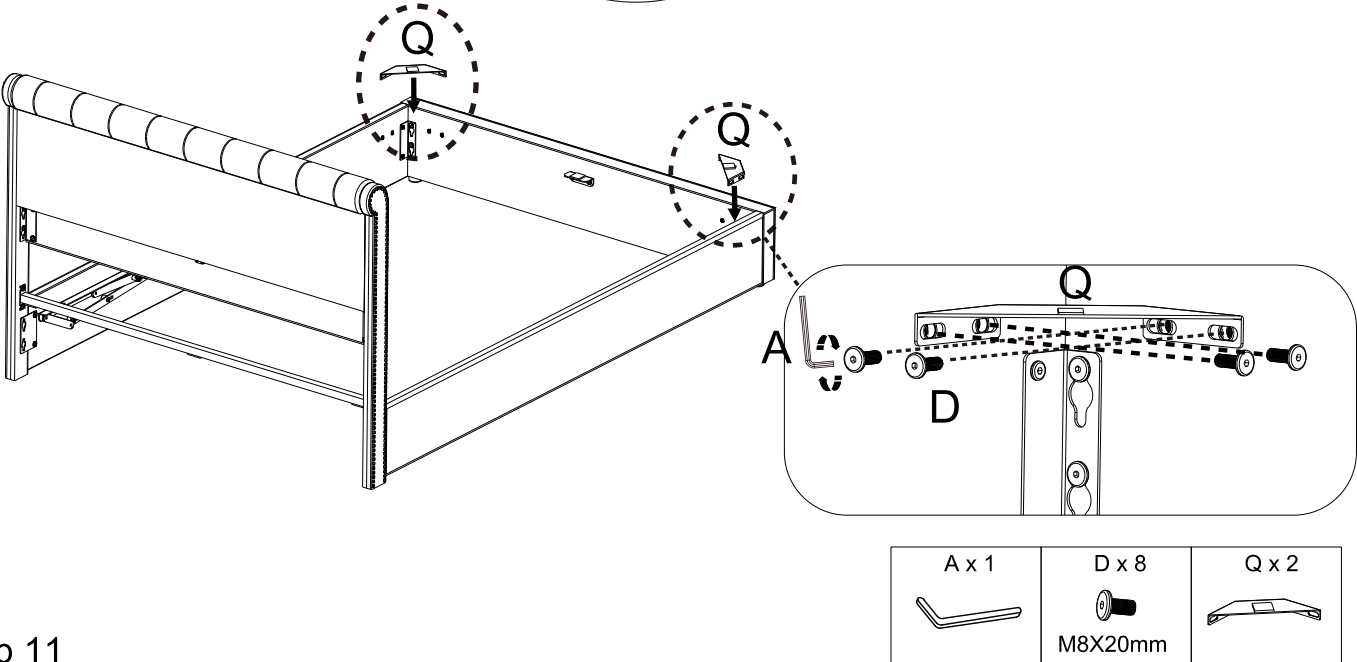
Step 10



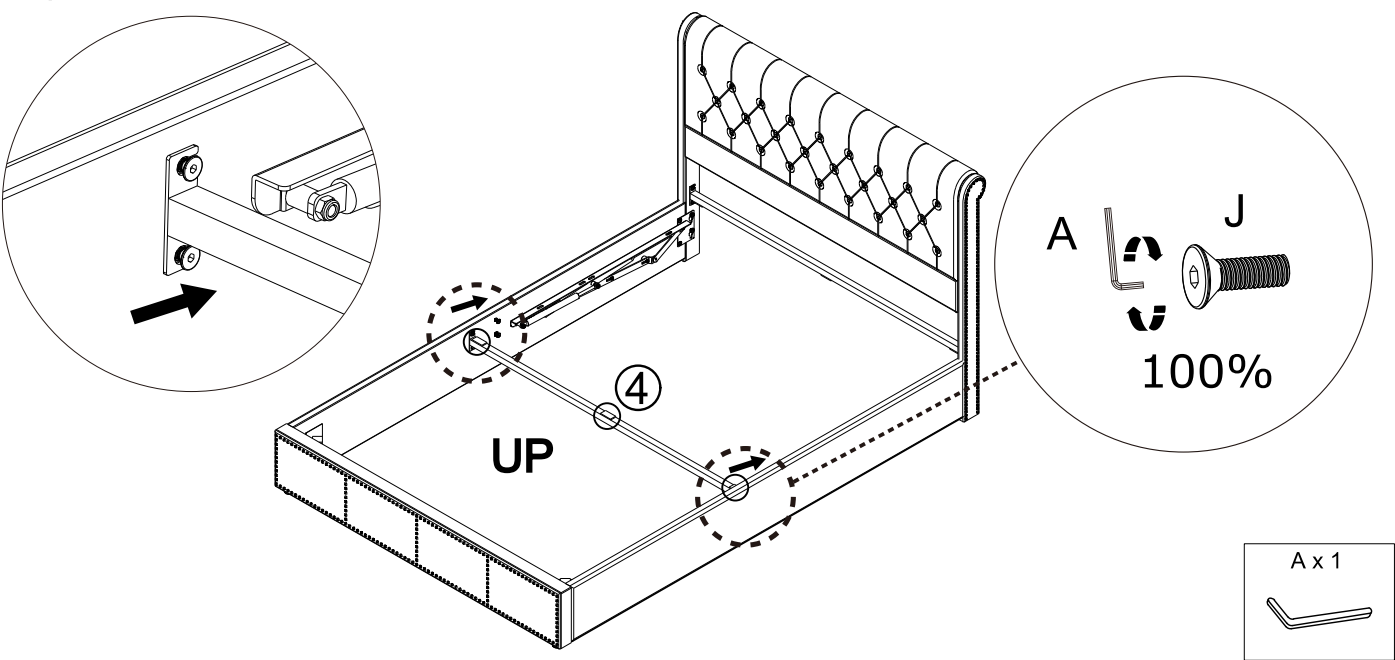
Step 11



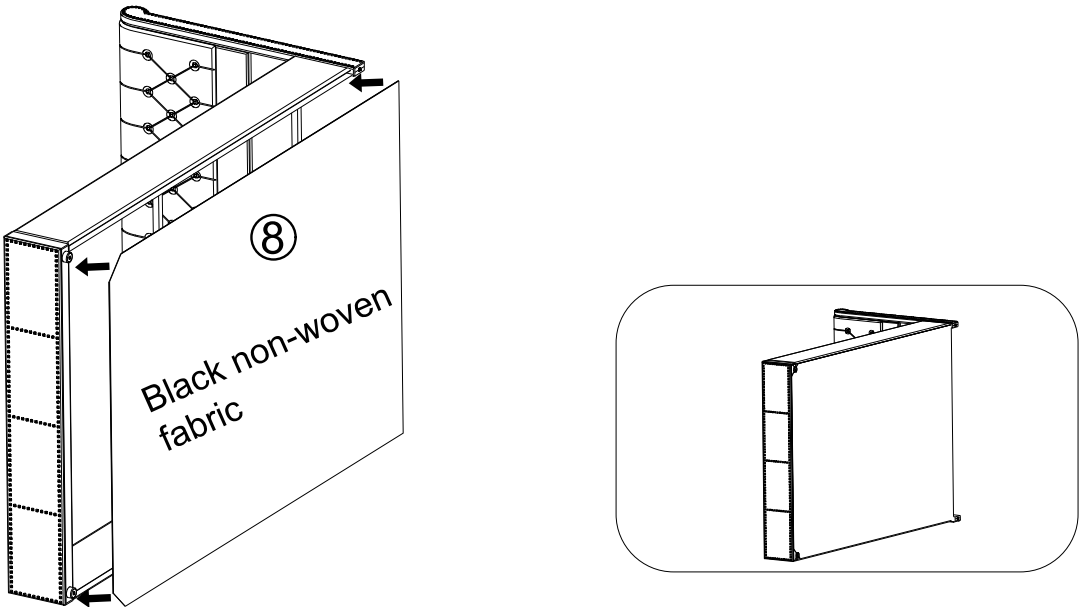Step 12




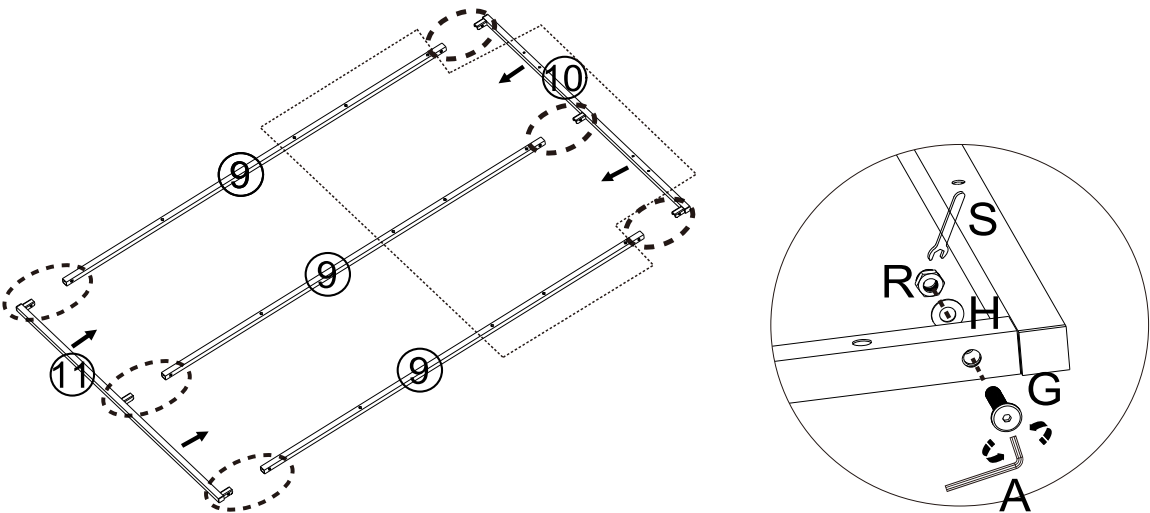Step 13




A x 1	G x 6	H x 6	R x 6	S x 1
	 M8X45mm		 M8	

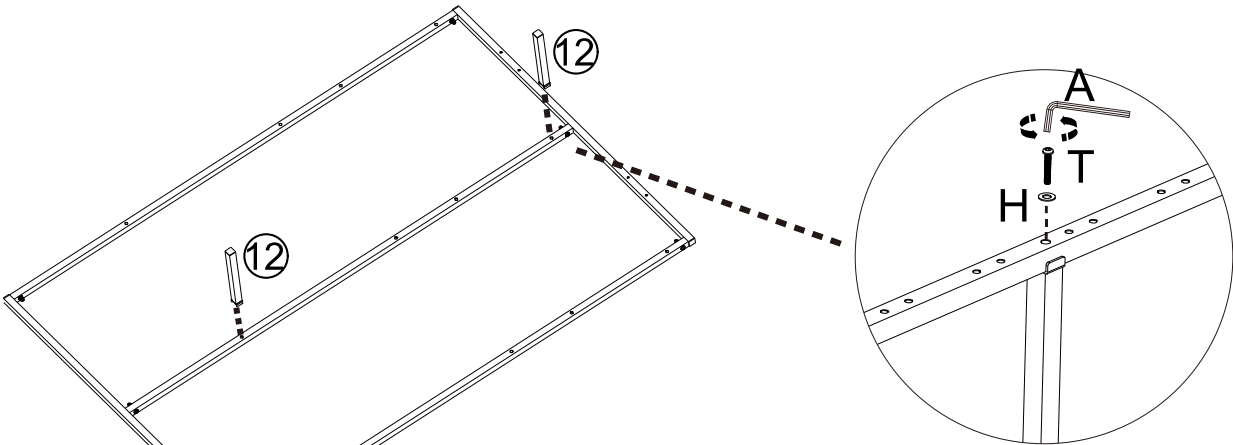Step 14




A x 1	H x 2	T x 2
		 M6X40mm

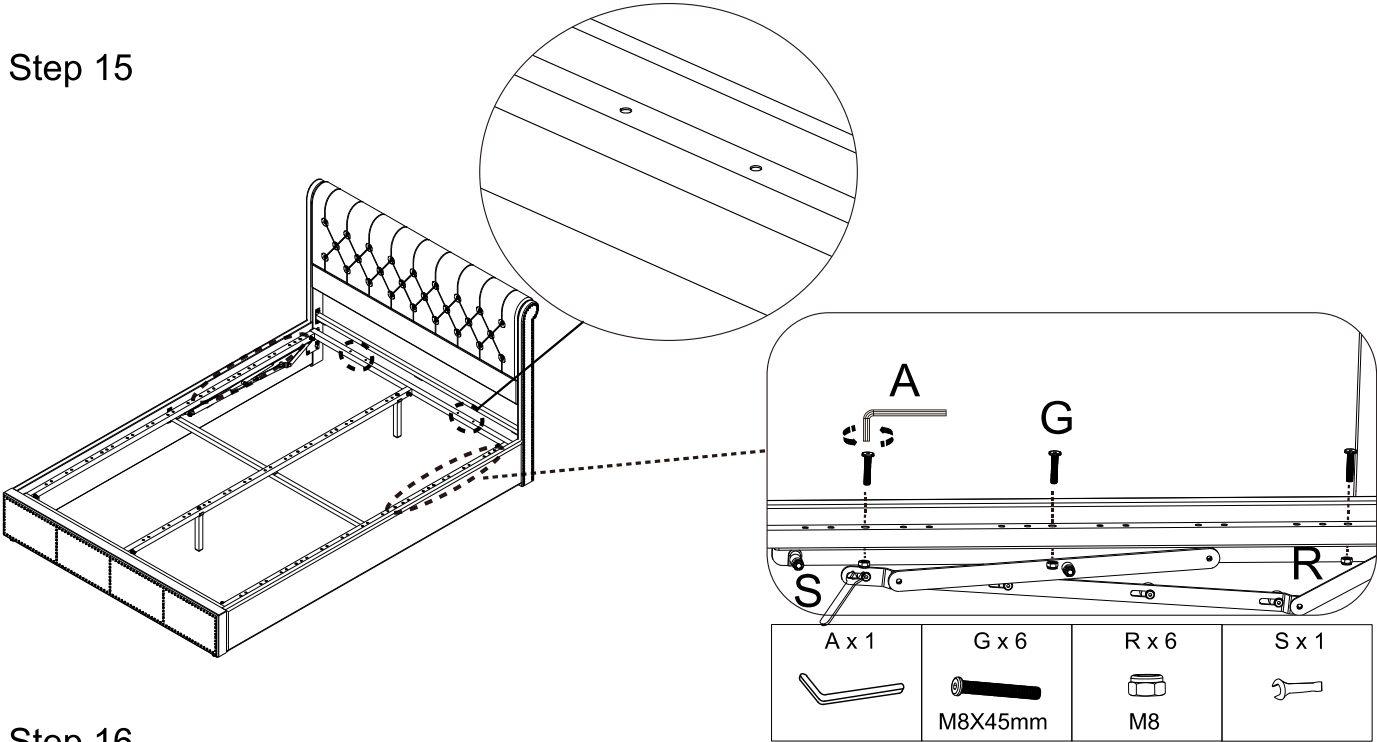
Step 15



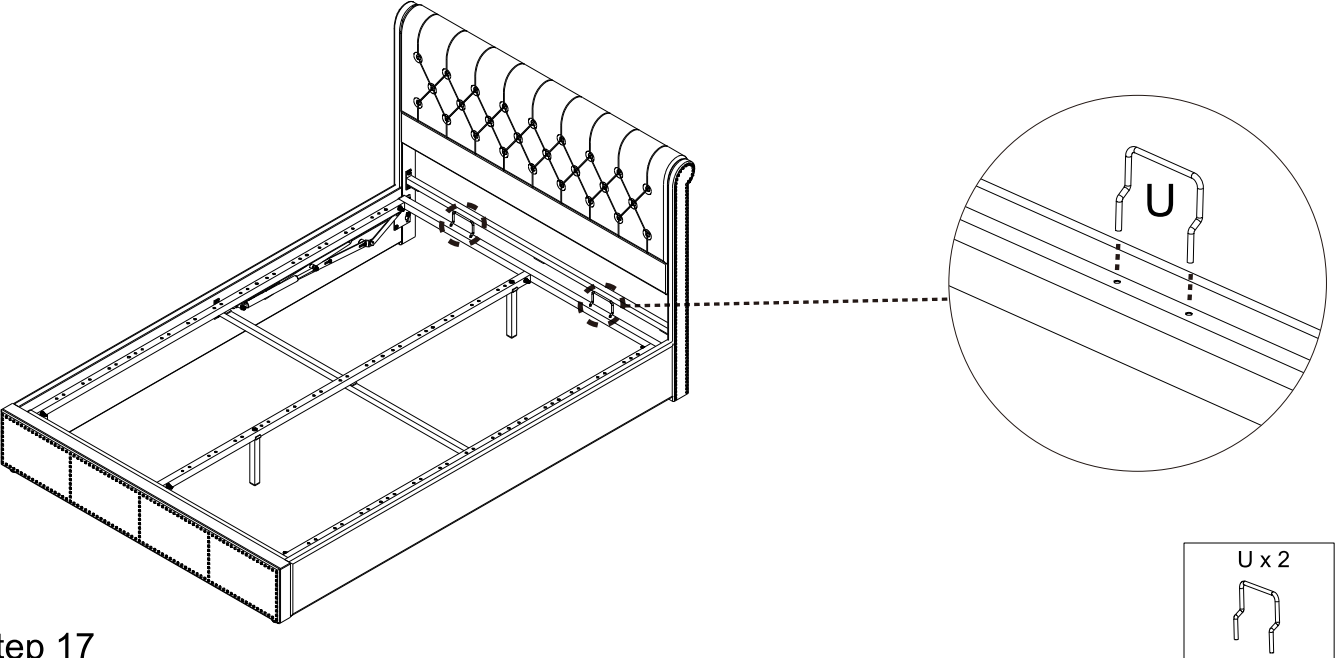
Step 16



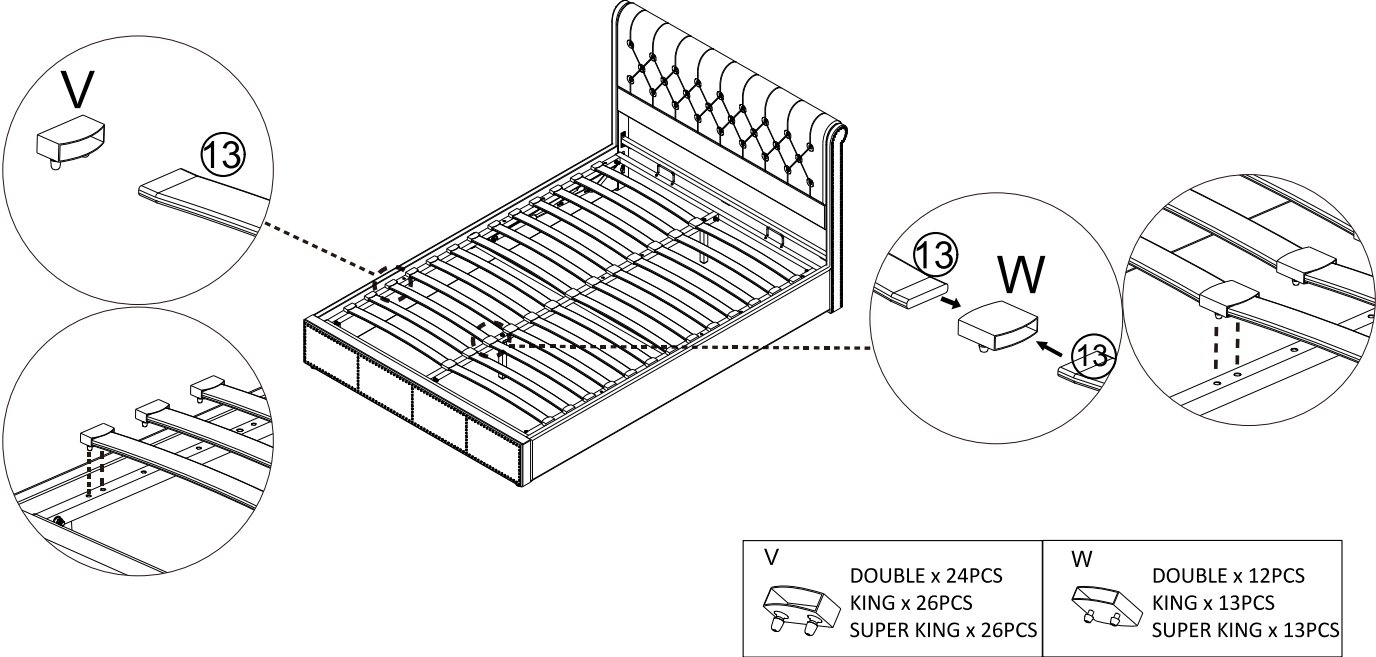Step 17



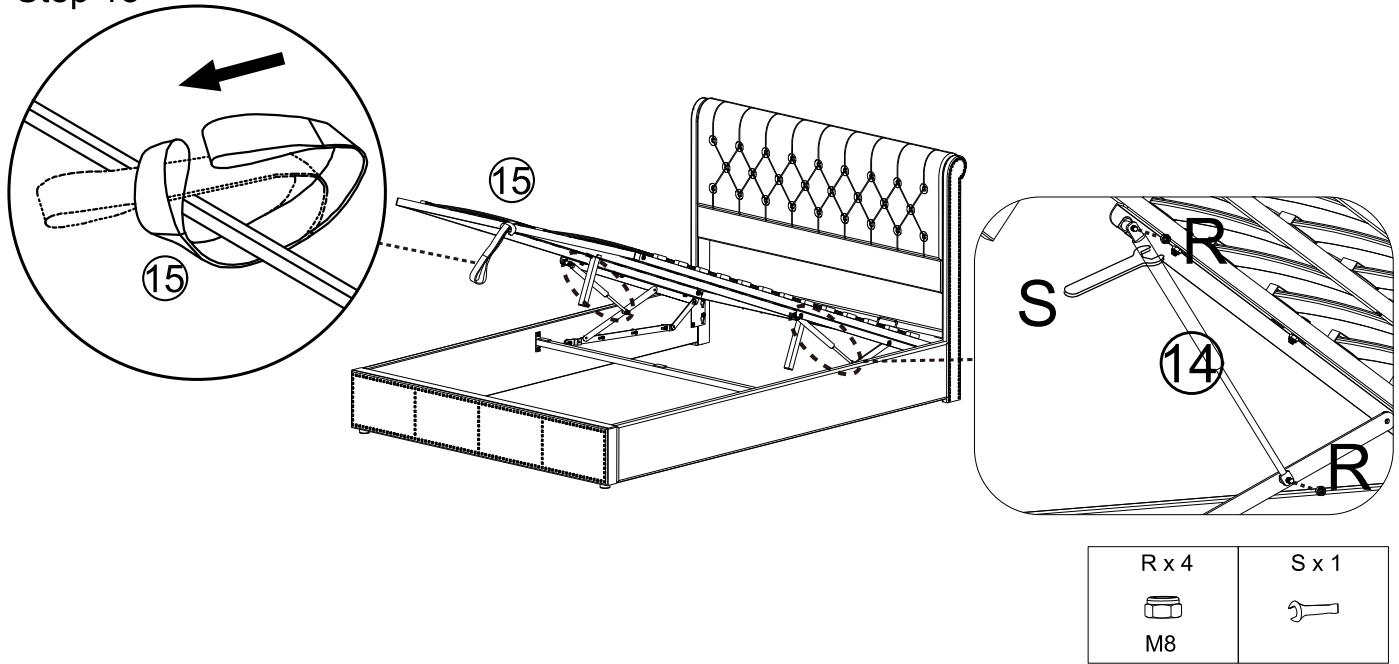Step 18



WHY WON'T MY HYDRAULIC BED STAY DOWN?

1. In fact, nine times out ten the reason why hydraulic won't close is because you need to put your mattress on top of the bed. Yep, it really is that easy. This is because the hydraulic pistons need the weight of the mattress to provide enough pressure to close your bed.
2. However, what if you've put your mattress on your bed and you're one of the unlucky ones who finds that their hydraulic bed still won't stay down?

As previously mentioned, they require pressure in order to close. However, occasionally as well as placing the mattress on the bed you will initially have to apply some physical force yourself to close the bed. Don't worry you won't break it! ! !

