


IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

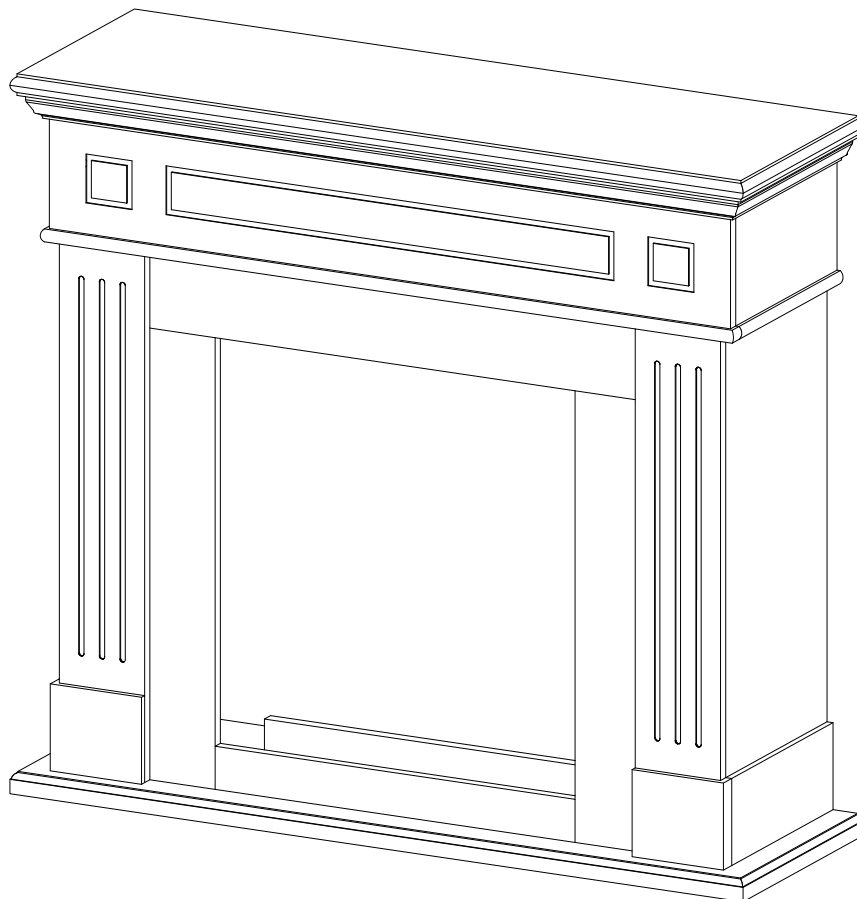

ELECTRIC FIREPLACE



THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

WARNING

- Unit can tip over causing severe injury.
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.



60MIN

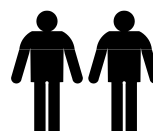

[Helpful Hints]

PEOPLE NEEDED FOR ASSEMBLY: 2
ESTIMATED ASSEMBLY TIME: 1 HOUR

-Open your item in the area you plan to keep it to avoid excessive heavy lifting.



-Identify, sort and count the parts before attempting assembly.



-Make sure to always face the point on the top of the Cam Lock towards the outer edge.



-Use all the nails provided for the back panel and spread them out equally.



-Back panel must be used to make sure your unit is sturdy.




-Do NOT use harsh chemicals or abrasive cleaners on this item.

-Never push, pull, or drag your furniture.



PARTS LIST

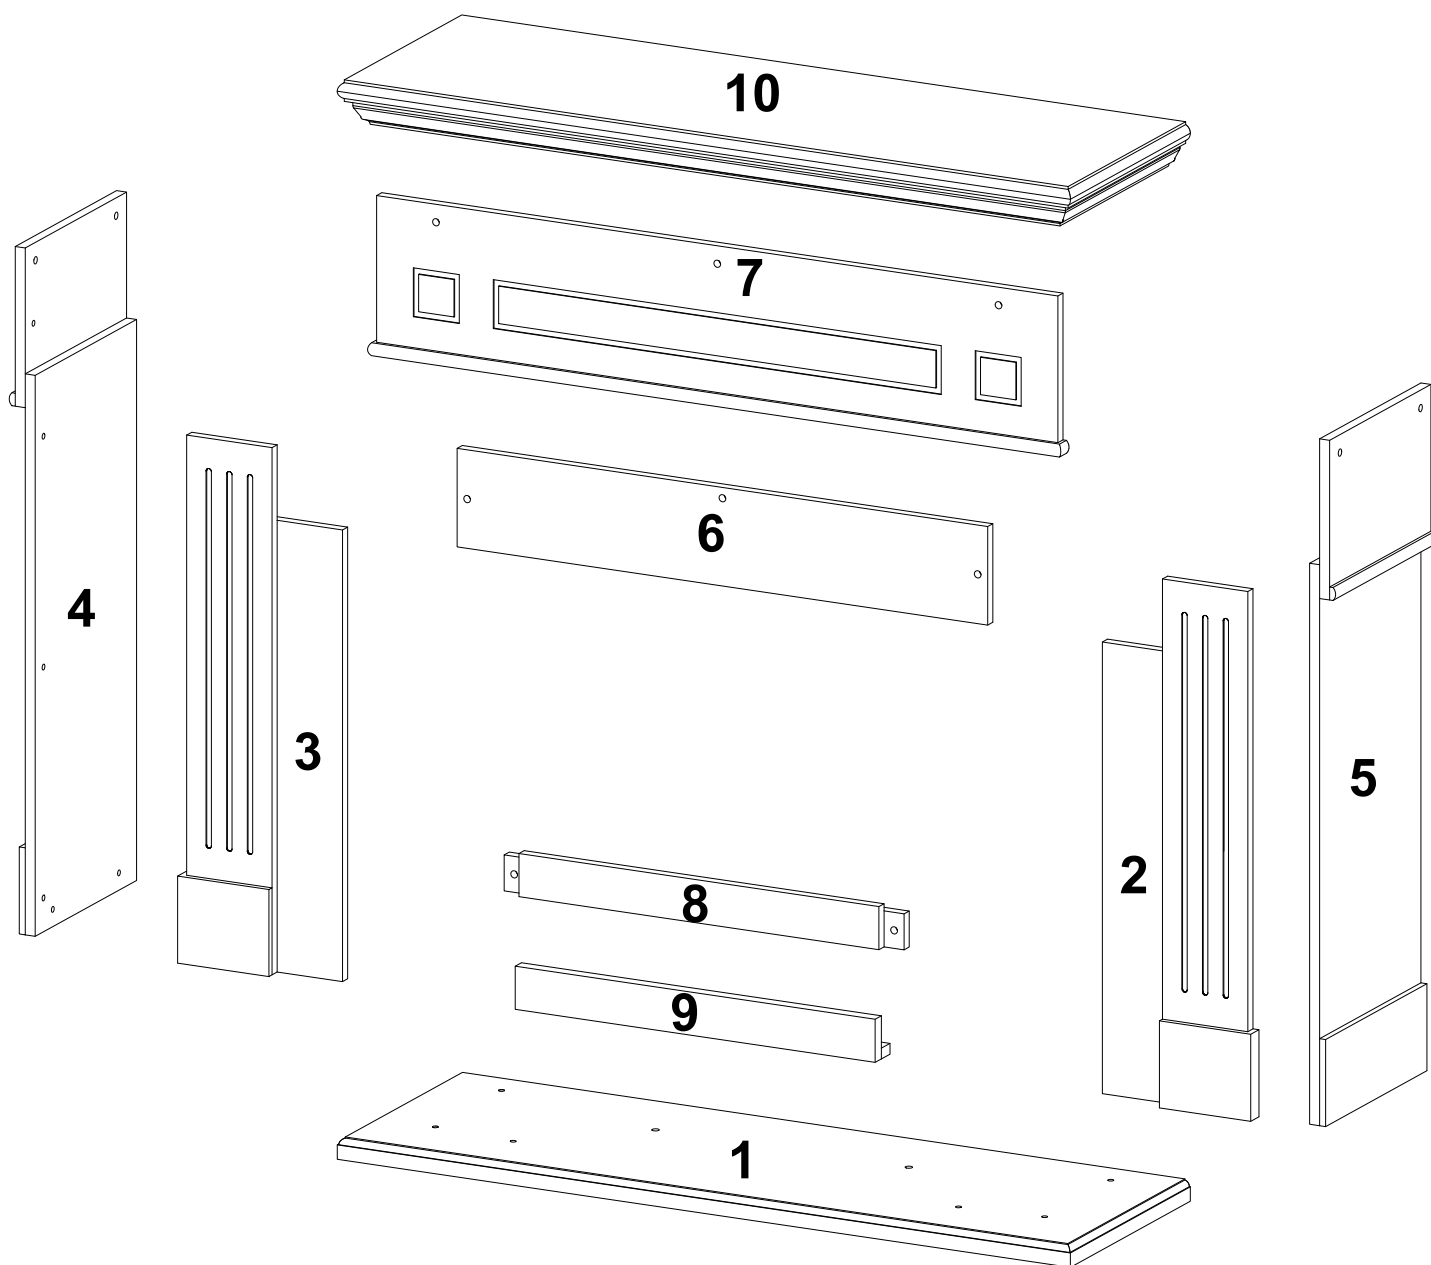


HARDWARE LIST




A	X 28
---	------

Ø6 x12mm



B	X 14
---	------




C	X 14
---	------

Ø6 x 28mm



D	X 14
---	------




E	X 1
---	-----



F	X 4
---	-----

Ø4 x12.7mm

DIMENSIONS

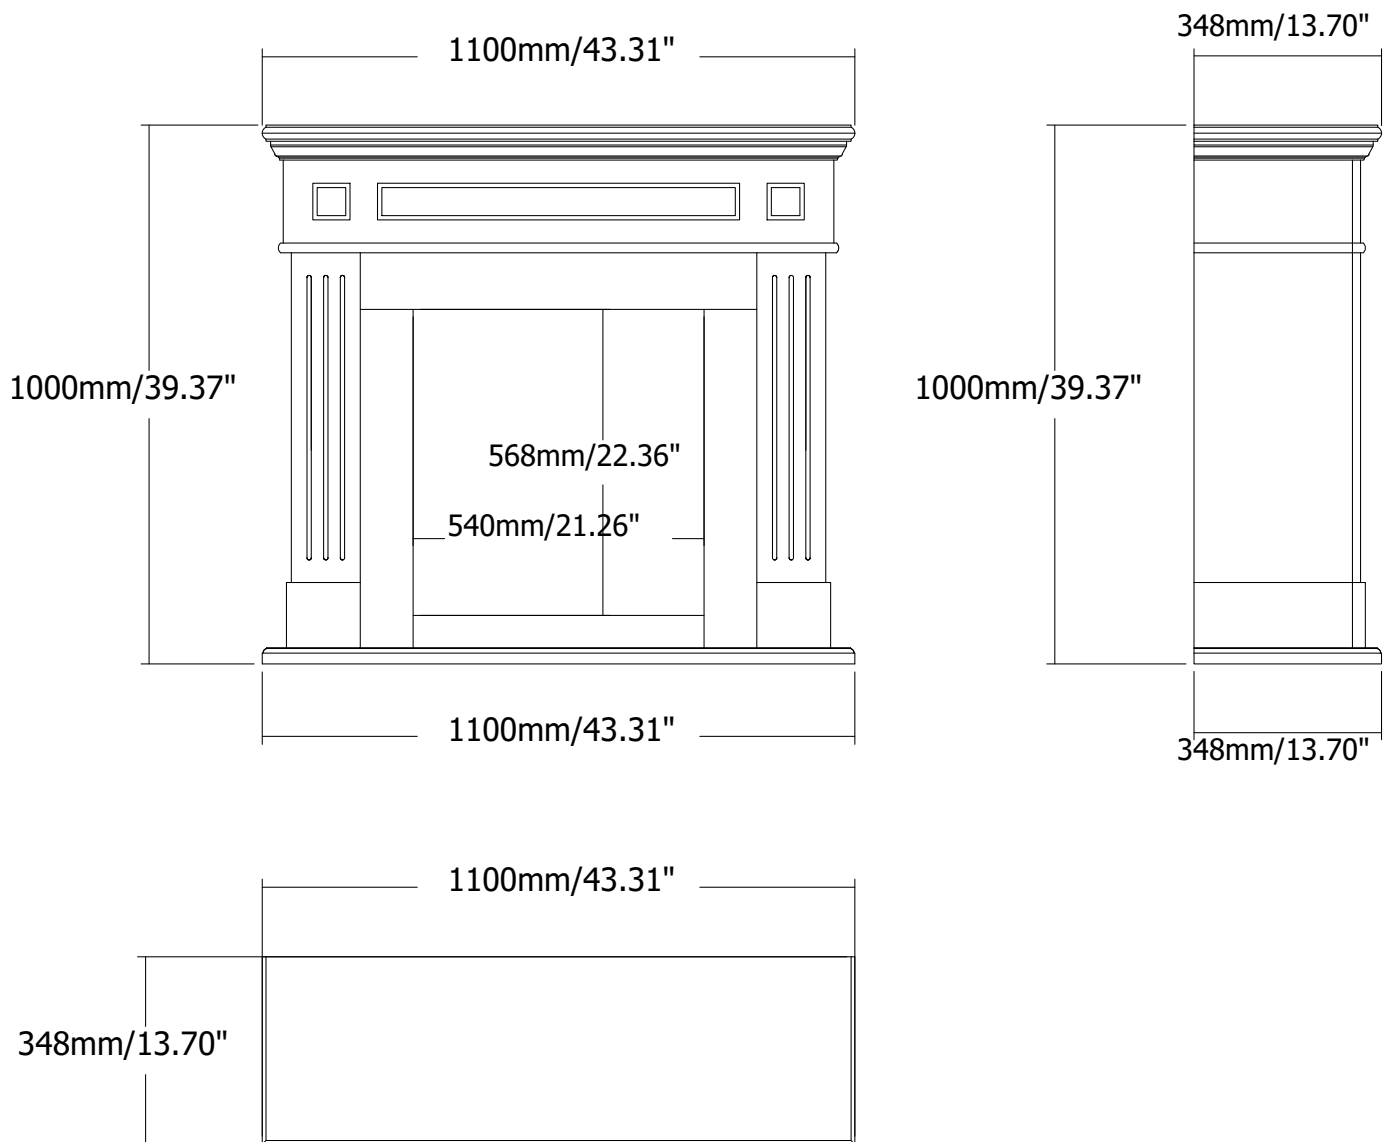


ASSEMBLY



Before installing this fireplace, please read the following steps carefully.

STEP 1:

Join panels (2)+(5), (3)+(4) by securing screws (A) via L-brackets (B) with the allen wrench (E) provided.

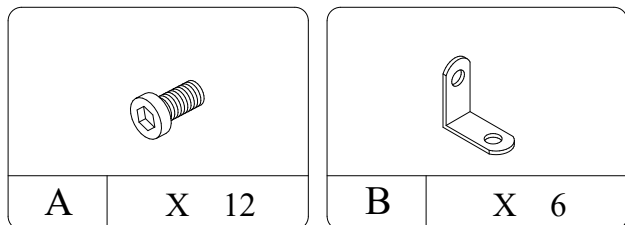


Ø6 x12mm

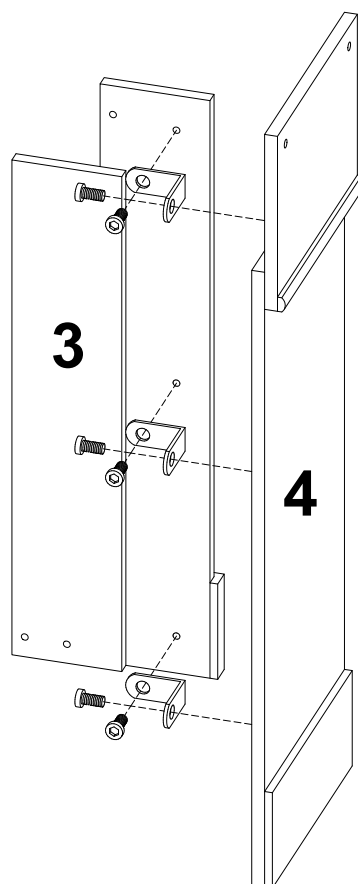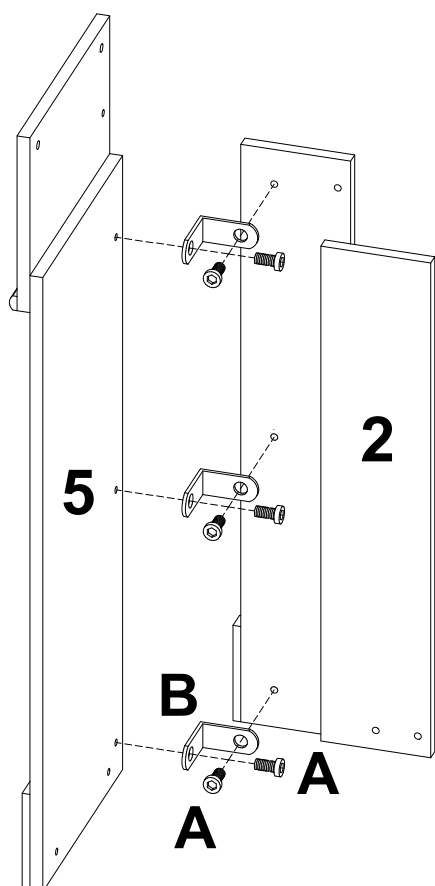


STEP 2:

Join the panel (1) by securing screws (A) via L-brackets (B) with the allen wrench (E) provided.

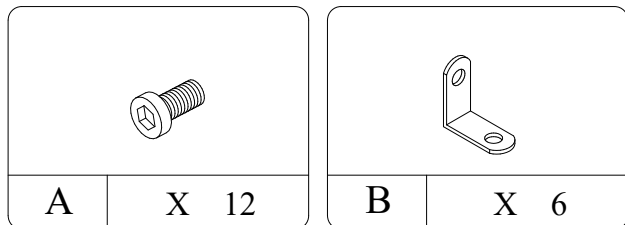


Ø6 x12mm

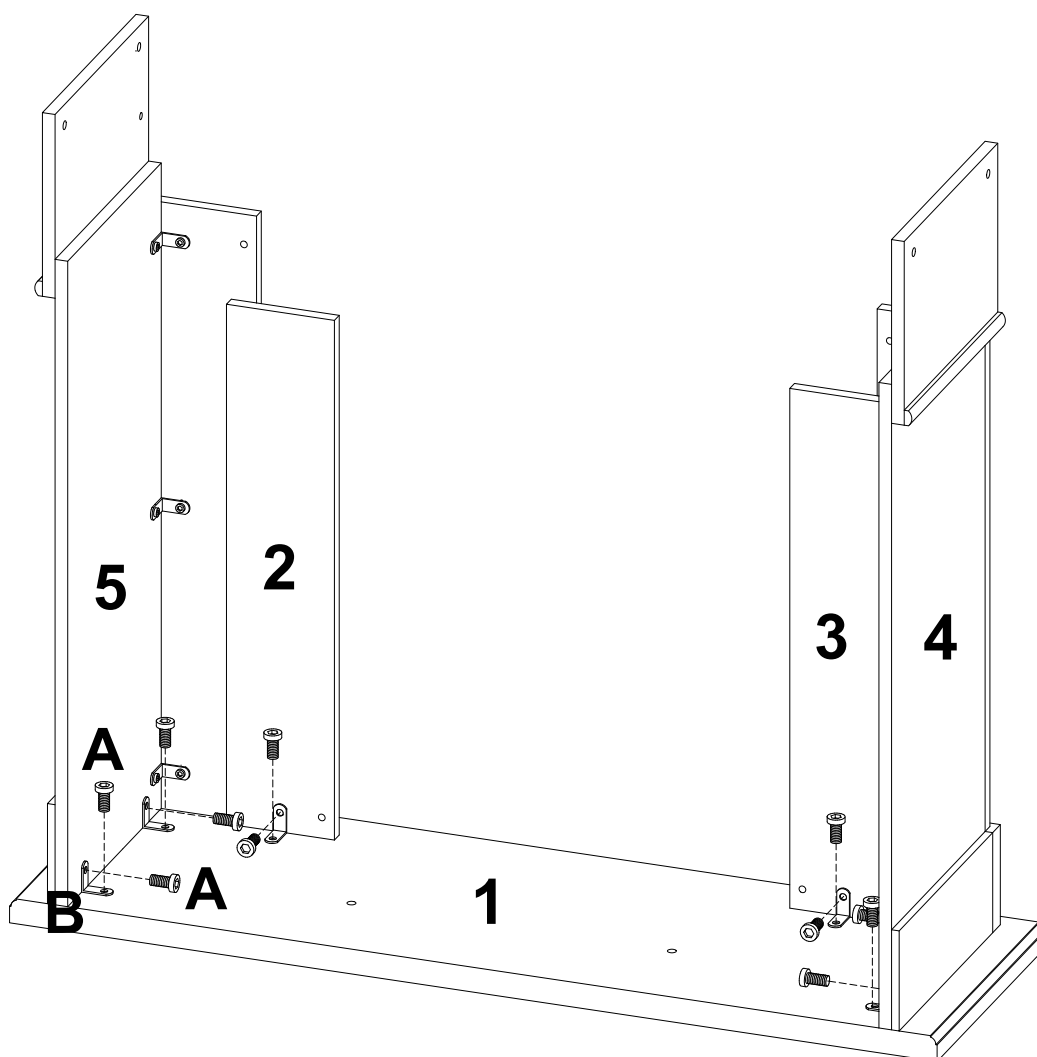


STEP 3:

Join the panel (7) by securing screws (A) via L-brackets (B) with the allen wrench (E) provided.

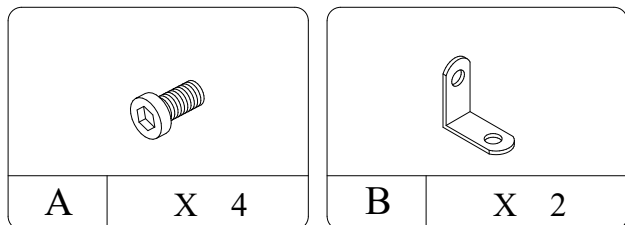


Ø6 x12mm

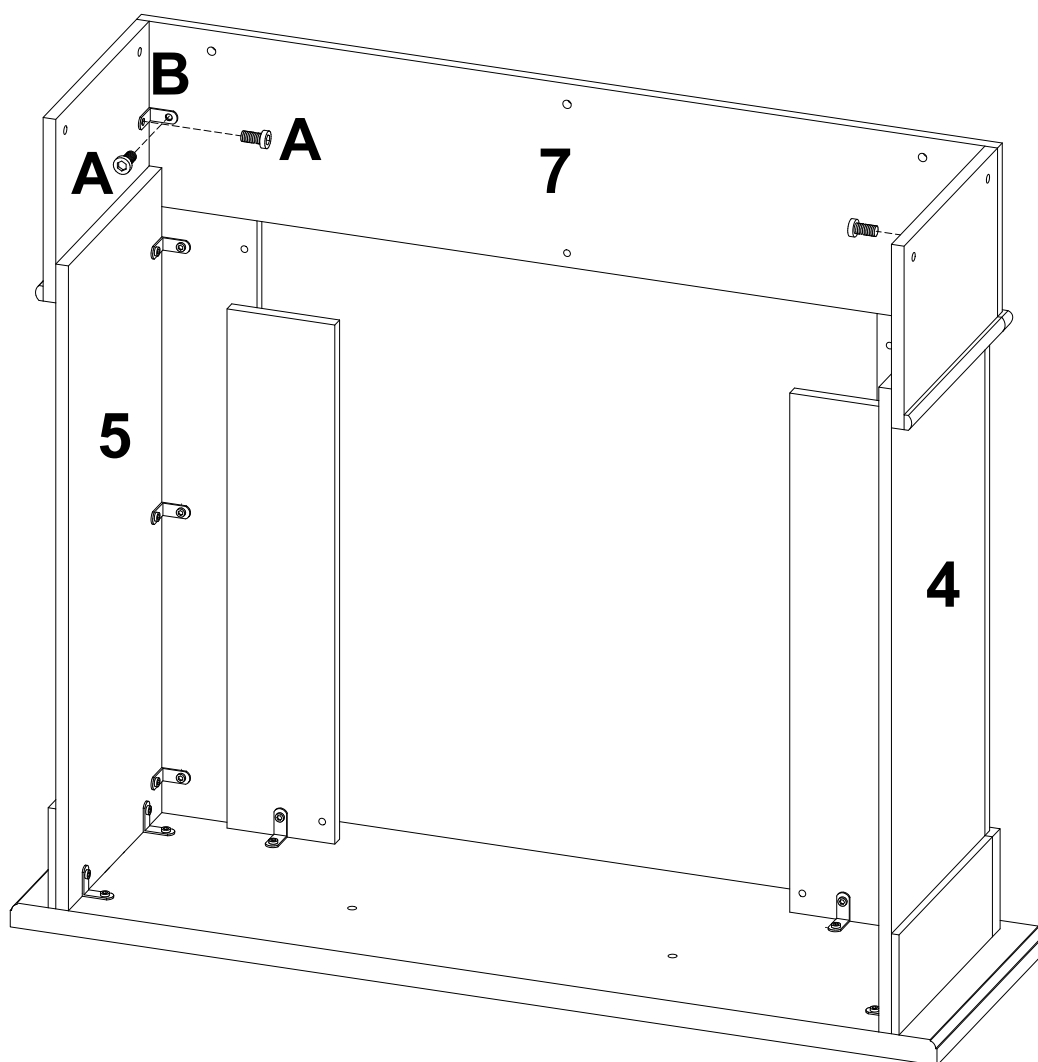


STEP 4:

Join panels (6)+(8) by securing screws (C) via washers (D) with the allen wrench (E) provided.

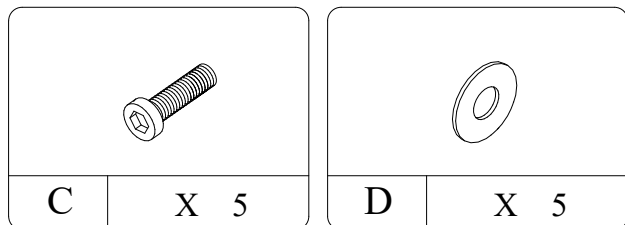


Ø6 x 28mm

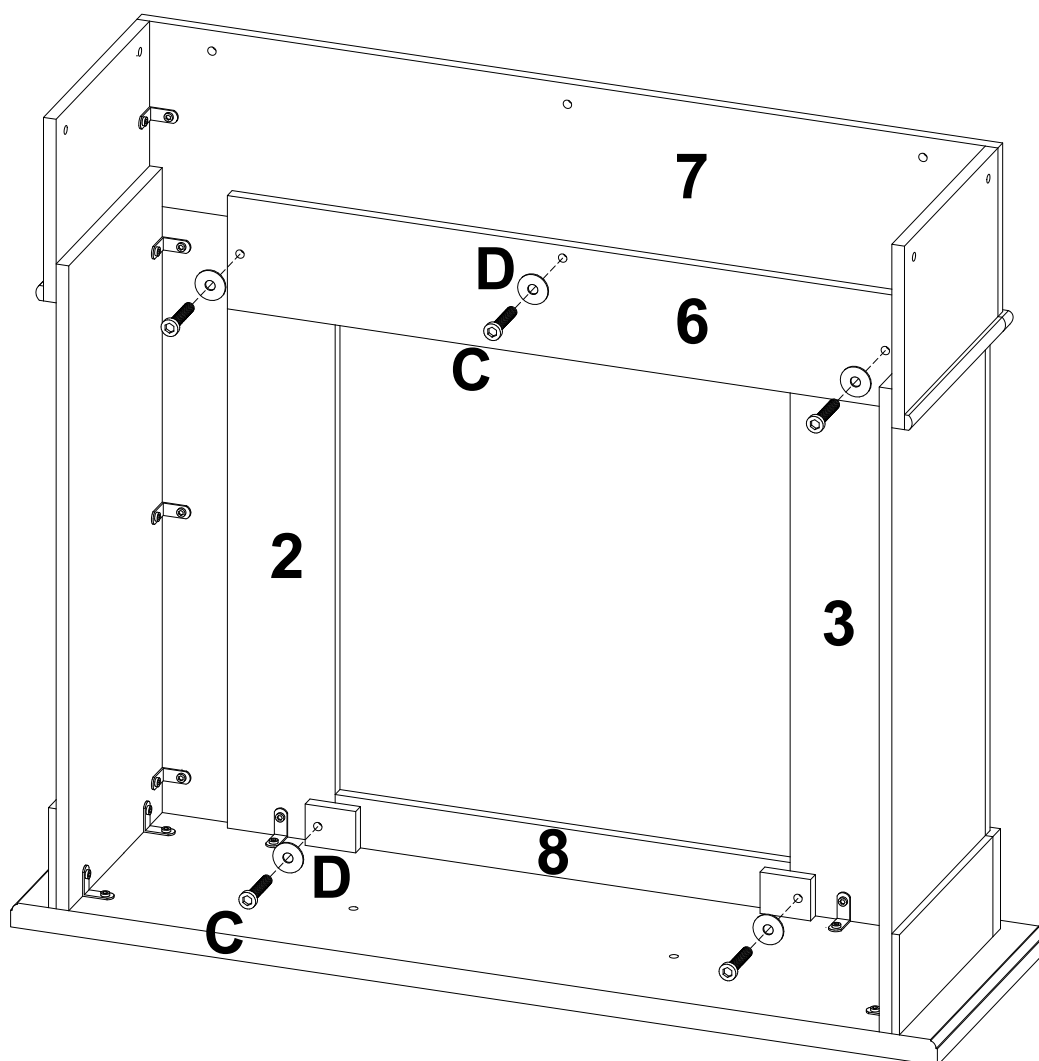


STEP 5:

Join the panel (10) by securing screws (C) via washers (D) with the allen wrench (E) provided. Join the panel (9) by inserting it along the slots on panels (4)+(5).

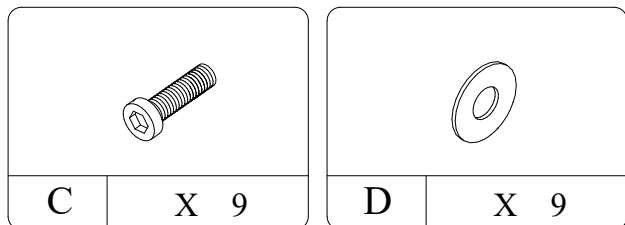


Ø6 x 28mm

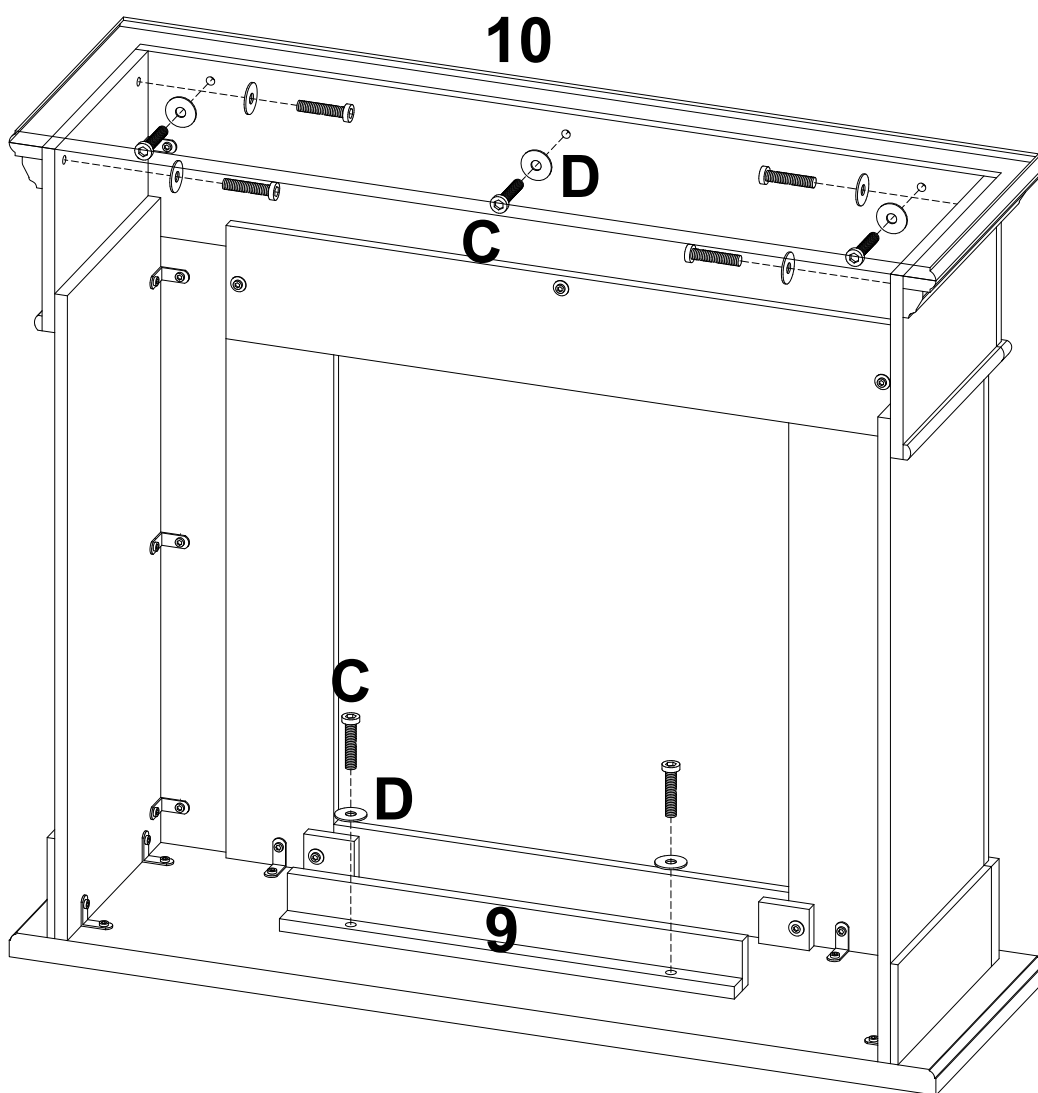

STEP 6:

Install the firebox by securing screws (F).



F	X 4
---	-----

Ø4 x12.7mm

