




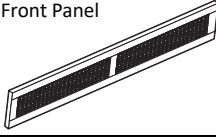
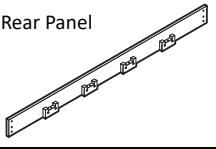
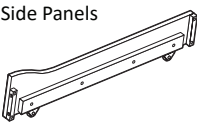
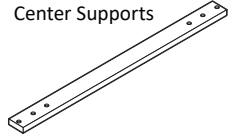
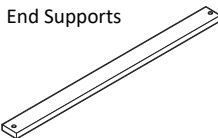




Wood Cane Daybed Trundle

Page 1 of 1


Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required.

CODE	QTY	HARDWARE
1	16	1/4" x 1-1/8" L Allen Bolts 
2	8	Ø4 x 35L Screws 
3	8	Wood Dowels 
4	1	Allen Wrench 
5	4	Plastic Casters 

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	1	Front Panel 	B	1	Rear Panel 
C	2	Side Panels 	D	2	Center Supports 
E	2	End Supports 	F	3	Center Platform Decks 
G	2	End Platform Decks 			

⚠ WARNING

- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
- Be careful if using power tools as they can over tighten screws and strip threads.

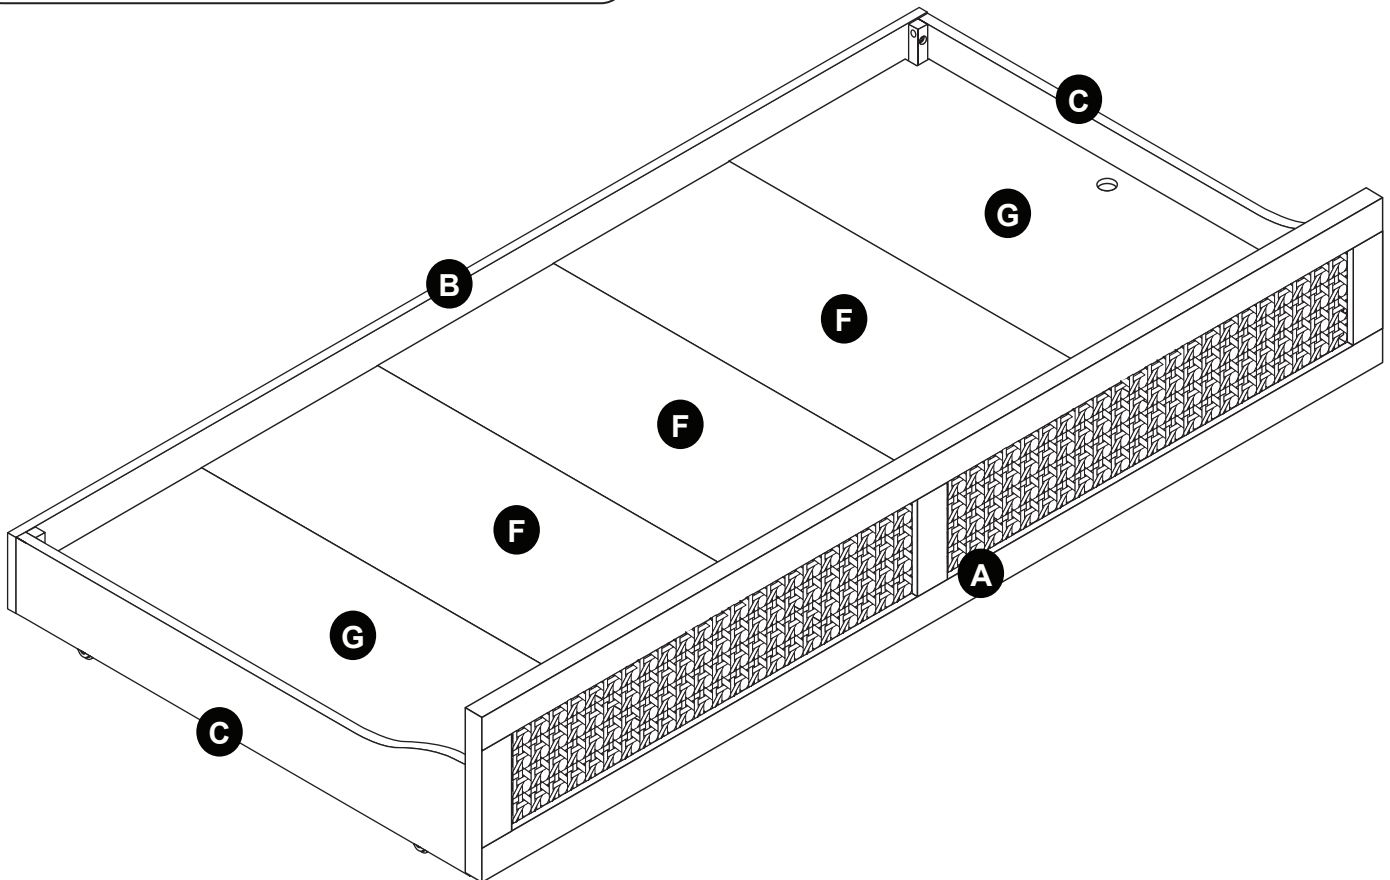


CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all hardware is securely tightened.

STEP 1 - Figure 1

Begin assembly by attaching Plastic Casters (5) to Center Supports (D) using 2 Wood Dowels (3) & 4 Allen Bolts (1) per support.

STEP 2 - Figure 1

Attach Supports (D & E) to Rear Panel (B) using 1 Screw (2) per support.

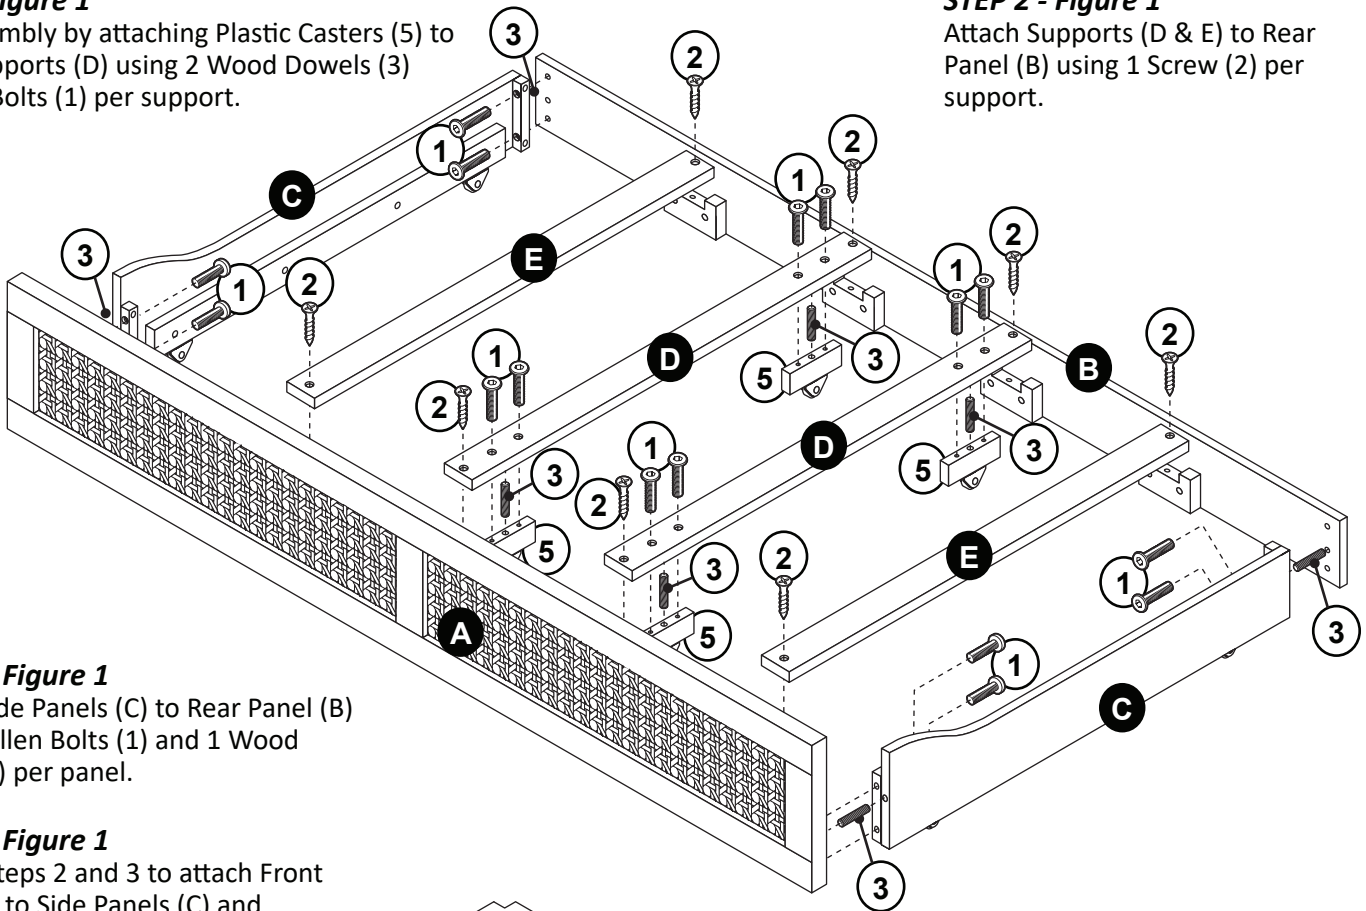


STEP 3 - Figure 1

Attach Side Panels (C) to Rear Panel (B) using 2 Allen Bolts (1) and 1 Wood Dowel (3) per panel.

STEP 4 - Figure 1

Repeat Steps 2 and 3 to attach Front Panel (A) to Side Panels (C) and Supports (D & E).

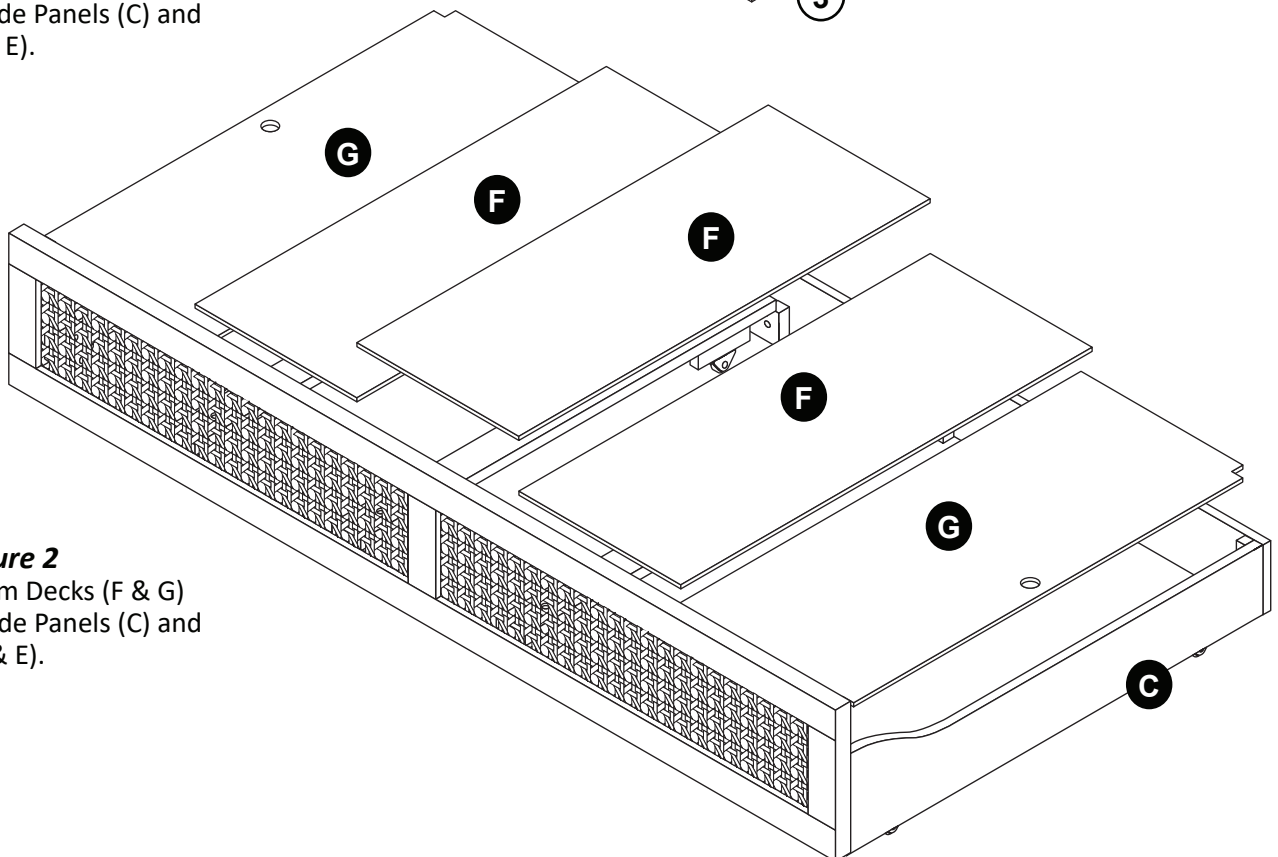

STEP 5 - Figure 2

Insert Platform Decks (F & G) down onto Side Panels (C) and Supports (D & E).