


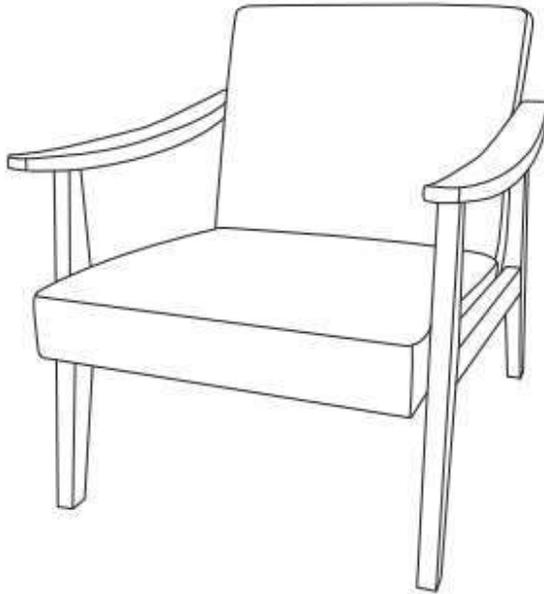


Reaching out via product review, marketplace email, social media or leaving seller feedback may cause a delay in response. If you have questions about this product or need anything, please contact us. You are our priority!

*****WARNING*****

Power tools may strip bolts or screws. Hand tighten bolts to only about 75% tight. Do NOT completely tighten any bolt during assembly until all bolts are connected.




1

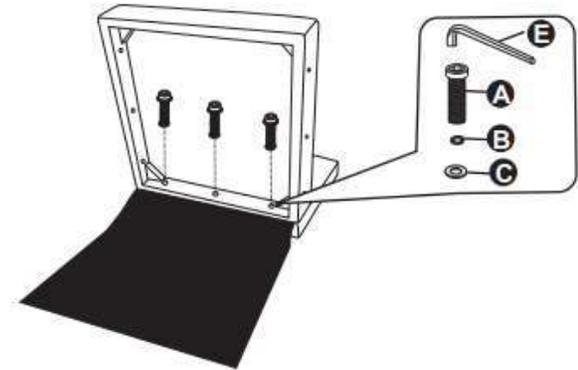

Put the screws in the holes, tight the screws, but not too tight, 90% is ok.


2

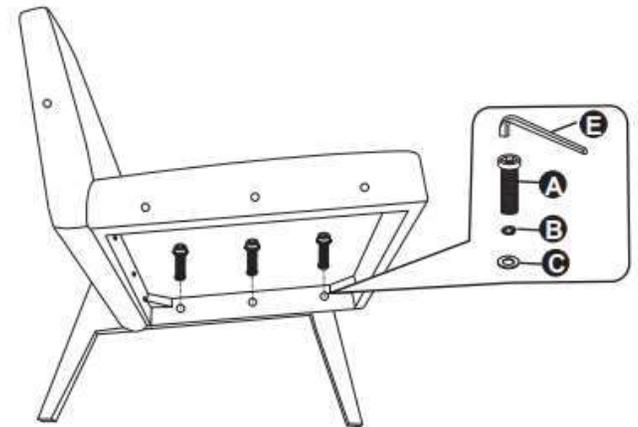

Put the screws in the holes, tight the screws, but not too tight, 90% is ok.


HARDWARE LIST	CODE	PARTS	QTY.
	A	M8x45MM 	11
	B		9
	C		9
	D		2
	E	ALLEN KEY 	1

3

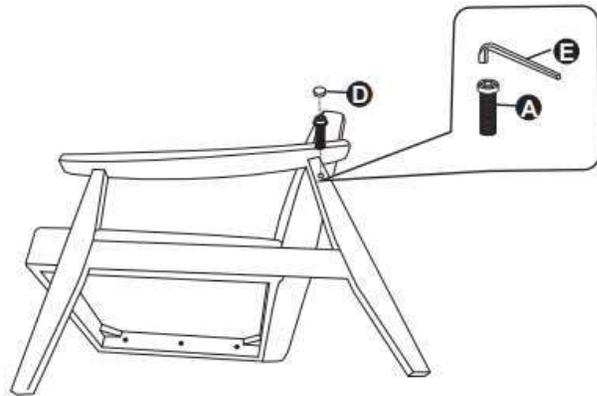


Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

5

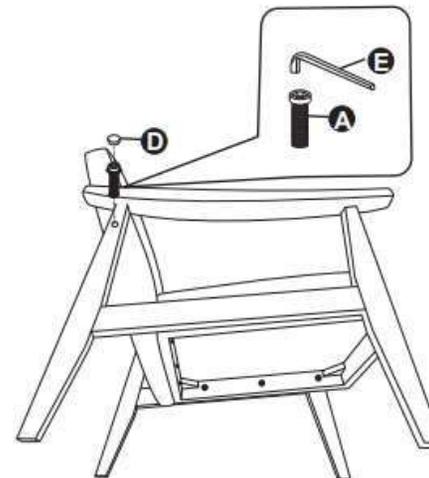


Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

4

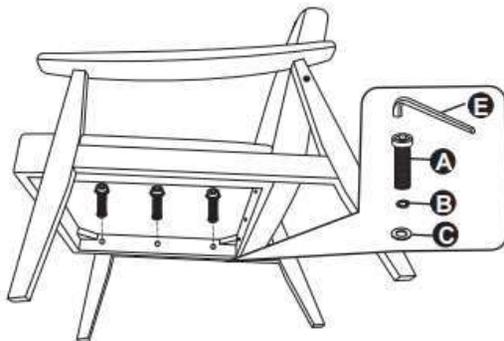

Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

6

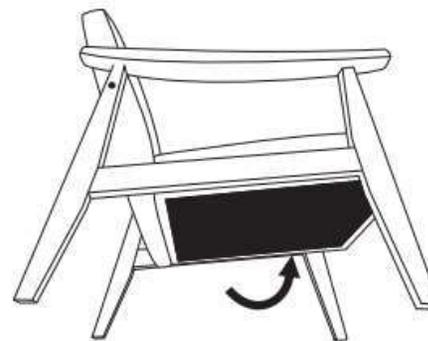

Tight all the screws to 100%
Stick the black part on the seat