


Installation drawing

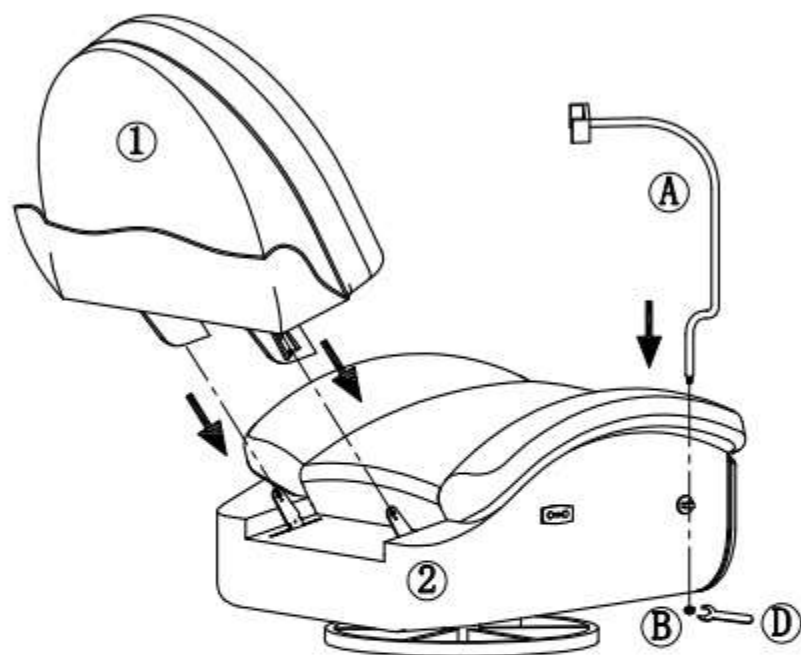





If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

42L*39.4W*39.4H inch




Step 1: Align the back panel's slot with the base and firmly fit it into place.

Step 2: Insert the phone holder into the hole and tighten the nut using a wrench.

Parts List			Hardware Fitting		
NO.	Drawing	QTY	NO.	Drawing	QTY
1		*1	A		*1
2		*1	B		*1
			C		*1
			D		*1

Step 3: Peel off the velcro strip, then flip down the back curtain and stick it to the back of the seat.

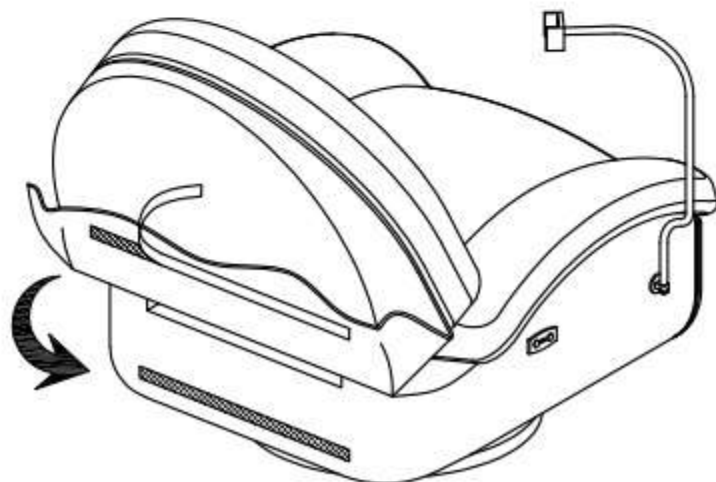

Step 4: Plug the power cable connector into the seat connector.

