



ASSEMBLY INSTRUCTIONS









TWIN BED WITH TRUNDLE AND 2 DRAWERS

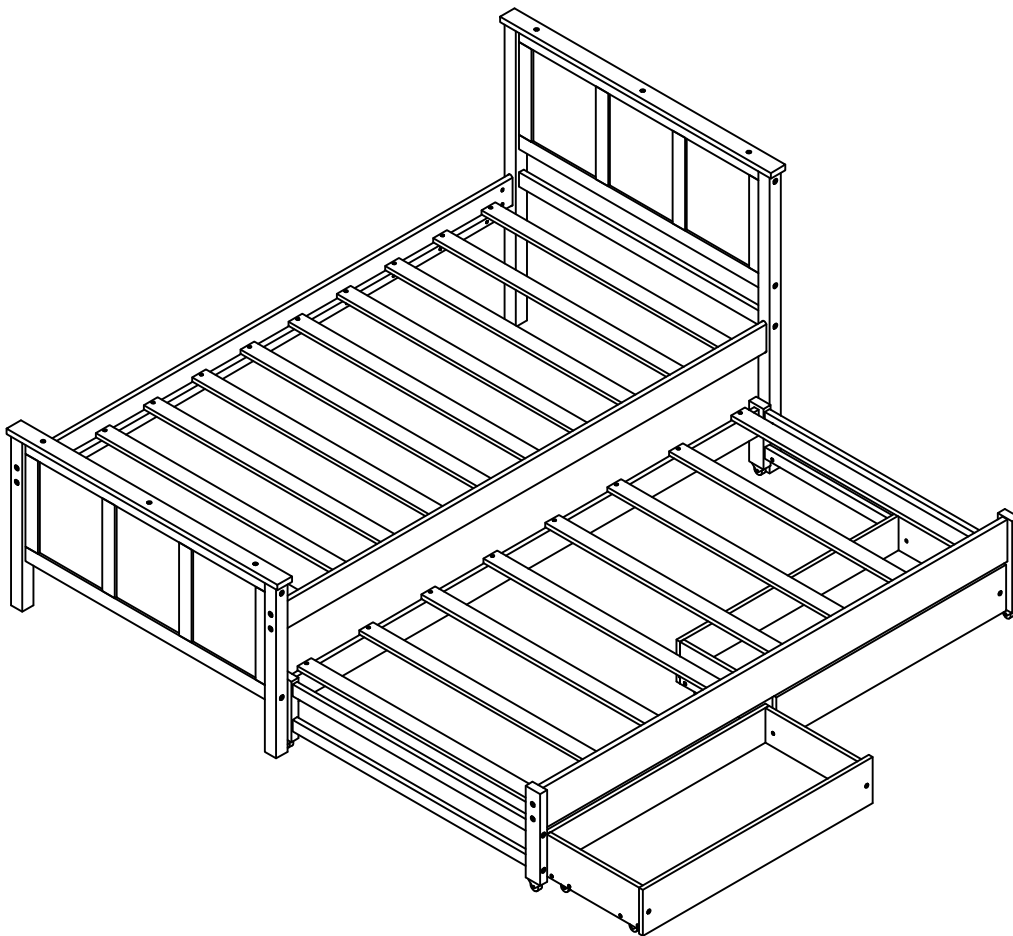





Detail View

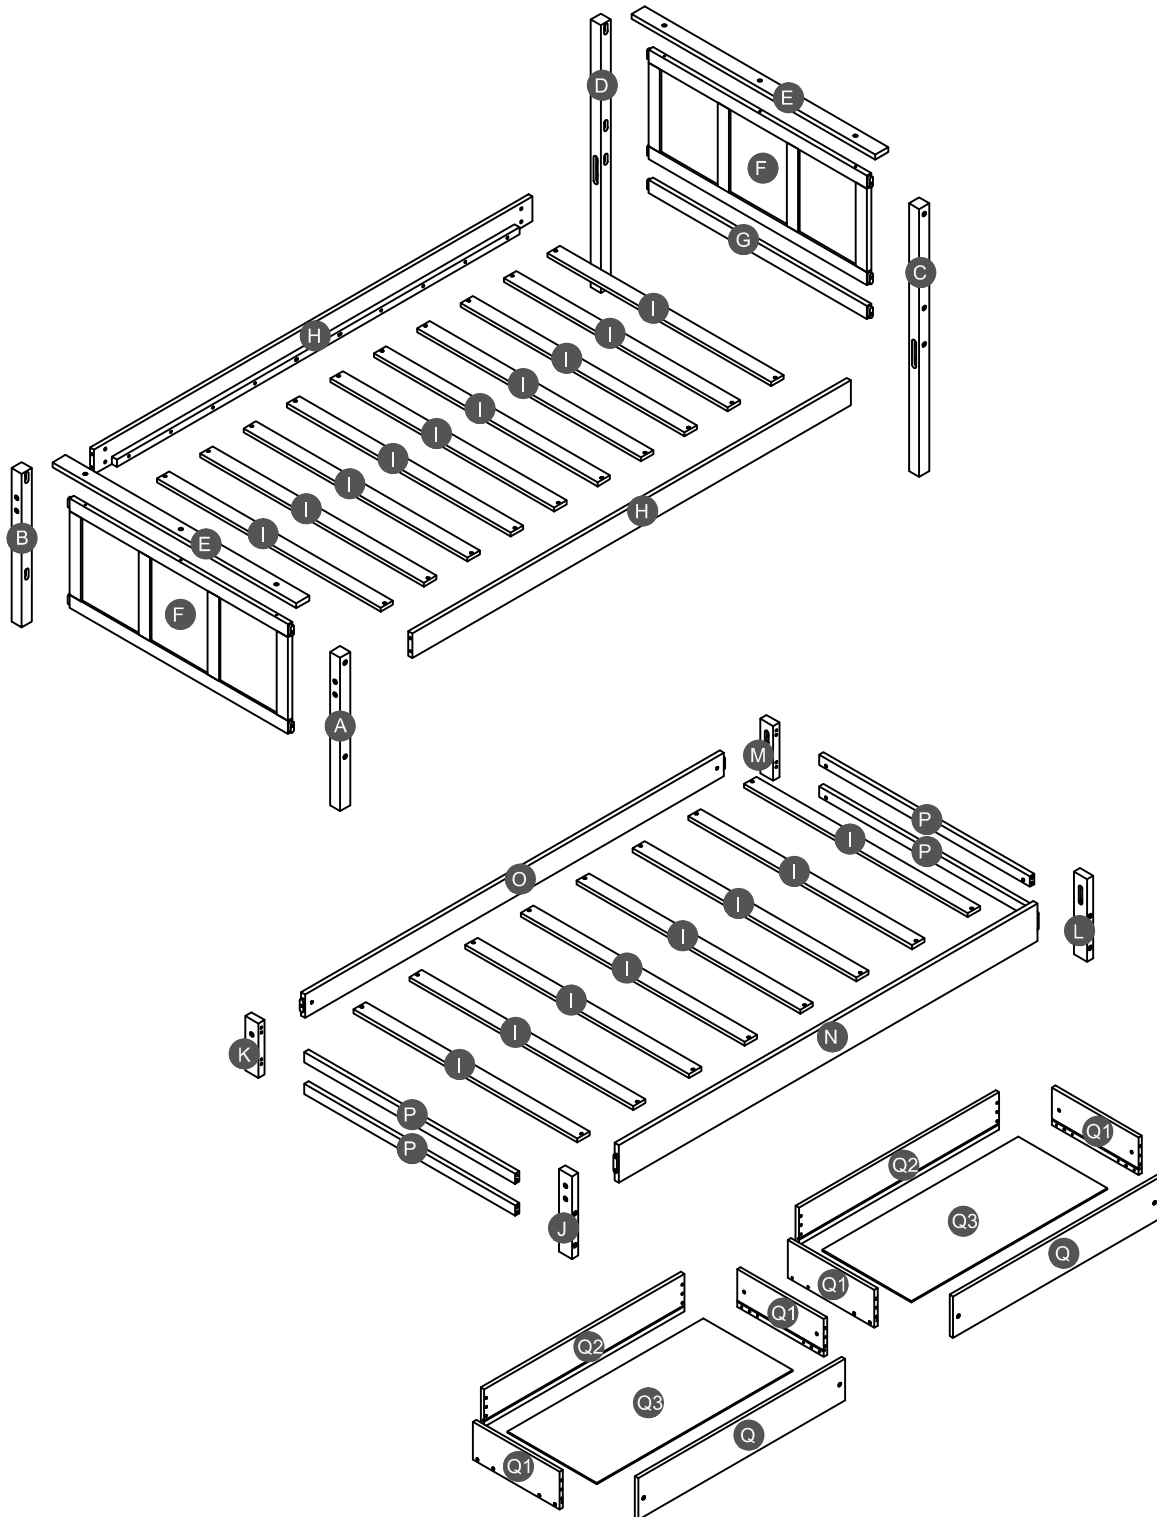


Part List

A  Leg FB (Left-front) - 1pc	B  Leg FB (Left-back) - 1pc	C  Leg HB (Right-front) - 1pc
D  Leg HB (Right-back) - 1pc	E  Cap for HB & FB - 2pcs	F  Frame HB & FB - 2pcs
G  Horizontal bar HB - 1pc	H  Upper side rail - 2pcs	I  Slat - 18pcs
J  Leg (Left-front) - 1pc	K  Leg (Left-back) - 1pc	L  Leg (Right-front) - 1pc
M  Leg (Right-back) - 1pc	N  Lower side rail (Front) - 1pc	O  Lower side rail (Back) - 1pc
P  Lower horizontal bar - 4pcs	Q  Drawer front - 2pcs	Q1  Drawer (Left / Right) - 4pcs
Q2  Drawer back - 2pcs	Q3  Drawer bottom - 2pcs	

Hardware List


1  Ø8*30mm Wood dowel (24pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (16pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (16pcs)
4  (Ø12)1/4"*60mm Hex-Head bolts (8pcs)	5  (Ø12)1/4"*40mm Wood screws (6pcs)	6  45*20*35 mm Wheels (4pcs)
7  (1/4")4.5*58mm Allen key (1pc)	8  1/4"*15 (9.5mm) Horizontal-Hole bolts(40pcs)	9  Ø4*30mm Wood screws (58pcs)
10  100*54*20 mm Wheels (8pcs)	11  Ø3.5*19mm Wood screws (8pcs)	12  70*19*19 mm Drawer stopper (3pcs)
13  Ø10*20mm Wood dowel (8pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

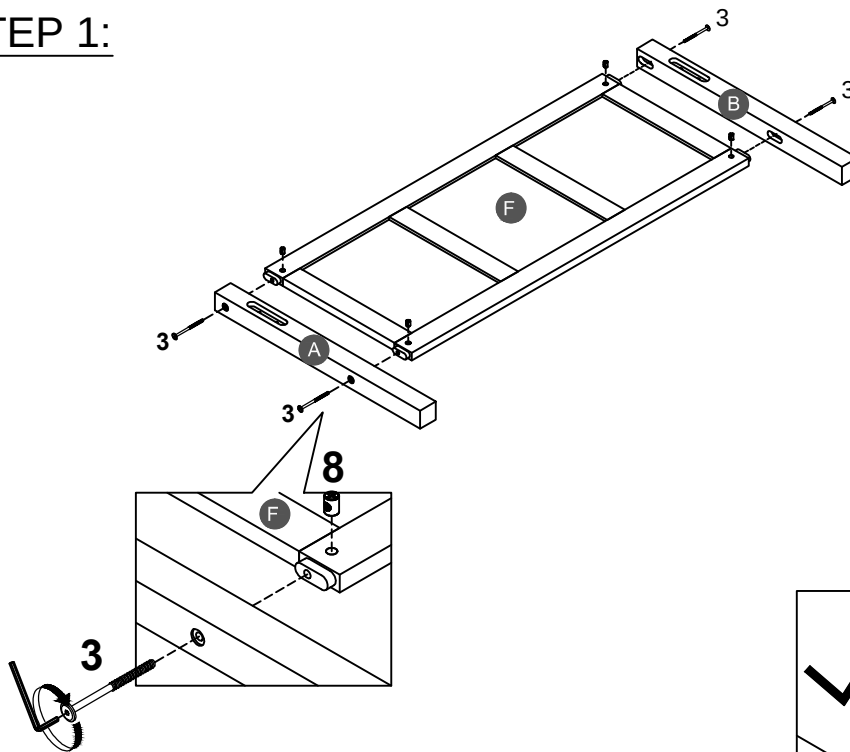


3		8	
	4PCS		4PCS

Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

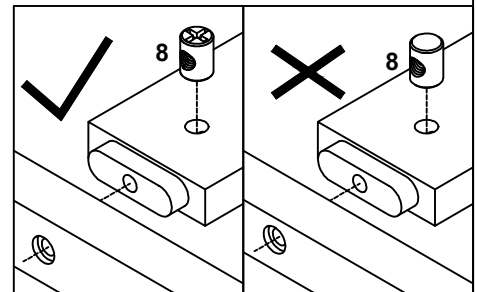


STEP 2:

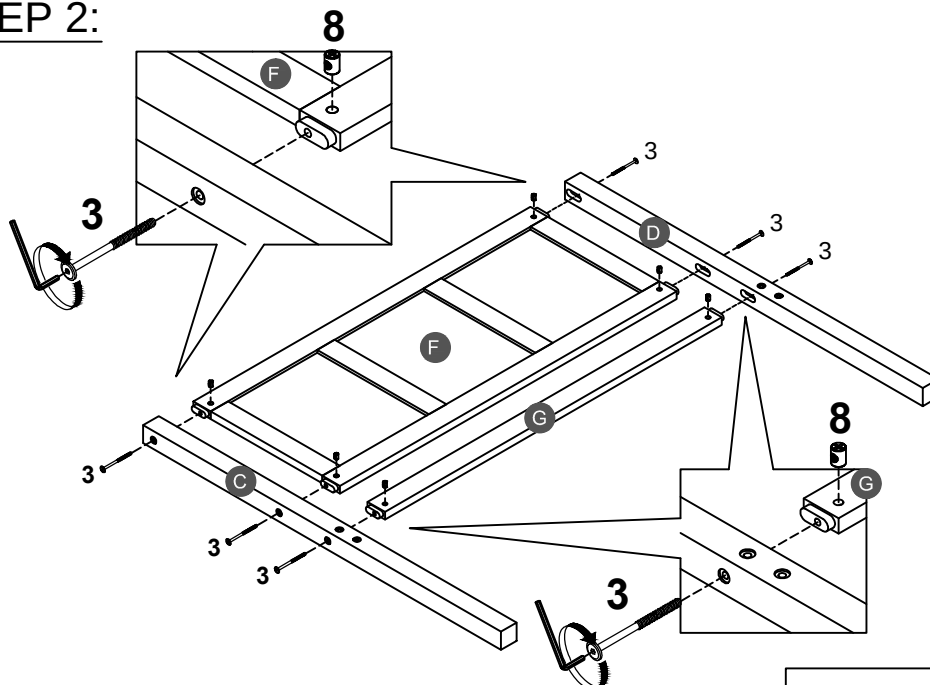


3		8	
	6PCS		6PCS

Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

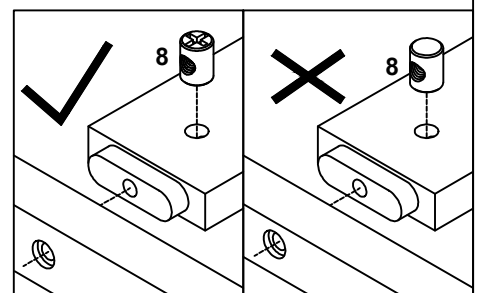

STEP 3:

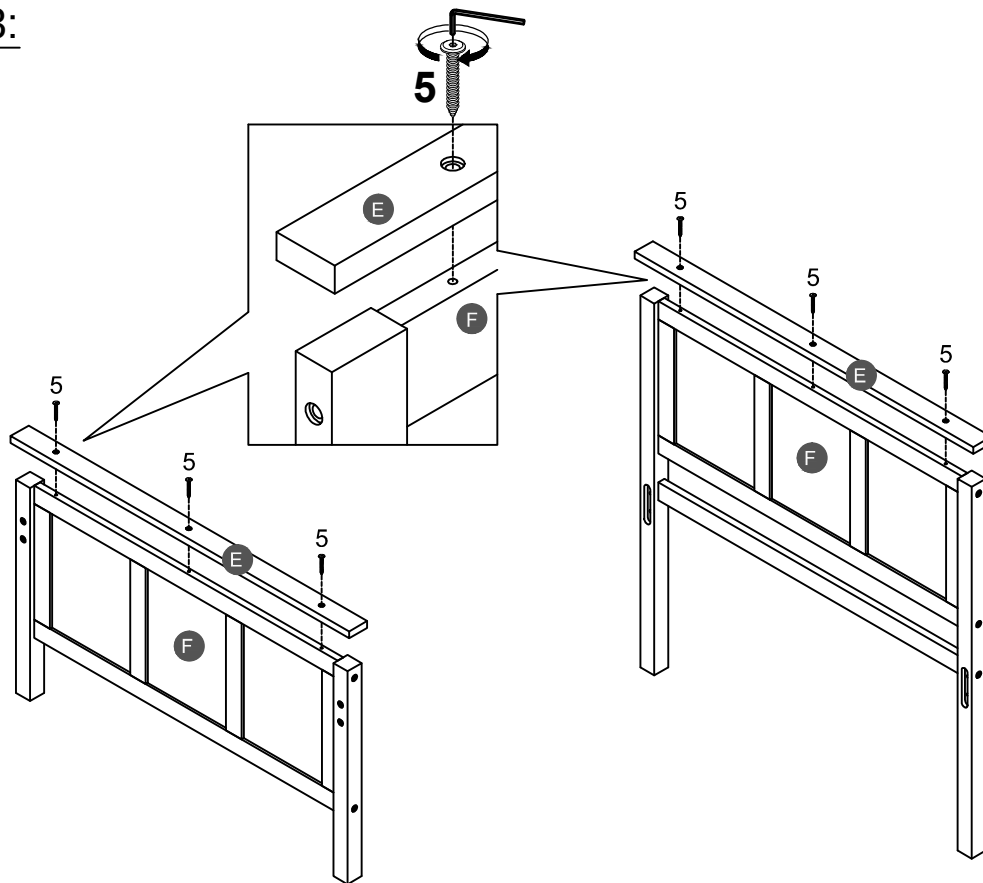


5



6PCS

STEP 4:

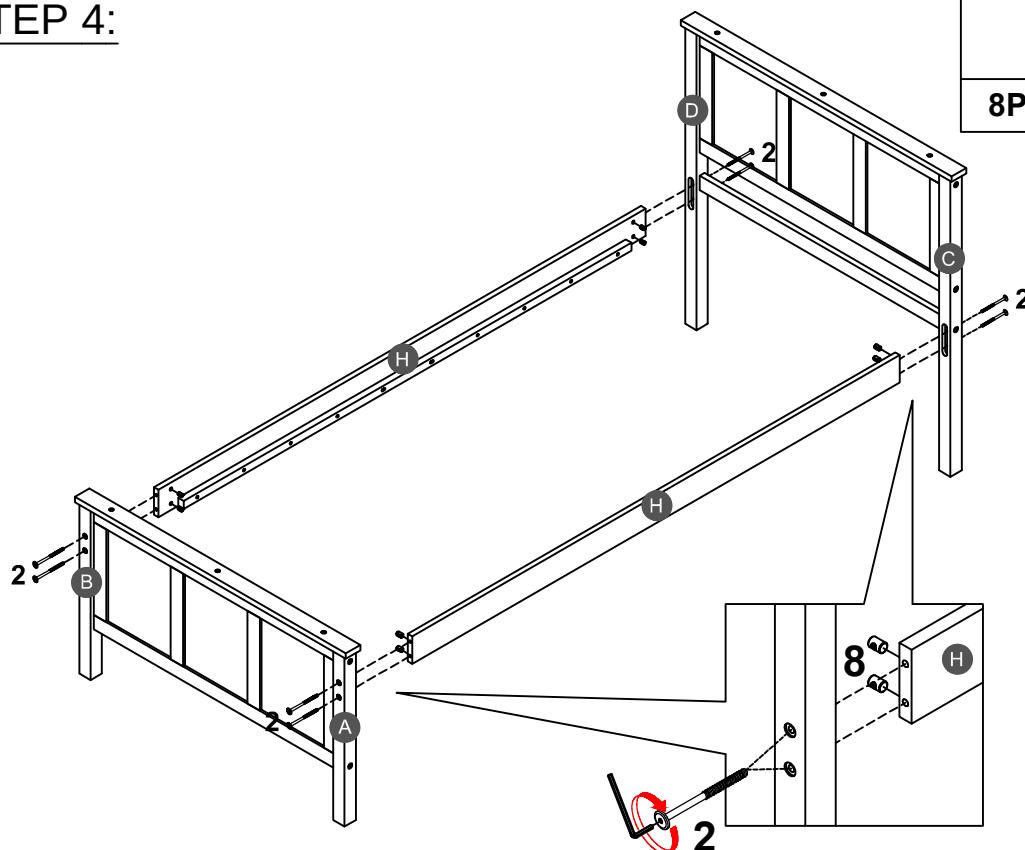

2



8PCS

8







8PCS

STEP 5:

9



20PCS

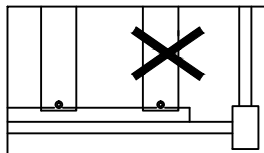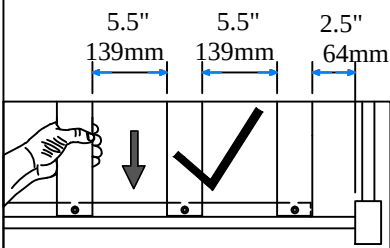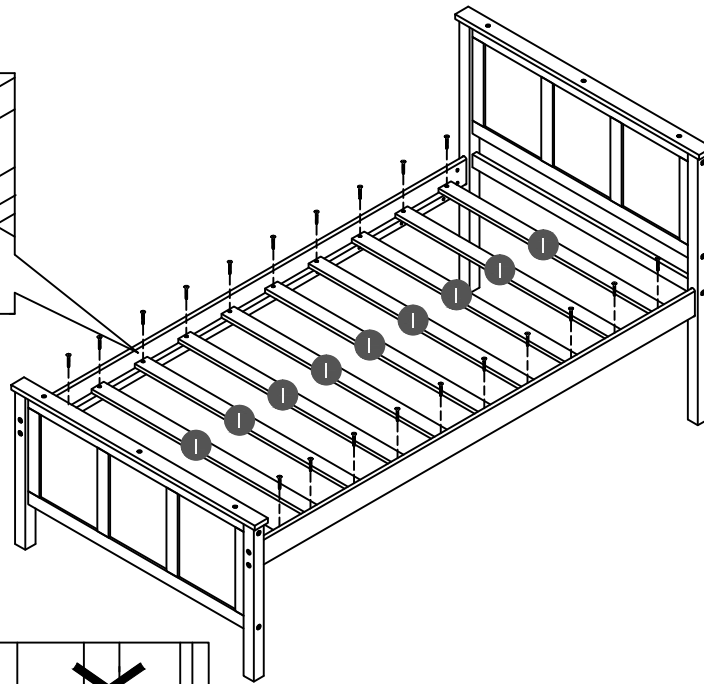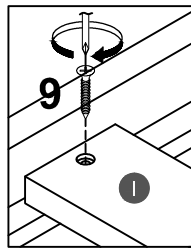

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 6:

6




4PCS


11



8PCS

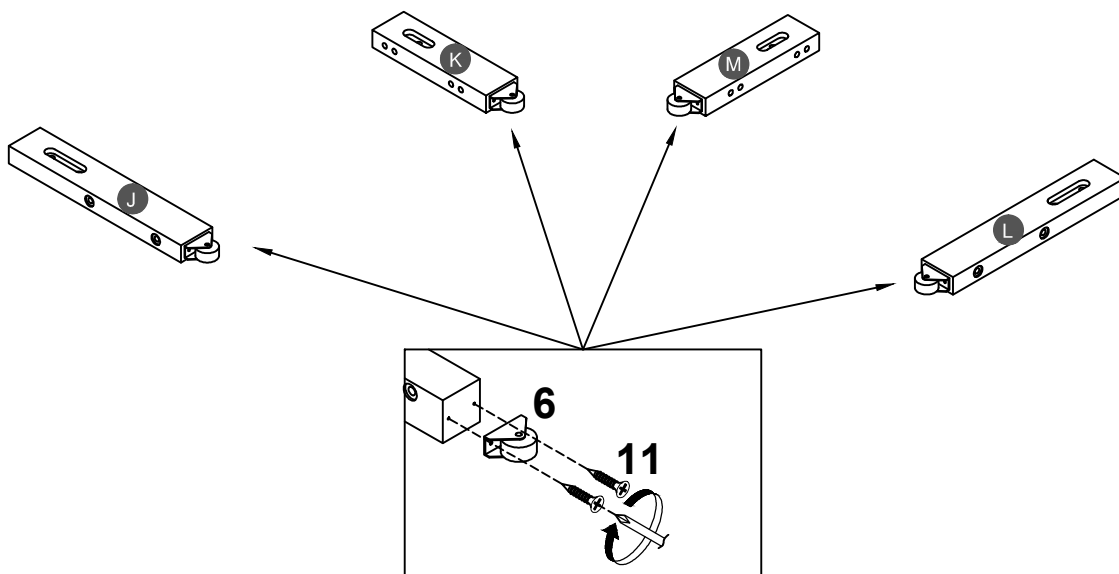


STEP 7:

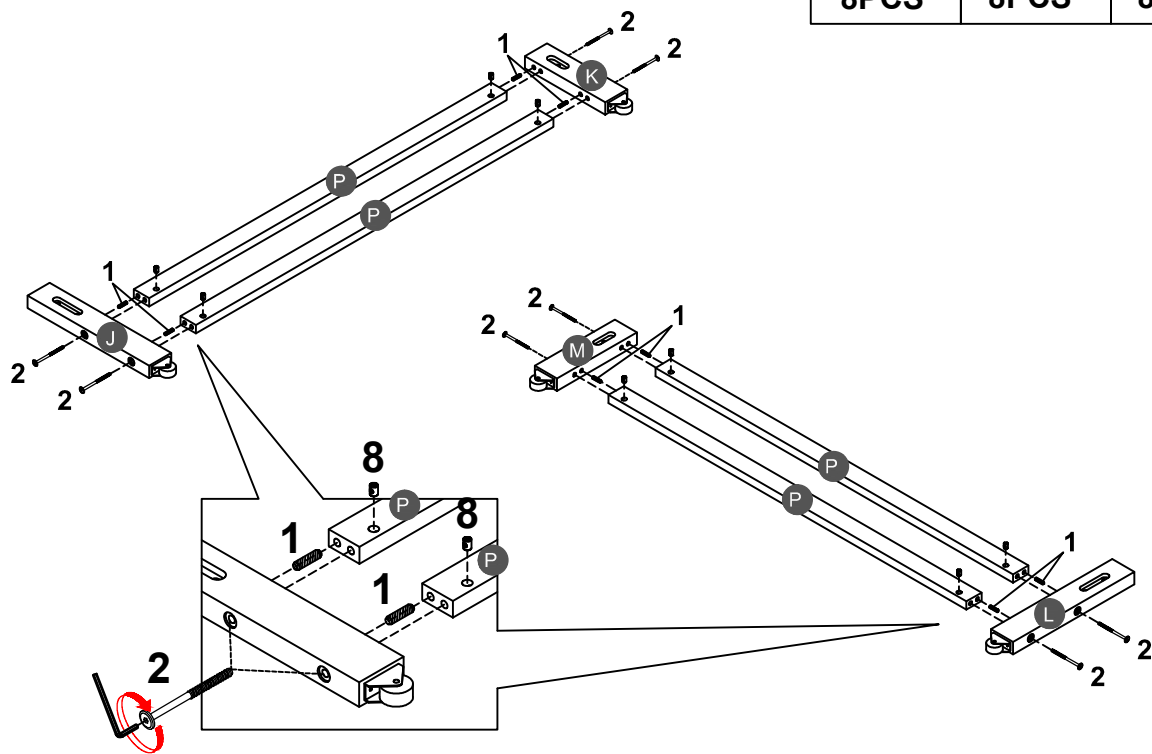

1		2		8	
8PCS		8PCS		8PCS	


STEP 8:

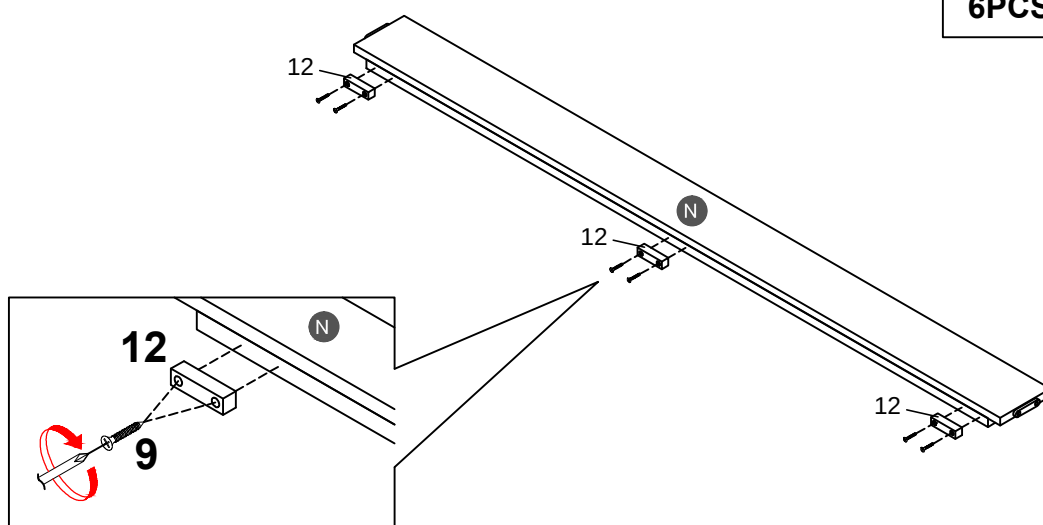

9		12	
6PCS		3PCS	

Drawer stopper (12) with lower side rail front (N) by using screw (9).

STEP 9:

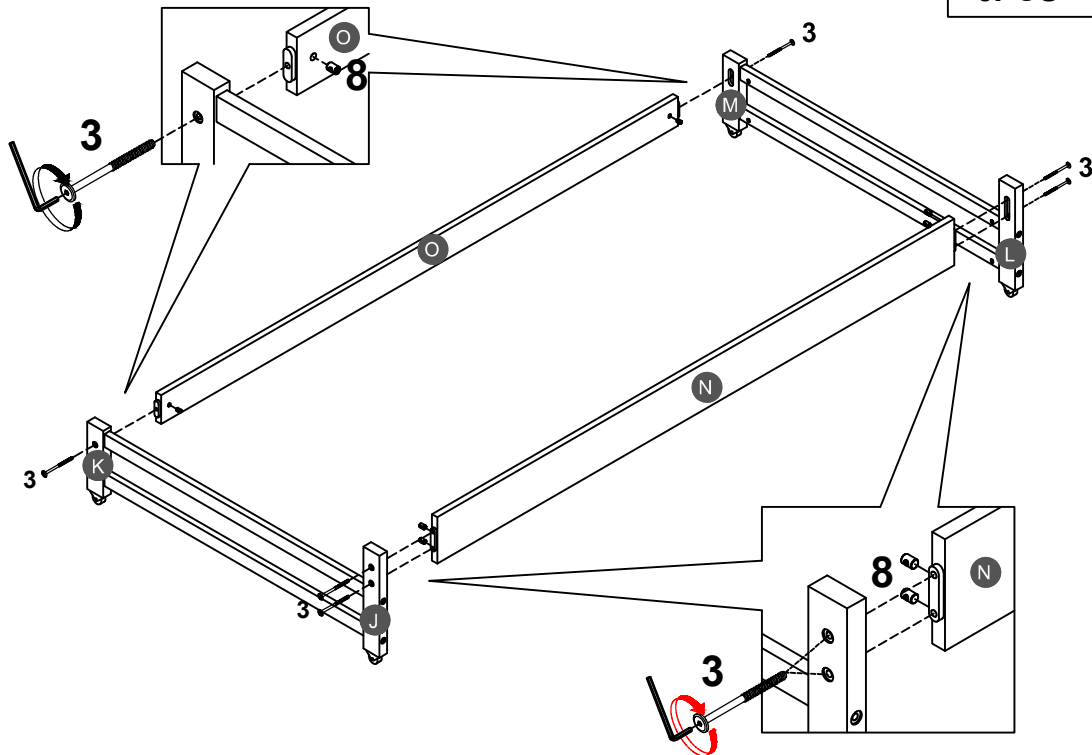

3




6PCS

8



6PCS

STEP 10:

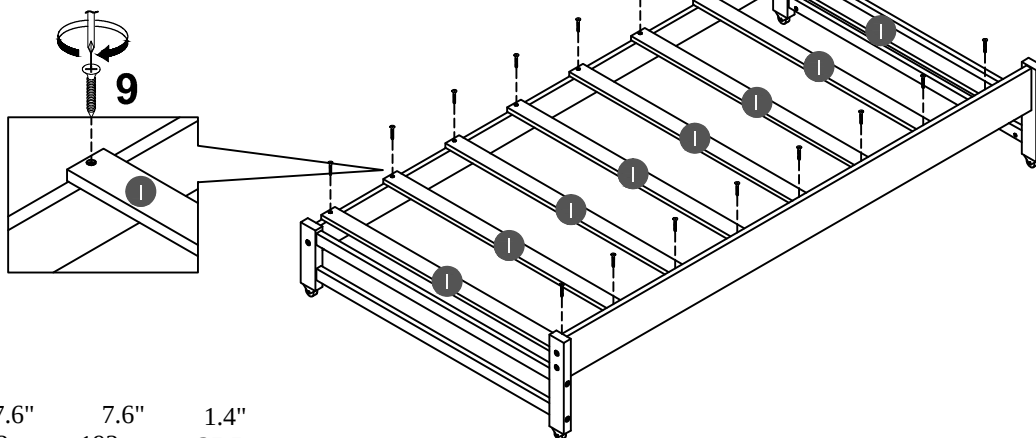


9




16PCS

7.6" 193mm 7.6" 193mm 1.4" 35.5mm

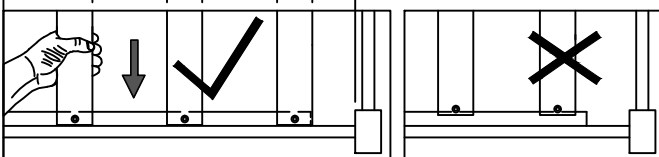


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 11:

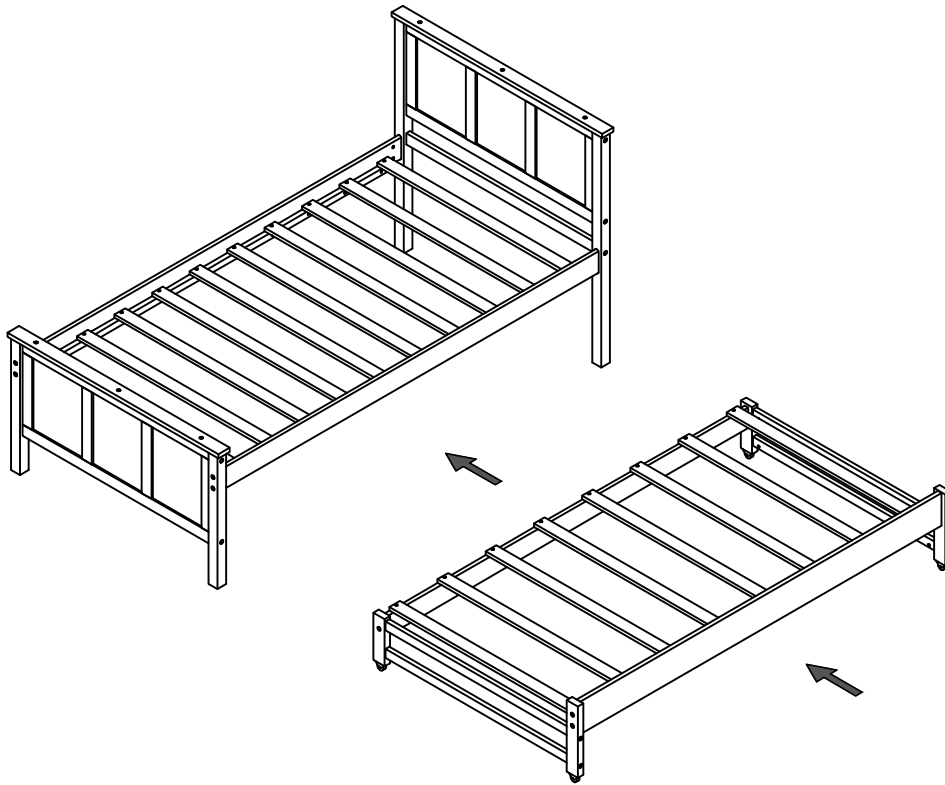

STEP 12:


1		4		8	
8PCS		4PCS		4PCS	

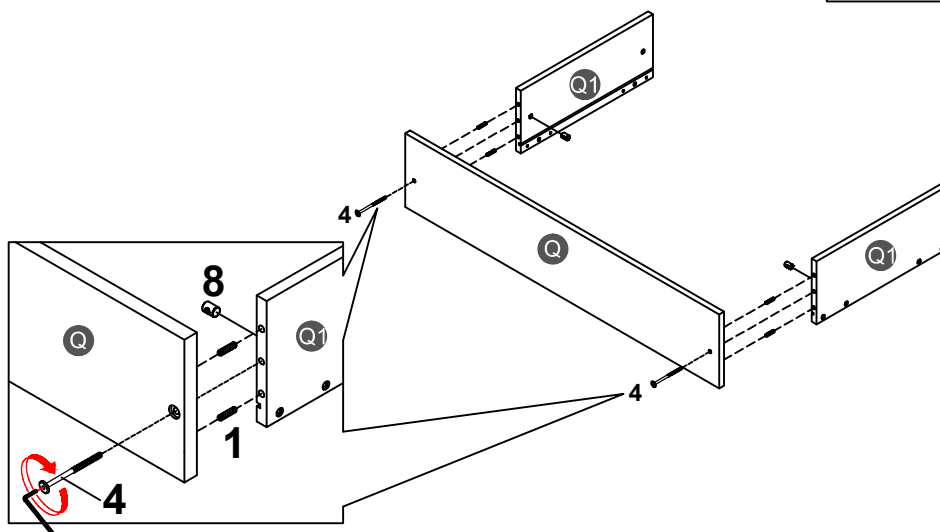

x 2

STEP 13:


1	4	8
		
8PCS	4PCS	4PCS

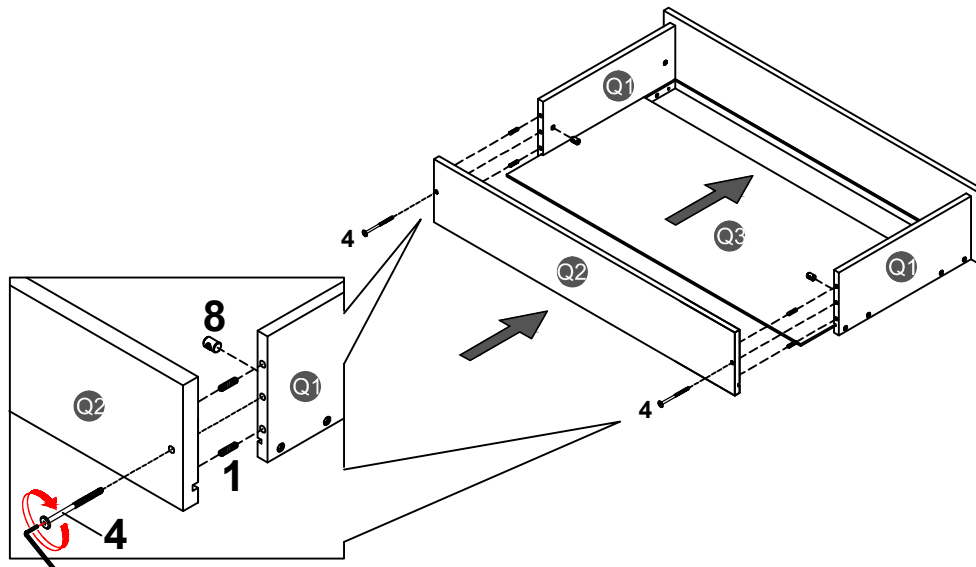

x 2


STEP 14:

13	9	10
		
8PCS	16PCS	8PCS

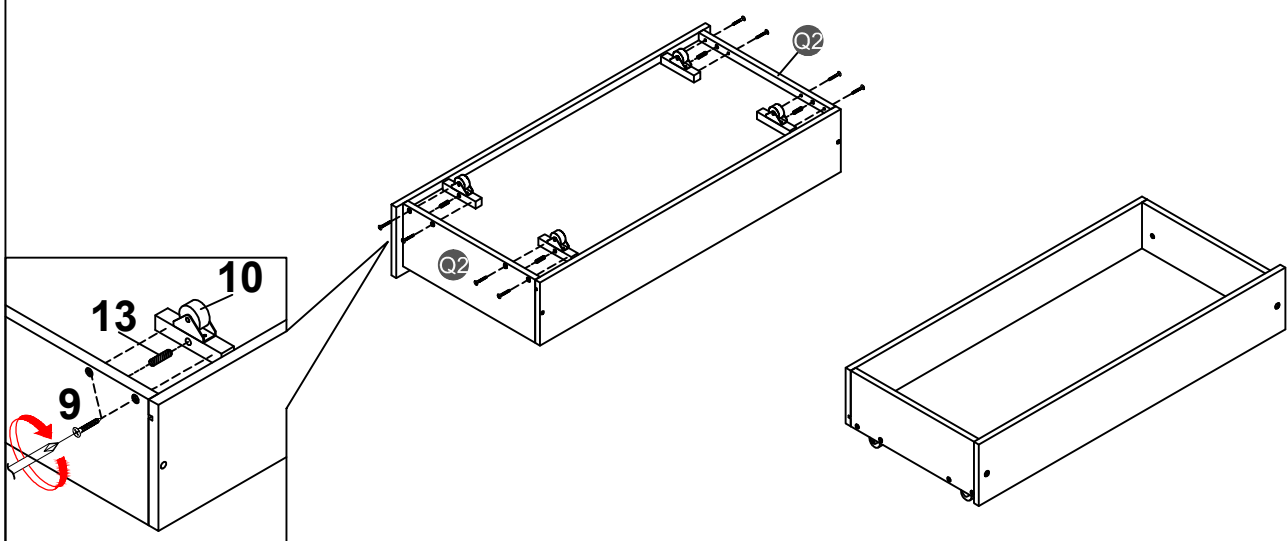

x 2

STEP 15:

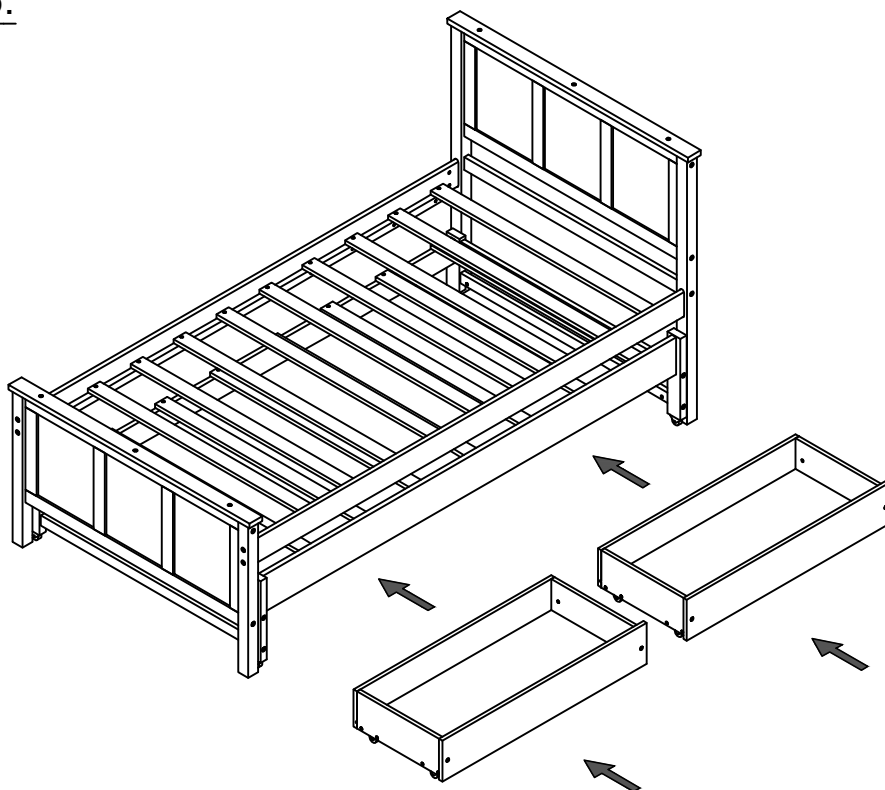

Push Drawer under the bottom of Twin Bed.

