




ASSEMBLY INSTRUCTION

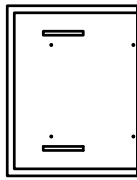


A ×2pcs

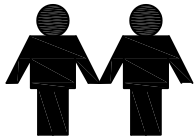


B ×1pc



C ×1pc




D ×2pcs




E ×2pcs



F ×2pcs

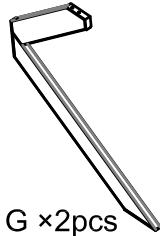

G ×2pcs



H ×1pc

+Spare×2




I×10pcs
M8*16mm

+Spare×2




J×10pcs
M8*16mm


STEP:1

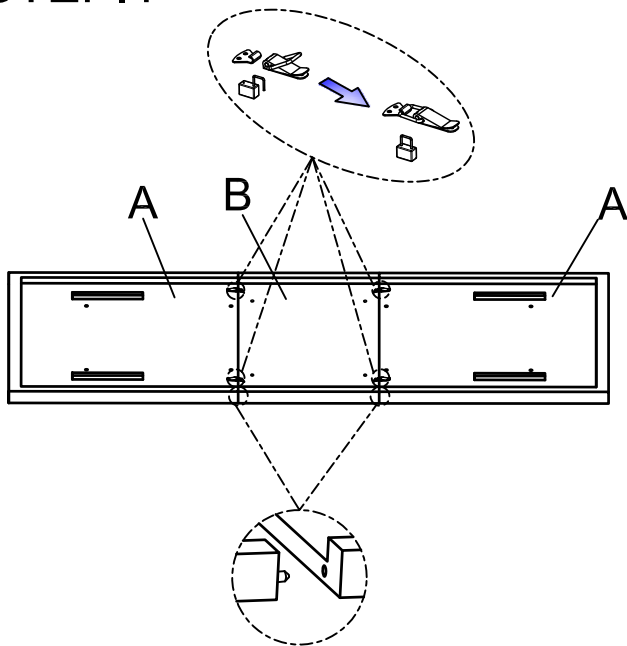


STEP:2

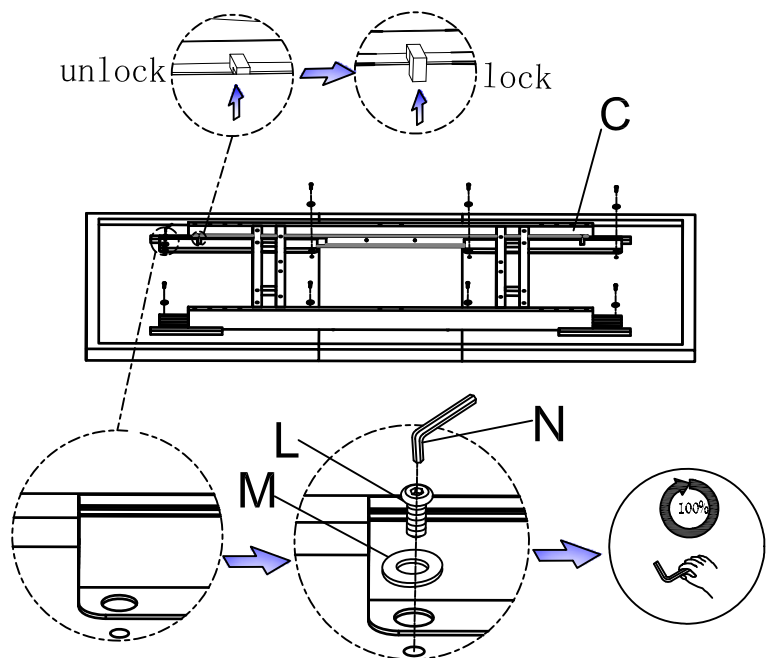

STEP:3

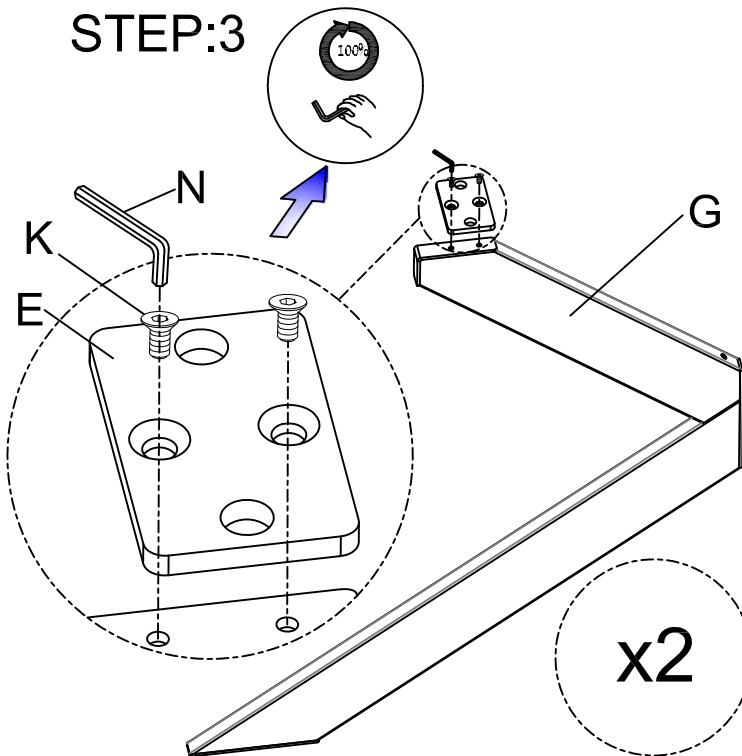

STEP:4

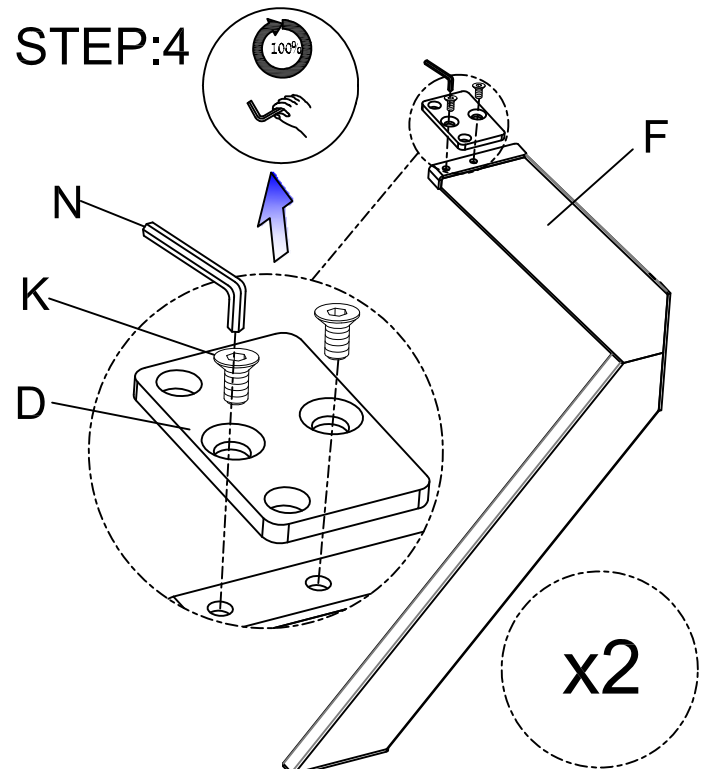


ASSEMBLY INSTRUCTION

+Spare×2



K×10pcs
M8×12mm

+Spare×2




L×10pcs
M8×16mm


+Spare×2



M×10pcs
ø8/ø16×2mm




N×1pc
#5

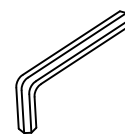


O×1pc
#6

+Spare×1




P×1pc


STEP:5

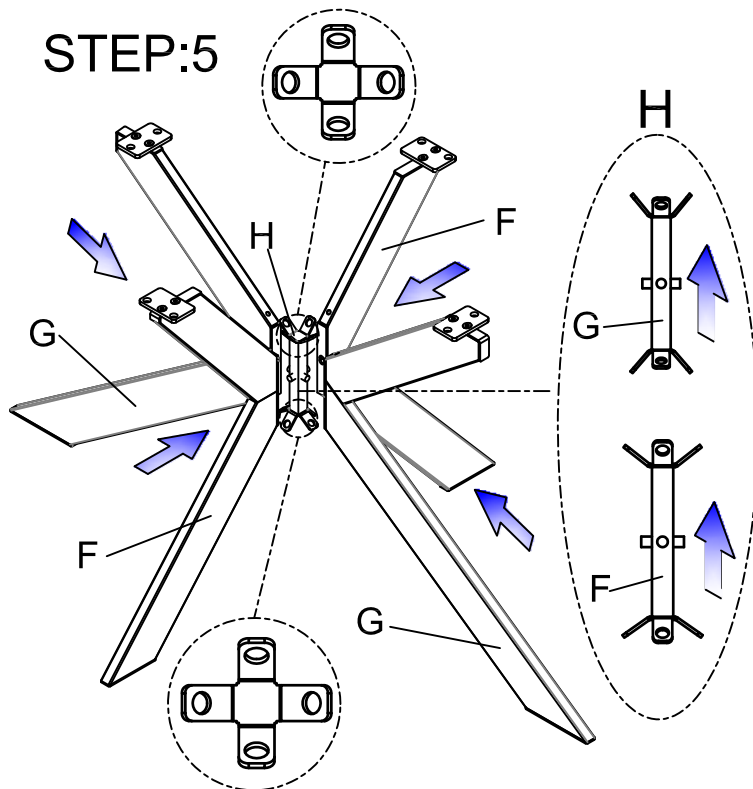


STEP:6

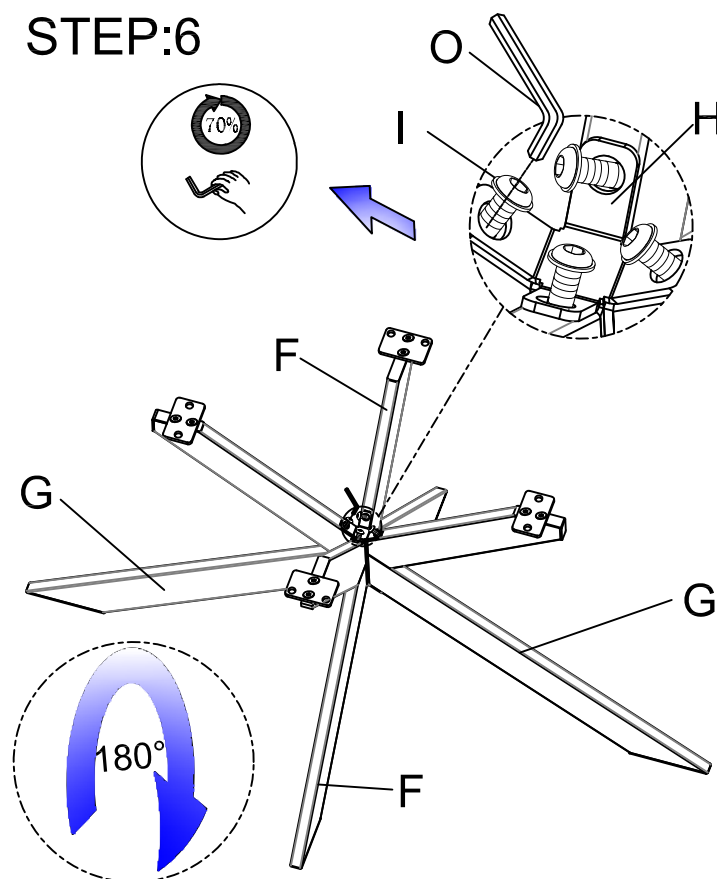

STEP:7

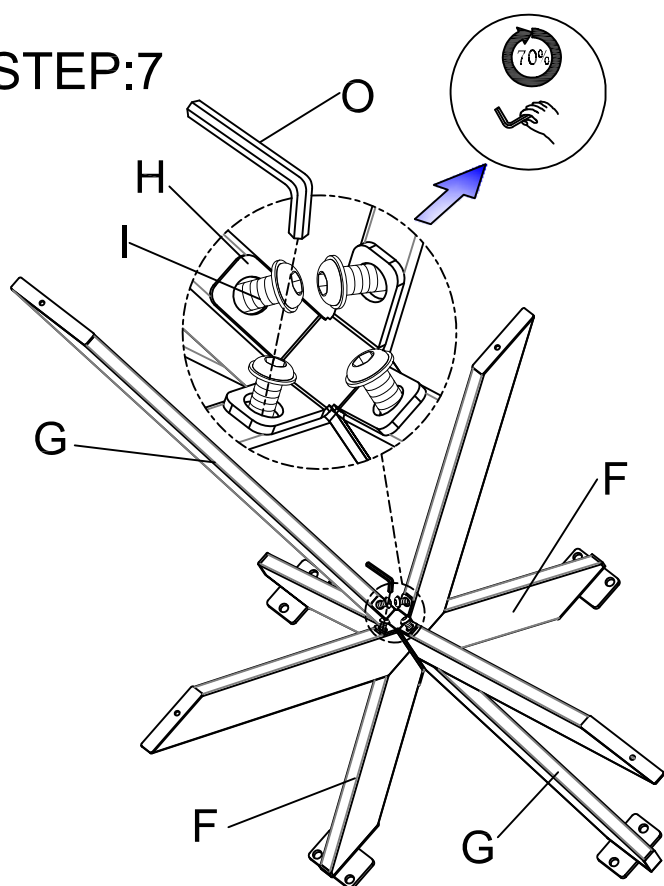


STEP:8

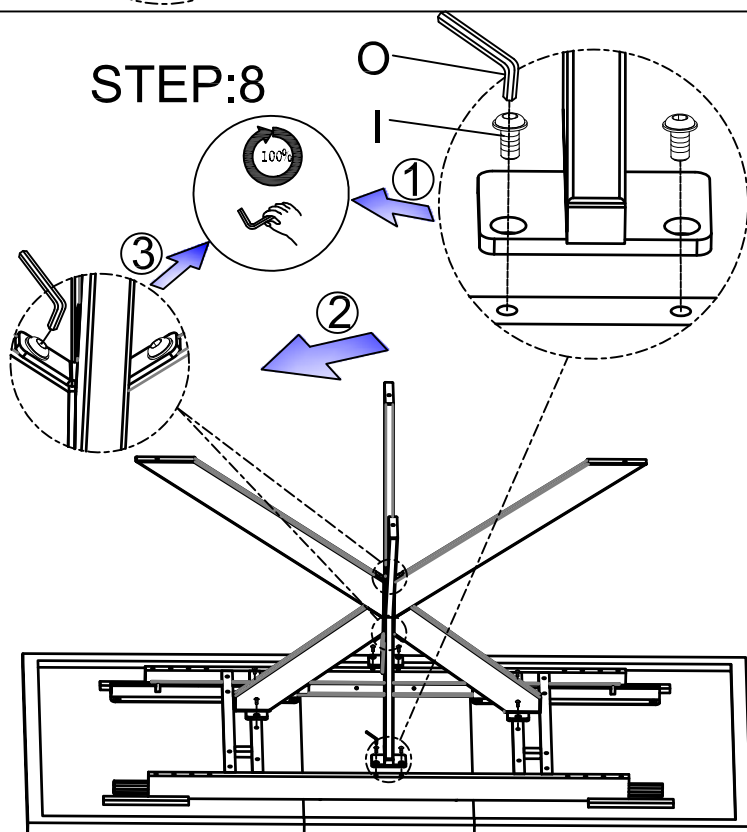


ASSEMBLY INSTRUCTION


STEP:9

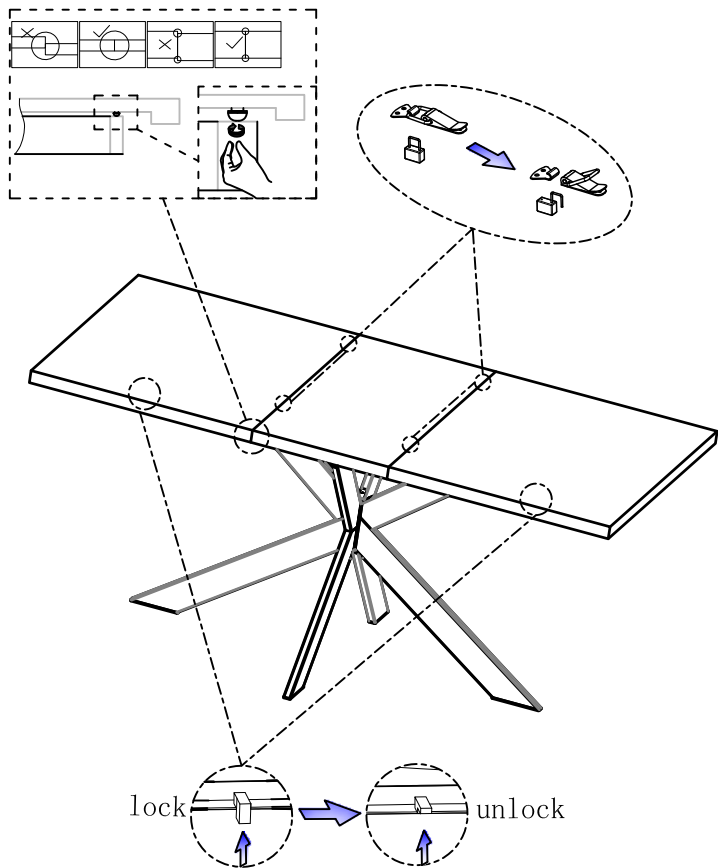

STEP:10

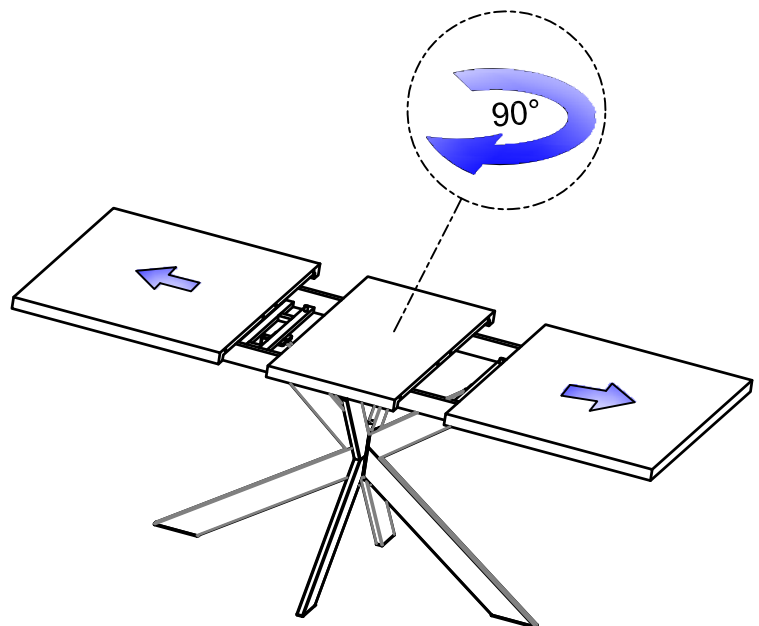

STEP:11

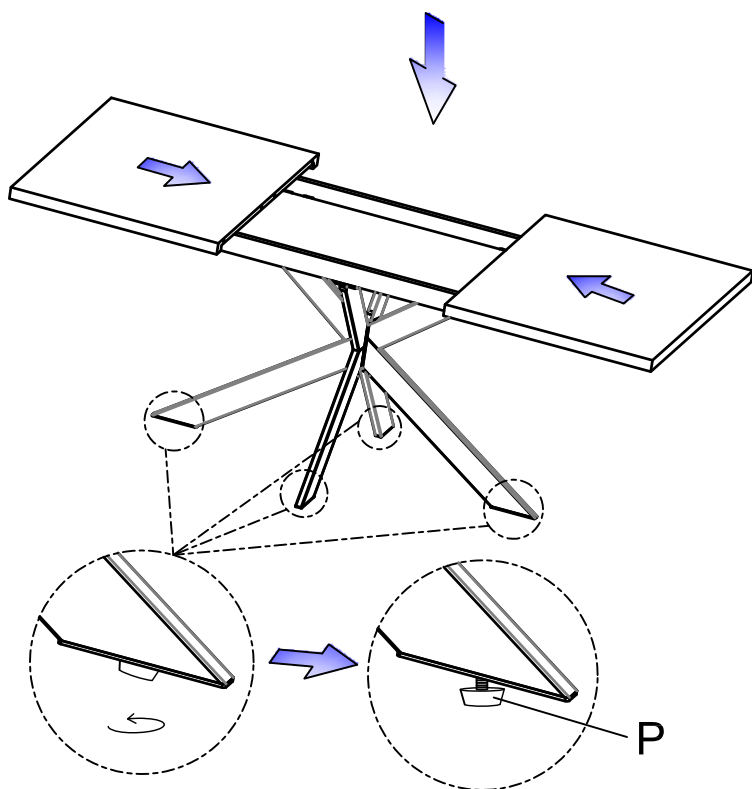

STEP:12

