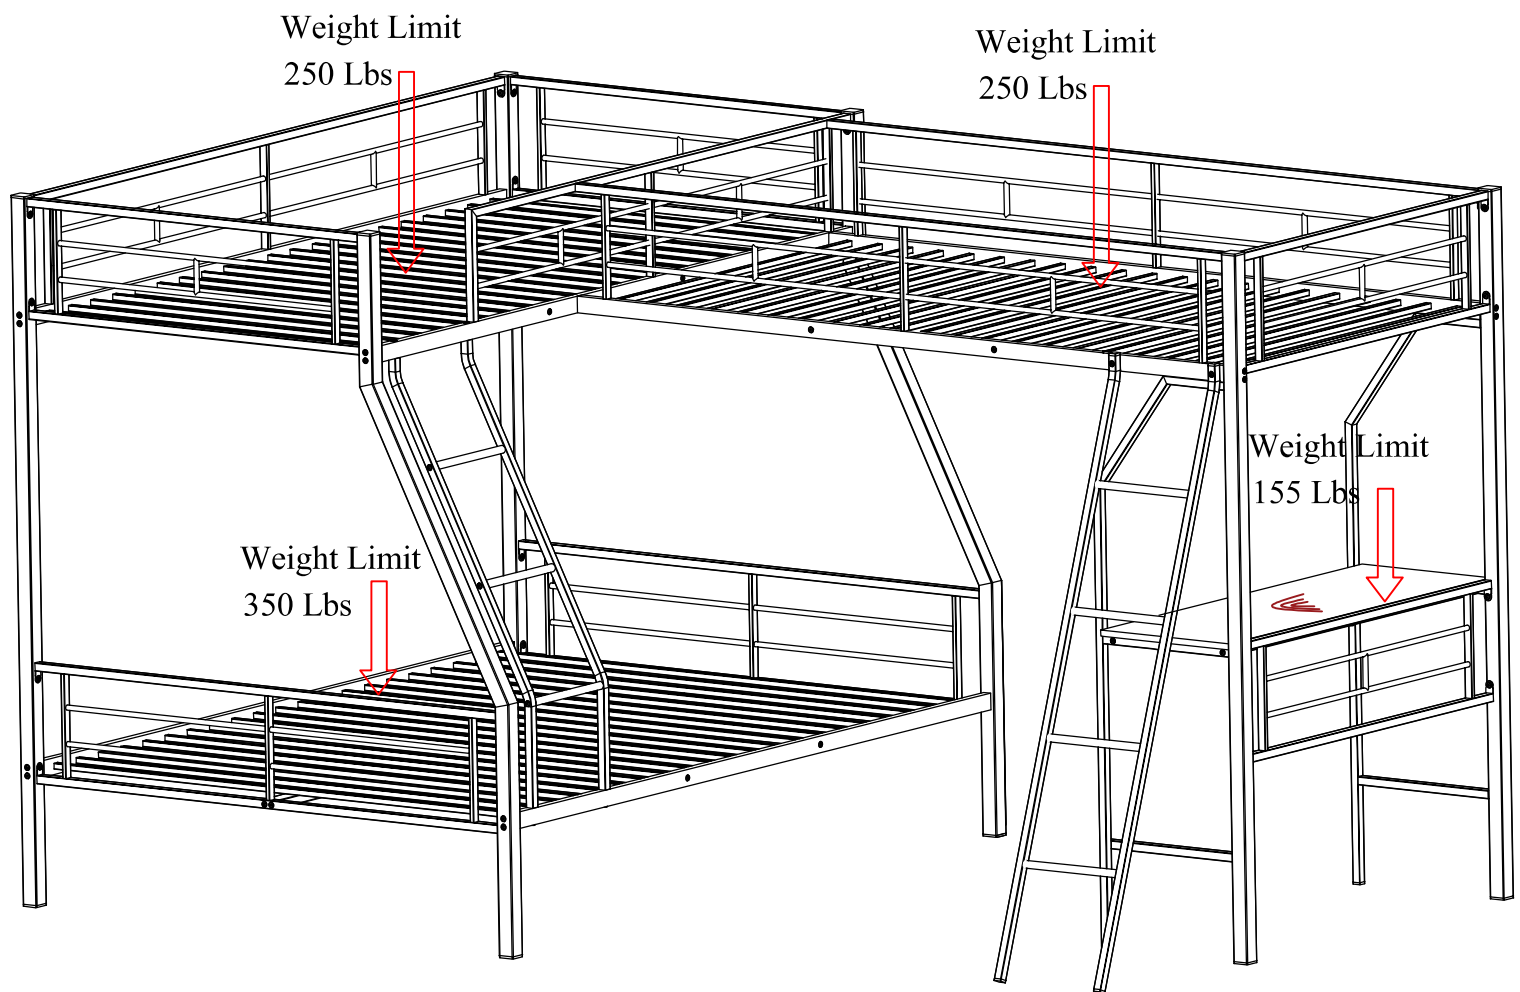


TWIN OVER FULL L-SHAPED BUNK & LOFT BED ASSEMBLY INSTRUCTIONS



TWIN OVER FULL L-SHAPED BUNK & LOFT BED ASSEMBLY INSTRUCTIONS

SAFETY WARNINGS AND GENERAL NOTES:

1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow children under 6 years of age to use the upper bunk.
4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
5. Do not allow horseplay on or under beds.
6. Always prohibit jumping on the bed.
7. Prohibit more than one person on upper bunk.
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
10. Use of a night-tight may provide added safety precaution for a child using the upper bunk.
11. Always use guardrails on both long sides of the upper bunk.
12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

13. **STRANGULATION HAZARD-** Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
14. Keep these instructions for future reference.
15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
16. Be certain all staples are out of the box before beginning assembly on the shipping carton.

17. USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.

Upper bunk (bunk bed and tribed included)

Bed type	Length	Width	Thickness
Twin	74" – 75"	38 ½"	6" max

Lower bunk

Bed type	Length	Width	Thickness
Full	74" – 75"	53"-54"	8"

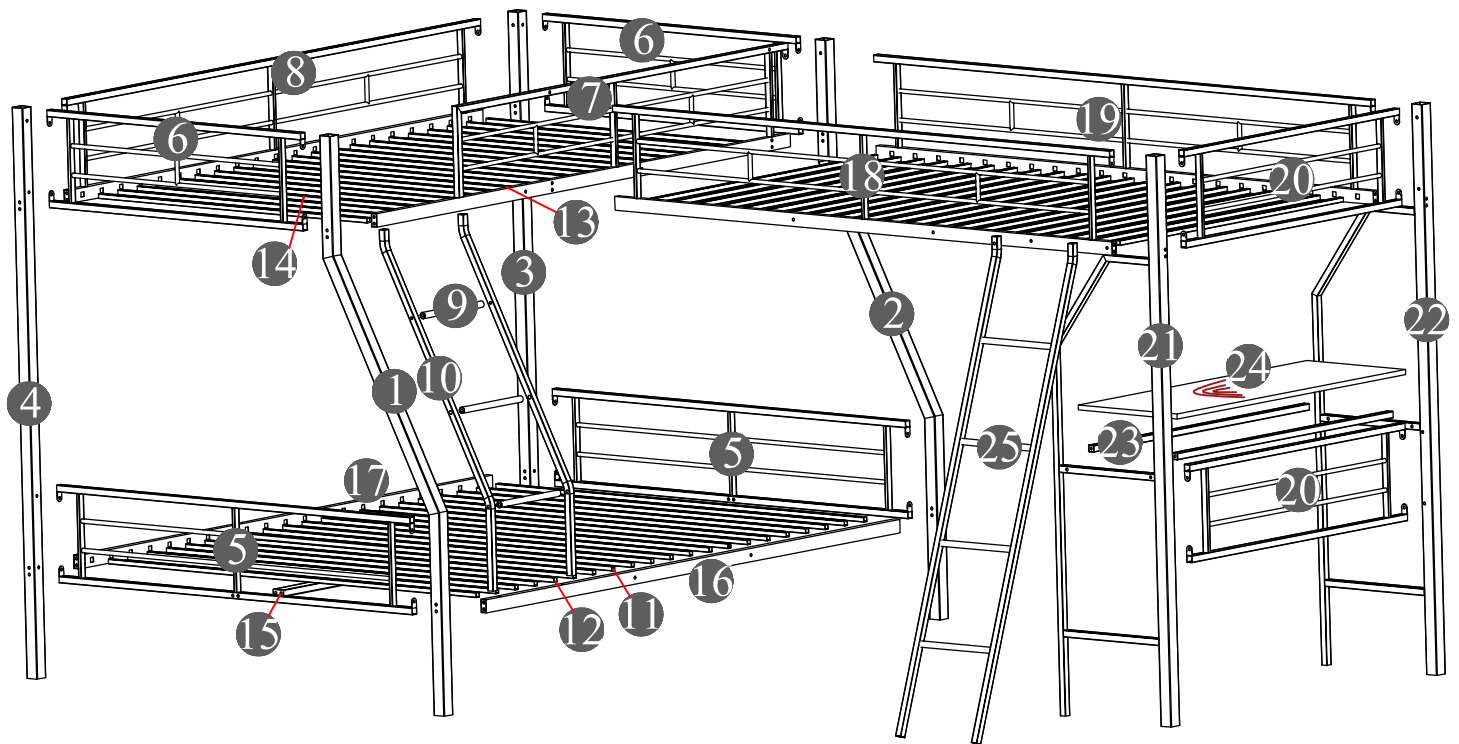
18. SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

19. Replacement Parts:

Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY(USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY, CA, 91748) dealers.

















TWIN OVER FULL L-SHAPED BUNK & LOFT BED ASSEMBLY INSTRUCTIONS

DETAIL VIEW











TWIN OVER FULL L-SHAPED BUNK & LOFT BED ASSEMBLY INSTRUCTIONS

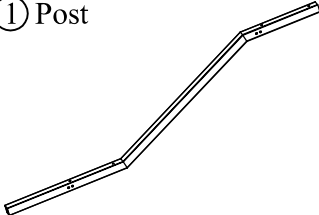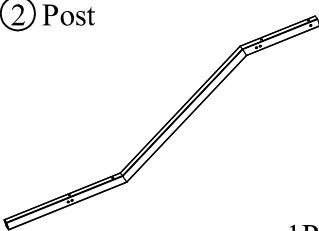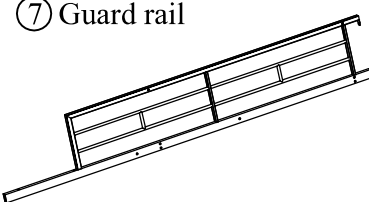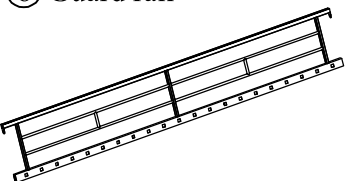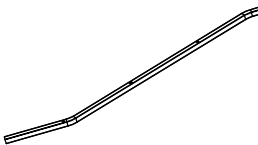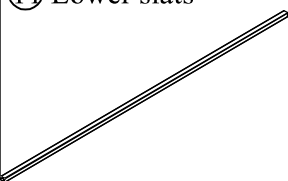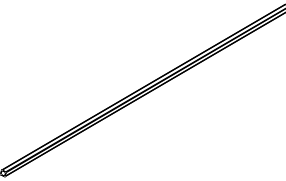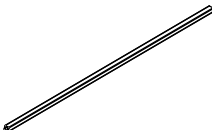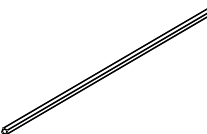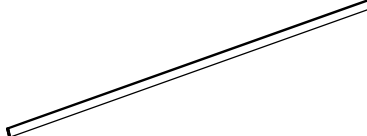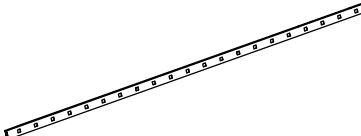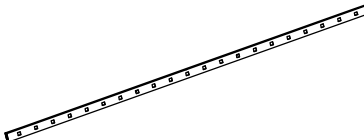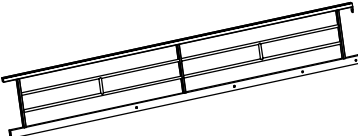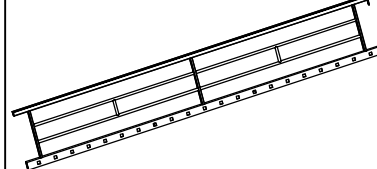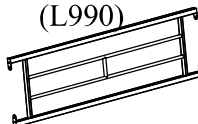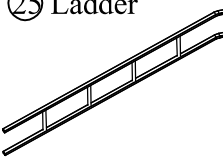PART LIST MF199801








① Post  1PC	② Post  1PC	⑦ Guard rail  1PC	⑧ Guard rail  1PC	
⑨ Horizontal ladder bar  3PCS	⑩ Vertical ladder bar  2PCS	⑪ Lower slats  2PCS	⑫ Lower slats  19PCS	⑬ Upper slats  4PCS
⑭ Upper slats  38PCS	⑮ Center brace  1PC	⑯ Side rail  1PC	⑰ Side rail  1PC	
⑱ Guard rail  1PC	⑲ Guard rail  1PC	⑳ End guard rail (L990)  1PC	㉓ Horizontal bar  2PCS	㉔ Ladder  1PC

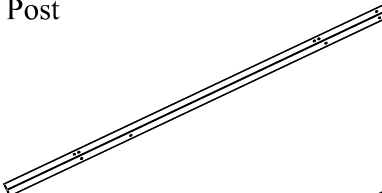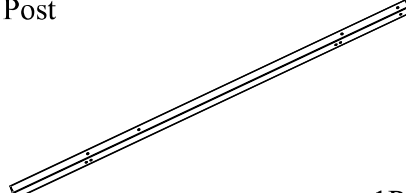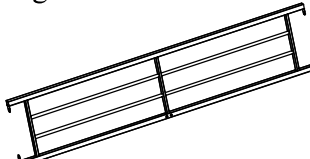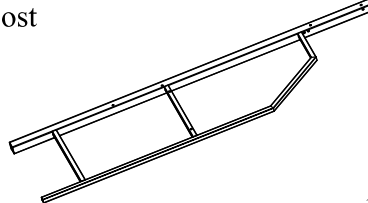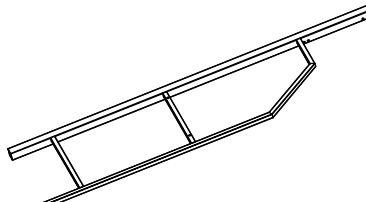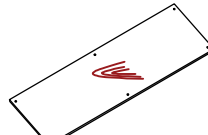PART LIST MF199802

③ Post  1PC	④ Post  1PC	⑤ End guard rail  2PCS
⑥ End guard rail (L970)  2PCS	②① End guard rail (L990)  1PC	②① Post  1PC
②② Post  1PC	②④ Desk  1PC	

TWIN OVER FULL L-SHAPED BUNK & LOFT BED ASSEMBLY INSTRUCTIONS


HARDWARE LIST MF199801

Ⓐ Bolts  1/4"*55 24PCS	Ⓑ Bolts  1/4"*35 22PCS	Ⓒ Bolts  1/4"*30 6PCS	Ⓓ Bolts  1/4"*15 41PCS
Ⓔ End cap  40*40 12PCS	Ⓕ End cap  20*20 6PCS	Ⓖ Allenkey  4*59 1PC	

This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team.


TWIN OVER FULL L-SHAPED BUNK & LOFT BED ASSEMBLY INSTRUCTIONS

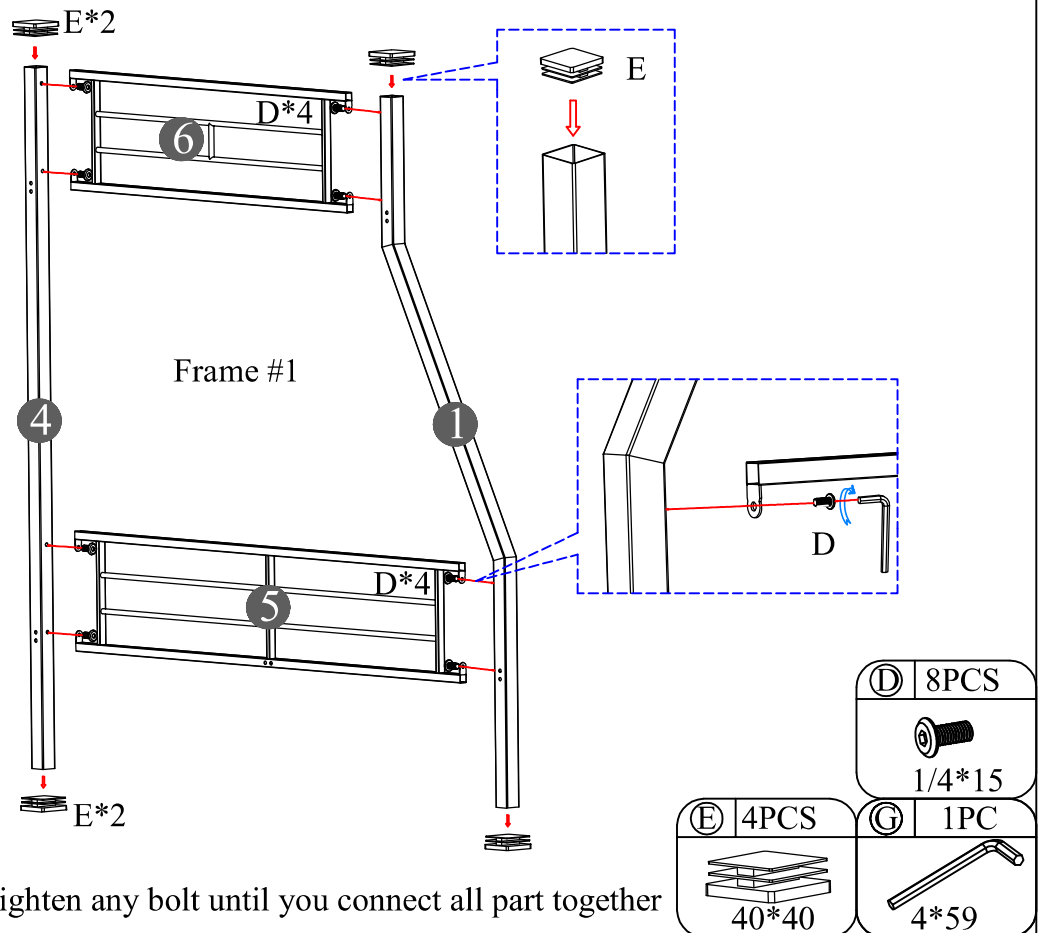STEP 1 : Following below illustration Assembly Frame # 1. Using hardware #D ,#E connect #1 & #4 with #5, #6 to complete Frame #1.



NOTE:In this step, DO NOT tighten any bolt until you connect all part together

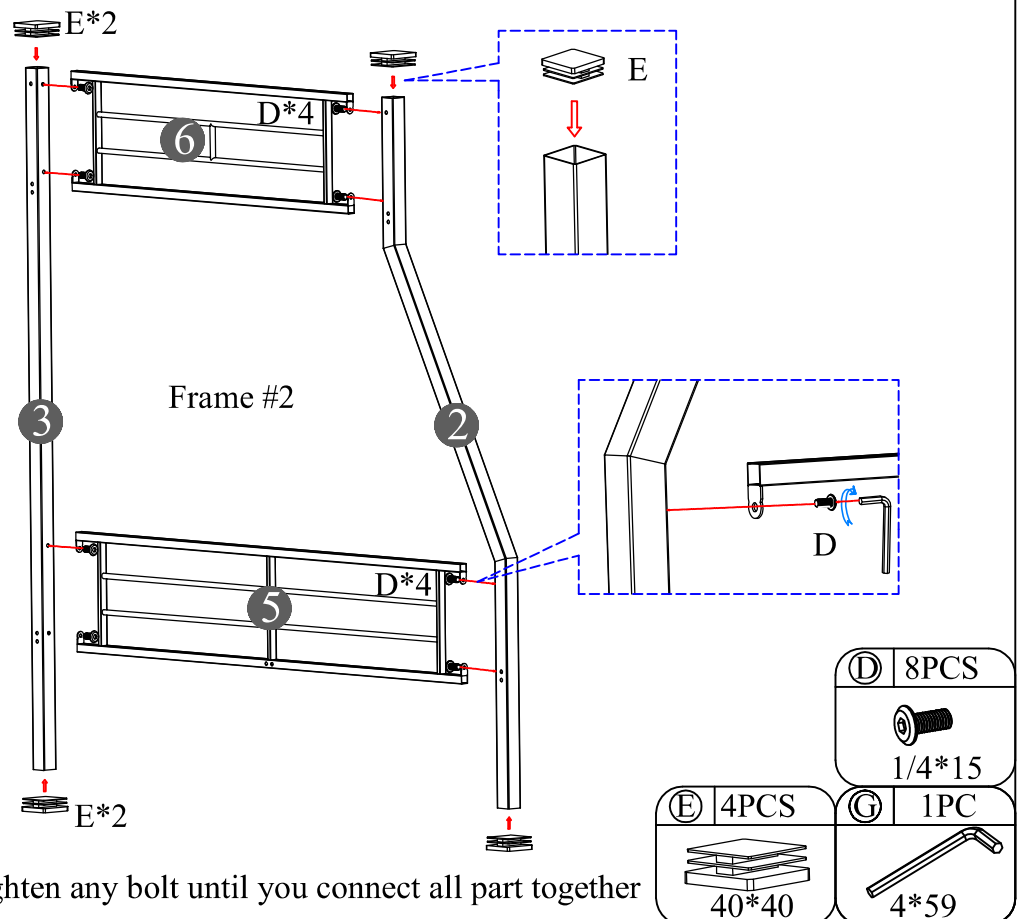
STEP 2 : Following below illustration Assembly Frame # 2. Using hardware #D ,#E connect #2 & #3 with #5, #6 to complete Frame #2.



NOTE:In this step, DO NOT tighten any bolt until you connect all part together

TWIN OVER FULL L-SHAPED BUNK & LOFT BED ASSEMBLY INSTRUCTIONS

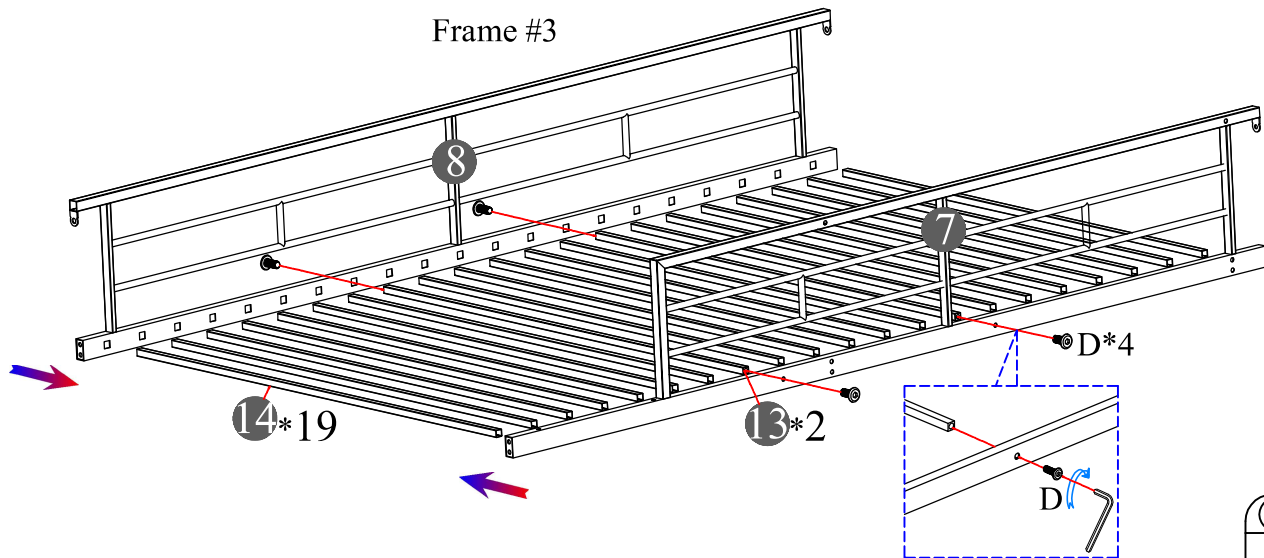
STEP 3 : Following below illustration Assembly Frame #3. Using hardware #D connect #7 & #8 with #13, #14 to complete Frame #3.



D	4PCS
	 1/4*15
G	1PC
	 4*59

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

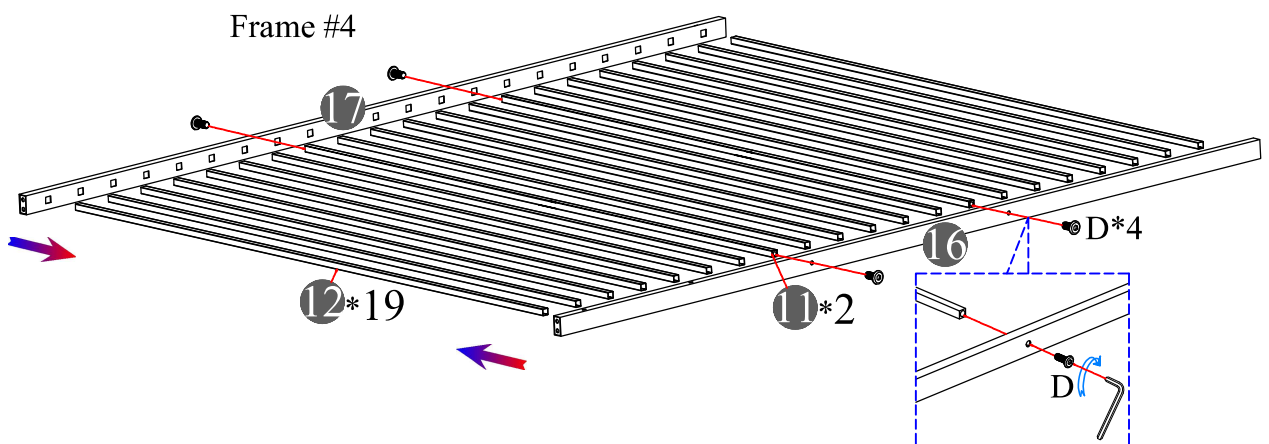STEP 4 : Following below illustration Assembly Frame #4. Using hardware #D connect #16 & #17 with #11, #12 to complete Frame #4.




D	4PCS
	 1/4*15
G	1PC
	 4*59

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

TWIN OVER FULL L-SHAPED BUNK & LOFT BED ASSEMBLY INSTRUCTIONS

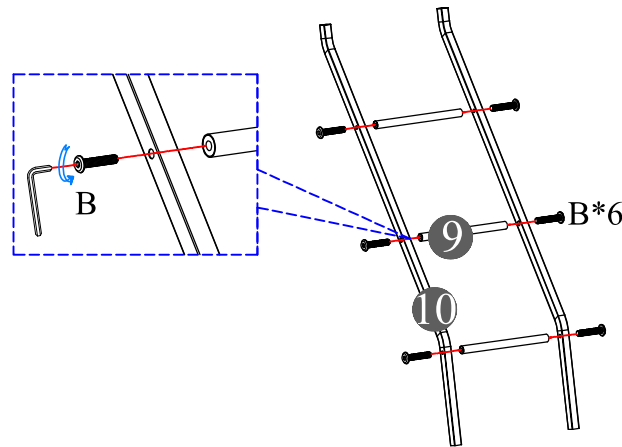STEP 5 : Following below illustration Assembly Frame #5. Using hardware #B connect #9 with #10 to complete Frame #5.




Frame #5

B	6PCS
	1/4*35
G	1PC
	4*59

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

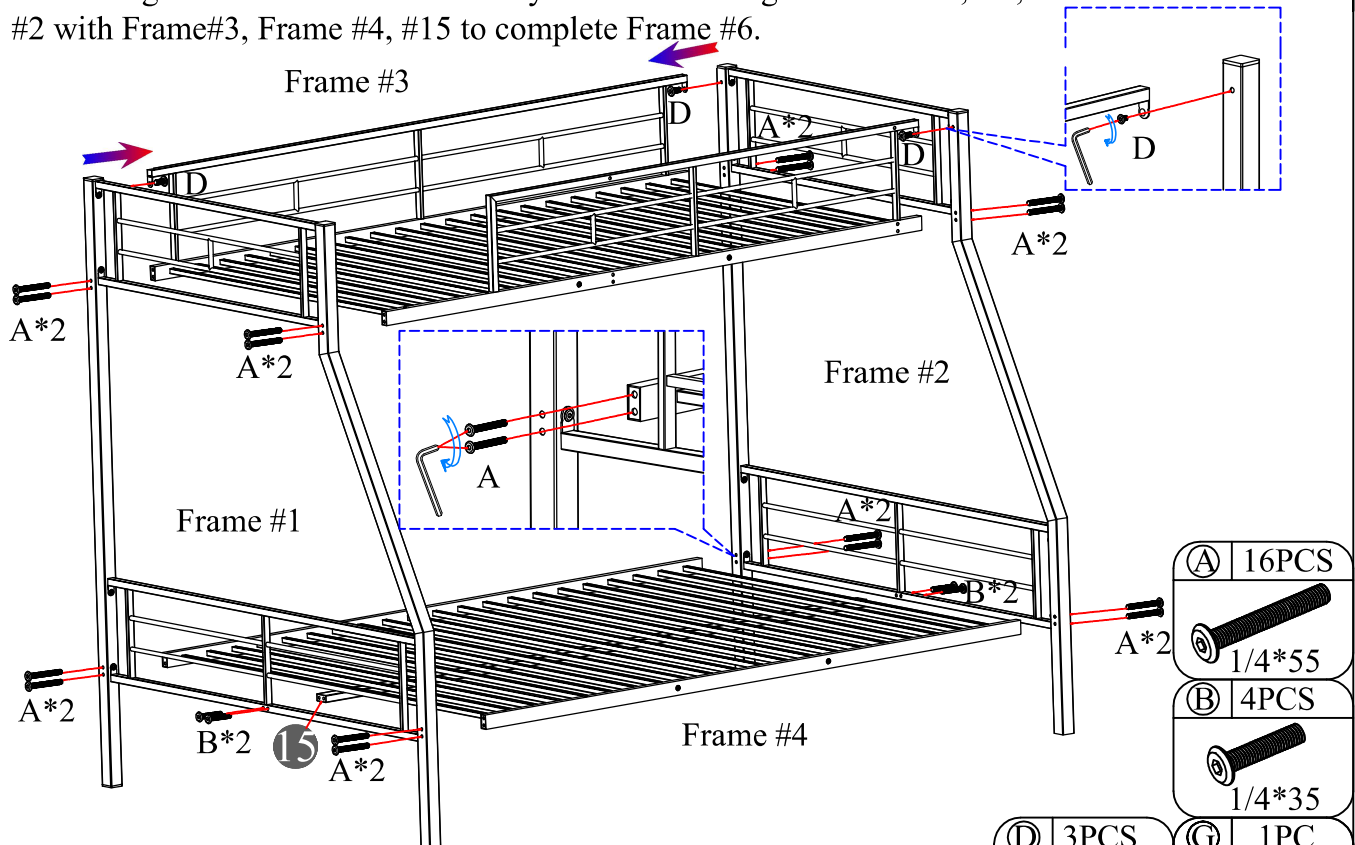STEP 6 : Following below illustration Assembly Frame #6. Using hardware #A, #B, #D connect #Frame #1, Frame #2 with Frame#3, Frame #4, #15 to complete Frame #6.




A	16PCS
	1/4*55
B	4PCS
	1/4*35

D	3PCS
	1/4*15
G	1PC
	4*59


NOTE:In this step, DO NOT tighten any bolt until you connect all part together

TWIN OVER FULL L-SHAPED BUNK & LOFT BED ASSEMBLY INSTRUCTIONS

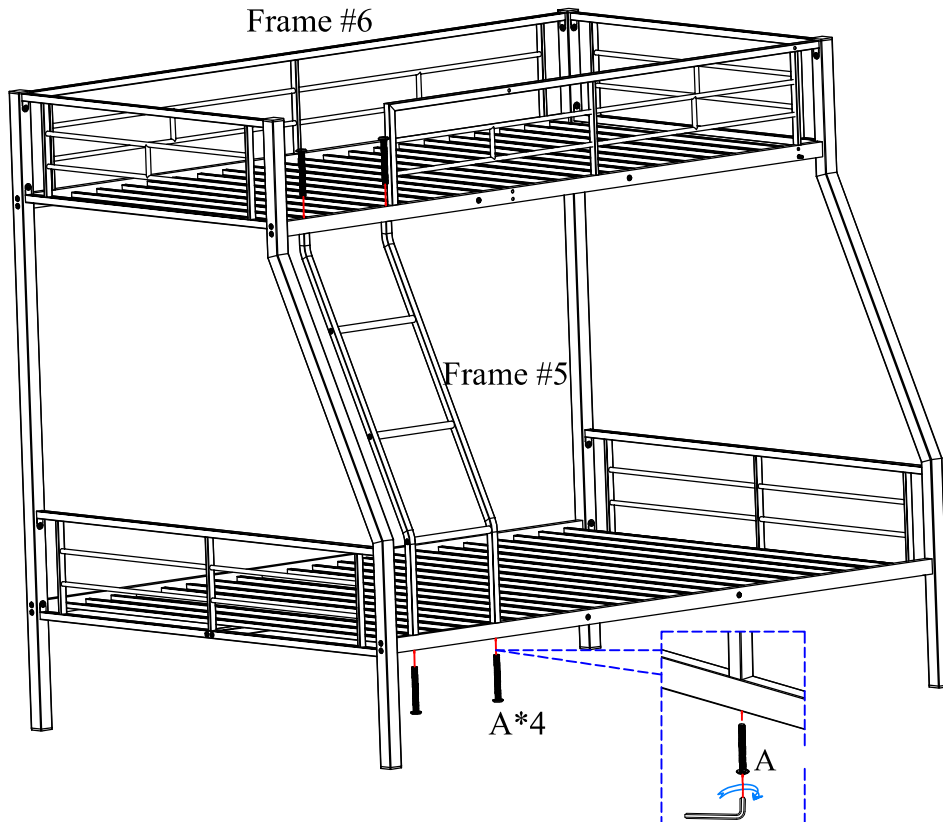
STEP 7 : Following below illustration Assembly Frame #7. Using hardware #A connect #Frame #6 with Frame #5 to complete Frame #7.



NOTE:In this step, DO NOT tighten any bolt until you connect all part together

(A)	4PCS
	 1/4*55
(G)	1PC
	 4*59

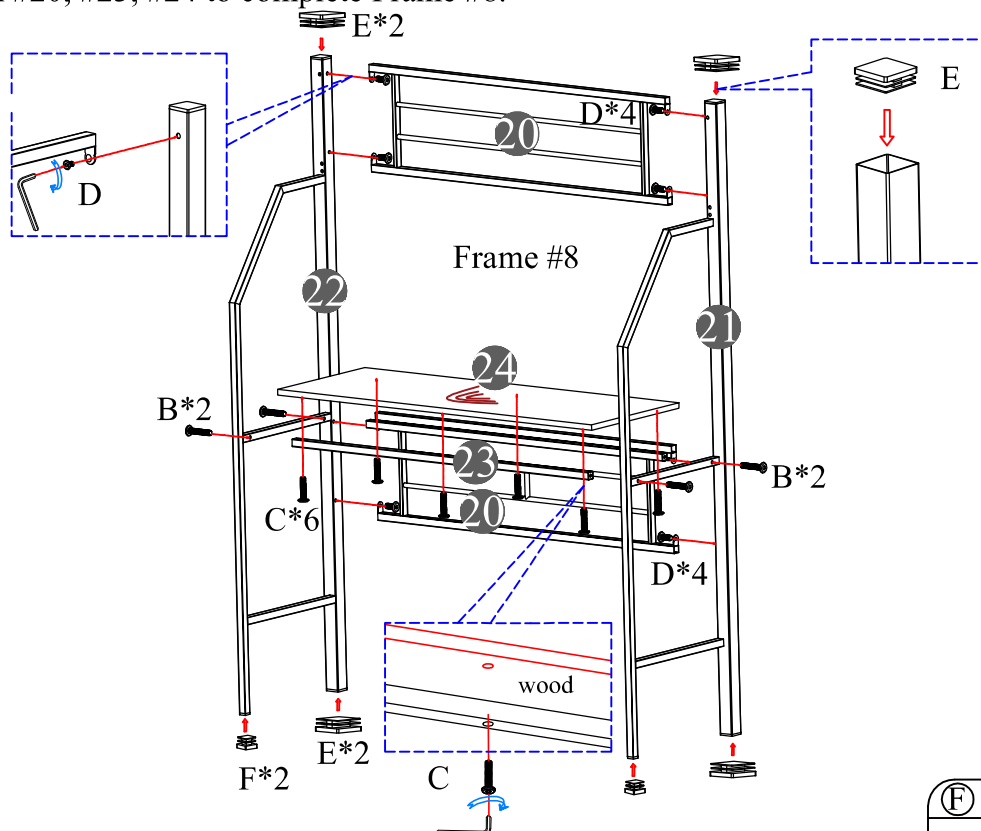STEP 8 : Following below illustration Assembly Frame #8. Using hardware #B, #C, #D, #E, #F connect #21 & #22 with #20, #23, #24 to complete Frame #8.




(B)	4PCS
	 1/4*35
(C)	6PCS
	 1/4*30
(D)	8PCS
	 1/4*15
(E)	4PCS
	 40*40
(F)	2PCS
	 20*20
(G)	1PC
	 4*59

NOTE:In this step, DO NOT tighten any bolt until you connect all part together


TWIN OVER FULL L-SHAPED BUNK & LOFT BED ASSEMBLY INSTRUCTIONS

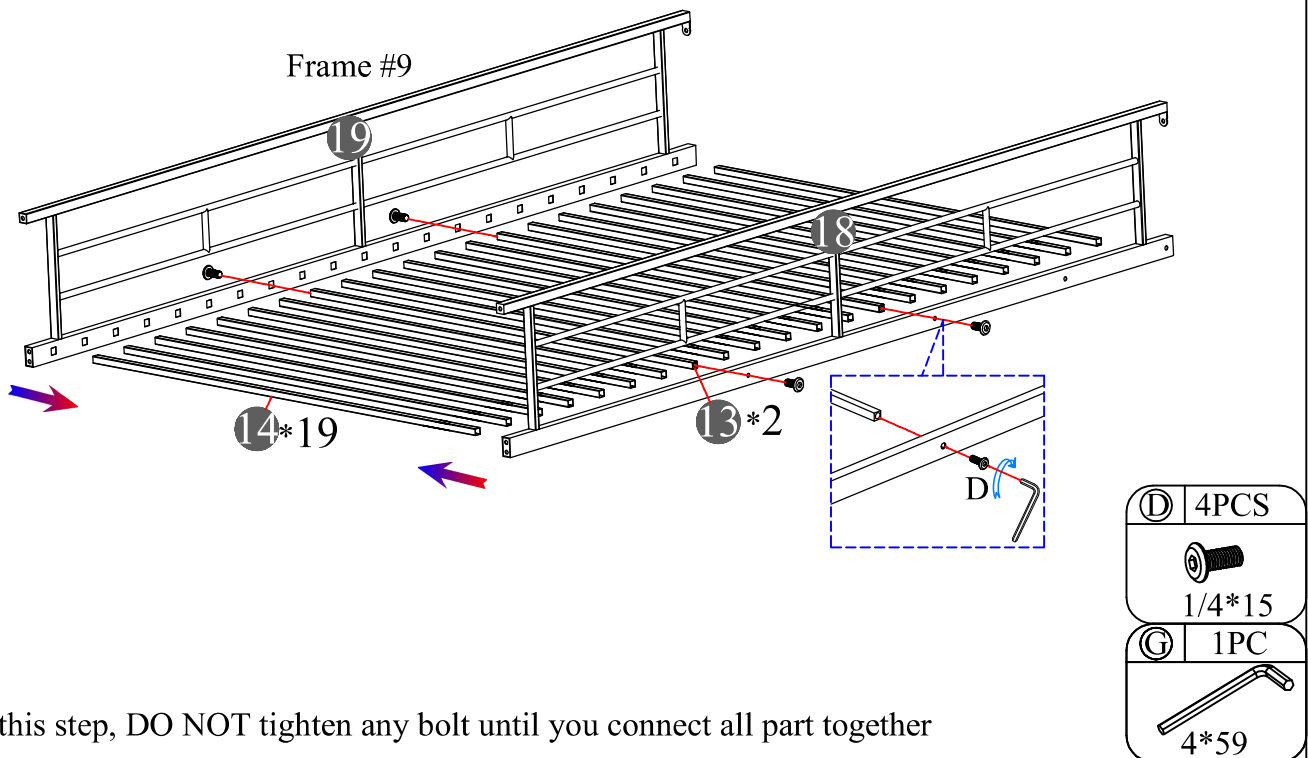STEP 9 : Following below illustration Assembly Frame #9. Using hardware #D connect #18 & #19 with #13, #14 to complete Frame #9.



NOTE:In this step, DO NOT tighten any bolt until you connect all part together

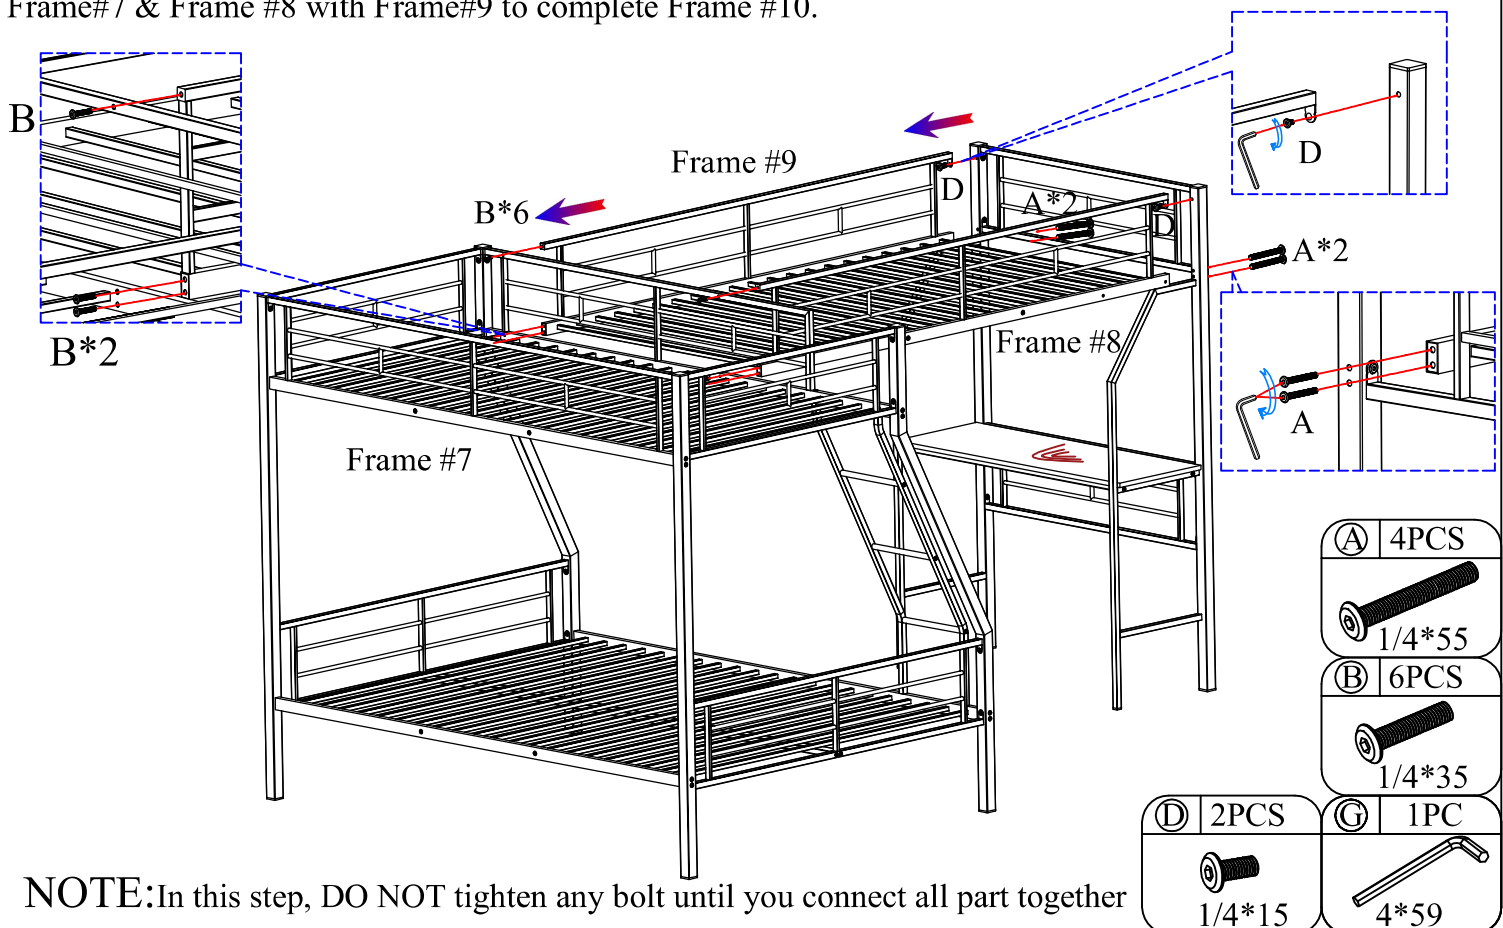STEP 10 : Following below illustration Assembly Frame #10. Using hardware #A, #B, #D, connect Frame#7 & Frame #8 with Frame#9 to complete Frame #10.




NOTE:In this step, DO NOT tighten any bolt until you connect all part together

TWIN OVER FULL L-SHAPED BUNK & LOFT BED ASSEMBLY INSTRUCTIONS


STEP 11 : Following below illustration Assembly Frame #11. Using hardware #B, #F connect Frame #10 with #25 to complete.

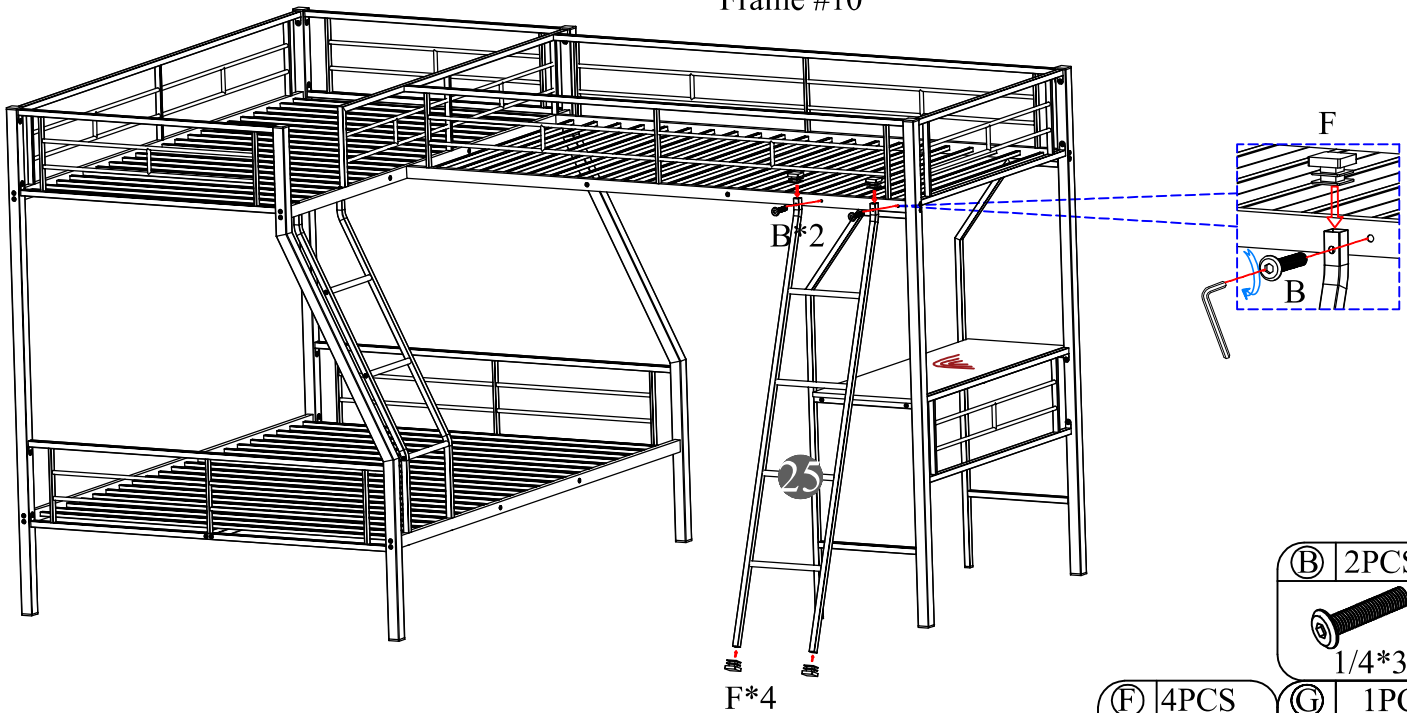Frame #10



NOTE: Tighten all step before using. Thank you

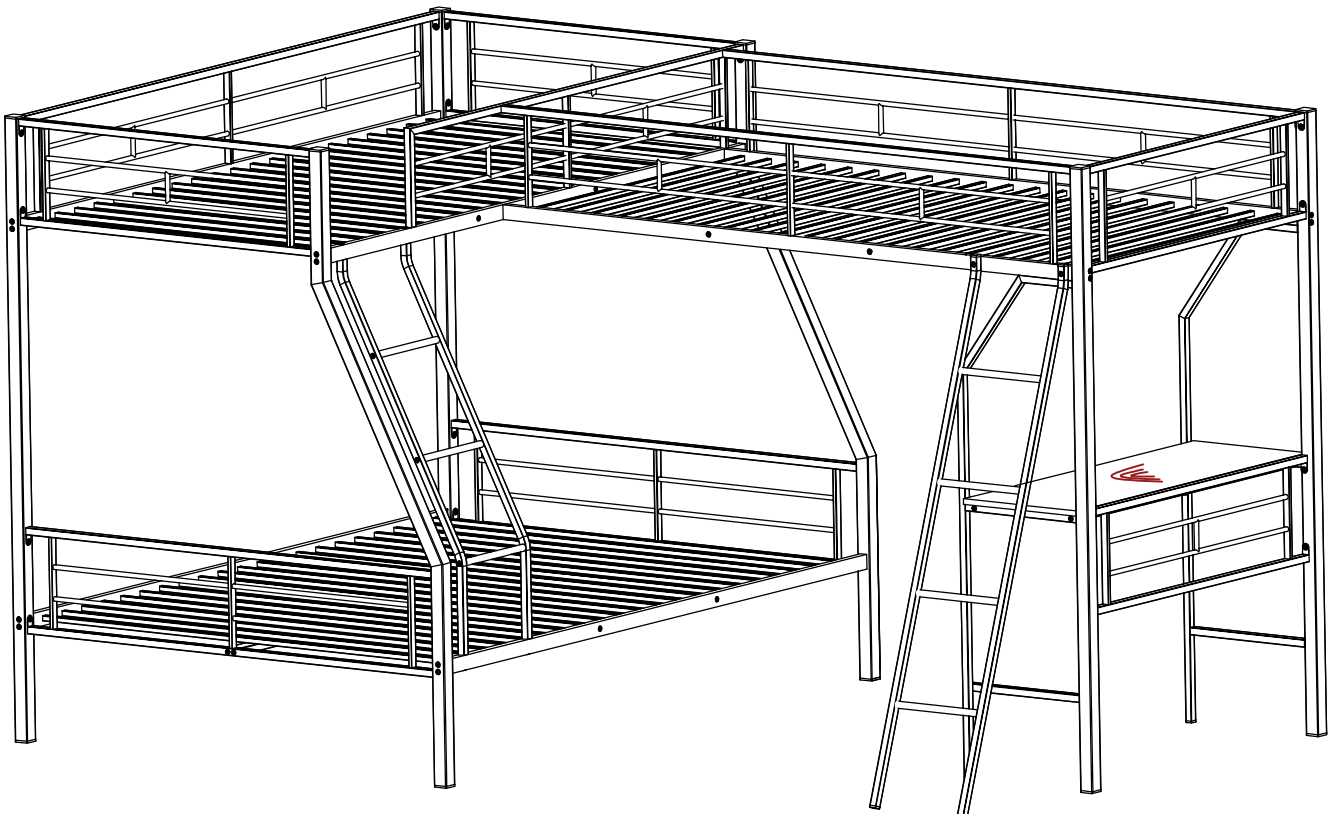COMPLETE



NOTE: Tighten all step before using. Thank you