


Assembly Instructions

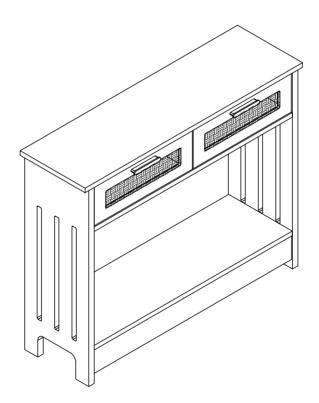

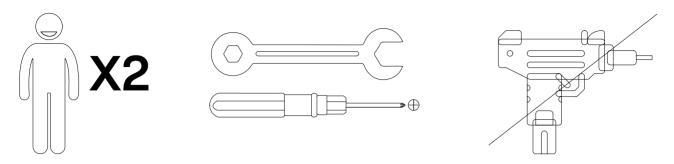


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

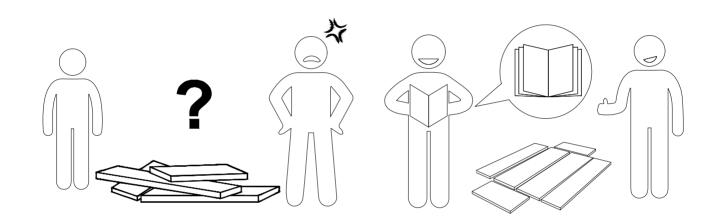


Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

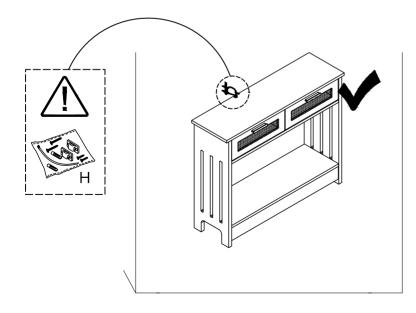


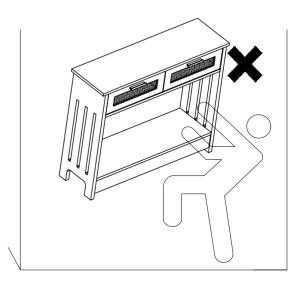

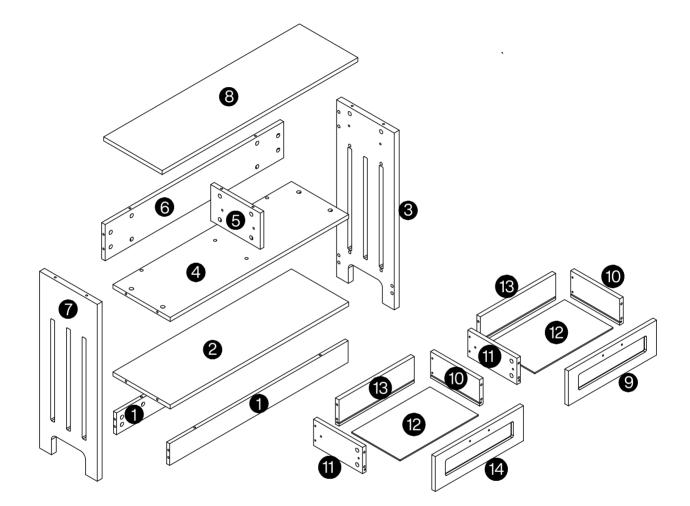




Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

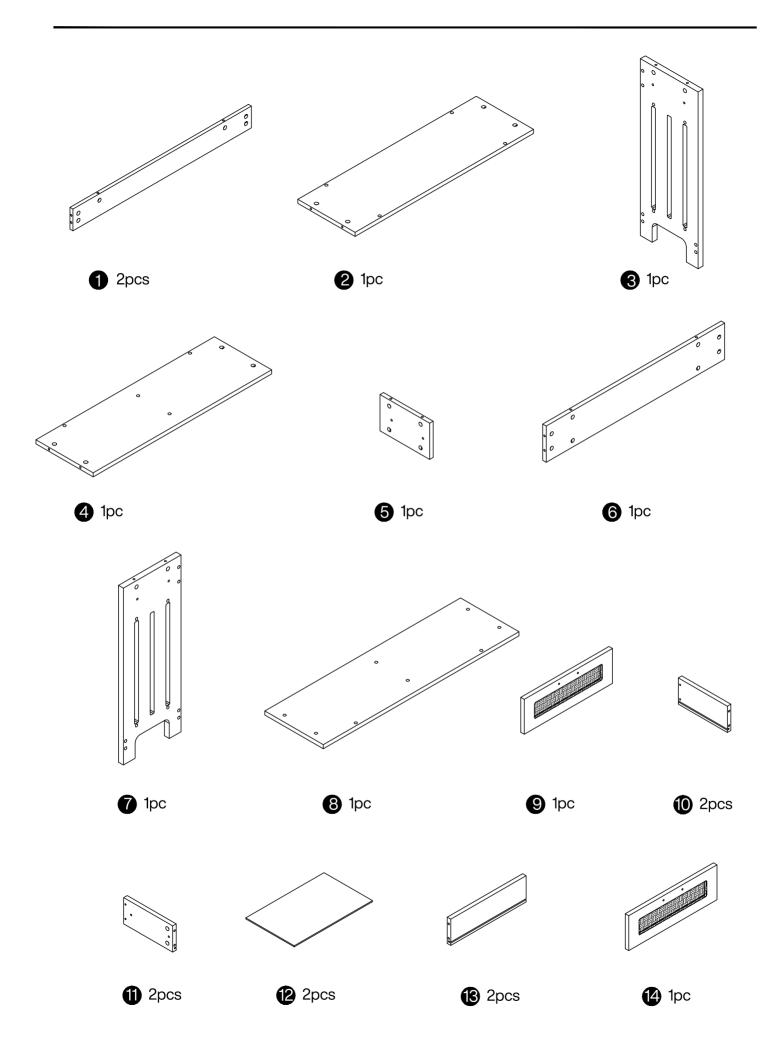

Hardware List

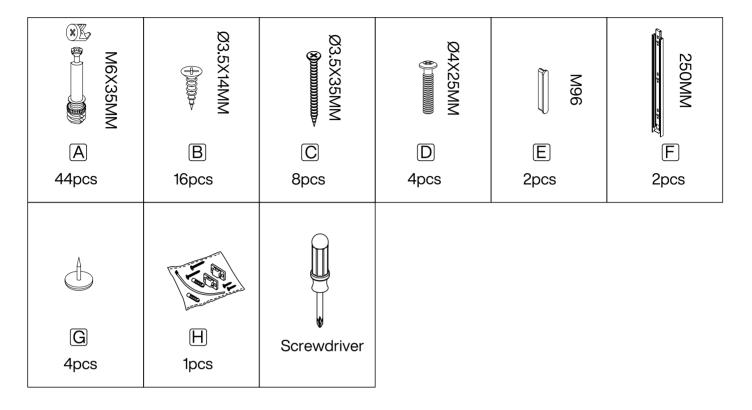


Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening

to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it


is tightened. Please do not use an electric screwdriver to assemble the unit.

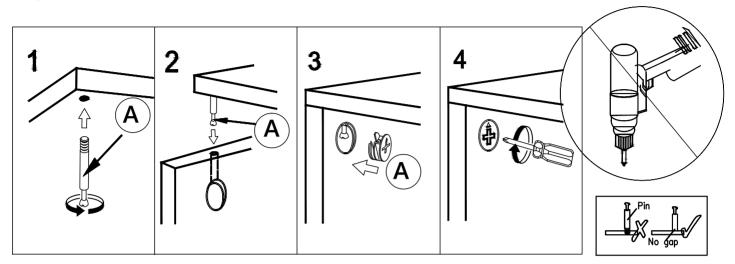

Read each step carefully before starting. It is very important that each step of instruction is


performed in the correct order. If these steps are not followed in sequence, assembly

difficulties will occur.

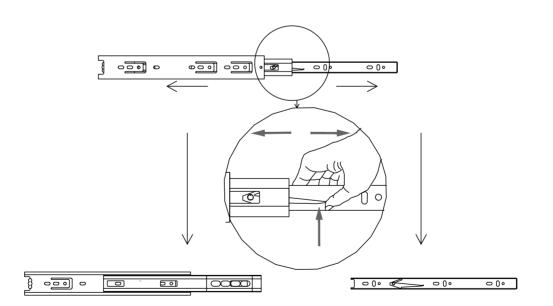


Disconnect the rail with the BLACK PLASTIC PART. It needs to be pulled down to disconnect the runners.


Take section C out of the guide rail (note that section AB is a whole, do not pull section B ard, otherwise the guide rail will be damaged)

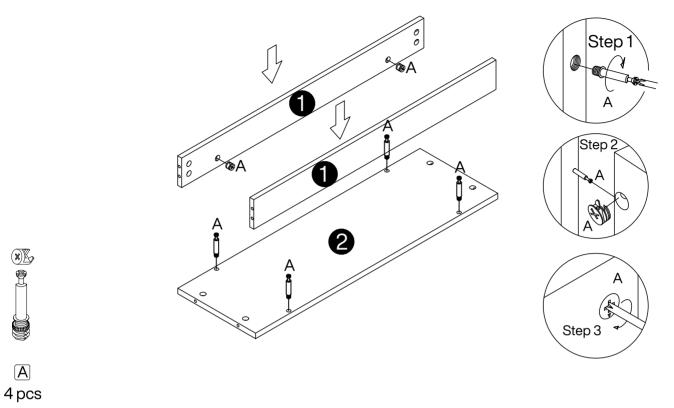





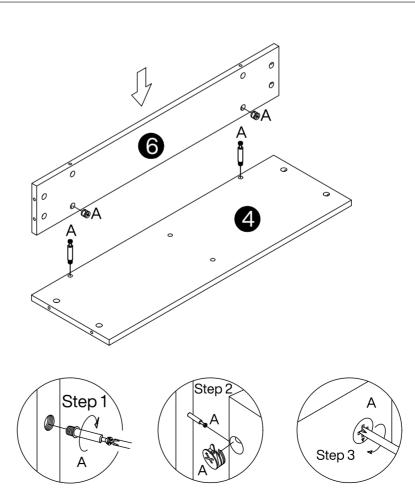


A 2 pcs

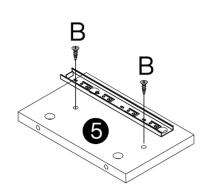

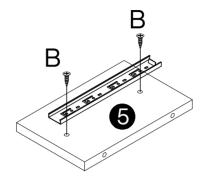


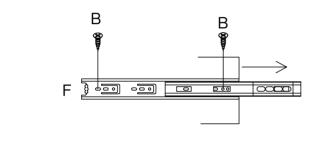

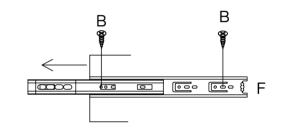





B 4 pcs

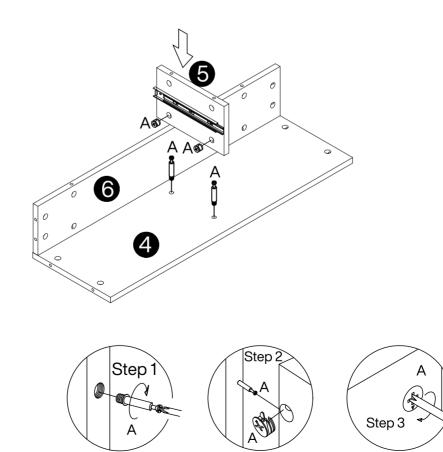




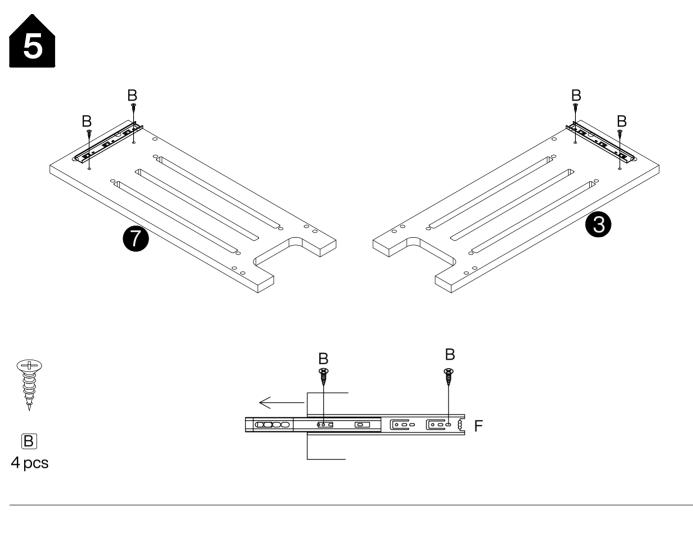




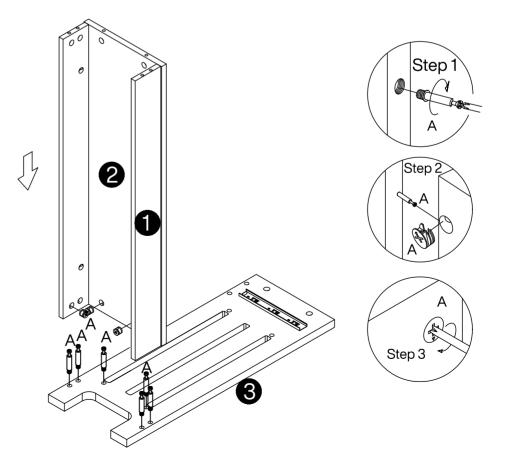



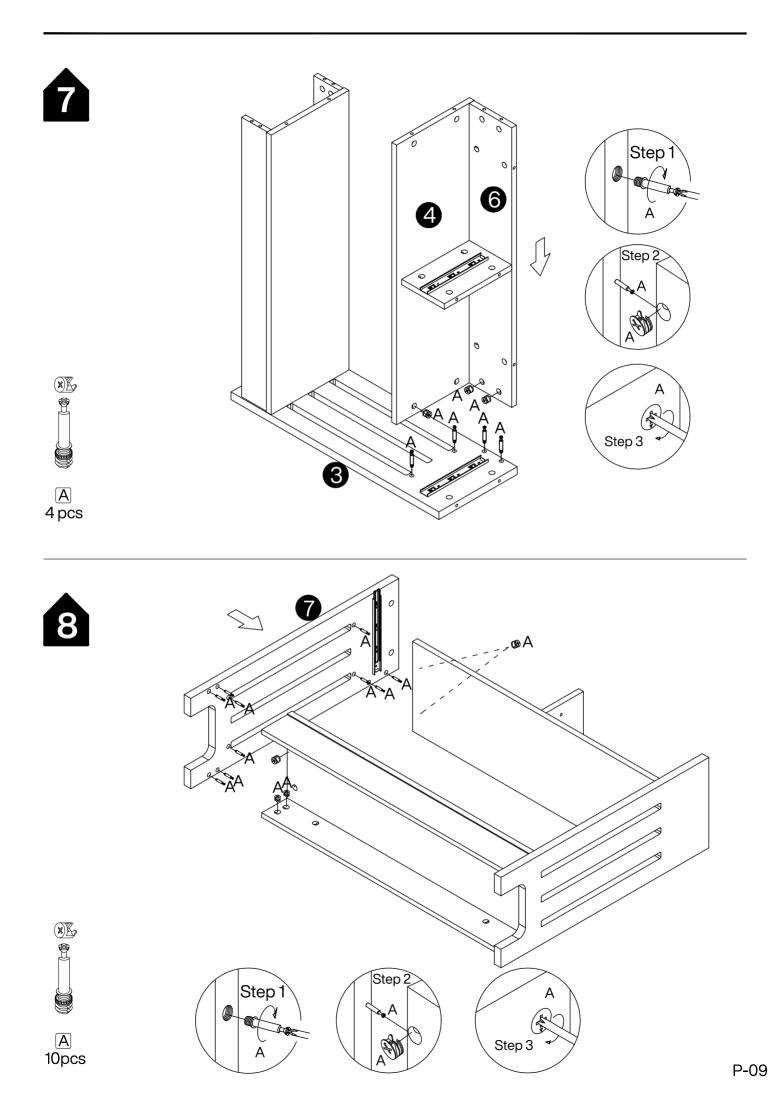




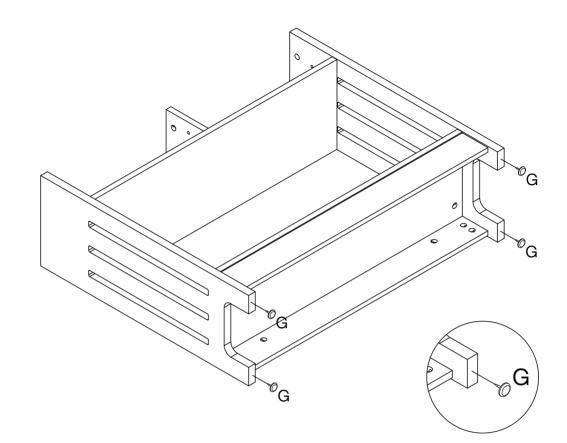






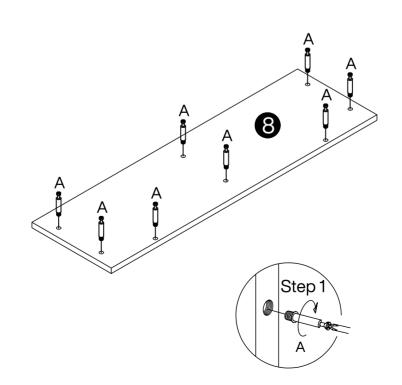







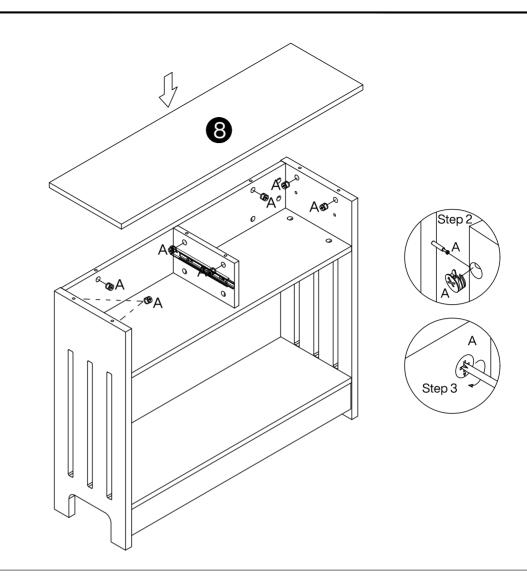






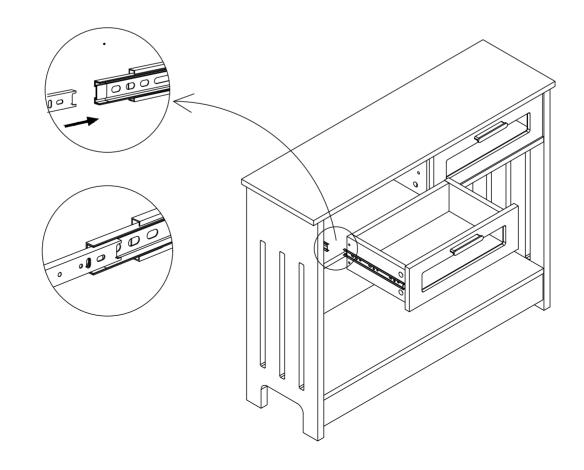

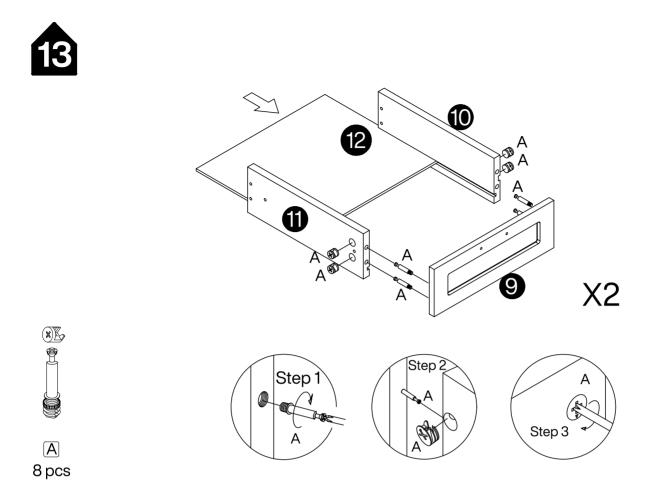





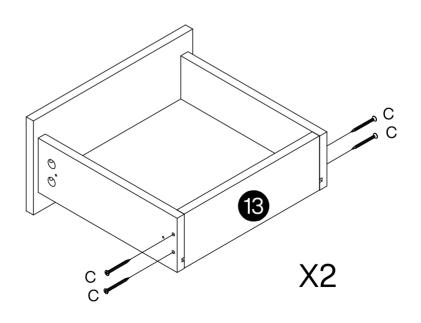

C 8 pcs

Buunnun

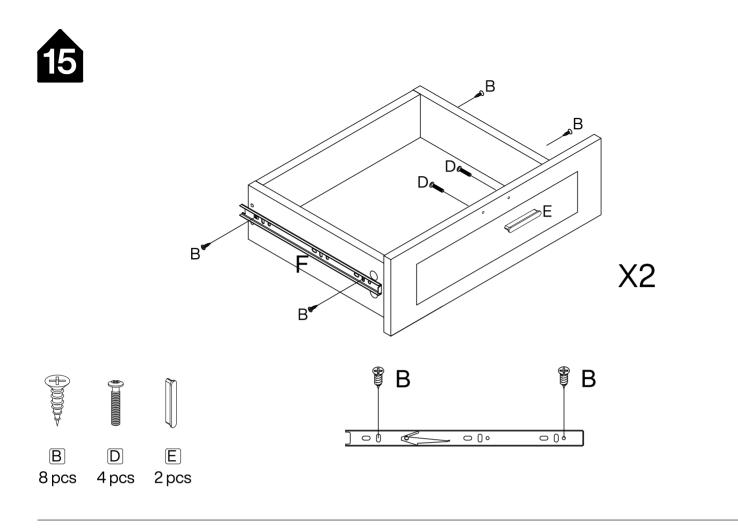

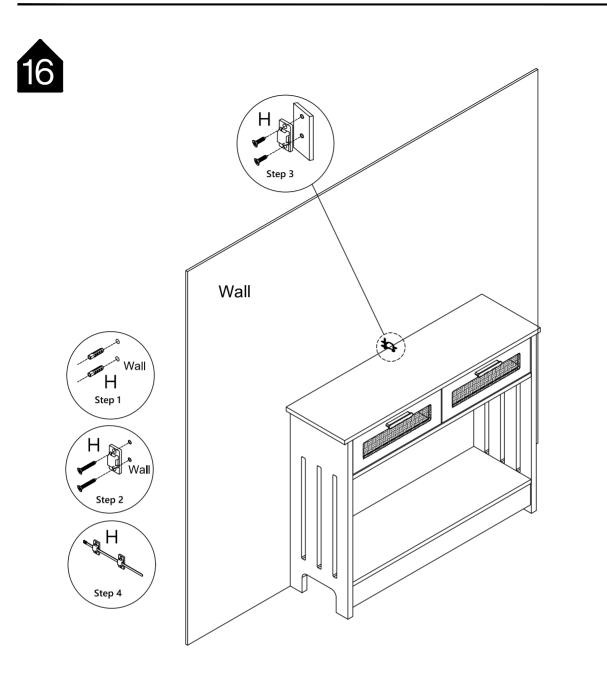

H 1pc

Installation Steps:

1. Drill a hole on the wall, insert the expansion bolt (e) into the hole.

2. Secure one bracket (a) into the expansion bolt (e) using the screw(c).

3. Position the furniture in place. Attach another bracket(a) (aligns with the bracket on the wall) to the back edge of unit top using the screw(d),

4. Thread the male end of the steel cable(b) through both brackets. Securely join the ends by turning the female connector clockwise.

Note:

Before installing the anti-tip kit, please determine where the furniture is to be placed and locate the center line of a wooden stud using a stud finder. For a concrete wall, ensure no steel bars inside it.