





Assembly Instruction

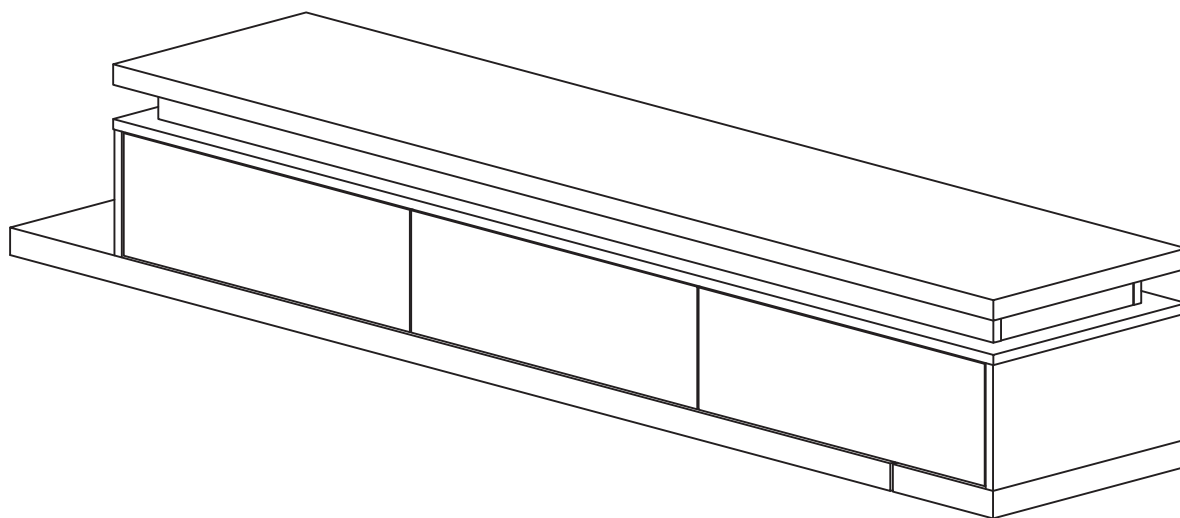

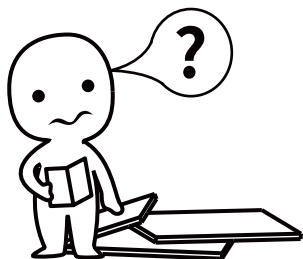


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

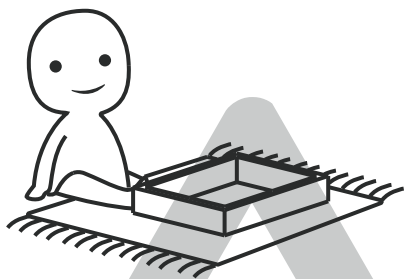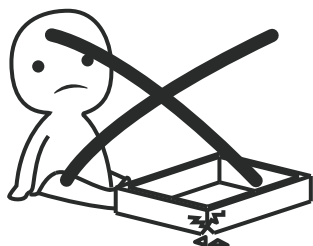



AVOID SCRATCHES!

To prevent scratching, assemble this furniture on a soft surface, such as a rug.

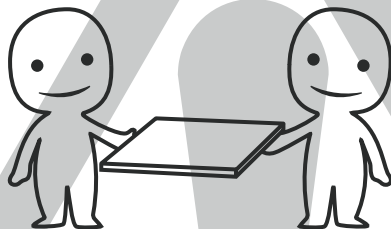

IMPROVE EFFICIENCY !

Find a partner to help with the installation; this will improve efficiency and reduce the time required.

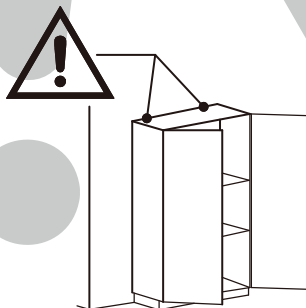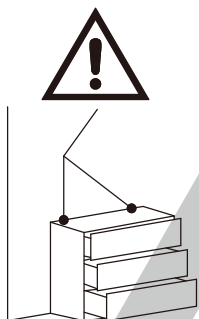

ANTI-TOPPLE WARNING !

Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is crucial to re-tighten any screws used in assembly two weeks after setup and then every three months to ensure the product's stability throughout its lifespan.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


EXPLODED DRAWING

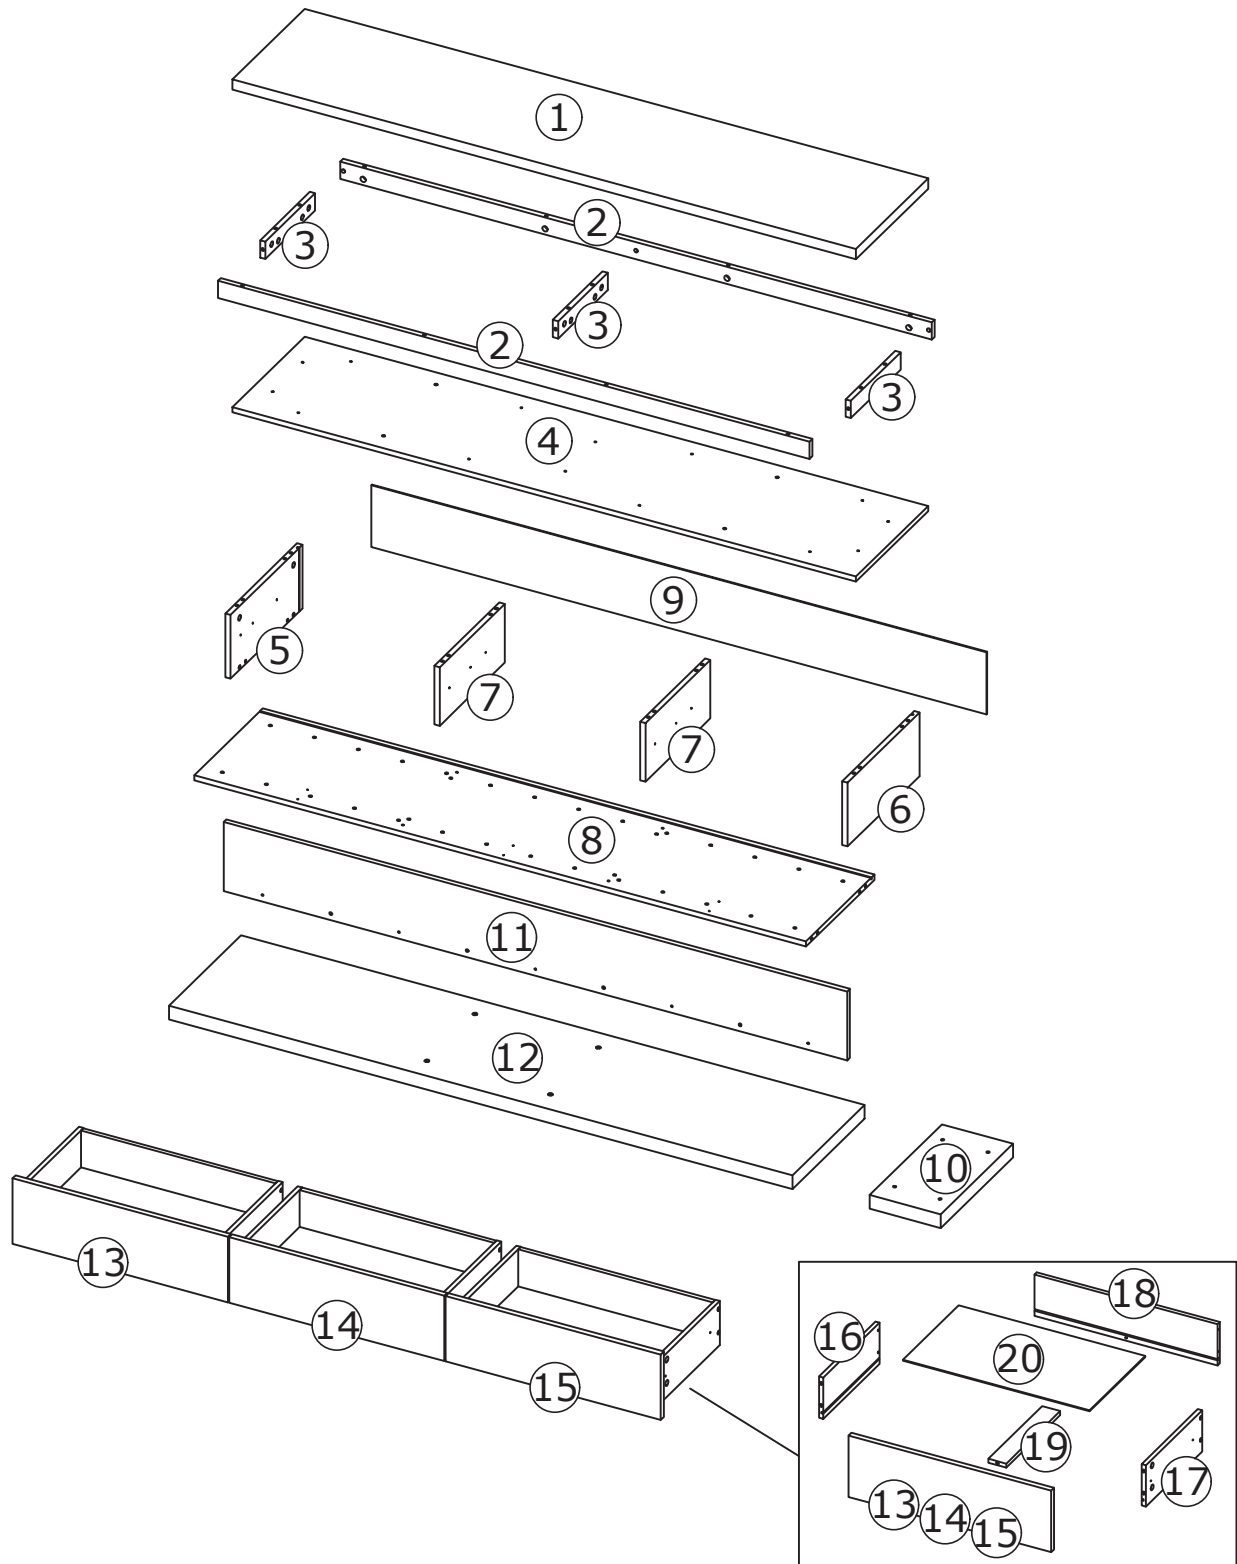


PARTS LIST

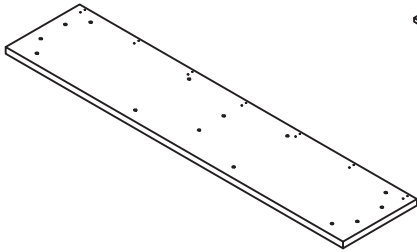


①

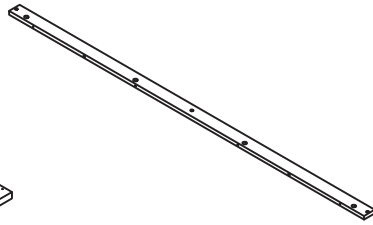


② x2

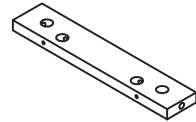


③ x3

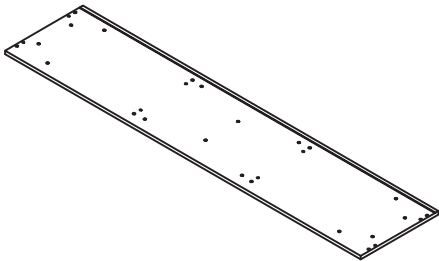


④

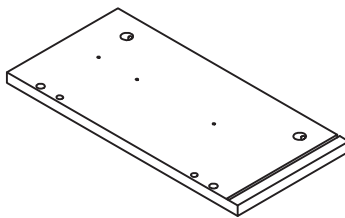


⑤

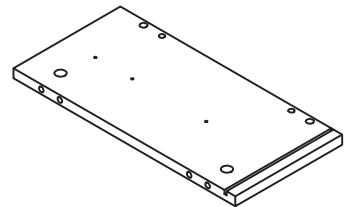


⑥

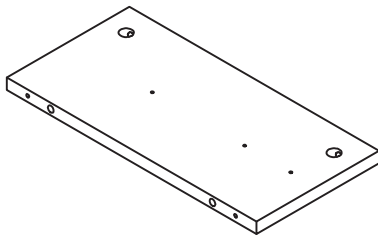


⑦ x2

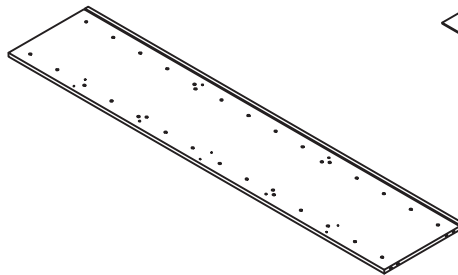


⑧

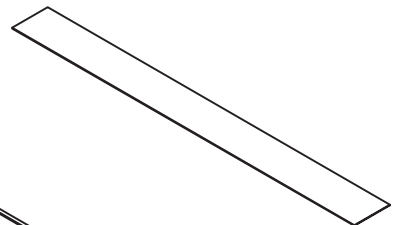


⑨

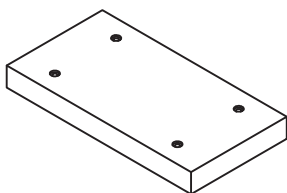

⑩

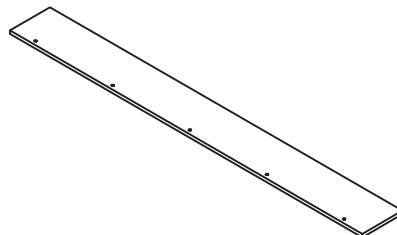


⑪

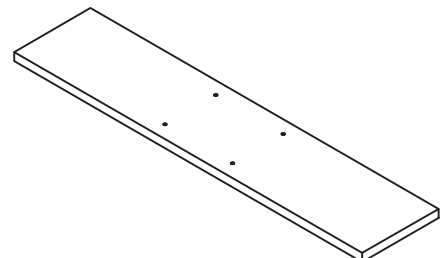


⑫


PARTS LIST

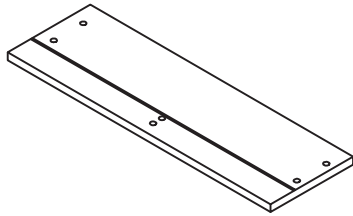


⑬

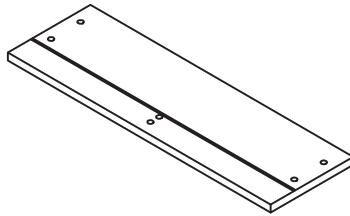


⑭

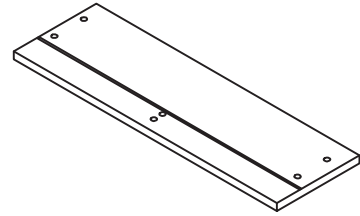


⑮

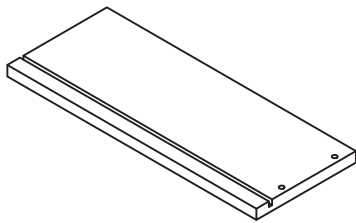


⑯ x3

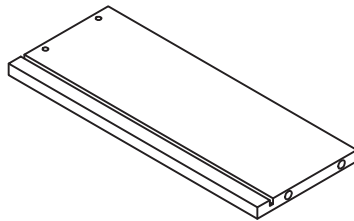


⑰ x3

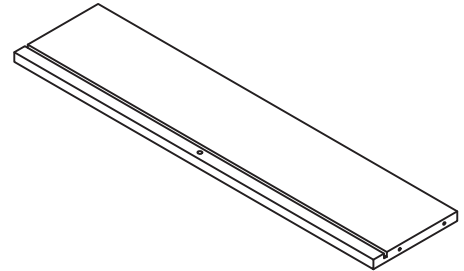


⑱ x3

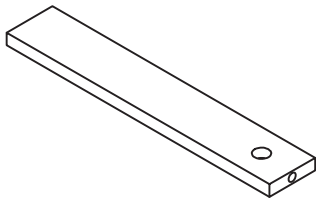



⑲ x3

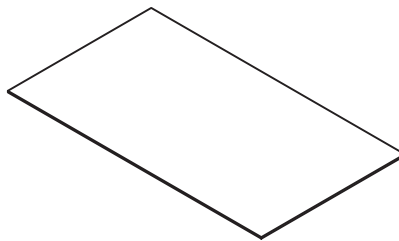

⑳ x3

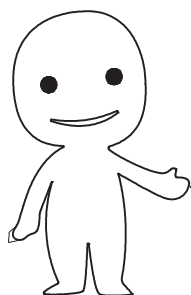


Please prepare the following tools

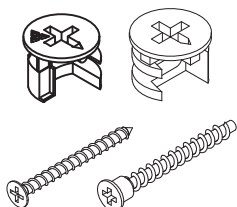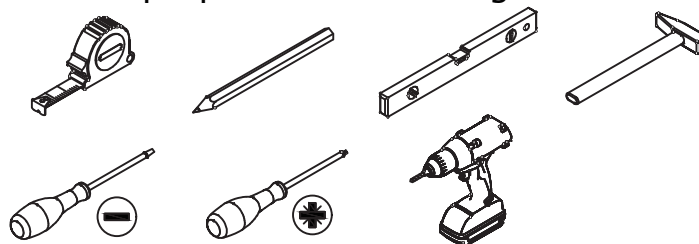

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 47

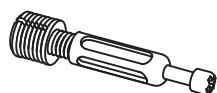


Ø 7 x 40 mm

B x 47



Ø 15 x 9.5 mm

C x 24

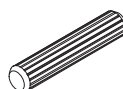

Ø 8 x 30 mm

D x 15




Ø 4 x 35 mm

E x 36



Ø 3.5 x 12 mm

F x 23

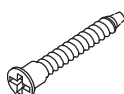


Ø 5 x 40 mm

G x 2



M6 x 30 mm

H x 6

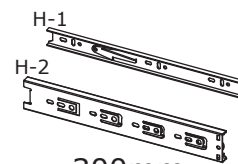

300mm

L x 4




M6 x 50 mm

M x 10



N x 3

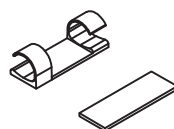

O x 14




Ø 13

P x 50




Ø 20

Q x 3

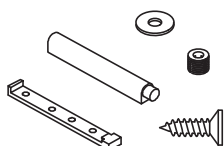


R x 1

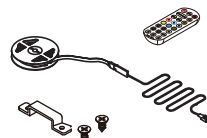

R - 1 x 7

S x 1

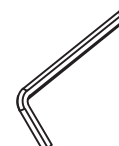

T x 4





Ø 20

1



- Screw the cam bolt (A) into the panel (13) & (14) & (15) .
- The embedded part (Q) is loaded into the plate (13) & (14) & (15) .

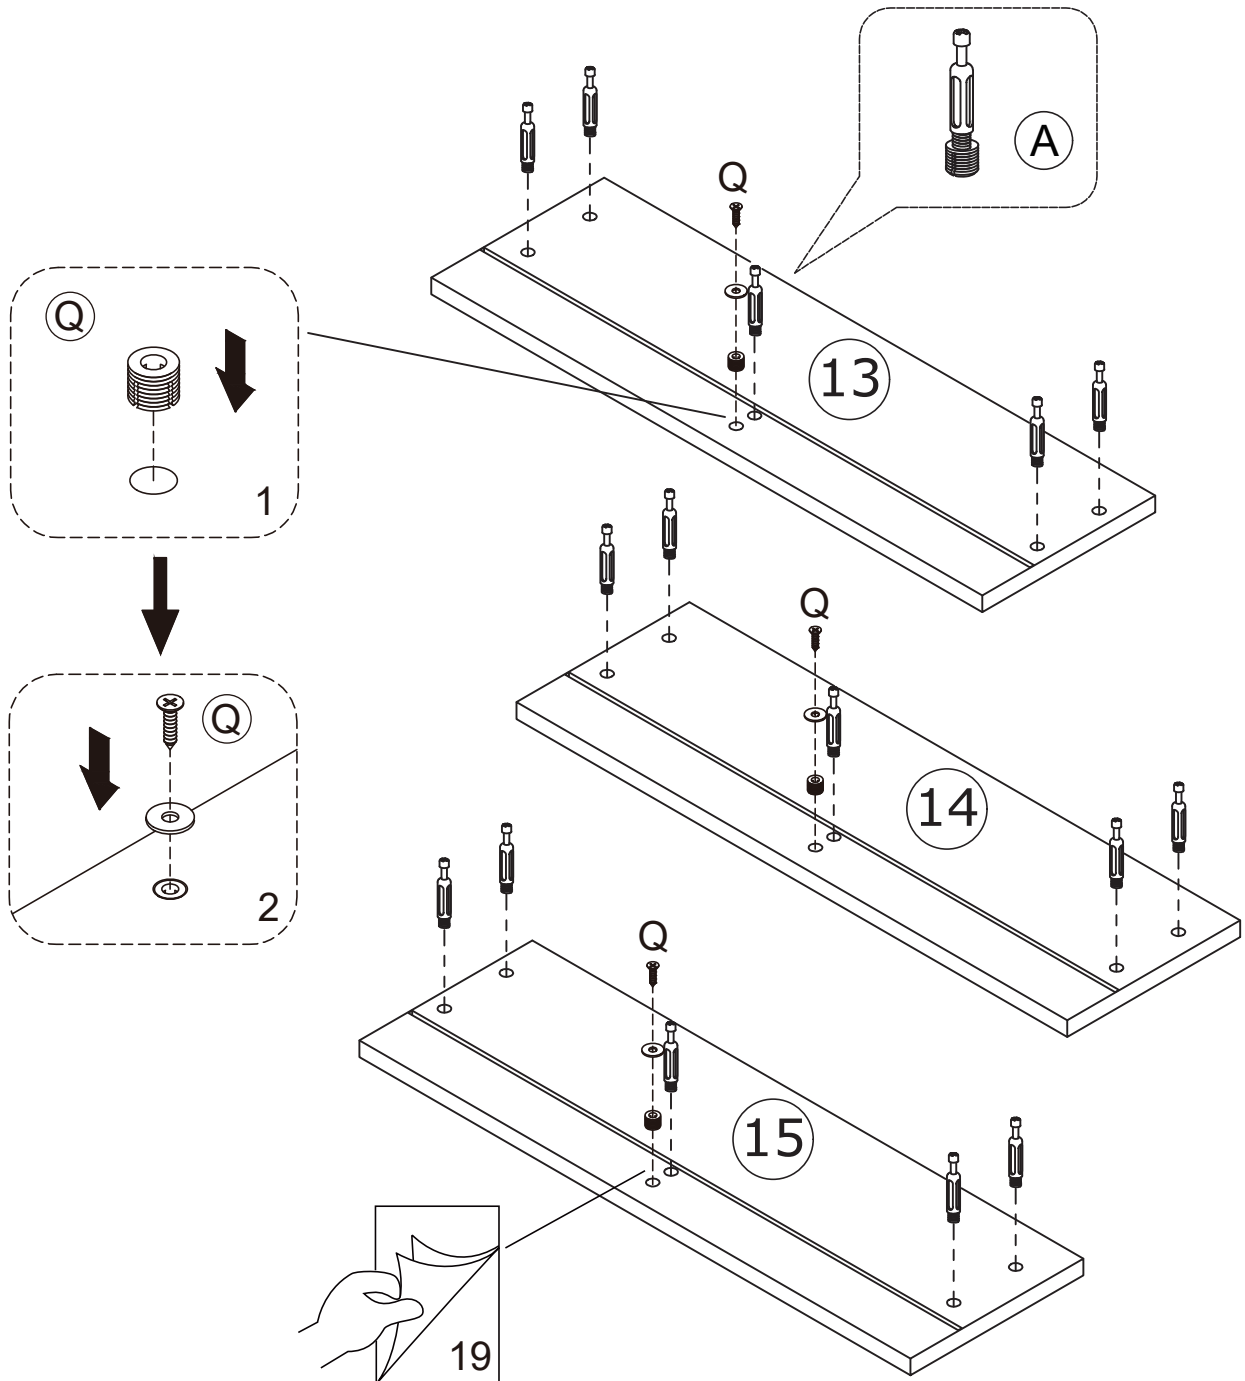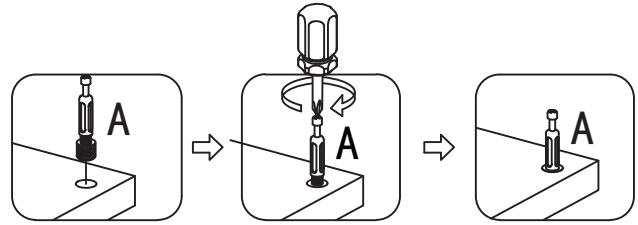


2


D x 15




Ø4 x35 mm

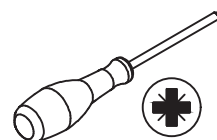


- Attach panel (16) &(17)&(19) to (18) and lock with the screw (D).

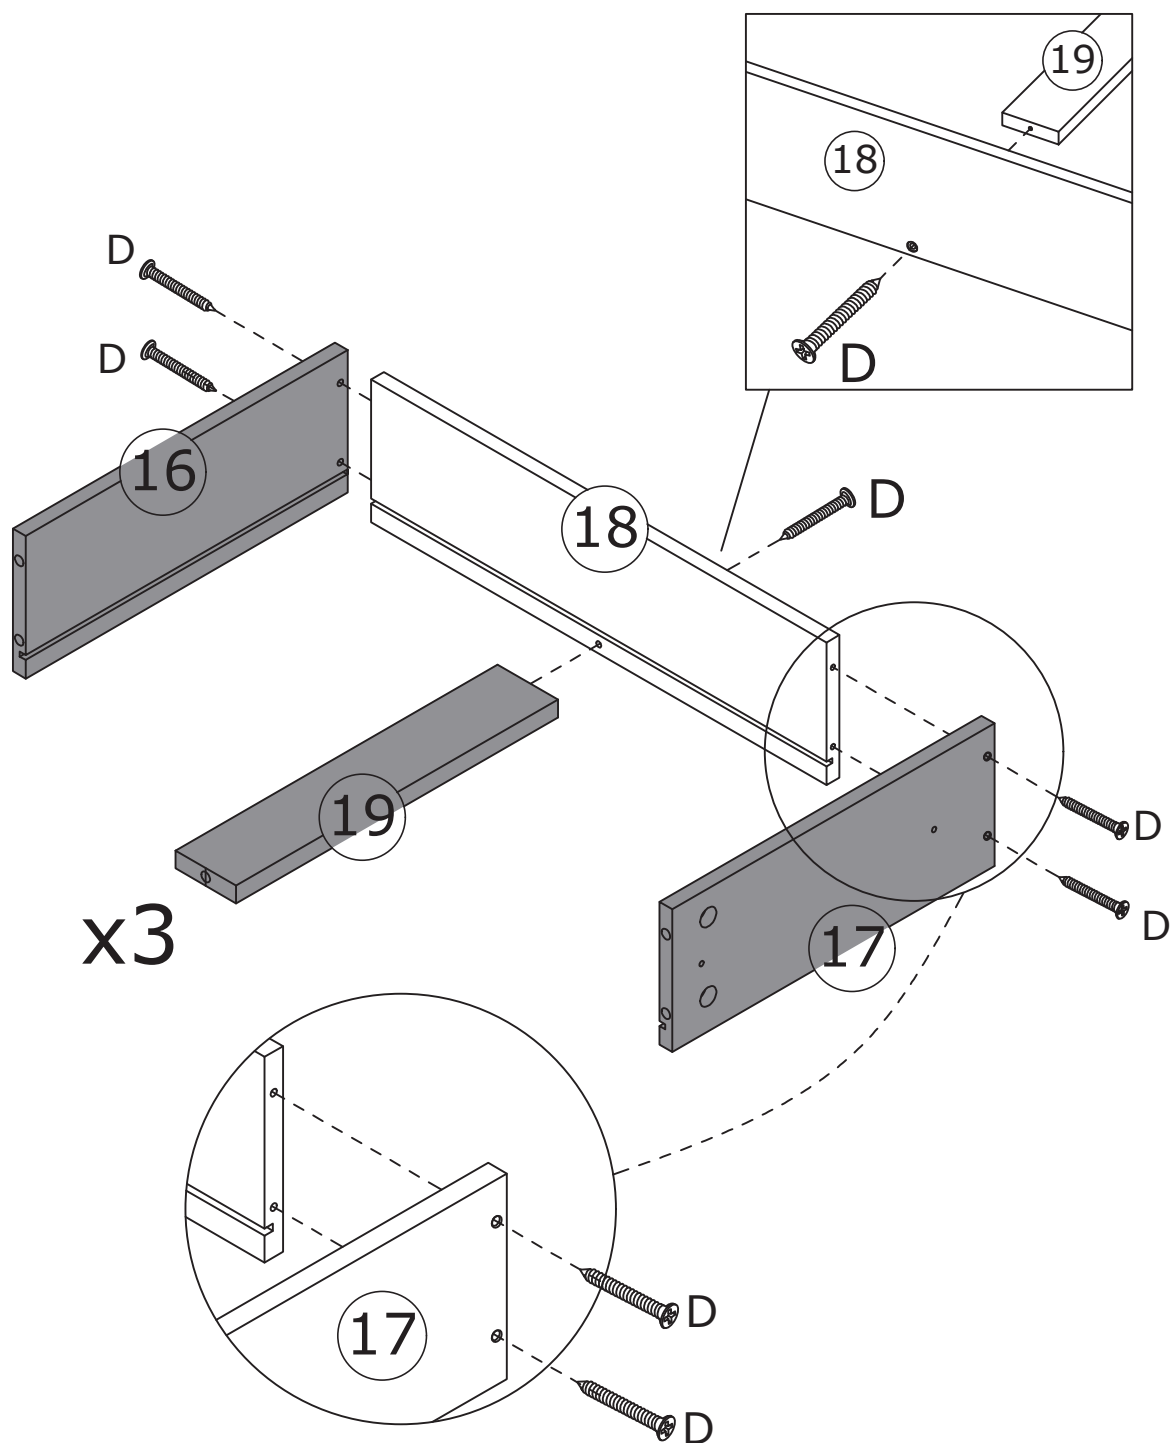

3

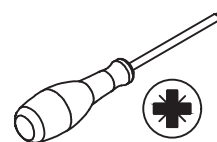

-Insert panel (20) into the grooves.

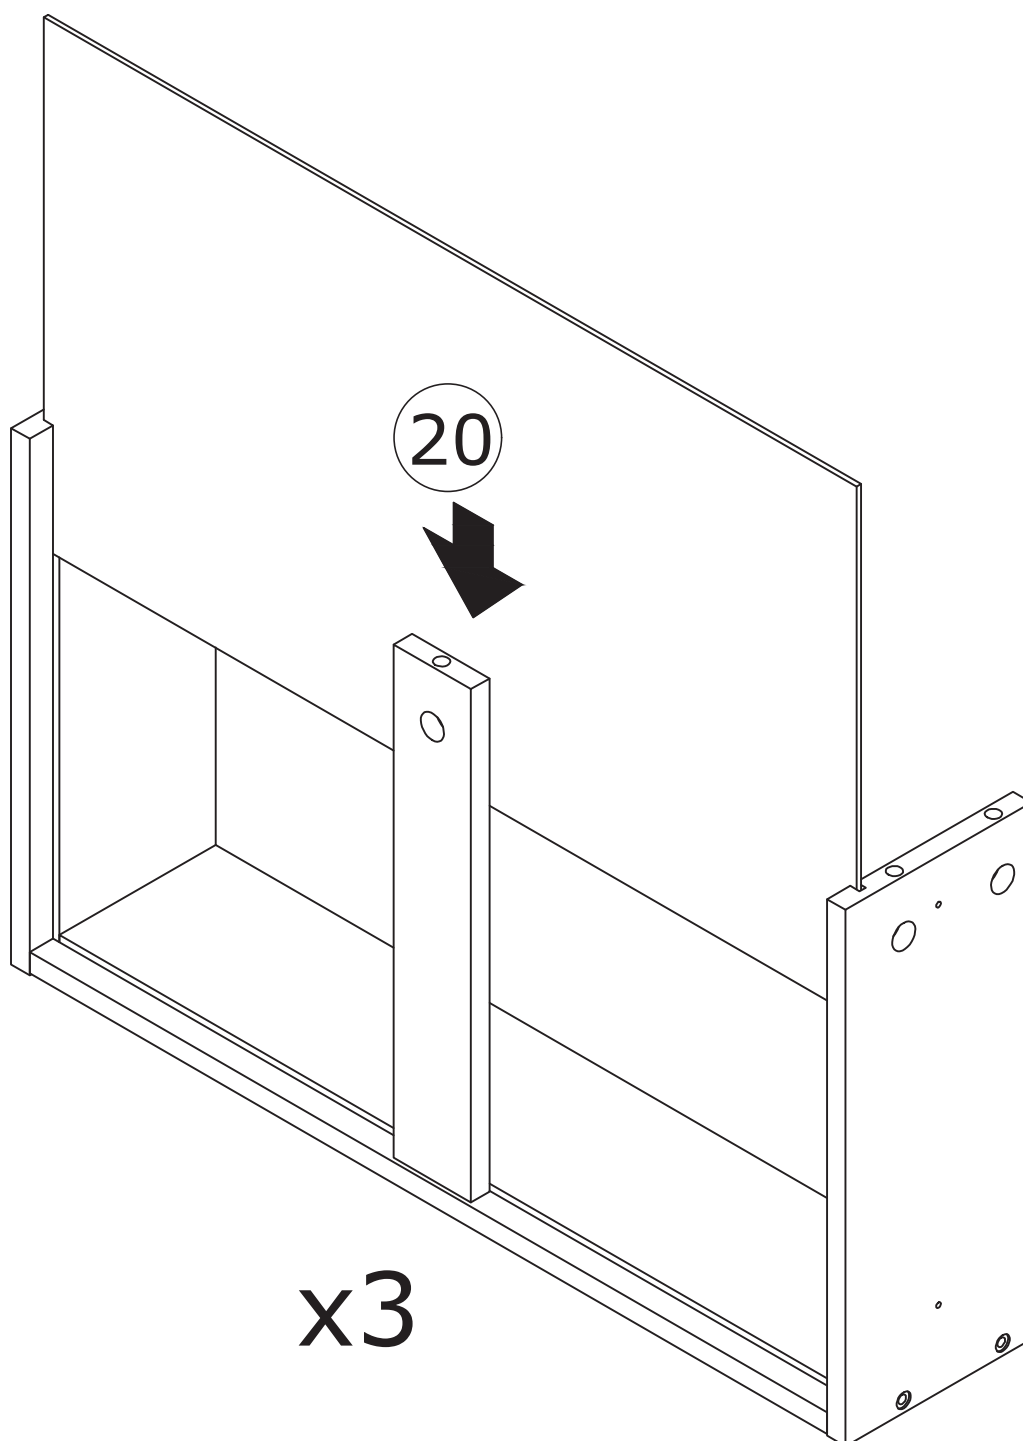

4

B x 15




Ø15 x 9.5 mm



P x 15



Ø20 mm


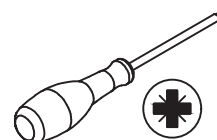


- Attach panel (13)/(14)/(15)
to (16)&(17)&(19) and lock with
cam(B).

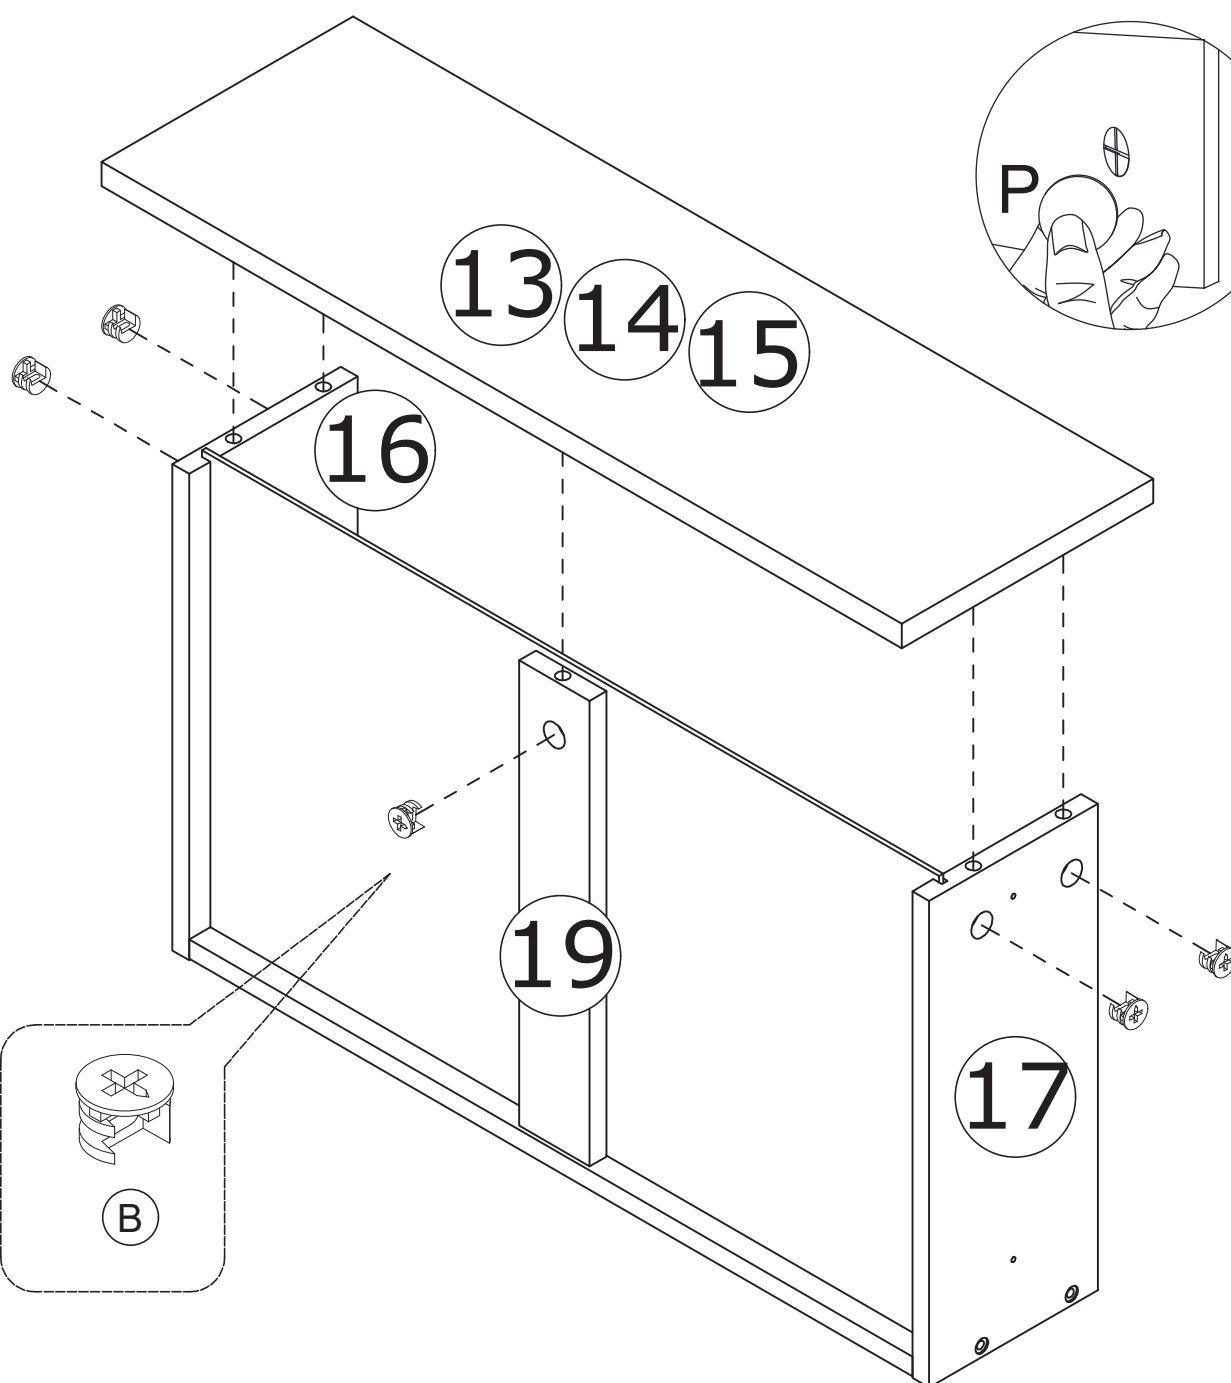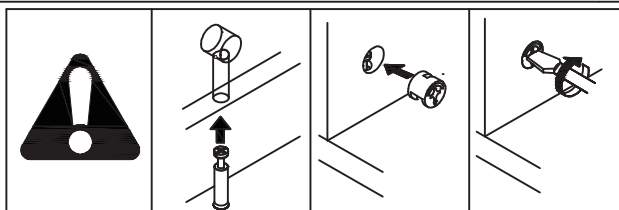

5


H x 6

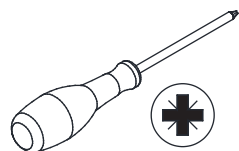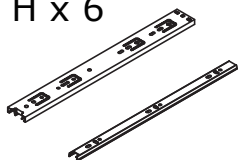



TIPS

How To Separate A Ball Bearing Slider

- 1) Pull toward arrow to open the slider until it's stops and then flip it over

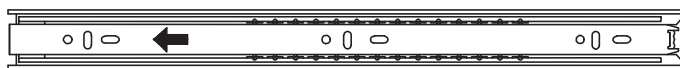


- 2) Push plastic lever down and pull apart the slider at the same time

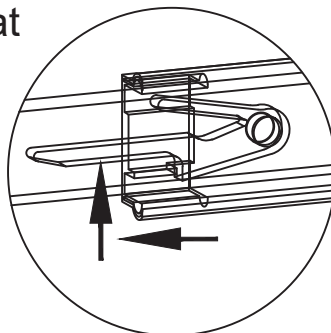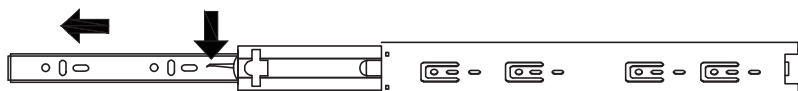

- 3) After disassembly




OUTER TRACK H-2

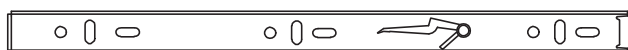

INNER TRACK H-1

How to Assemble the Slider

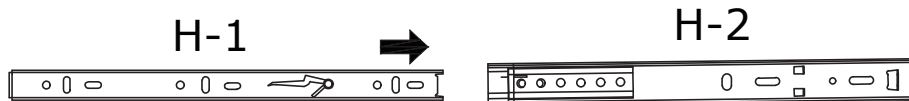

Align the outer track(H-2) with the center of the inner track(H-1) and push in.

6

E x 12




Ø3.5 x 12 mm

H x 6






H-1

300mm

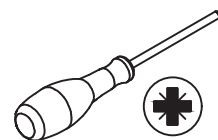


-Install drawer track (H-1) to panel (16) & (17) with screws (E).

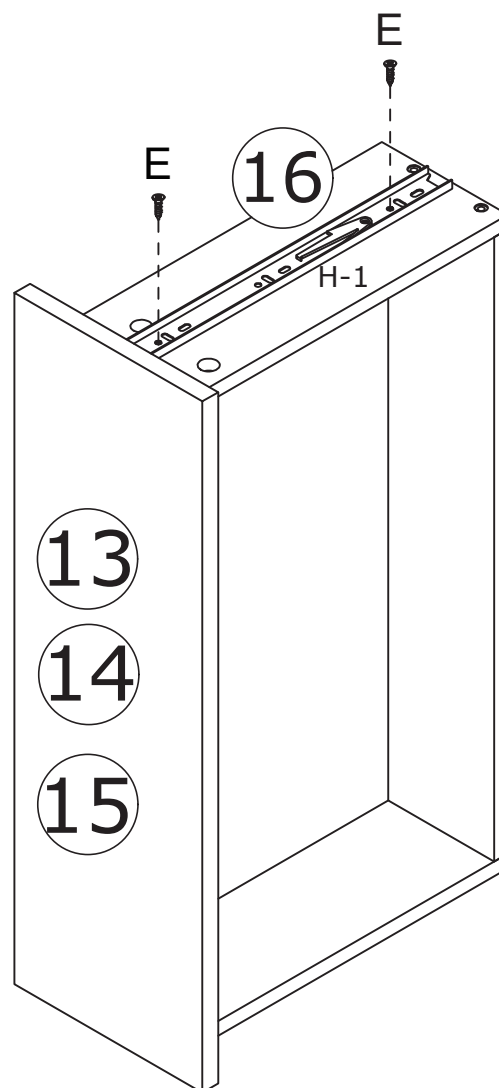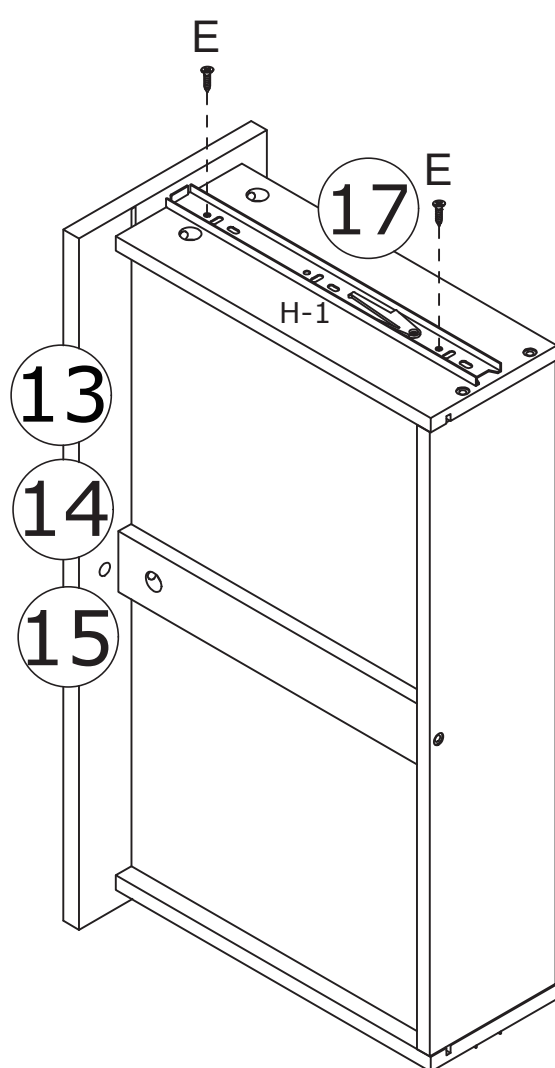
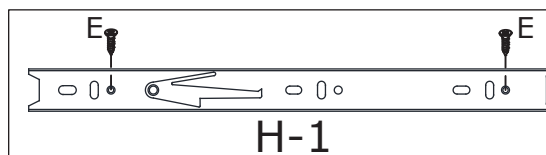


7

A x 28

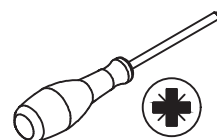 $\varnothing 7 \times 40 \text{ mm}$ 

- Screw the cam bolt (A) into the panel (1) & (2) & (4) .

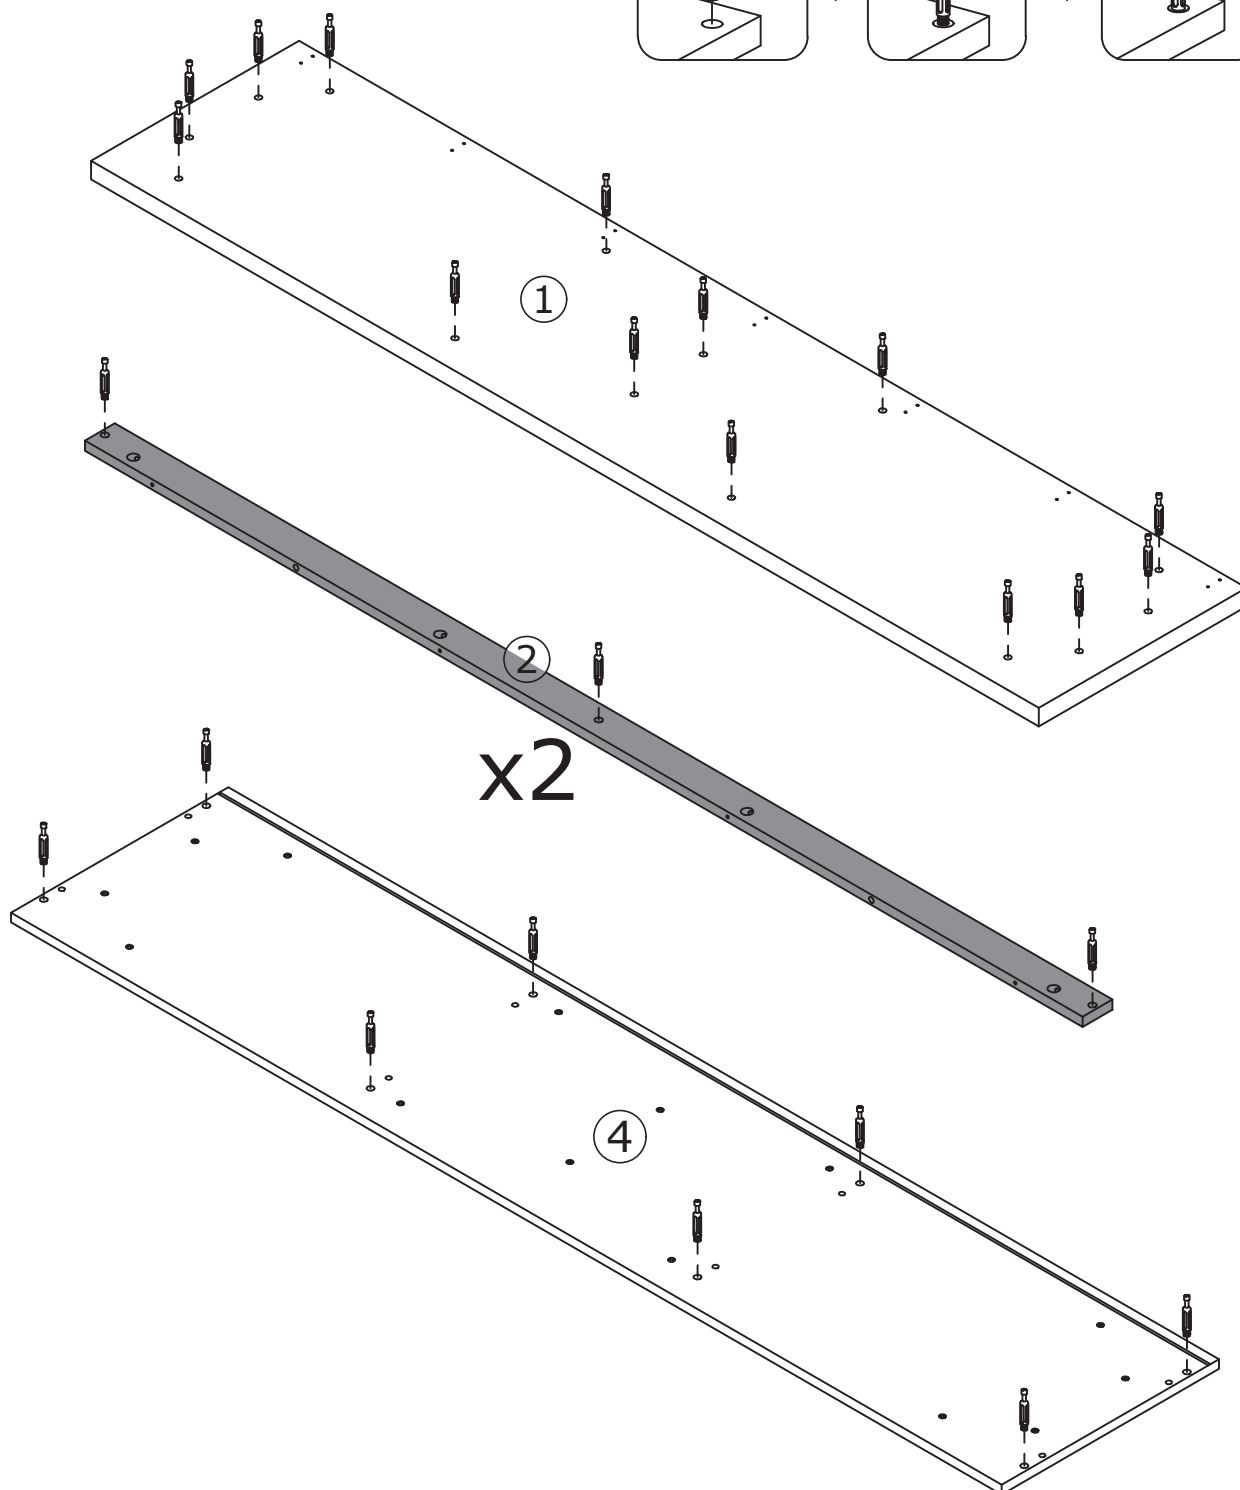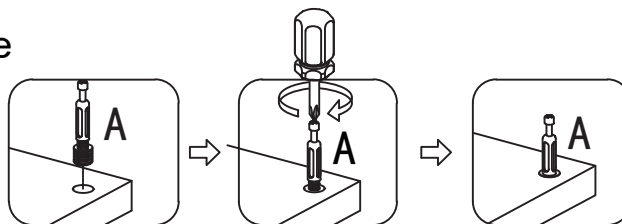


8




B x 6

 $\varnothing 15 \times 9.5 \text{ mm}$

P x 6

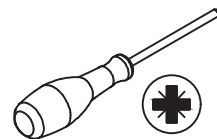 $\varnothing 20$ 

- Attach panel (2) to (3) and lock with cam(B).

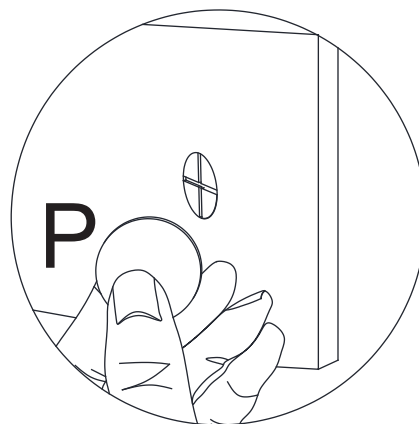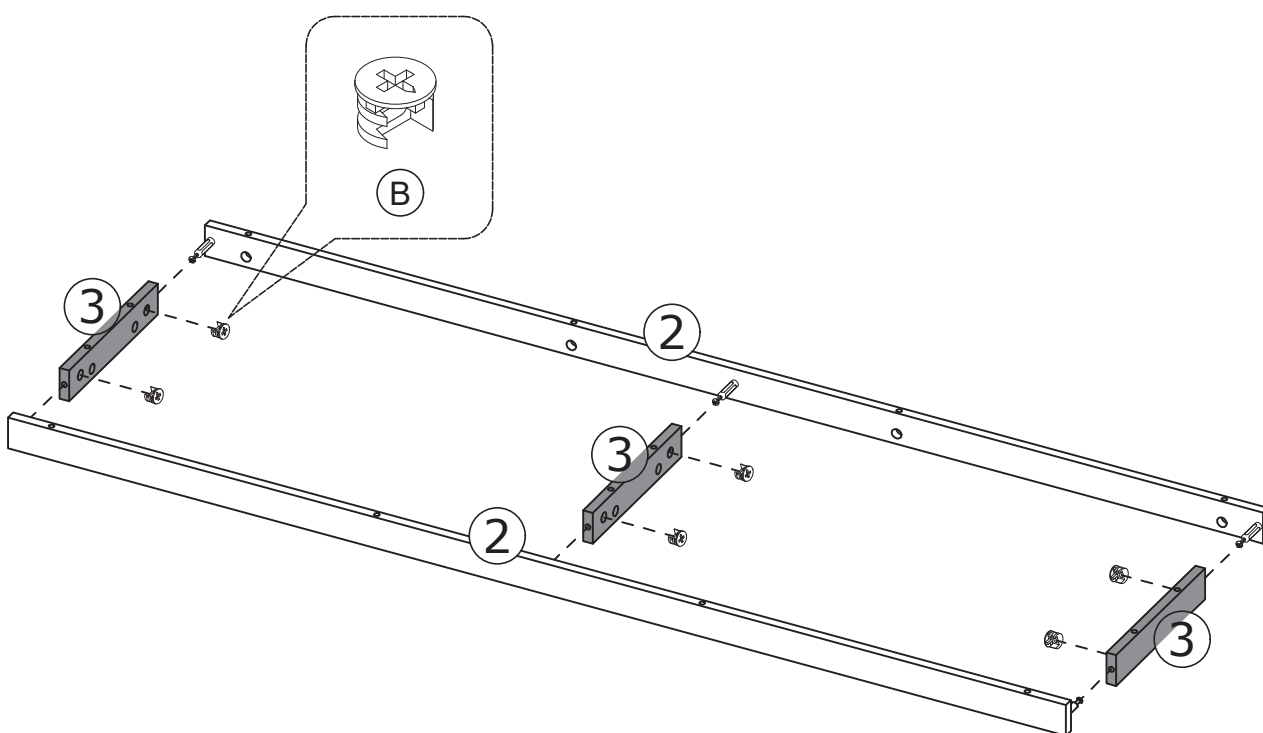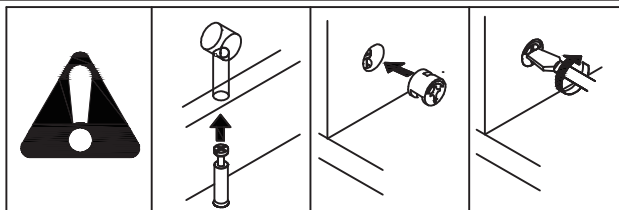


9

B x 14



Ø15 x 9.5 mm

N x 3

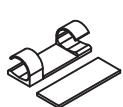

R x 1




R - 1 x 7

P x 14







Ø20

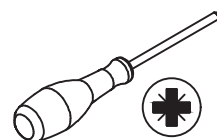


- Paste LED in the slot of panel (1), Fasten the lamp belt with a buckle .

- Attach panel (2) & (3) to (1) and lock with cam(B).

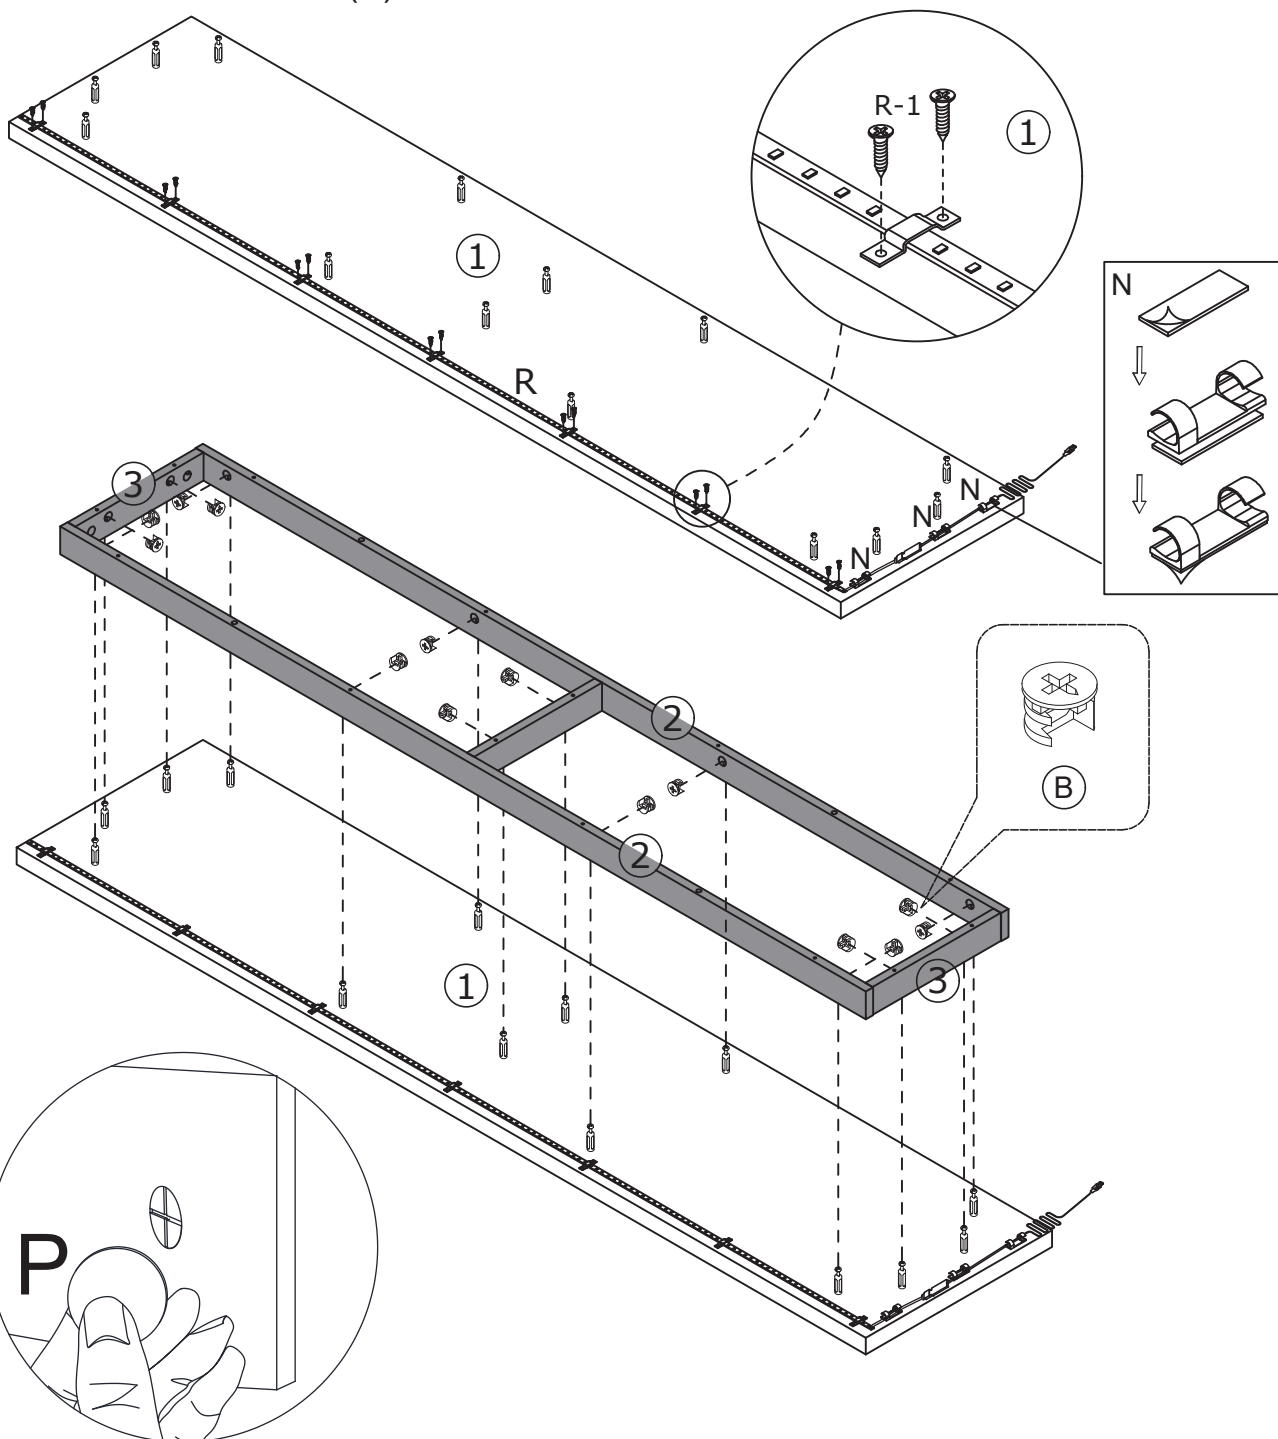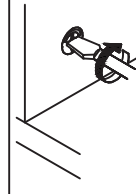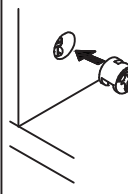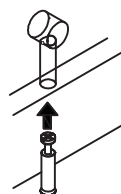


10

C x 4

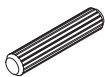


Ø 8 x 30 mm




F x 14

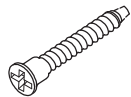

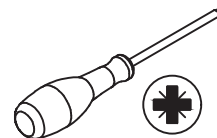


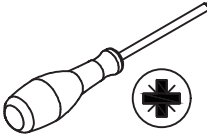
Ø 5 x 40 mm

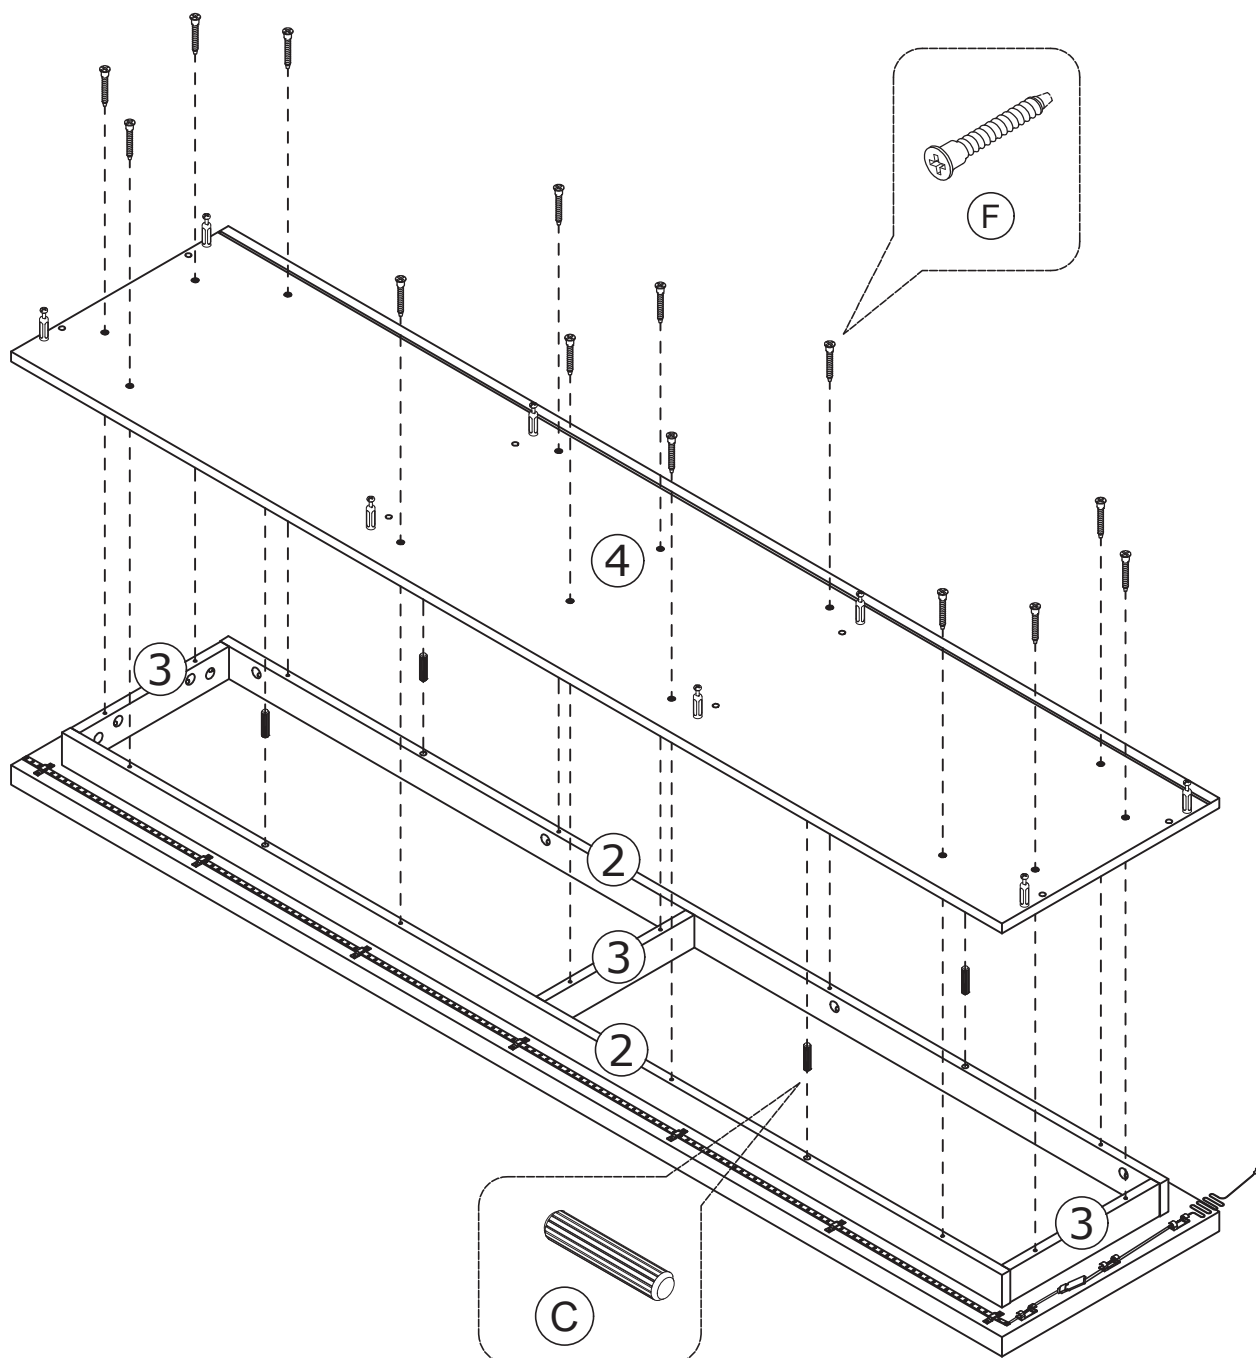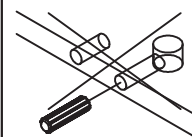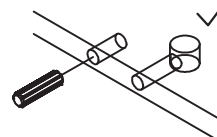

- Attach panel (4) to (2) & (3) and lock with screw (F) and wood dowels (C).



11






<p>H x 2</p>  <p>H-2 300mm</p>	<p>E x 6</p>  <p>3.5 x 12 mm</p>	<p>A x 4</p>  <p>Ø 7 x 40 mm</p>	
---	---	---	---

- Install drawer track (H-2) to panel (5)&(6) with screws (E).




Step 1

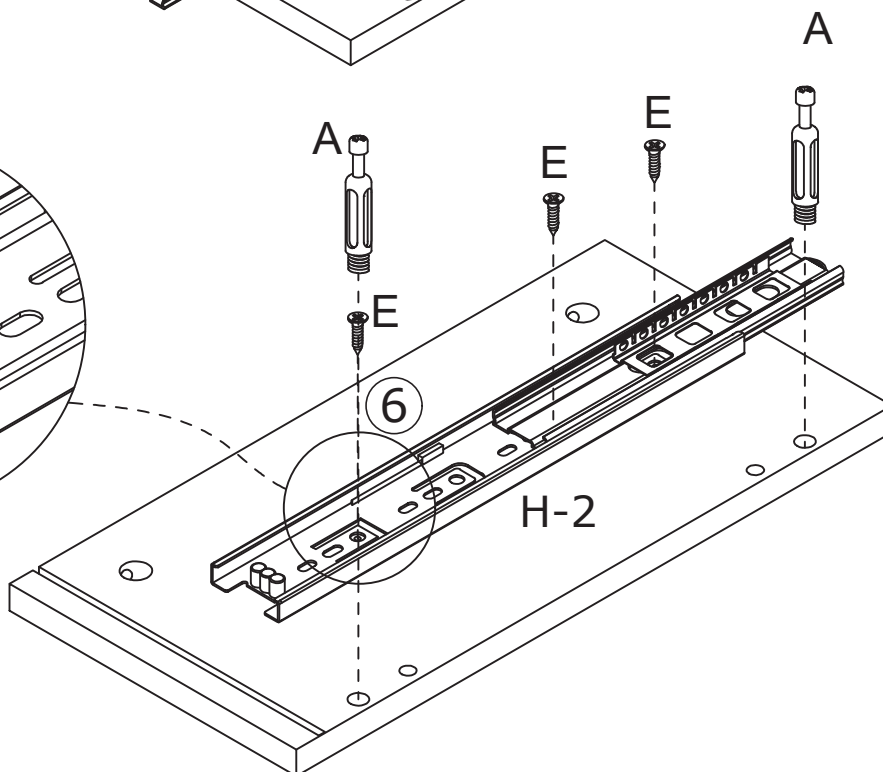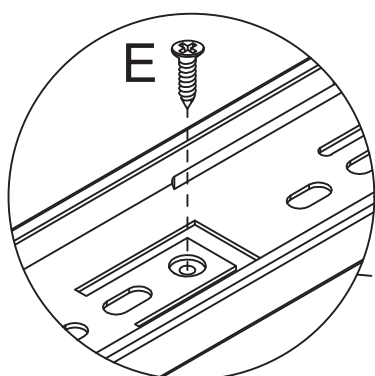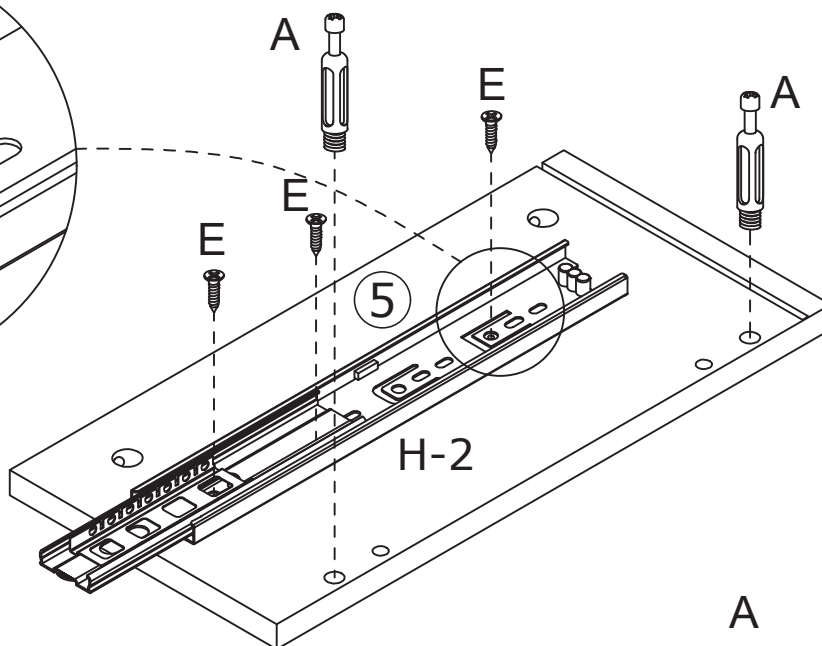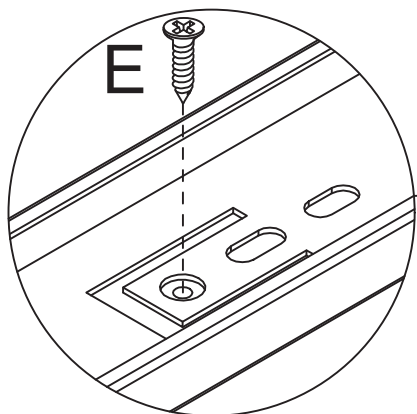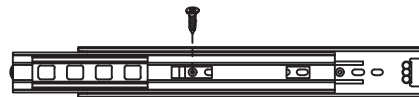

Step 2



12


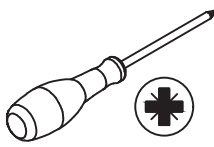
<p>H x 4</p>  <p>H-2</p> <p>300mm</p>	<p>E x 12</p>  <p>3.5 x 12 mm</p>	
--	--	---

- Install drawer track (H-2) to panel (7) with screws (E).


Step 1




Step 2

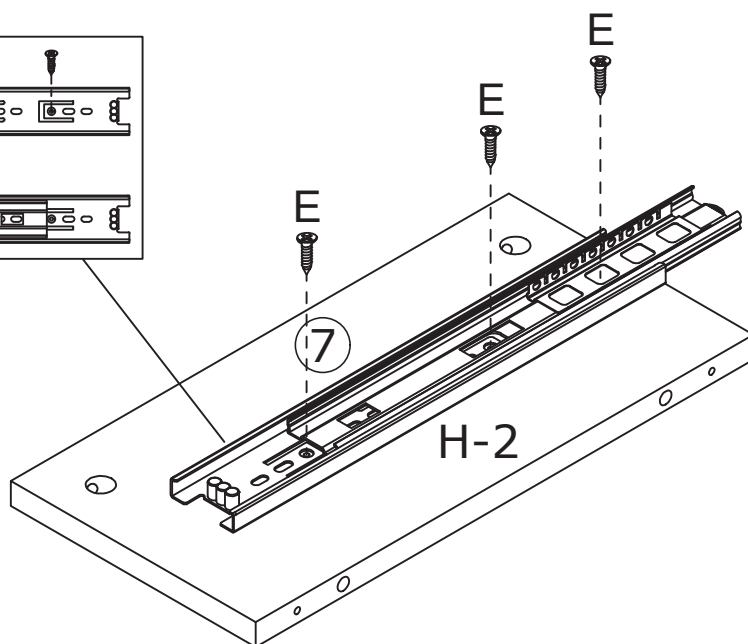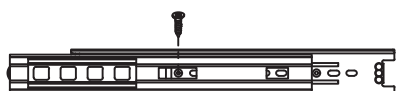

Step 1

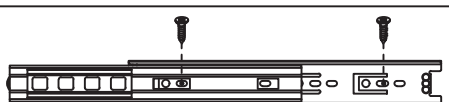


Step 2

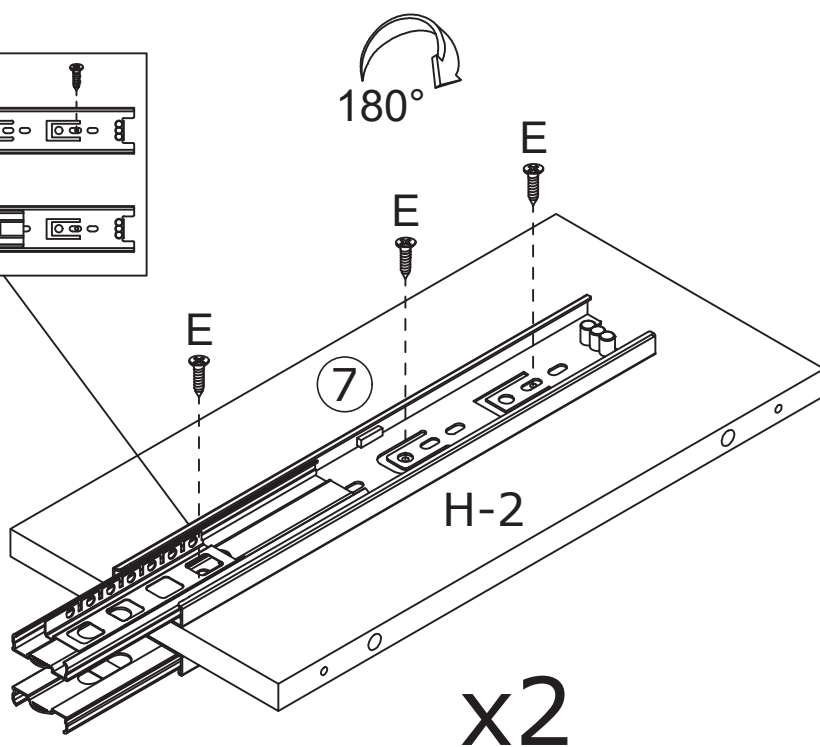



13



- Screw (E) passes through the repulsor (Q) to lock to plate (8).

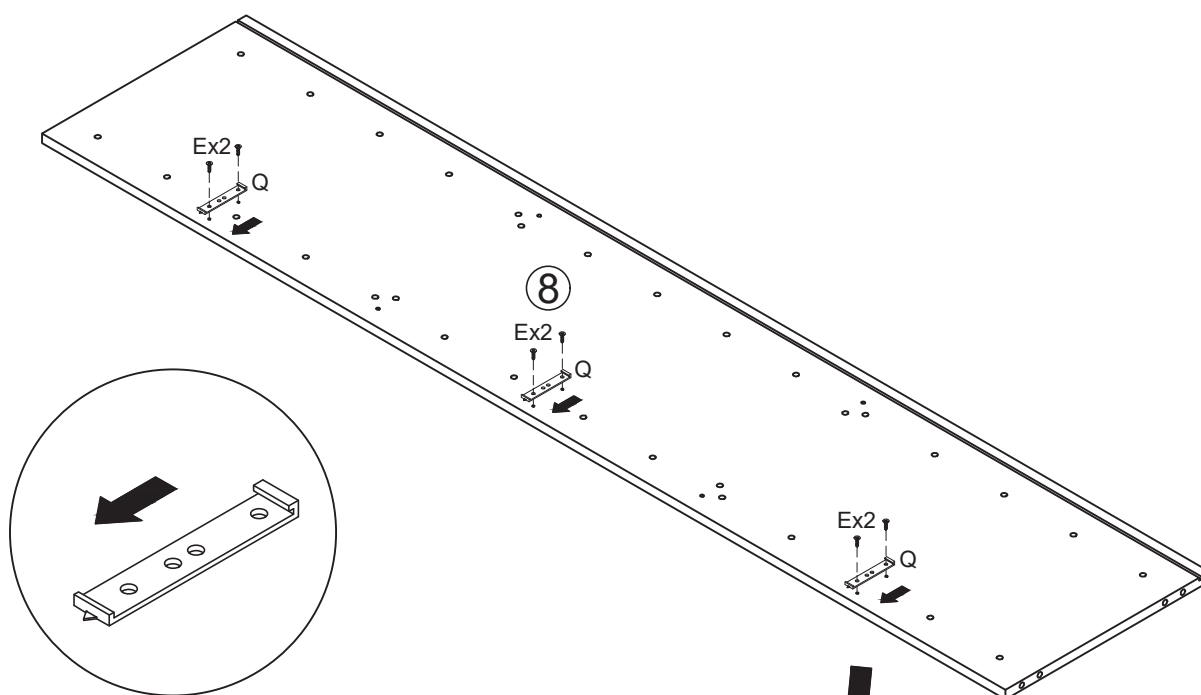

The direction of the arrow
is mounted on the front.

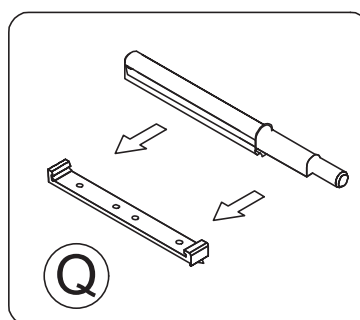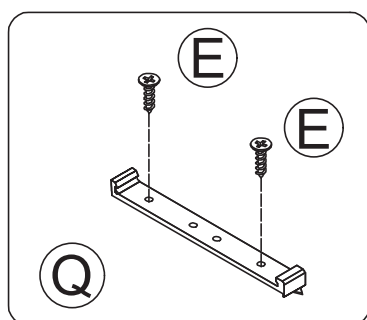

14

B x 4




Ø 15 x 9.5 mm

C x 8



Ø 8 x 30 mm

F x 4

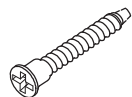


Ø 5 x 40 mm

P x 4












Ø 20

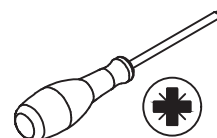

- Attach panel (7) to (8) and lock with screw (F) and wood dowels (C).


- Attach panel (5)&(6) to (8) and lock with cam(B) and wood dowels (C).

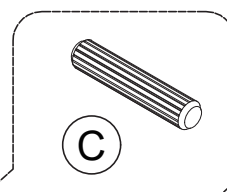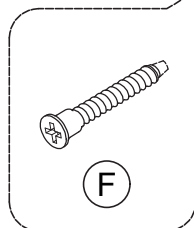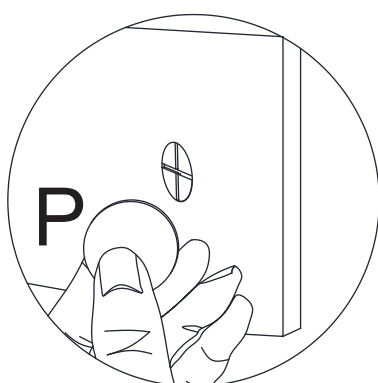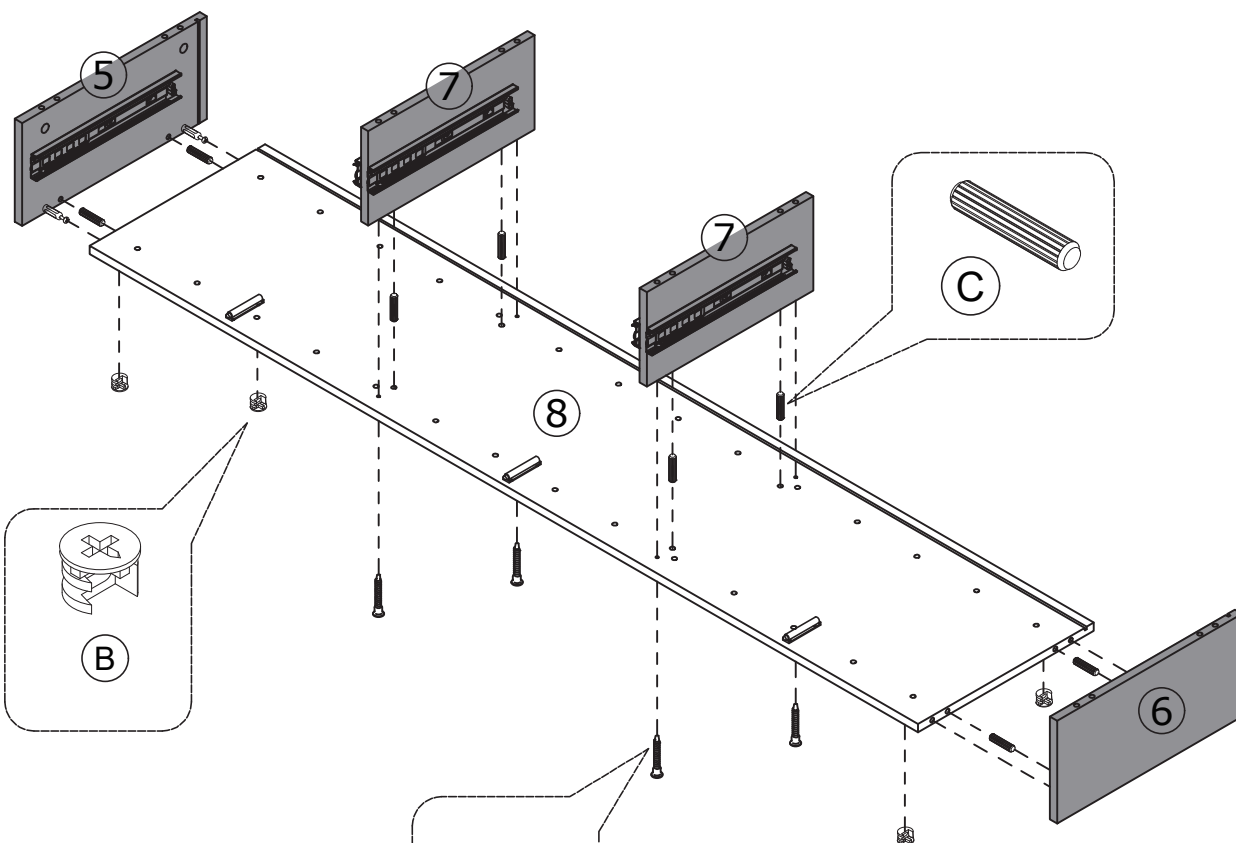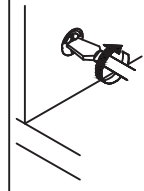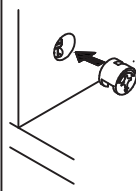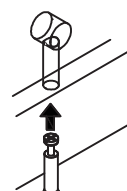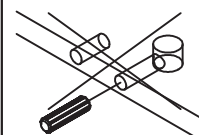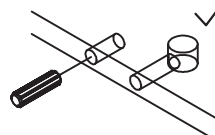

15

No parts required for this step.

-Insert panel (9) into the grooves.

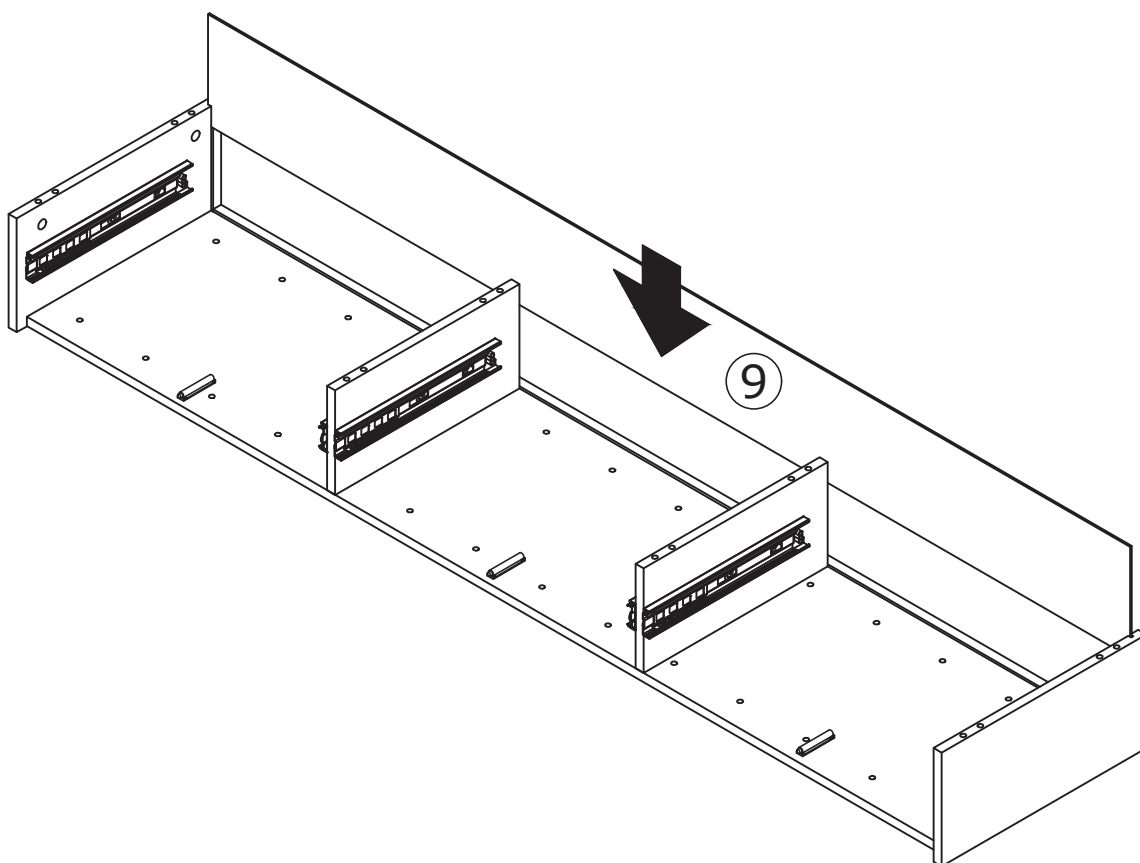


16

B x 8



Ø 15 x 9.5 mm

C x 8

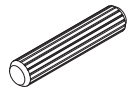


Ø 8 x 30 mm







P x 8



Ø 20

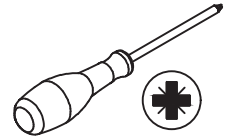

- Attach panel (5)&(6)&(7) to (4) and lock with cam(B) and wood dowels (C).

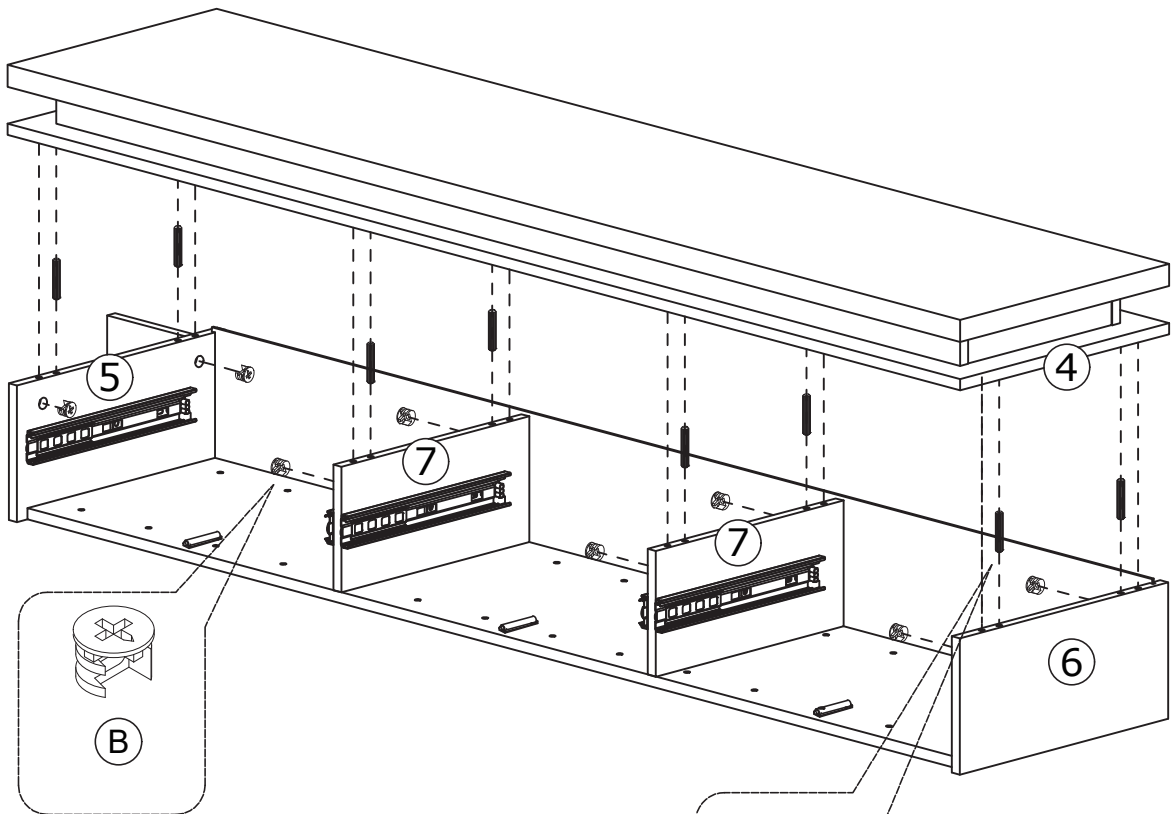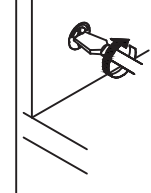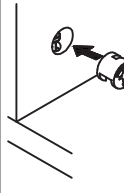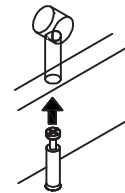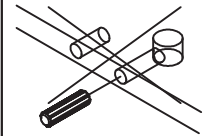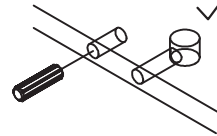

B

C


P

17





M x 10




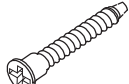

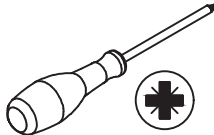
M-1

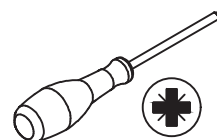


- Screws (M-1) are threaded through the fixing piece (M) to the plank (9).

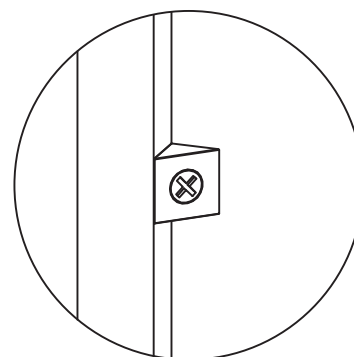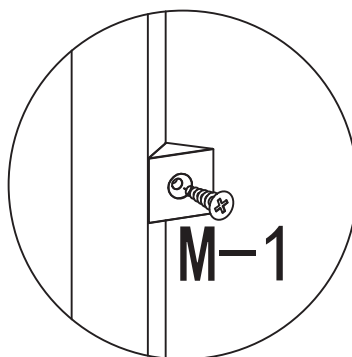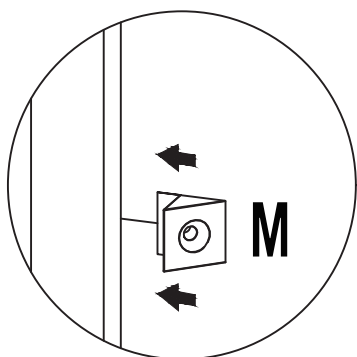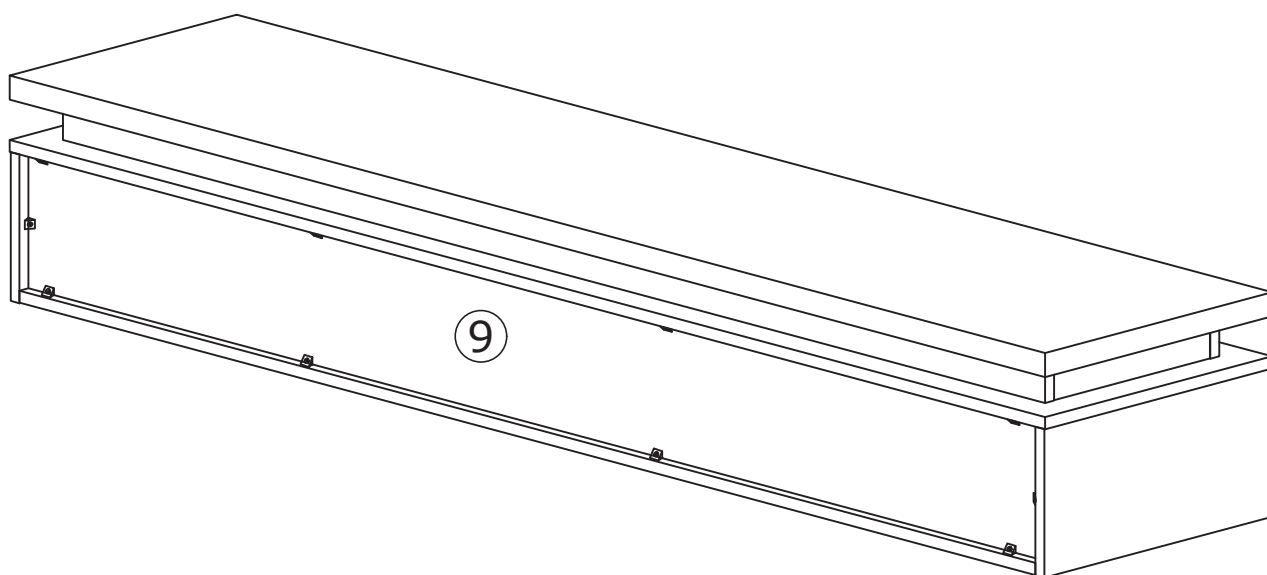

18


C x 4  $\varnothing 8 \times 30 \text{ mm}$	F x 5  $\varnothing 5 \times 40 \text{ mm}$	O x 10  $\varnothing 13$	
---	---	--	---

- The footpegs (O) are mounted to the panel (12).
- Attach panel (11) to (12) and lock with screw (F) and wood dowels (C).

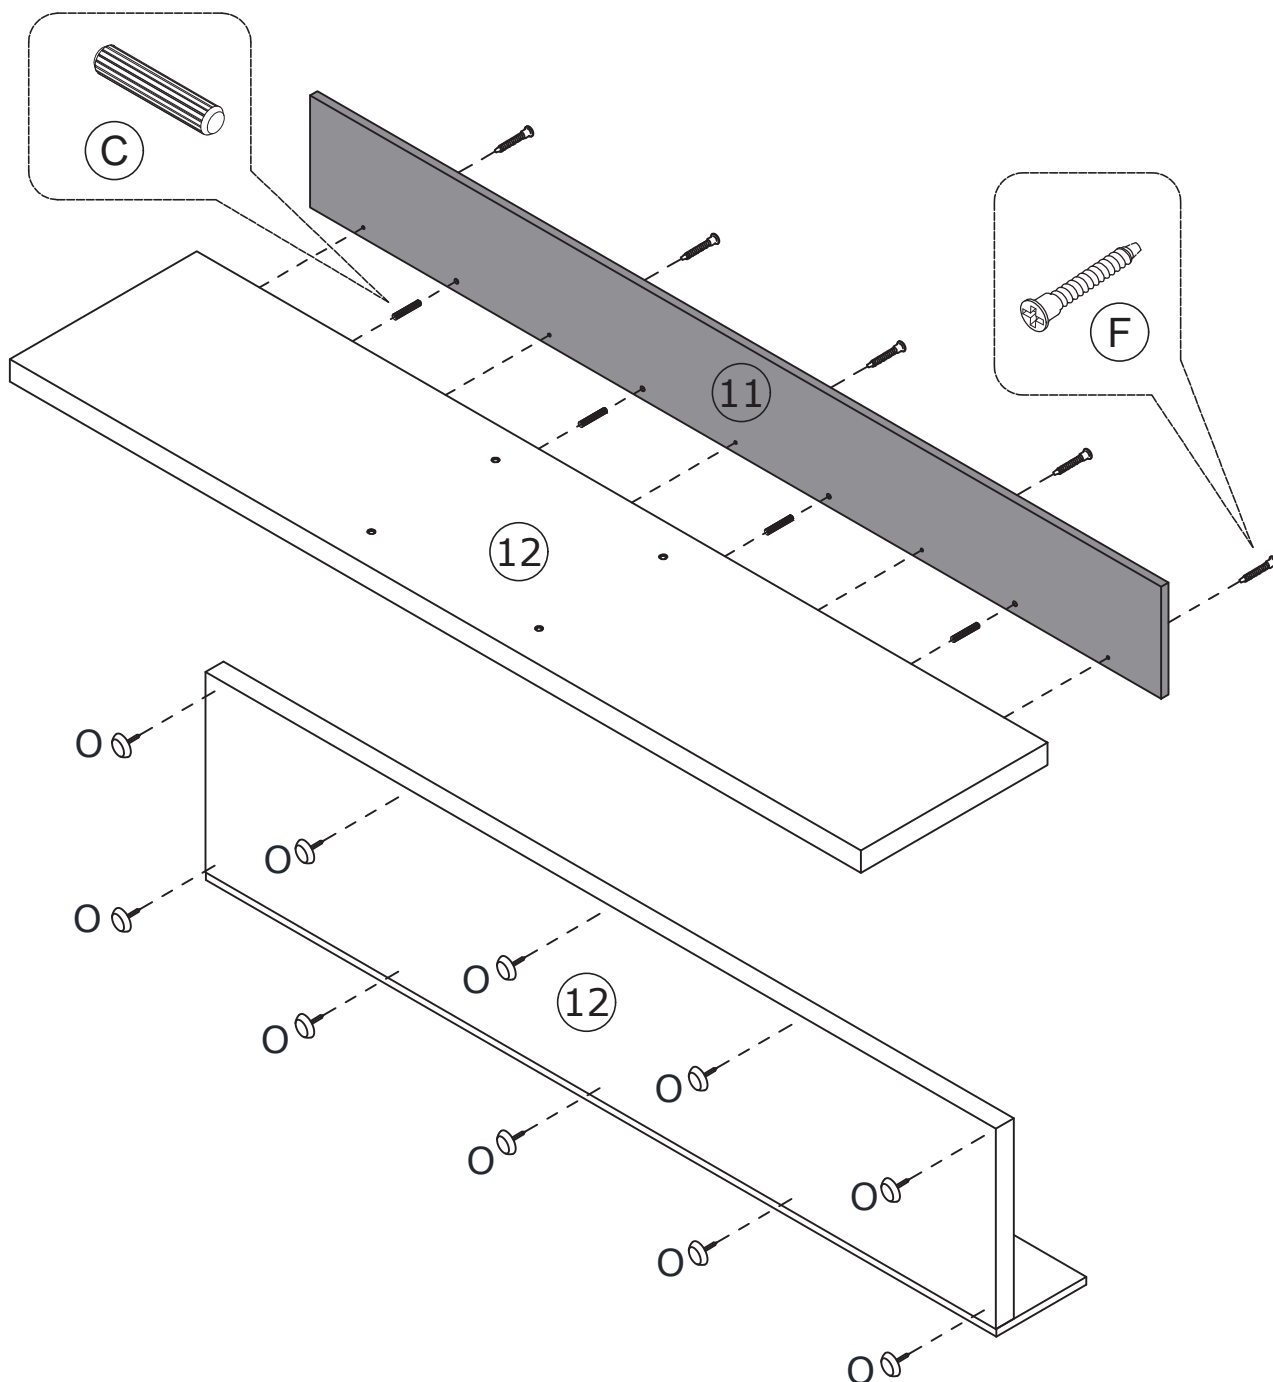


19

No parts required for this step.

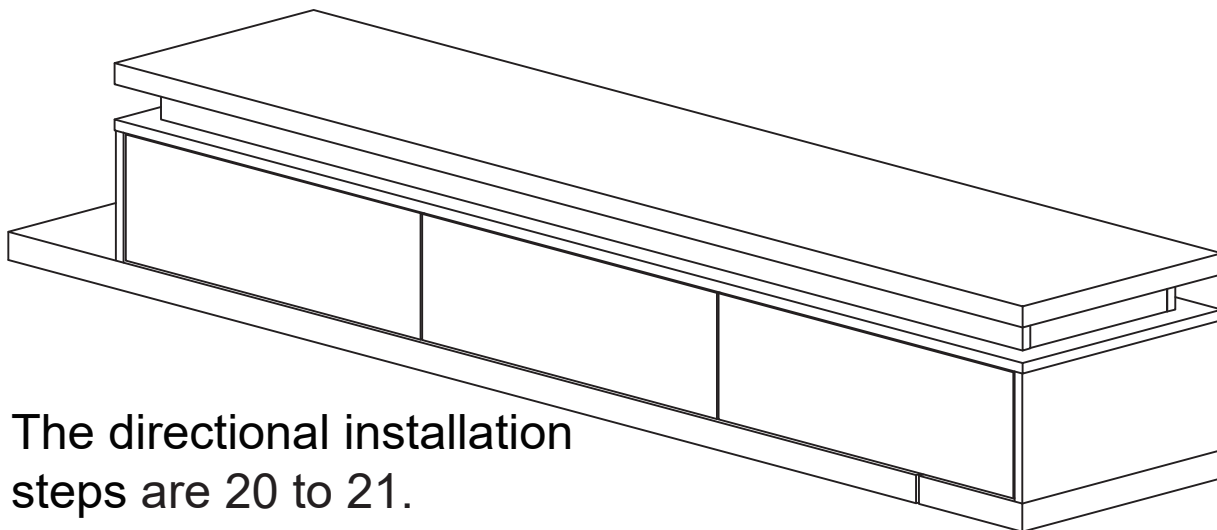


The directional installation steps are 20 to 21.

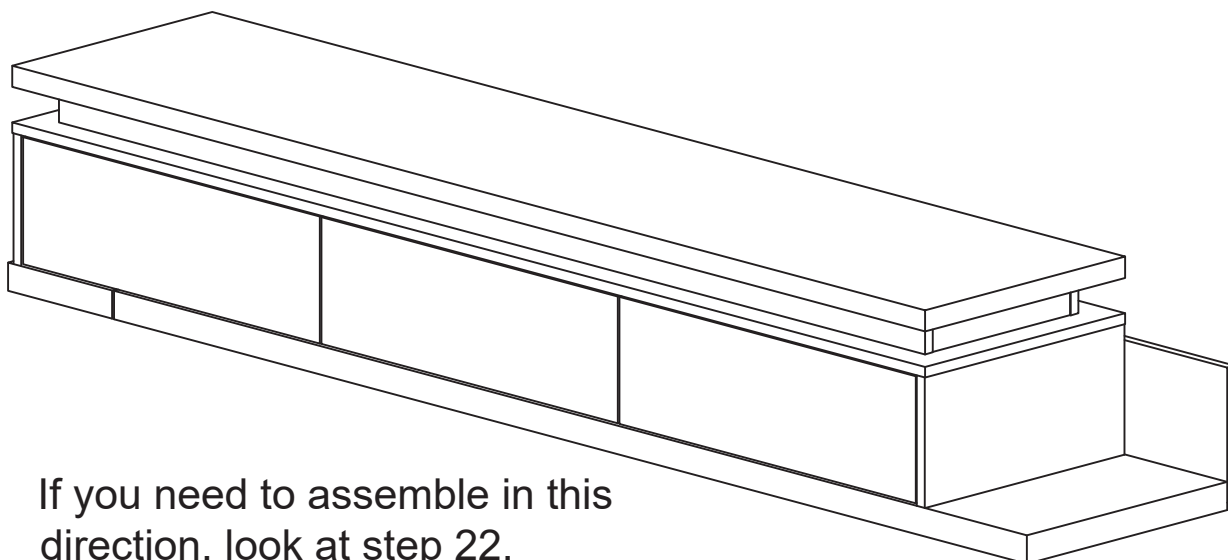


If you need to assemble in this direction, look at step 22.
Assemble the baseboard 10 to the left of plate 8, the same way you assembled the rest of the steps.


20

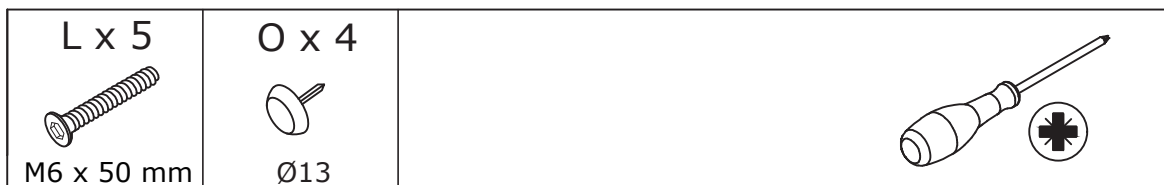


- The footpegs (O) are mounted to the panel (10).
- Attach panel (10) to (8) and lock with screw (L).

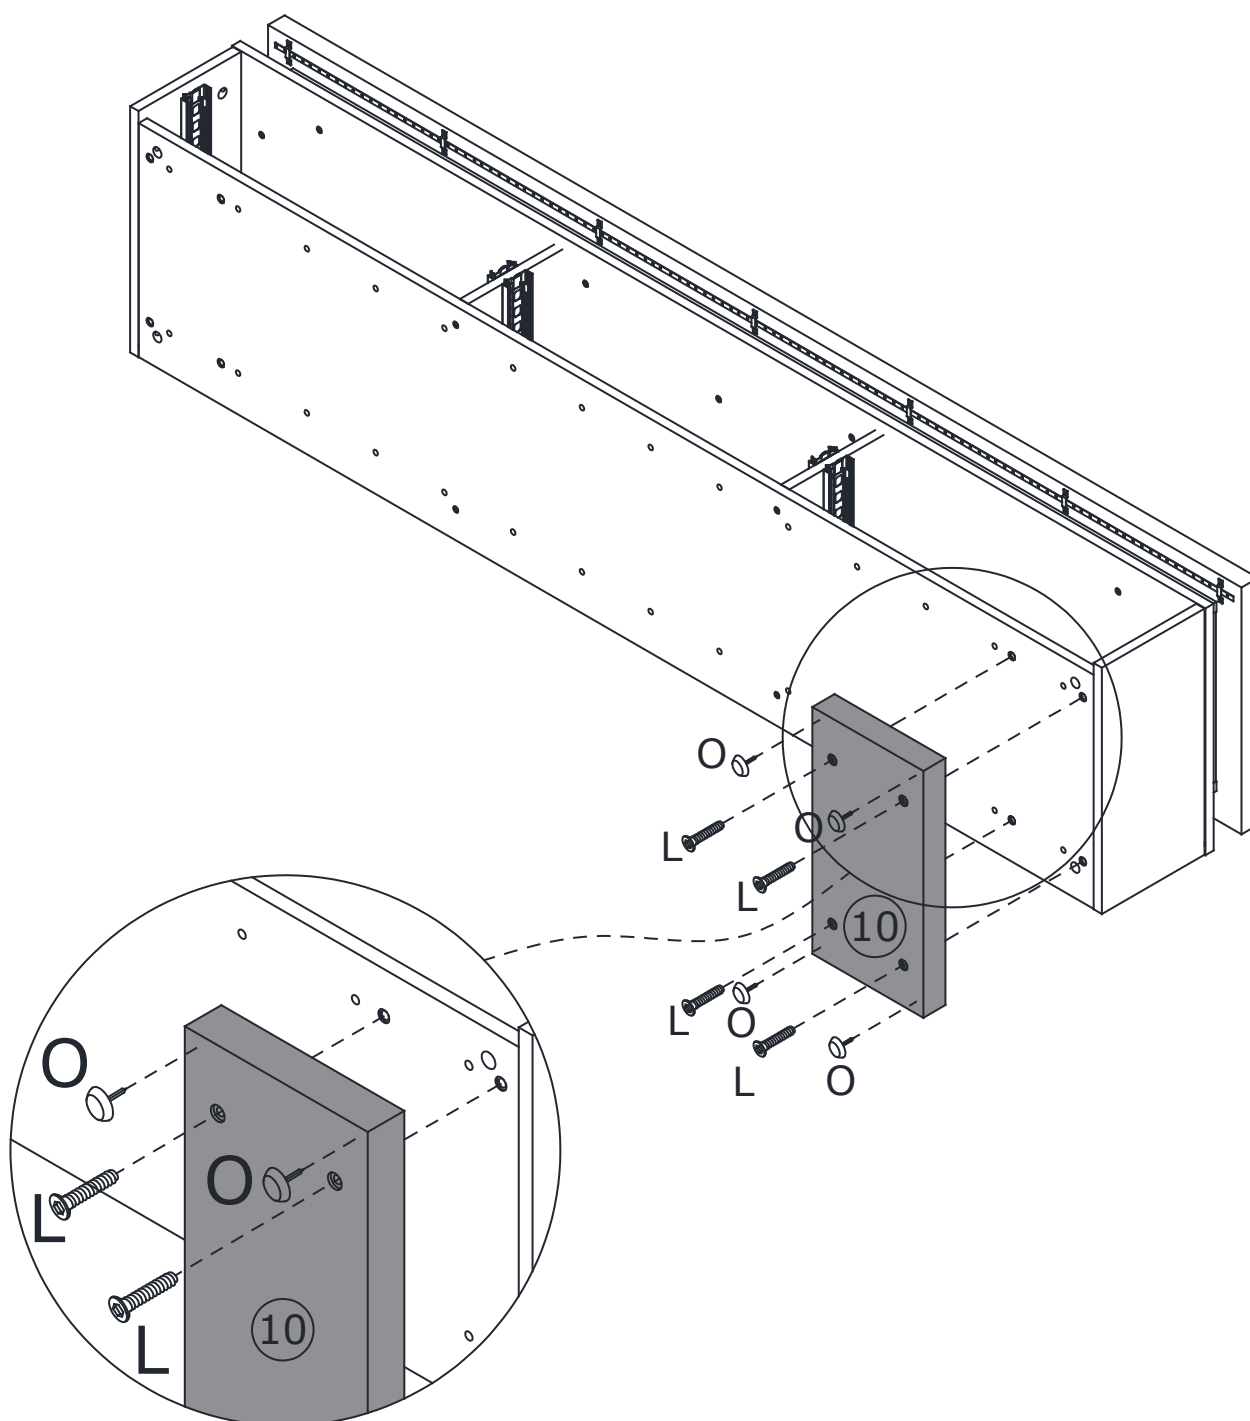

21

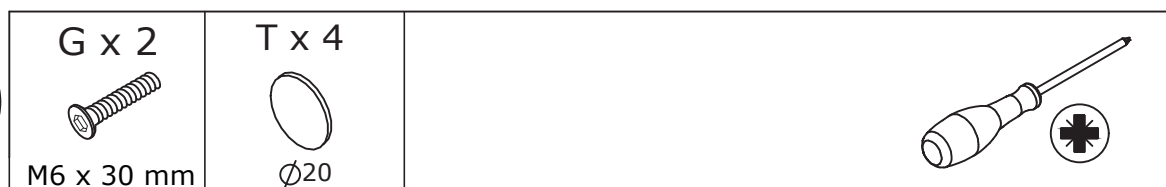


- Attach panel (8) to (12) and lock with screw (G).

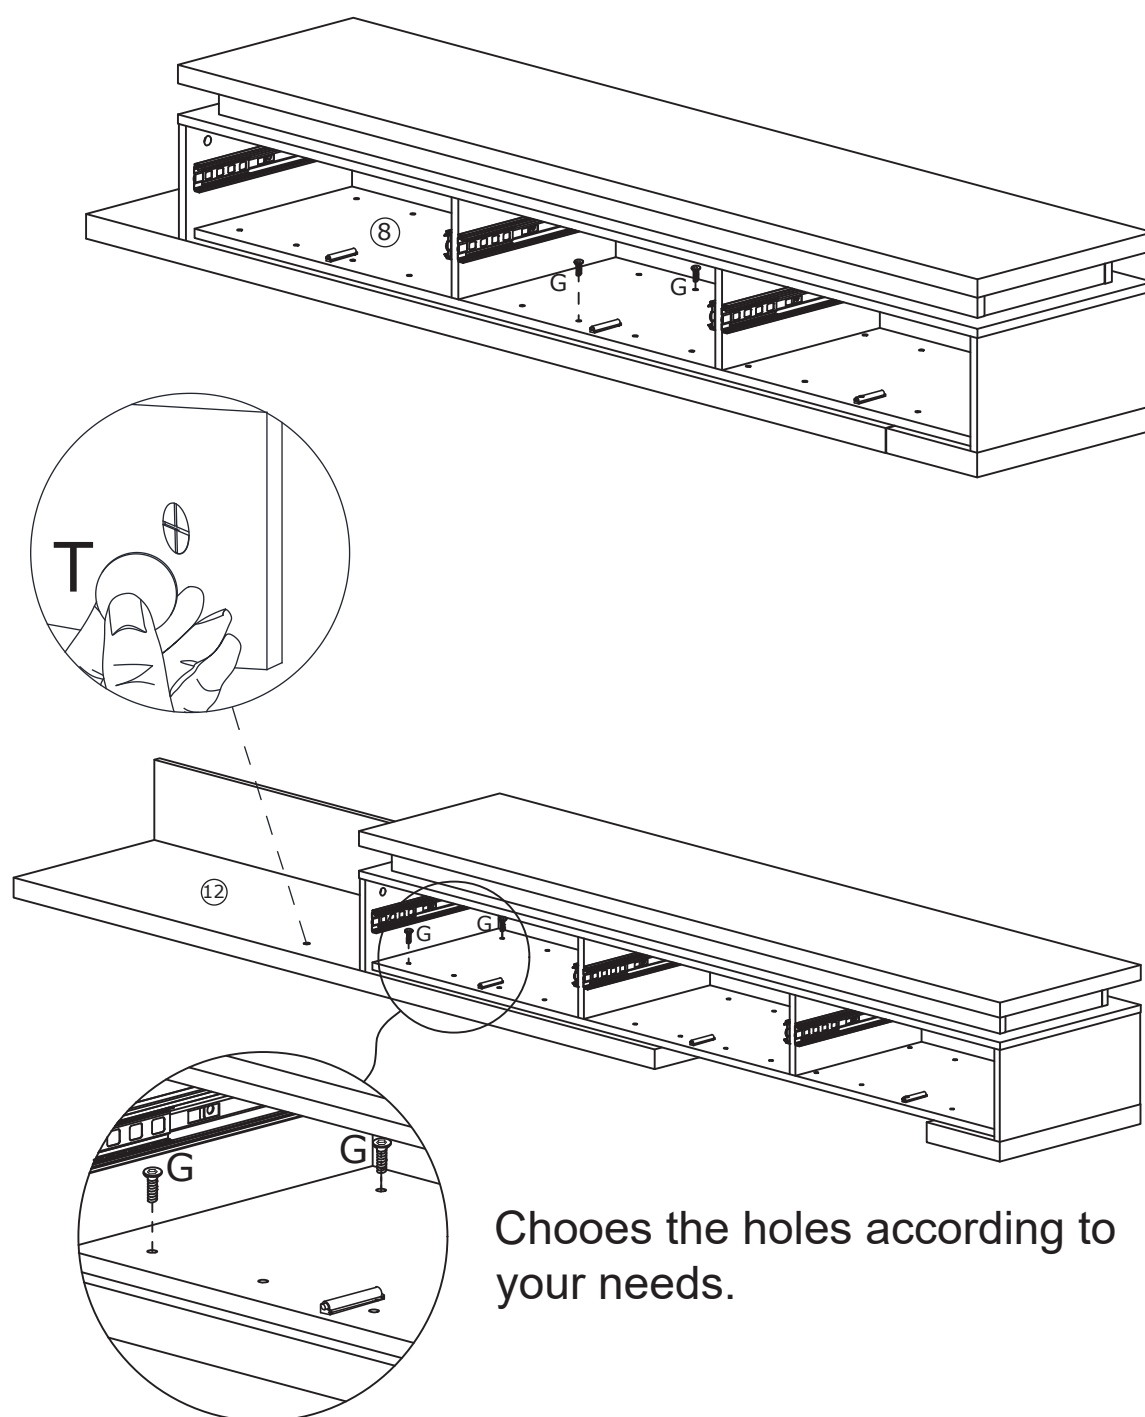

Chooses the holes according to your needs.

22


No parts required for this step.

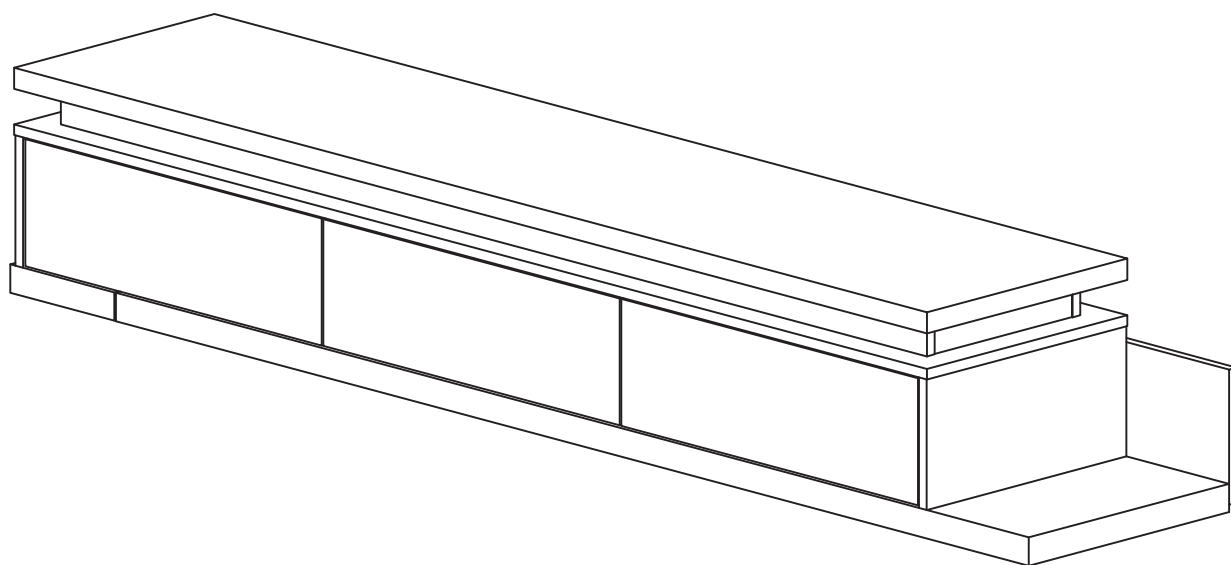


23

No parts required for this step.

- Insert the drawers

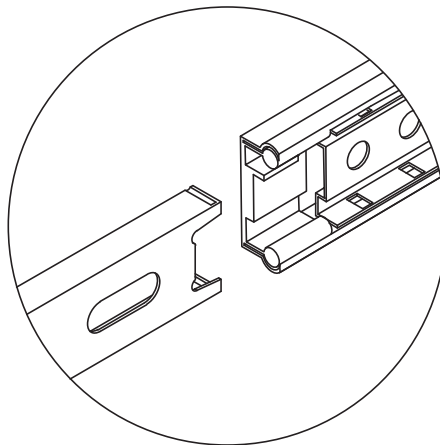

Align the outer track with the center of the inner track and push in.

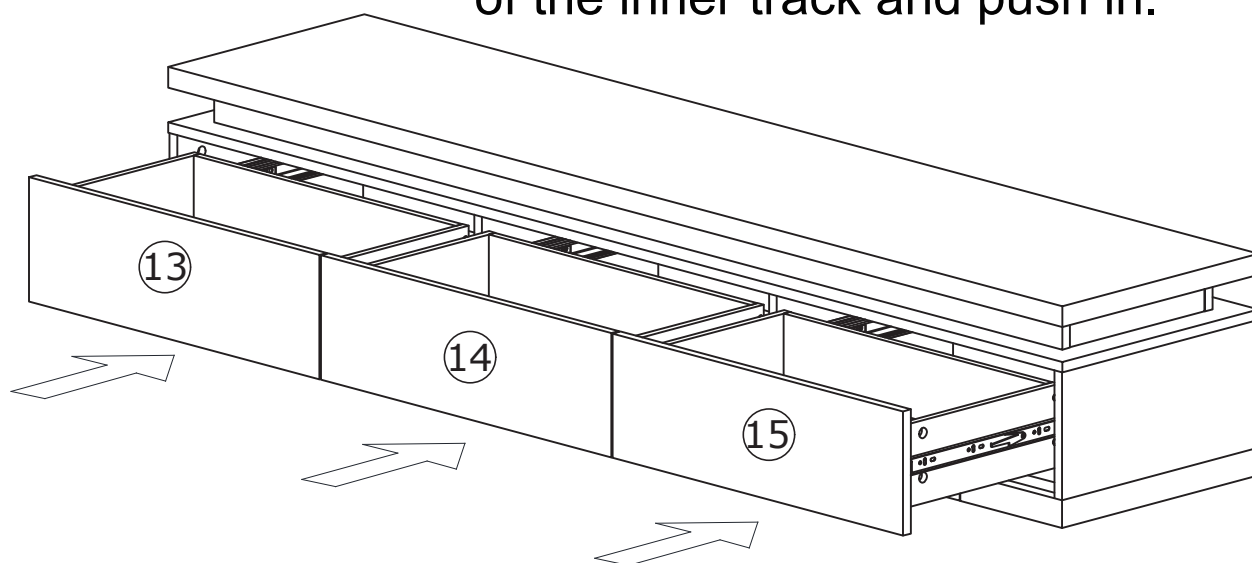

24

No parts required for this step.

