


60 Mins

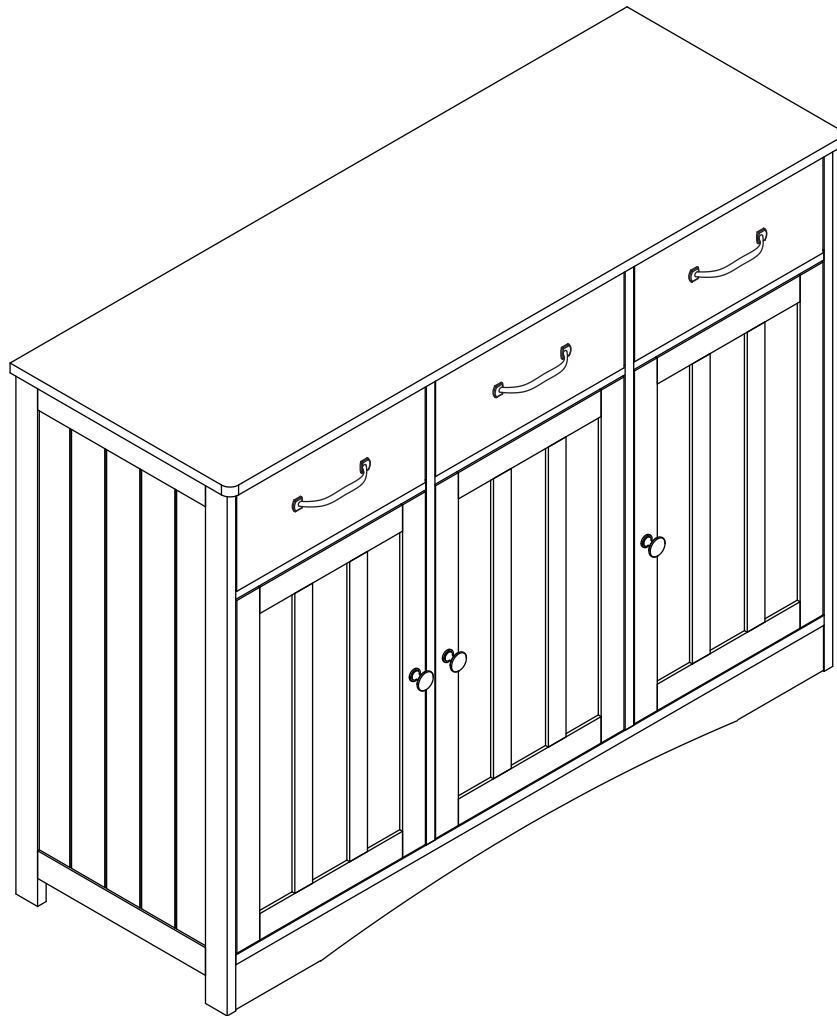

x2




CUSTOMER FIRST, SERVICE FOREMOST!

Questions? Issues?











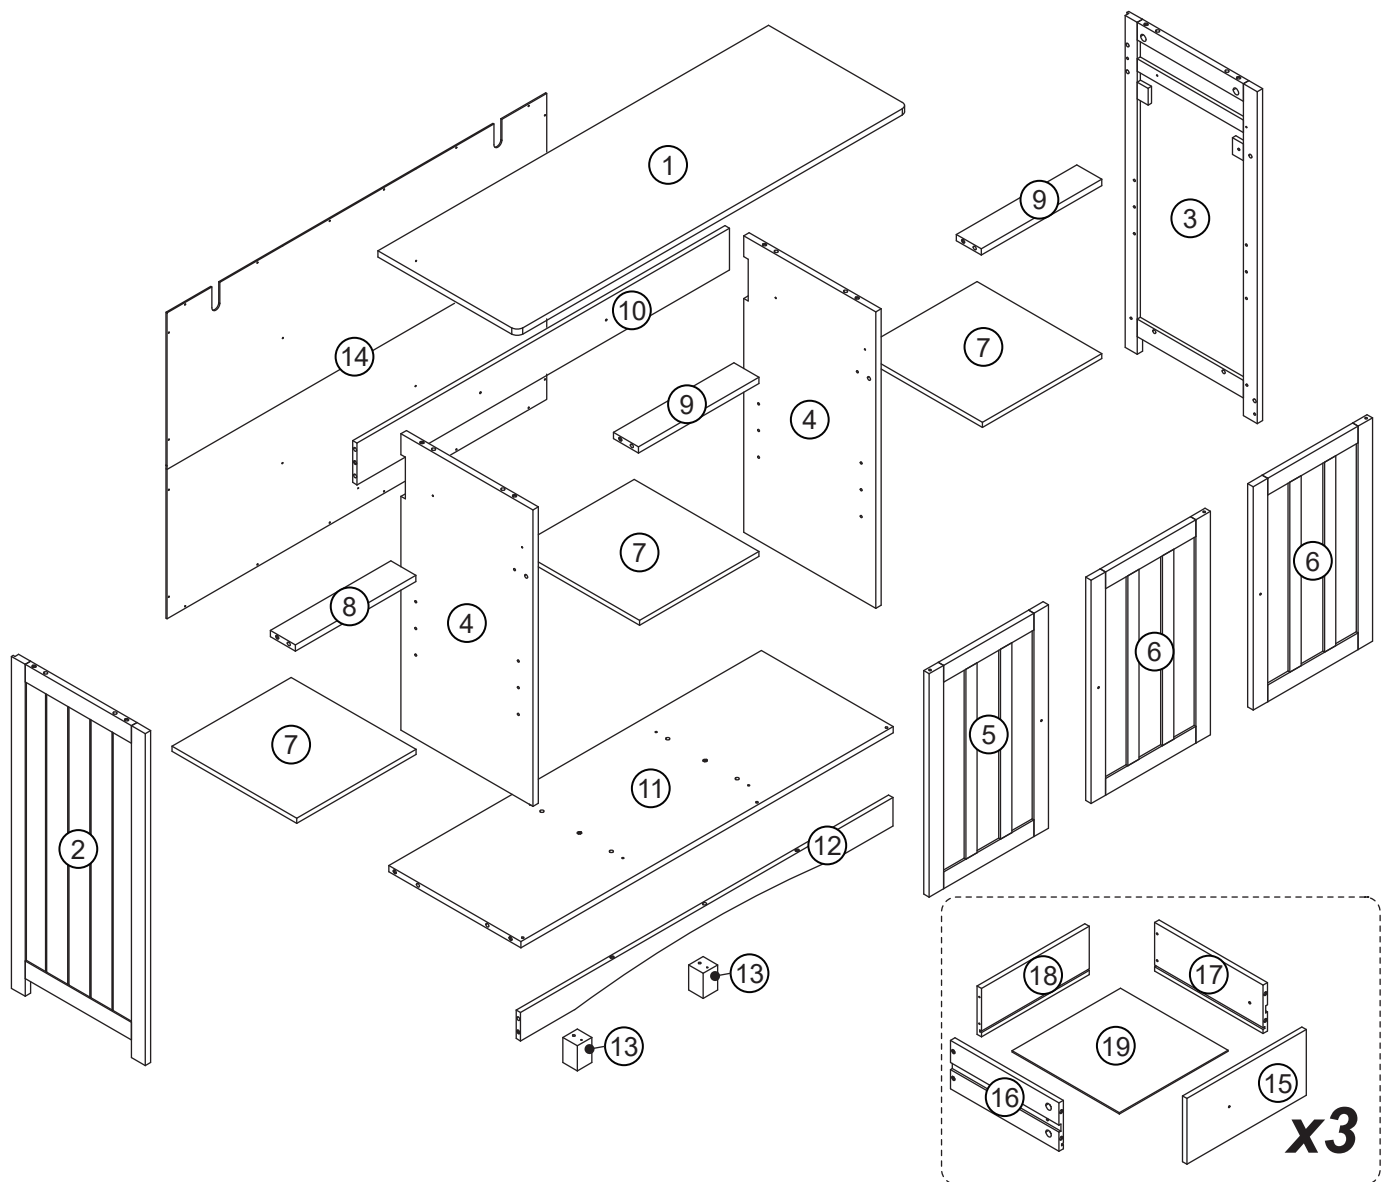












CONTACT US

REPLY WITHIN 24 HOURS IN BUSINESS DAYS














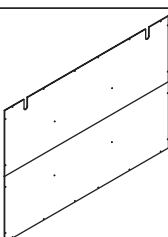
Exploded View








Fittings

 A x 36 M6 x 35 mm	 B x 36 φ15 x 9.5 mm	 C x 27 φ8 x 30 mm	 D x 20 φ4 x 35 mm	 E x 6 310mm
 F x 15 φ3 x 12 mm	 G x 6 φ3 x 14 mm	 H x 3	 I x 3	 J x 12 M4 x 10 mm
 K x 3	 L x 3	 M x 3 M4 x 16 mm	 N x 24 φ2.5 x 12 mm	 O x 12
 P x 4 φ4 x 12 mm	 Q x 2	 R x 2 φ4 x 40 mm	 S x 2 φ5 x 30 mm	 T x 2
 U x 2 φ8 x 50 mm	 V x 6	 W x 1		

Panel List

Label	Part Image	Description	Qty
①		Top Panel	x1
②		Left Side Panel	x1
③		Right Side Panel	x1
④		Median Panel	x2
⑤		Door	x1
⑥		Door	x2
⑦		Adjustable Shelf	x3
⑧		Front Median Support Bar	x1
⑨		Front Median Support Bar	x2
⑩		Back Support Bar	x1
⑪		Bottom Panel	x1
⑫		Skirt Bar	x1
⑬		Support Leg	x2
⑭		Back Panel	x1

Panel List

Label	Part Image	Description	Qty
⑮		Drawer Front Panel	x3
⑯		Drawer Left Side Panel	x3
⑰		Drawer Right Side Panel	x3
⑱		Drawer Back Panel	x3
⑲		Drawer Bottom Panel	x3

Flow Chart

Assemble the Slides



Assemble the Cabinet Frame



Assemble 3 Drawers













Insert Drawers into Cabinet Frame







Assembly Finished

Step 1








x2

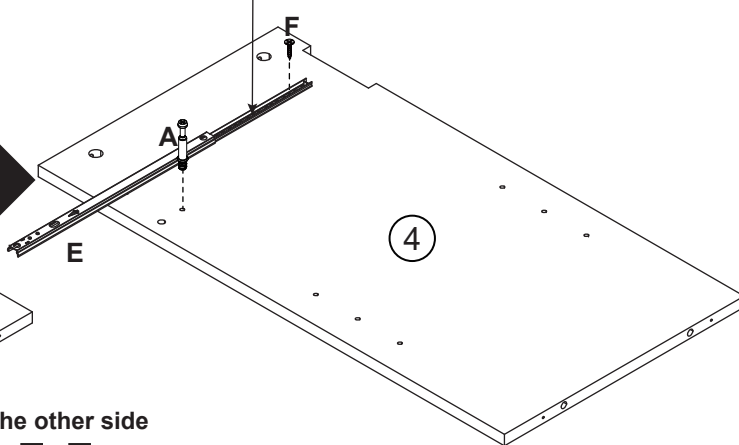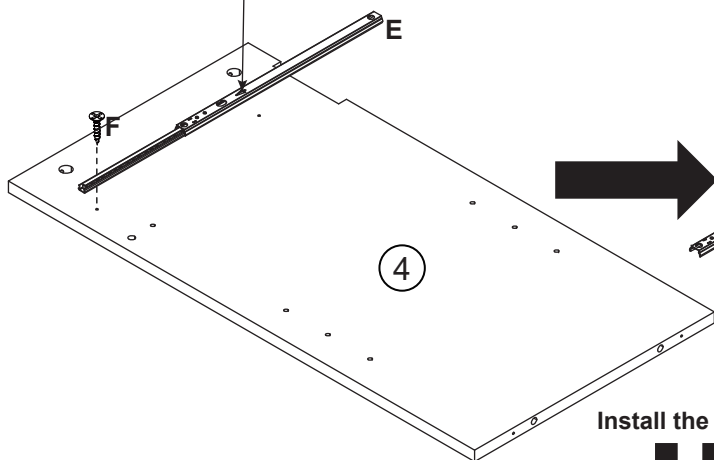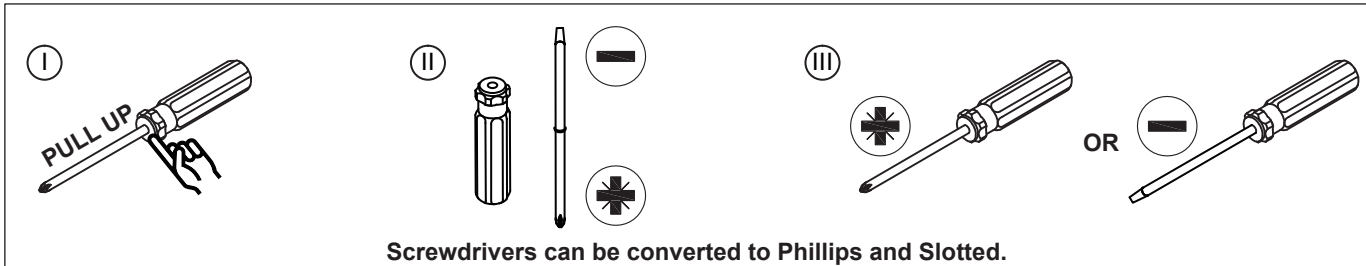

Install the other side


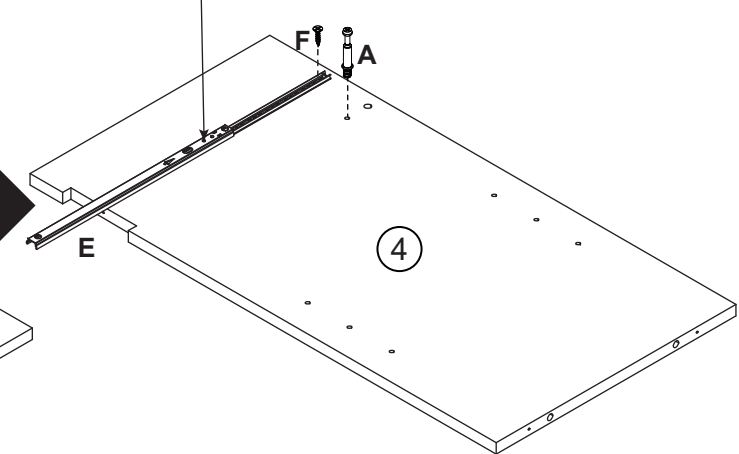
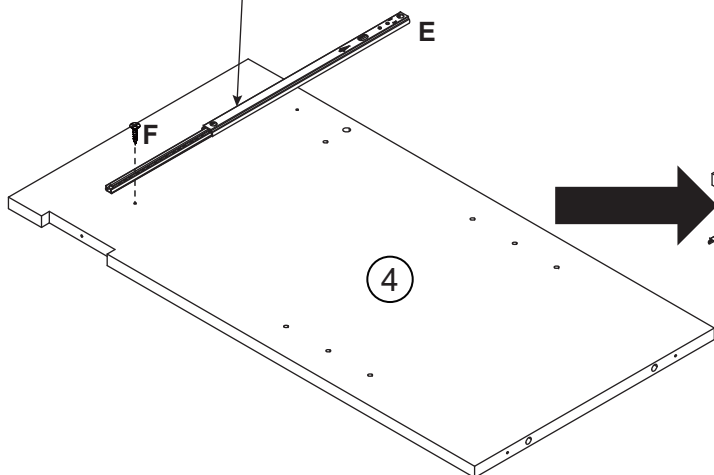




Step 2

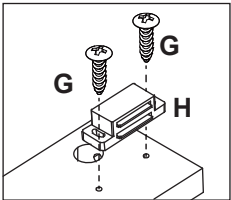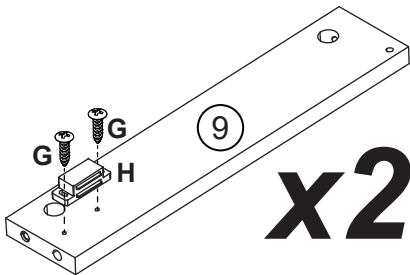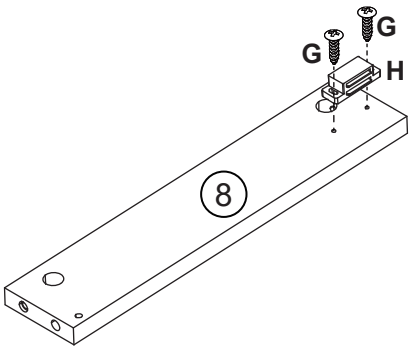




The side with magnetic attraction faces outward.

Step 3

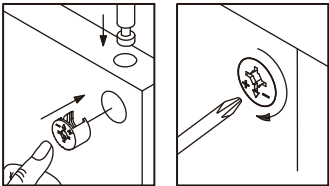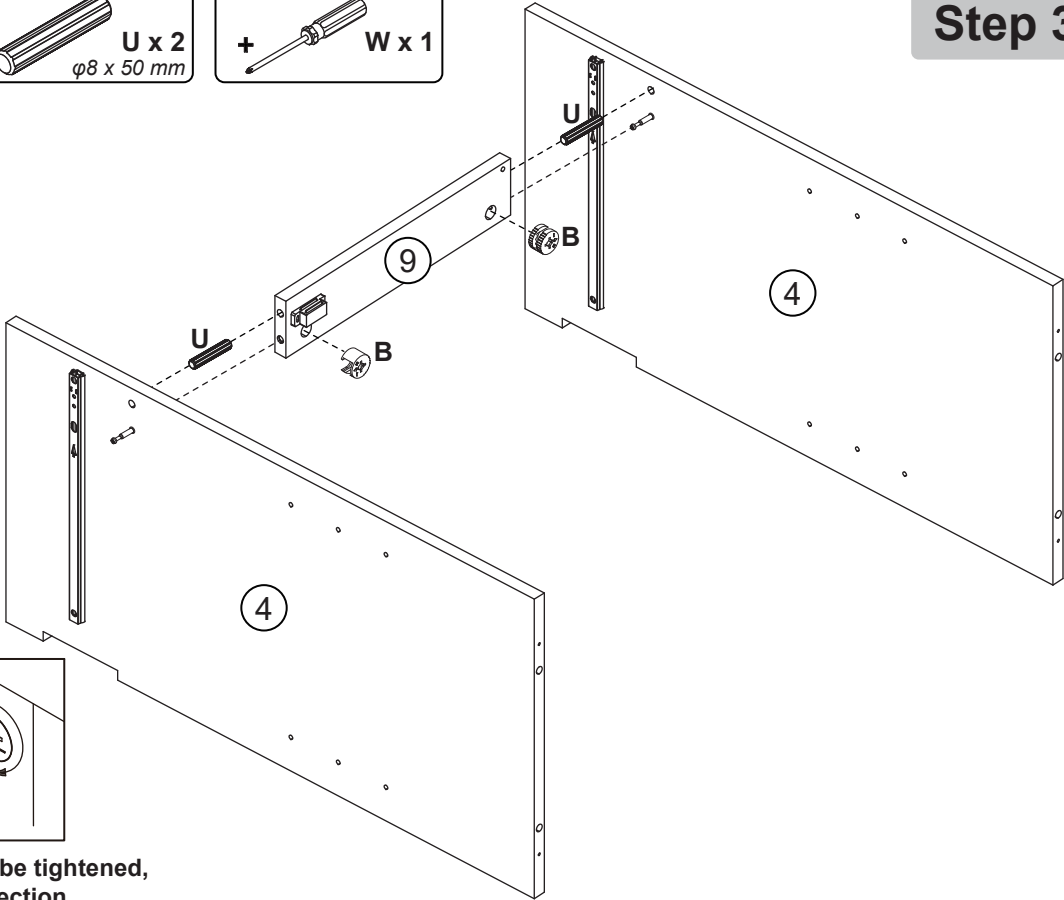





The eccenters need to be tightened, "+" sign for torsion direction.

Step 4


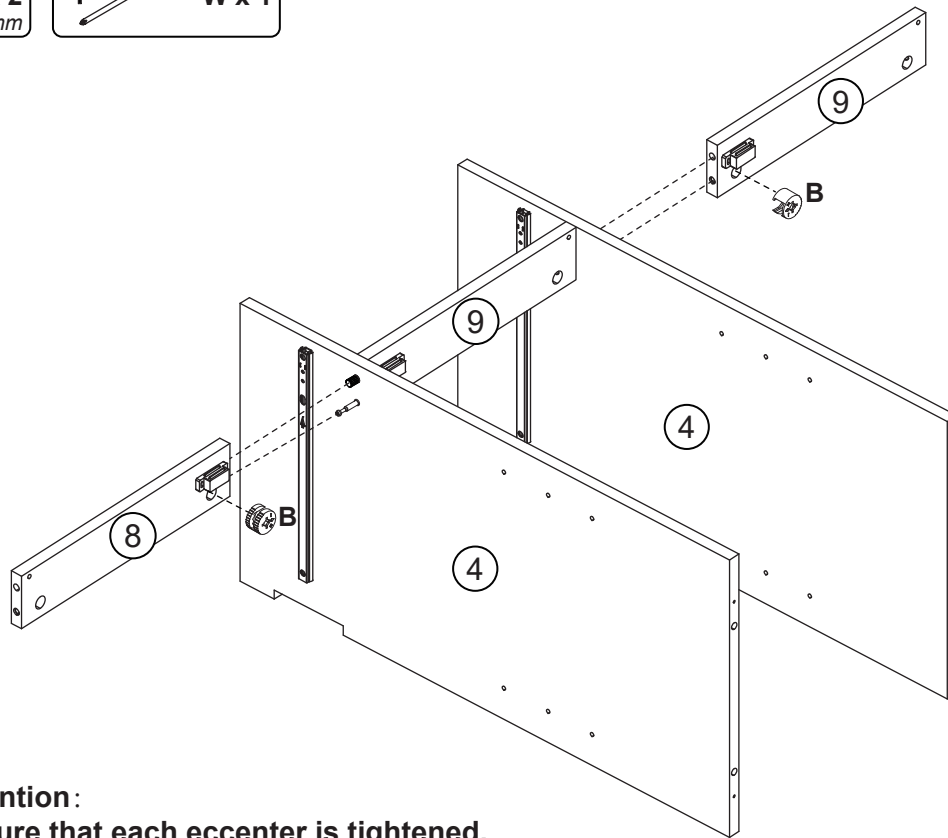




Attention:
Ensure that each eccentric is tightened.





Step 5

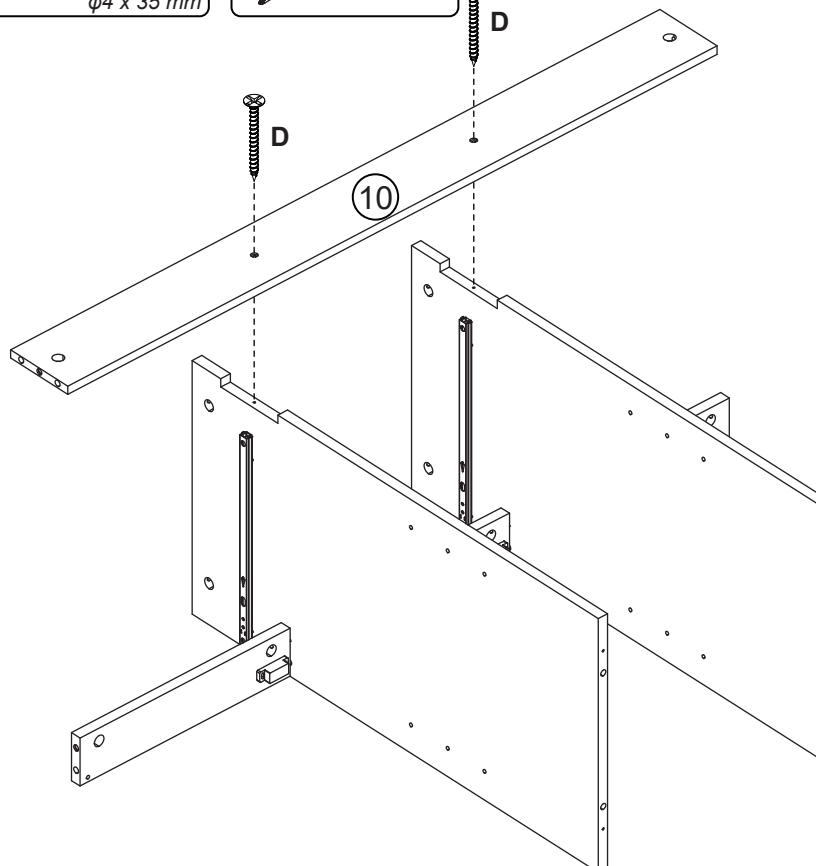


Step 6

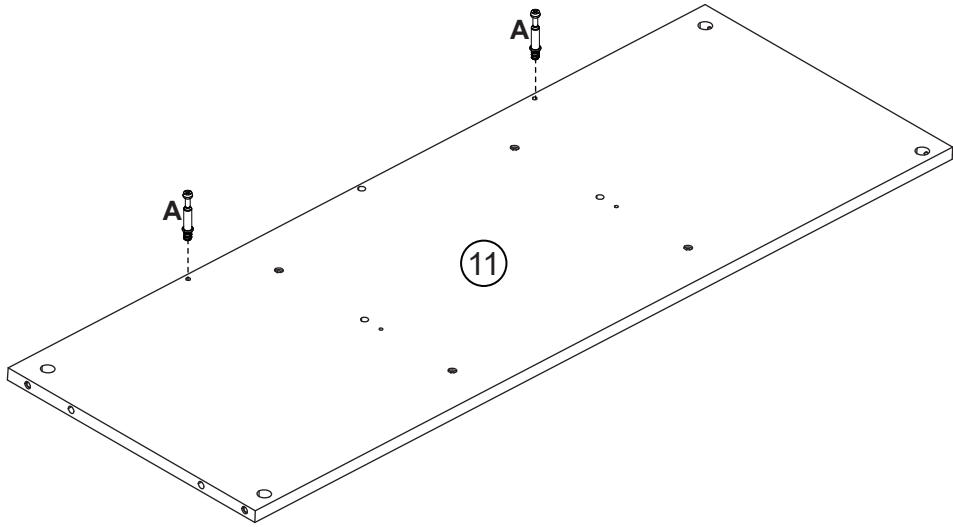



Step 7





Attention:
Ensure that each eccentric is tightened.

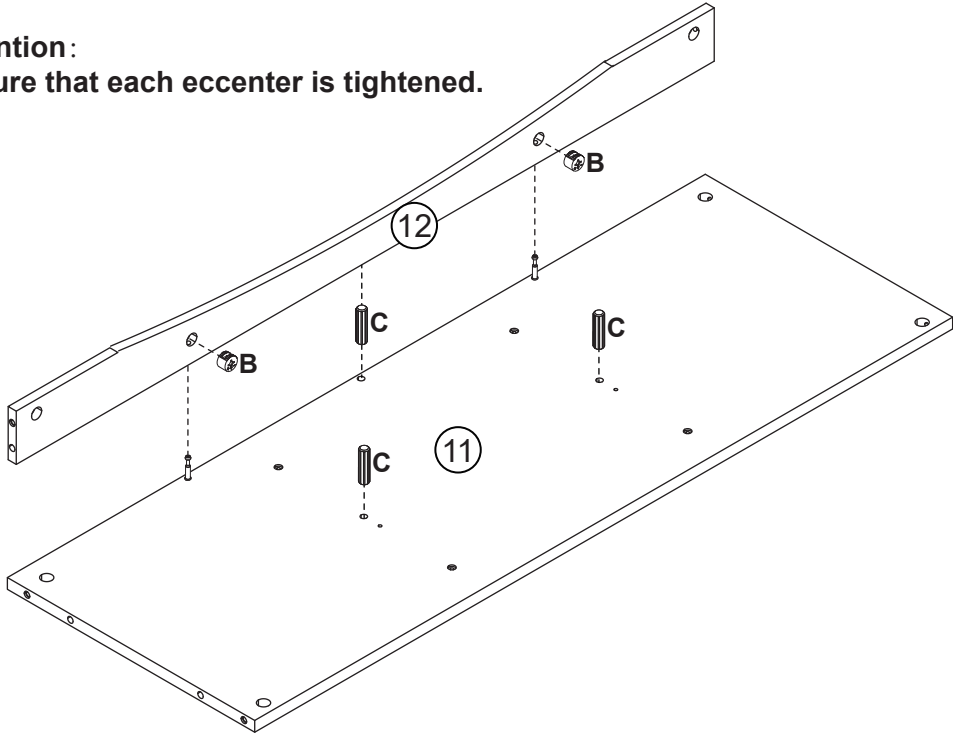







Step 8

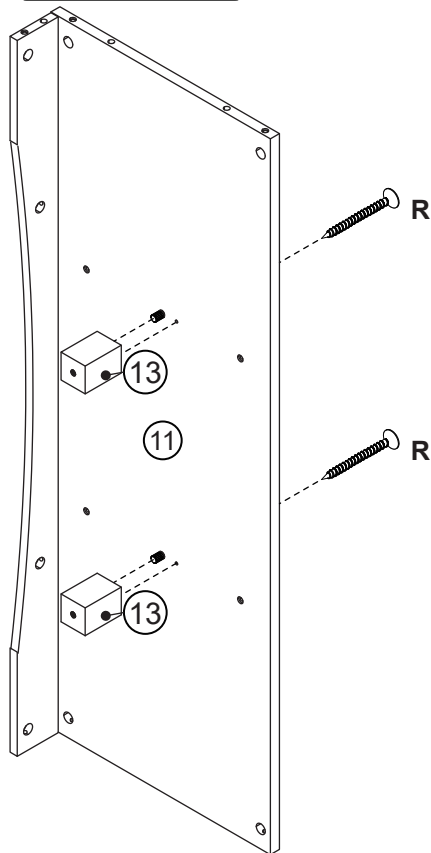






Step 9

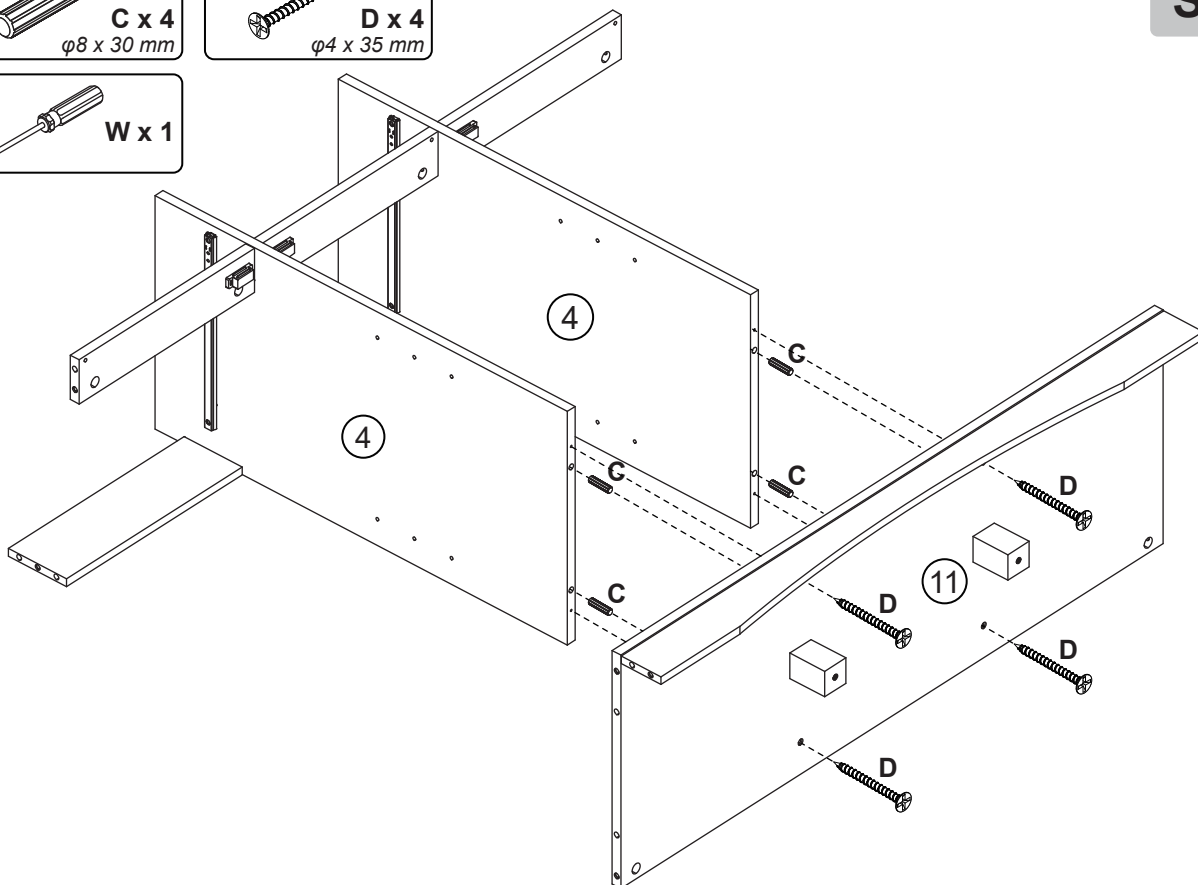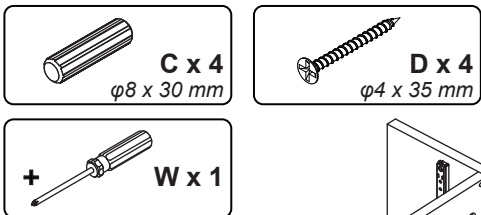







Step 10

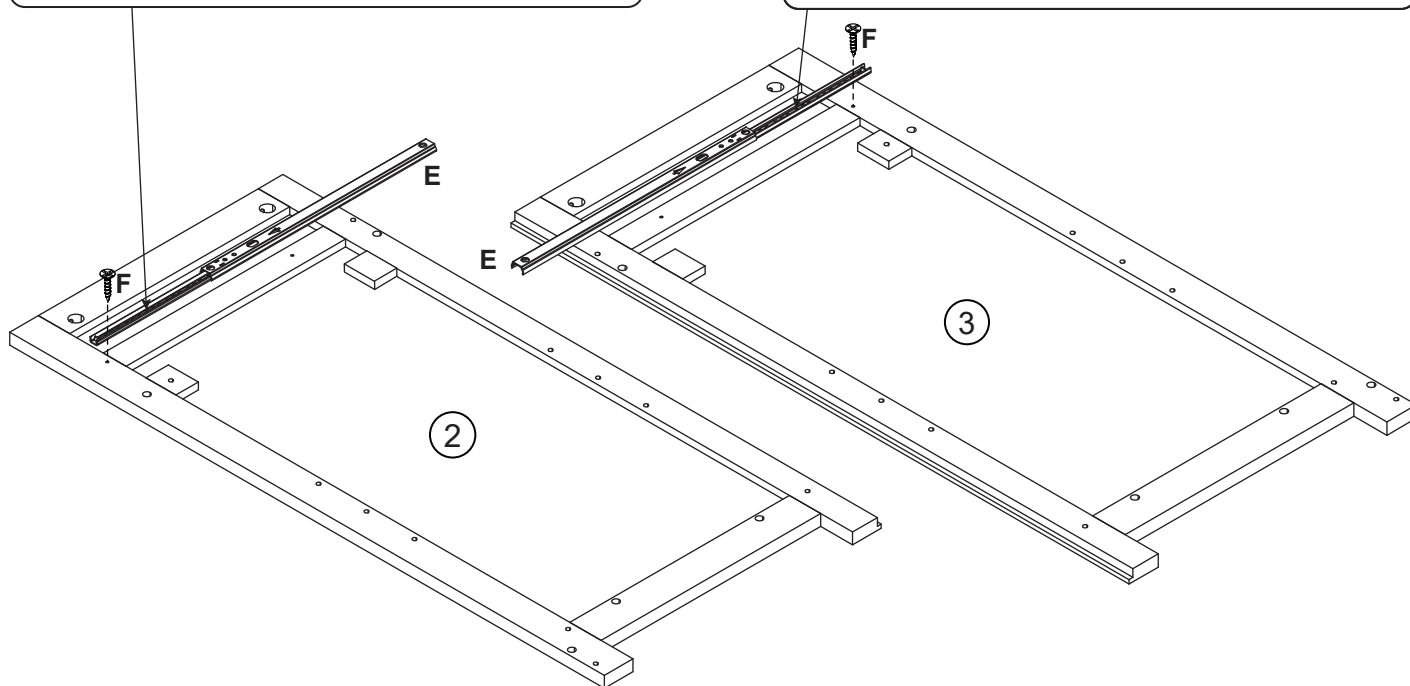

Step 11

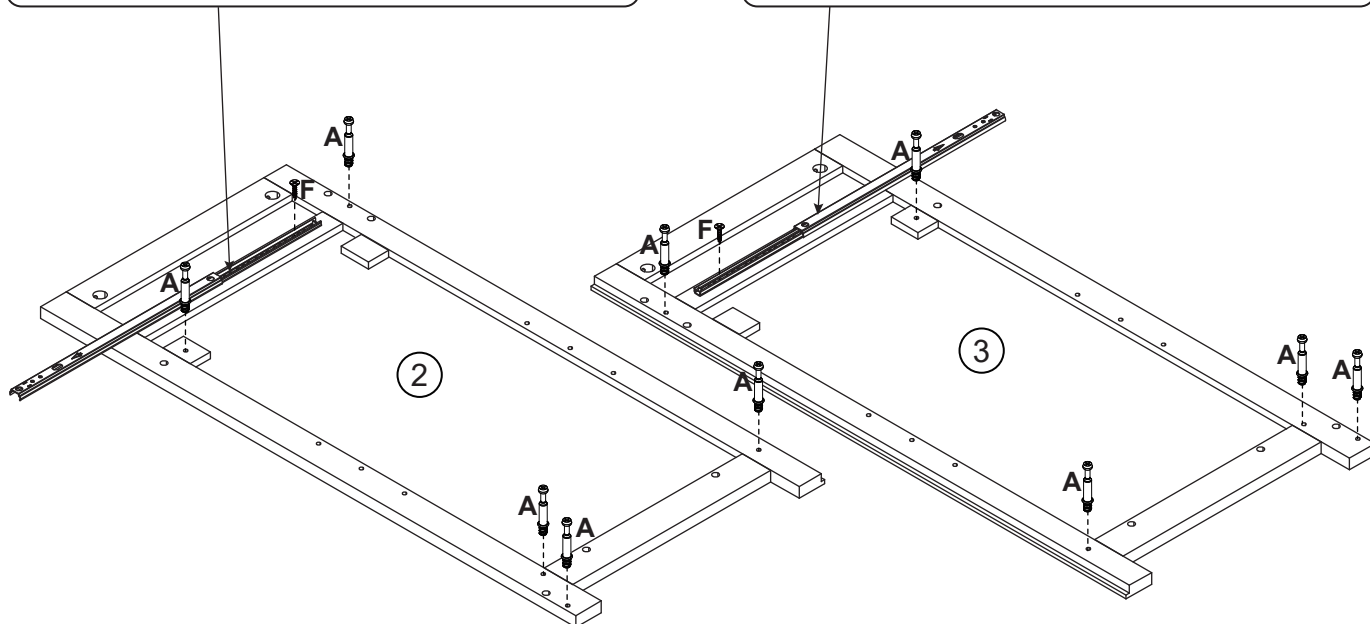






Step 12

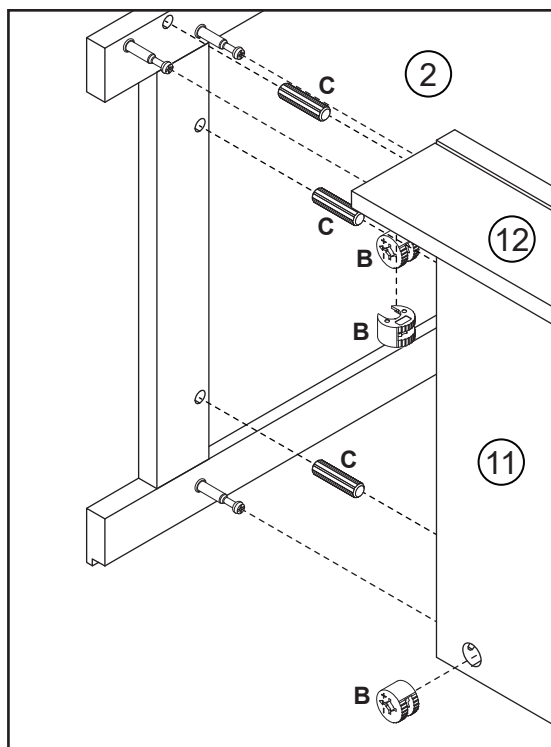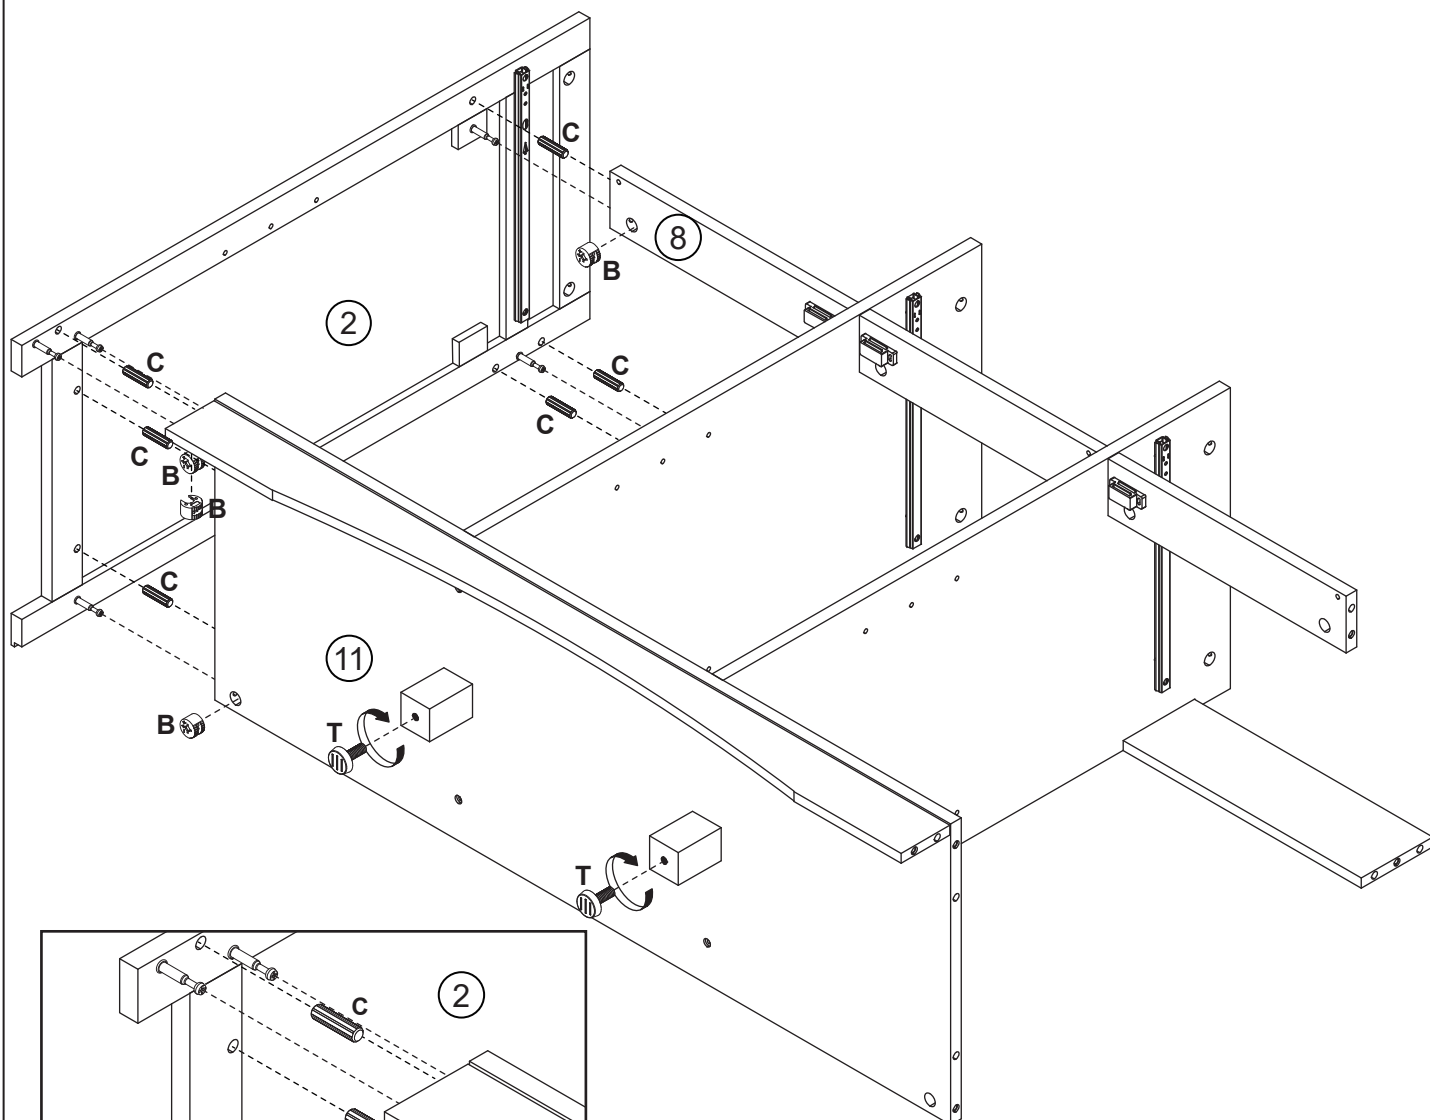




Attention:
Ensure that each eccentric is tightened.

Step 13

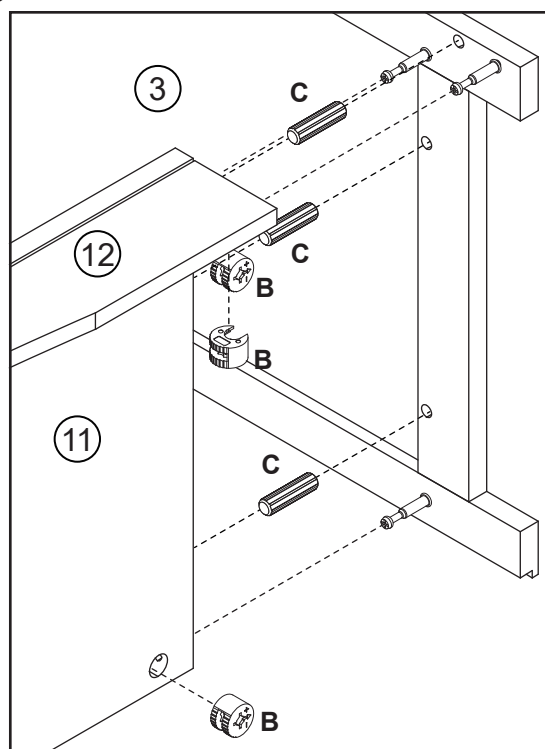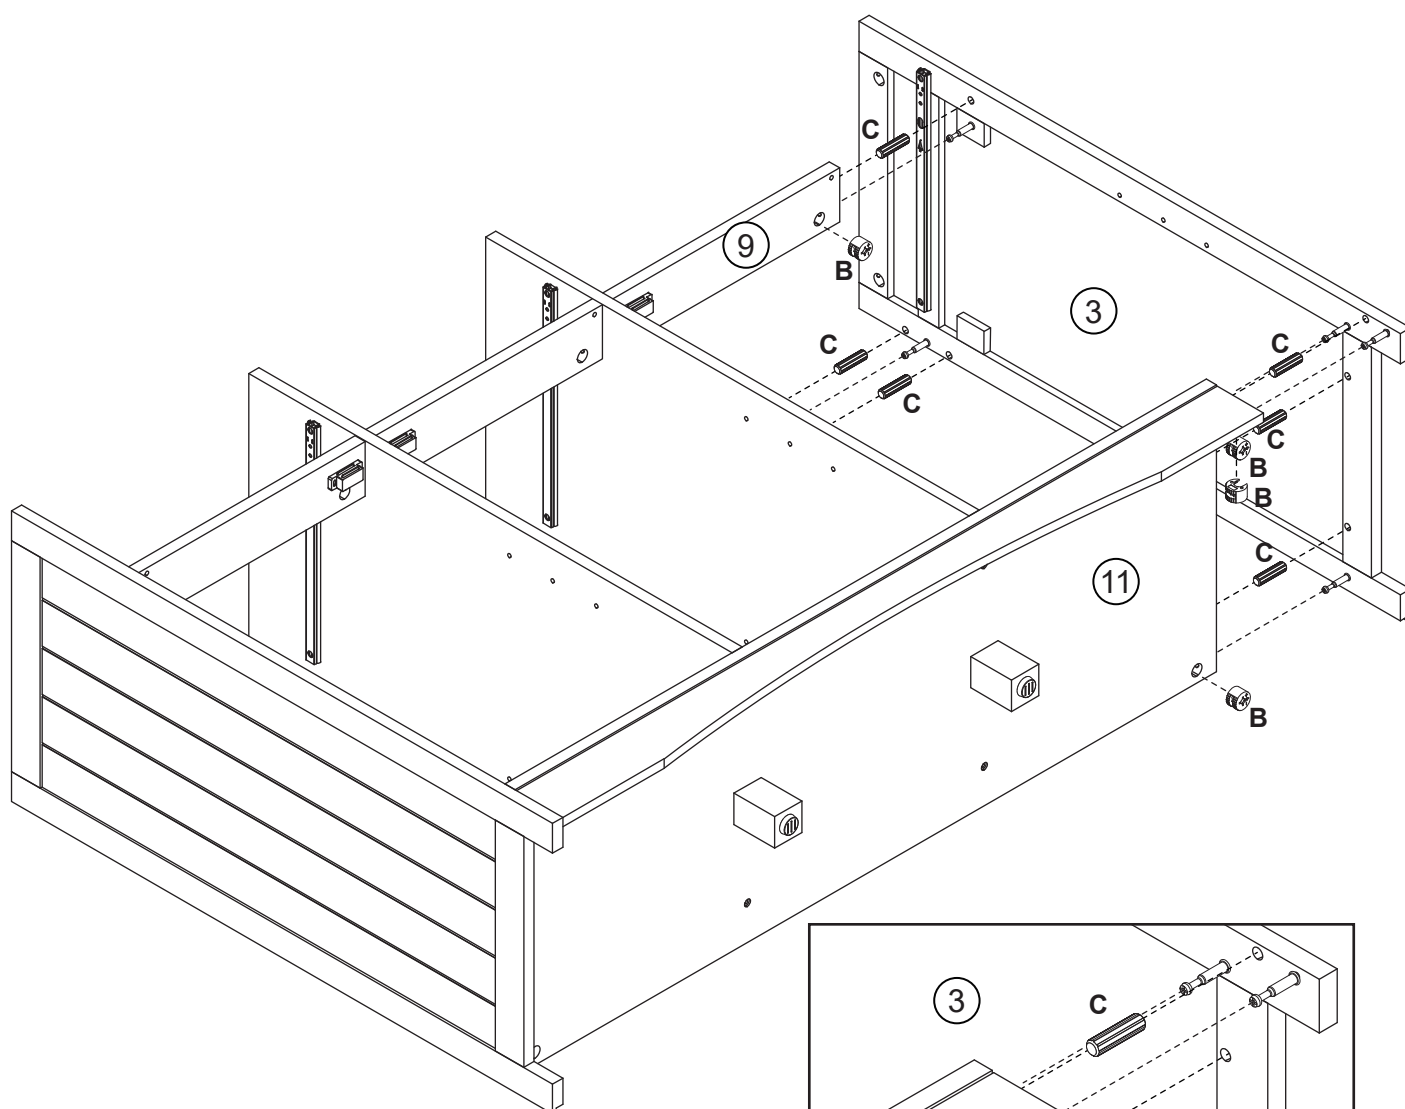








Attention:
Ensure that each eccentric is tightened.

Step 14


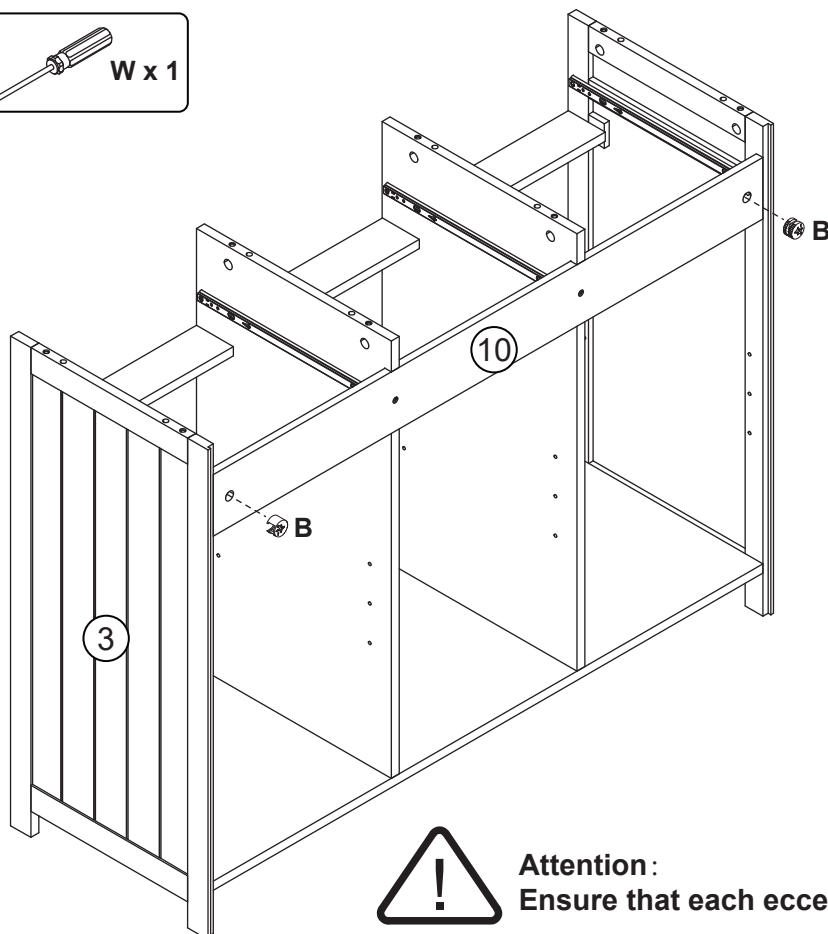




Attention:
Ensure that each eccentric is tightened.

Step 15

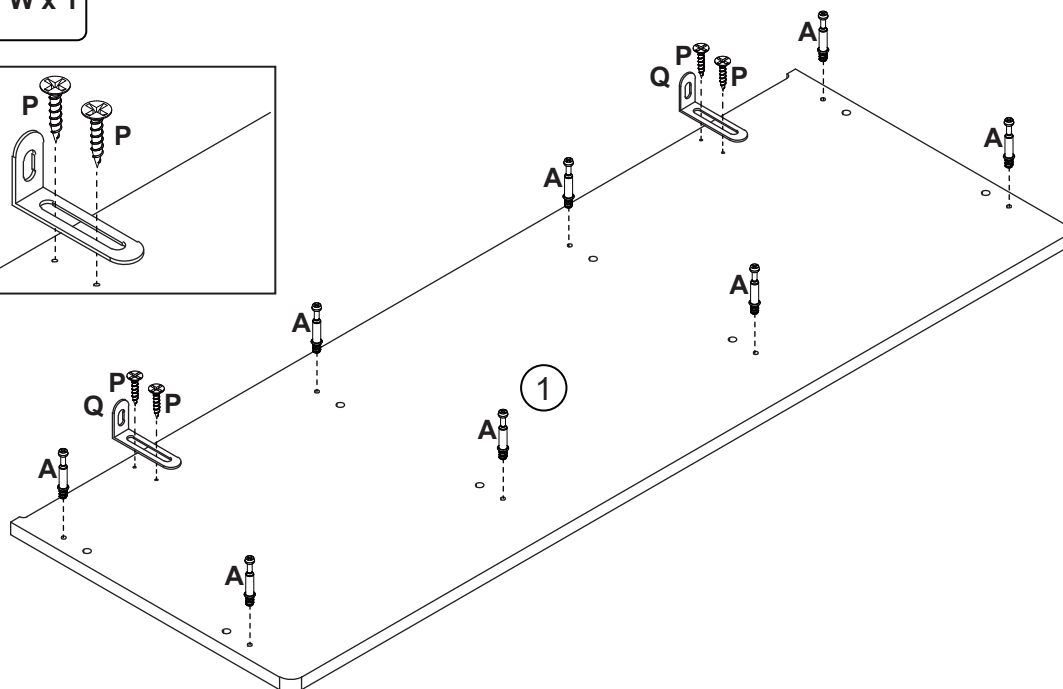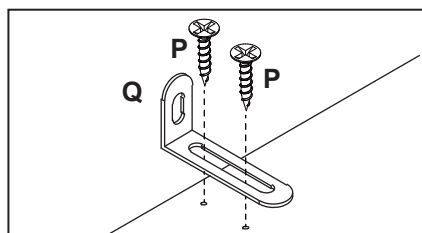




Step 16

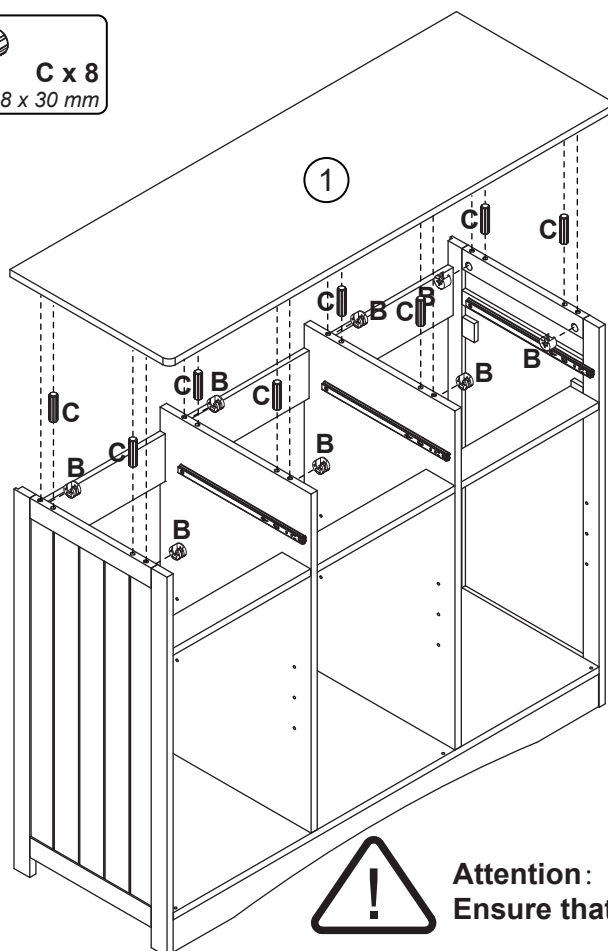

Attention:
Ensure that each eccentric is tightened.

Step 17

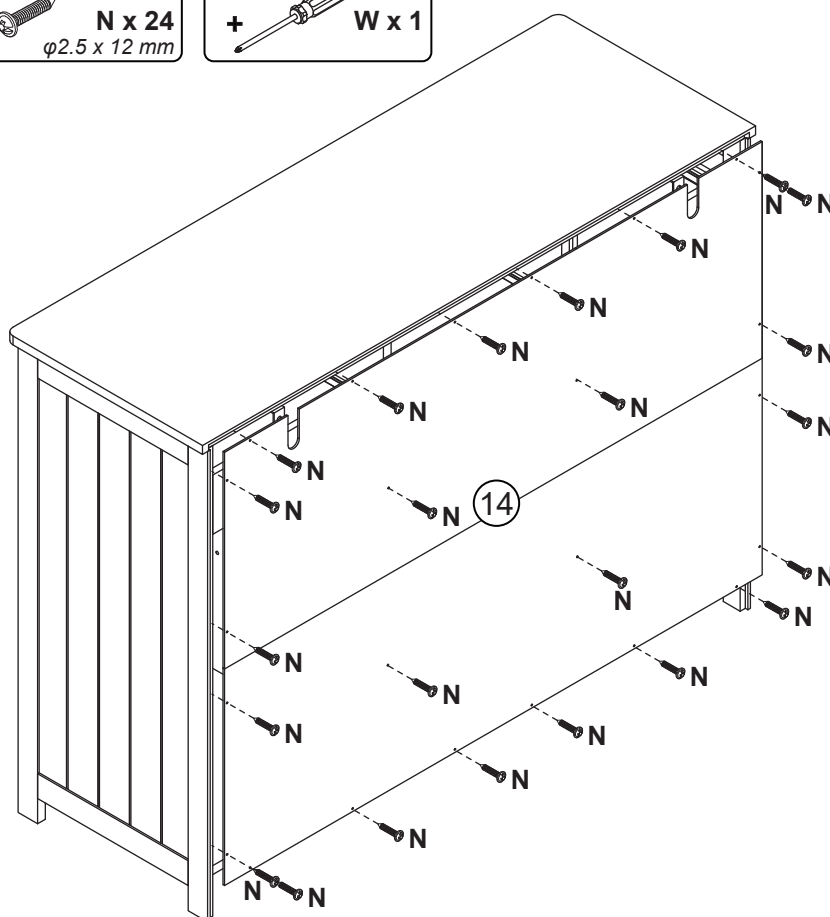


Step 18





D x 2
φ4 x 35 mm



S x 2
φ5 x 30 mm





+ W x 1

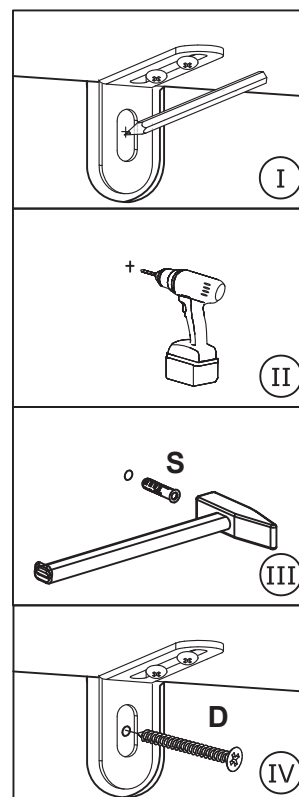
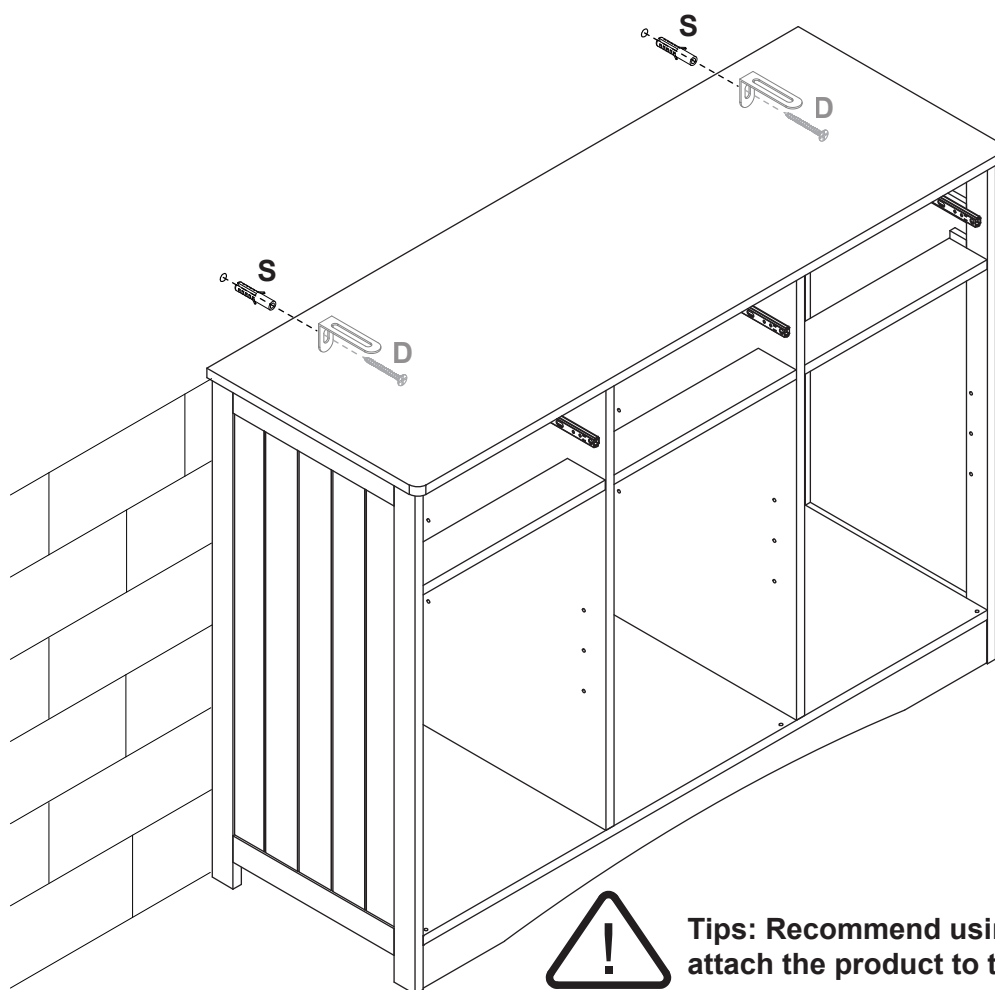


Tips: Recommend using the included pieces to attach the product to the wall to avoid toppling.

Step 19

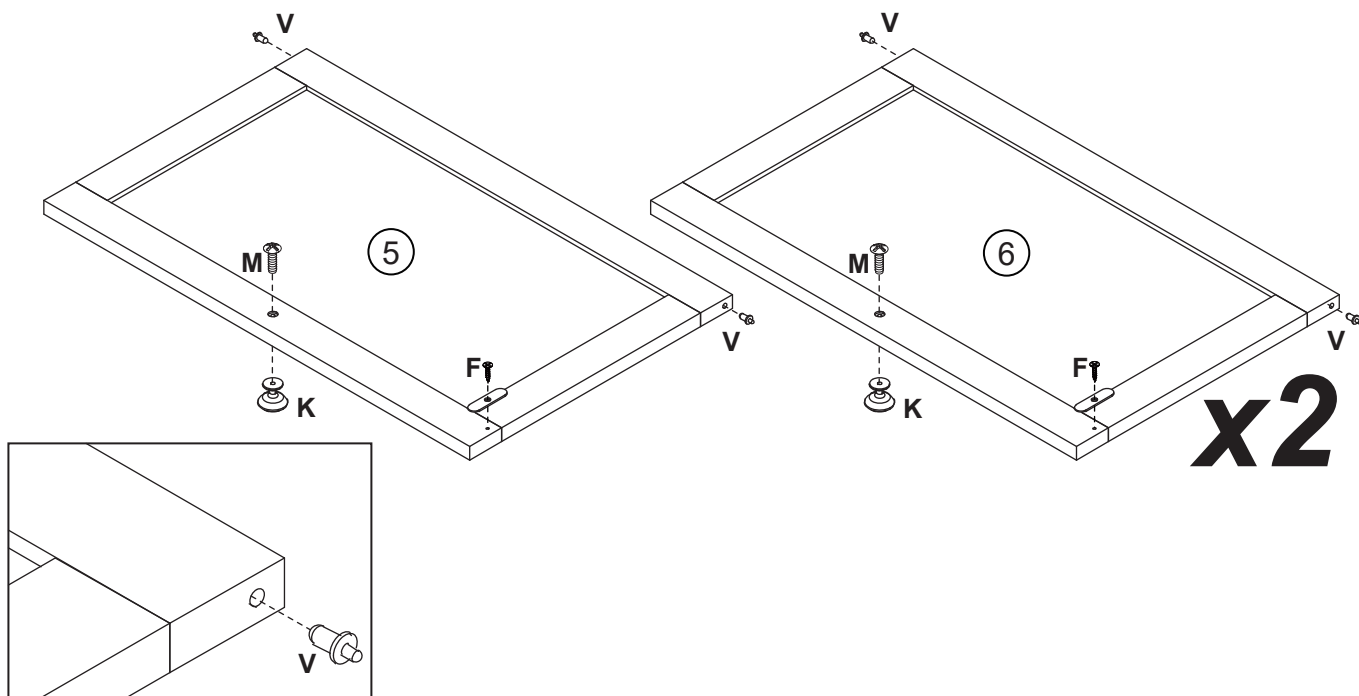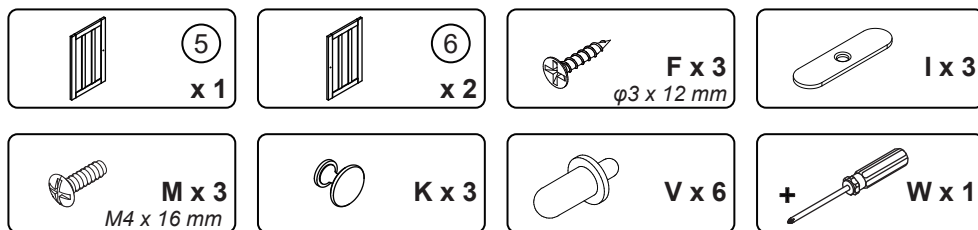




Step 20

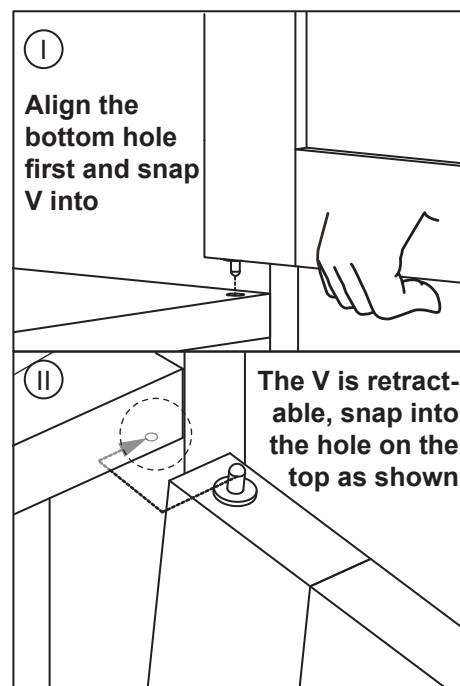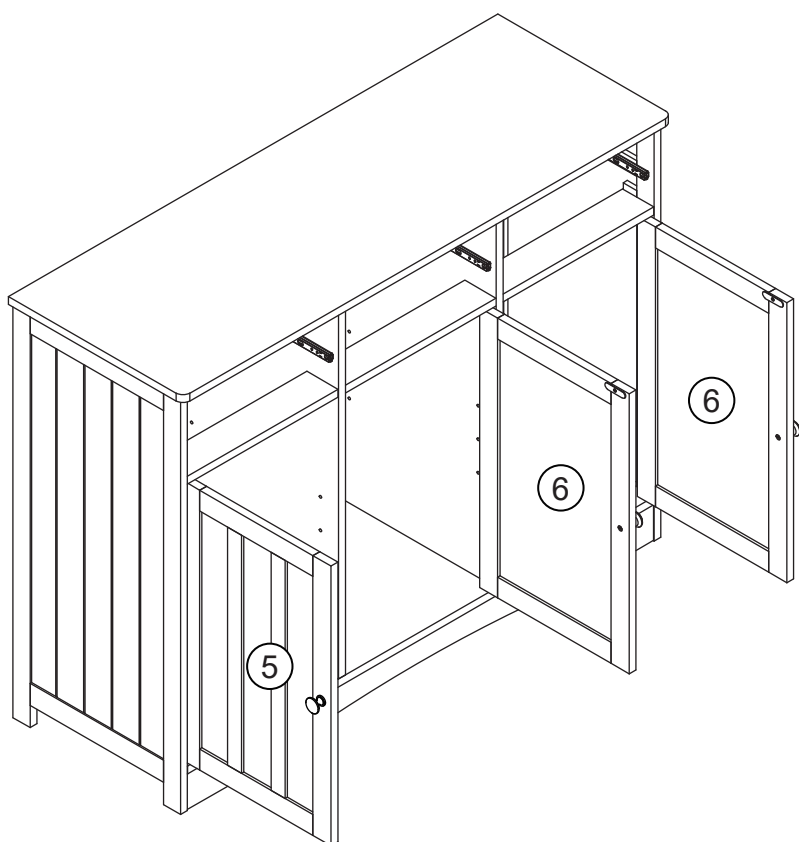



O x 12


Step 21

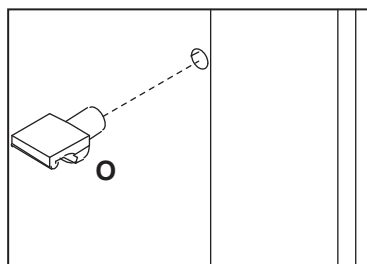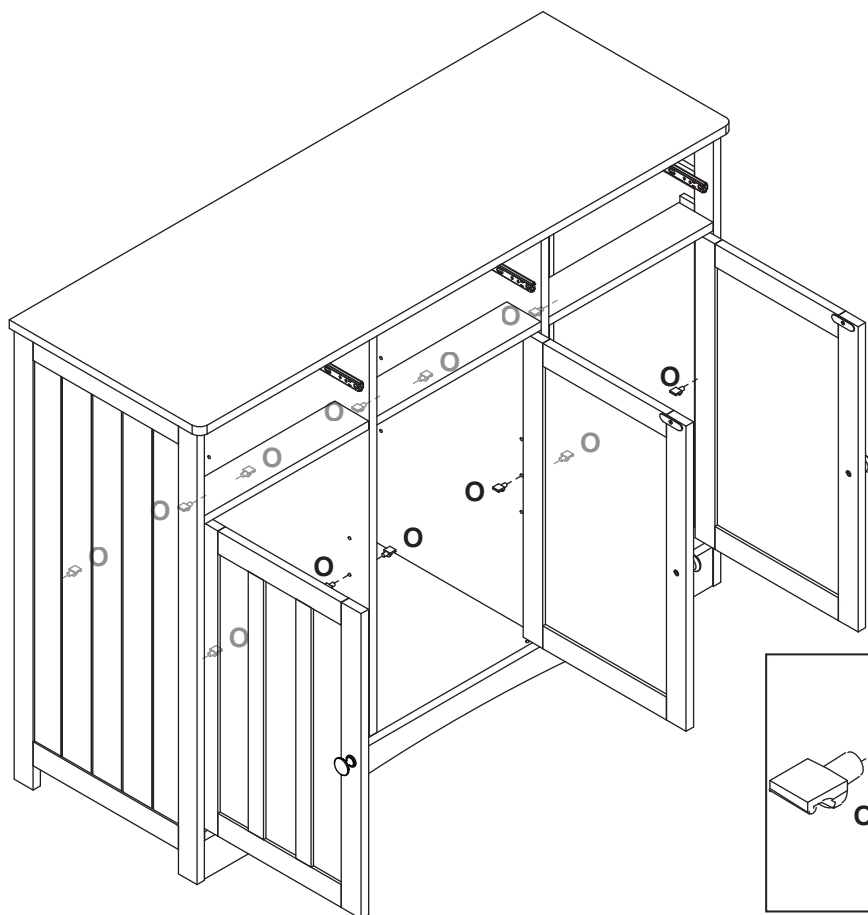


7

x 3


Step 22

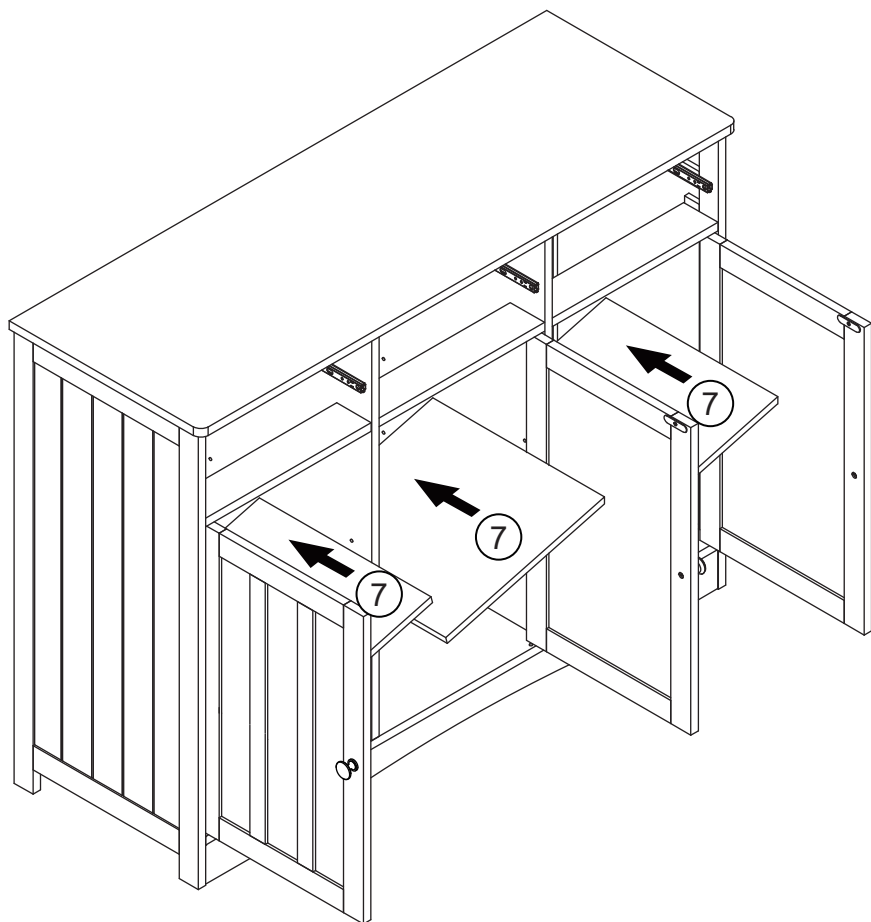




15

x 3




A x 12

M6 x 35 mm




L x 3



J x 6



M4 x 10 mm



W x 1


Step 23

x3

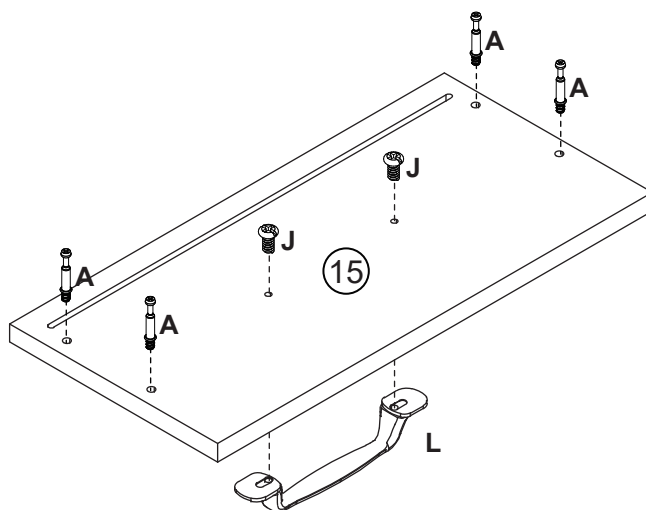


16

x 3



17

x 3




18

x 3



D x 12


φ4 x 35 mm




W x 1

Step 24



x3

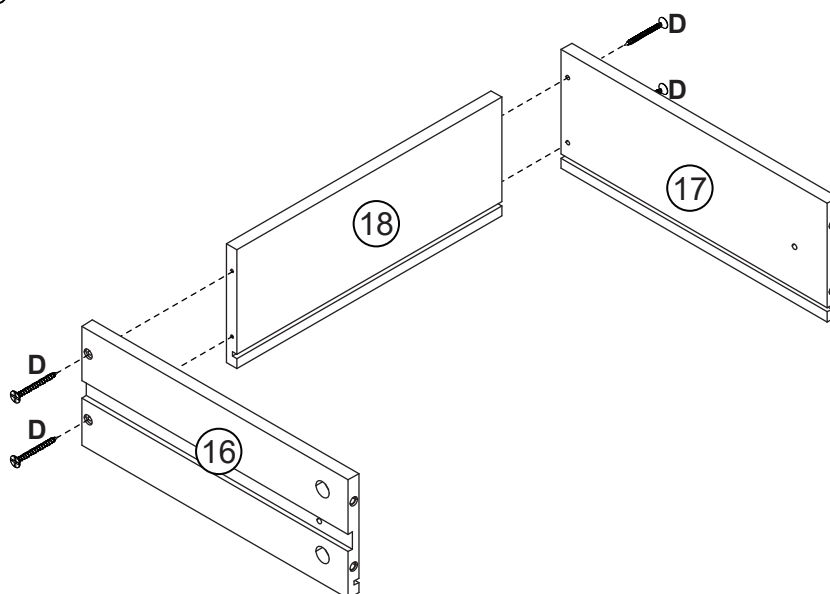




Step 25

x3

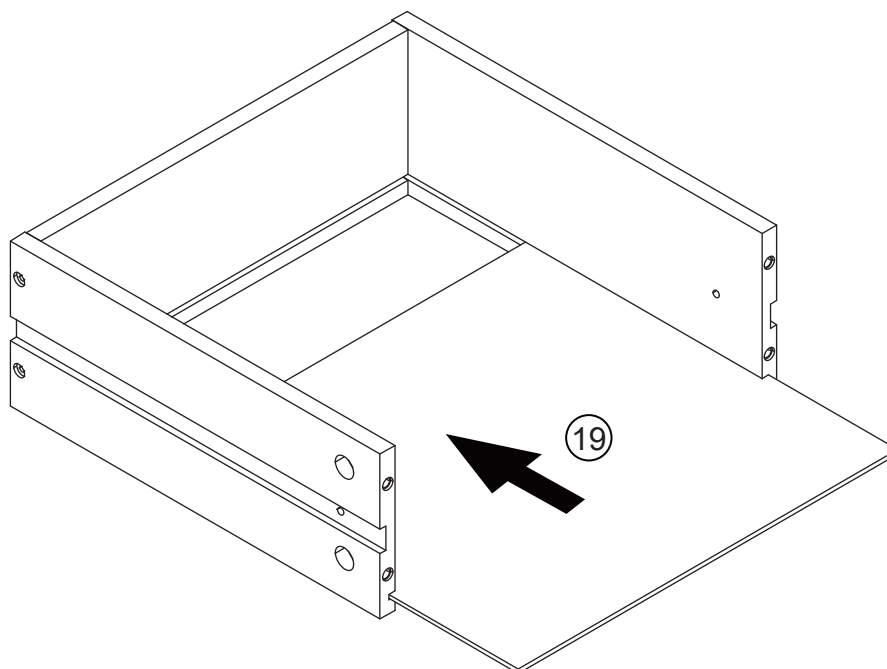

Step 26

x3

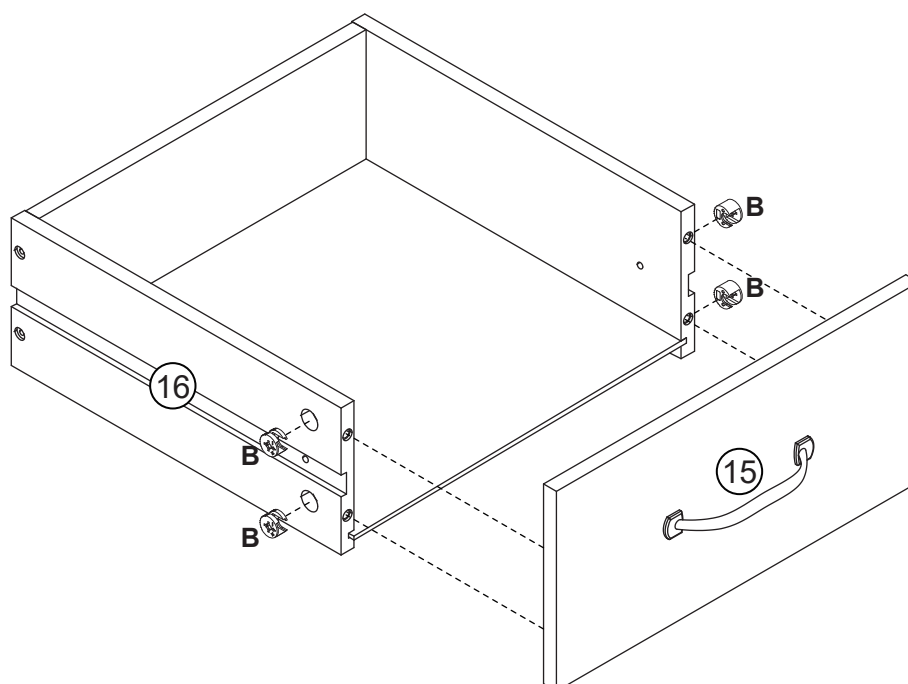

Attention:
Ensure that each eccentric is tightened.

Step 27



J x 6
M4 x 10 mm



W x 1

