



By Sorelle - A Division of C&T International, Inc.
46 Whelan Road, East Rutherford, N. J. 07073 U. S. A.
Tel, +1(201)531 1919 Fax, +1(201)531 1920

READ ALL INSTRUCTIONS BEFORE ASSEMBLING AND USE OF PRODUCTS

KEEP FOR FUTURE USE RETAIN THESE INSTRUCTION SHEETS AND PRODUCTS ASSEMBLY TOOLS IN THE ORIGINAL SACK AND SECURE IT TO THE SPRING UNDER THE MATTRESS WITH PLASTIC TIES.

⚠ WARNING: Infants can suffocate on soft bedding. never add a pillow, comforter or padding.

TODDLER BED WARNINGS

⚠ WARNING - Failure to follow these warnings and assembly instructions could result in serious injury or death.


- The mattress intended for use on the bed shall be a full size crib mattress having minimum dimensions of 51 5/8 in. (1310 mm) in length and 27 1/4 in. (690 mm) in width and 4 in. (100 mm) in thickness, or greater thickness as specified by the manufacturer.
- The minimum age for a child using this toddler bed shall not be less than 15 months and the maximum weight shall not be greater than 50 lbs. (22.7 kg).
- DO NOT use with less than 12 inches of space between the transitional bed and solid objects such as a wall or dresser. Child could slide into smaller spaces and suffocate.
- DO NOT place bed near window where cords from blinds or drapes may strangle a child. Child may fall out of window.
- Strings can cause strangulation! DO NOT place items with a string around a child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over a crib or attach strings to toys.
- DO NOT use a water mattress.
- DO NOT use casters on toddler bed.
- If guardrail(s) provided must be used to avoid the formation of a gap between the mattress and the bed that could cause an entrapment.

CAUTION : ANY MATTRESS USED IN THIS CRIB SHALL BE AT LEAST 27 1/4" (69CM) x 51 5/8" (131 CM) WITH A THICKNESS NOT EXCEEDING 6" (15CM).

- Ensure a safe environment for your child by checking regularly, (that every component is properly and securely in place) before placing your child in the crib. Make sure that all bolts and fasteners are tight.

Toddler Bed Assembly


Parts and Hardware

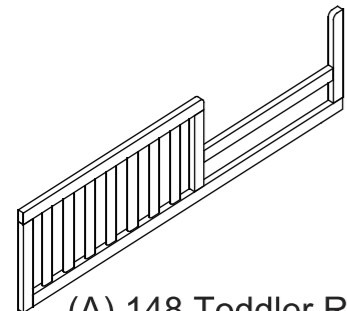

(A) 148 Toddler Rail (1 pc)




(a) M6*50mm Bolt (4pcs)

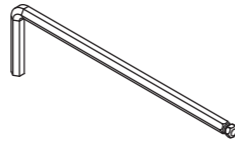

(k) Allen Key (1 pc)

Step 1



Remove the Footboard As Figure

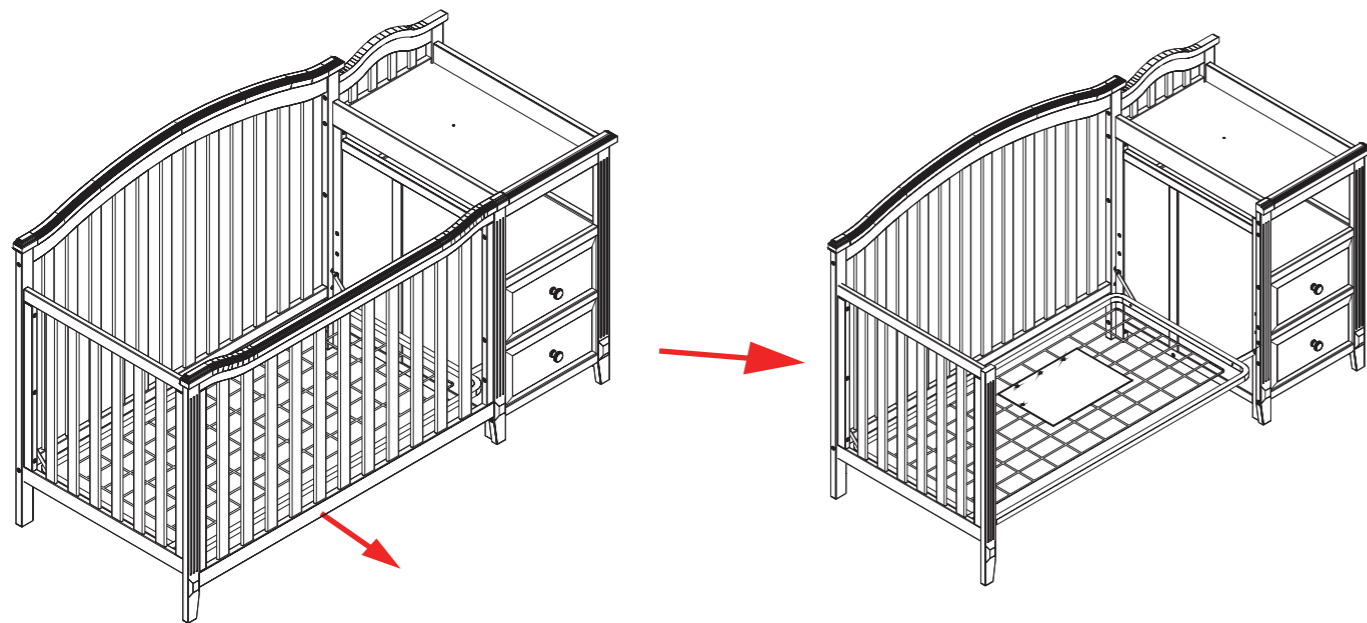

The mattress support must be in the lowest positions.
Store all hardware safely.
Read all warnings .

Step 2

Attached Guardrail (A) to Crib As Figure

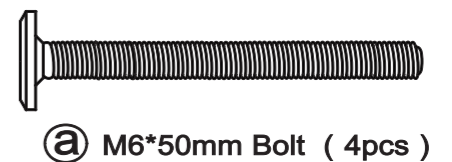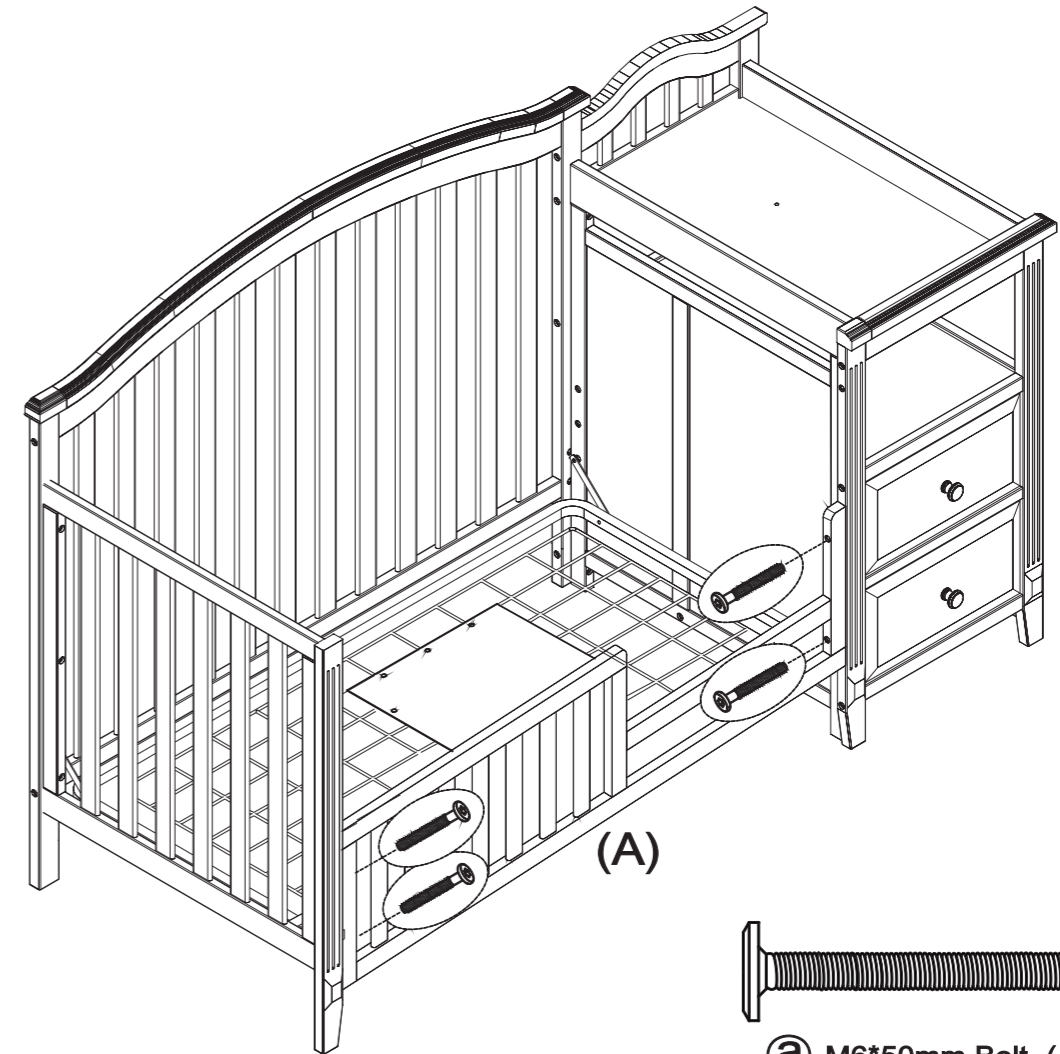

(a) M6*50mm Bolt (4pcs)

NOTE: MATTRESS SUPPORT MUST BE IN THE *LOWEST POSITION*

FINALLY CHECK

- PRIOR TO USING THE TODDLER BED, **ENSURE** ALL BOLTS ARE TIGHTENED. **DO NOT** OVER TIGHTEN.
- ENSURE THAT THE MATTRESS IS THE RECOMMENDED SIZE.
- TODDLER BED IS NOW READY FOR USE.

Important: In order to properly assemble the toddler bed, carry out the operations in order specified. Failure to assemble the toddler bed in the recommended order can make the toddler bed hazardous.