










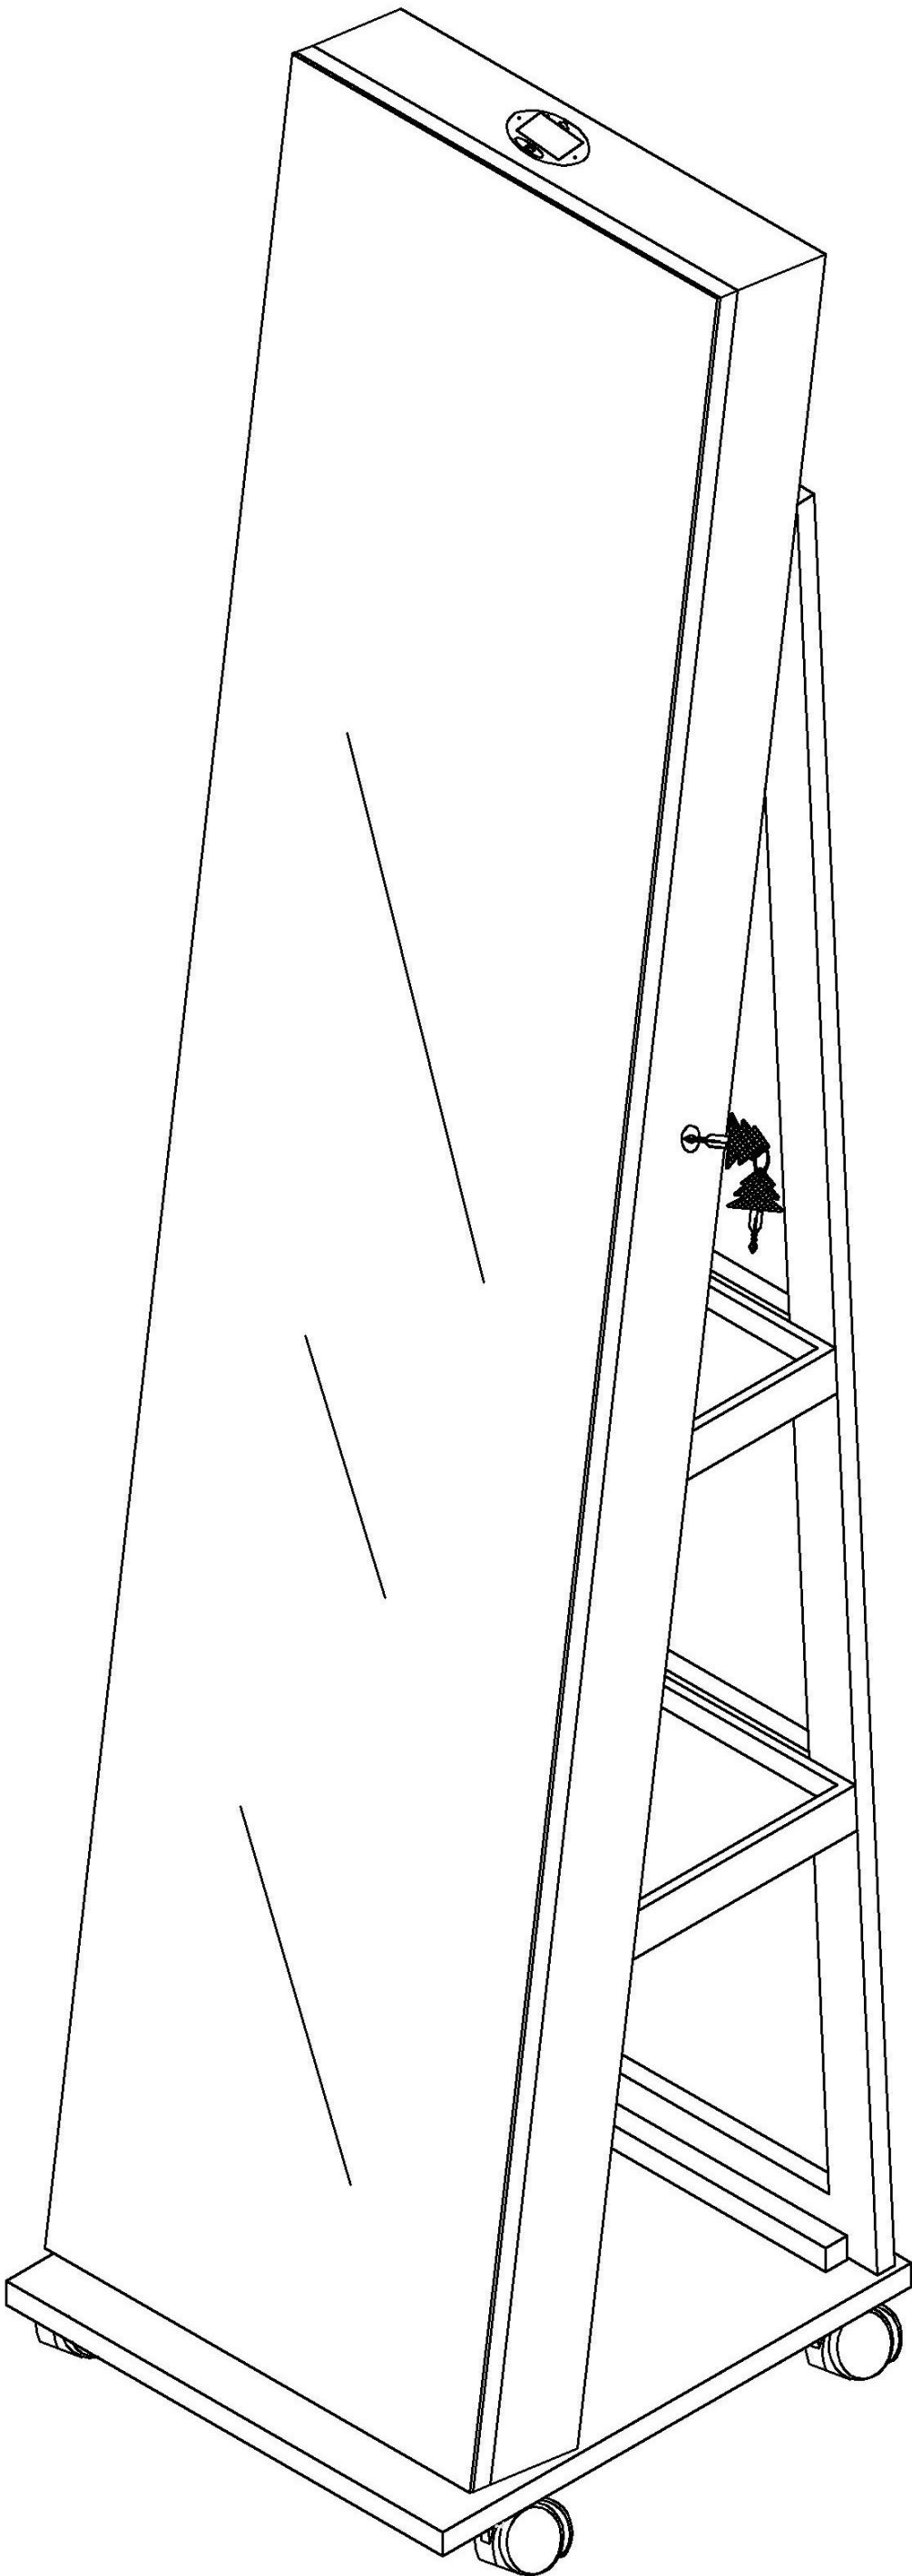

MIRROR JEWELLERY CABINET

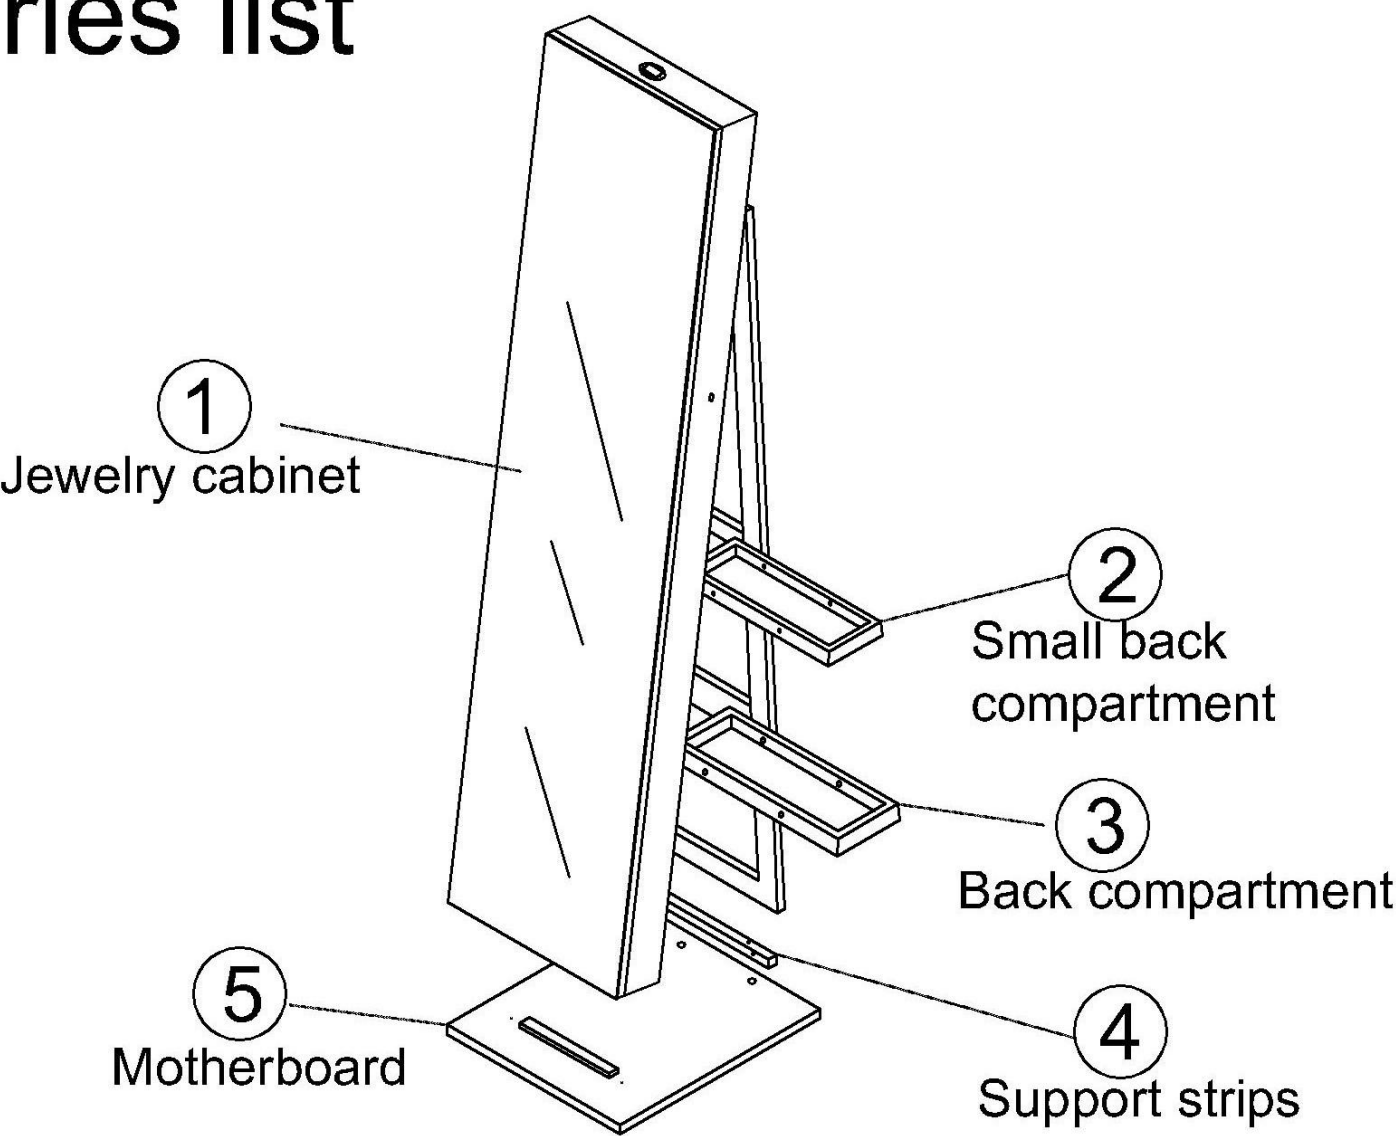


Accessories list

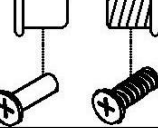



A		Long screw(6*30mm)	6 Pcs
B		The key	1 Pcs
C		Long cross screw assembly (5*20mm)	4 Pcs
D		Short cross screw assembly (5*8mm)	4 Pcs
E		Bolt driver	1 Pcs
F		Wheel	4 Pcs
G		Acrylic left and right accessories	14 Pcs
H		Acrylic spacer	5 Pcs
I		Screw (3.5*12mm)	16 Pcs
J		Self tapping wire(3x16mm)	1 Pcs
K		Colloidal granules/Self tapping wire(4x45mm)	1 Pcs
L		Anti-rewind (290mm)	1 Pcs


Step 1

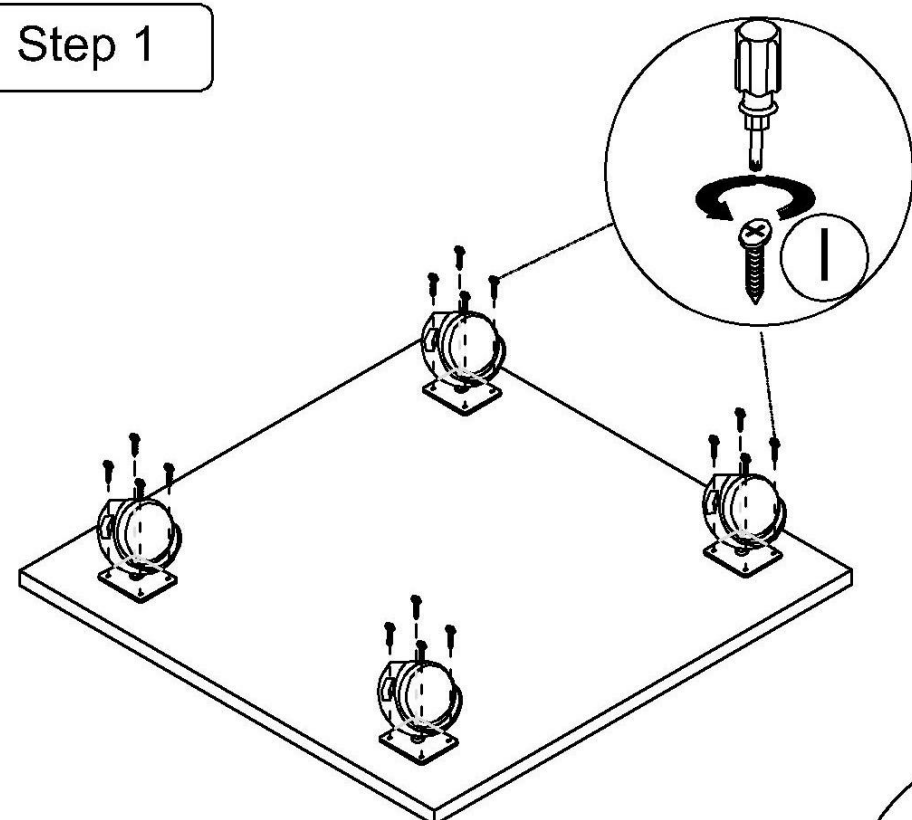

(F)		x 4
(I)	(3.5*12mm)	x 16
(A)	(6*30mm)	x 2

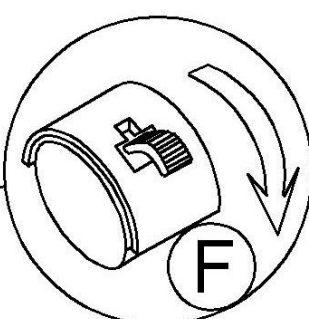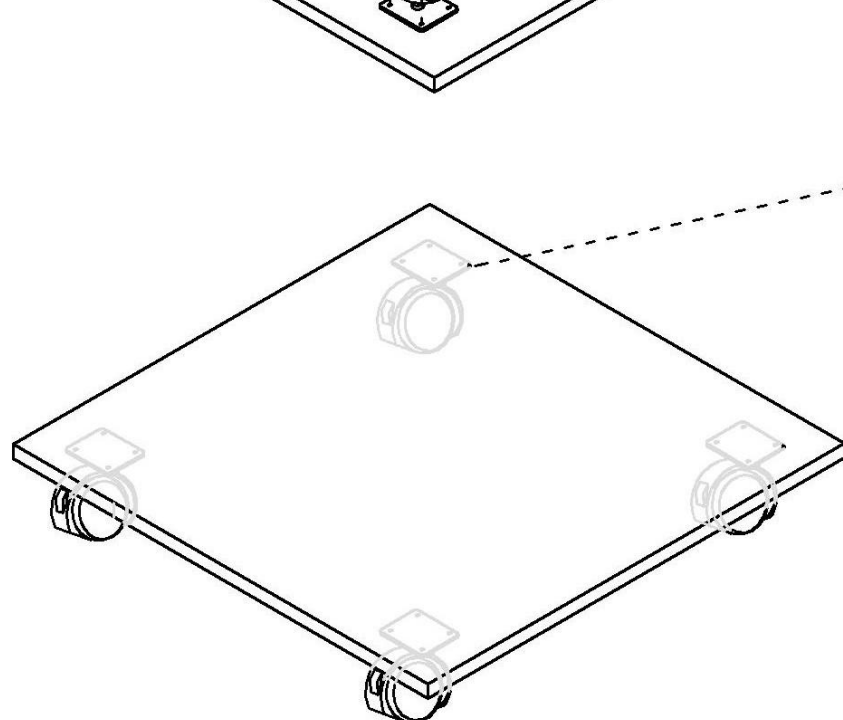


Press the
wheel lock

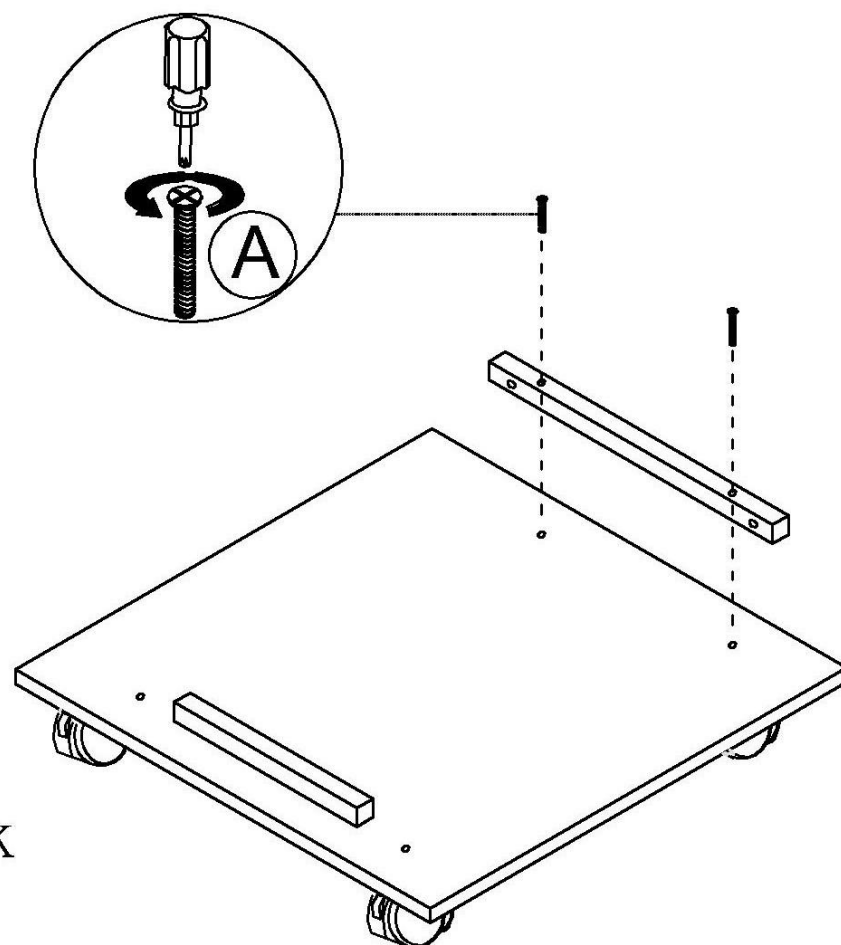



Step 2

Battery installation


(Tip: use 3 AAA Batteries)

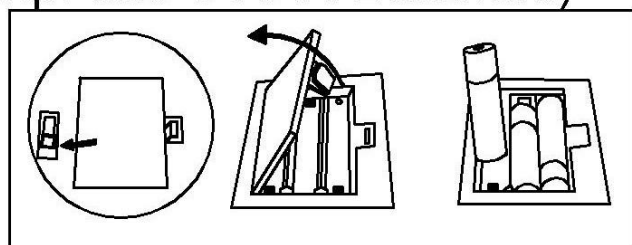






(A)	(6*30mm)	x 2
(G)		x 10
(H)		x 5

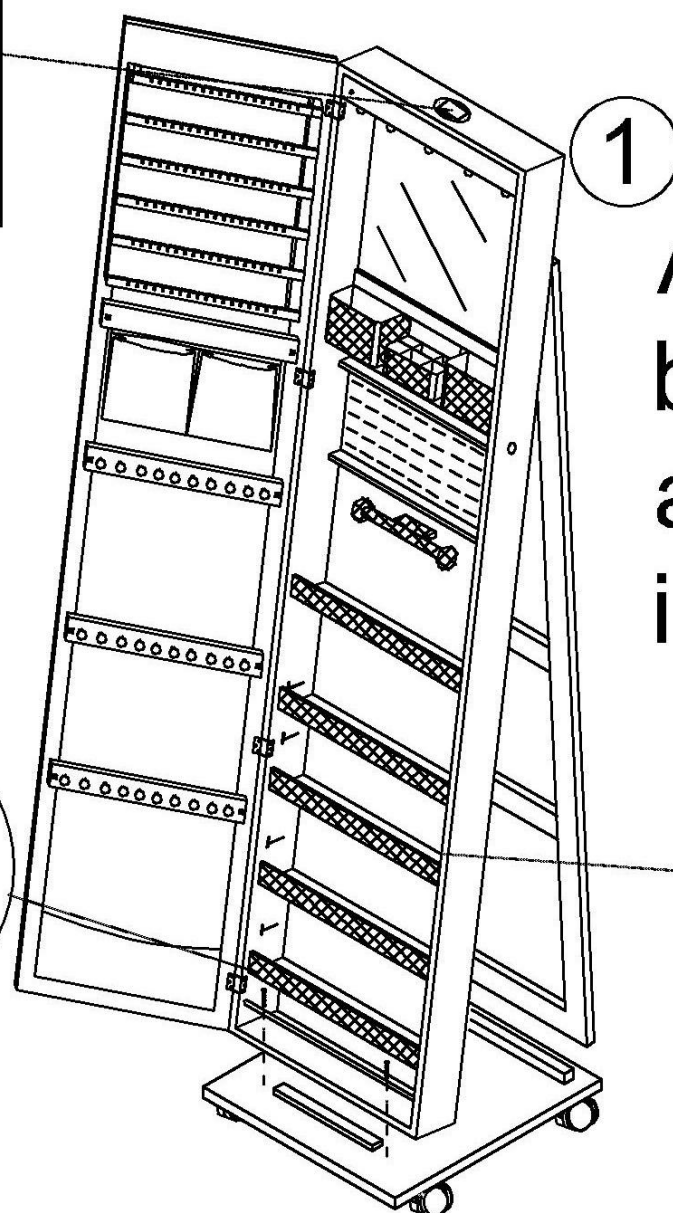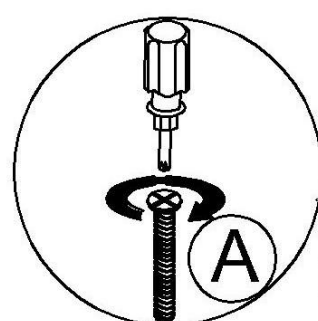


1
Acrylic layer can
be adjusted
according to
individual needs

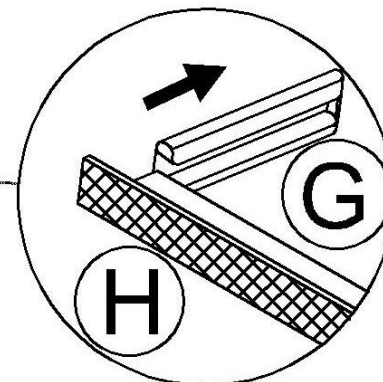



Step 3

(J)		x 1	(D)	 (5*8mm)	x 4
(L)		x 1	(C)	 (5*20mm)	x 4
			(A)	 (6*30mm)	x 2

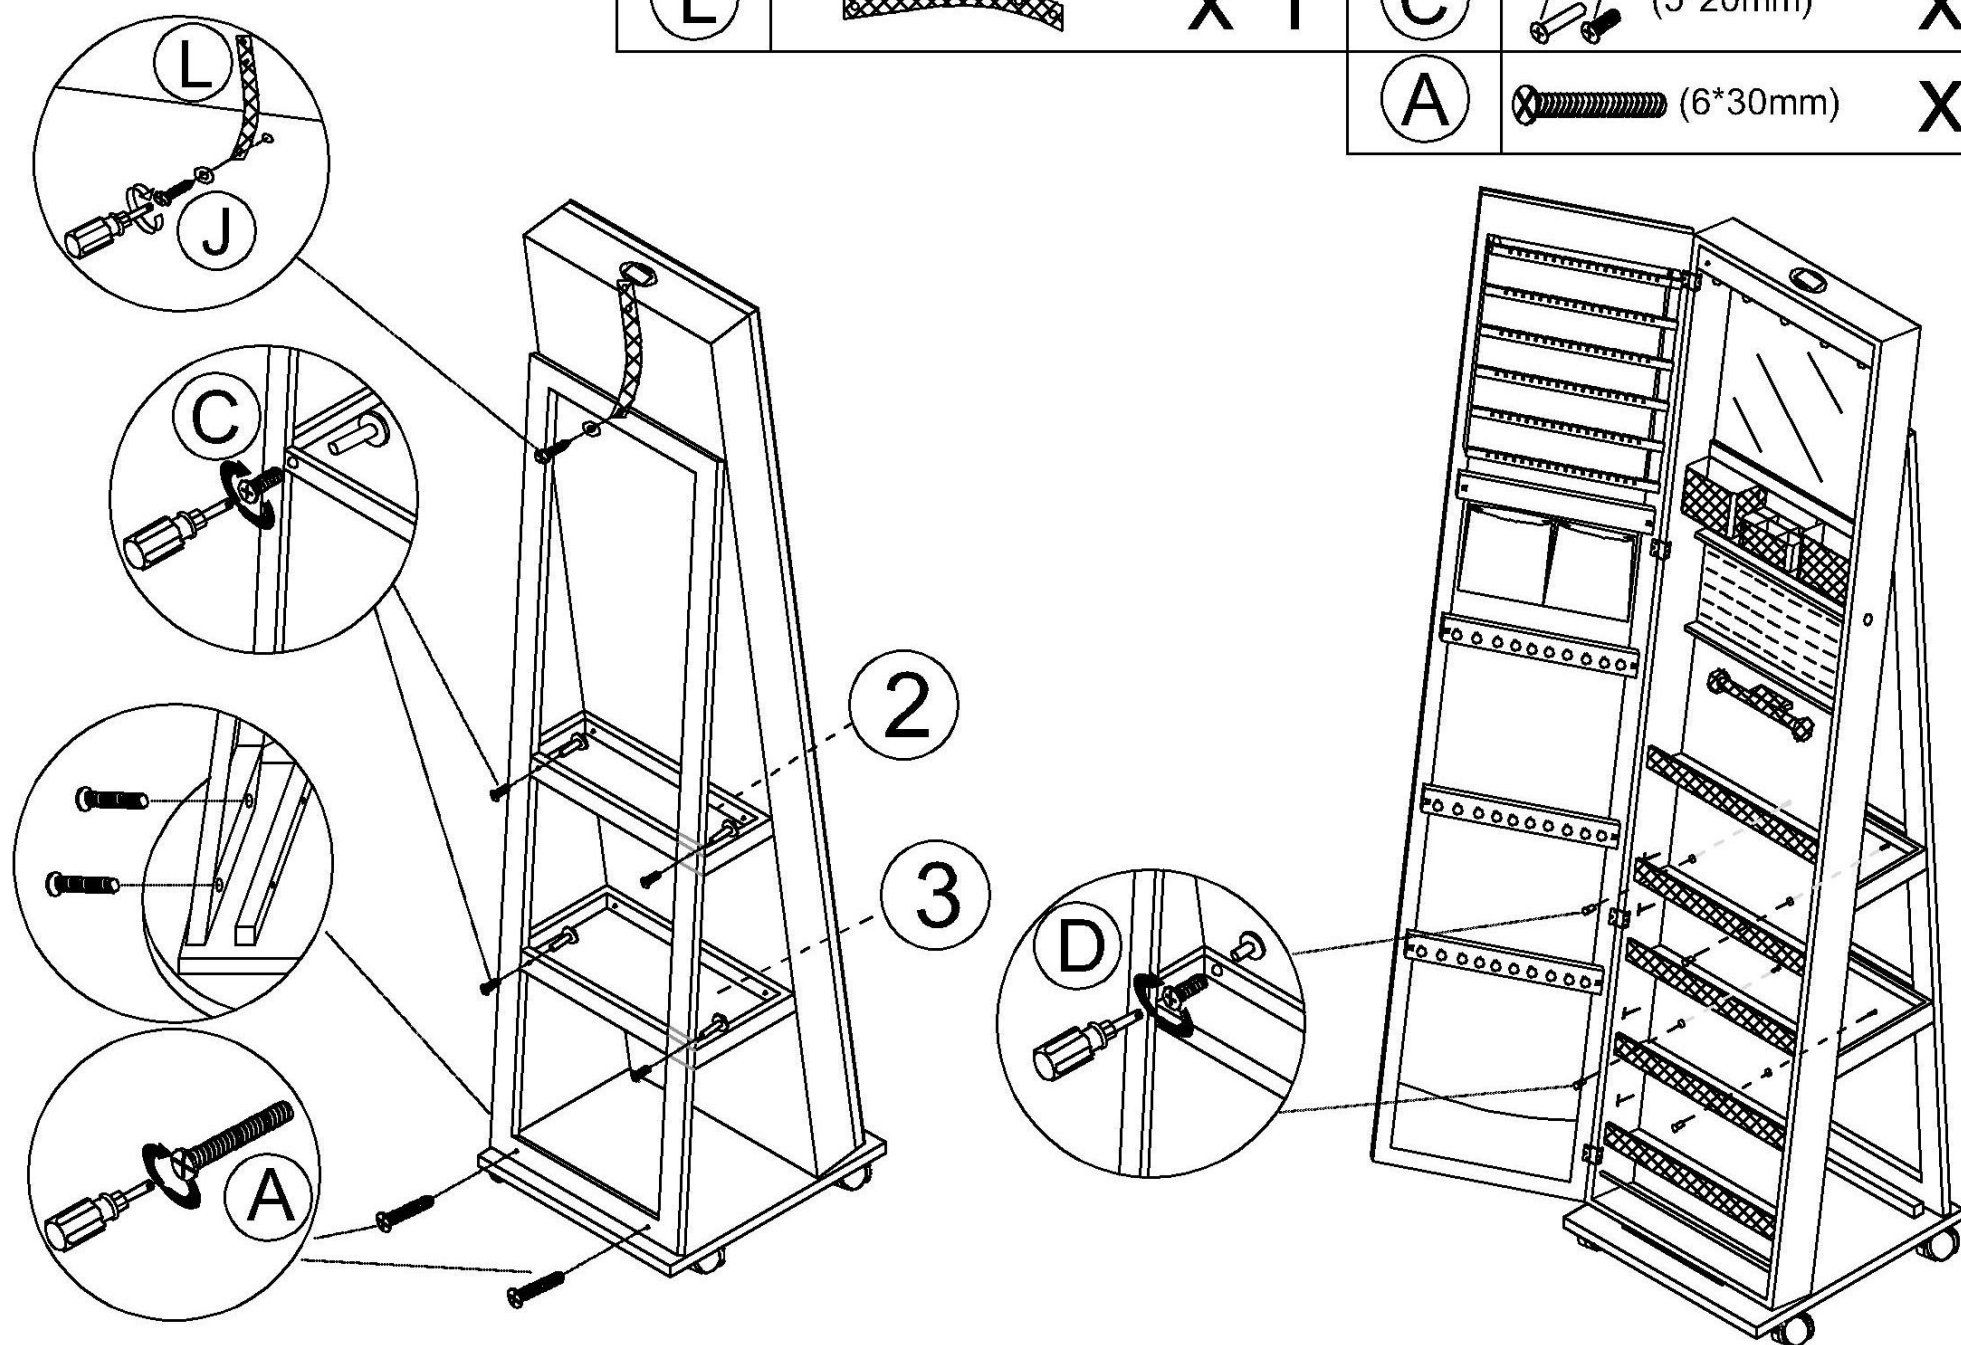

Step 4

(B)		x 1
(K)		x 1

