


ASSEMBLY INSTRUCTION

ITEM NO.N715P201976

Console Table

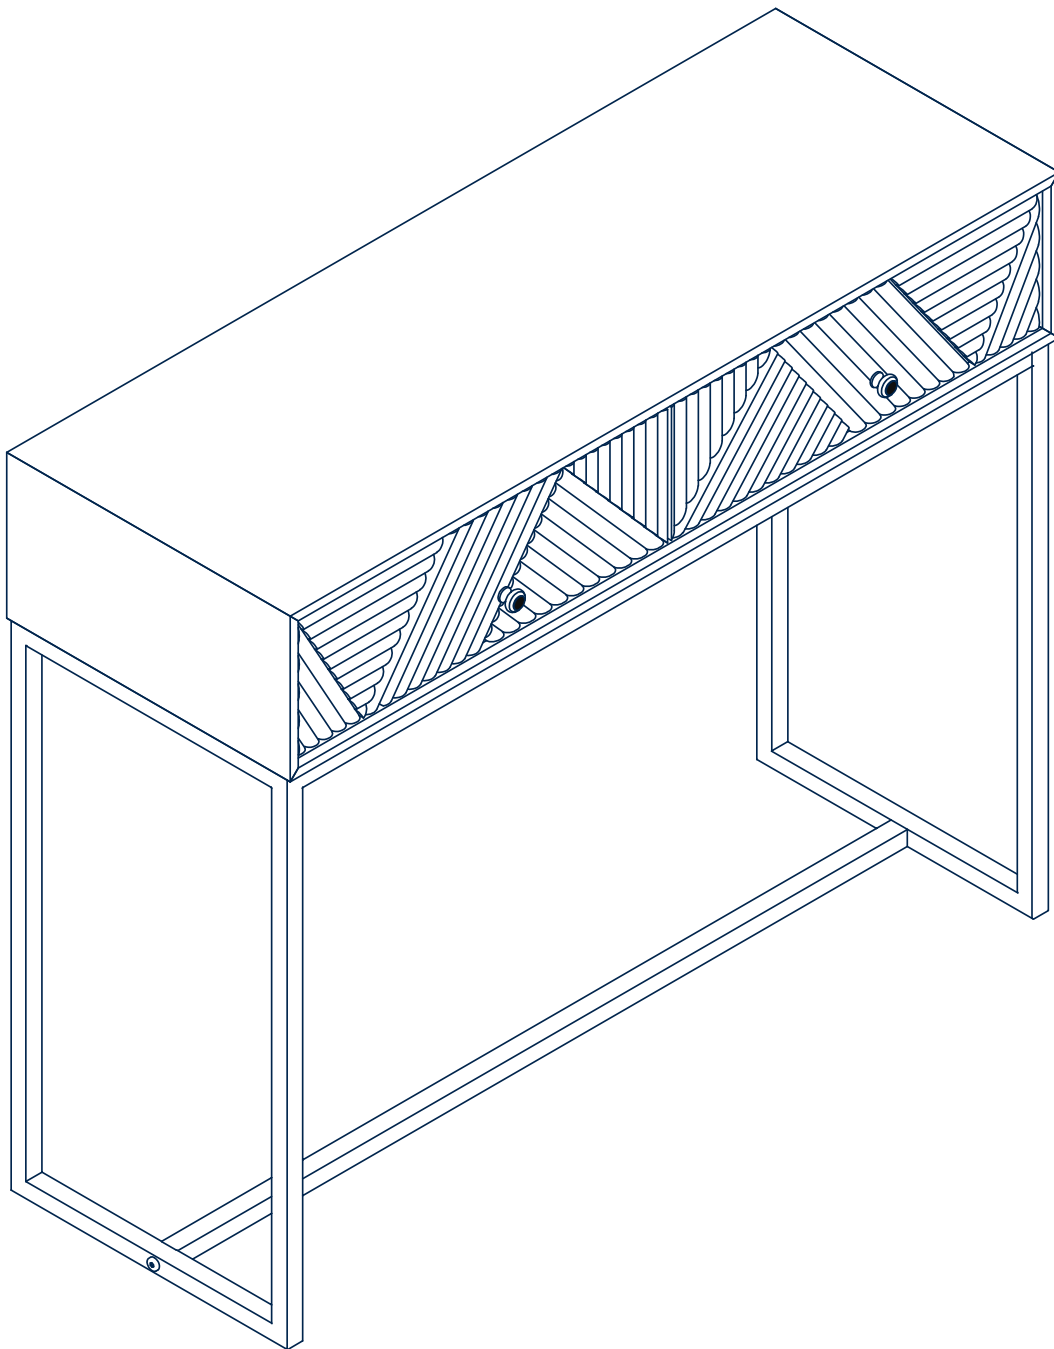

ASSEMBLY INSTRUCTION

ITEM NO.N715P201976

Please read these instructions fully before starting assembly:


1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

ITEM NO.N715P201976

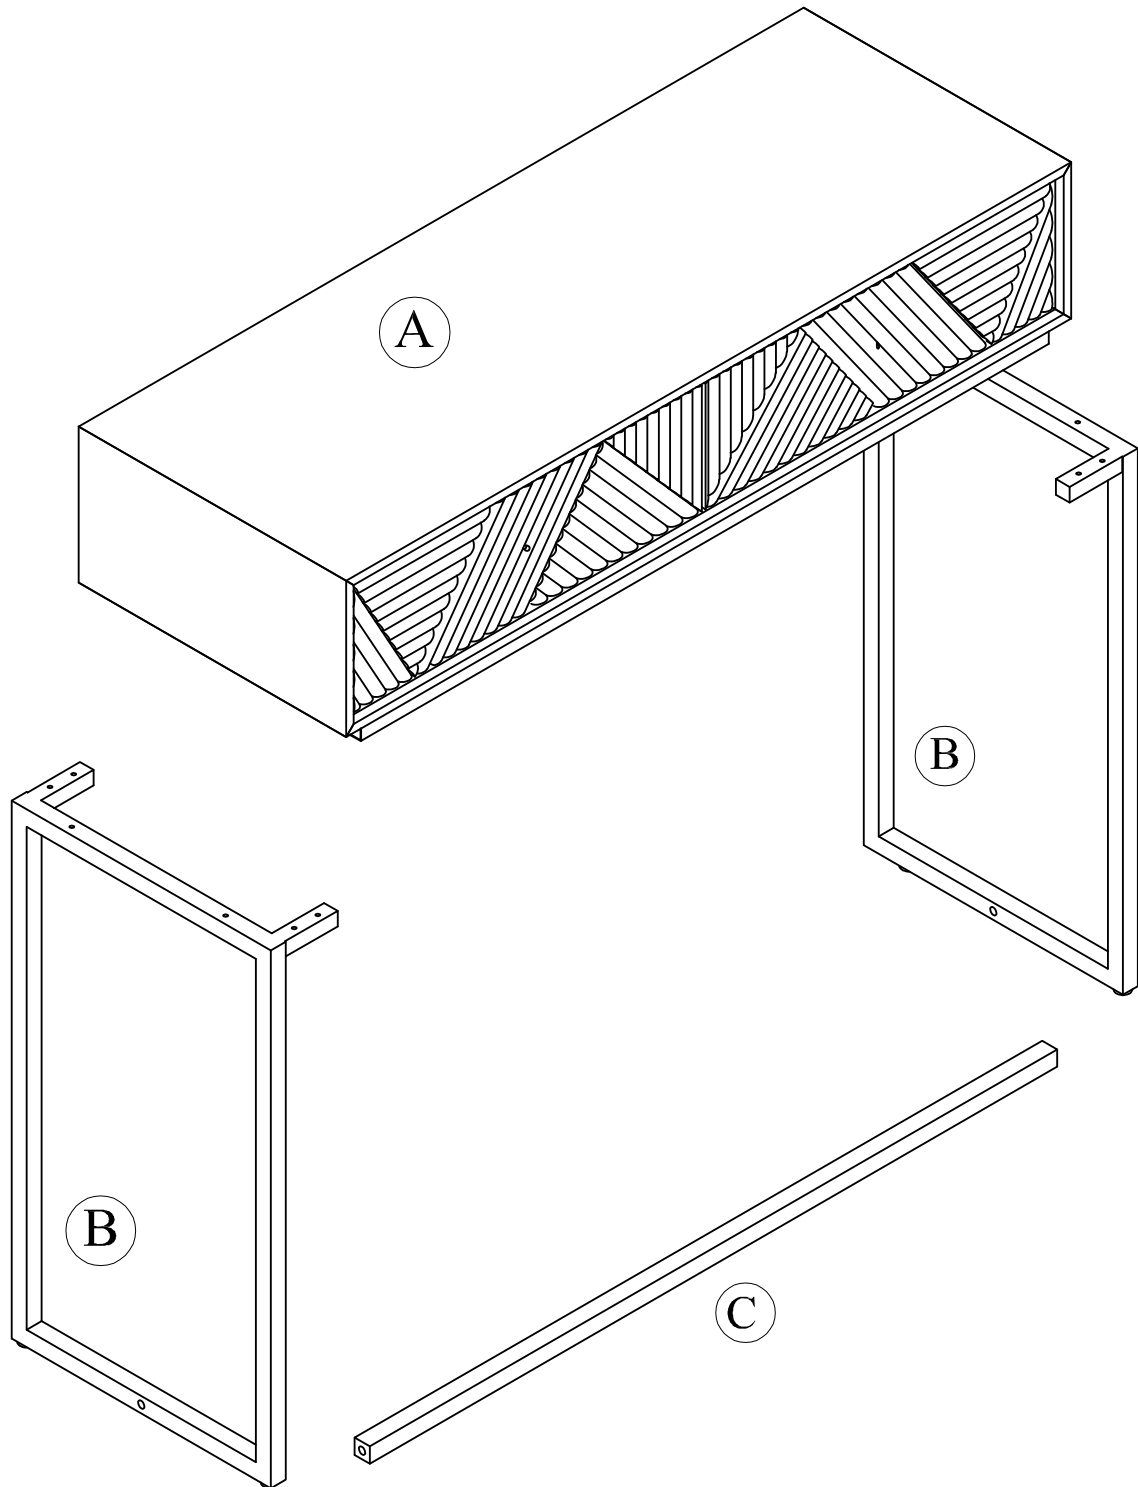

ASSEMBLY INSTRUCTION

ITEM NO.N715P201976

Part List

Ⓐ


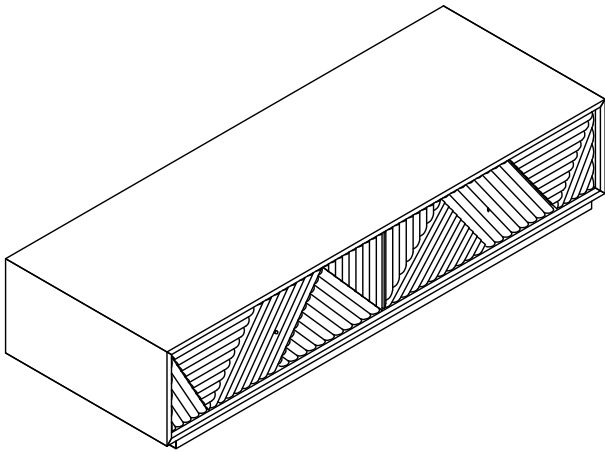



TABLE FRANE (1 pc)

Ⓑ

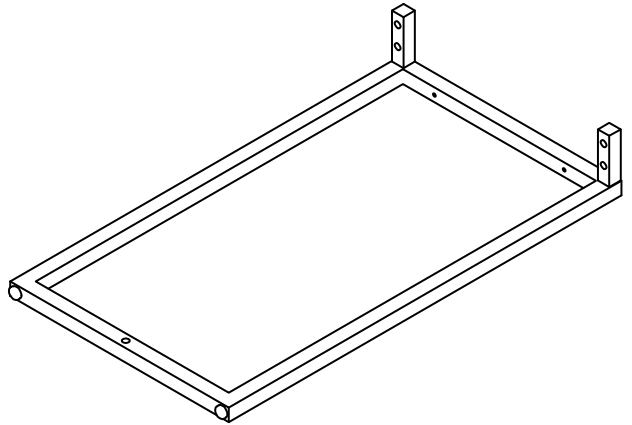

METAL LEGS (2 pcs)

Ⓒ

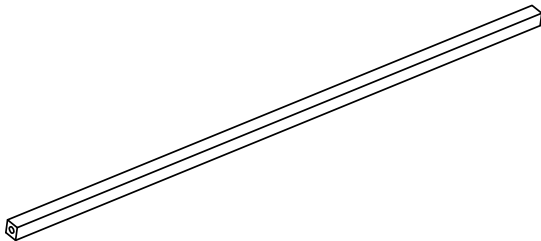


SUPPORT LEG (1 pc)

ASSEMBLY INSTRUCTION

ITEM NO.N715P201976

Hardware List


①

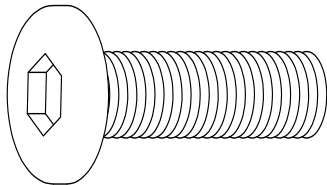

Ø 6 x 15 mm

SORT BOLT (8 pcs)


②

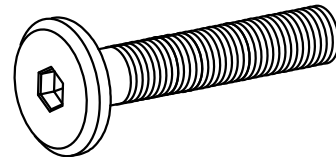

Ø 6 x 30 mm

LONG BOLT (2 pcs)

③



Ø4 x 30mm

WOOD SCREWS (4 pcs)


④



K4 mm

ALLEN KEY (1 pc)

⑤

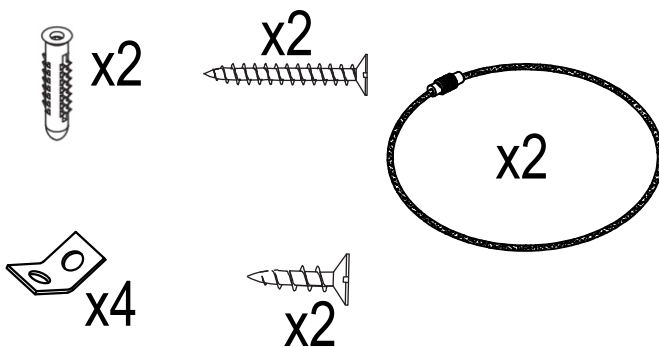


ANTI-PARKING KIT (2 Sets)

ASSEMBLY INSTRUCTION


ITEM NO.N715P201976

STEP 1:

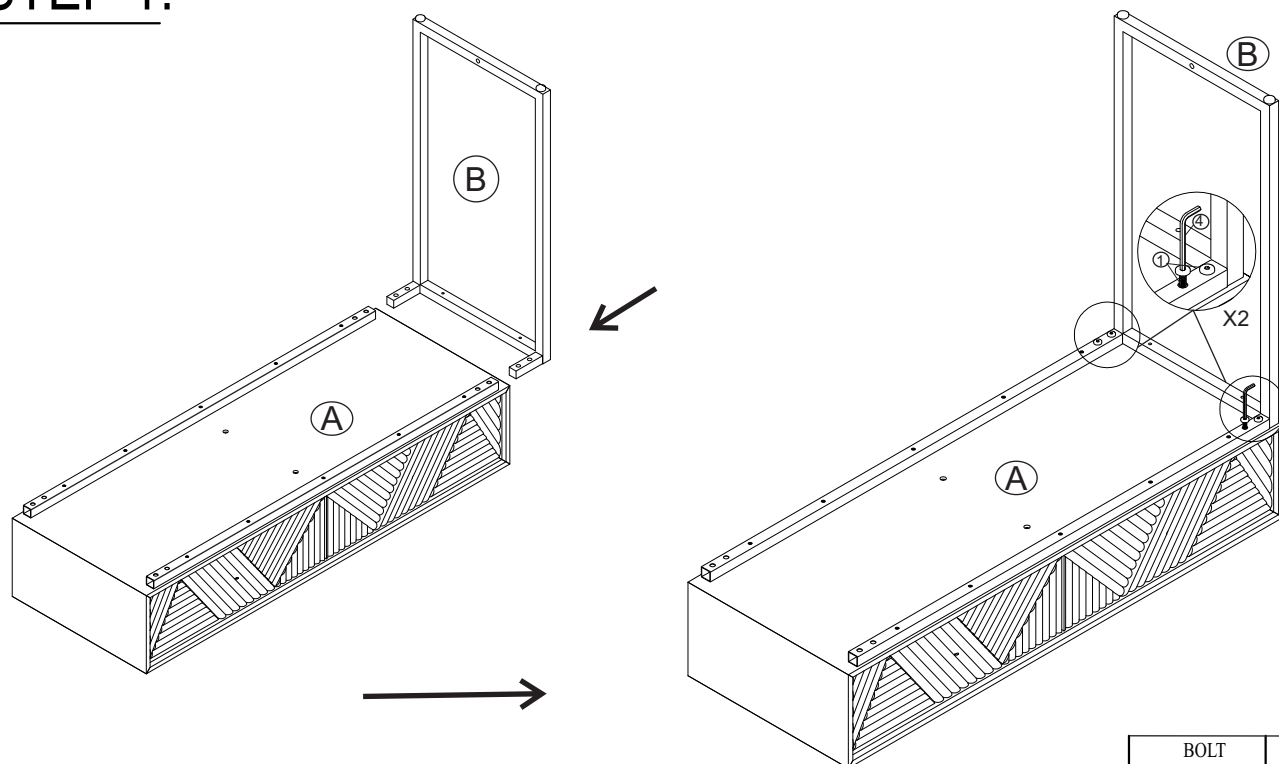

BOLT	ALLEN KEY
Ø 6 x 15 mm	4 mm
	
① x 4	④ x 1

STEP 2:

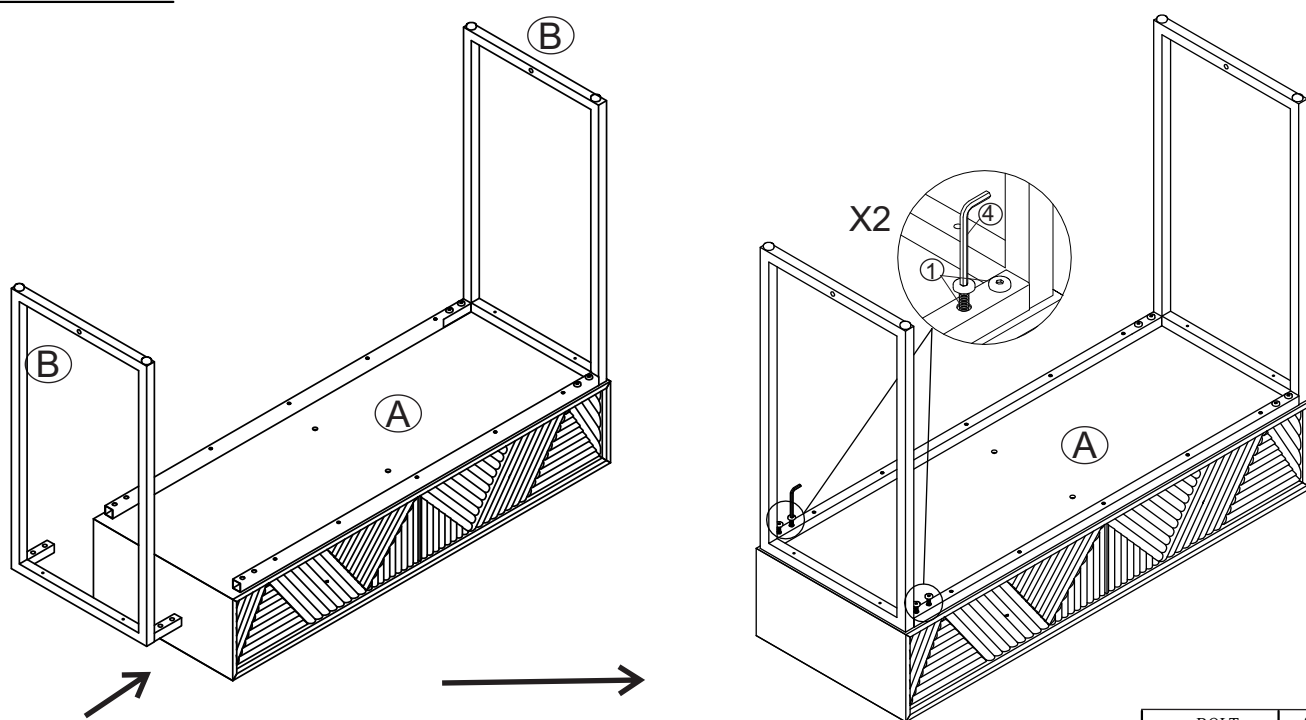


BOLT	ALLEN KEY
Ø 6 x 15 mm	4 mm
	
① x 4	④ x 1


ASSEMBLY INSTRUCTION

ITEM NO.N715P201976

STEP 3:

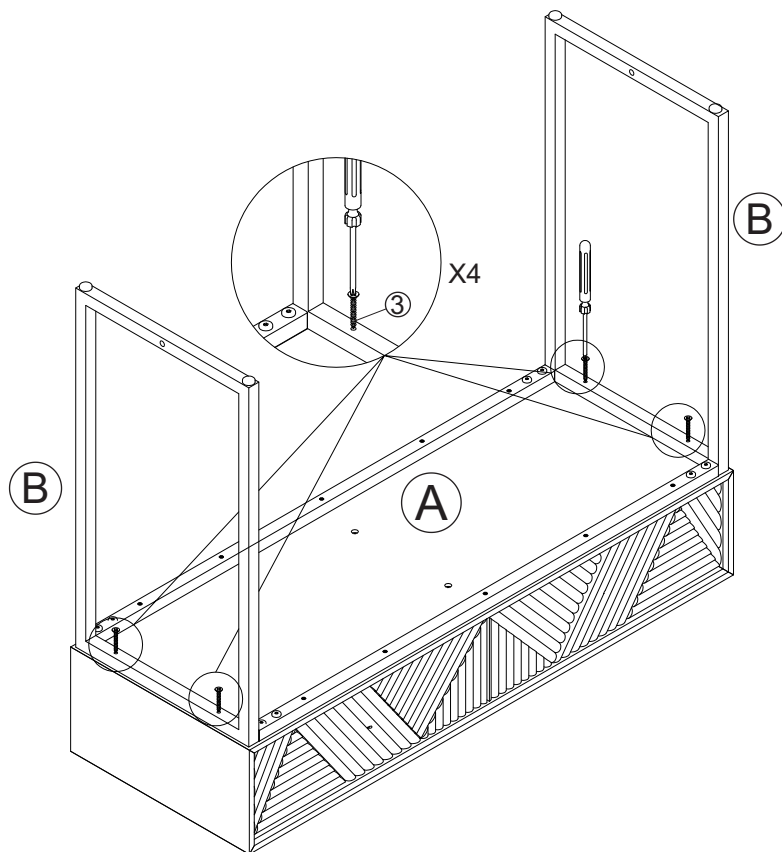


WOOD SCREWS
(4 pcs)



③x 4

STEP 4:

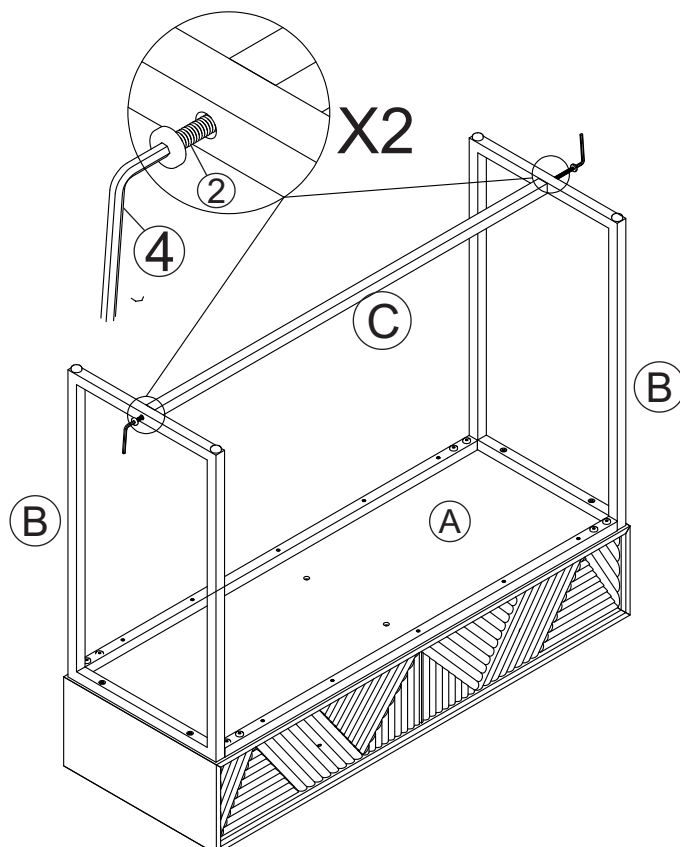

LONG BOLT
Ø 6 x 30 mm



②x 2

ALLEN KEY
4 mm




④x 1


ASSEMBLY INSTRUCTION

ITEM NO.N715P201976


STEP 5:

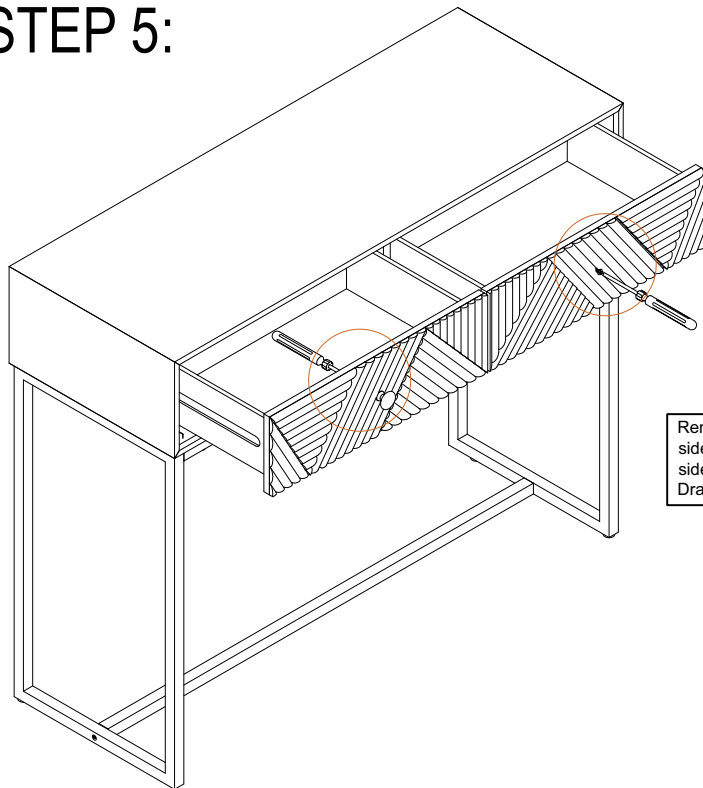

Remove the Handle in side drawer and mount out side when in use (on 3 Drawers)

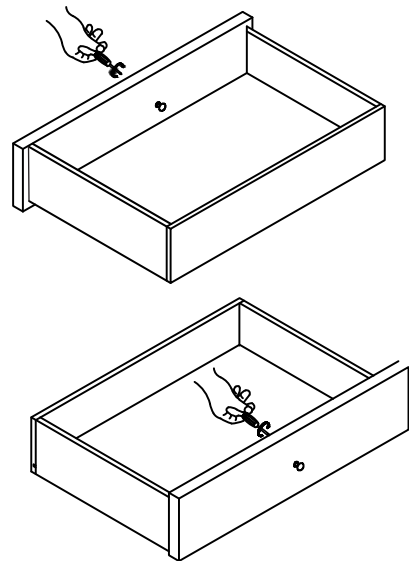


STEP 6:

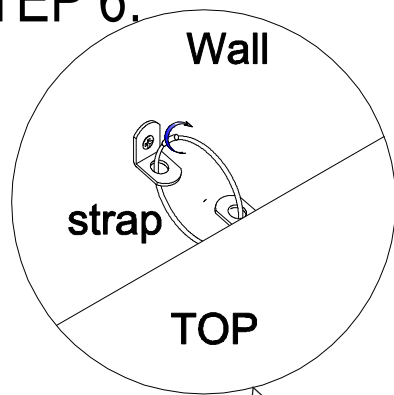


strap

TOP

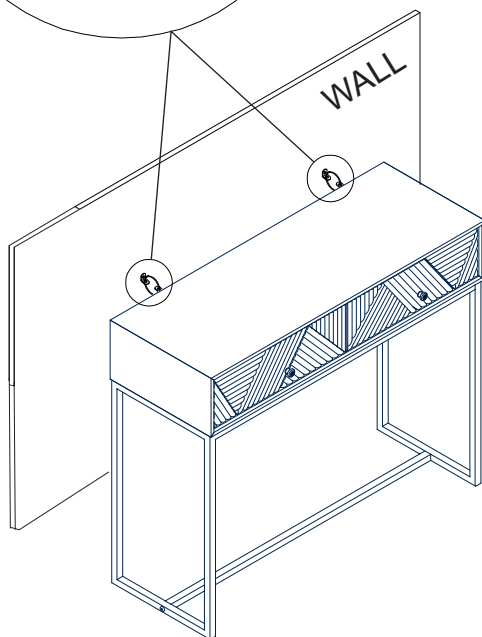


WALL

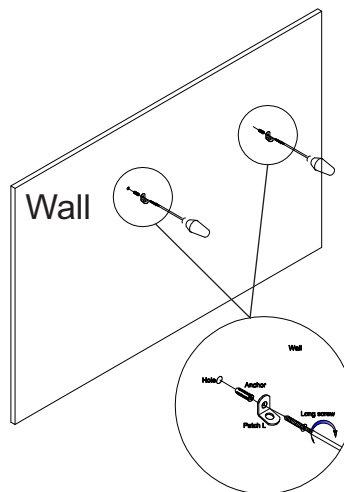

Wall

Wall

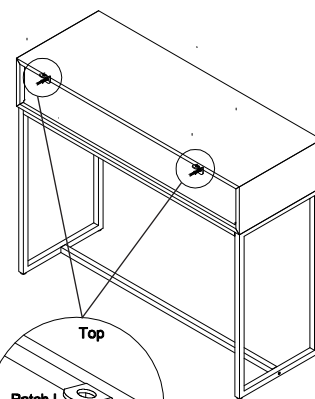


Top

Patch L

Short screw

Back

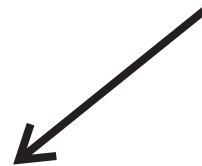

5: ANTI-PARKING KIT

				
2 pcs	4 pcs	2 pcs	2 pcs	2 pcs