
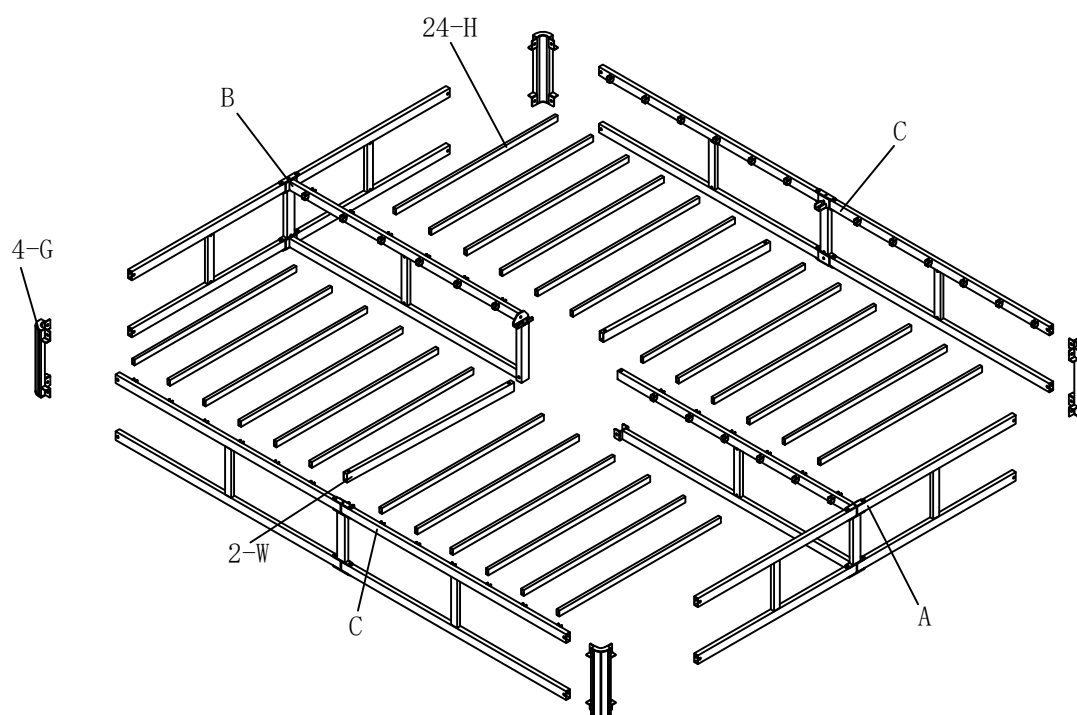






BOX SPRING

Set-up Instruction


Size: Full/Queen/ King/ Cal King

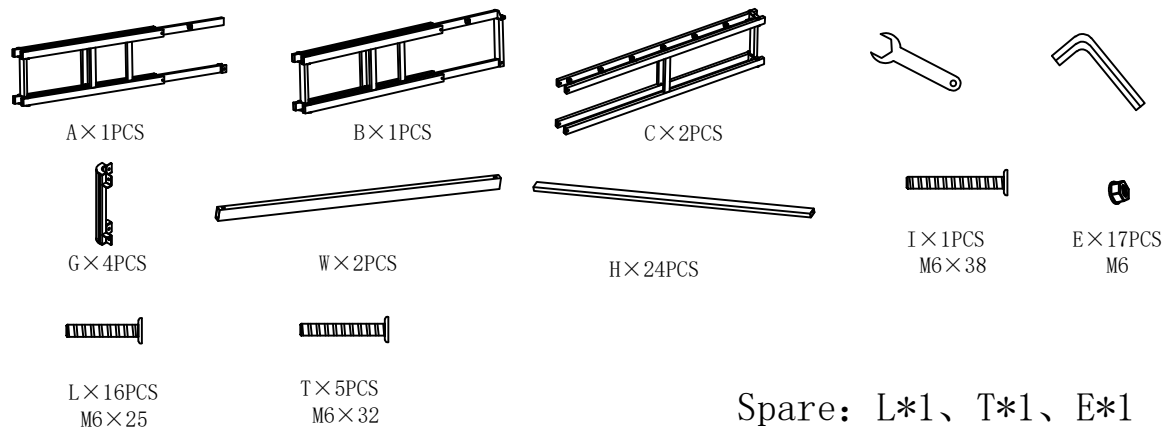

Step1: Unfold and layout parts A & B;
Joint them with screws as shown

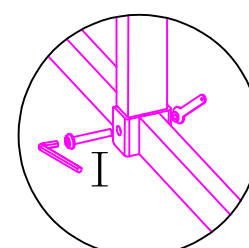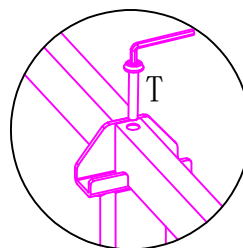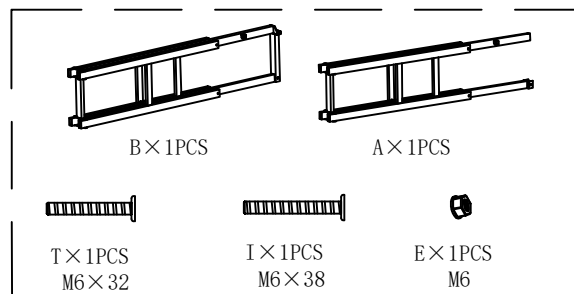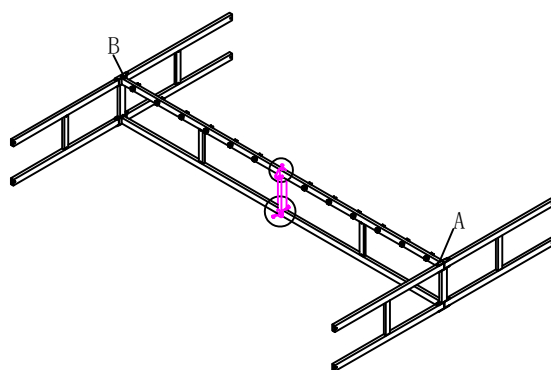


Step2:Joint four corners with screws as shown

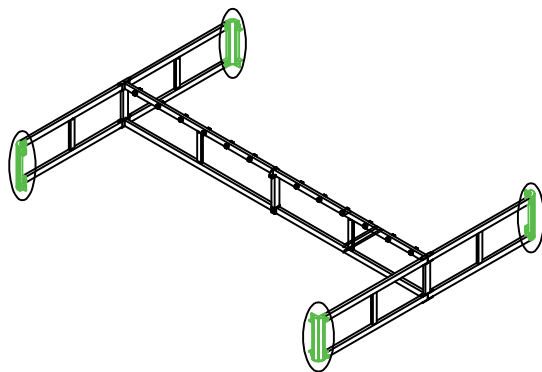


G × 4PCS

L × 8PCS
M6 × 25

E × 8PCS
M6

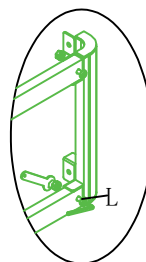


Step3:Joint parts C with screws as shown

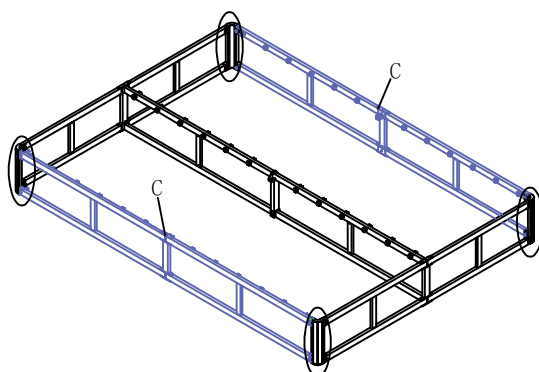


C × 2PCS

L × 8PCS
M6 × 25

E × 8PCS
M6




Step4:Joint parts E with screws as shown

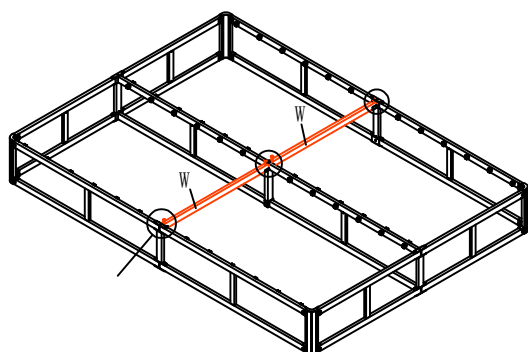


W × 2PCS

T × 4PCS
M6 × 32

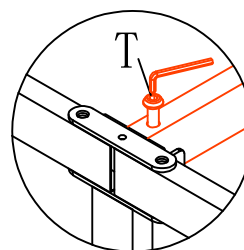

Step5:Insert 24 F slats

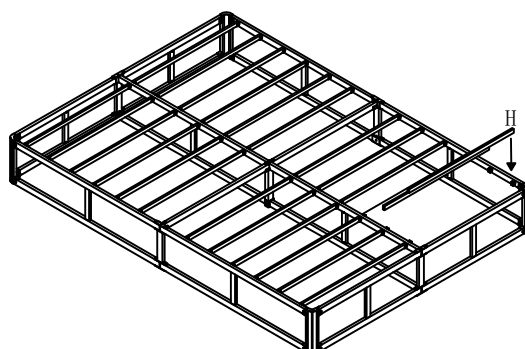

H × 24PCS

If you have any questions about the product, please don't hesitate to contact us.
You can reach us through your order. Thanks for your support!