


ASSEMBLY INSTRUCTION



Before you begin, please follow the assembly instruction carefully. Please follow them step by step.

MODEL NO : NY 1930 FULL BED






1)  CSK CB M4 x 32mm 34 PCS	2)  JCBC M6 x 60mm 3 PCS	3)  L KEY 4 1 PC	4)  ADJUSTER M6 x 23mm 3 PCS	5)  JCBB M8 x 20mm 8 PCS	6)  L KEY 5 1 PC	7)  L BRACKET 1 PC	8)  CSK CB M4 x 25mm 10 PCS	9)  JCBB M8 x 35mm 6 PCS	10)  M8 WASHER 6 PCS	11)  LEG STUD 4 PCS
--	--	---	--	--	---	---	---	--	---	--

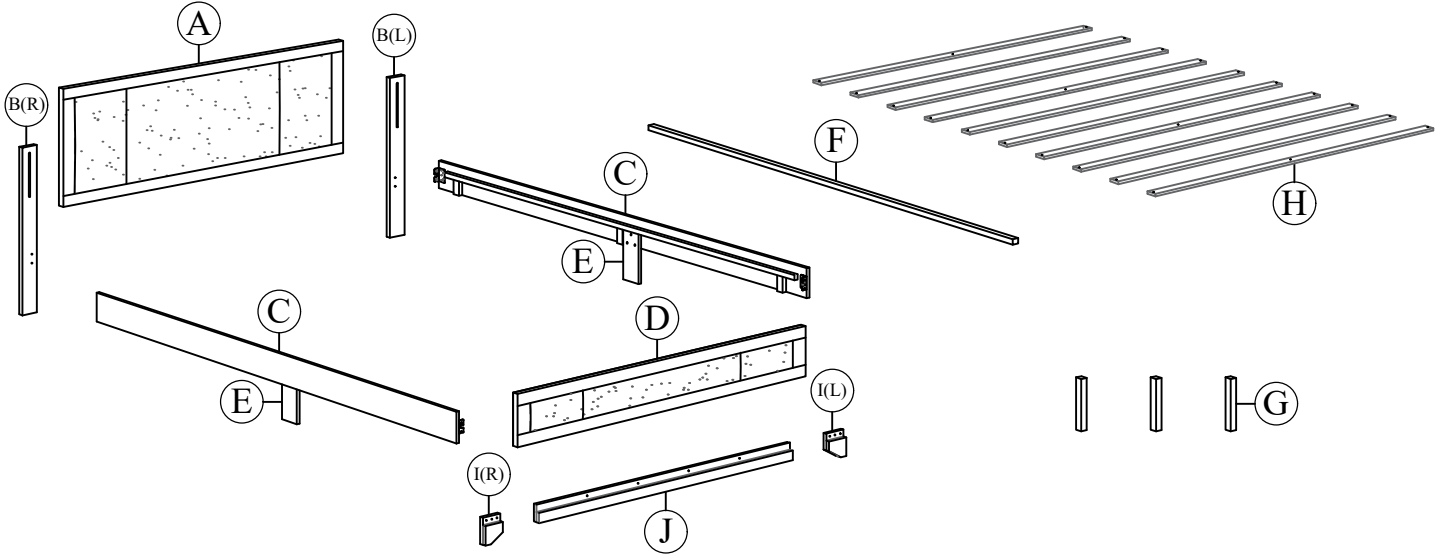



STEP 1

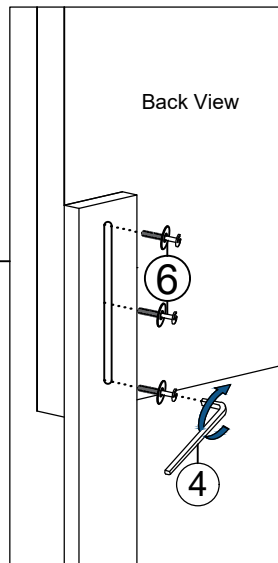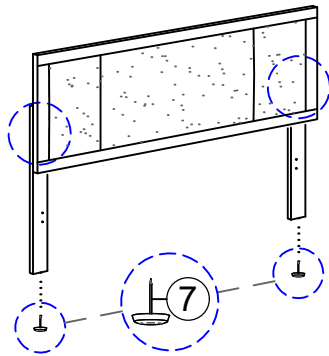



STEP 2

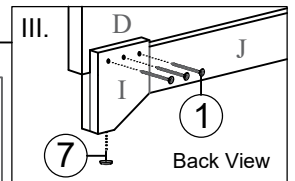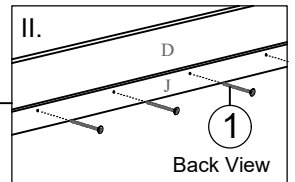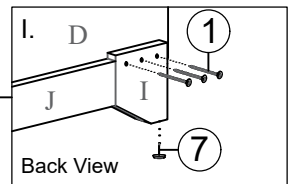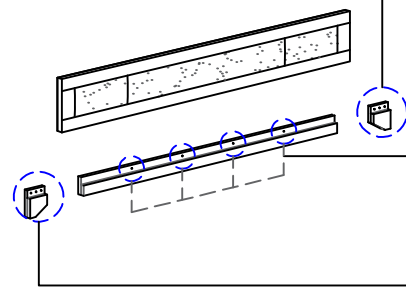

STEP 3

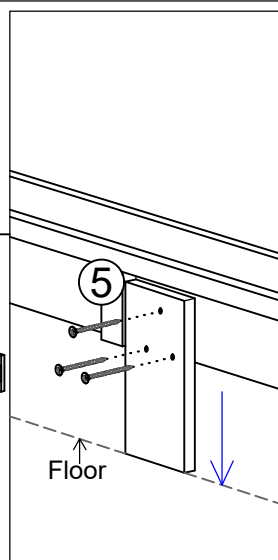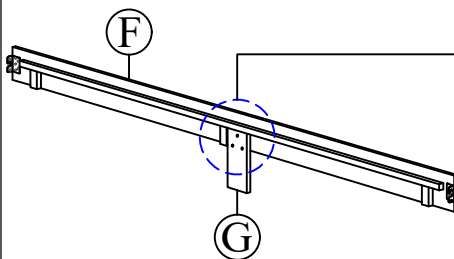




STEP 4

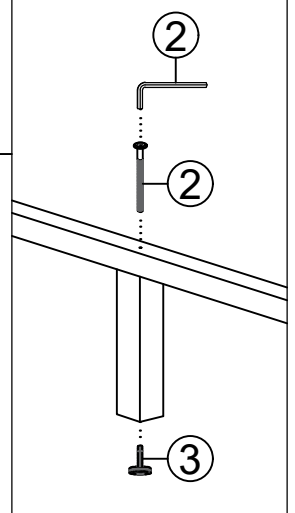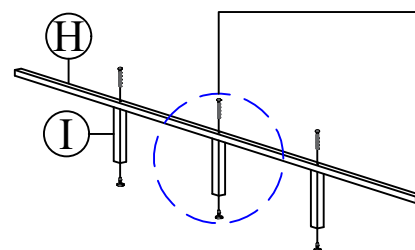



ASSEMBLY INSTRUCTION

Before you begin, please follow the assembly instruction carefully. Please follow them step by step.





STEP 5

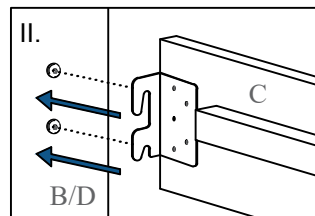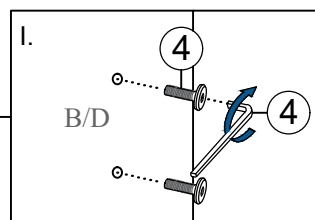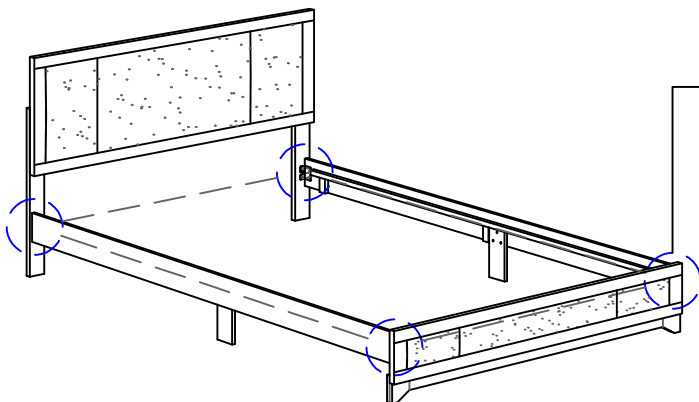

STEP 6

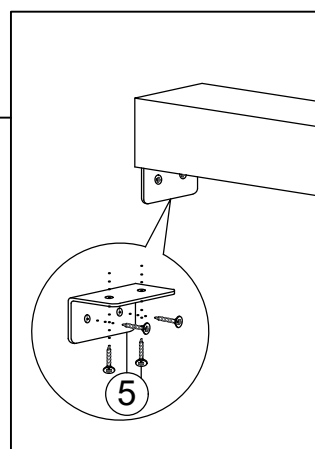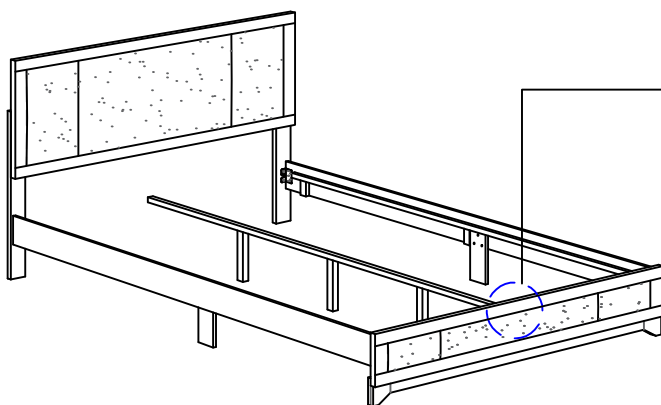

STEP 7

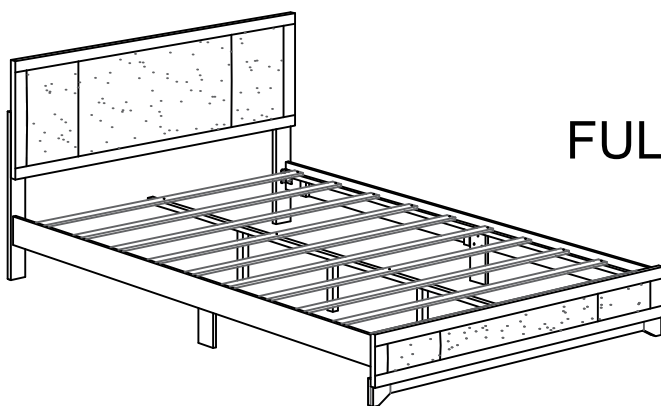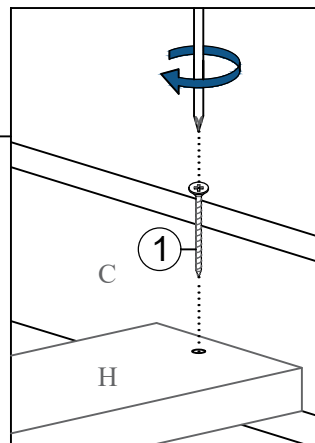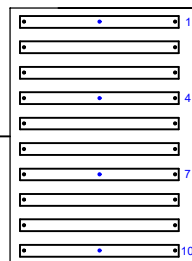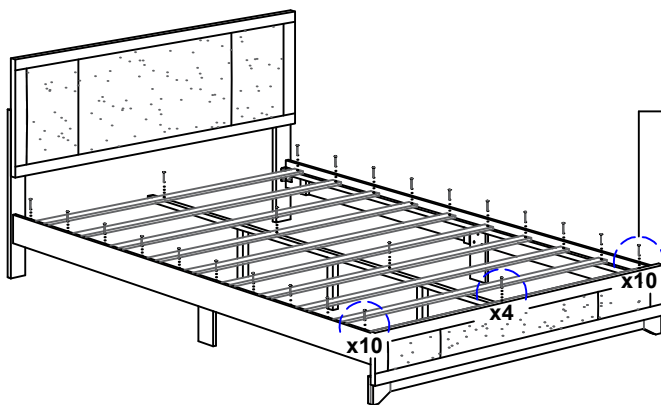


FULLY ASSEMBLED

ASSEMBLY INSTRUCTION



Before you begin, please follow the assembly instruction carefully. Please follow them step by step.

MODEL NO : NY 1930 **QUEEN BED**






1)  CSK CB M4 x 32mm 34 PCS	2)  JCBC M6 x 60mm 3 PCS	3)  L KEY 4 1 PC	4)  ADJUSTER M6 x 23mm 3 PCS	5)  JCBB M8 x 20mm 8 PCS	6)  L KEY 5 1 PC	7)  L BRACKET 1 PC	8)  CSK CB M4 x 25mm 10 PCS	9)  JCBB M8 x 35mm 6 PCS	10)  M8 WASHER 6 PCS	11)  LEG STUD 4 PCS
--	--	---	--	--	---	---	---	--	---	--

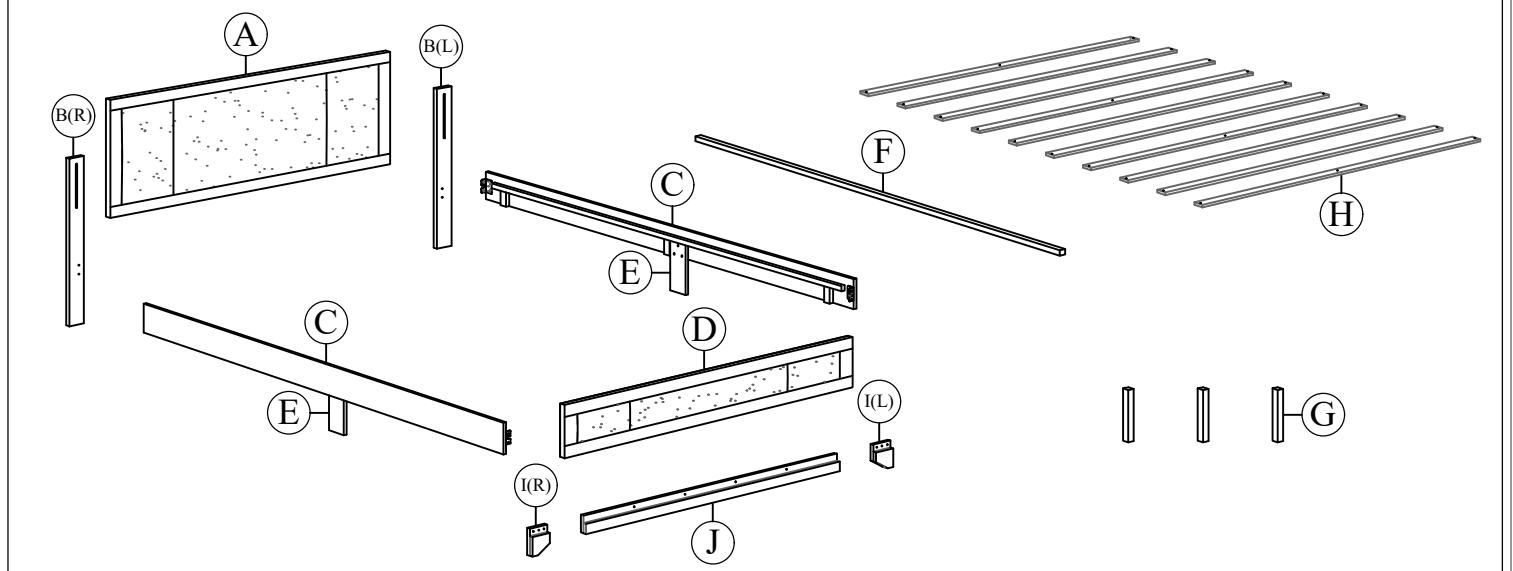



STEP 1

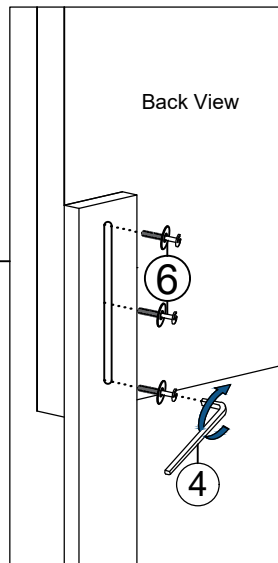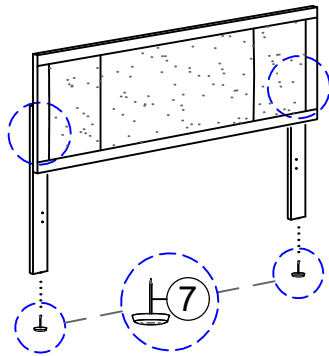



STEP 2

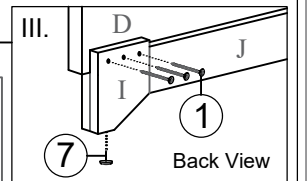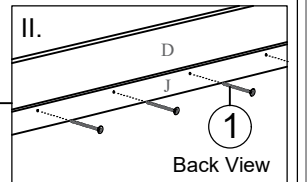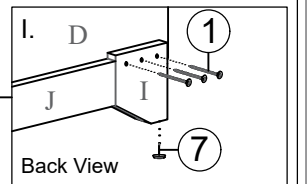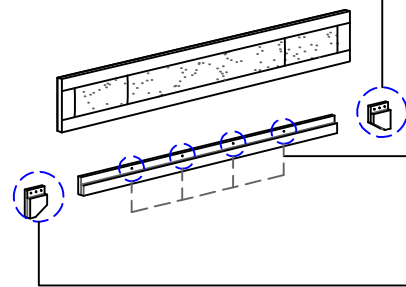

STEP 3

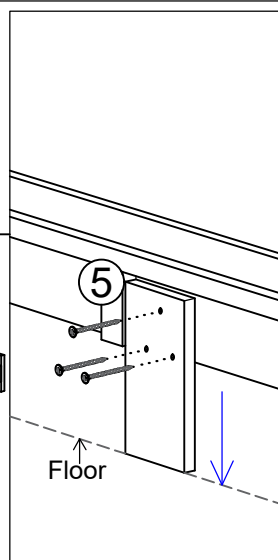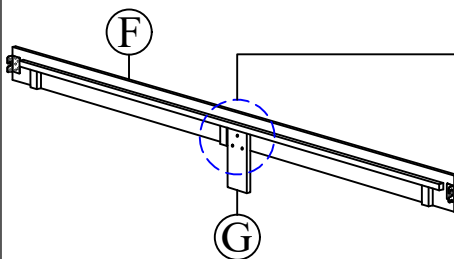




STEP 4

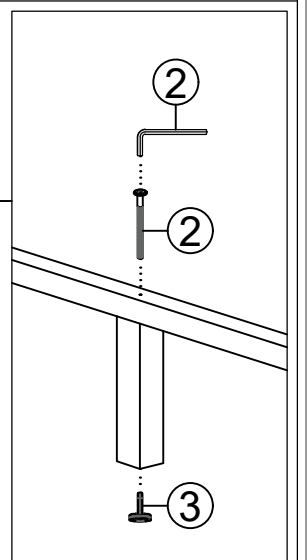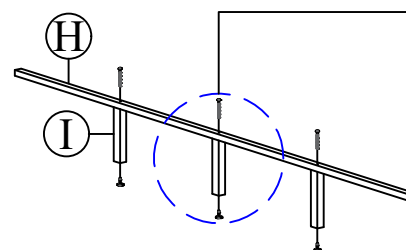



ASSEMBLY INSTRUCTION

Before you begin, please follow the assembly instruction carefully. Please follow them step by step.





STEP 5

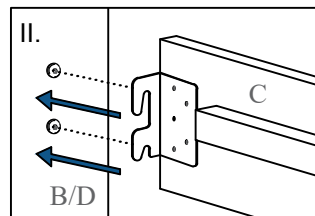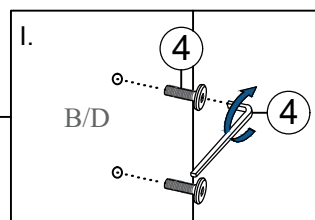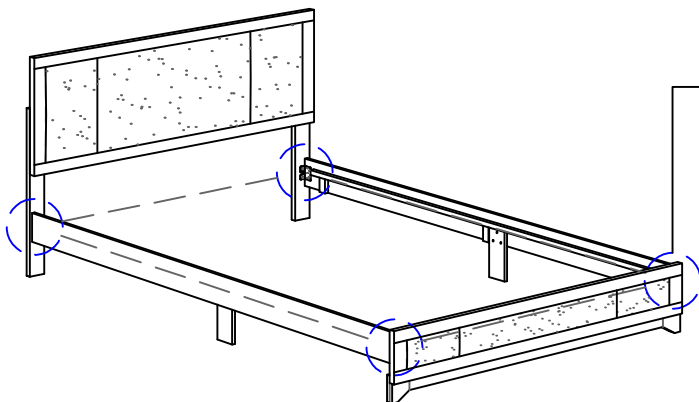

STEP 6

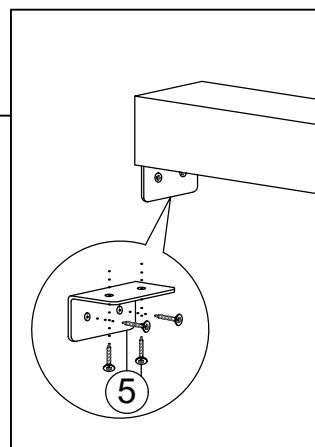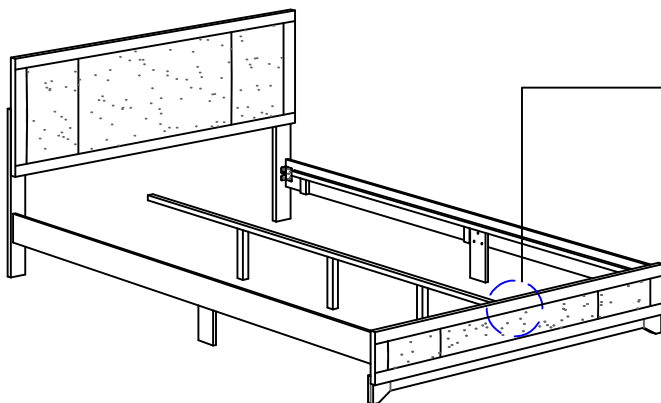

STEP 7

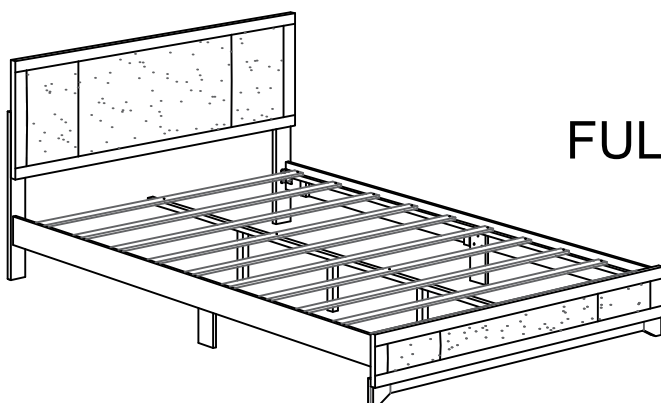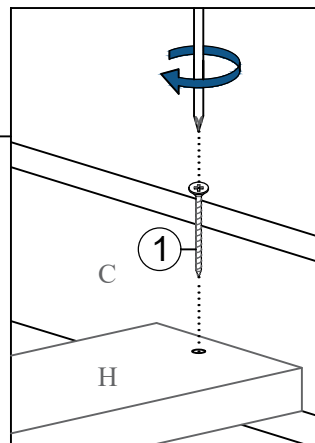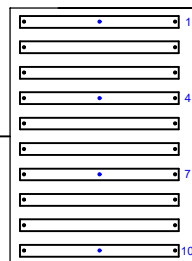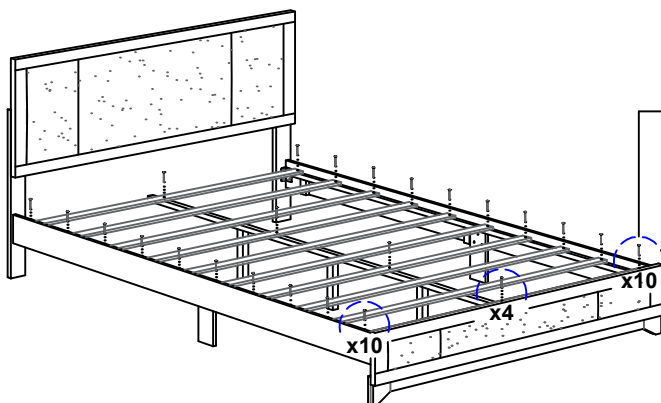


FULLY ASSEMBLED

ASSEMBLY INSTRUCTION


Before you begin, please follow the assembly instruction carefully. Please follow them step by step.

MODEL NO : NY 1930 KING BED


1)  CSK CB M4 x 32mm 38 PCS	2)  JCBC M6 x 60mm 6 PCS	3)  L KEY 4 1 PC	4)  ADJUSTER M6 x 23mm 6 PCS	5)  JCBB M8 x 20mm 8 PCS	6)  L KEY 5 1 PC	7)  L BRACKET 2 PCS	8)  CSK CB M4 x 25mm 14 PCS	9)  JCBB M8 x 35mm 6 PCS	10)  M8 WASHER 6 PCS	11)  LEG STUD 4 PCS
---	---	--	---	---	--	---	---	---	---	---

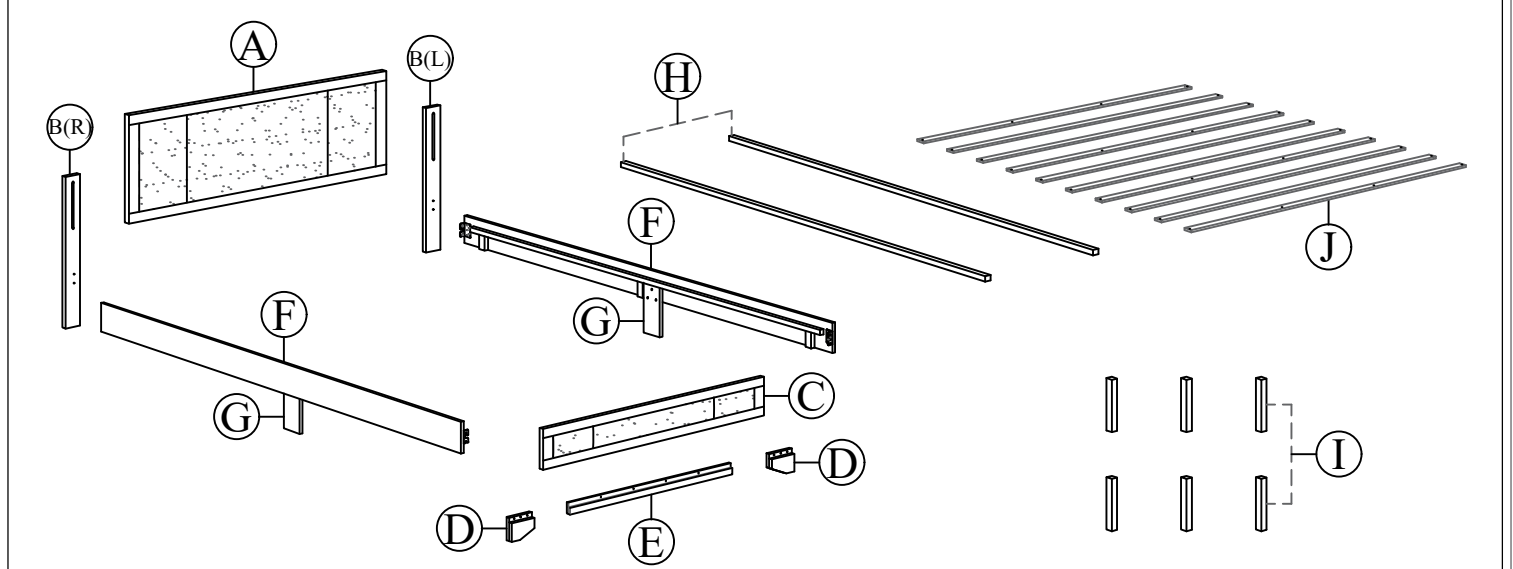


STEP 1

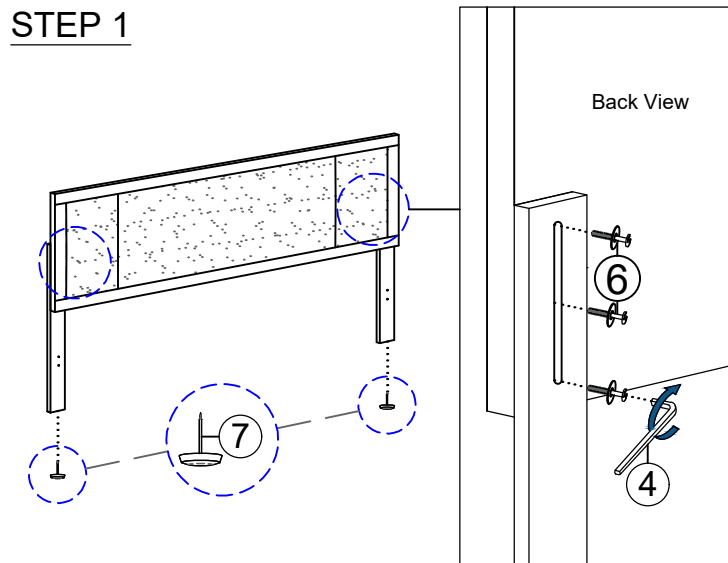


STEP 2

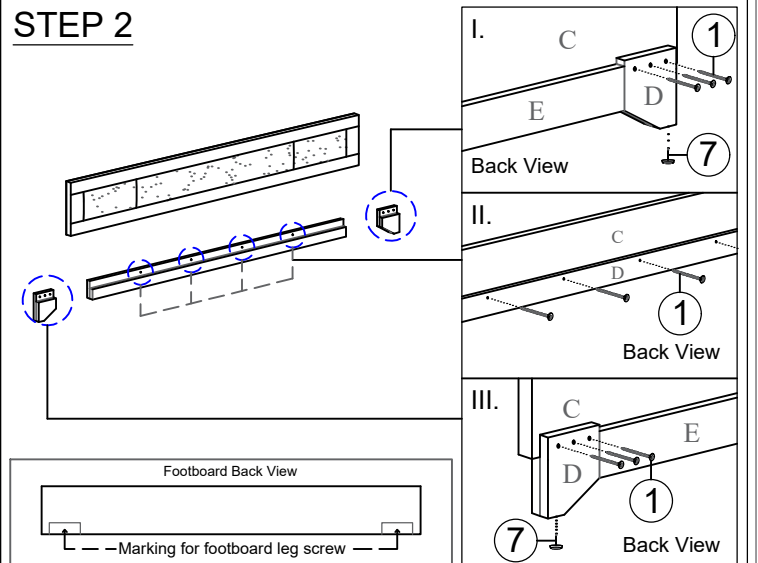

STEP 3

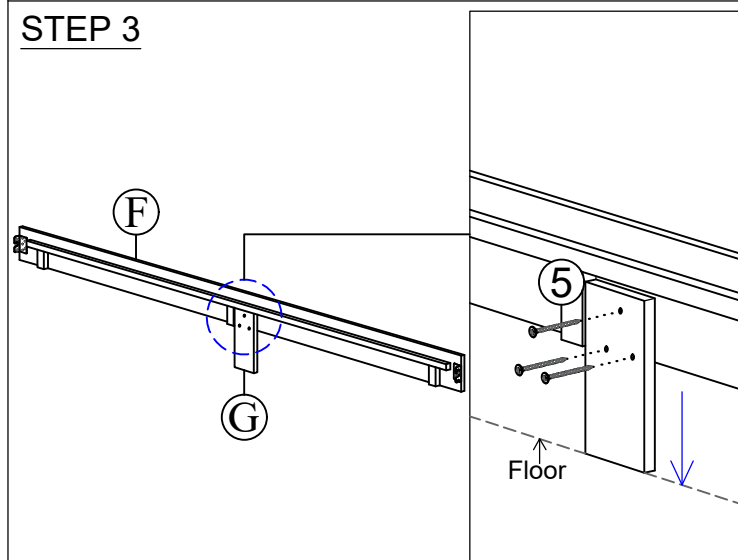




STEP 4

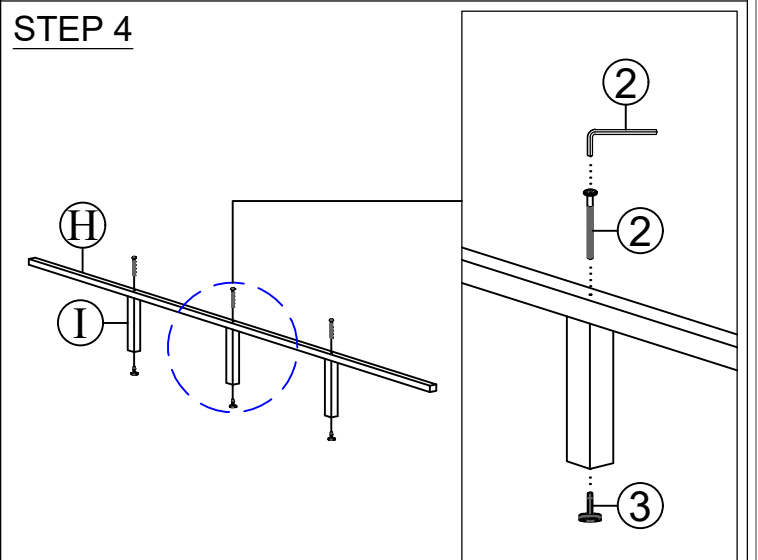



ASSEMBLY INSTRUCTION

Before you begin, please follow the assembly instruction carefully. Please follow them step by step.





STEP 5

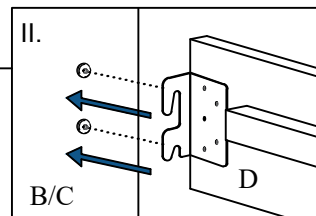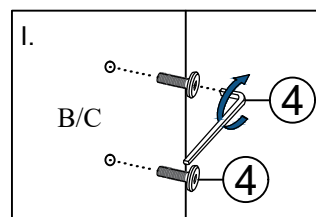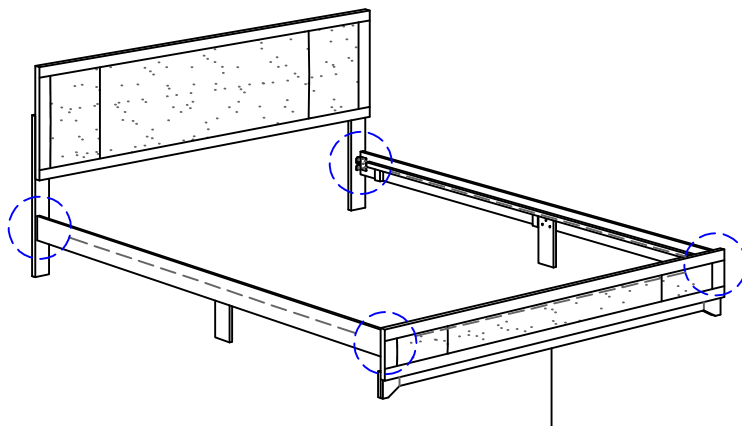

STEP 6

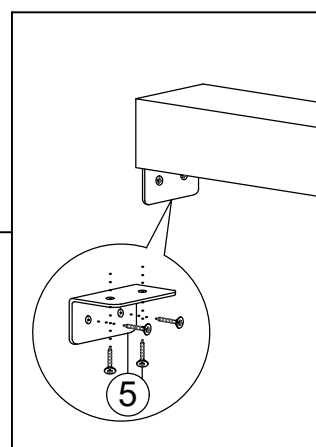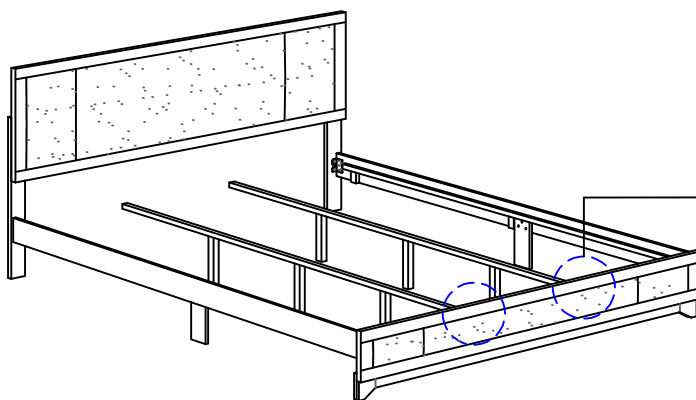

STEP 7

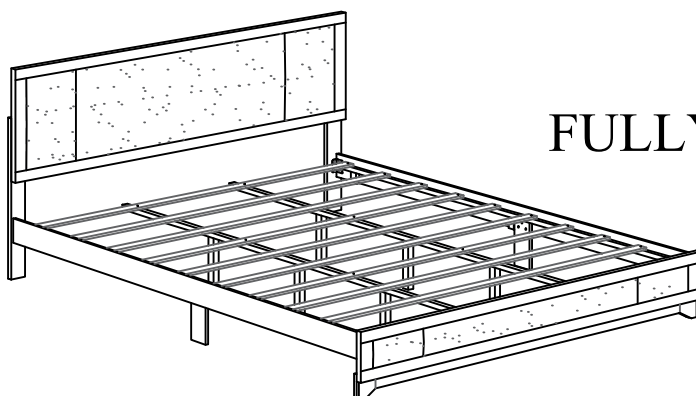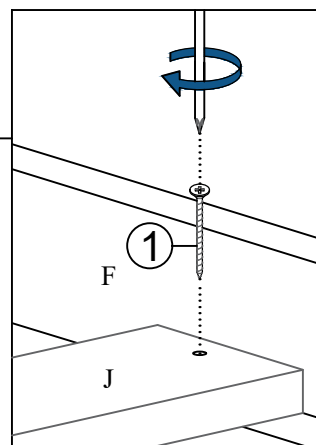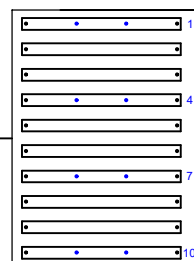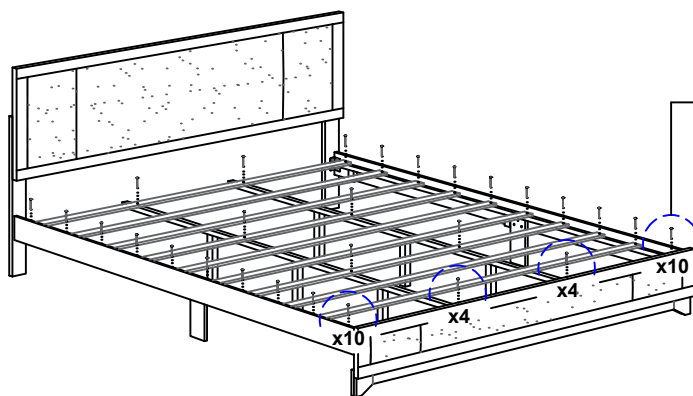

FULLY ASSEMBLED



ASSEMBLY INSTRUCTION

Before you begin, please follow the assembly instruction carefully. Please follow them step by step.




MODEL NO : NY 1930 NIGHT STAND

1)	2)	3)
		
CSK CB M4 x 30mm	Handle	Thru Head Machine Screw M4 x 16mm
24 PCS	2 PCS	4 PCS
		
		CSK CB M4 x 16mm
		2 PCS 8 PCS


PVC EDGE BANDING

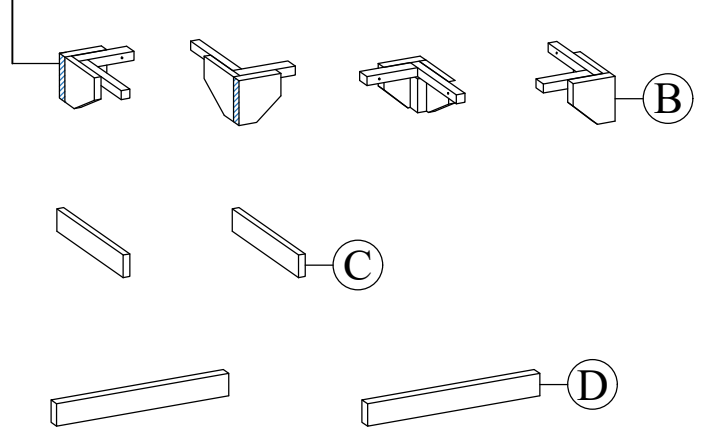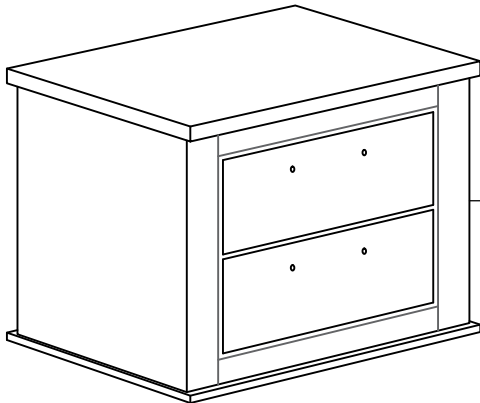


STEP 1

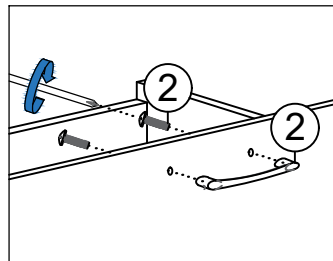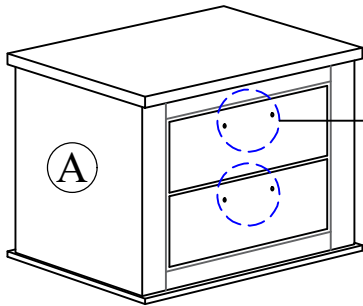




STEP 2

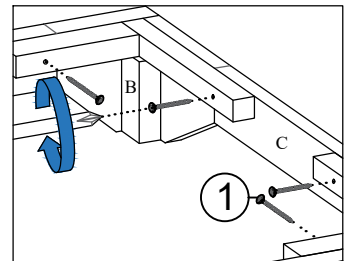


PVC EDGE BANDING

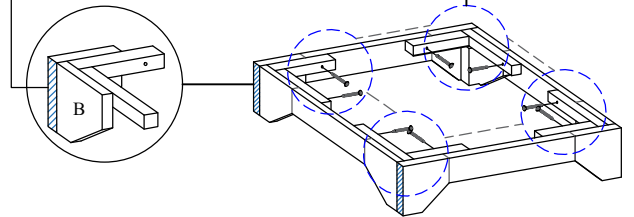

STEP 3: BOTTOM VIEW

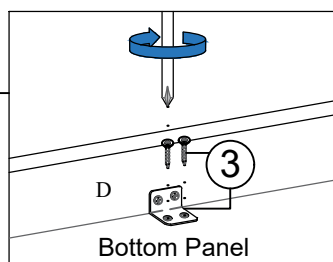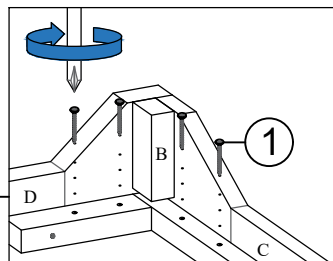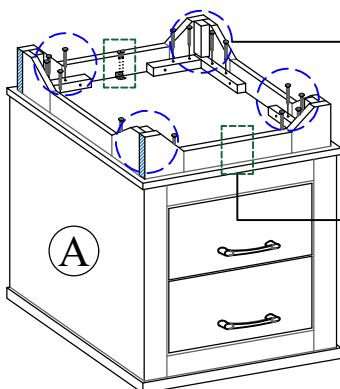

FULLY ASSEMBLED

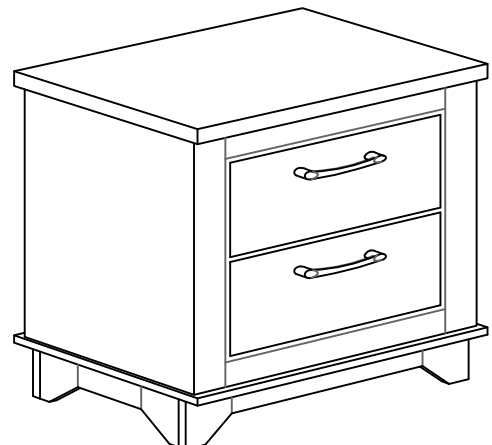


ASSEMBLY INSTRUCTION


Before you begin, please follow the assembly instruction carefully. Please follow them step by step.

MODEL NO : NY 1930 COD




1)  CSK CB M4 x 30mm 24 PCS	2)  Handle 5 PCS	 Thru Head Machine Screw M4 x 16mm 10 PCS	3)  L Bracket 2 PCS	 CSK CB M4 x 16mm 8 PCS	4) FURNITURE TIPPING RESTRAINT 1 PC
---	--	---	---	---	--

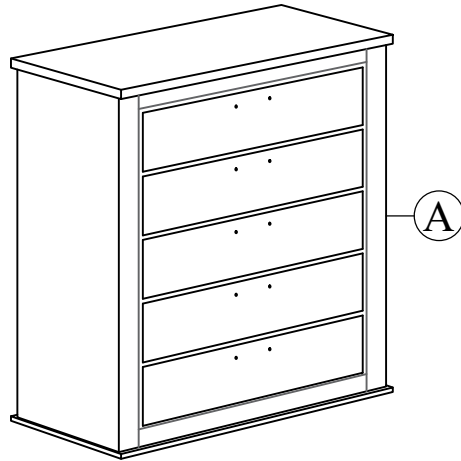

PVC EDGE BANDING



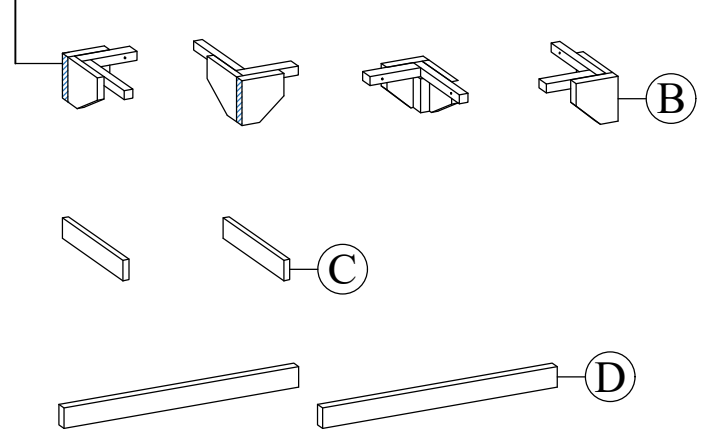


STEP 1

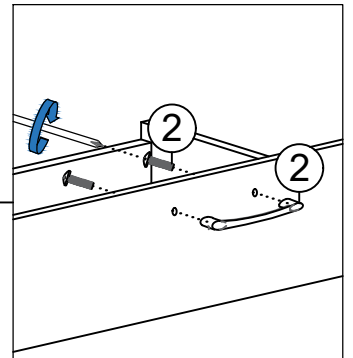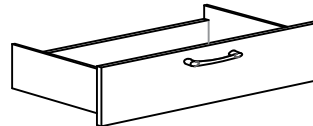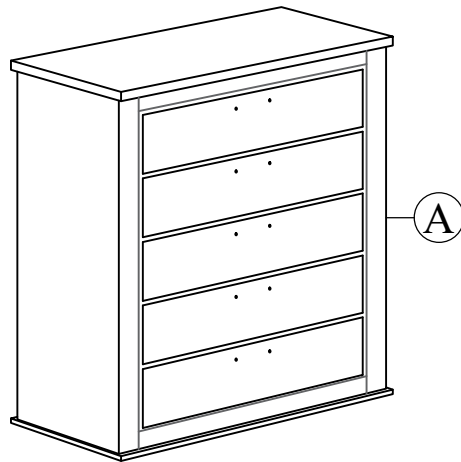

STEP 2



PVC EDGE BANDING

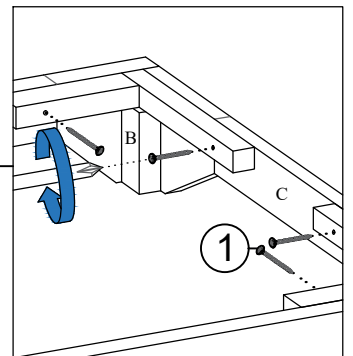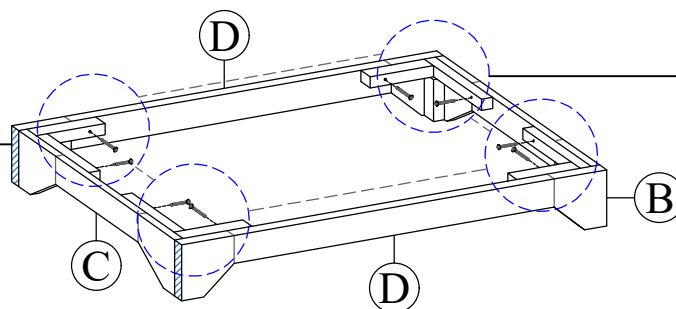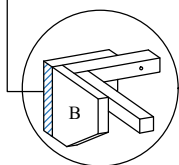



ASSEMBLY INSTRUCTION

Before you begin, please follow the assembly instruction carefully. Please follow them step by step.



STEP 3

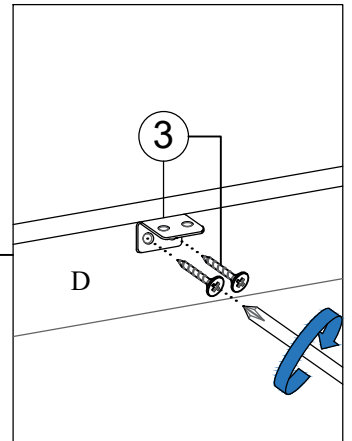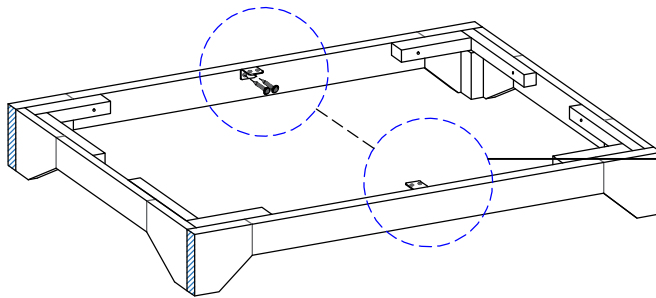

STEP 4: BOTTOM VIEW

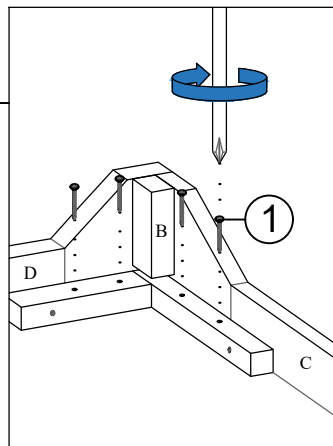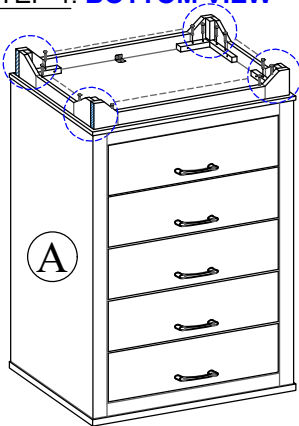


STEP 5: BOTTOM VIEW

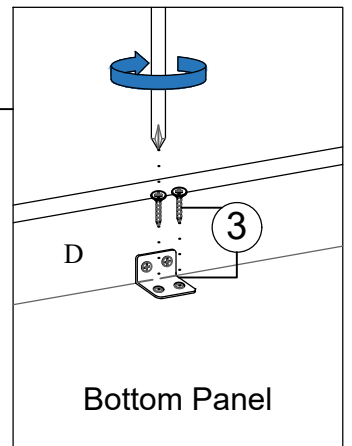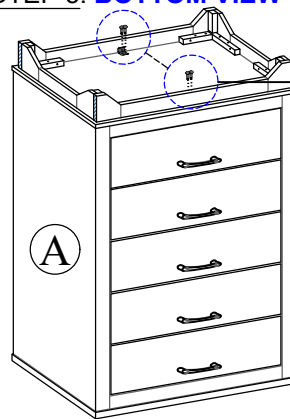


Bottom Panel

STEP 6

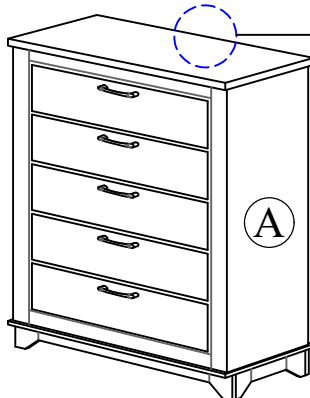

FURNITURE TIPPING RESTRAINT

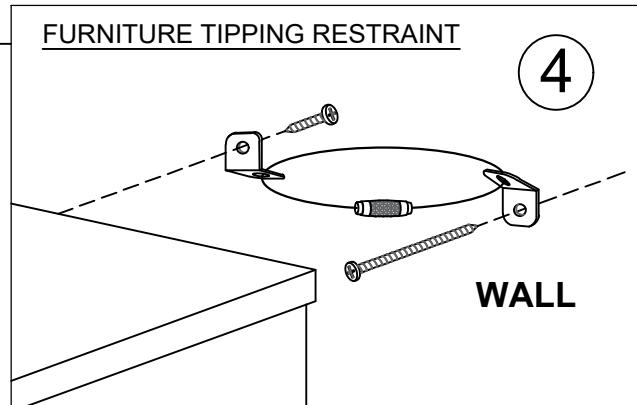

WALL



FULLY ASSEMBLED



Please refer to the safety instruction stated inside the top drawer.




ASSEMBLY INSTRUCTION

Before you begin, please follow the assembly instruction carefully. Please follow them step by step.


MODEL NO : NY 1930 DRESSER

1)  CSK CB M4 x 30mm 24 PCS	2)  Handle 6 PCS	 Thruss Head Machine Screw M4 x 16mm 12 PCS	3)  L Bracket 6 PCS	 CSK CB M4 x 16mm 24 PCS	4)  CSK CB M4 x 45mm 6 PCS	5)  CSK CB M4 x 35mm 6 PCS	6)  Leg 1 PC	7) FURNITURE TIPPING RESTRAINT 1 PC	
---	--	---	---	--	---	---	--	---	--


PVC EDGE BANDING

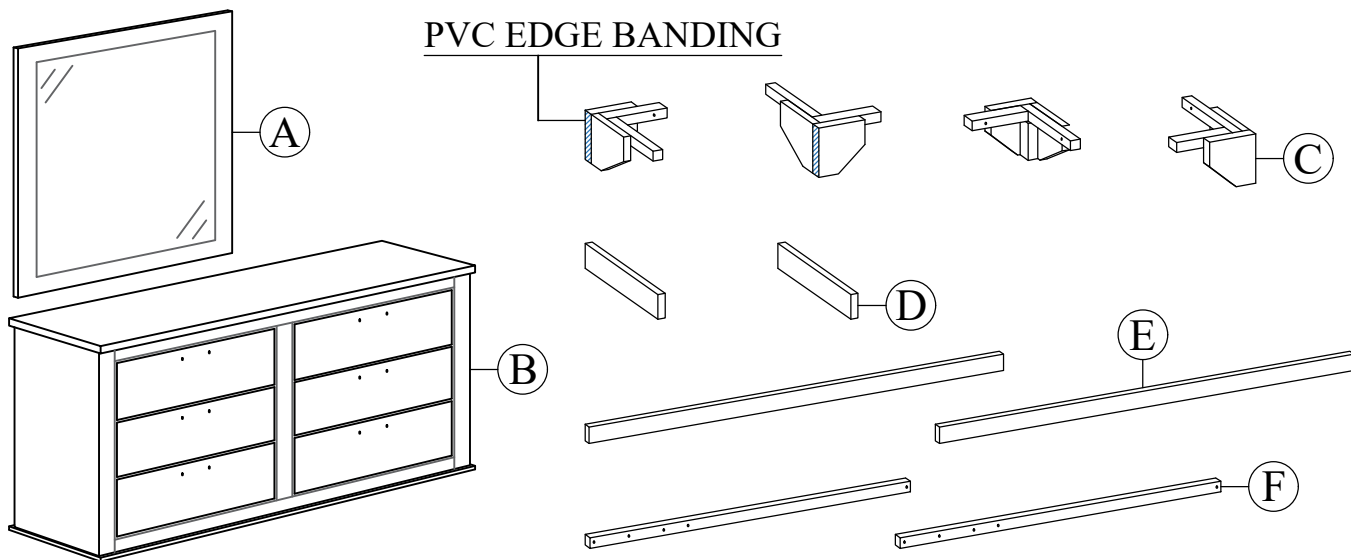


STEP 1

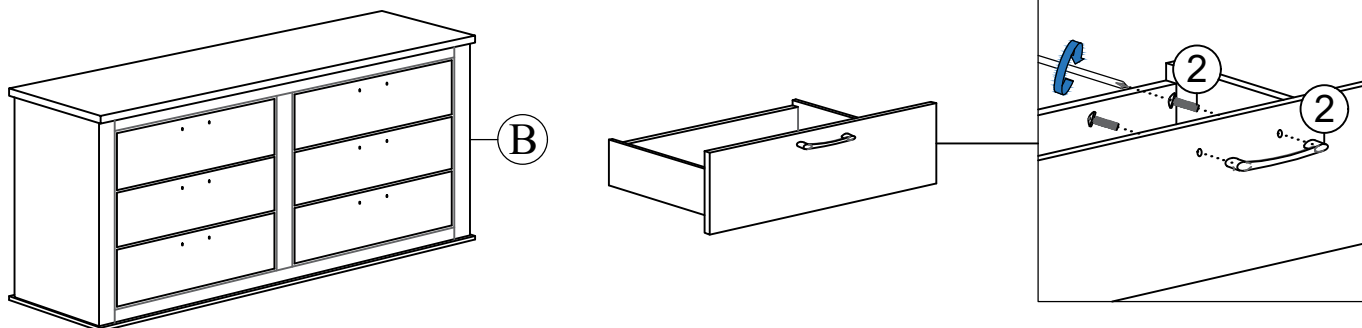

STEP 2

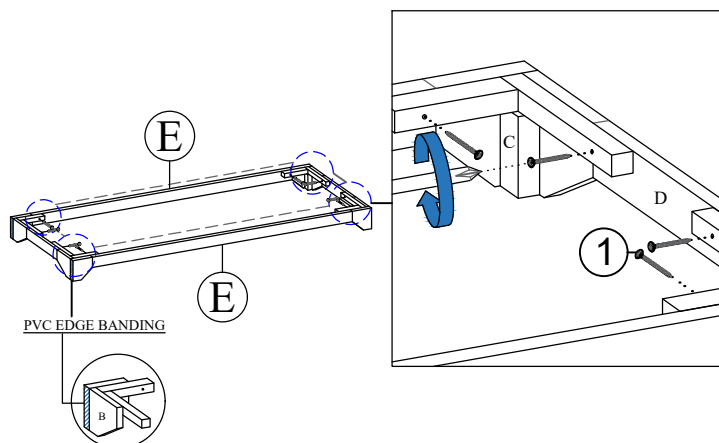



STEP 3

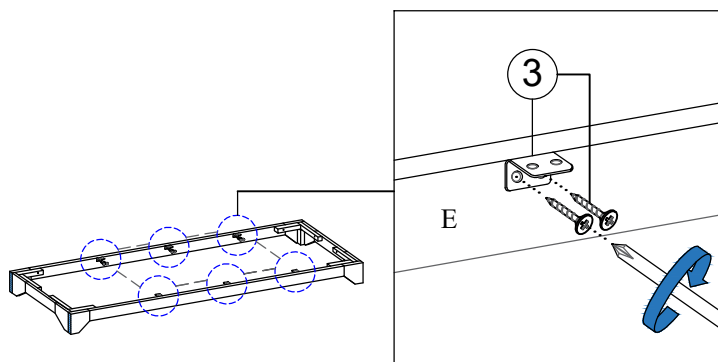



ASSEMBLY INSTRUCTION

Before you begin, please follow the assembly instruction carefully. Please follow them step by step.

STEP 4: BOTTOM VIEW

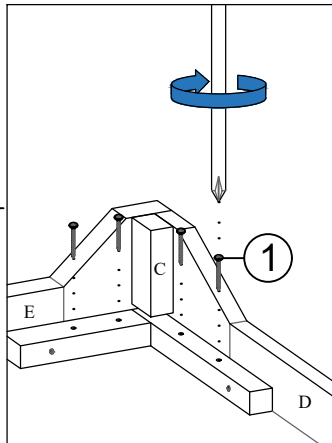
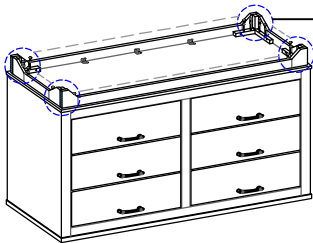


STEP 5: BOTTOM VIEW

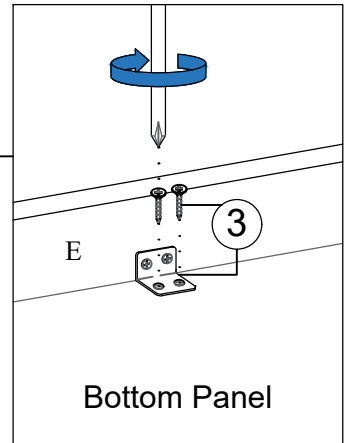
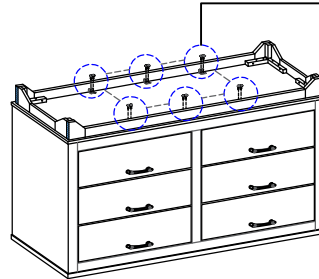


Bottom Panel



STEP 6: BOTTOM VIEW

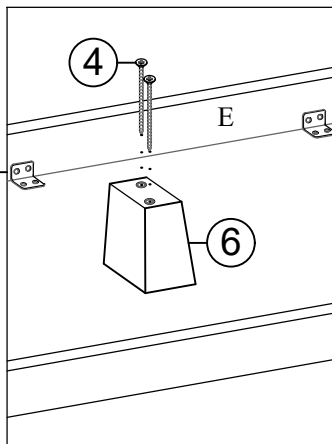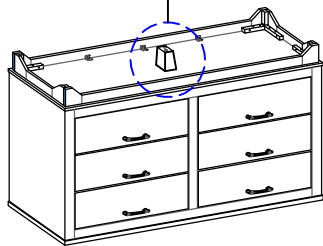




STEP 7: BACK VIEW

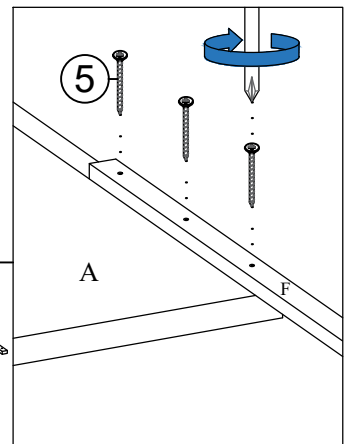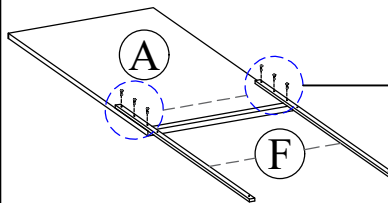

STEP 8: BACK VIEW

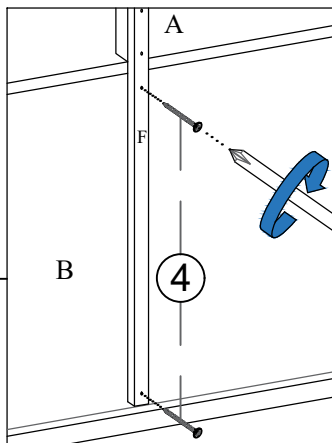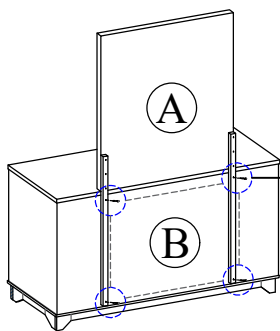

STEP 9: BACK VIEW

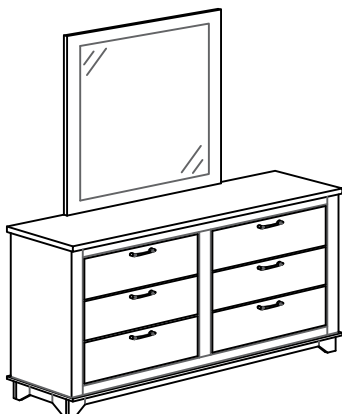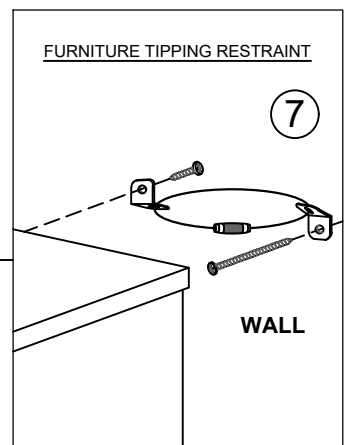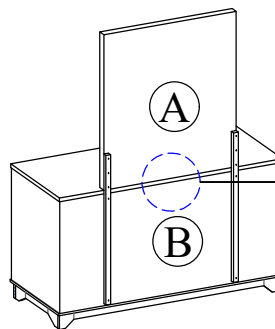

FULLY ASSEMBLED



Please refer to the safety instruction stated inside the top drawer.

