
# Wood Platform Bed (BSW013-K)

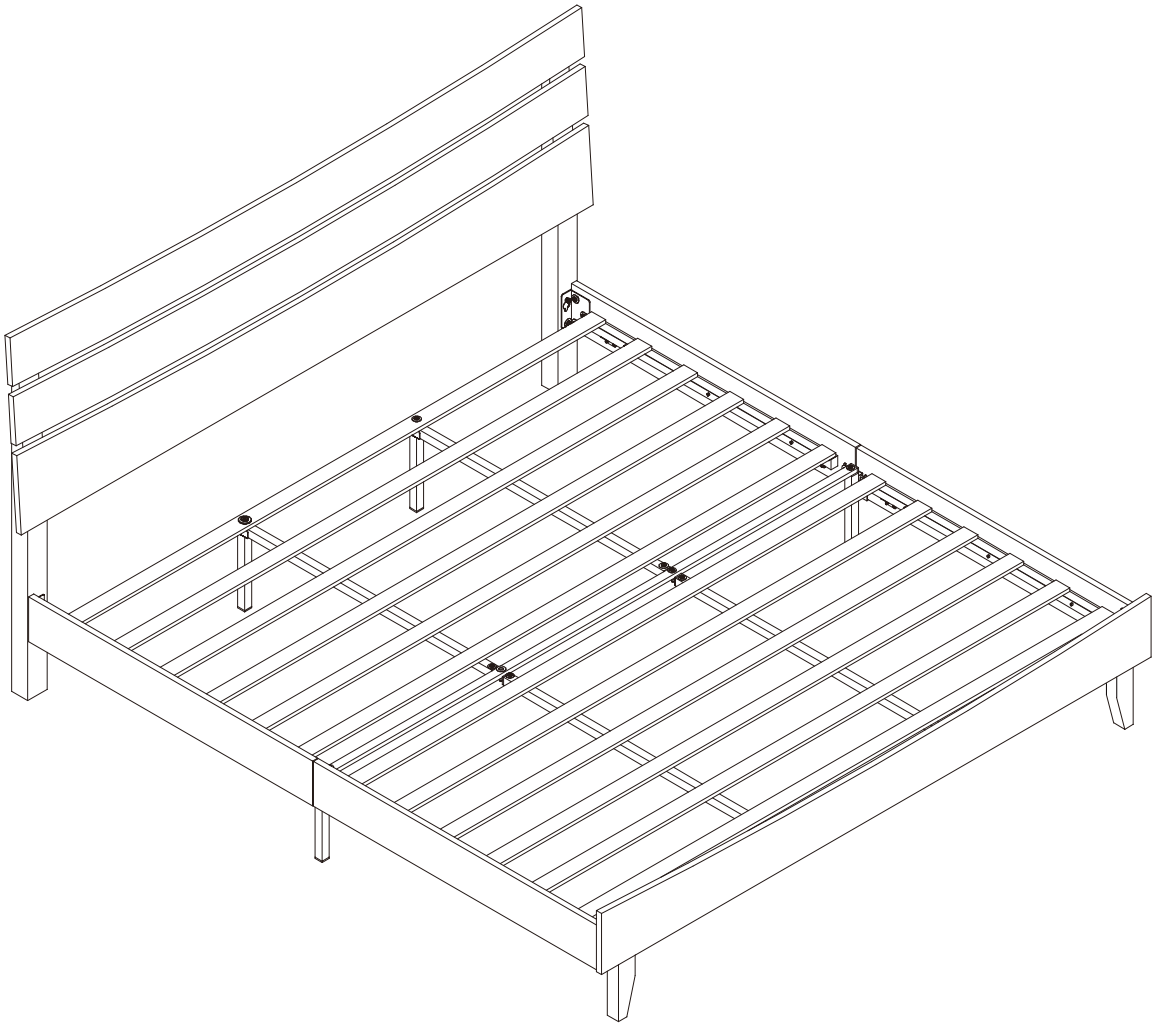



**Dear Customers,**

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

# IMPORTANT

**Please follow the instruction manuals and use a pad to protect the product during your assembly.**






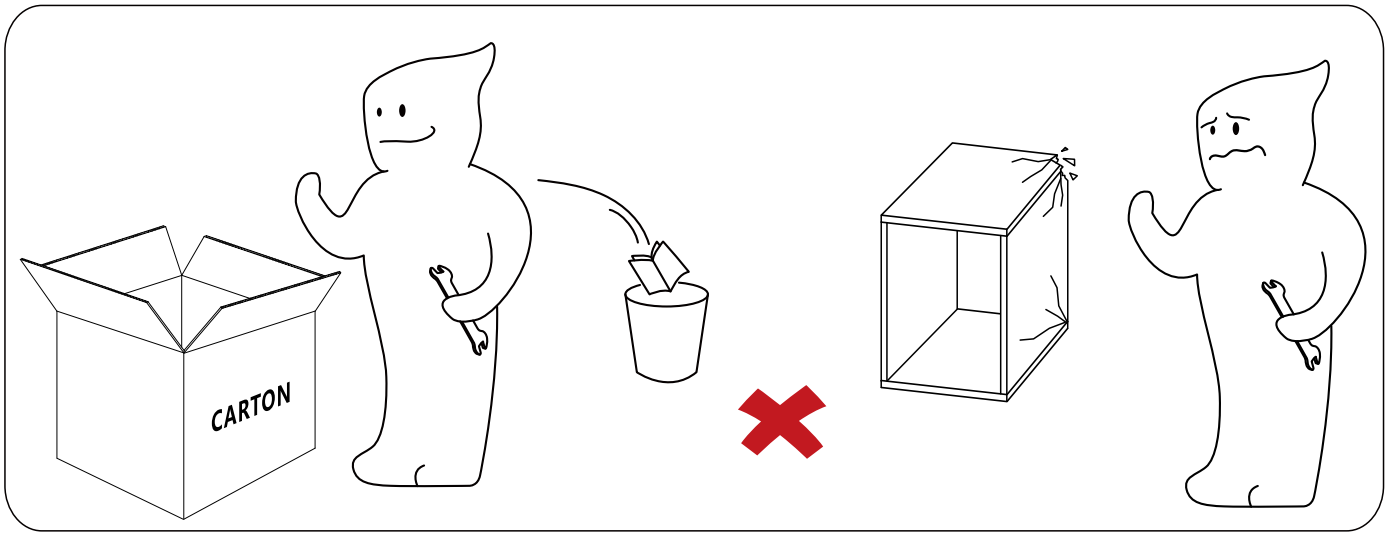


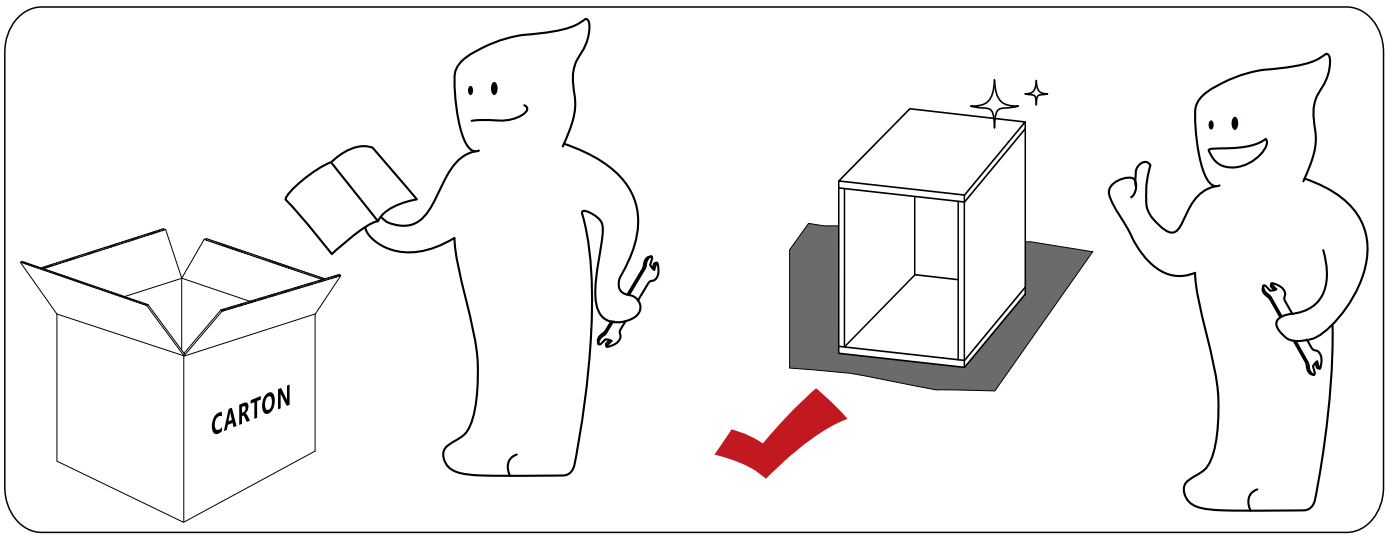

**Note:**
**1. Should be assembled on flat ground to keep balance.**
**2. Before completing the installation, do not tighten the screws.**
**3.Finally,tighten all the screws manually.**




For easier and better assembly, **2** or more adults are required.



| ALPHABETICAL NUMBERING | DESCRIBE | ILLUSTRATION | NUMBER |
|---|---|---|---|
| A | Slat |  | 1pc |
| B | Slat |  | 1pc |
| C | Up headboard |  | 1pc |
| C1 | Middle headboard |  | 1pc |
| C2 | Donwn headboard |  | 1pc |
| C3 | Connector wood |  | 1pc |
| C4 | Connector wood |  | 1pc |
| C5 | Connector wood |  | 1pc |
| D | Headboard leg |  | 1pc |
| D1 | Headboard leg |  | 1pc |
| E | Footboard |  | 1pc |
| F | Side panel |  | 2pcs |
| F1 | Side panel |  | 2pcs |
| G | Support bar |  | 1pc |
| H | Support bar |  | 2pcs |
| I | Support bar |  | 2pcs |
| J | Support wood |  | 4pcs |
| K | Support leg |  | 4pcs |
| L | Support leg |  | 2pcs |
| M | Wood leg |  | 1pc |
| M1 | Wood leg |  | 1pc |


**Ruler-Use this ruler to help correctly identify the screws.**







The length of the screw is measured from the rod part excluding the screw cap (30mm screw shown).
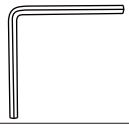
| ALPHABETICAL NUMBERING | DESCRIBE | ILLUSTRATION | NUMBER |
|---|---|---|---|
| N | Connector plate 100x2 mm |  | 4pcs |
| O | Sponge-cushion |  | 4pcs |
| P | Washer φ8x18x1.5 mm |  | 78pcs+1pc |
| Q | Wrench M6 |  | 1pc |
| R | Screw M8x50 mm |  | 2pcs |
| R1 | Screw M8x40 mm |  | 6pcs |
| R2 | Screw M8x35 mm |  | 8pcs |
| R3 | Screw M8x30mm |  | 30pcs+1pc |
| R4 | Screw M8x25 mm |  | 4pcs |
| R5 | Screw M8x16 mm |  | 28pcs+1pc |

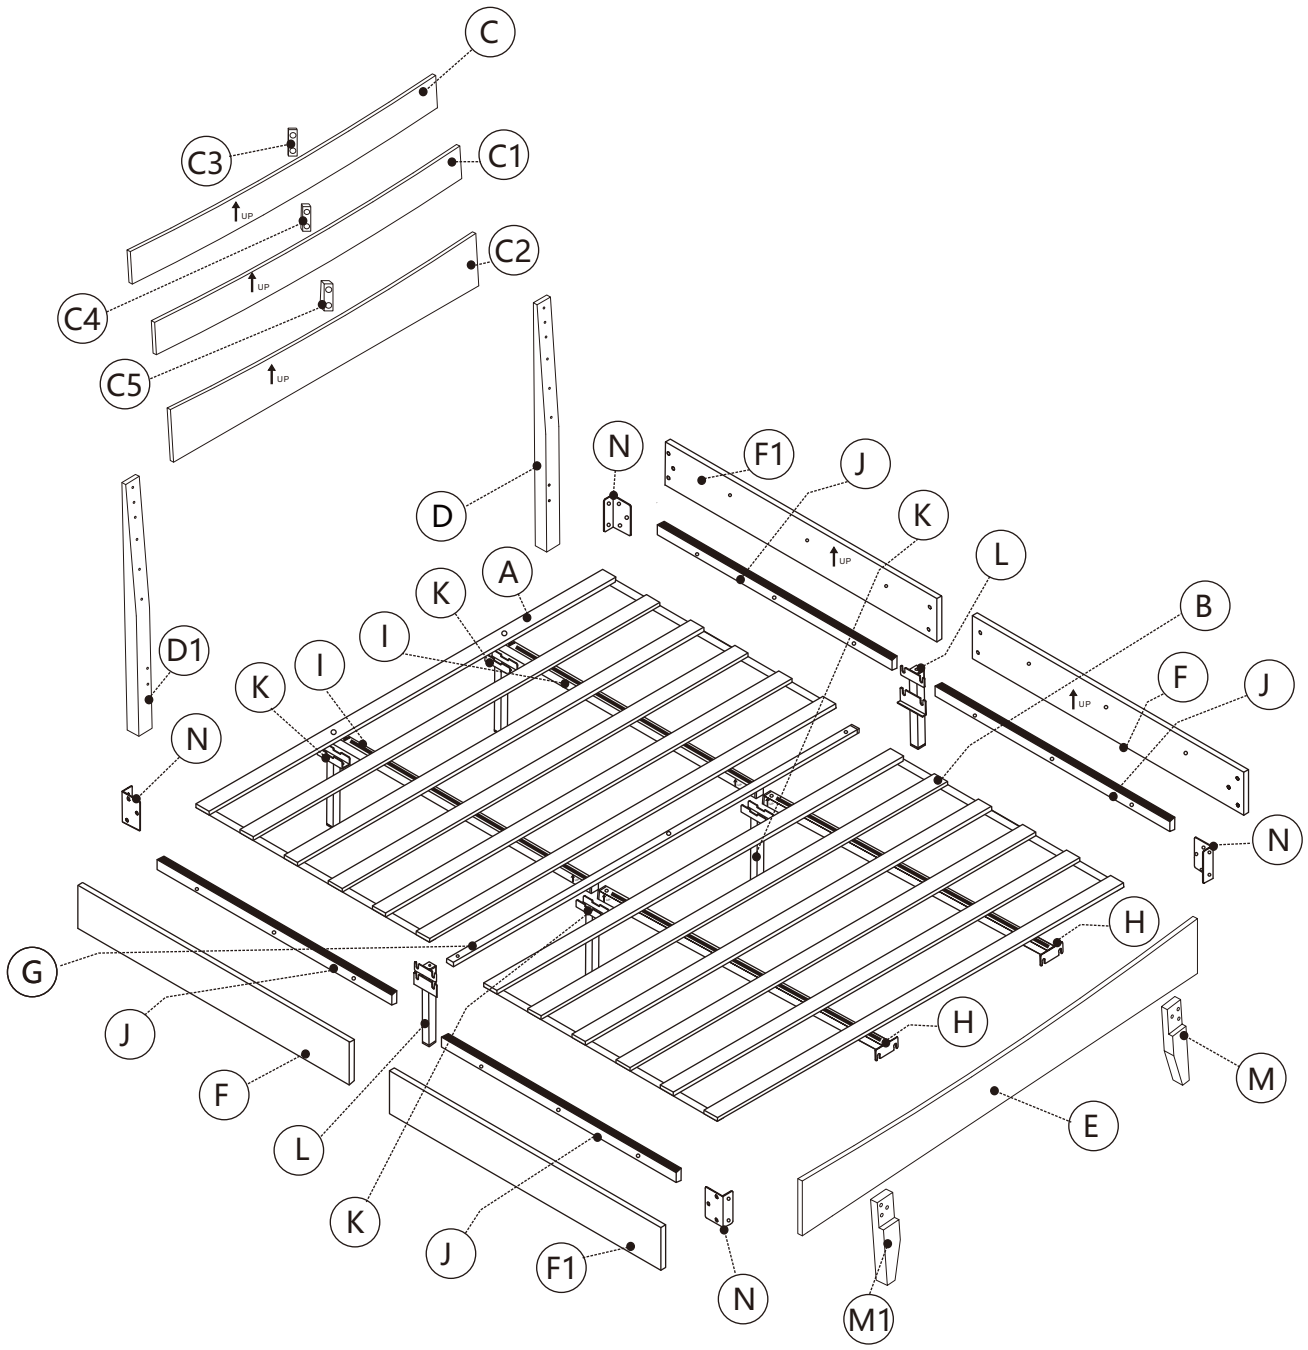

C
C3
C1
C2
C4
C5
UP
D
N
F1
J
K
L
B
A
K
I
I
K
D1
N
F
J
N
G
H
J
H
F
M
L
E
K
J
F1
N
M1

**1** Tight all the innerscrew after all holes are aligned

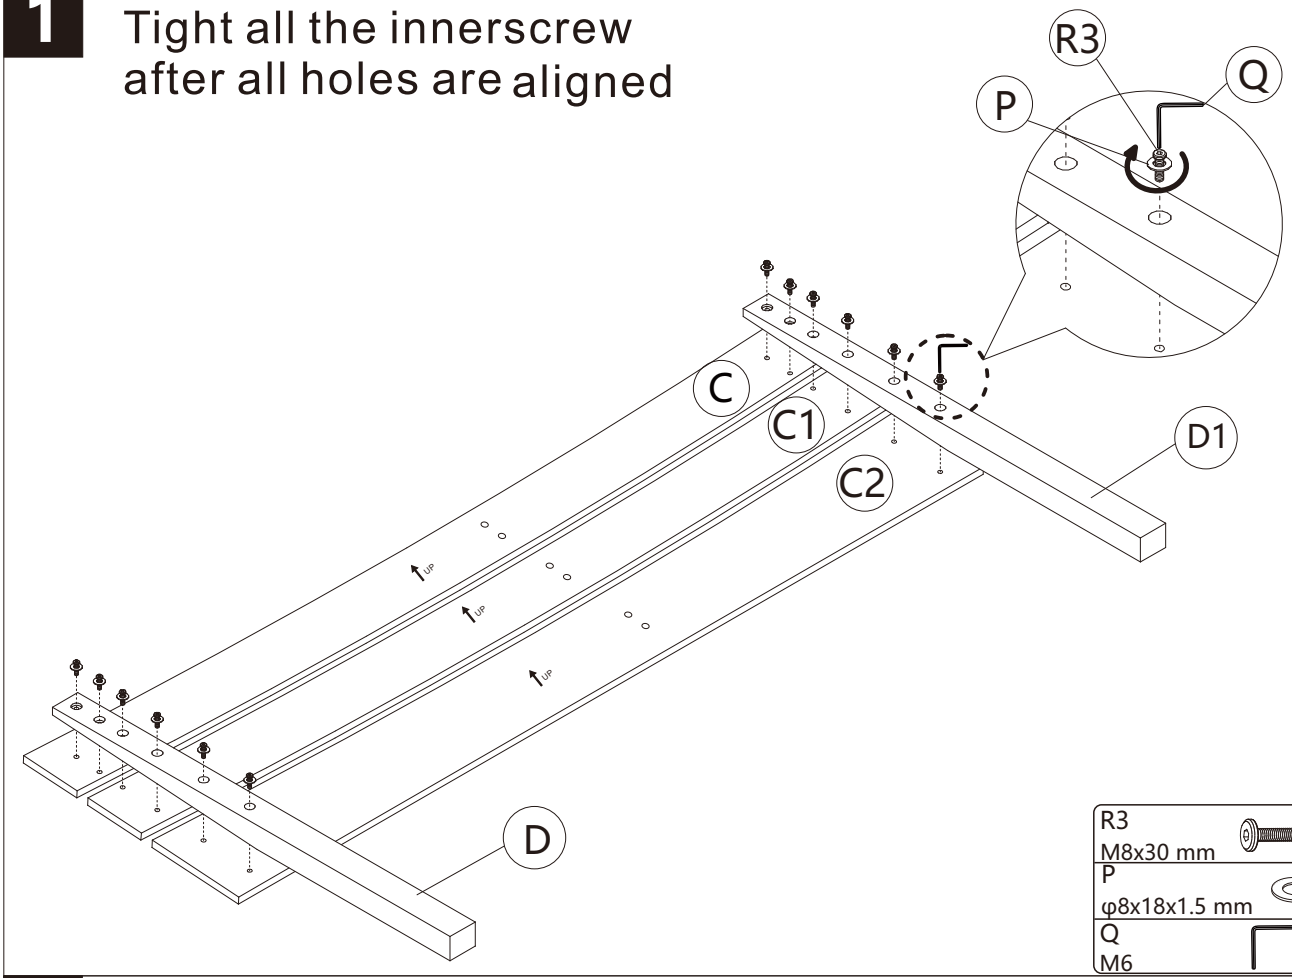



| | | |
|---|---|---|
| R3 M8x30 mm | | 12pcs |
| P φ8x18x1.5 mm | | 12pcs |
| Q M6 | | 1pc |

**2**

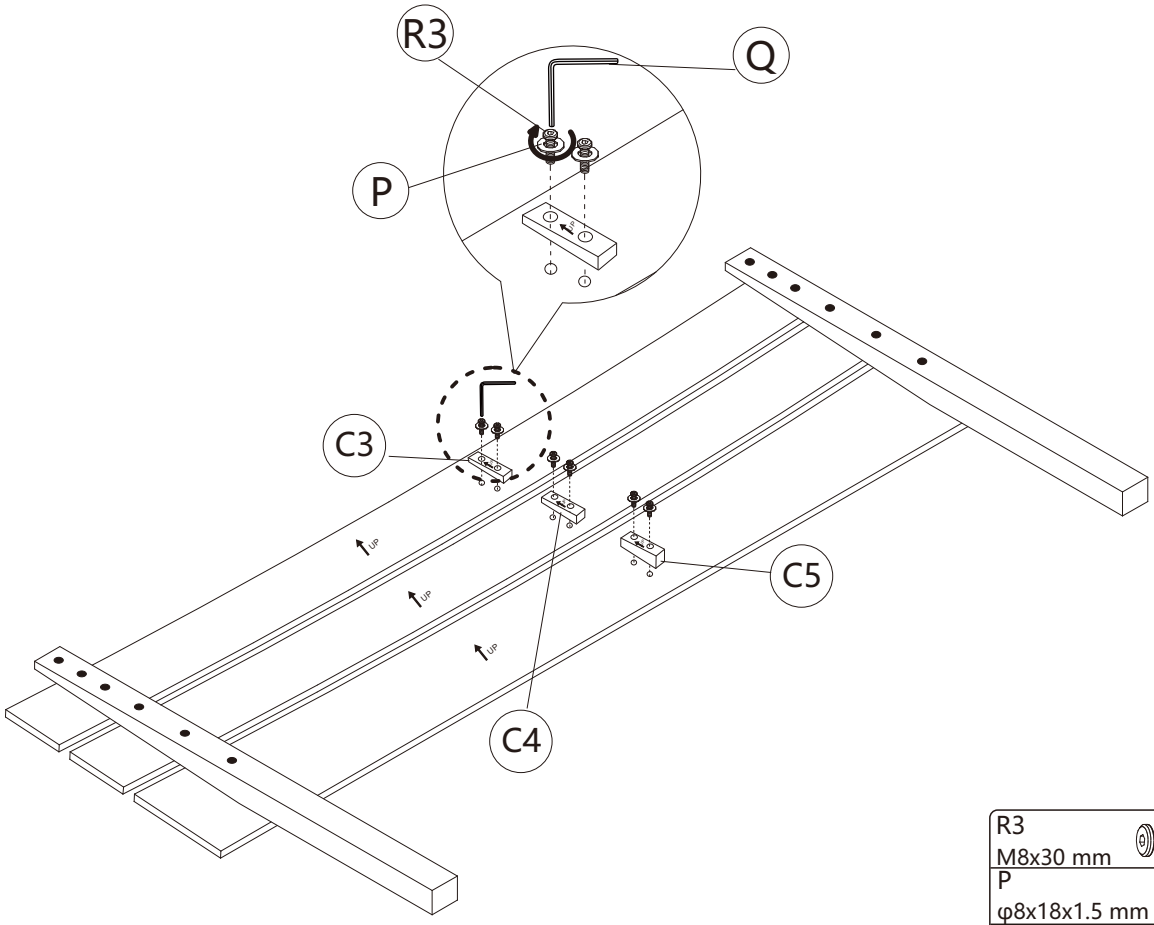


| | | |
|---|---|---|
| R3 M8x30 mm | | 6pcs |
| P φ8x18x1.5 mm | | 6pcs |
| Q M6 | | 1pc |


## 3

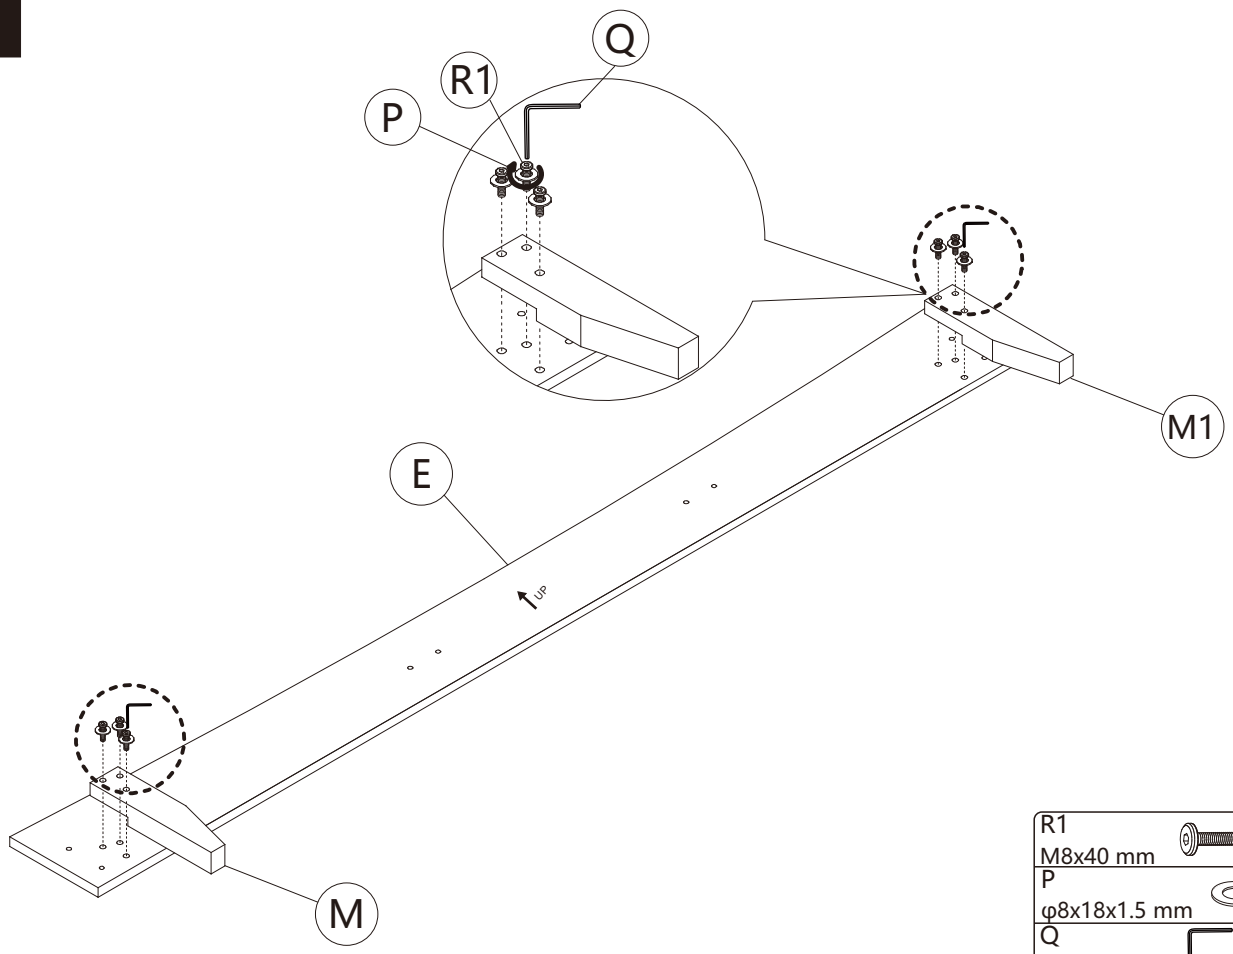


| | | |
|---|---|---|
| R1<br>M8x40 mm | | 6pcs |
| P<br>φ8x18x1.5 mm | | 6pcs |
| Q<br>M6 | | 1pc |

## 4


Take out parts F and F1, and lock the iron frame foot L in the middle according to the figure. Note that there are **2 holes** located on the inner side of the board. Then lock the bed hanging pieces N on the front and rear of the board, with **3 holes** on each side.

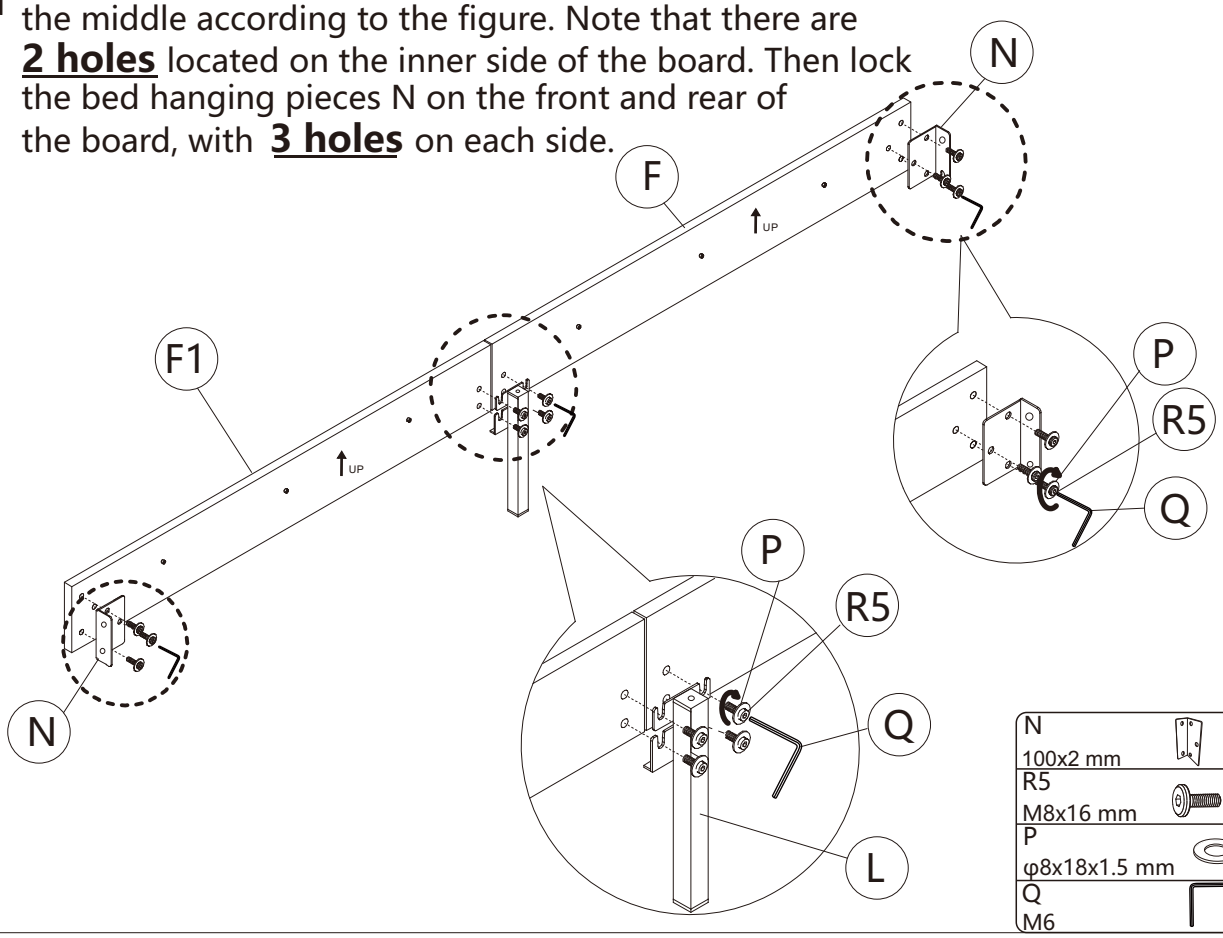


| | | |
|---|---|---|
| N<br>100x2 mm | | 2pcs |
| R5<br>M8x16 mm | | 10pcs |
| P<br>φ8x18x1.5 mm | | 10pcs |
| Q<br>M6 | | 1pc |


## 5

Same as Step 4.

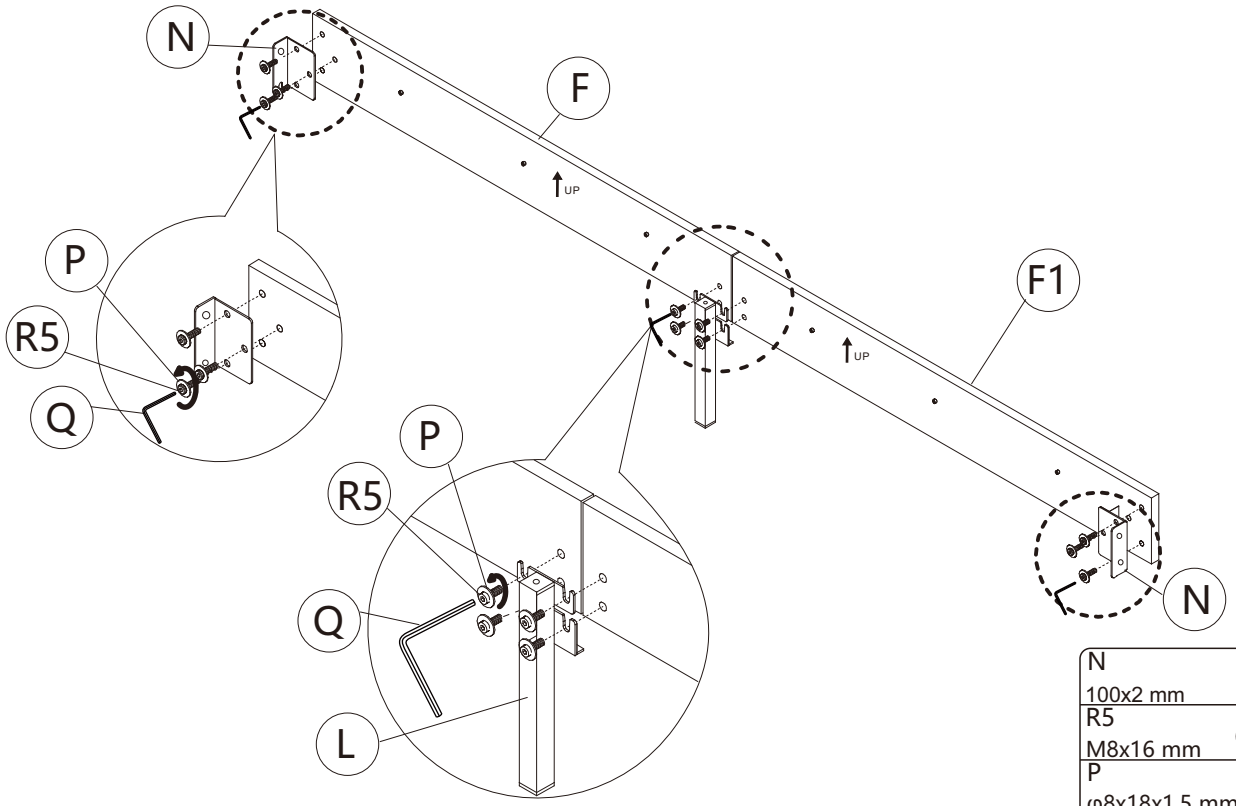



| | | |
|---|---|---|
| N<br>100x2 mm | | 2pcs |
| R5<br>M8x16 mm | | 10pcs |
| P<br>φ8x18x1.5 mm | | 10pcs |
| Q<br>M6 | | 1pc |

## 6

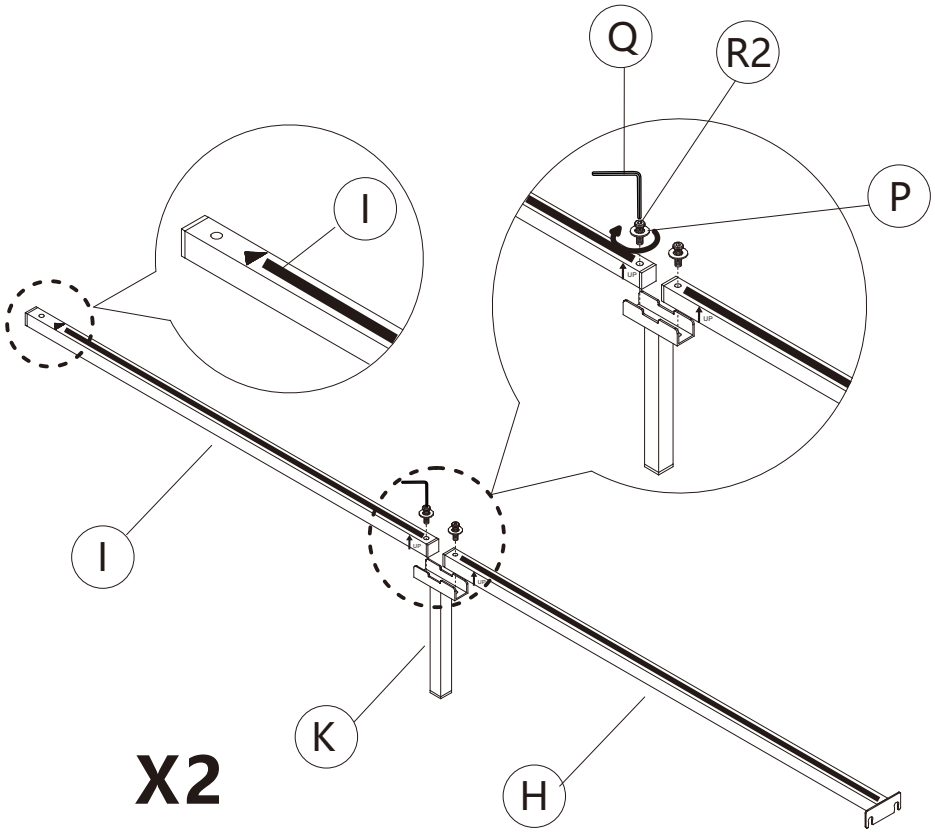



| | | |
|---|---|---|
| R2<br>M8x35 mm | | 4pcs |
| P<br>φ8x18x1.5 mm | | 4pcs |
| Q<br>M6 | | 1pc |

## 7

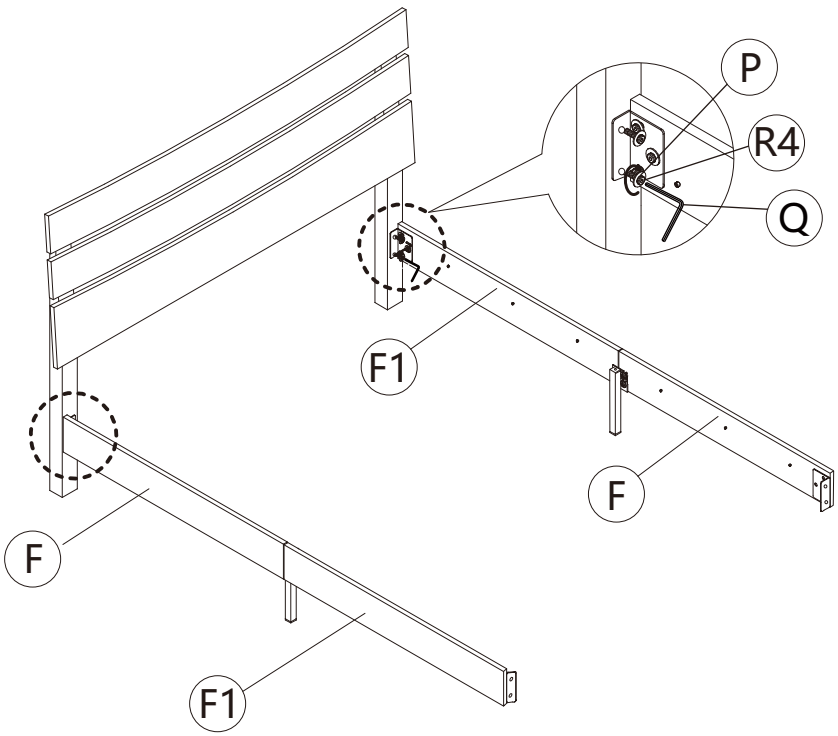



| | | |
|---|---|---|
| R4<br>M8x25 mm |  | 4pcs |
| P<br>φ8x18x1.5 mm |  | 4pcs |
| Q<br>M6 |  | 1pc |

## 8

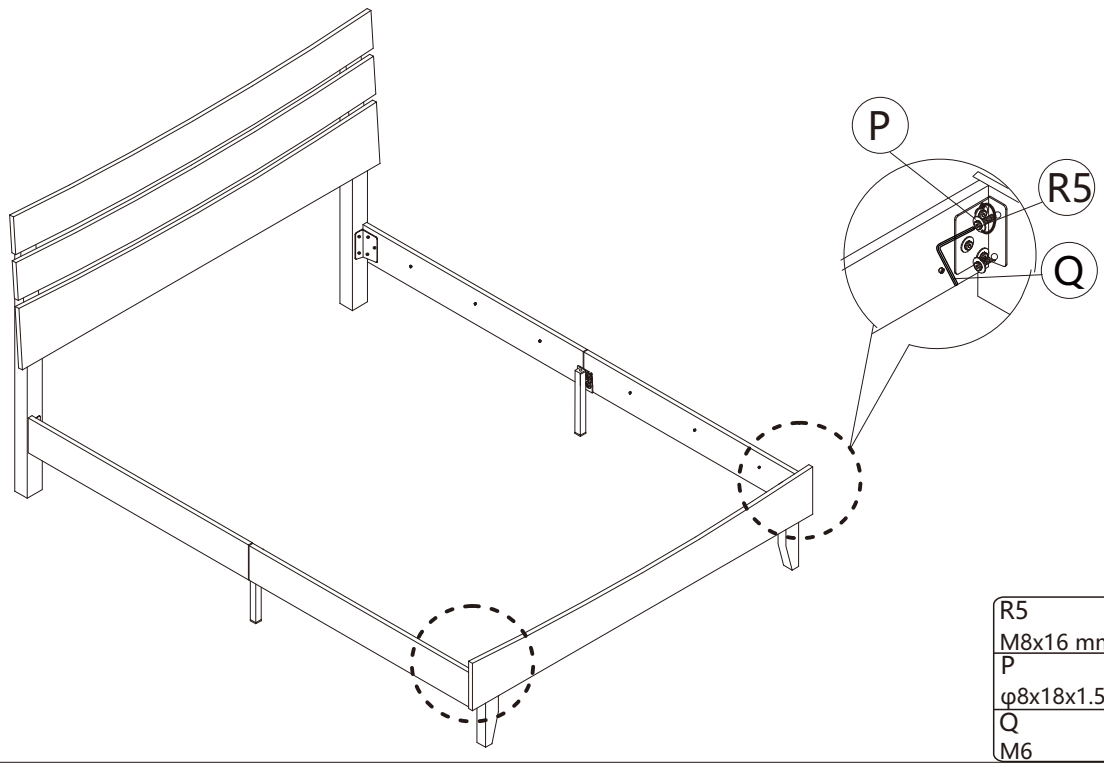



| | | |
|---|---|---|
| R5<br>M8x16 mm |  | 4pcs |
| P<br>φ8x18x1.5 mm |  | 4pcs |
| Q<br>M6 |  | 1pc |

## 9

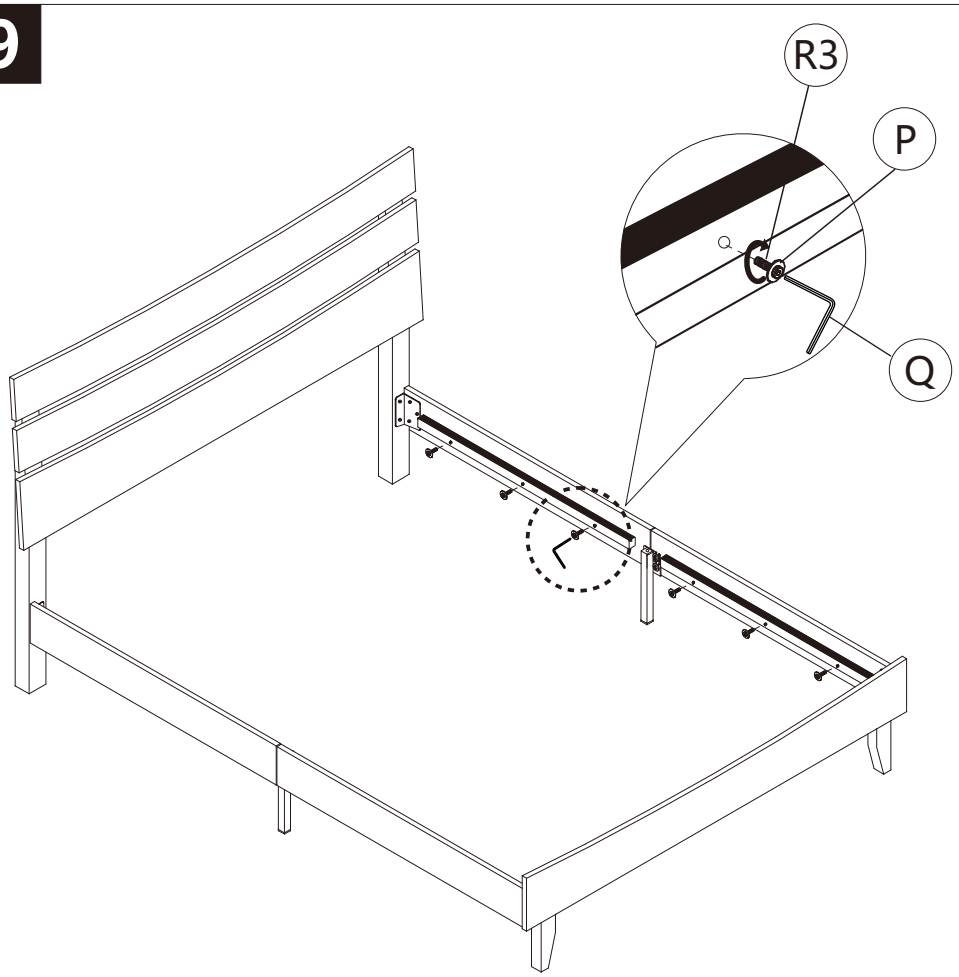



| | | |
|---|---|---|
| R3<br>M8x30 mm |  | 12pcs |
| P<br>φ8x18x1.5 mm |  | 12pcs |
| Q<br>M6 |  | 1pc |

## 10

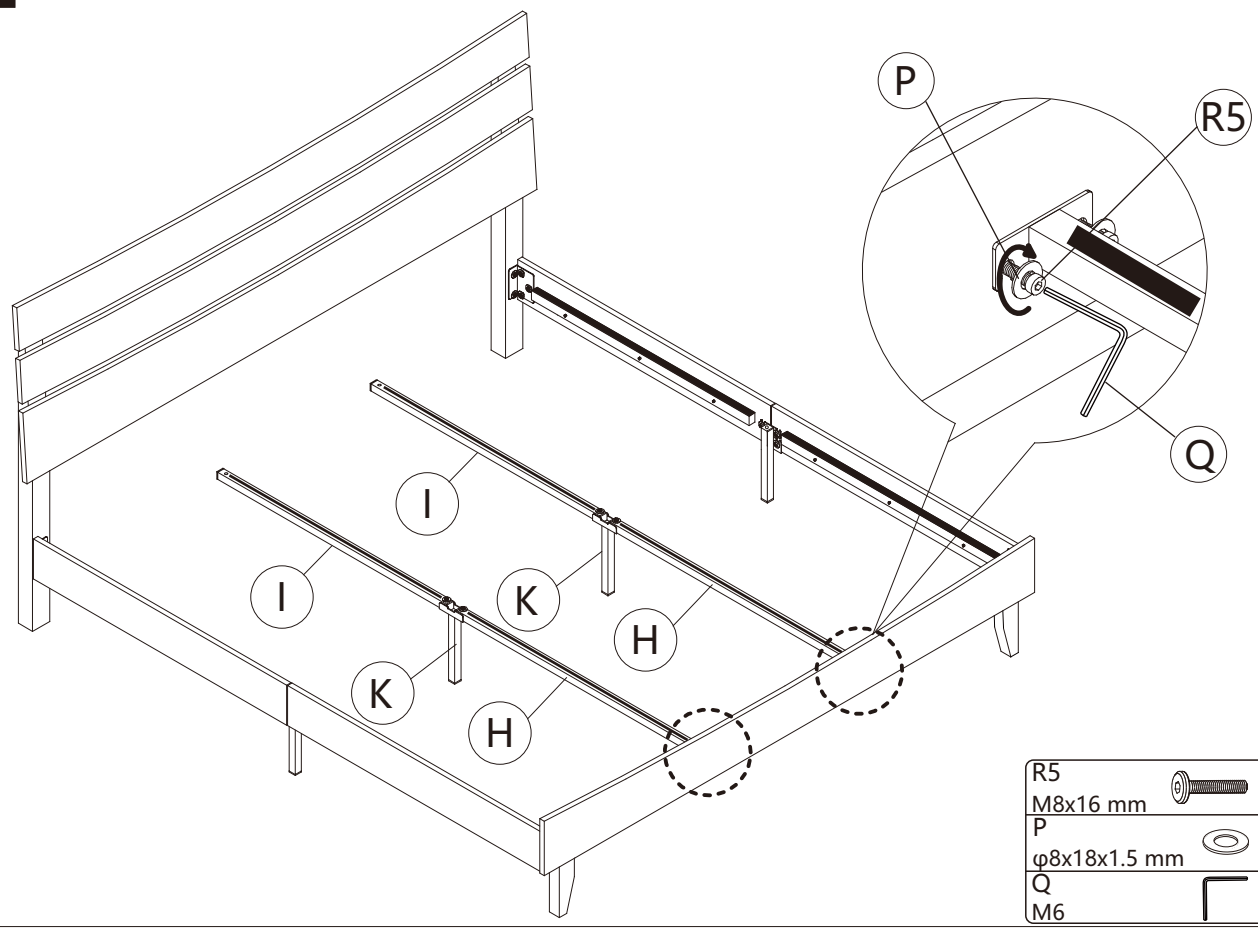


| | | |
|---|---|---|
| R5<br>M8x16 mm |  | 4pcs |
| P<br>φ8x18x1.5 mm |  | 4pcs |
| Q<br>M6 |  | 1pc |


## 11

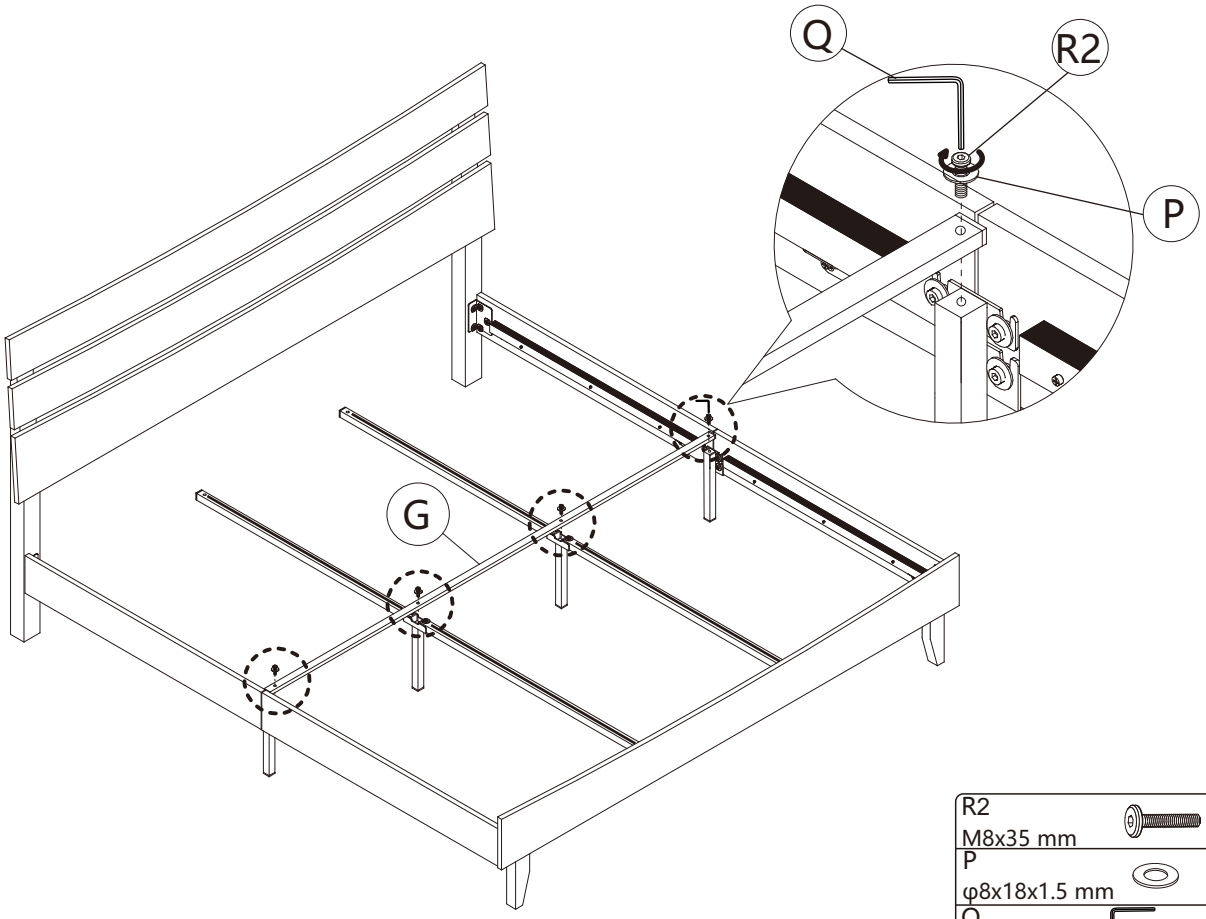


| | | |
|---|---|---|
| R2<br>M8x35 mm |  | 4pcs |
| P<br>φ8x18x1.5 mm |  | 4pcs |
| Q<br>M6 |  | 1pc |

## 12


Note that there is a slat with holes in part A for connecting to part K.

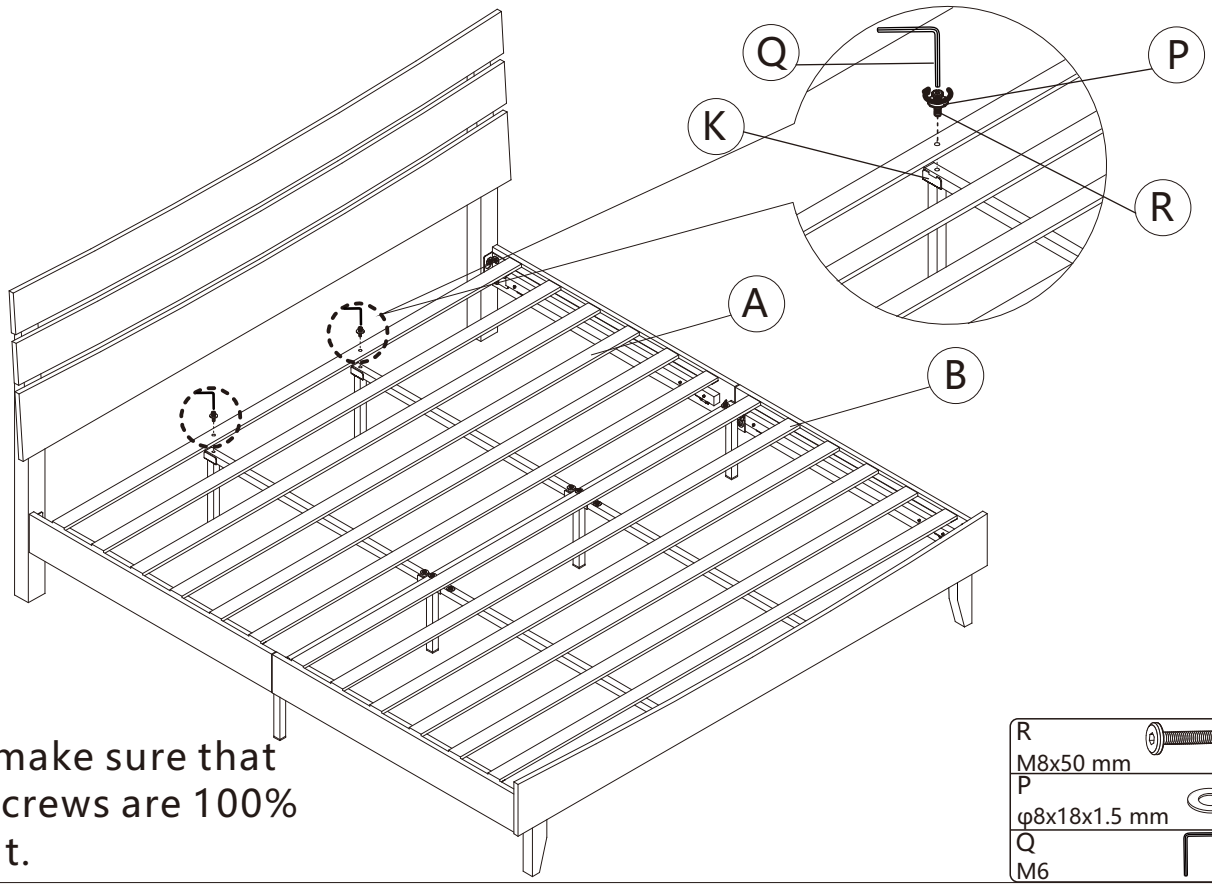



Pls make sure that all screws are 100% tight.

| | | |
|---|---|---|
| R<br>M8x50 mm |  | 2pcs |
| P<br>φ8x18x1.5 mm |  | 2pcs |
| Q<br>M6 |  | 1pc |

**13** Stick **O** on the back to avoid noice.

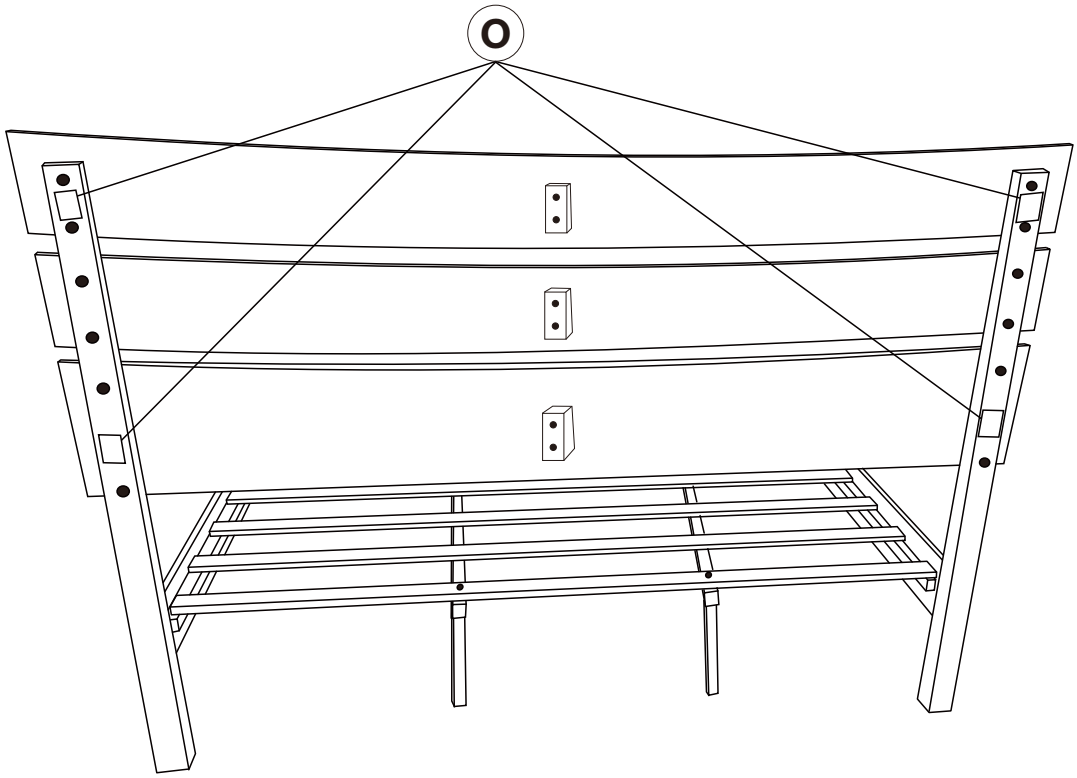


**14**

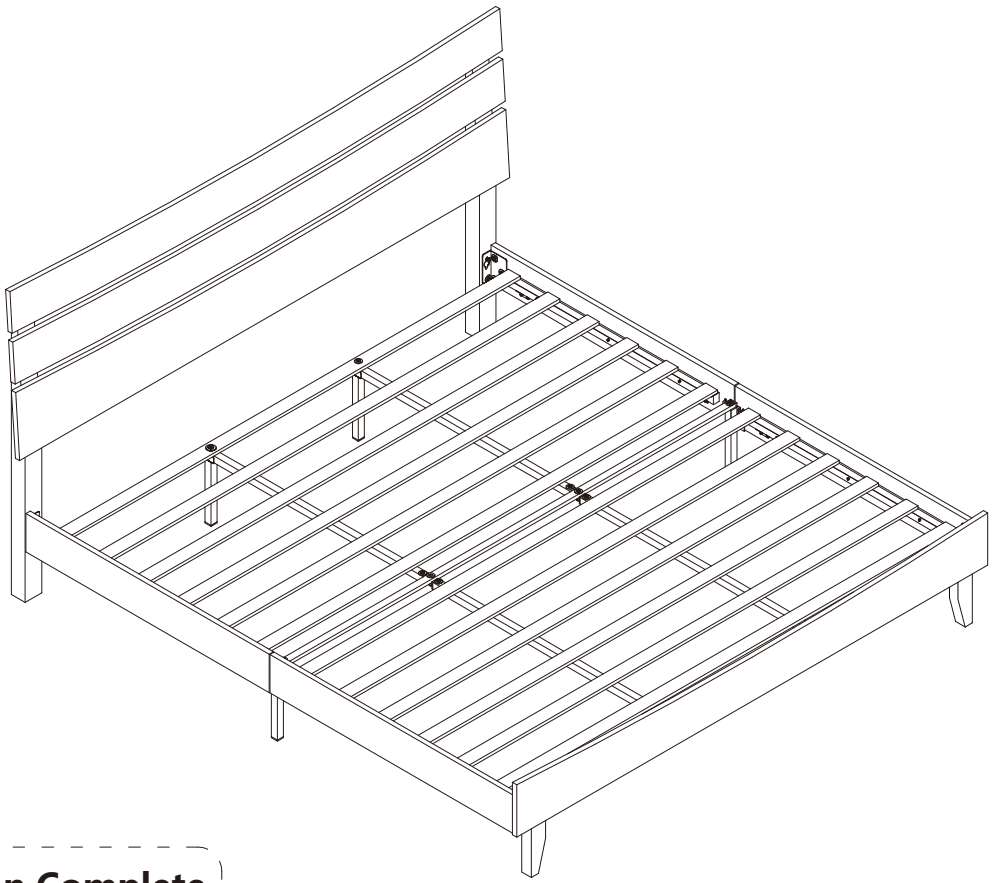

**Installation Complete**