


ASSEMBLY INSTRUCTIONS

4 LEG


INSTALOCK BED FRAME

TWIN FULL QUEEN



Swing out all cross rails
insert sockets in legs where necessary
insert casters into legs

1. Select the proper pair of "key" slots for size of bedding to be used.

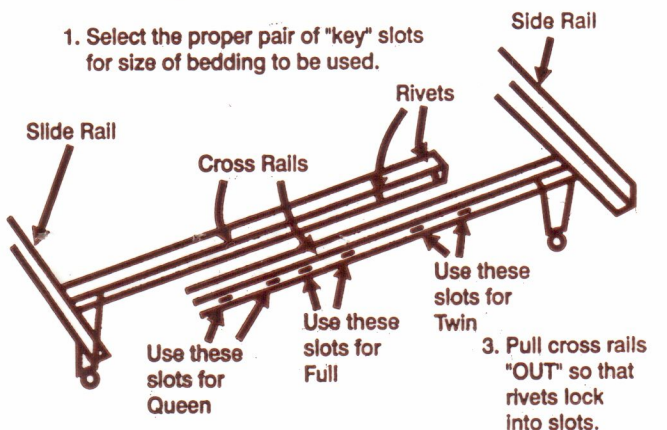

2. Overlap cross rails and slide rivets into slots.



3. Pull cross rails "OUT" so that rivets lock into slots.



4. Slip plastic caps over ends of slide rails.