



Recess Mount Guide


Positioning and Installation of Mirror Cabinet:

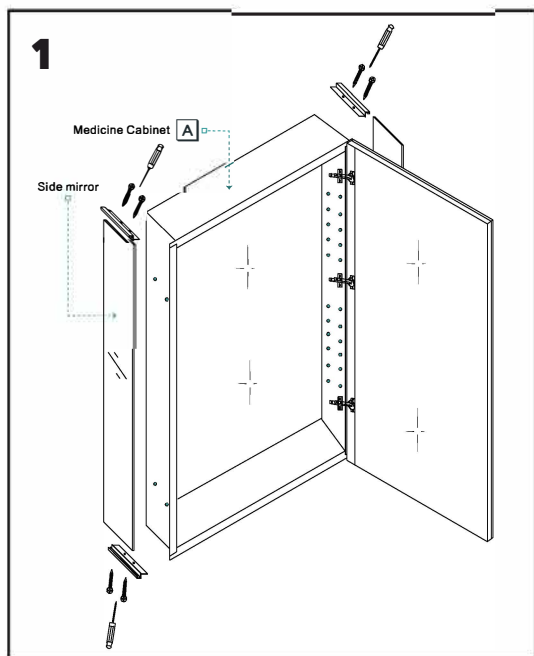


Remove the both of side mirror with screwdriver.

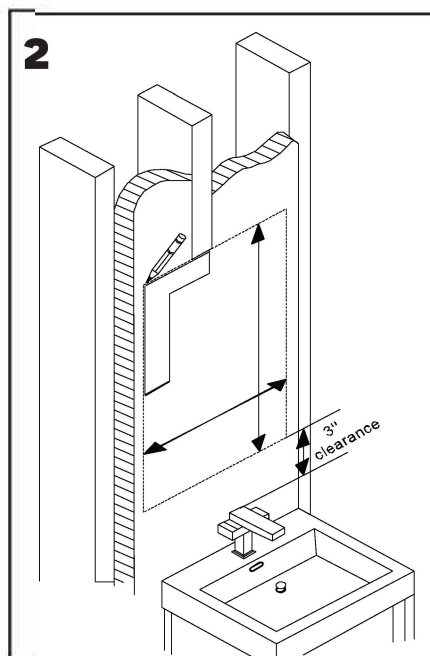

Draw the perimeter of the medicine cabinet.

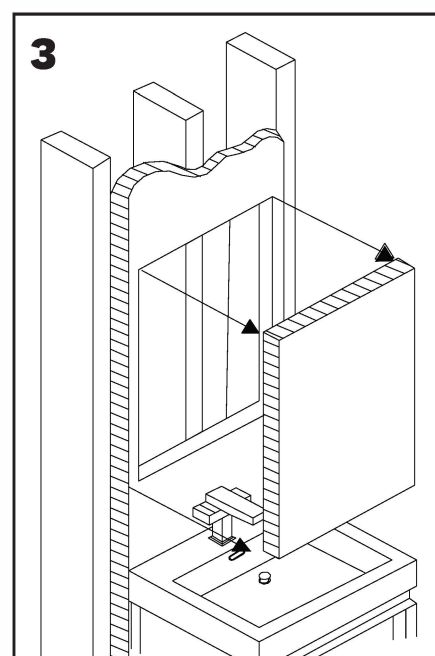


Place and hold the cabinet in the cutout opening.

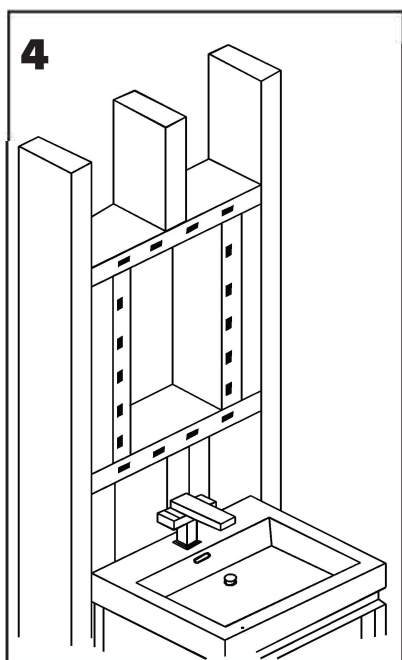

Frame the cutout opening.

4 STEPS TO FRAME THE CUTOUT OPENING

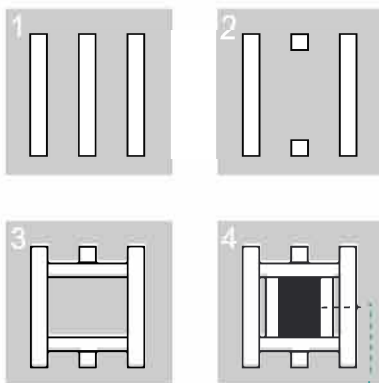

CUTOUT OPENING DIMENSIONS

CHECK THE CUTOUT OPENING DIMENSIONNS OF THE MODEL YOU ARE ABOUT TO INSTALL.

MODEL #	OVERALL DIMENSIONS
1	14.5" X 29" X 4.3"
2	19.5" X 29" X 4.3"
3	23.5" X 29" X 4.3"
4	23.5" X 35" X 4.3"
5	29" X 29" X 4.3"
6	29" X 35" X 4.3"
7	41.5" X 29" X 4.3"