


Levede®

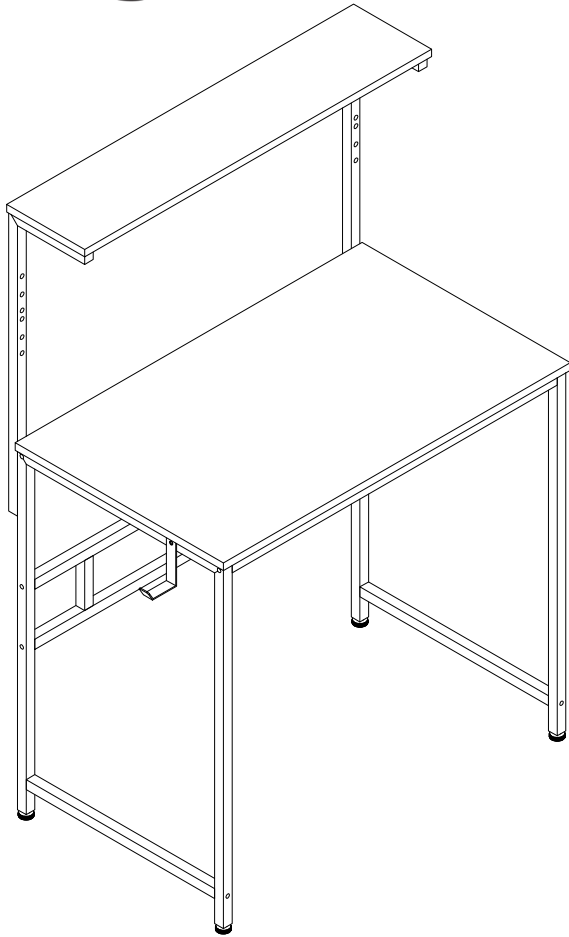

Importer's name: SELLO PRODUCTS UK PTY LIMITED



Address: Unit 5, The Sealine Works, Worcester Road,
Kidderminster, Worcestershire, DY10 1HT

Made in China

USER'S MANUAL

DH1078-BK

Before You Start



1. Read each step carefully and follow the correct order.
2. Separate and count all parts and hardware.
3. Leave enough space for the assembly process.
4. Prepare the following tools: Flat Head Screwdriver, Cross Head Screwdriver and Hammer.
5. Note: If you use an electric drill or electric screwdriver to tighten the screws, please be careful to slow down and stop when tightening the screws. Otherwise, the screws may fall off.
(Using an electric screwdriver can increase assembly speed).

Useful Tips


Assembly Personnel Required: 1-2 People

- Unpack the item in the area where you plan to store it to avoid excessive lifting.
- Identify, sort, and count the parts before attempting assembly.
- Use a hammer to gently tap in the compression pins.
- The sliders are marked with R (right) and L (left) for proper placement.
- Make sure to always point the tip of the top of the cam lock toward the outer edge.
- If there is a back panel in the package, install it to ensure your unit is complete and sturdy.
- Tighten all the screws provided for the back panel, which can enhance the stability of the product. If it is difficult to tighten, you can use a hammer to secure it and then tighten it.
- Do not use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

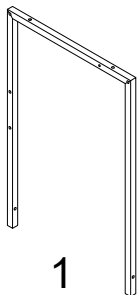


1

Qty:1




2

Qty:2

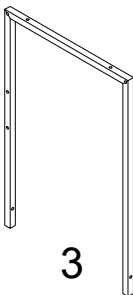


3

Qty:1

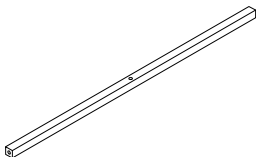


4

Qty:2

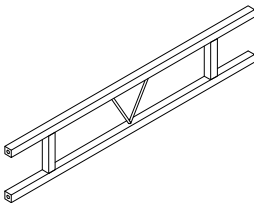


5

Qty:1

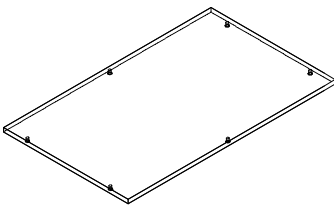

6

Qty:1

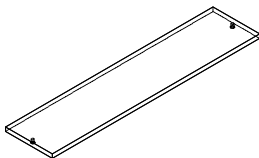

7

Qty:1




8


Qty:2

3


Part List

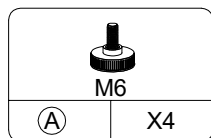


ADJUST FOOT

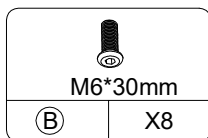


BOLT
spare:1

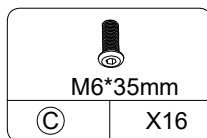


BOLT
spare:1

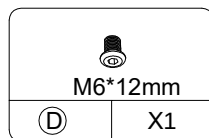


BOLT
spare:1

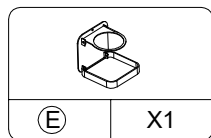


CUP HOLDER

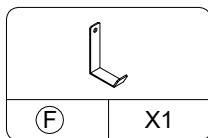

HOOK

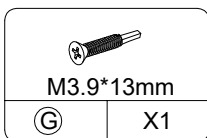


SCREW
spare:1

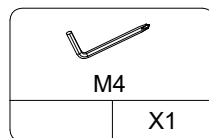


Board Identification

Not actual size

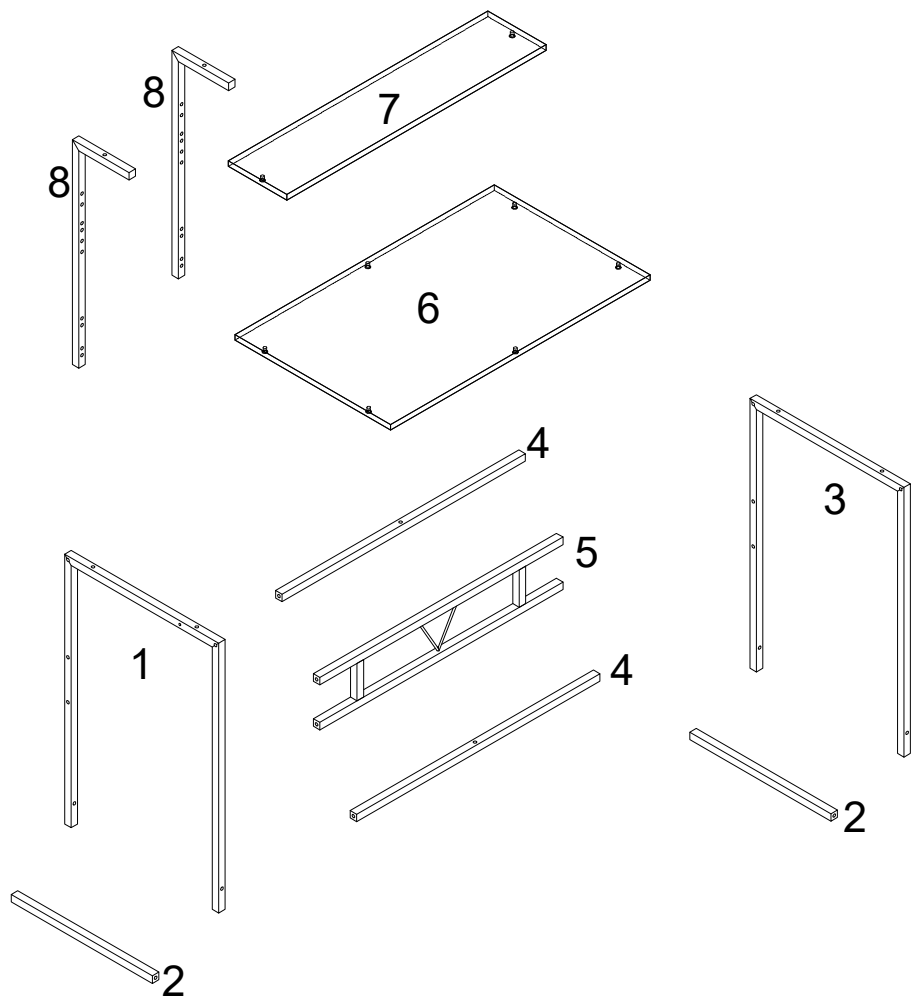



Step 1



 M6*35mm	
(C)	X12


 M6*12mm	
(D)	X1

 M4	
	X1

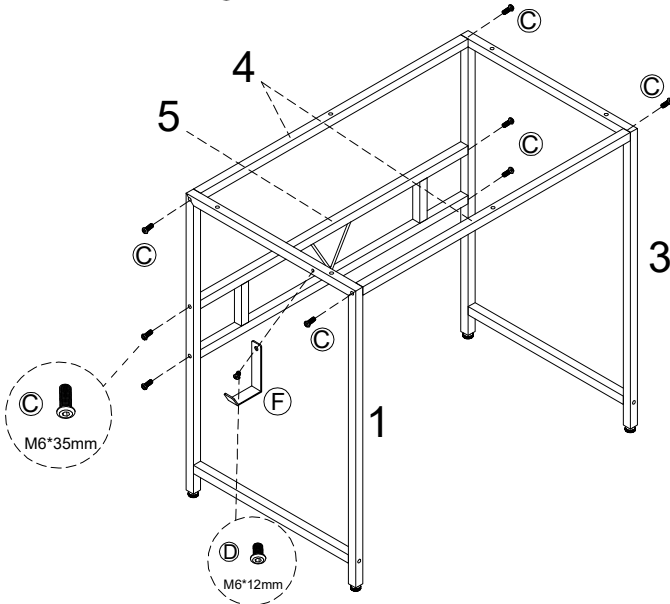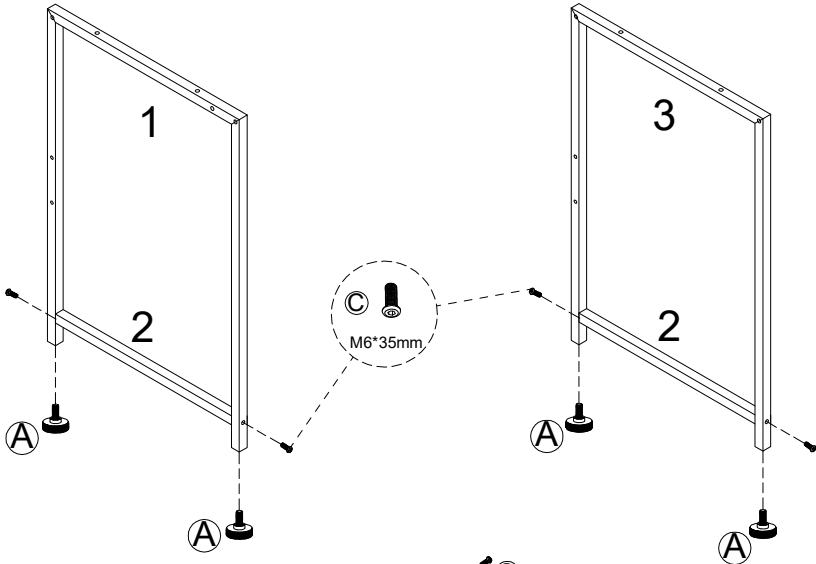


Step 2


 M6*30mm		 M6*35mm		 M4	
(B) X8		(C) X4		X1	

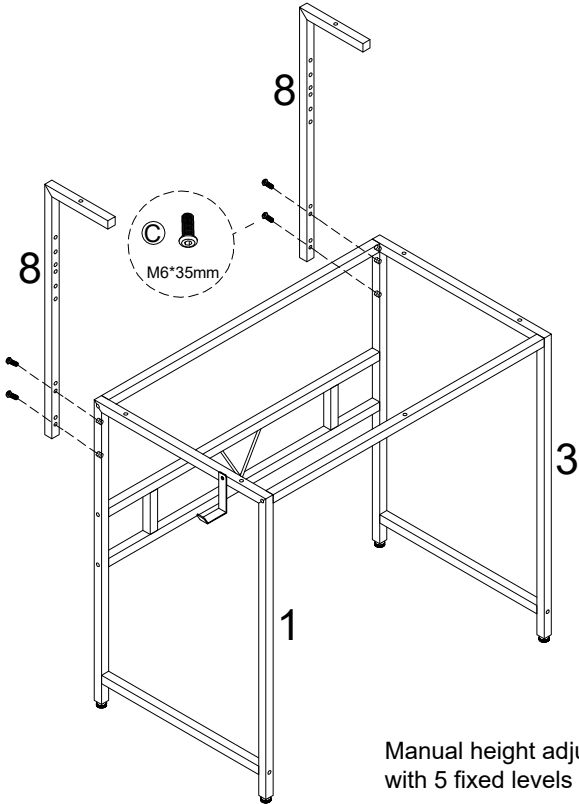

Manual height adjustment
with 5 fixed levels

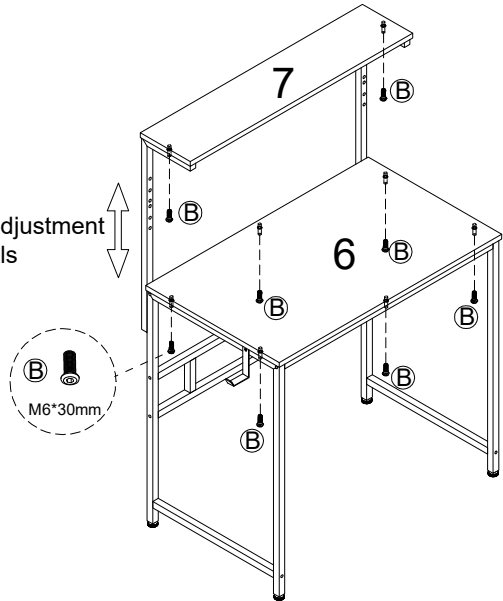

Step 3



 M3.9*13mm	
 G	X1

 M4	
	X1

