

Owner Manual



WARRANTY

We strive to offer high quality product and we also try our best to satisfy each customer that order from us, no matter on products or services as needed. Each customer receives a record of their order, such as the order number or item receipt. For any items that are out of warranty period, you may still be able to purchase the replacement parts from our company if they are available.



MAINTENANCE AND WARNING

Please read the manual thoroughly
before you start installing.

Please keep the product away from
sharp object.

Packaging and small parts may have
chocking hazard, please keep them away
from children and pets.

Please clean the product according to each
clean code, check the product description
for more information.

Please keep the product away from
fire.

If you have any other questions, please
contact us, we will be glad to help you out.

If the product is placed under direct
sunlight, the pattern or color might fade
away overtime.

Check the product periodically to make
sure everything is secured and tightened.

Always use proper tools for installation.

Do not jump on the product.



Around 45 min

PRODUCT DESCRIPTION

The waterproof cotton blend fabric keeps you dry and comfortable, even in rainy weather, making this chair perfect for year round outdoor use.

Crafted with a durable solid wood frame, this chair supports up to 400 lbs, offering solid strength for long lasting outdoor enjoyment.

The chair features soft, cushioned seating that adds comfort for hours of relaxation in your garden, patio, or balcony.


Set up is quick and simple, allowing you to enjoy your outdoor seating area without hassle.

This set includes two chairs, making it an ideal choice for couples, guests, or small outdoor gatherings.

EXPLODED VIEW



The product's left and right are determined by sitting posture

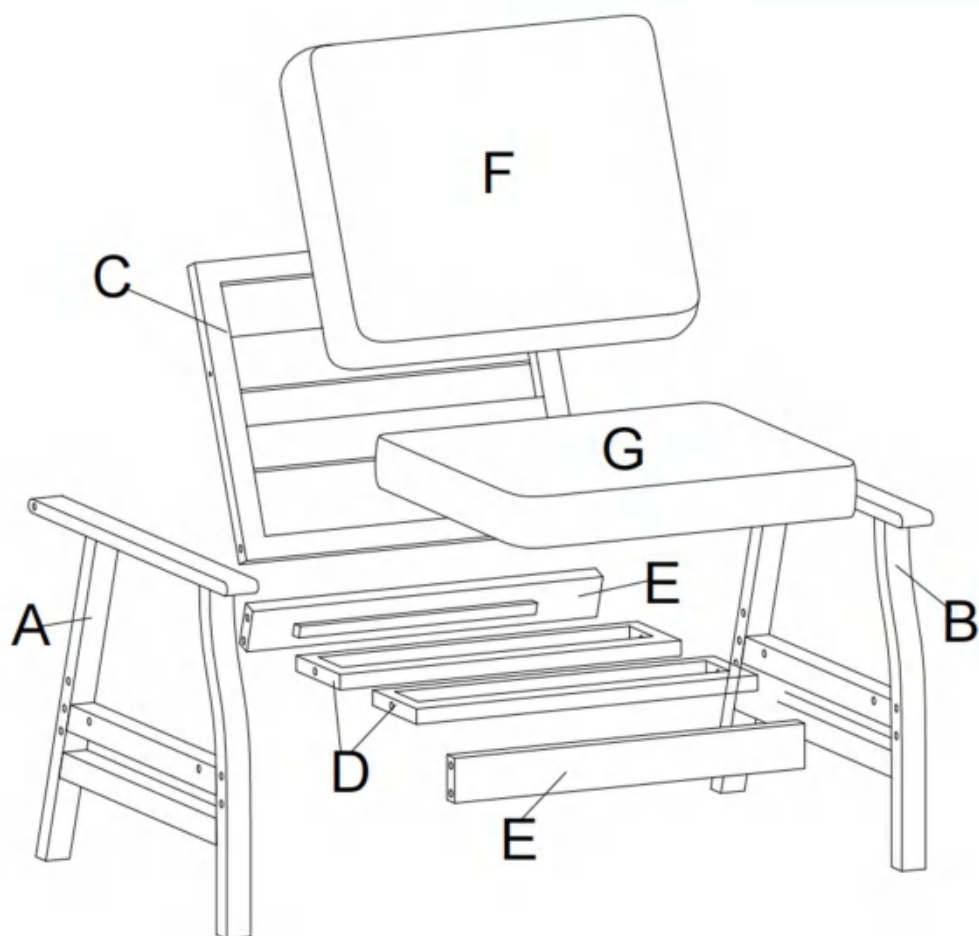

PARTS

A*2



Right arm

B*2



Left arm

C*2



Back frame

D*4



Seat frame

E*4



Support bar

F*2



Back cushion

G*2



Seat cushion

Hx2



Bag

Ix2



Seat cushion cover
(Hide in bag)

Jx2



Backrest cover
(Hide in bag)

★The Cover with the washing label is the Backrest Cover

HARDWARE

TOOL LIST

NOTE: Designated with (★) We provide additional spare parts in the hardware package

①*12



★ M6*50mm
Bolts

③*1



Allen key

④*8



★ Vertical nut

⑤*16



★ Black hole
cover

⑥*2



M6*30mm
Bolts

⑦*2







M6*70mm
Bolts

Please make sure all hardware&packing material fitting the list.
Especially some small accessories may be missing during
transportation. Please contact us if you have any question.

step 1 ---Cut the plastic air compression bags


After taking out the cushions (G&F) from the air compression bags, please allow them to recover for a period of time. It may take up to 48 hours to fully recover. You can gently slap them to speed up the process.

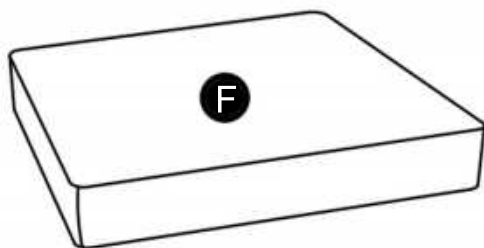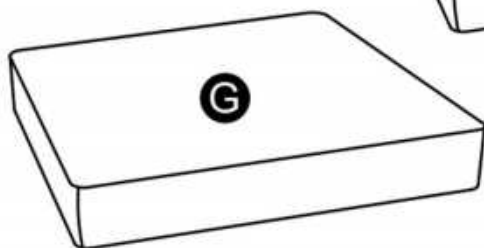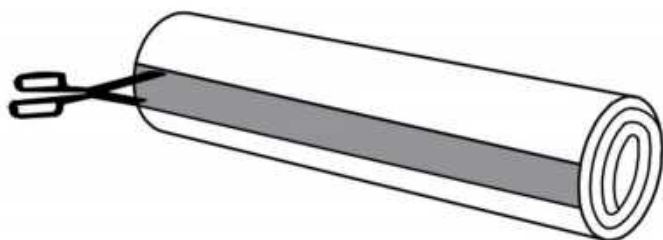

X2


step 2 ---Take out the cushion cover

Open the bag, take out the back cushion cover (I) and seat cushion cover (J).

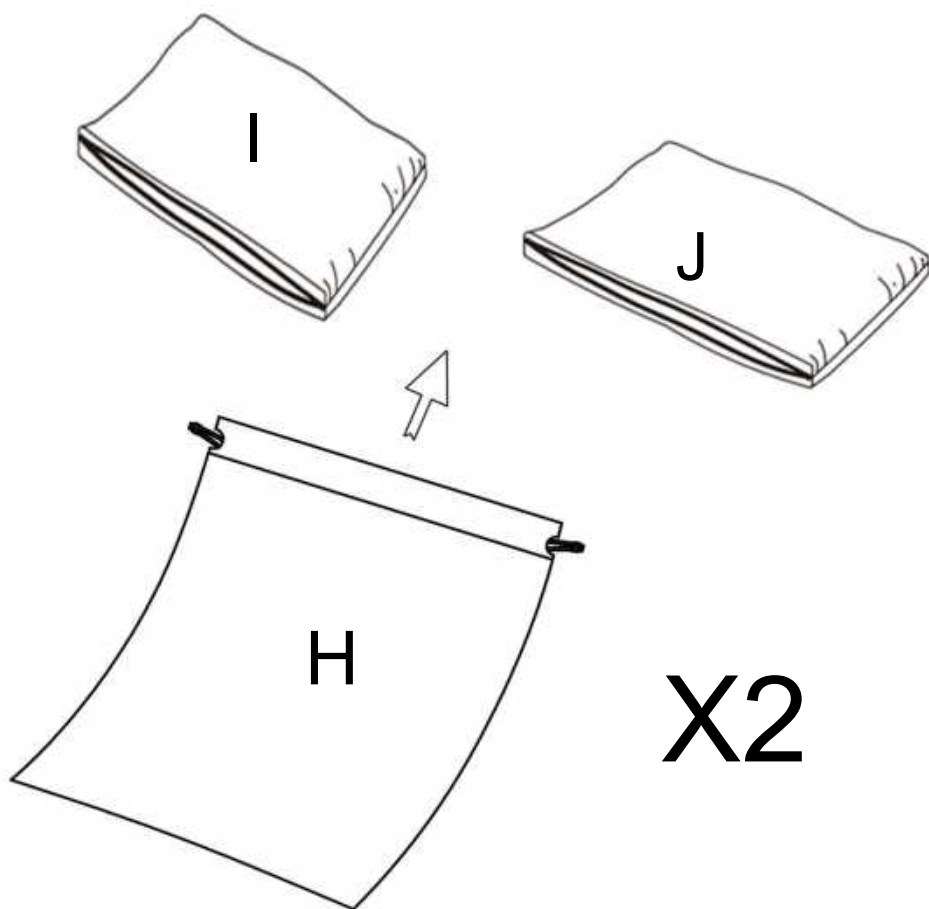

step 3 ---Put on the cushion cover

How to Put on the Cushion Cover

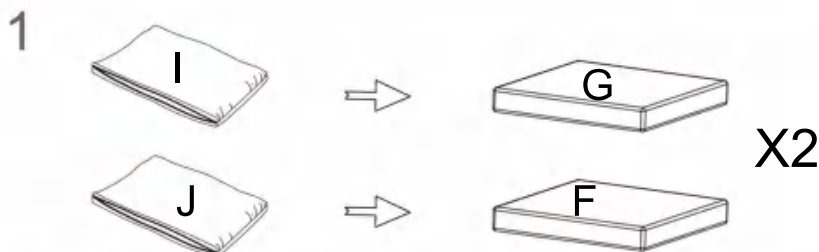

1.Take the cushion covers and inner out of the carton.



2.Fold the inner in half, pushing the sides together,then begin to slide the cover onto it.



3.Align both far corners, then gently compress insert while fitting cover around it.



4.To avoid a stuck zipper, please pull the fabric away from the zipper before moving forward.



5.When all done, please pat the cushion or give it a little shake to make it more flat.


step 4 ---Attach the right leg(A) to the seat frame(D).

Align Seat Frame (D) with the Right Armrest (A). Use Screws (1) to attach from the inside, tightening with Allen Wrench (3) provided.




Notice:

We suggest tightening the bolts for 30-50% first, make sure the process is correct and bolt holes are aligned, then fully tightening them all.

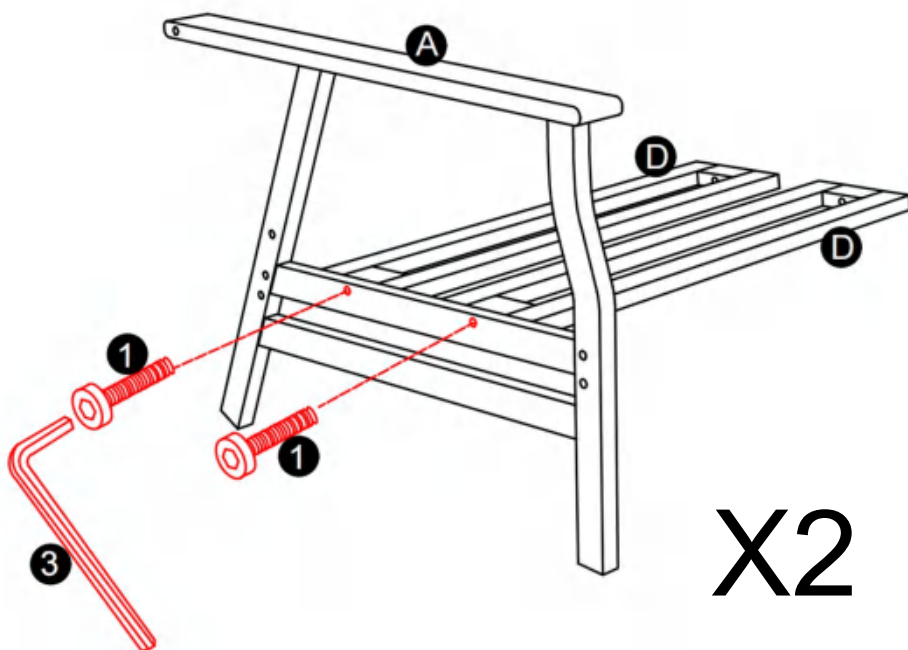


step 5 ---Install the Support bar (E)

Insert Vertical Nuts (4) into the designated holes of each support bar (E) as shown. Make sure the holes are aligned with the screw holes on the sides. Use Screws (1) and Allen Wrench (3) provided to attach the bars horizontally between Seat Frame (D) and Armrest (A) as shown.

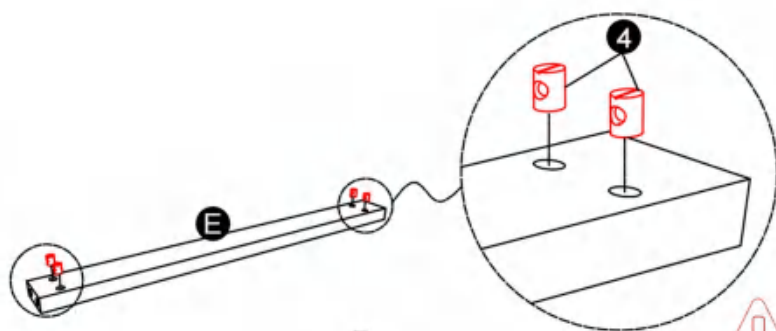

Notice:

We suggest tightening the bolts for 30-50% first, make sure the process is correct and bolt holes are aligned, then fully tightening them all.

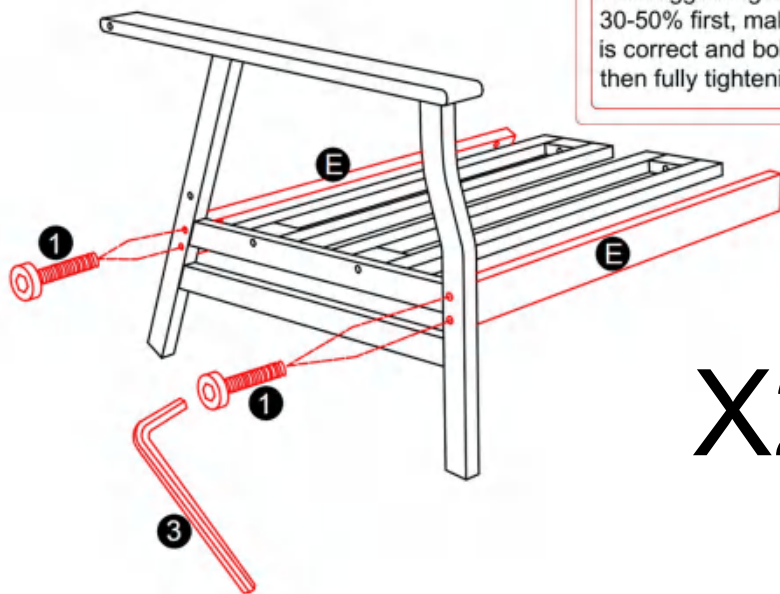


step 6 ---Install the Backrest frame (C)

Align the Backrest Frame (C) with the holes on both armrest and seat frame as shown. Secure with Screws (7&6) on both sides and tighten firmly as show.



Notice:

We suggest tightening the bolts for 30-50% first, make sure the process is correct and bolt holes are aligned, then fully tightening them all.

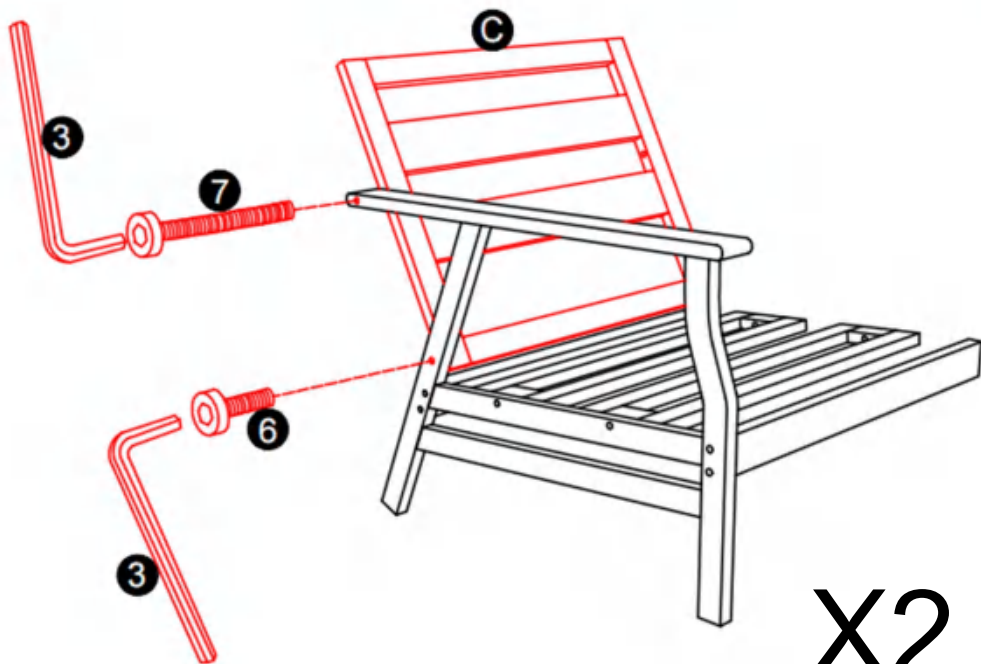

X2


step 7 ---Install the Left armrest (B)

Flip the frame. Position Left Armrest (B) over connection points. Tighten all Screws (1&6&7) on both armrest and seat frame as shown.



Notice:


We suggest tightening the bolts for 30-50% first, make sure the process is correct and bolt holes are aligned, then fully tightening them all.

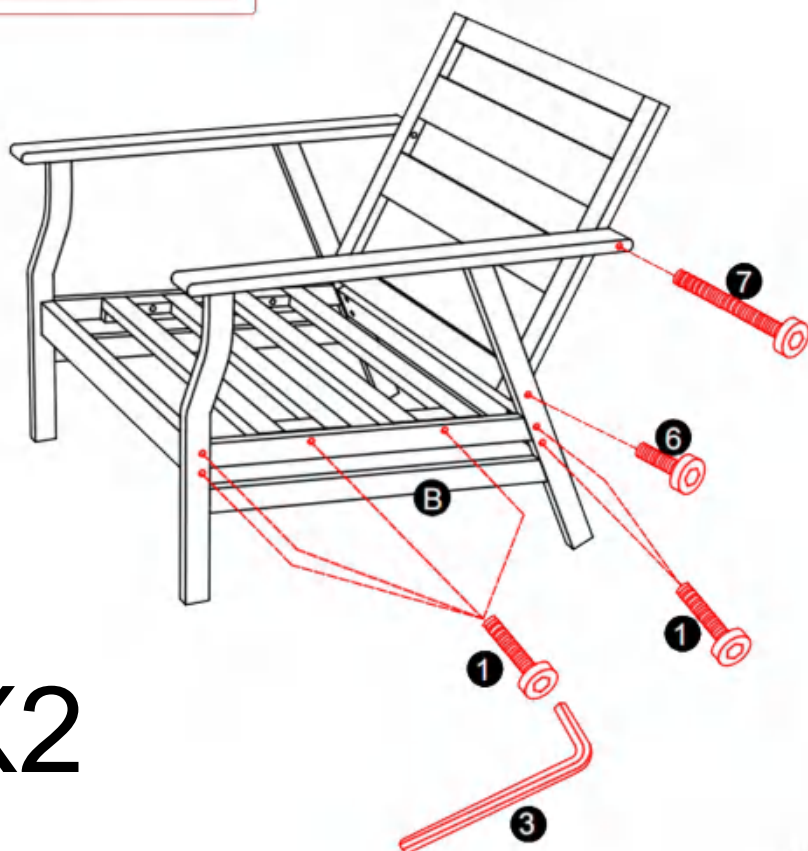

X2



step 8 ---Place the plastic caps (5)

Cover each screw hole with Plastic Caps (5). Press down firmly until flush with the surface.

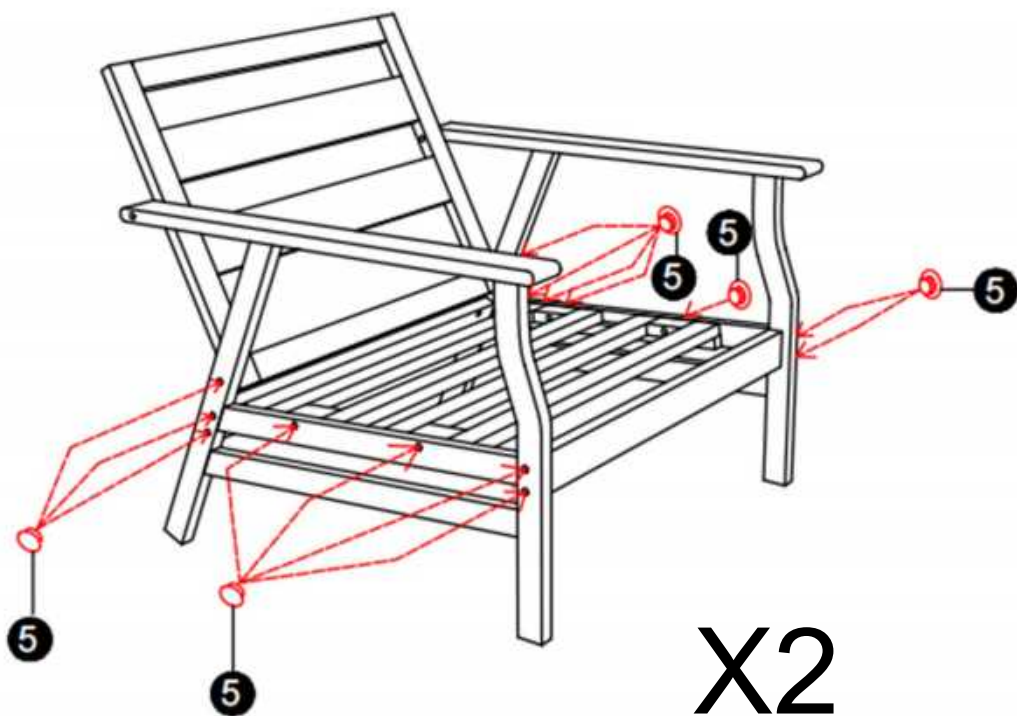


step 9 ---Place the Seat cushion (G) & Back cushion (F)

Place the Seat Cushion (G) with the tag side up. Place the Back Cushion (F) against the backrest with the tag facing front as shown.

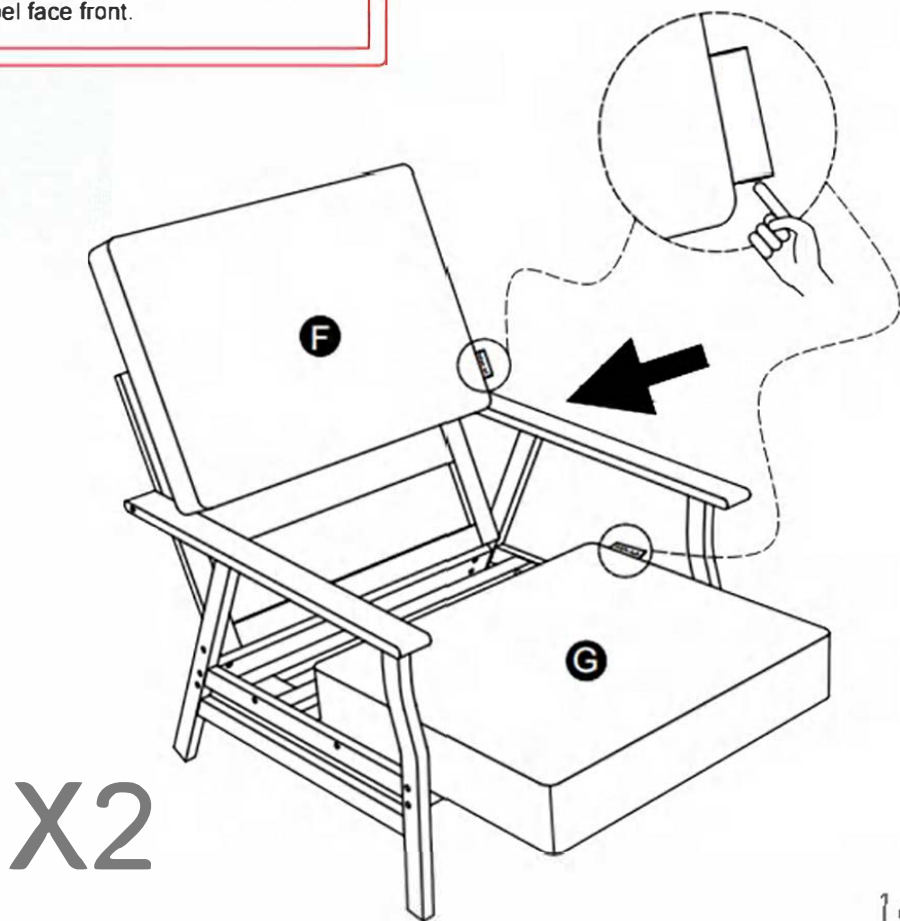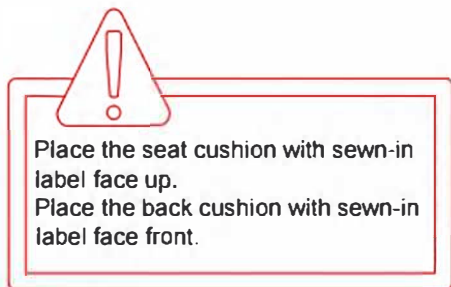

step 10 ---Assemble complete

Congradulations! You have finished the assembly, thank you again for choosing our product! Please enjoy!

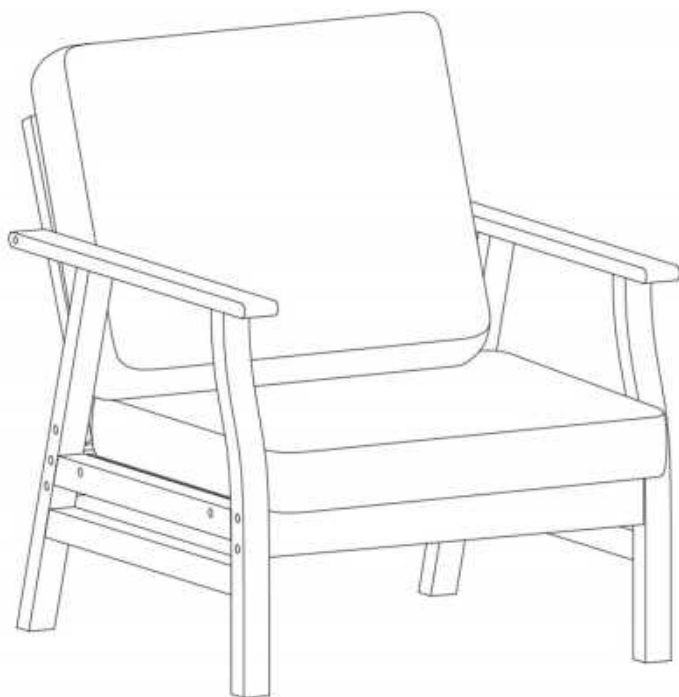

Come with multiple choices of upholsteries and colors.

