
Installation Instruction

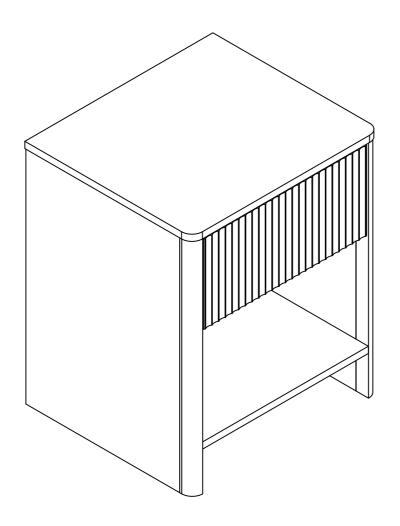

Assembling


Estimated time for assembly



45:00

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100 I 35
lbs table top lbs per

What' included

Code Description	
A Cam Bolt M6X35MM	19
B Cam Lock 15X10MM	19
C Wooden Dowel M8X30MM	10
D Screw M4X40MM	6
E Screw M3.5X14MM	2
F Door Rebound Device Holder	1
G Nylon Strap	2
H Screw M3.0X14MM	10
I Door Rebound Device	1
J MATS	4
K Anchor	2
CL Left mother extended orbit	1
CR Right mother extended orbit	1
DL Left public extension track	1
DR Right public extends track	1

The Hardwares

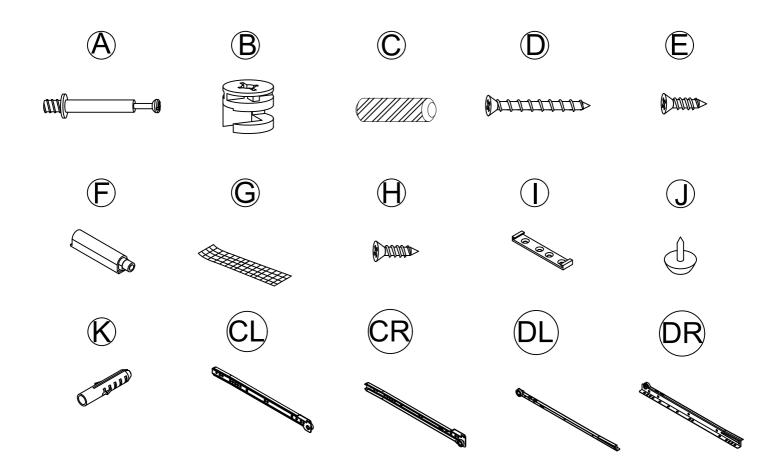


IMPORTANT:


- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3. Please use hand tools to assemble this product. Do not use power tools.


Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Back Panel	1
6	Drawer left panel	1
7	Drawer right side panel	1
8	The drawer bottom	1
9	After the drawer board	1
10	The drawer face	1


The Accessoriess

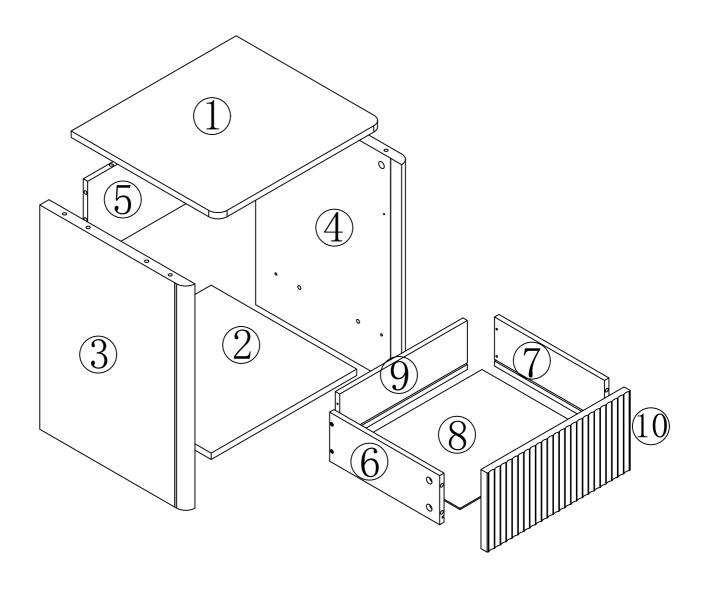


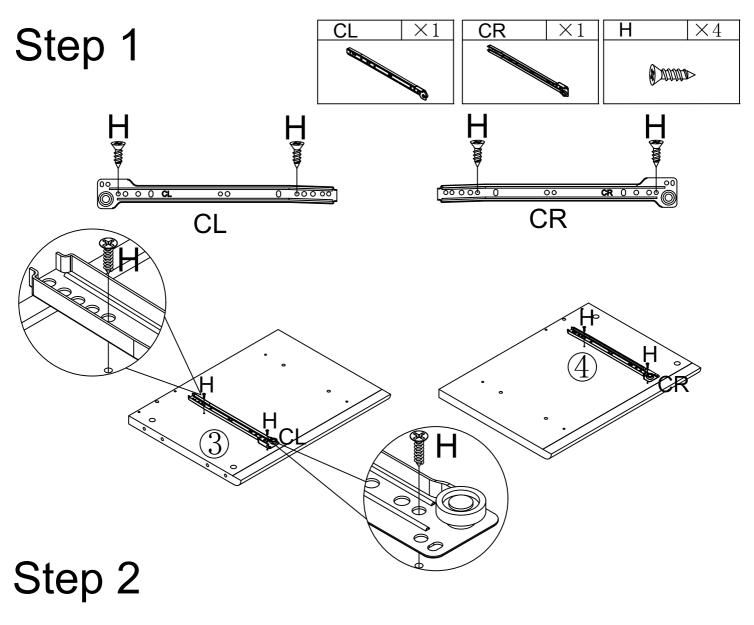


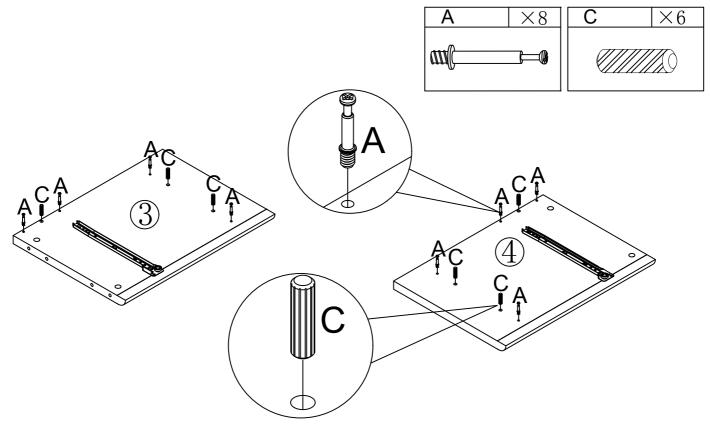


Step 3



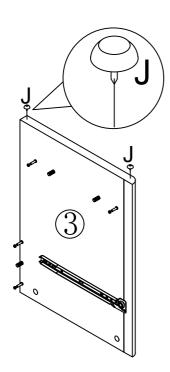

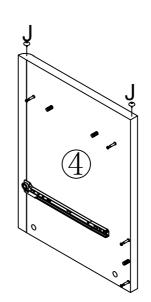



Step 4

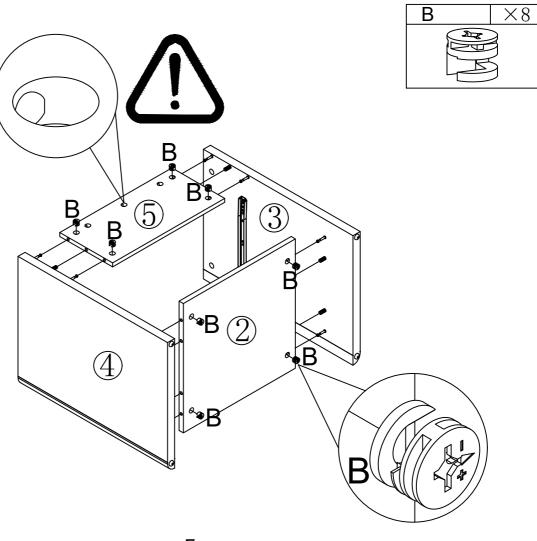


$\times 7$ Н $\times 2$ $\times 1$ $\times 1$ Step 5 Step 6 $\times 7$ $\times 4$ **⋄**B ° 8 5


Step 7

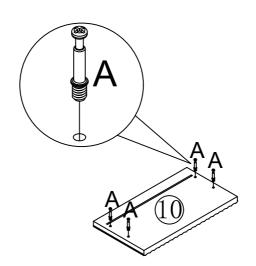





Step 8

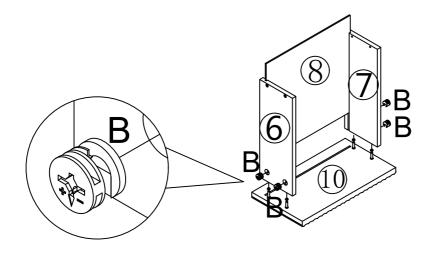





Step 9

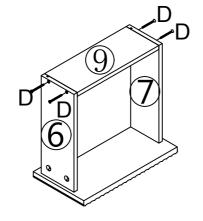





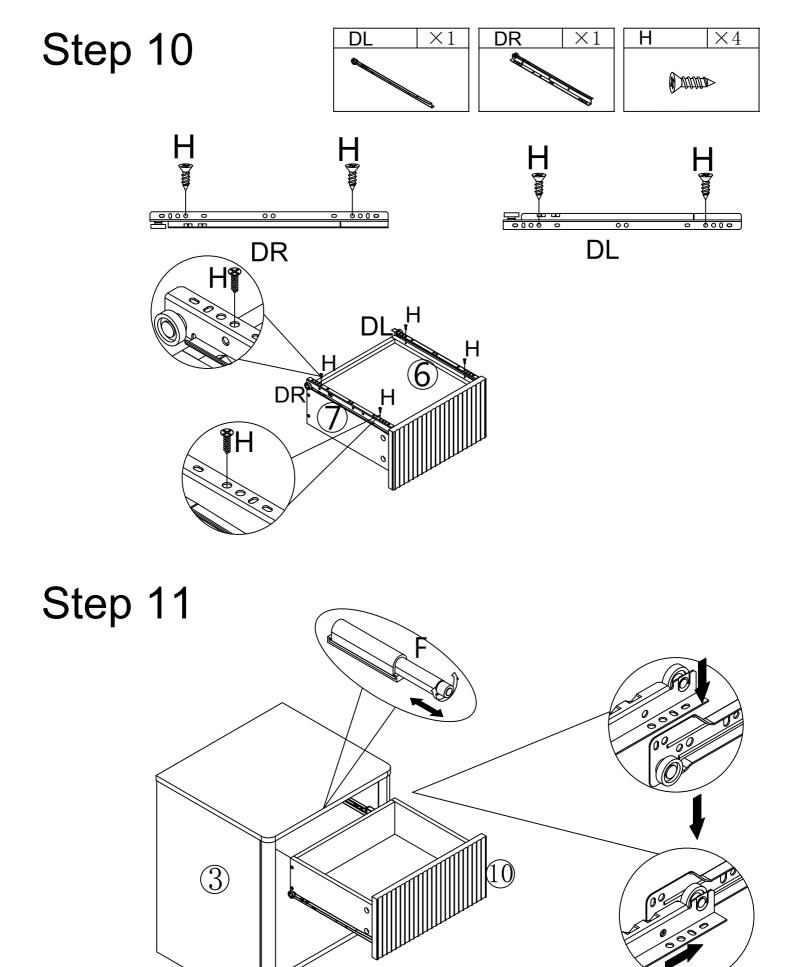

Step 12





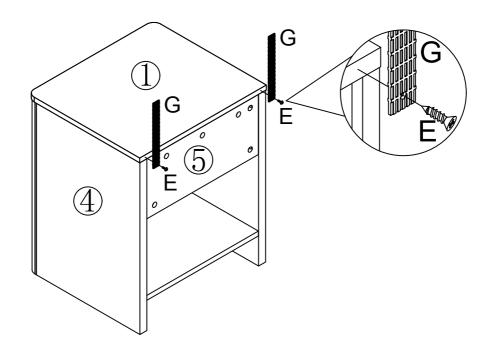

Step13

