
Barber Chair

OWNER'S MANUAL

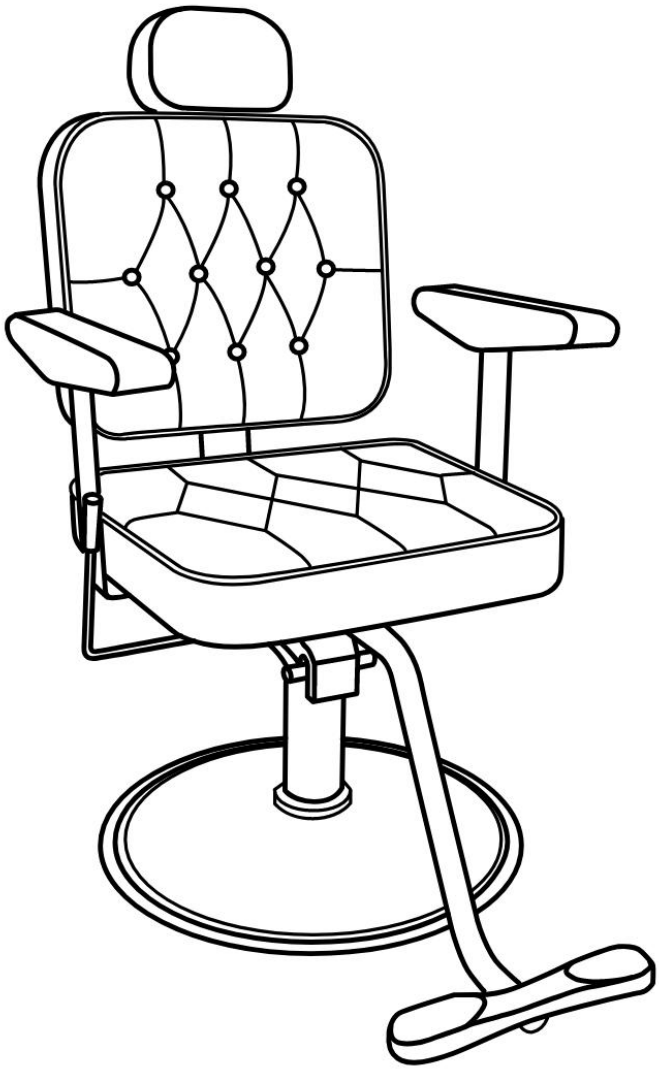

CAUTION! Please read through this manual before assembling, installing or using the product to ensure safe and correct use.

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Table of Contents


Main Parts----------03

Preinstalled Accessories----------03




Accessory Kit---------- 03

Installation Diagram ----------04

Instructions for Use ---------- 10

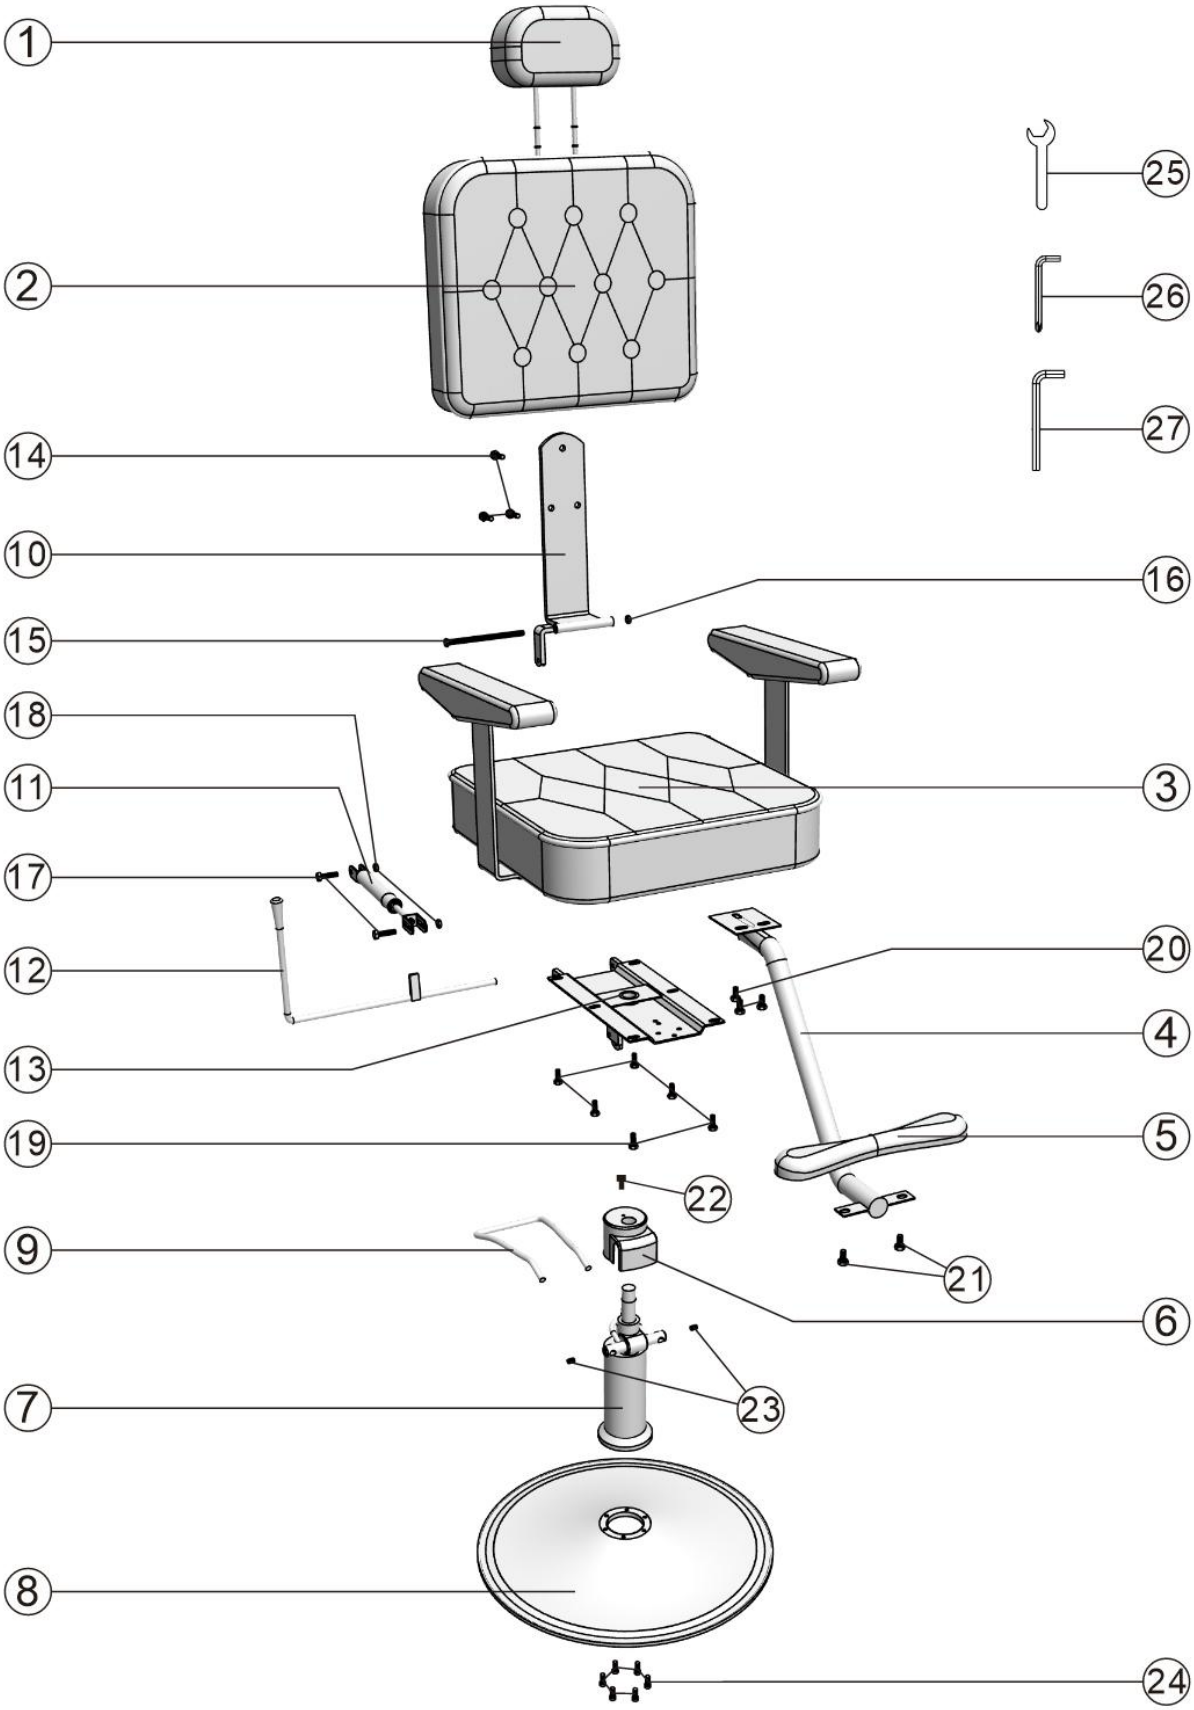
1
2
14
10
15
18
11
17
12
13
19
9
7
8
25
26
27
16
3
20
4
5
22
21
6
23
24

Main Parts

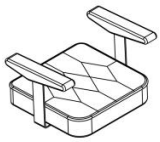Code	Image	Name	Qty	Code	Image	Name	Qty
1		Headrest	1	*2*		Backrest	1
3		Seat	1	*4*		Footrest Bar	1
5		Footrest	1	*6*		Oil Pump Cover	1
7		Oil Pump	1	*8*		Base	1
9		Foot Pump Rod	1	*10*		Rotating Shaft	1
11		Reclining Aerobar	1	*12*		Reclining Handle Bar	1
13		Tray	1				

Preinstalled Accessories

Code	Image	Where to find	Name	Qty	Code	Image	Where to find	Name	Qty
14		Preinstalled on ②	Allen Socket Screw M8*30	3	*17*		Preinstalled on ⑪	Hex Screw M8*30	2
18		Preinstalled on ⑪	Hex Nut M8	2	*19*		Preinstalled on ③	Hex Screw M8*20	6
20		Preinstalled on ⑬	Hex Screw M8*16	3	*21*		Preinstalled on ⑤	Hex Screw M8*16	2
22		Preinstalled on ⑦	Semi-round Head Screw M5*15	1	*23*		Preinstalled on ⑦	Lock Nut M8	2
24		Preinstalled on ⑦	Allen Socket Screw M6*12	6					

Accessory Kit（Packed in a Small Bag）


Code	Image	Name	Qty	Code	Image	Name	Qty
15 & 16		Hex Screw M8*140 & Hex Nut M8	1&1	*25*		Wrench 14mm	1
26		Allen Key 4mm with Phillips head Screwdriver	1	*27*		Allen Key 5mm	1

Installation Diagram

Step One:


Loosen the two Lock Nuts M8 ㉓, install the Foot Pump Rod ⑨ to the Oil Pump ⑦, and tighten the two Lock Nuts M8 ㉓ to fix the Foot Pump Rod ⑨.

Caution: Install the Foot Pump Rod ⑨ to the Oil Pump ⑦ in the correct direction as the diagram.

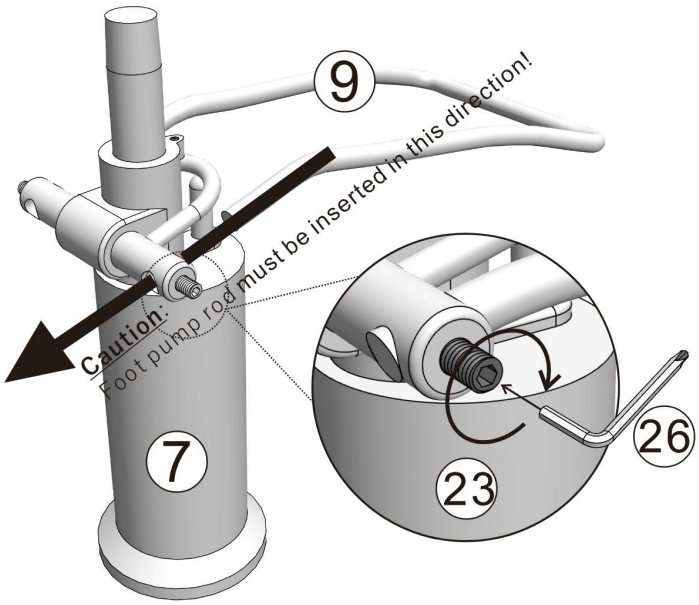


Step Two:

Install the Oil Pump Cover ⑥ on the Oil Pump ⑦ and fix it with the Semi-round Head Screw M5*15 ㉒.

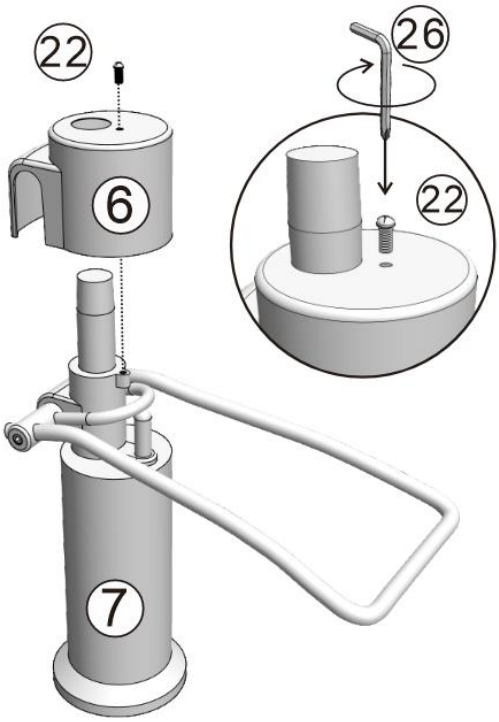


Step Three:

Unscrew the six Allen Socket Screws M6*12 ㉔ from the bottom of the Oil Pump ⑦ for later use.

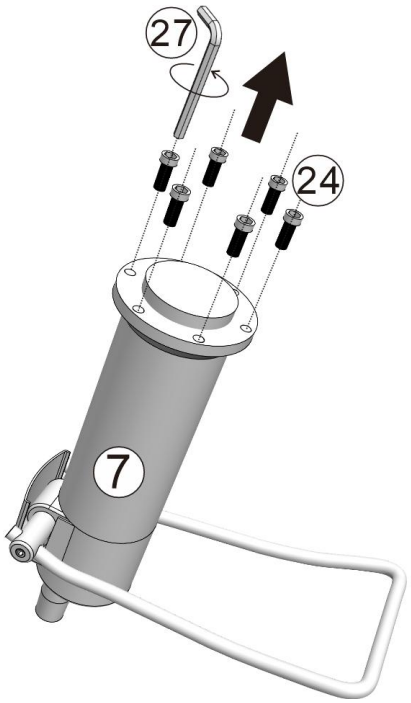


Step Four:


Fix the Base ⑧ with six Allen Socket Screws M6*12 ㉔ to the bottom of the Oil Pump ⑦.

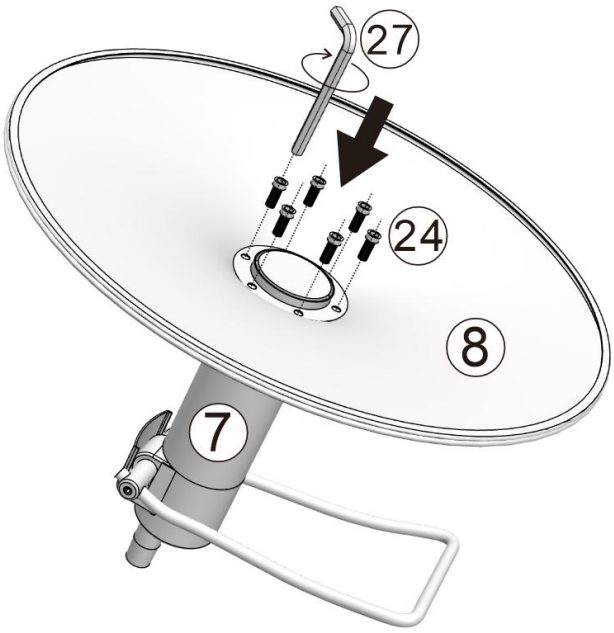

Step Five：


Unscrew two Hex Screws M8*16 ㉑ from Footrest ⑤ and combine the Footrest ⑤ and Footrest Bar ④ with these two screws and set aside for later usage.

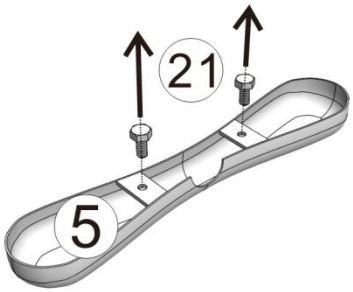


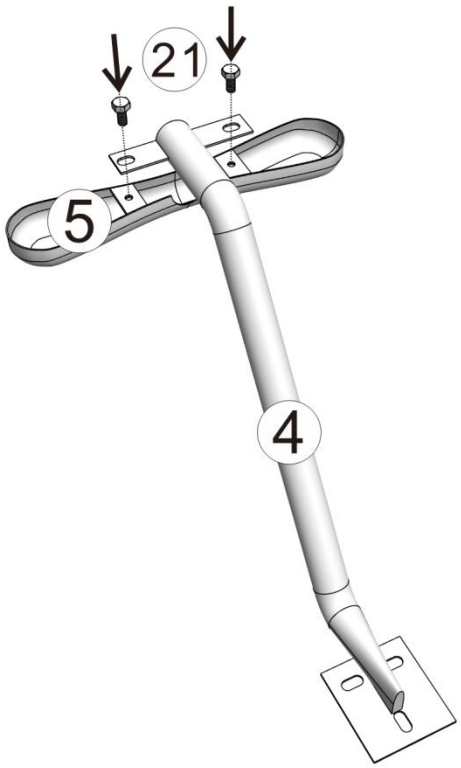

Step Six：


Unscrew three Allen Socket Screws M8*30 ⑭ from Backrest ② and install the Rotating Shaft ⑩ to Backrest with these three screws and set aside for later usage.

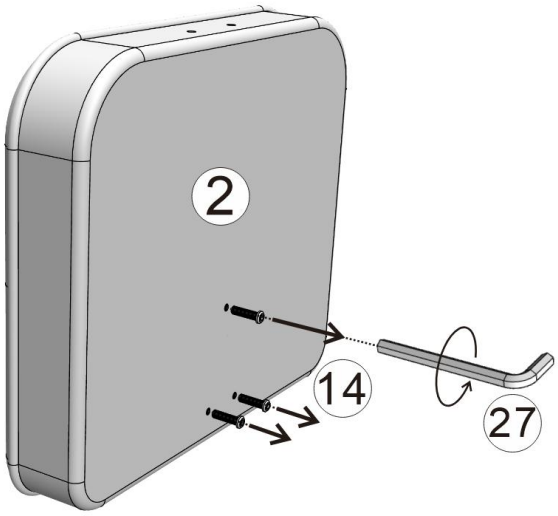

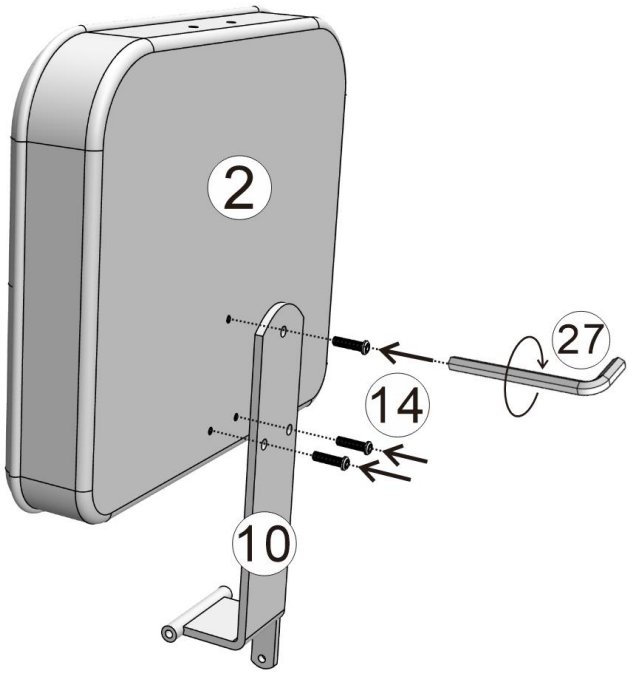


Step Seven：

Unscrew six Hex Screws M8*20 ⑲ from back of the Seat ③ and install the Tray ⑬ to Seat ③ with these six screws.

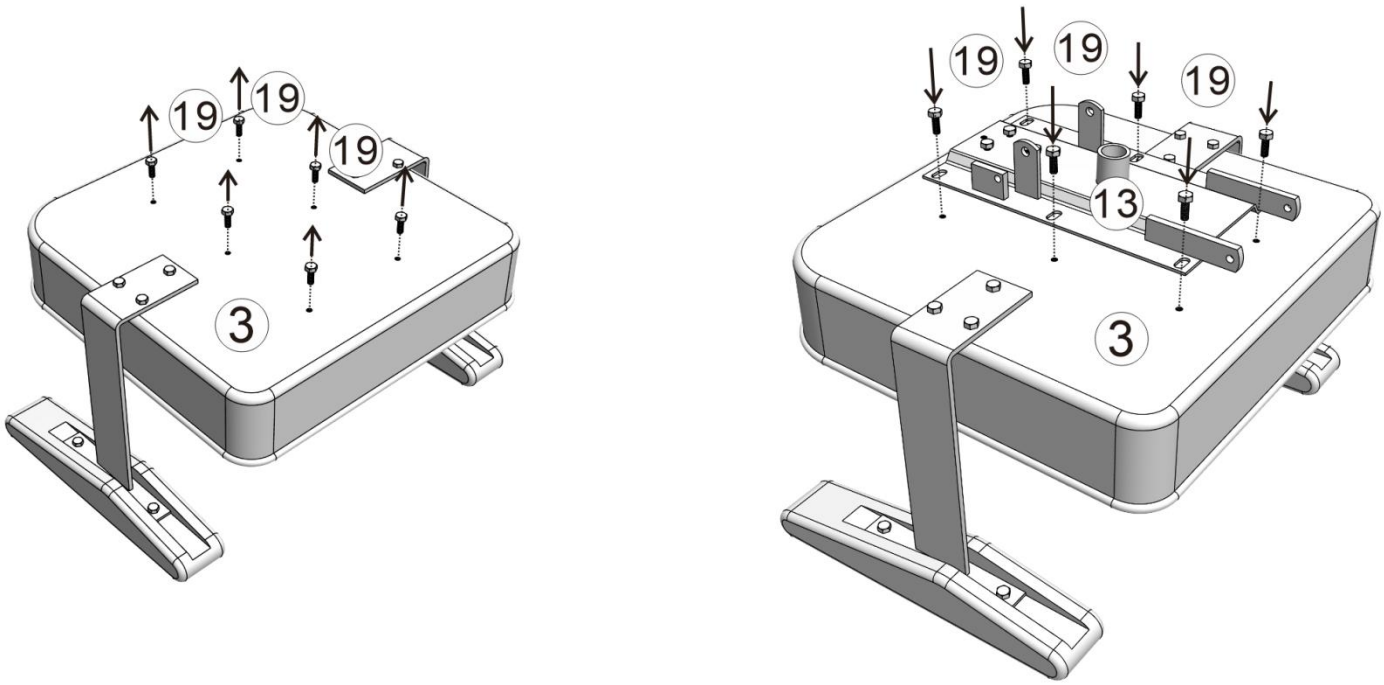


Step Eight：

Connect the Rotating Shaft ⑩ and Tray ⑬ and fix them with Hex Screw M8*140 ⑮ and Hex Nut M8 ⑯.

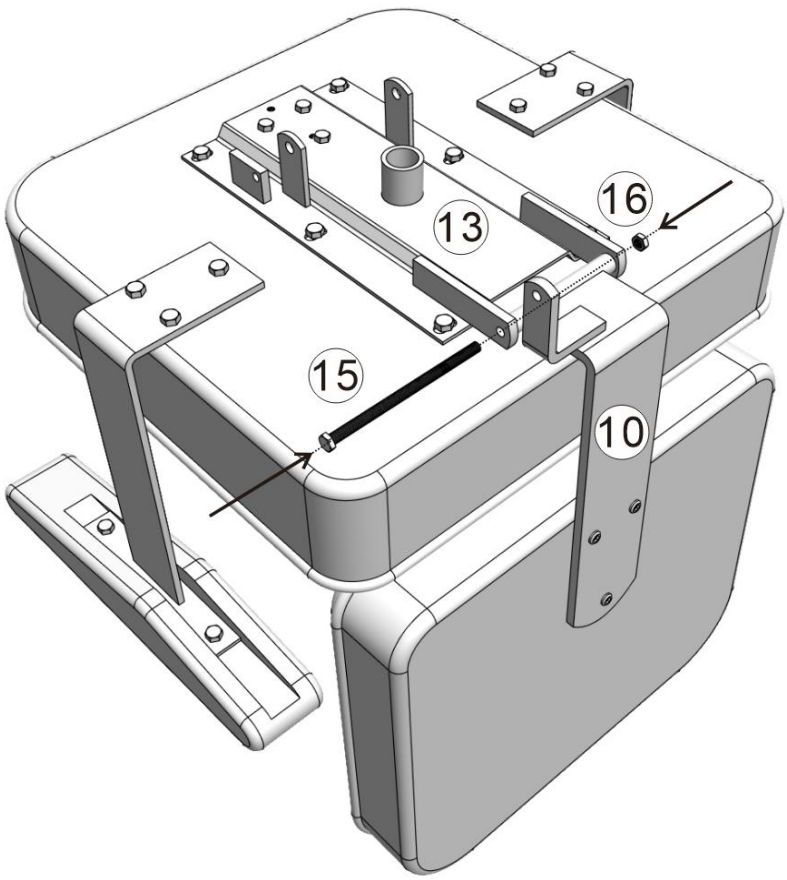


Step Nine：

Insert the Reclining Handle Bar ⑫ through the two holes of the Tray ⑬.

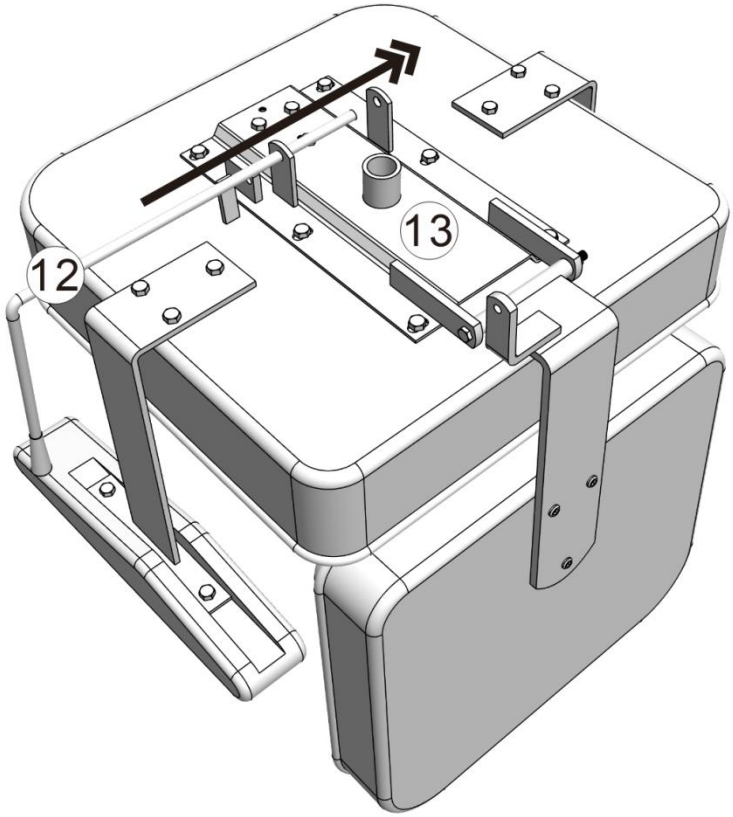


Step Ten：

Unscrew two Hex Screws M8*30 ⑰ and two Hex Nuts M8 ⑱ from the Reclining Aerobar ⑪.

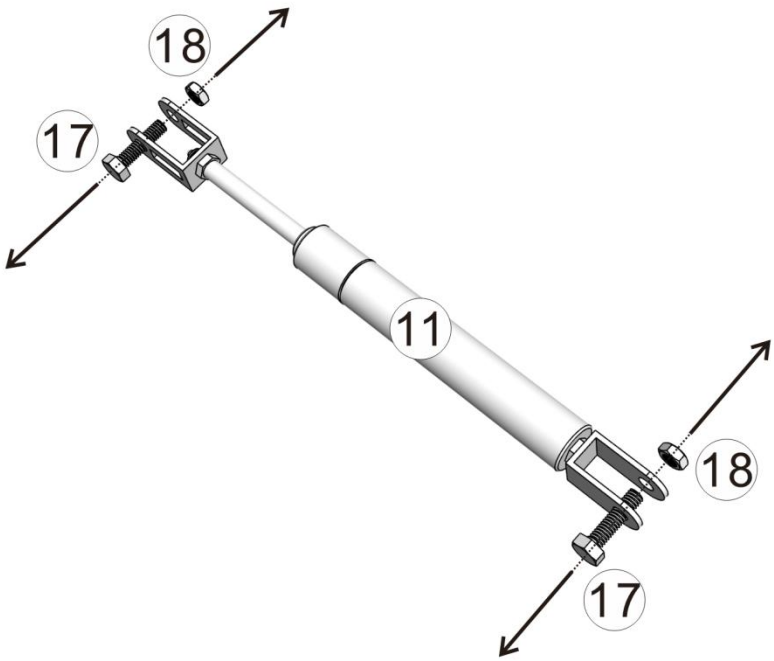


Step Eleven：


Install the Reclining Aerobar ⑪ to Tray ⑬ and Rotating Shaft ⑩ and secure them with two Hex Screws M8*30 ⑰ and two Hex Nuts M8 ⑱.

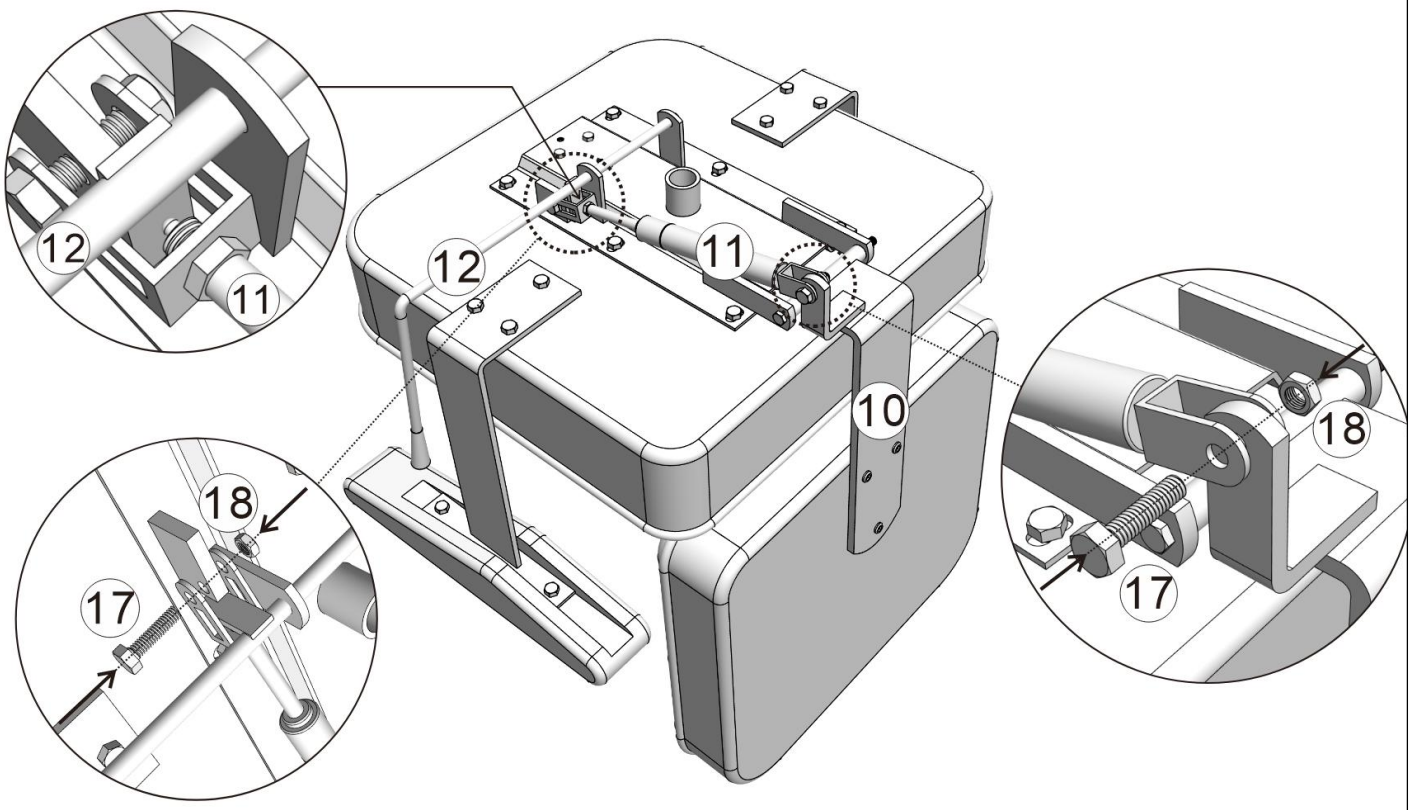

Step Twelve：


Unscrew three Hex Screws M8*16 ⑳ from Tray ⑬ and install the Footrest Bar ④ to Tray ⑬ with these three screws.

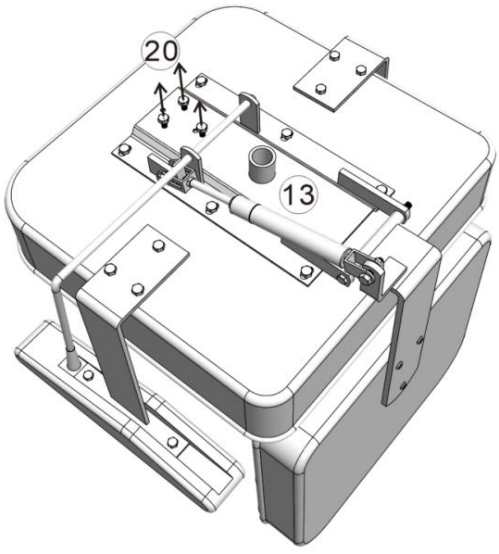

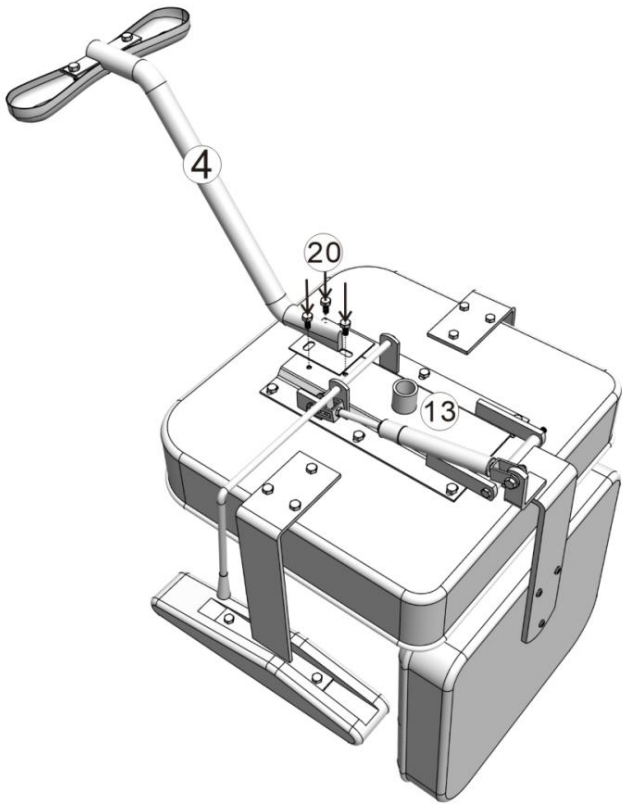


Step Thirteen:

Combine the Seat: Attach the assembled seat to the pump, sit on it, insert the Headrest ① and there you go.

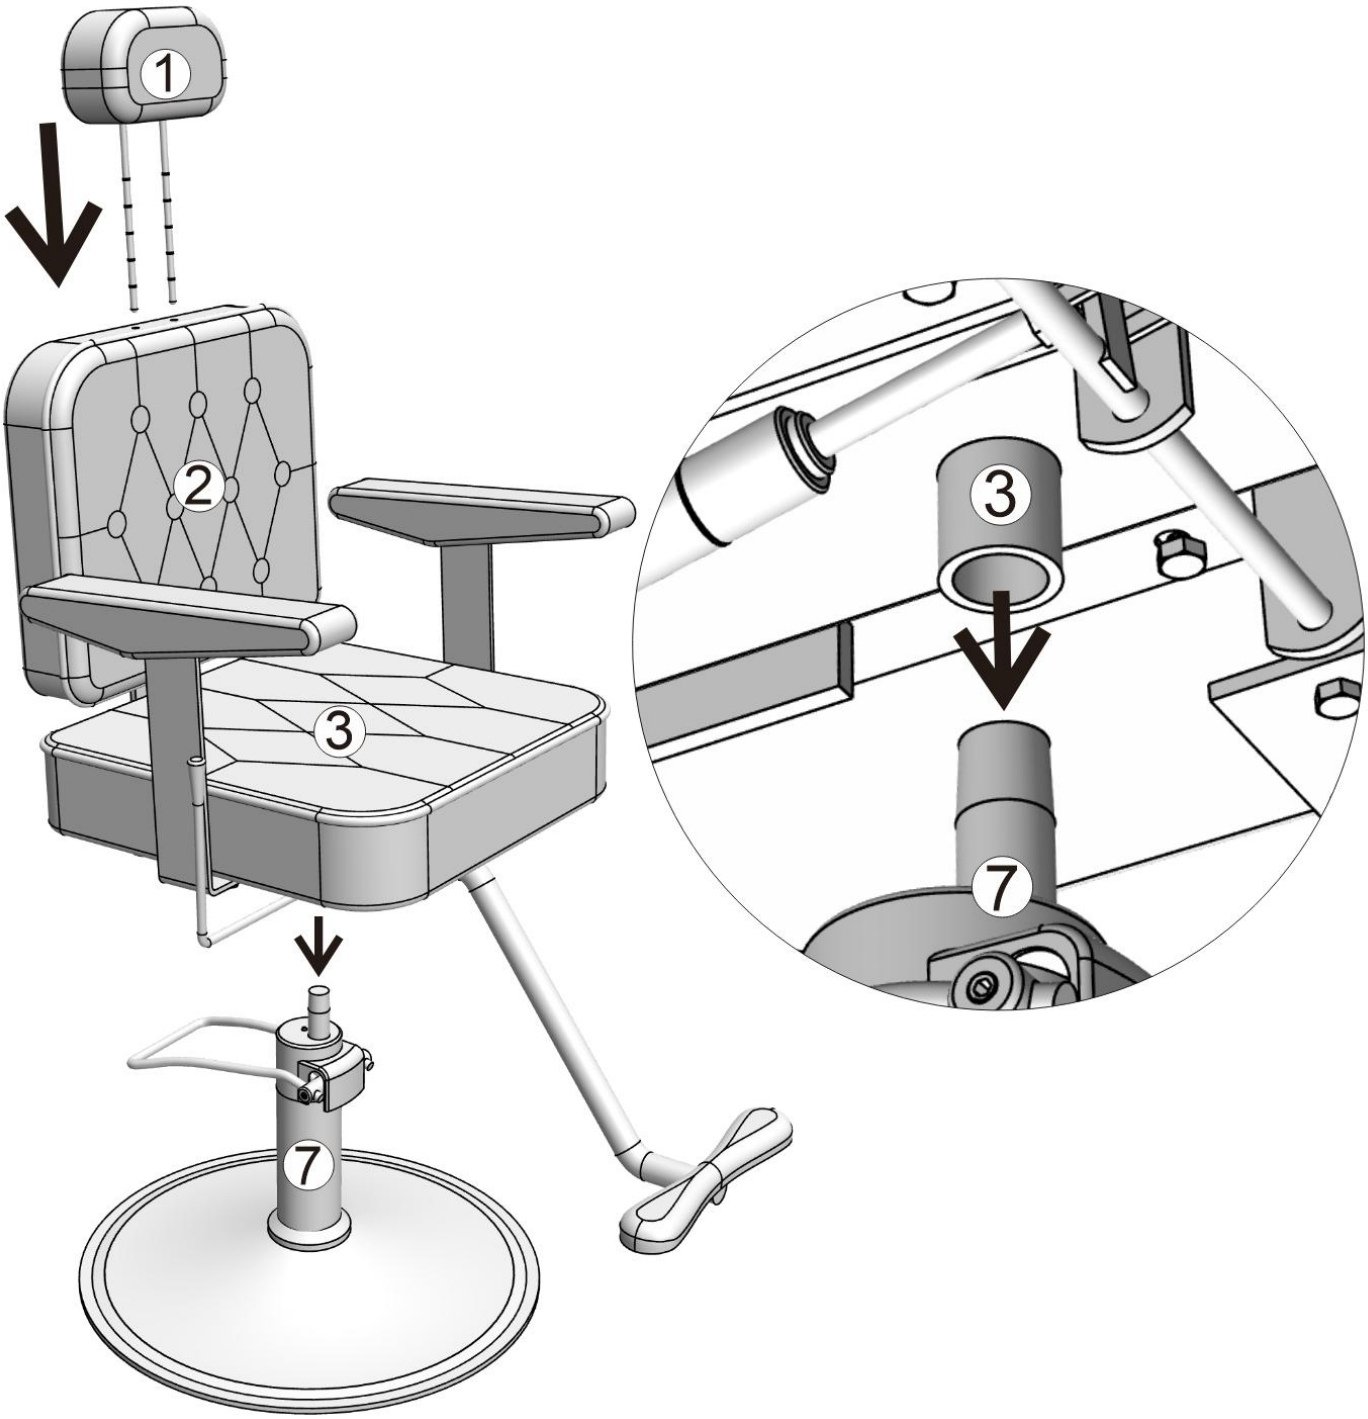


Note: No screws are needed to connect the seat and the base. The longer you seat, the tighter it gets.

Instructions for use

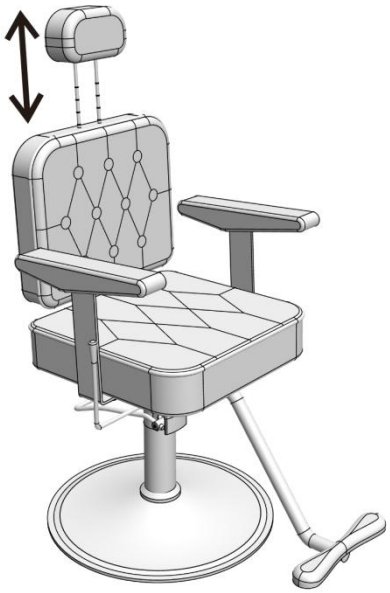


The height of headrest: The height of headrest can be adjusted by pulling and pushing up and down the headrest.

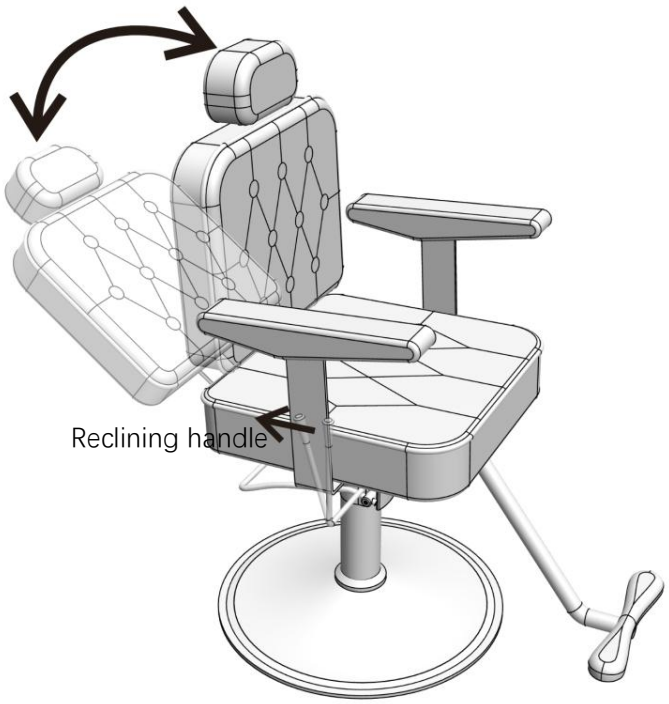

Reclining the backrest: Sit on the chair and pull the handle on the right side of the seat back without letting go, while leaning back hard while the backrest is down. Release the handle at the desired angle and fix the backrest angle.

Backrest rebound upright: Return to the body upright, pull the handle on the right side of the seat back again, and the seat back rebounds and stands upright.

Seat up: Foot down on the foot pump rod 5-10 cm, and repeat. Don't step too deep!

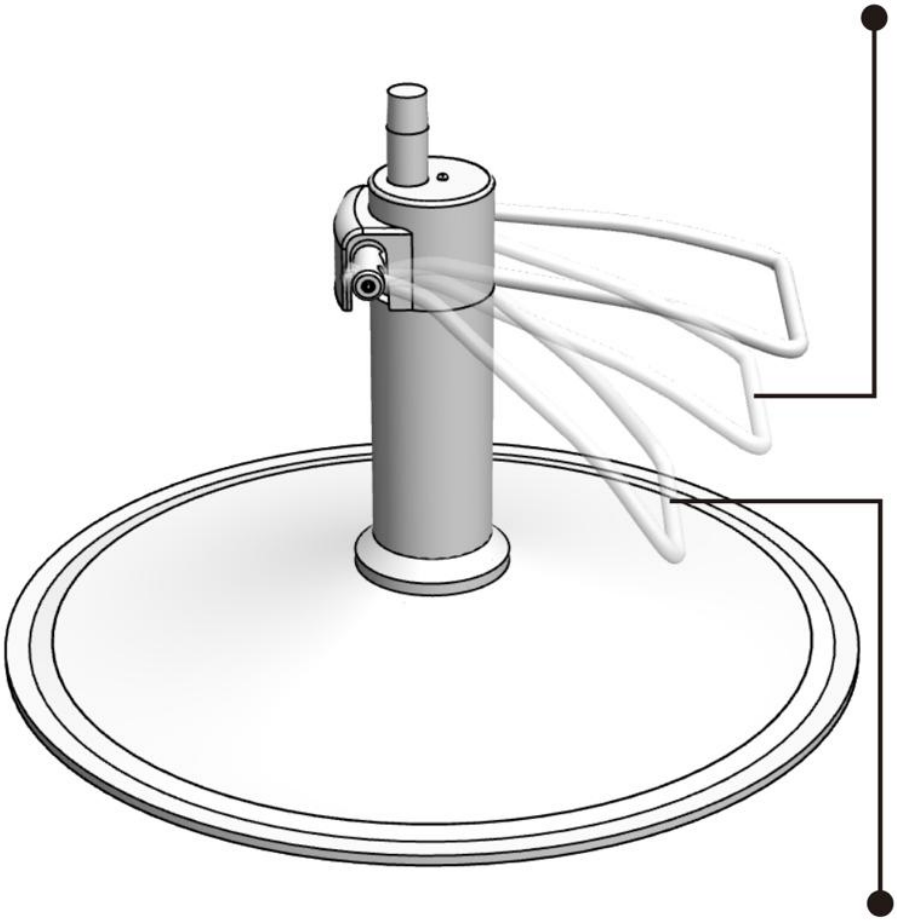

Seat down: Downhill the foot pump rod and hold still to lower the seat.