



CONVERTIBLE SOFA BED

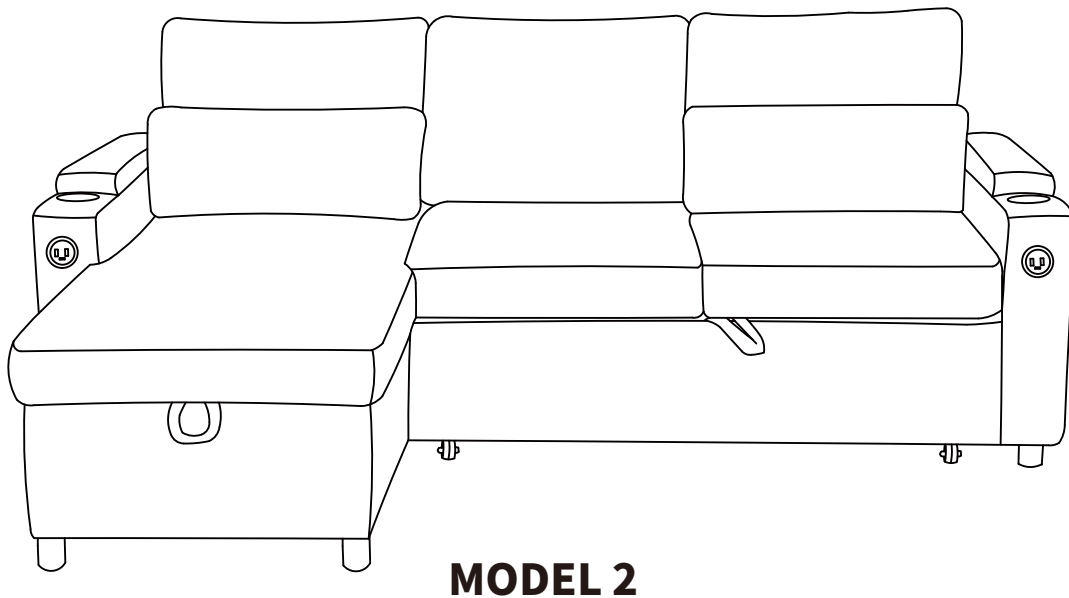

Catalogue

1. We highly value customer's user experience. Please contact us freely if there's any parts missing or damaged. We will provide professional advice or efficient customer support in 24 hours.
2. Item will come with 2 boxes, box A and box B. We suggest you install the whole item after receiving both boxes.
3. There are two ways to install the sofa, you can install the chaise on the left or right side according to your preference. Both types of installation are described in detail in our instruction manuals.
4. We recommend tighten all the bolts after you put all the bolts into the holes.




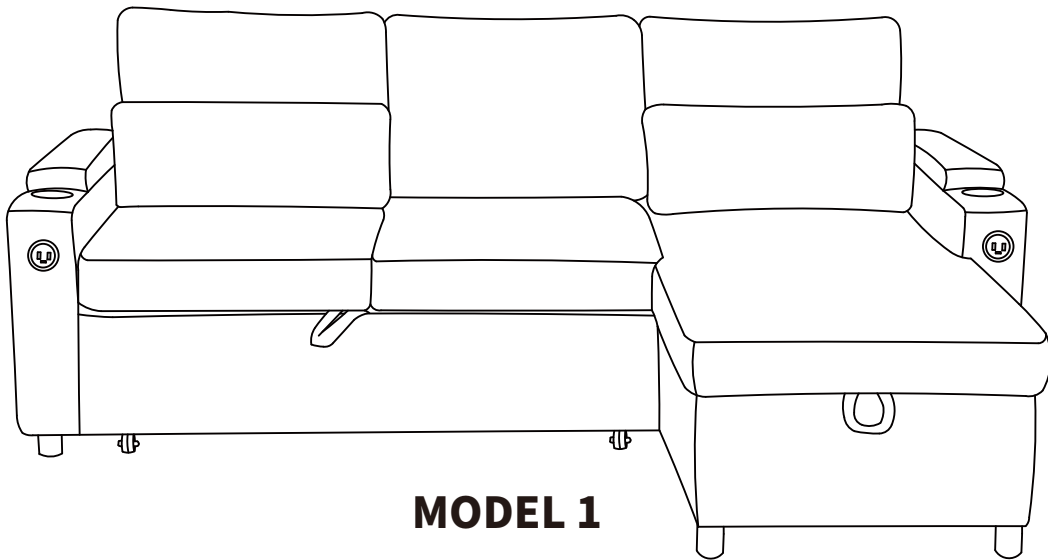




Part List of Box A and B.....1

How to assemble MODEL 1.....4














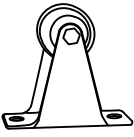
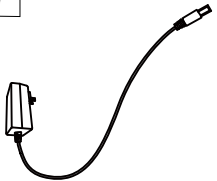
How to assemble MODEL 2.....11

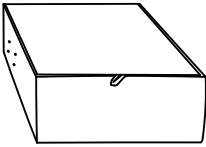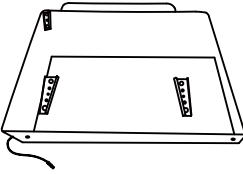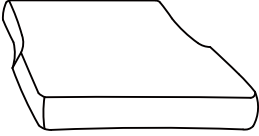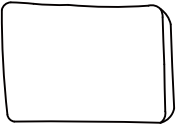How to replace USB.....18

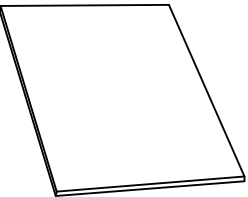
Box A Parts List

B	 1pc	C	 1pc	F	 1pc	G	 3pcs
H	 2pcs	I	 1pc	J	 1pc	M	 1pc

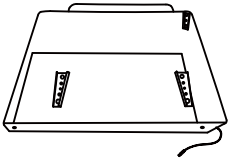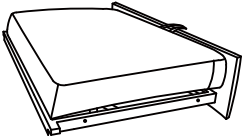
Box B Parts List

A	 1pc	D	 1pc	E	 2pcs	K	 1pc	L	 1pc
N	 2pcs big	O	 2pcs small	P	 8pcs	Q	 8pcs	R	 4pcs M6x40mm
S	 16pcs M6x20mm	T	 4pcs	U	 1pc	V	 4pcs	W	 2pcs


Step 1

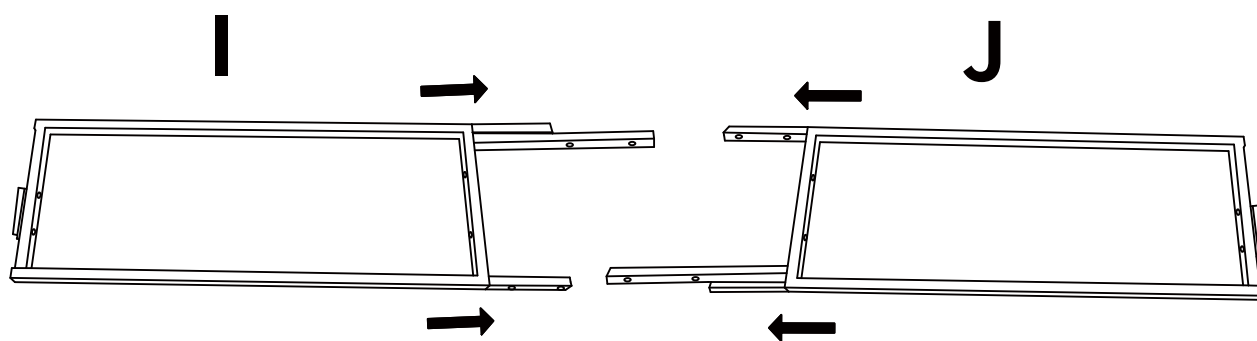

Step 2 Put the screws R into the holes one by one. Please do not lock any one of the 4 screws before they are all aligned. After aligning them all and then tighten them with Allen Key (part U).

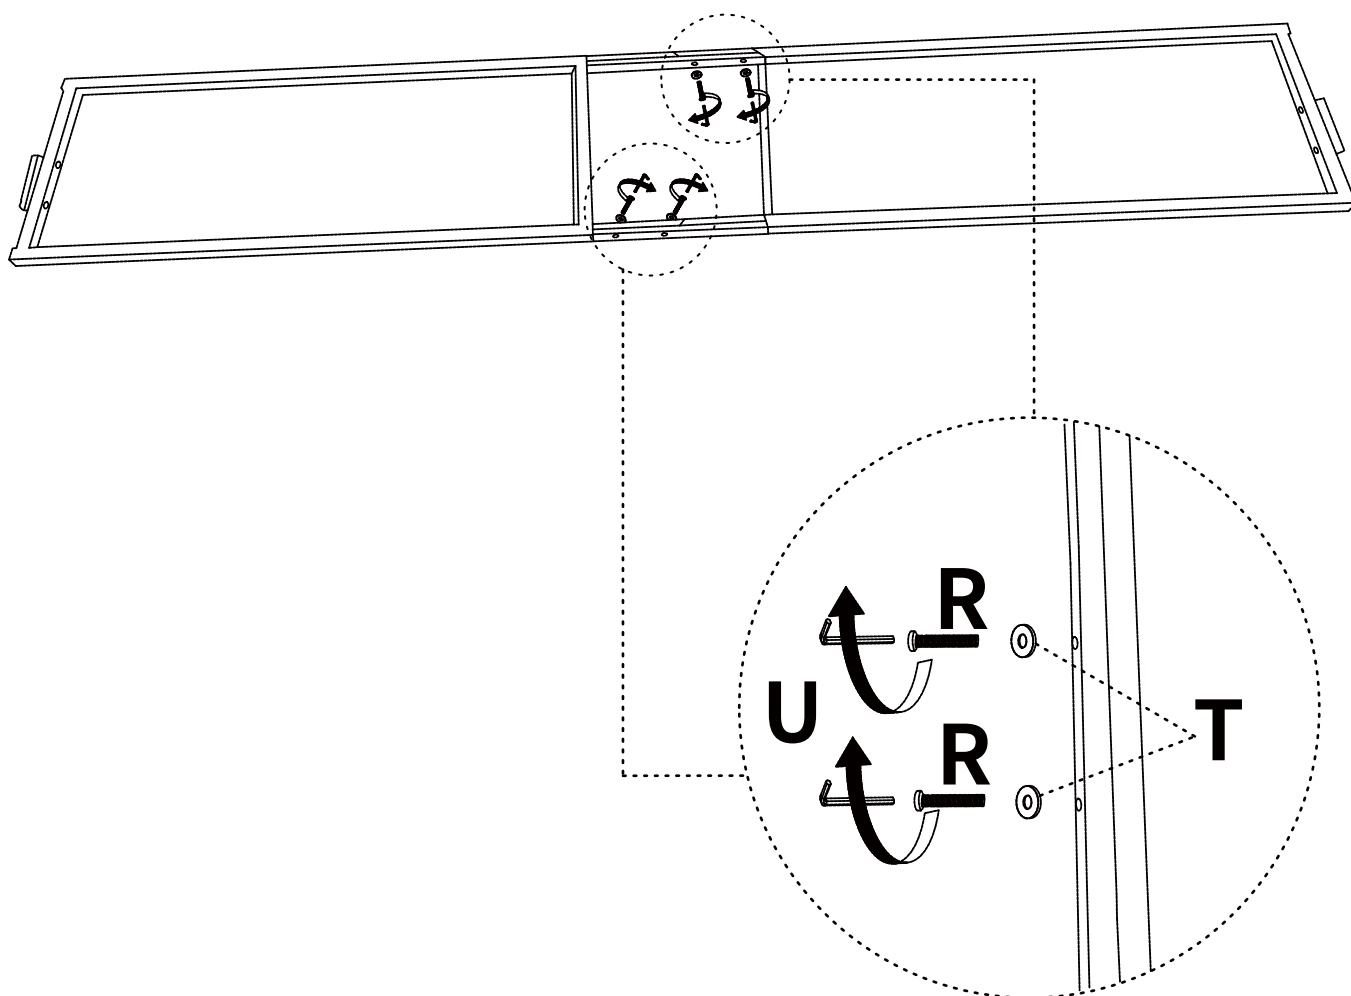


Step 3

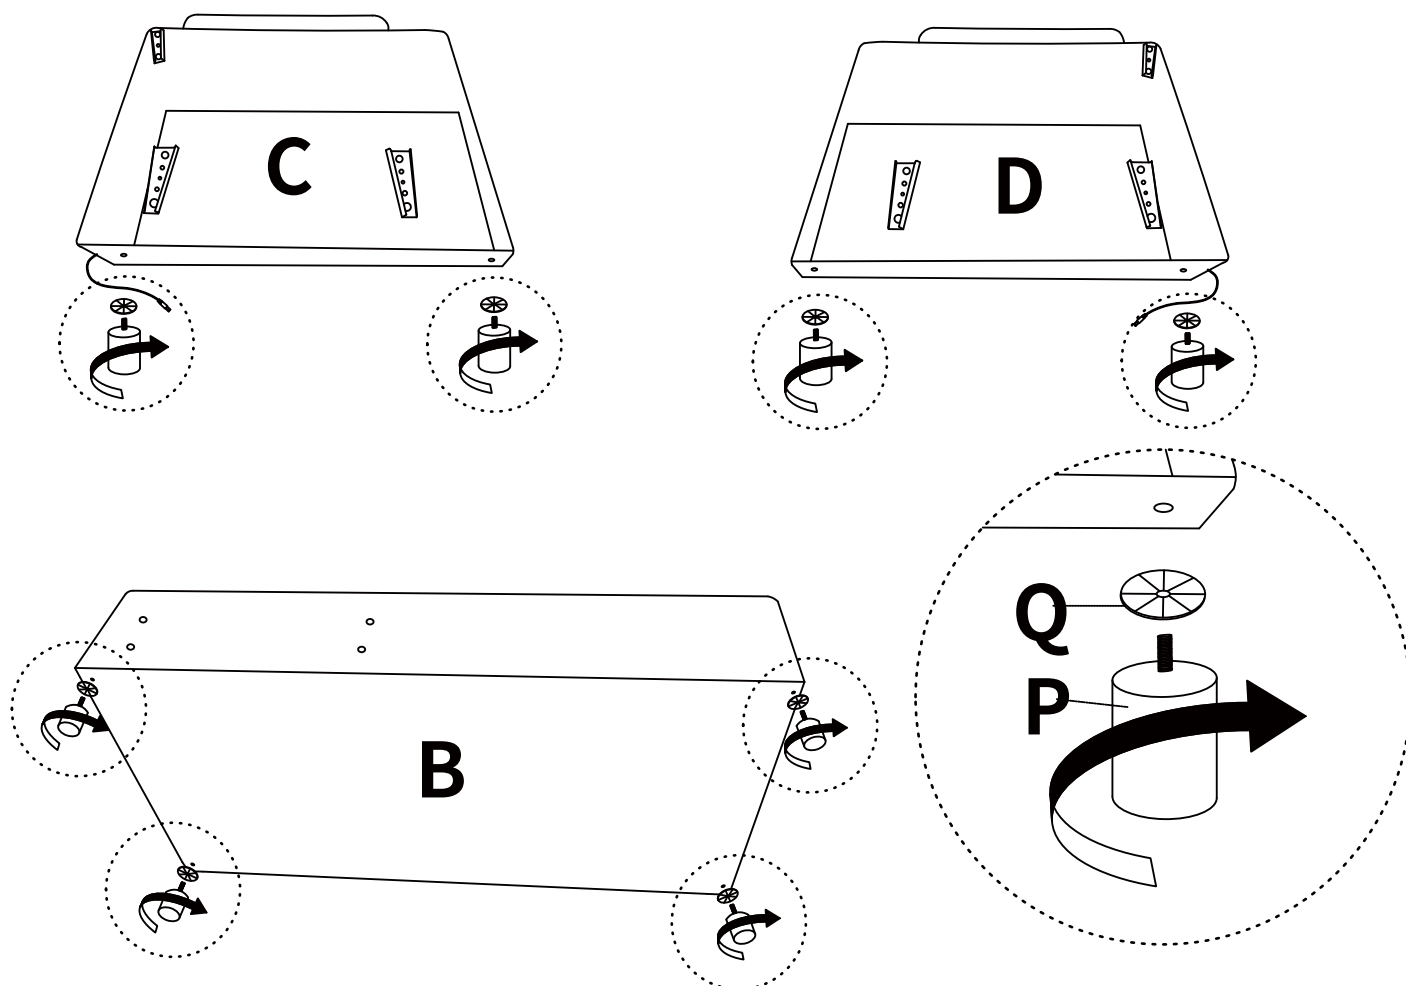


There are two ways to install this sofa, you can install the chaise on the left or right side according to your preference. Please see the following two installation models.


MODEL 1: the chaise is on the right side

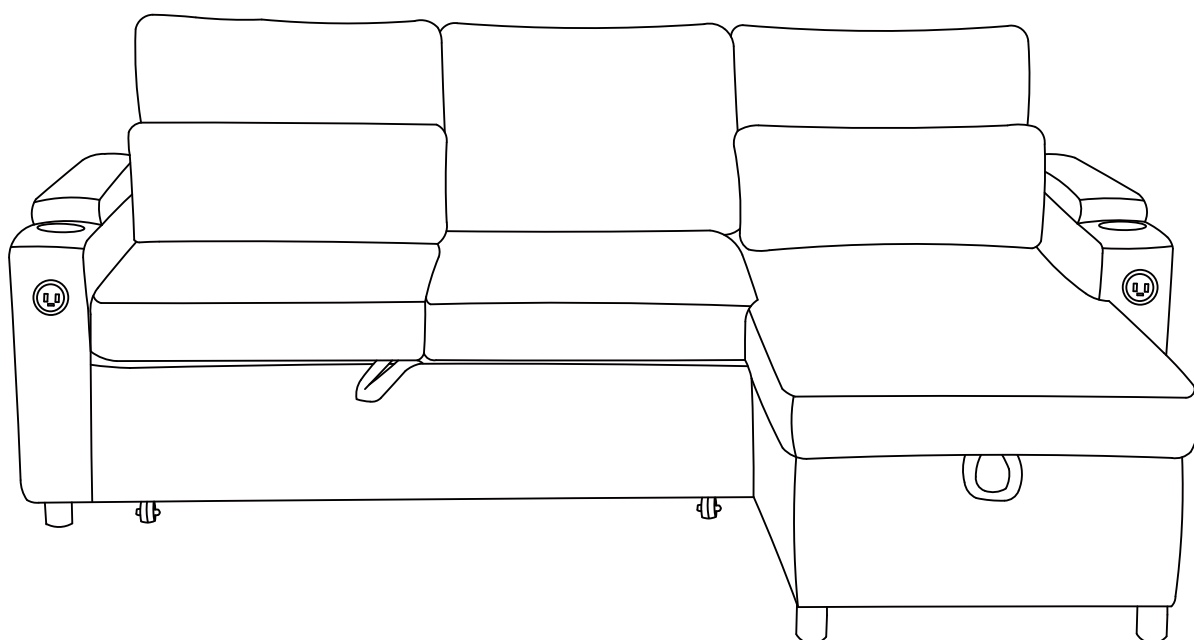


Step 4 Please install two large square metal inserts part N on the left side of the chaise B.

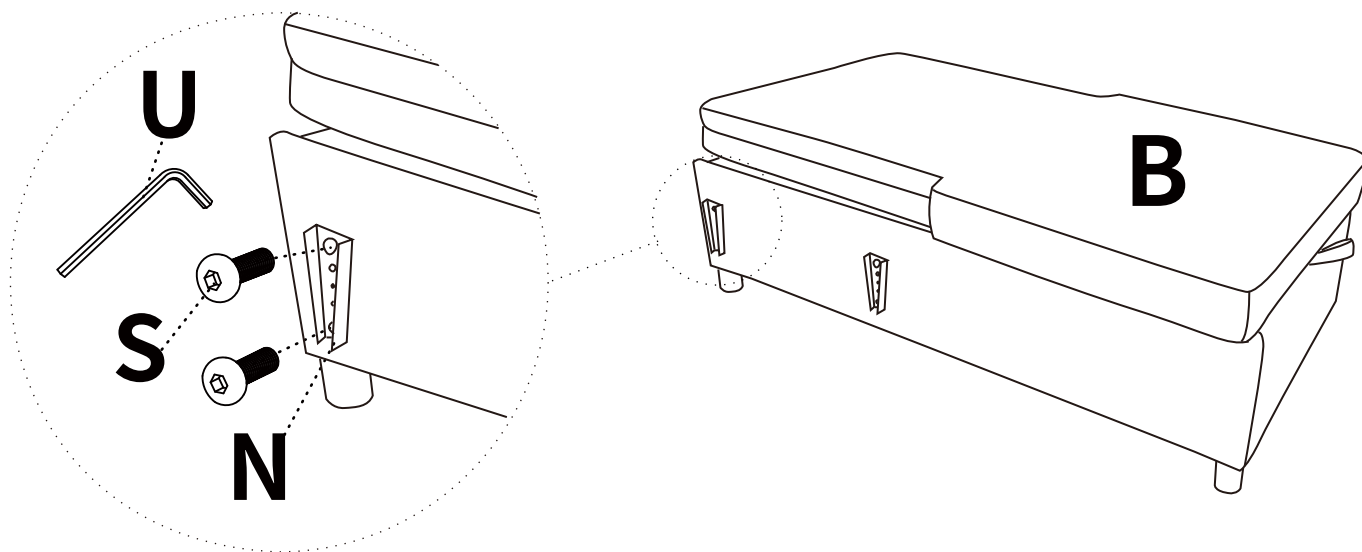


Step 5 Please install two small round metal inserts part O on the right side of the chaise B.

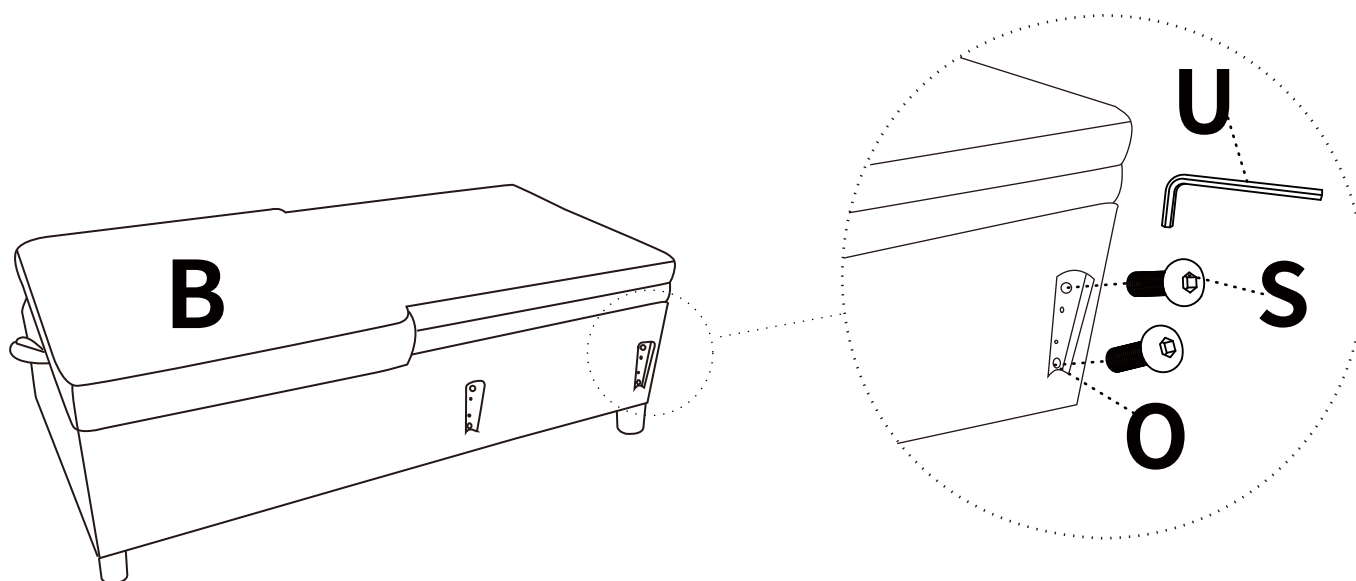


Step 6 Please kindly note that the small round metal insert part O is inserted into the large square metal insert part N. So please lift part A and inserted it into the metal inserts of the armrest D and the chaise B. Then Lift part B and inserted it into the metal insert of the armrest C.

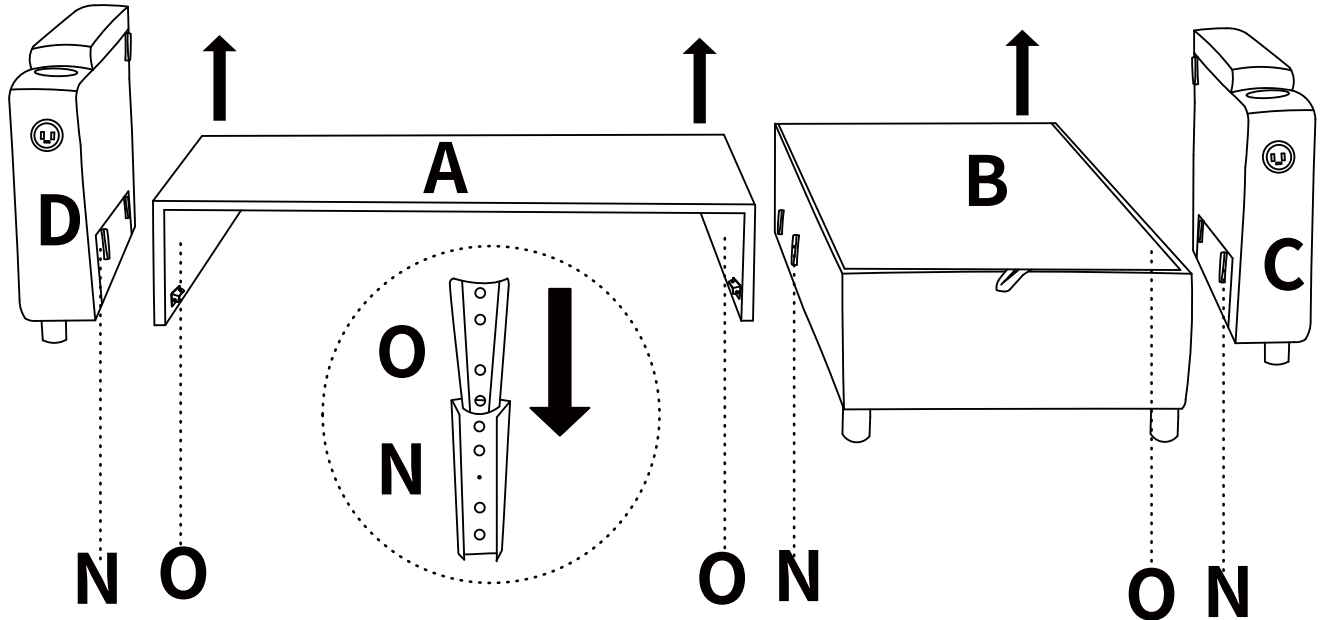


Step 7 When inserting the iron frame I and J into the sofa, it is oriented so that where the metal clasps are located on both sides, the distance below is shorter than the distance above.

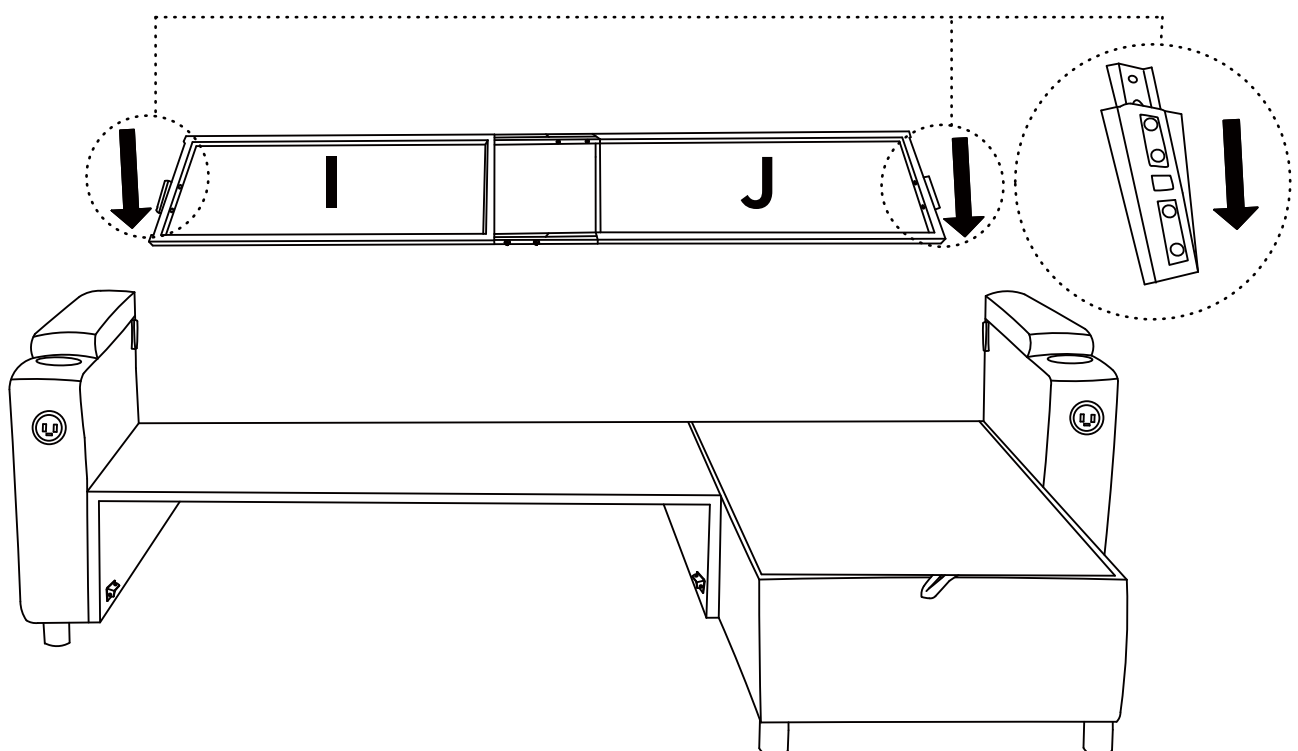


Step 8 After inserting the sofa back cover K, attach the Velcro at the bottom to fix it.

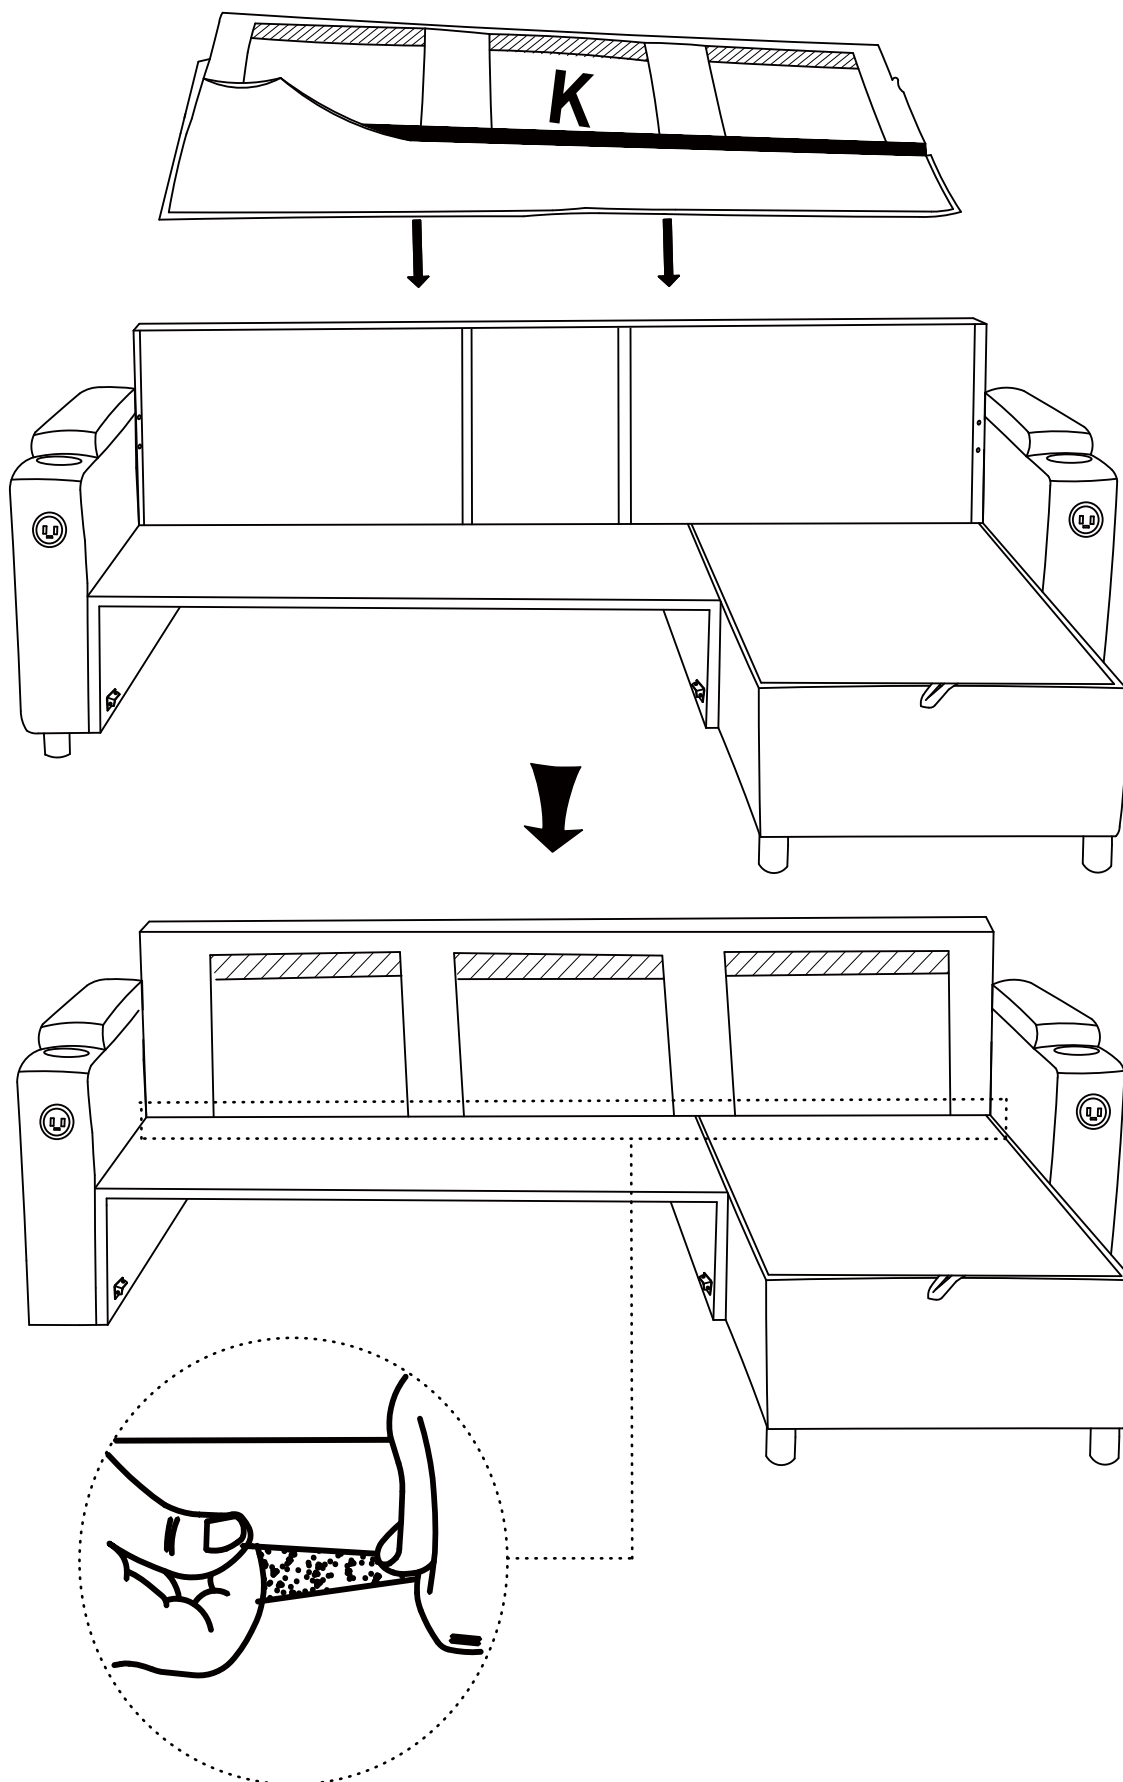


Step 9 Put the screws S into the holes one by one. Please do not lock any one of the 2 screws before they are all aligned. After aligning them all and then tighten them with Allen Key (part U).

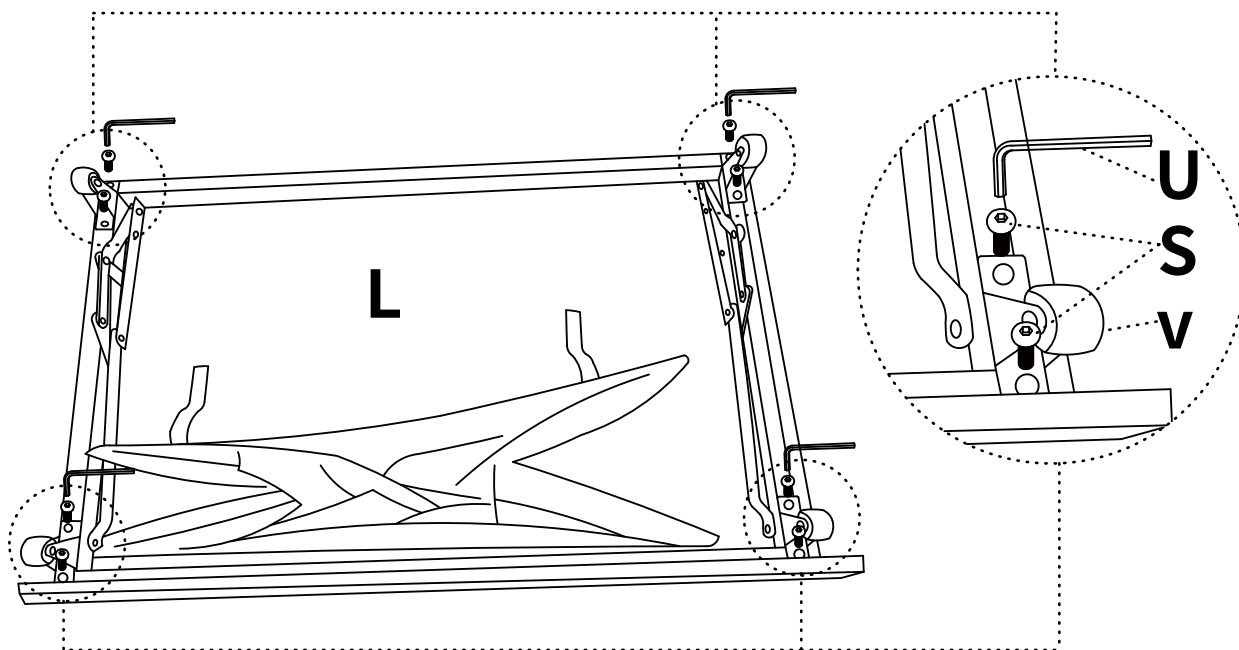

Step 10 Wrapping the Velcro around the iron frame to secure the storage basket.

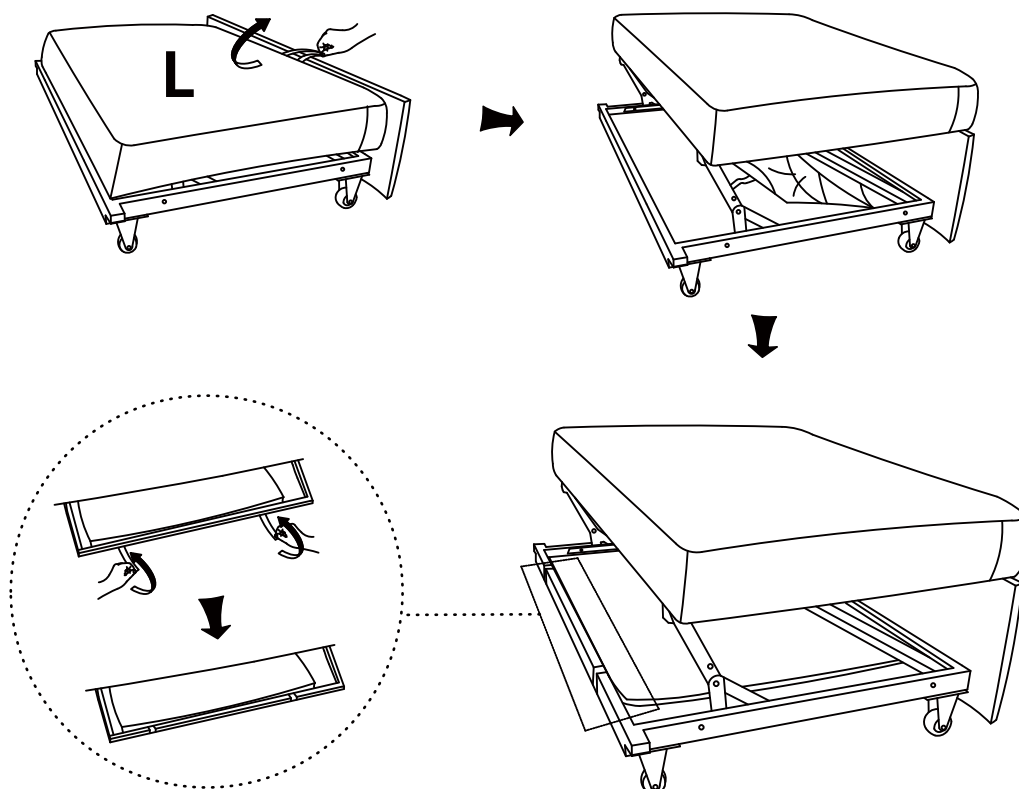


Step 11

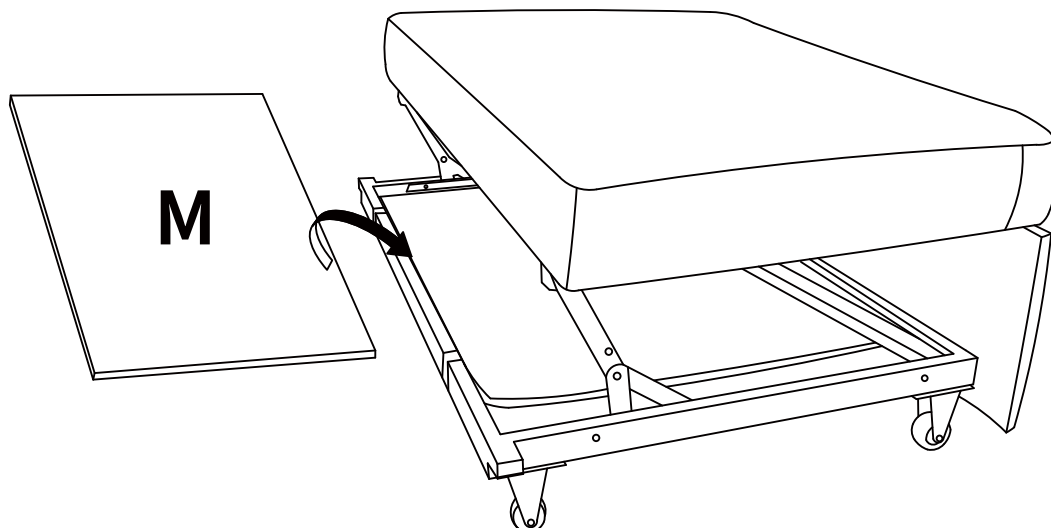


Step 12


Please lift up the footrest L so that the wheels are above the iron frame before sliding into the sofa.

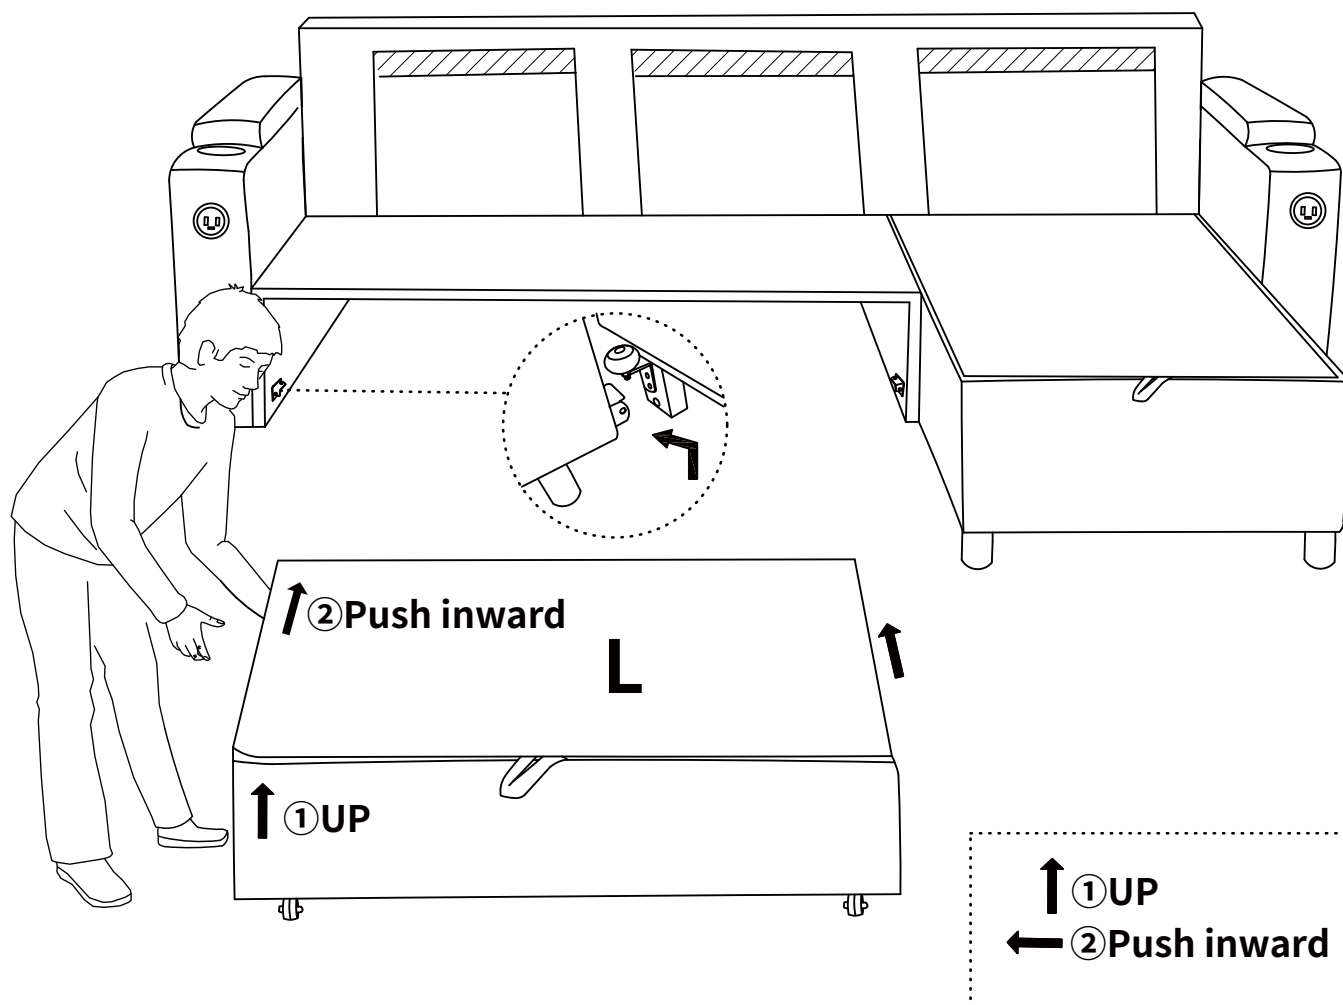


Step 13

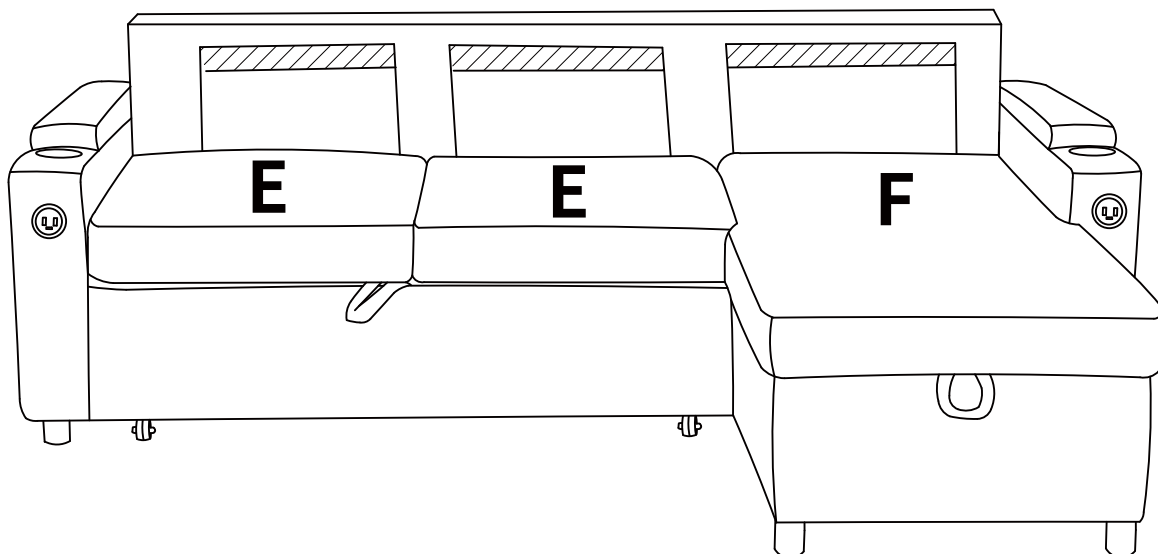


Step 14 When the power cord is plugged in, the light on the USB port will illuminate.

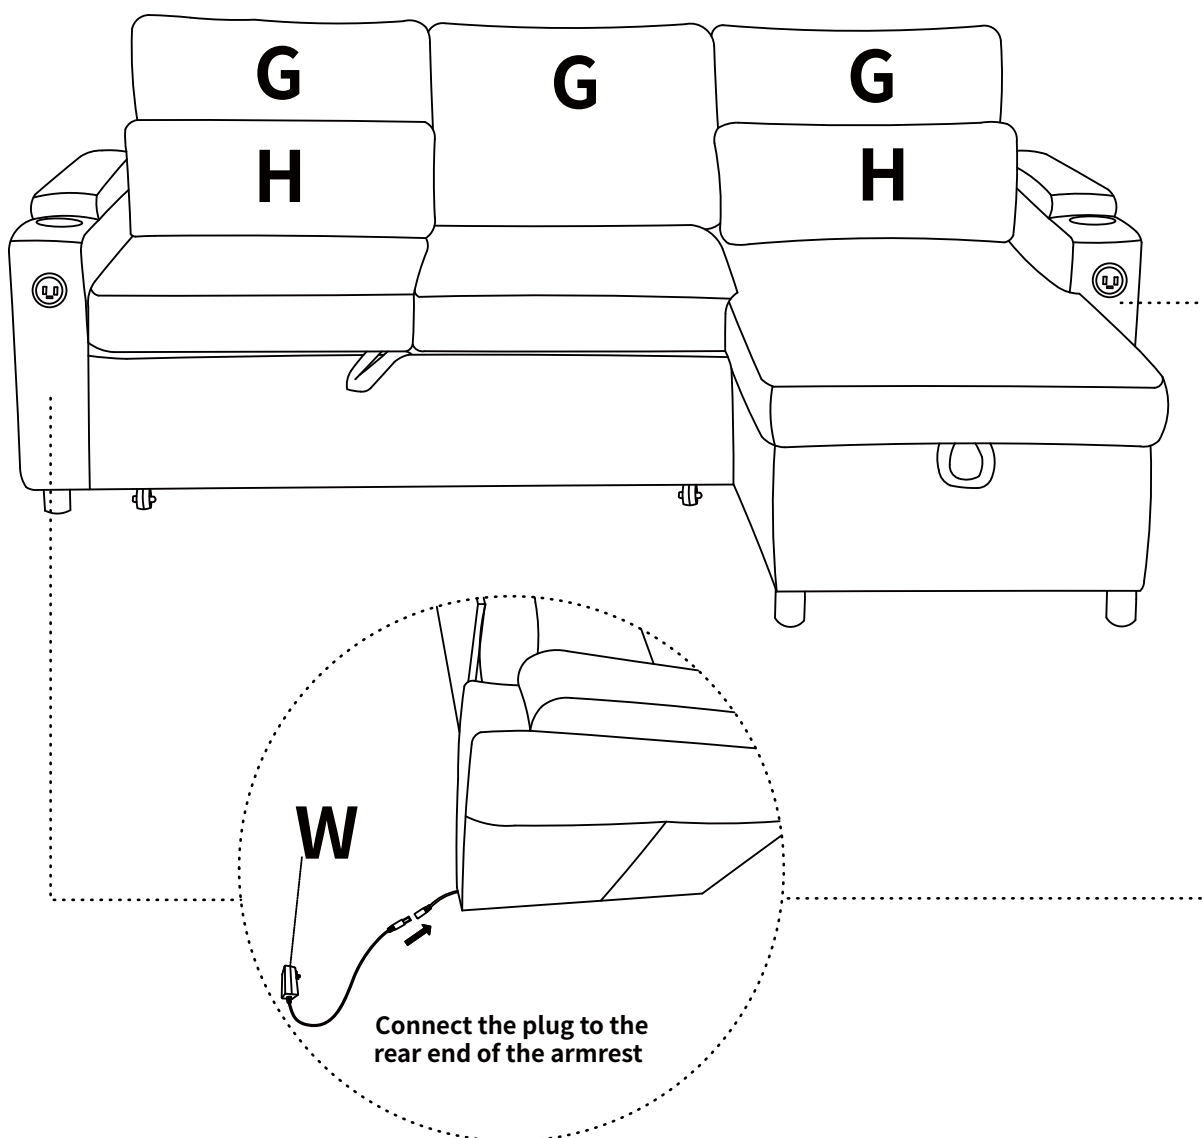


MODEL 2: the chaise is on the left side

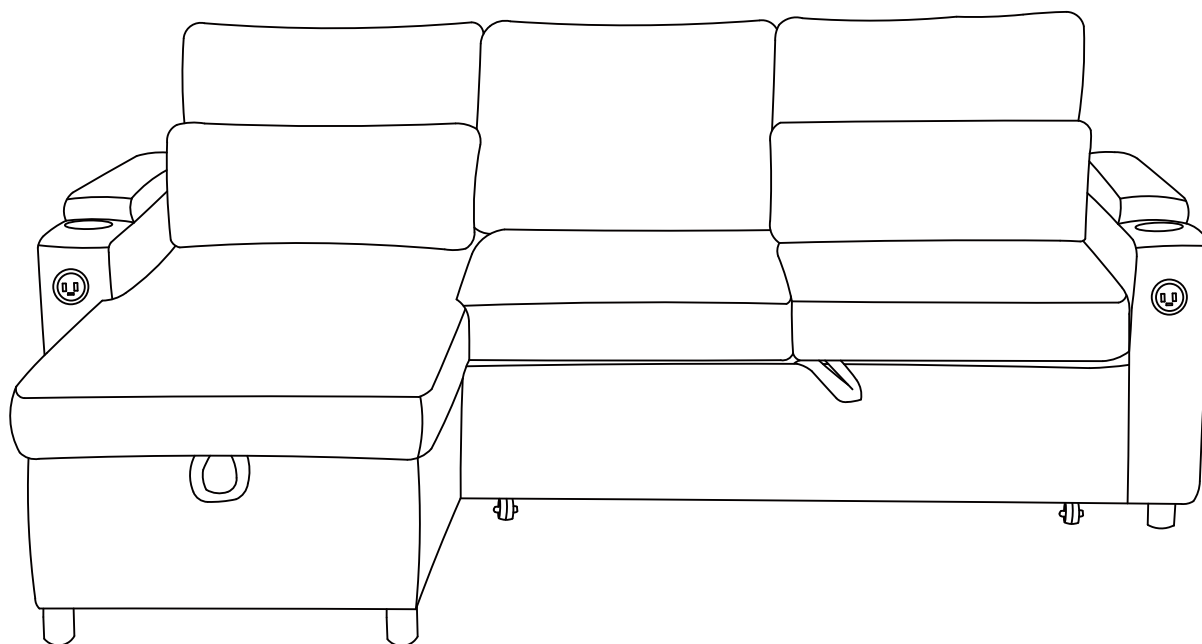


Step 4 Please install two small round metal inserts part O on the left side of the chaise B.

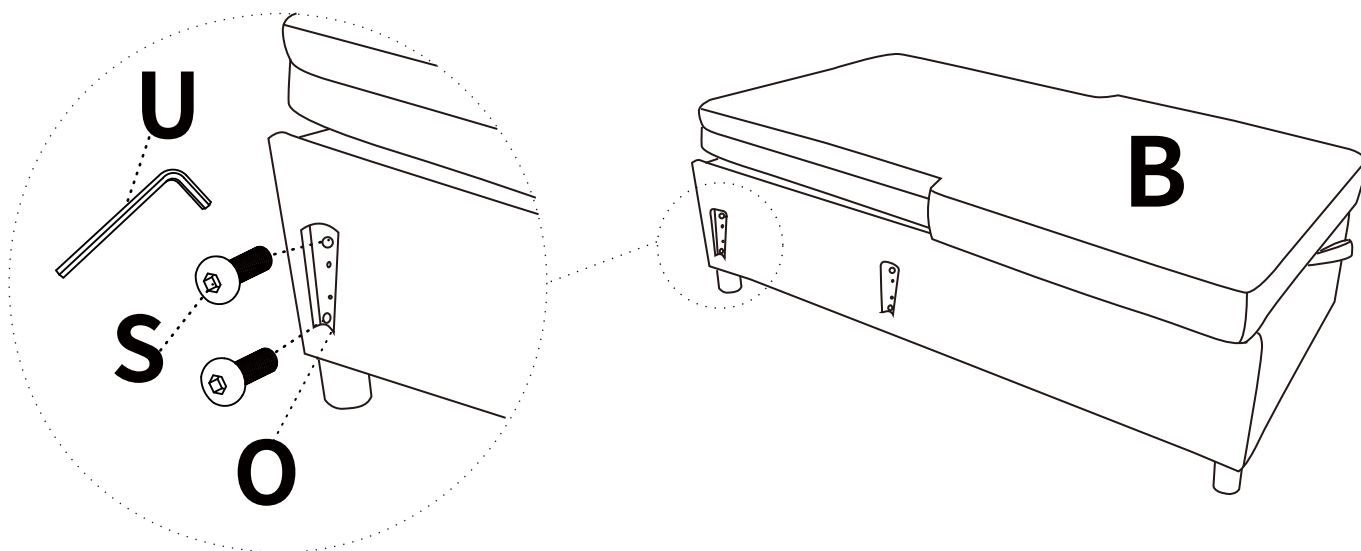


Step 5 Please install two large square metal inserts part N on the right side of the chaise B.

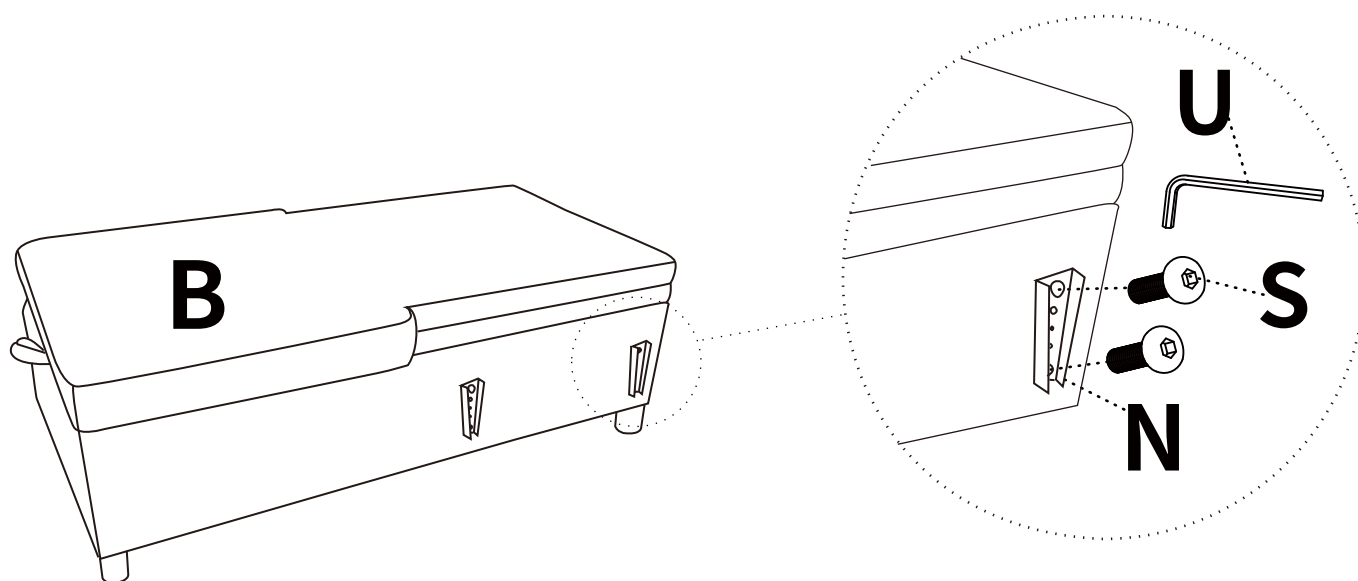


Step 6 Please kindly note that the small round metal insert part O is inserted into the large square metal insert part N. So please lift part A and inserted it into the metal inserts of the armrest C and the chaise B. Then Lift part B and inserted it into the metal insert of the armrest D.

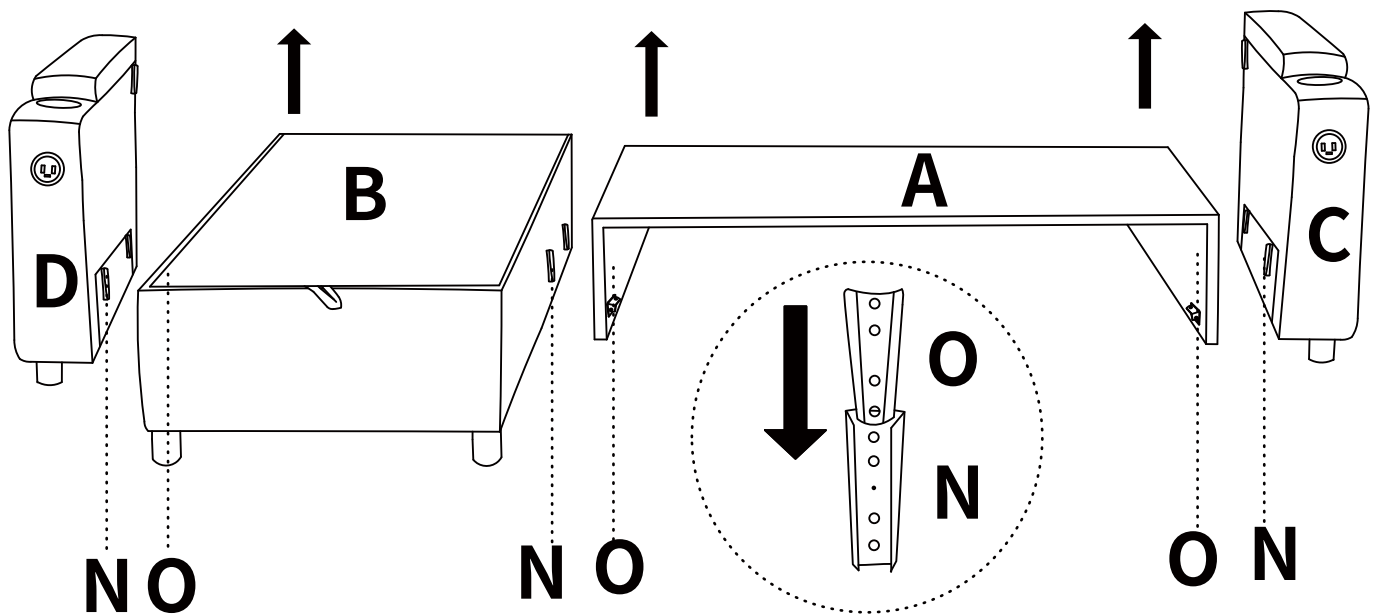


Step 7 When inserting the iron frame I and J into the sofa, it is oriented so that where the metal clasps are located on both sides, the distance below is shorter than the distance above.

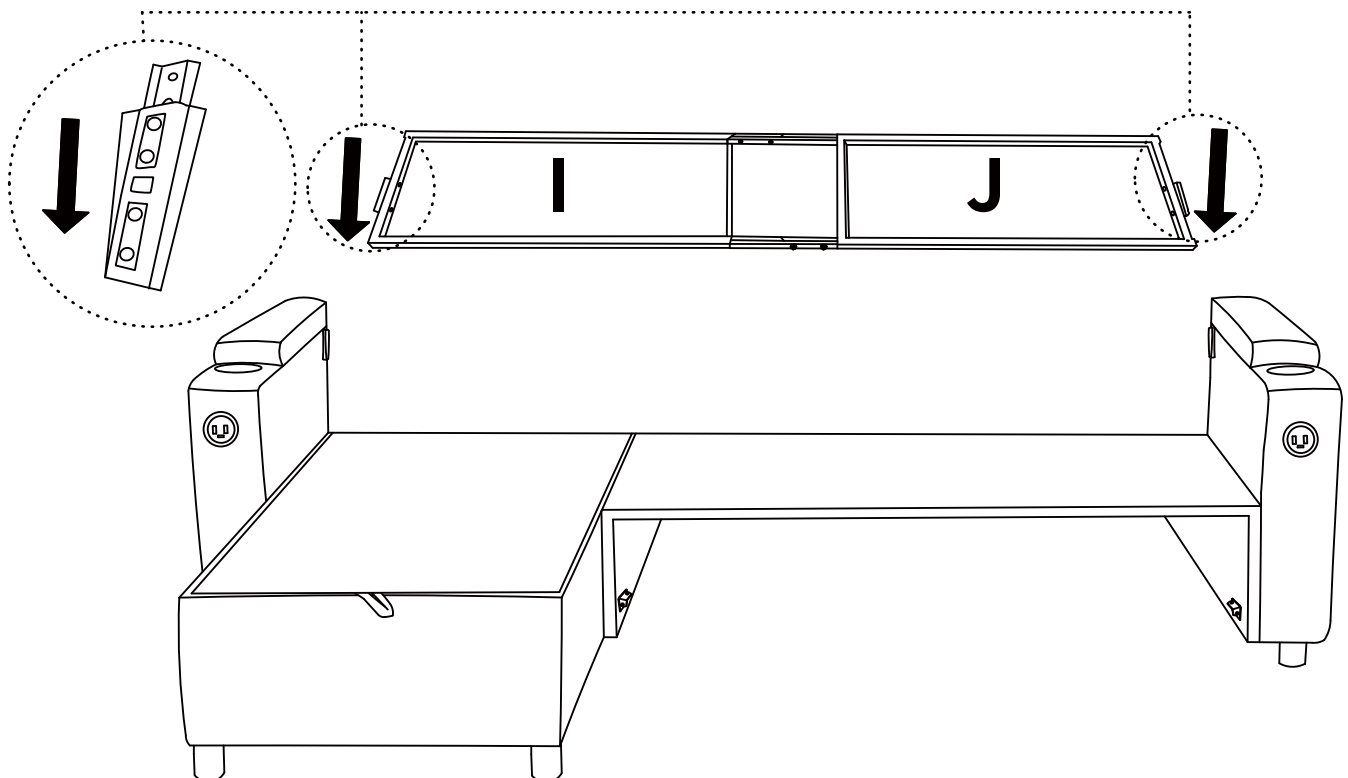


Step 8 After inserting the sofa back cover K, attach the Velcro at the bottom to fix it.

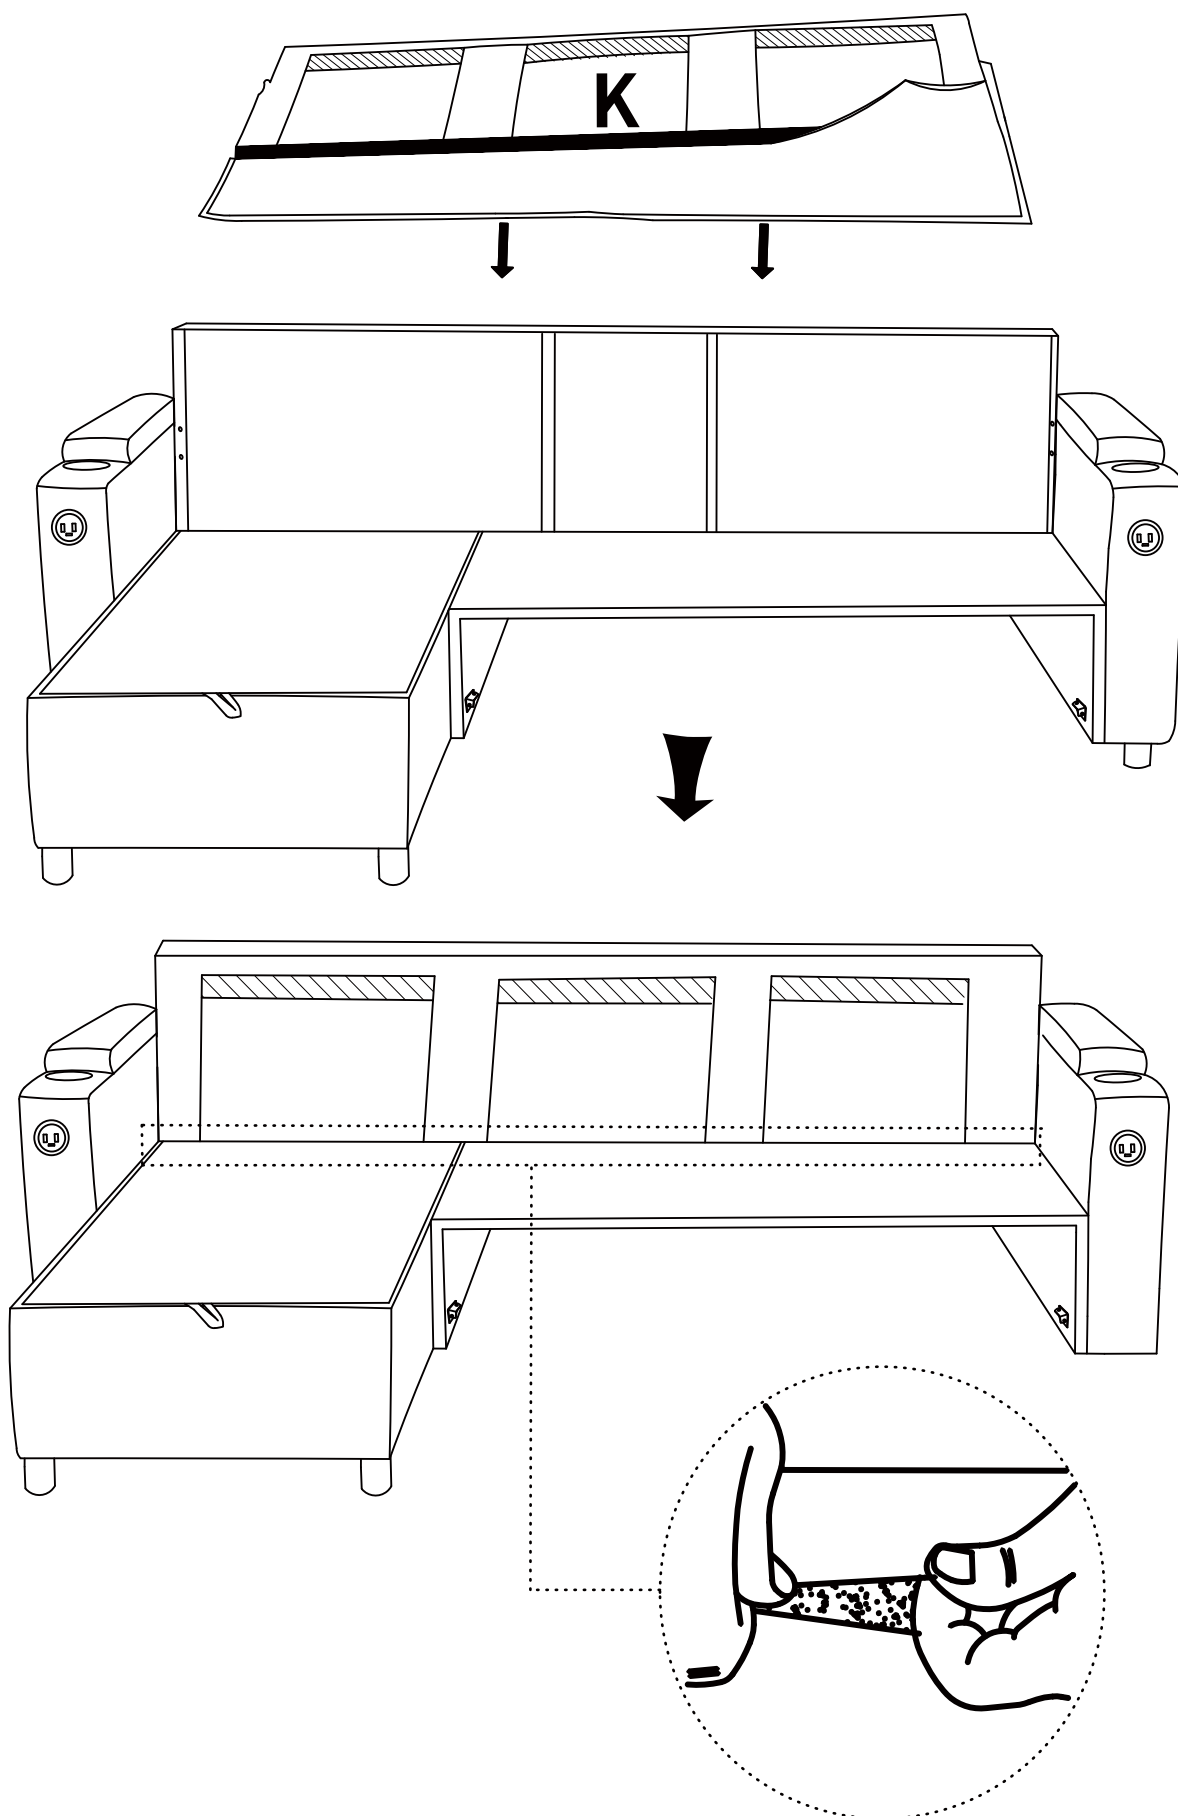


Step 9 Put the screws S into the holes one by one. Please do not lock any one of the 2 screws before they are all aligned. After aligning them all and then tighten them with Allen Key (part U).

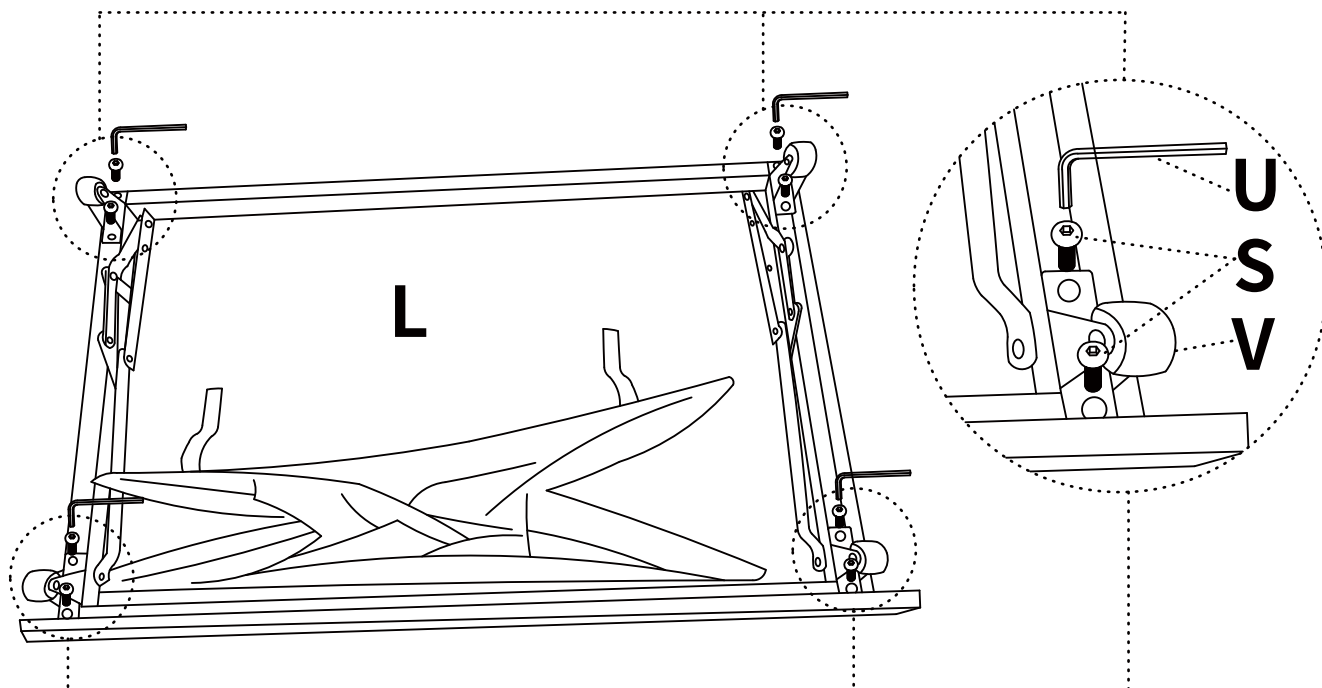

Step 10 Wrapping the Velcro around the iron frame to secure the storage basket.


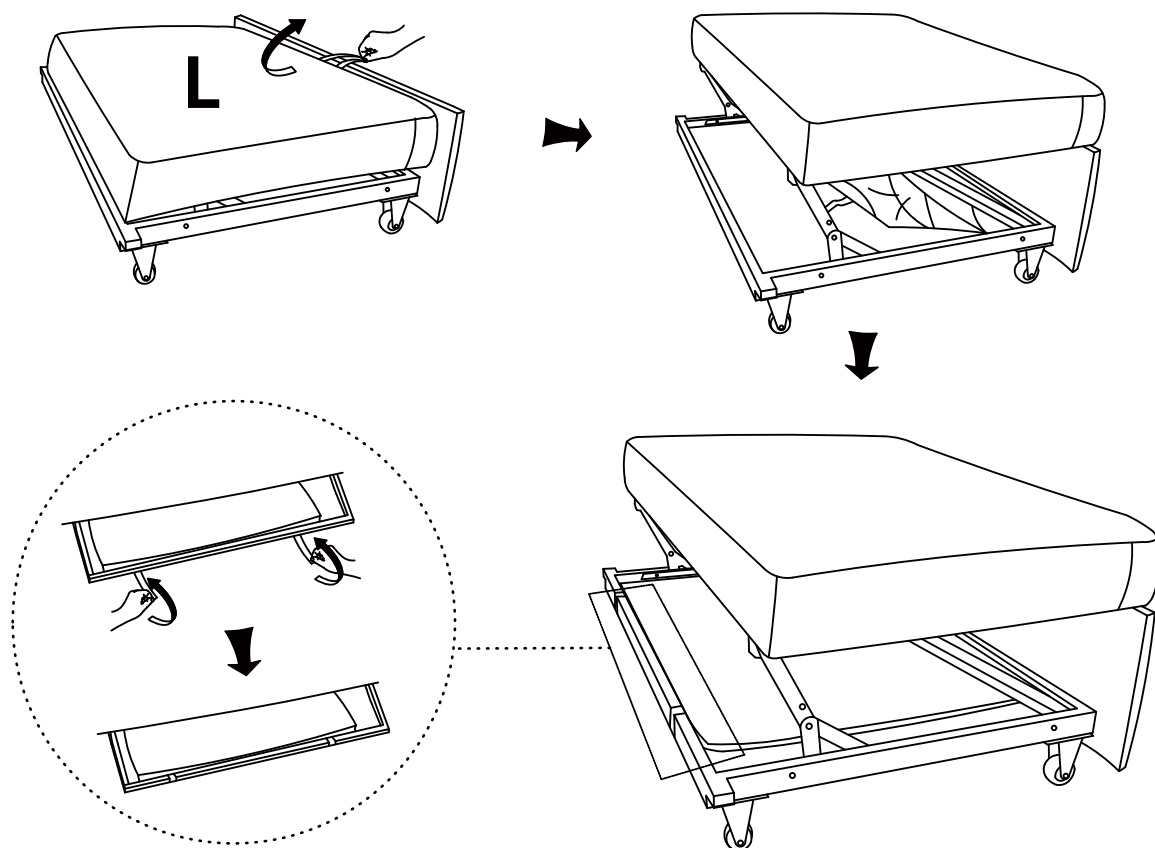


Step 11

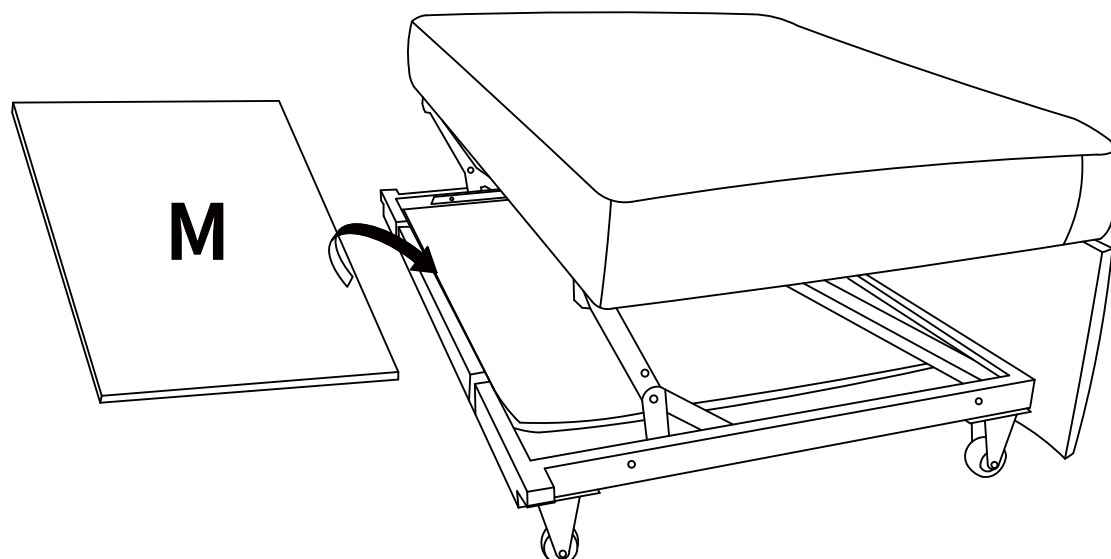


Step 12

Please lift up the footrest L so that the wheels are above the iron frame before sliding into the sofa.

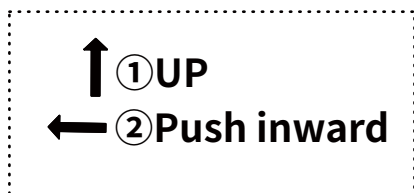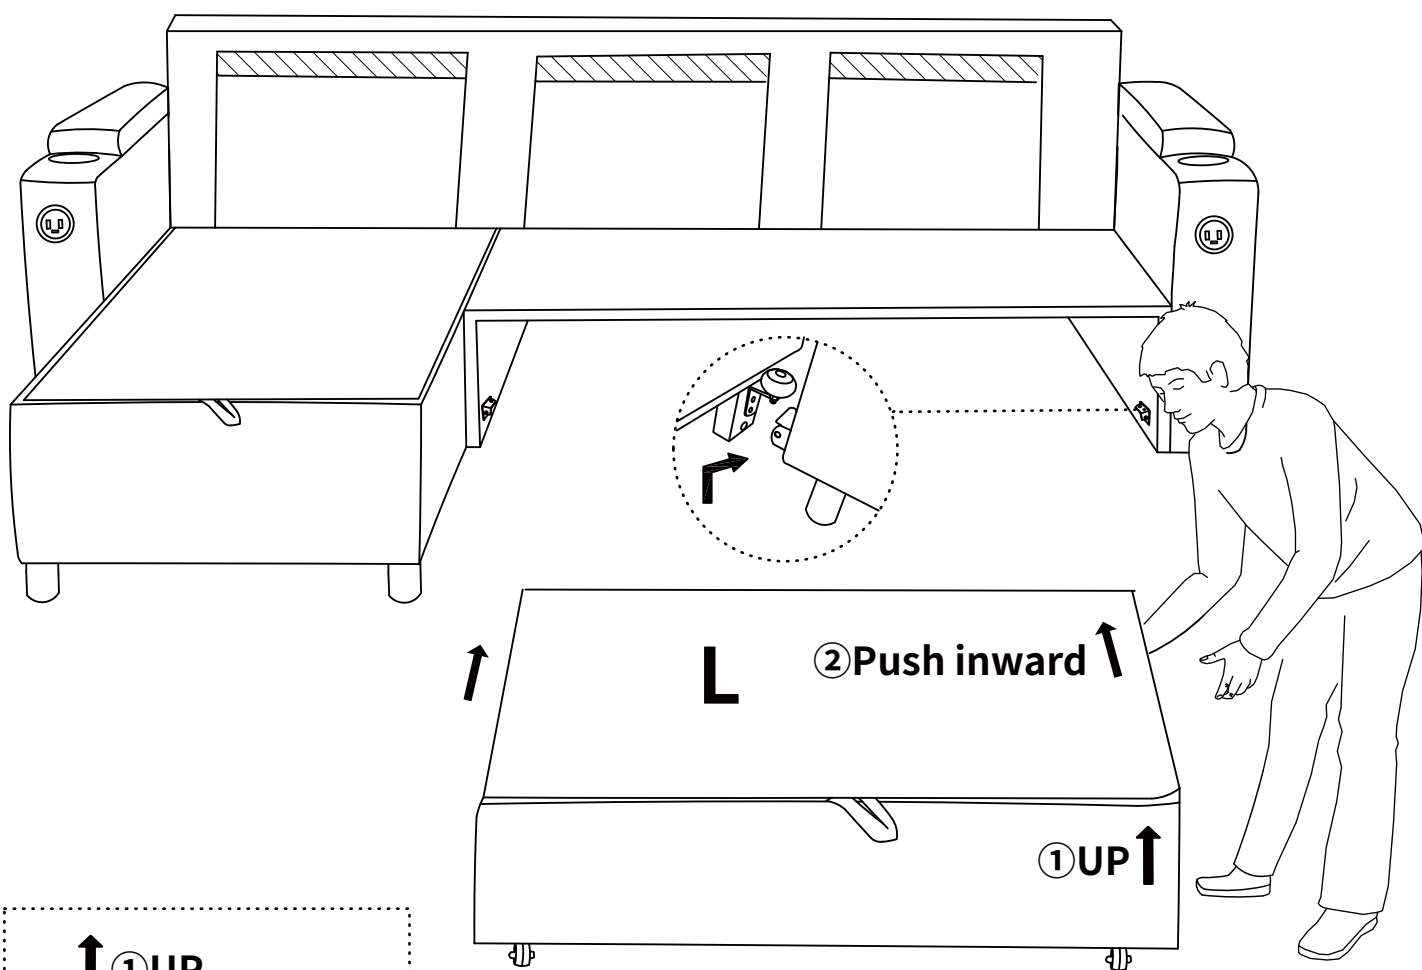


Step 13

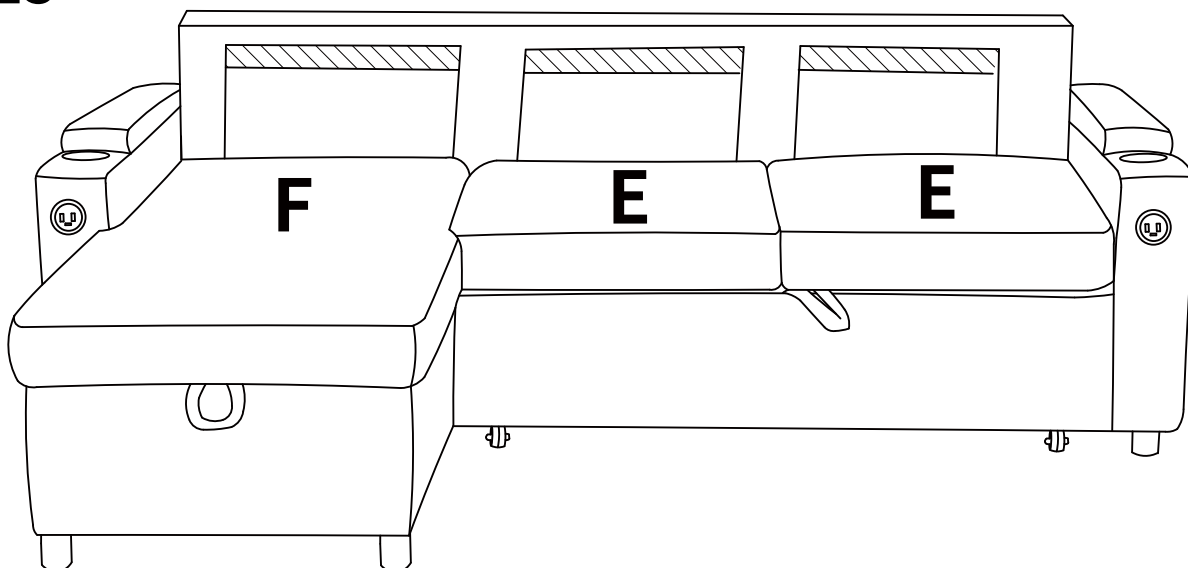



Step 14

When the power cord is plugged in, the light on the USB port will illuminate.


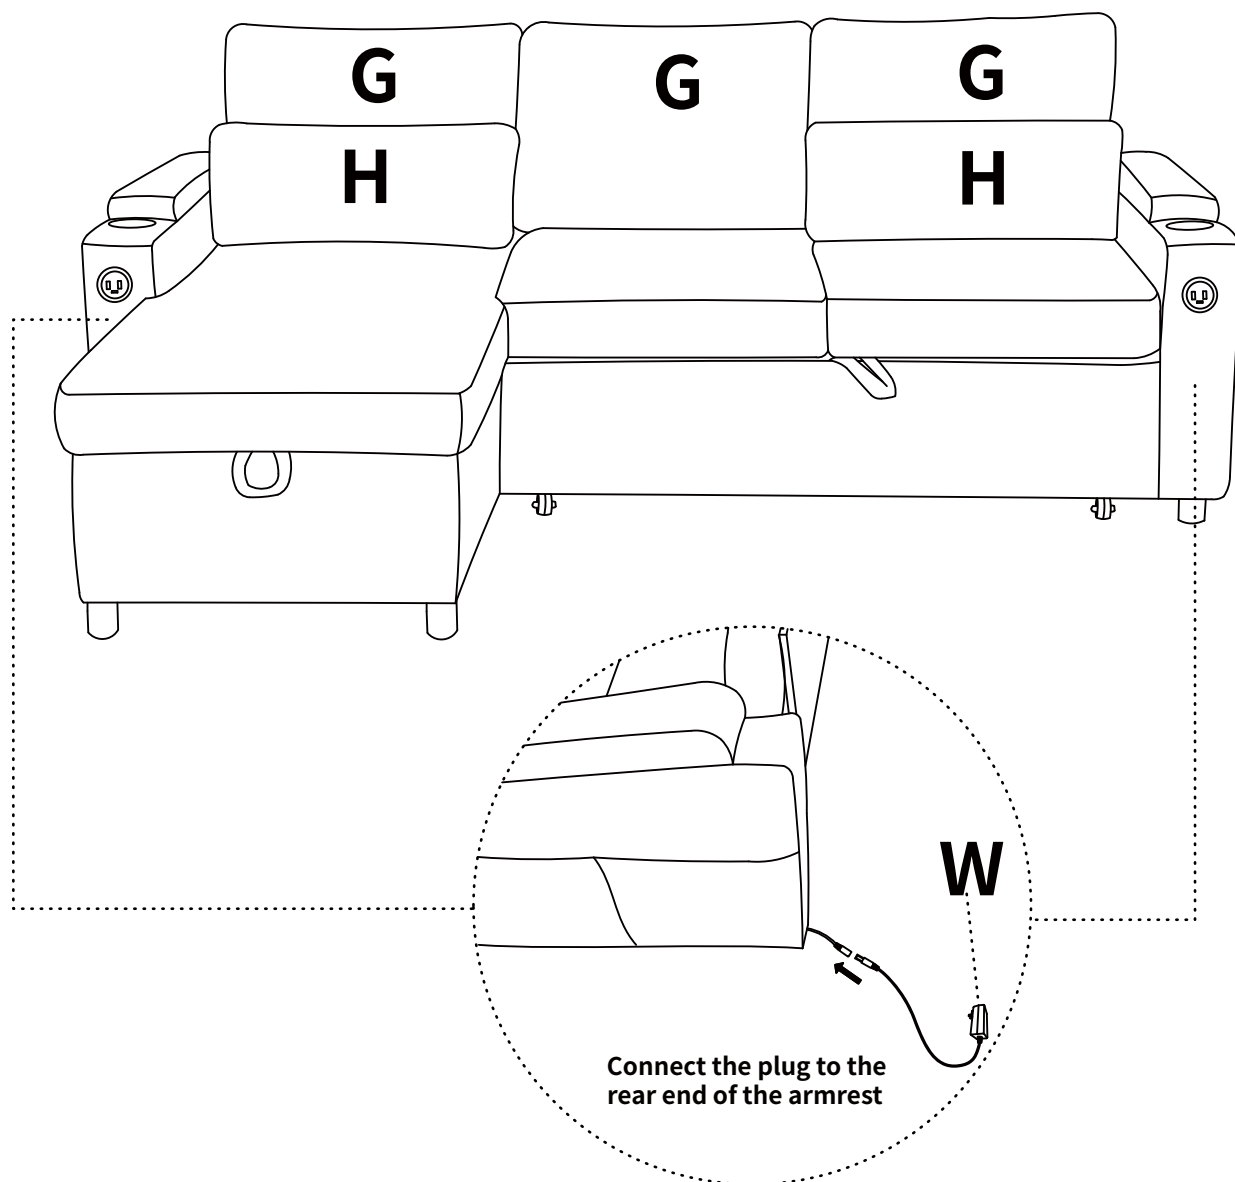


How To Replace USB?


Step 1

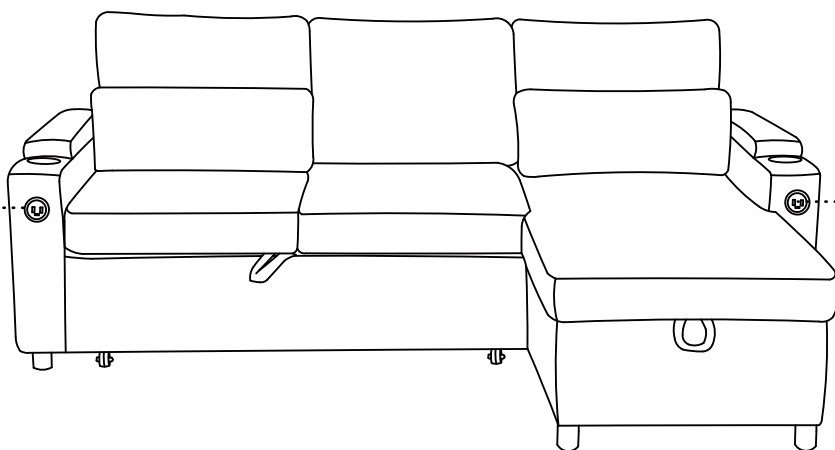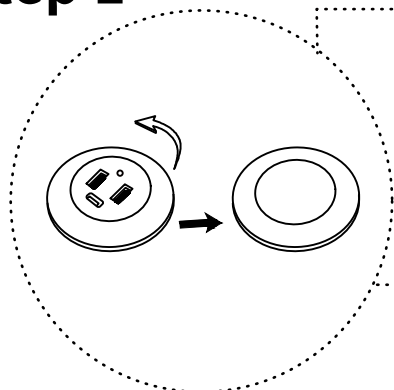



Step 2

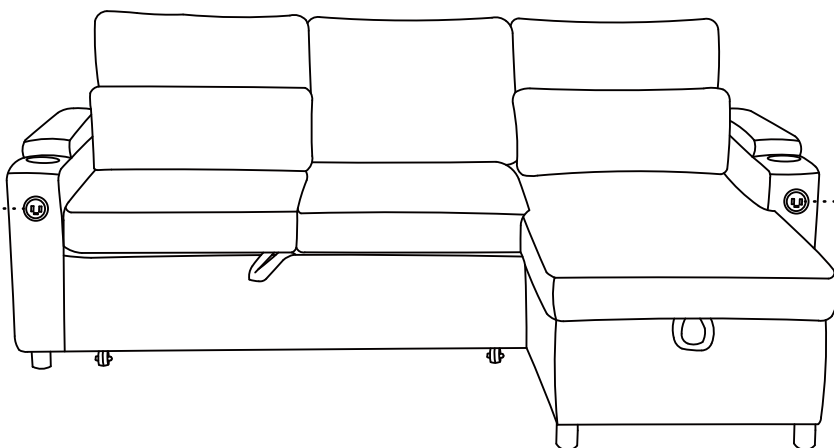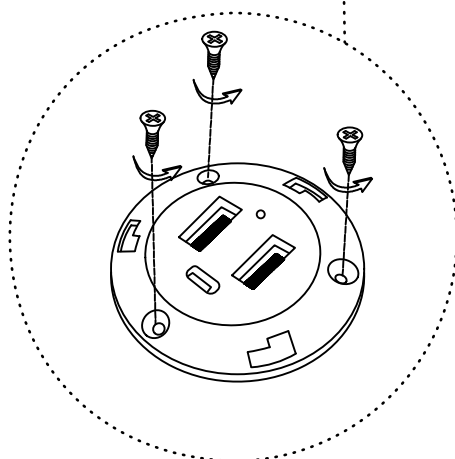



Step 3

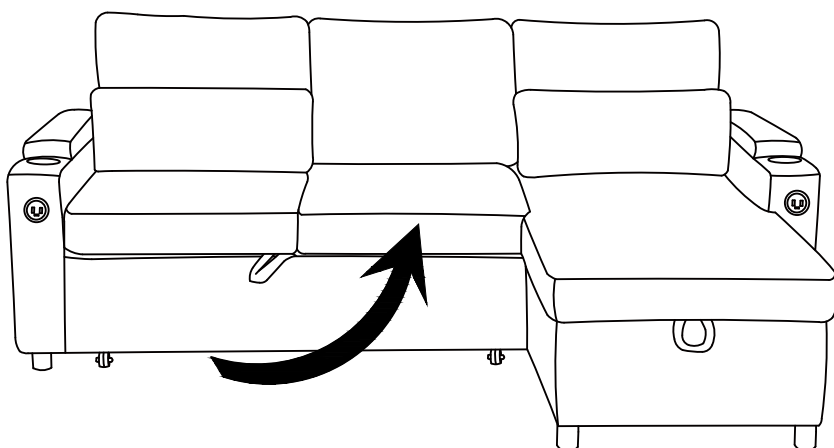


Step 4

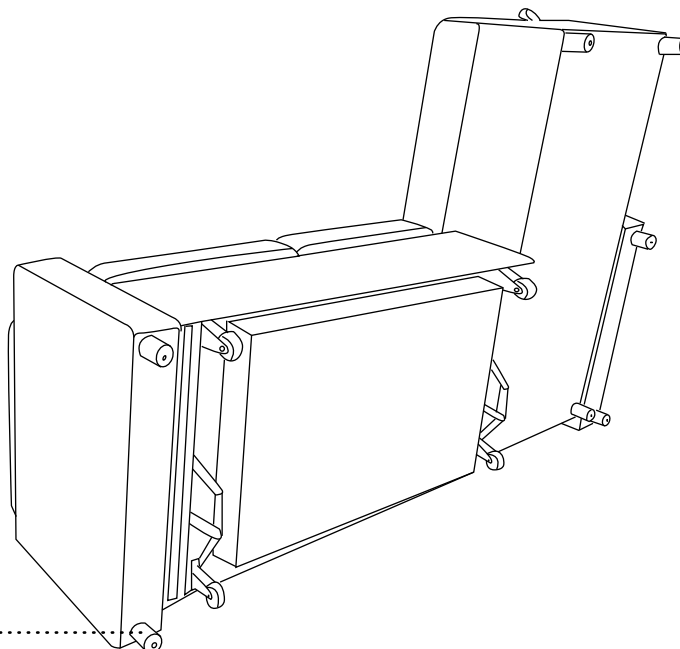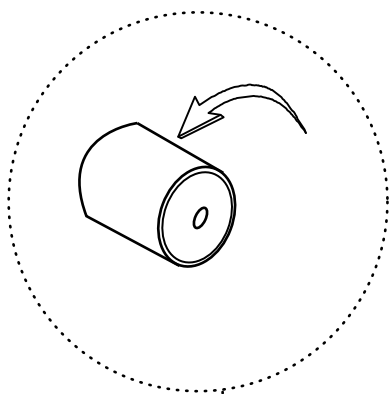


Step 5

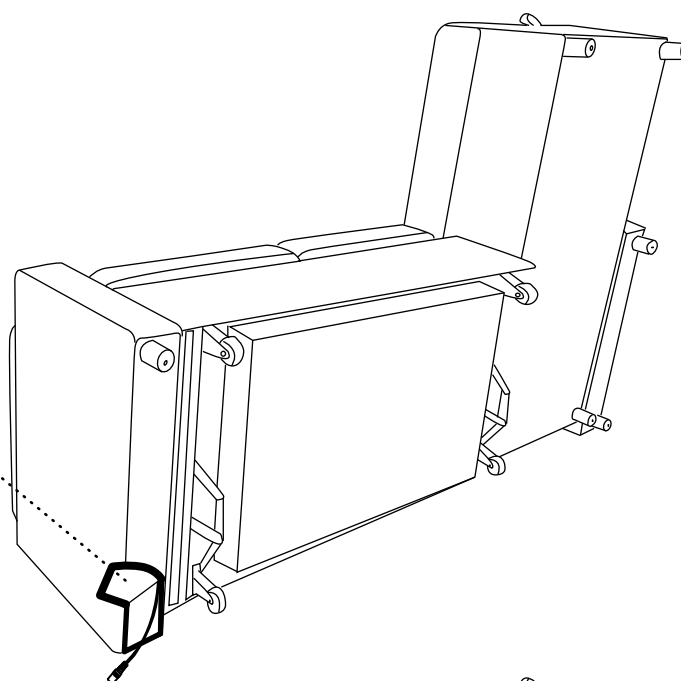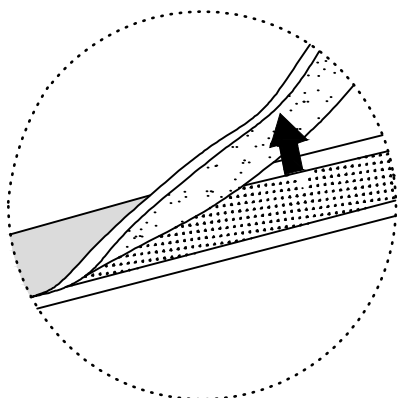


Step 6

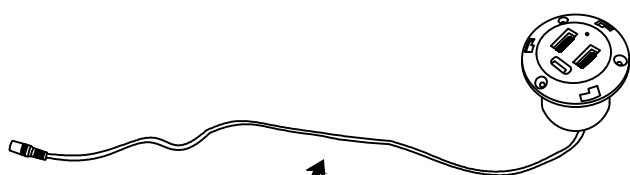


Pull up the bad USB

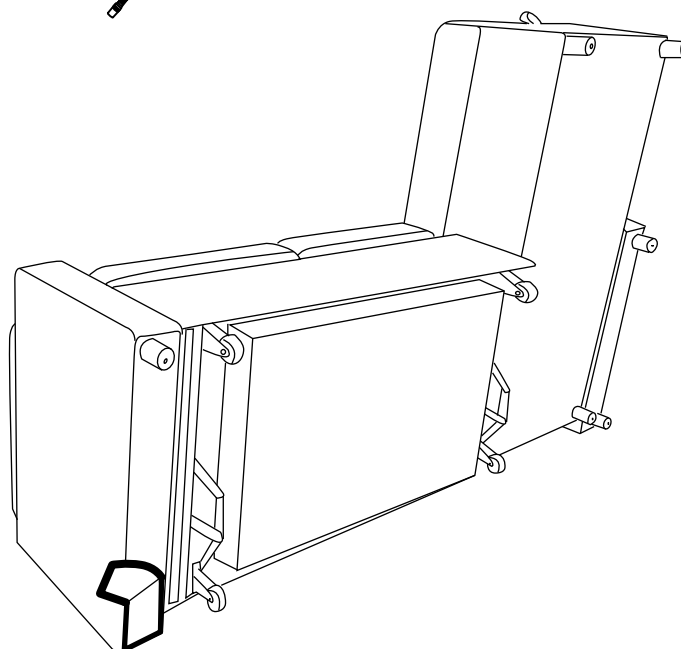


Step 7 Pull in the new USB and tighten the screws

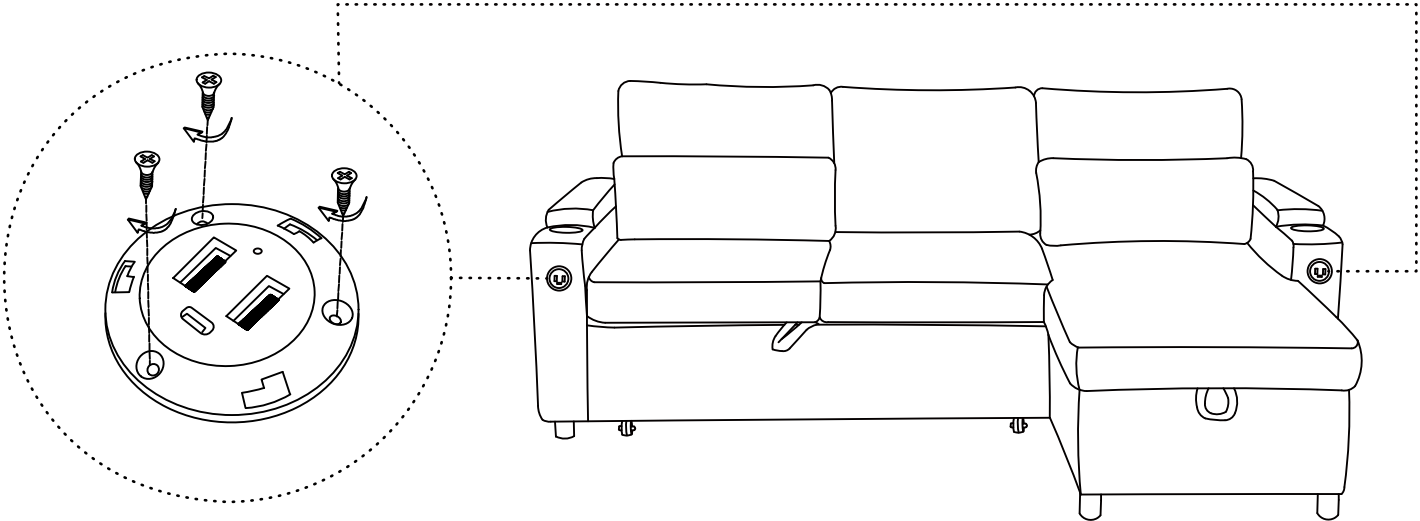

Step 8

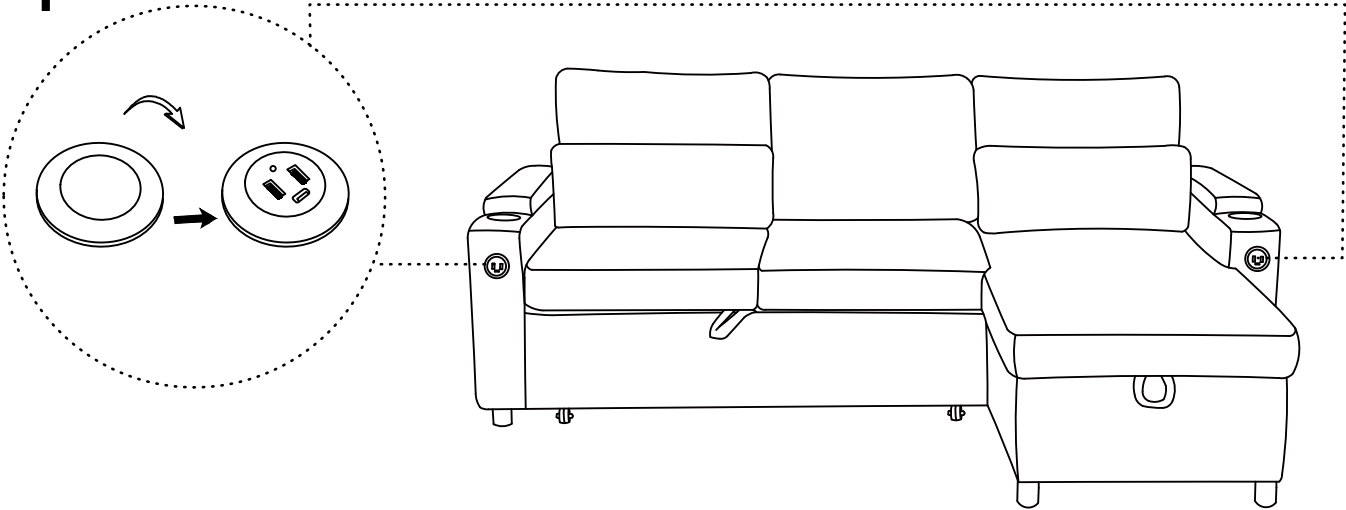

Step 9 Find the USB cable and pull it out

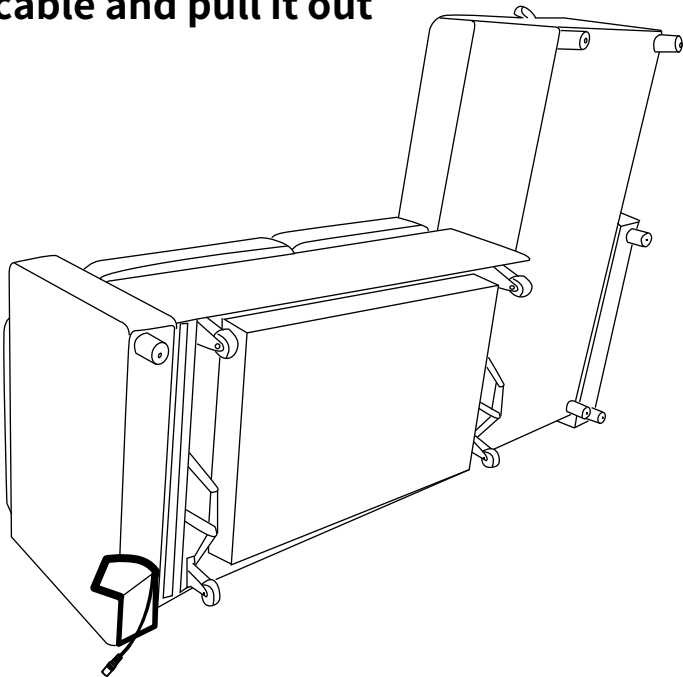

Step 10 Final installation of sofa foot

