




### STEP 13 Insert the two drawers to the unit.

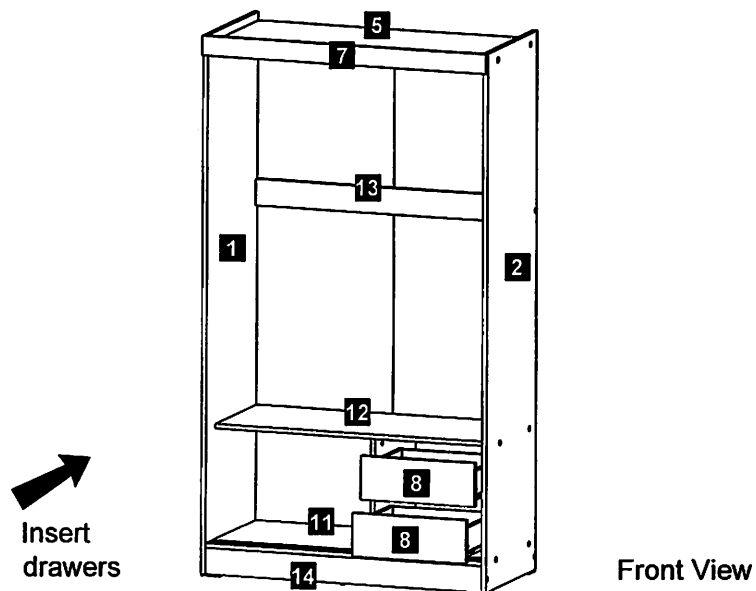


### STEP 14 Attach the Sliding Roller (V5) at panel no. 3 & 4 with Screw m3.5 x 14mm (A2).

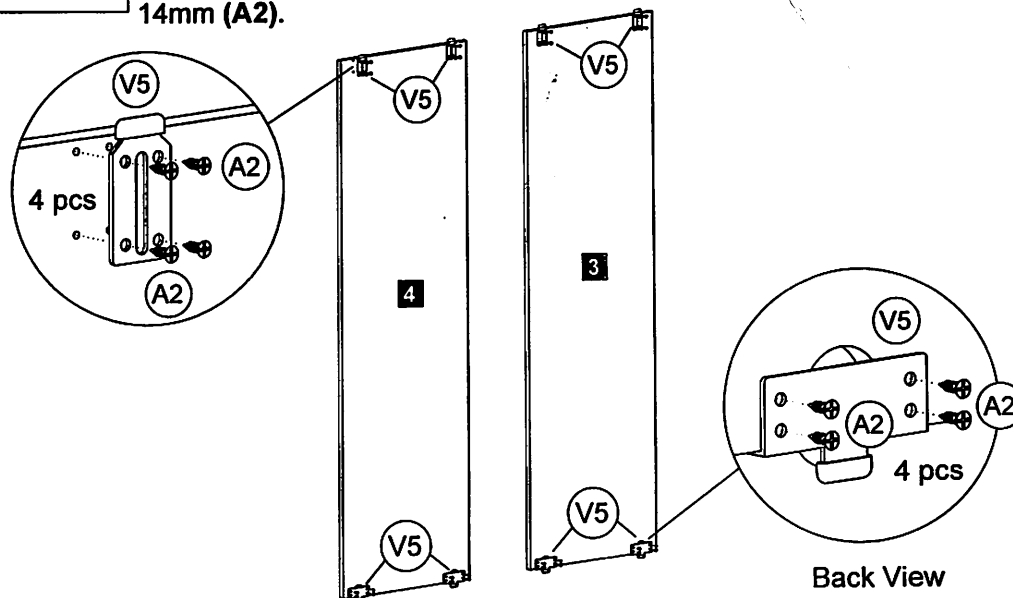


### STEP 15 Attach the Sliding Roller (V5) towards the Plastic Sliding Rail 970mm (V9). Insert the Sliding Door no. 3 & 4 inside the wardrobe as shown below.

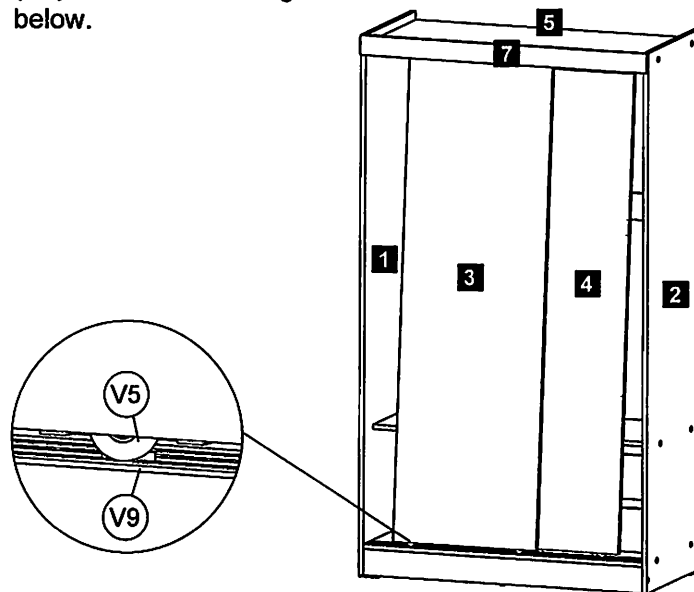


### COMPLETE

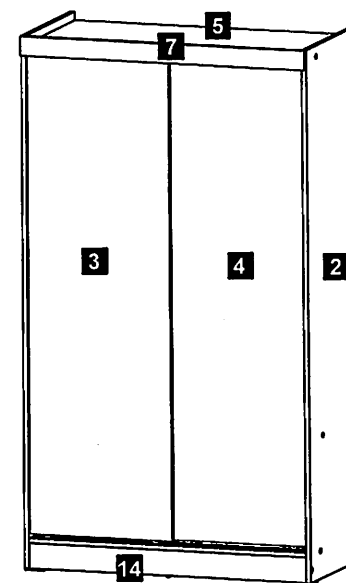


**STEP 9** Use Allen Key (N1) to tighten the Crosshead Screw 6.3 x 40mm (A17) & button the screw head by using Crosshead Cover (Y).

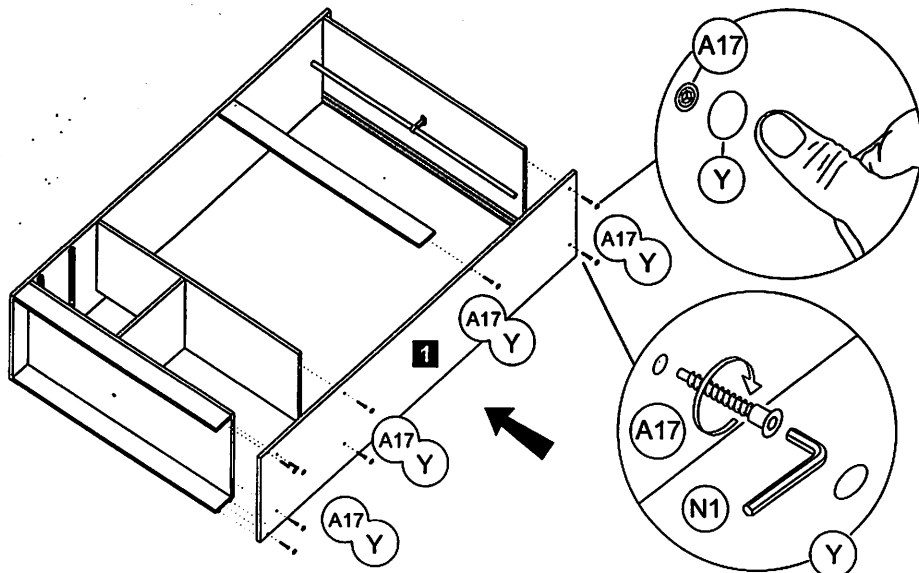


**STEP 10** Use Screw (A2) to assemble the Plastic Leg L Shape (L2) at between panel no. 14 & side panels. Attach the Leg Pin (L1) at bottom of panel no. 14.

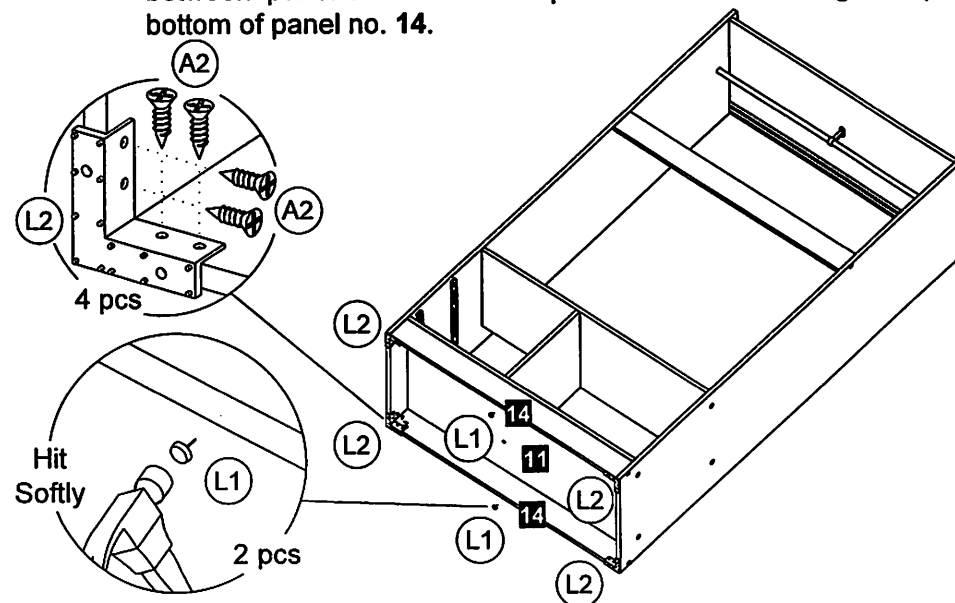


**STEP 11** Assemble the panel no. 7 by using Mini Fix 15mm (F2) & L Bracket (R1). Use Screw m3.5 x 14mm (A2) to attach the L Bracket (R1).

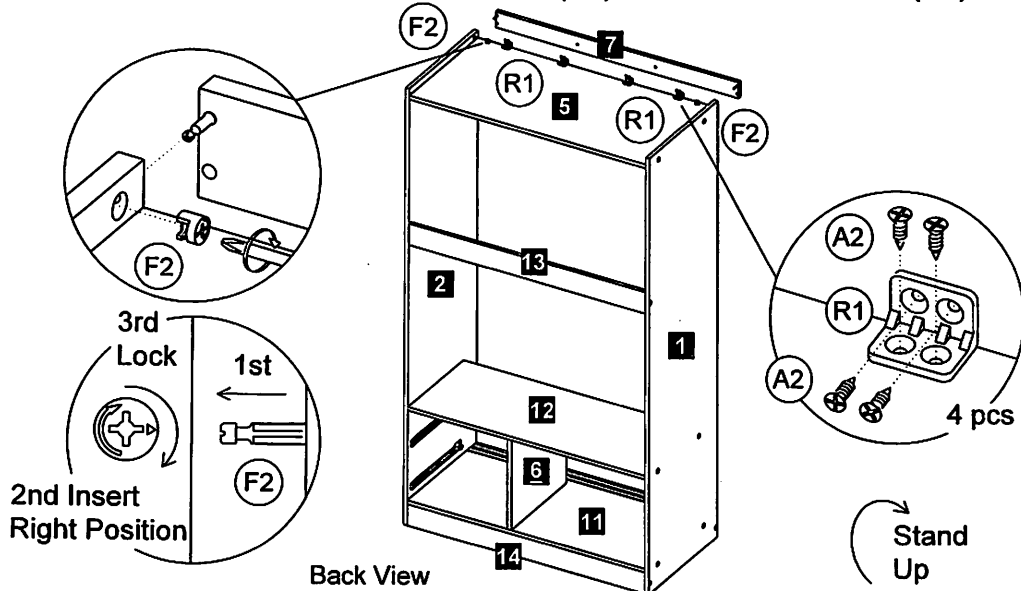


**STEP 12** Attach back panel no. 16 by using Nail (N2). Use Screw m3.5 x 14mm (A2) to secure the bottom of panel no. 13 & 14.

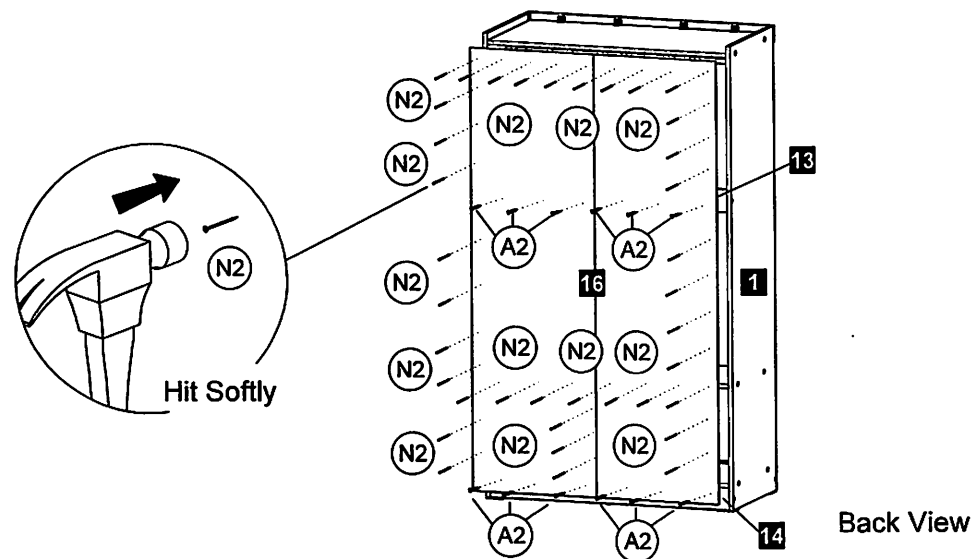


**STEP 5** Use Screw m3.5 x 14mm (A2) to assemble the Drawer Metal Slide 250mm (M5) at the marking hole at panel no. 2 & 6. Insert the Wood Dowel 8 x 25mm (D6) at panel no. 1 & 2.

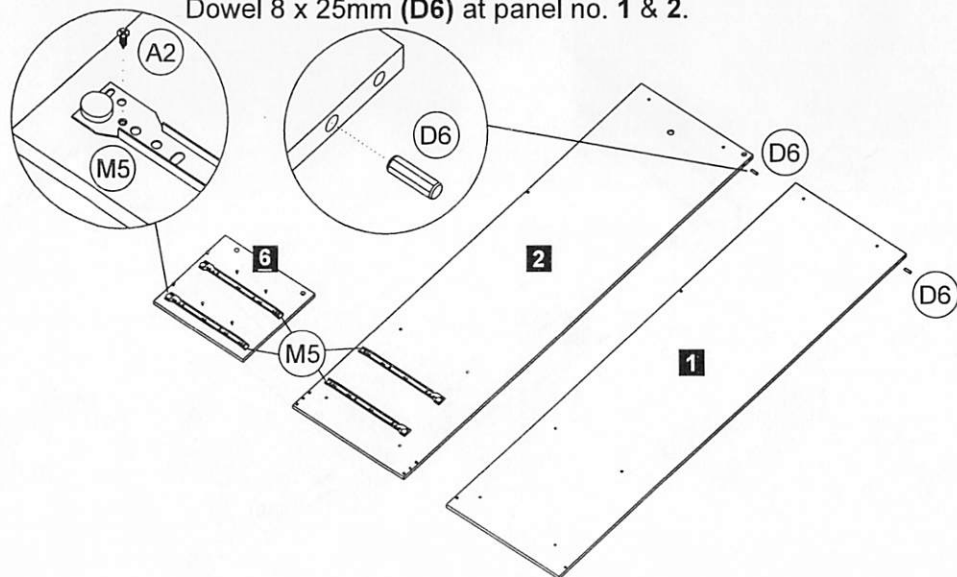


**STEP 6** Assemble hardware with different size screw at panels that showing below.

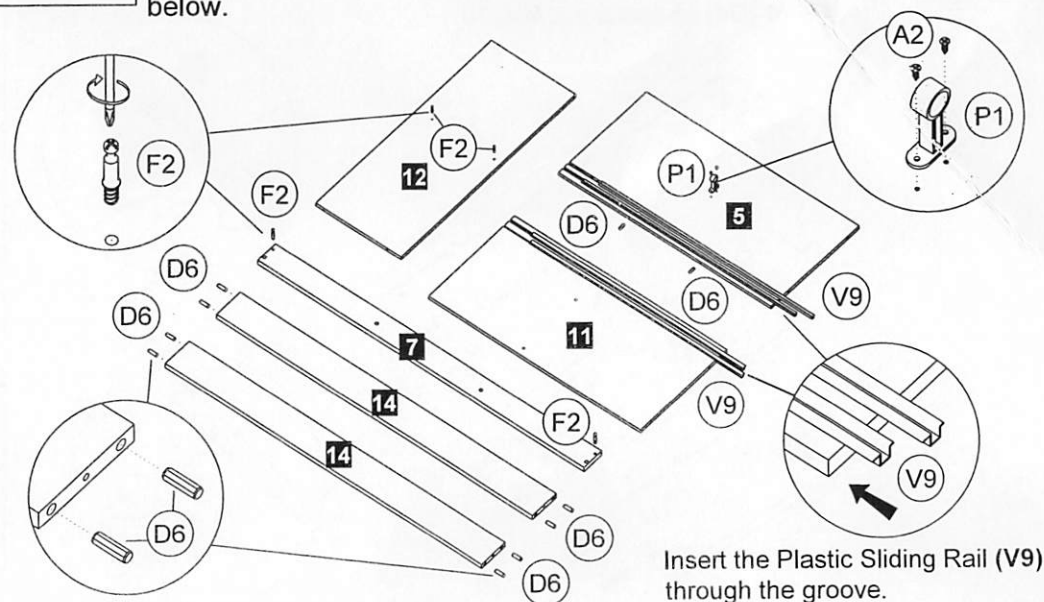


**STEP 7** Assemble the panel no. 12 with panel no. 6 by using Mini Fix 15mm 350mm (F2) & attach the panel no. 11 by using Crosshead Screw 6.3 x 40mm (A17). Use Allen Key (N1) to tighten the Crosshead Screw m6.3 x 40mm (A17).

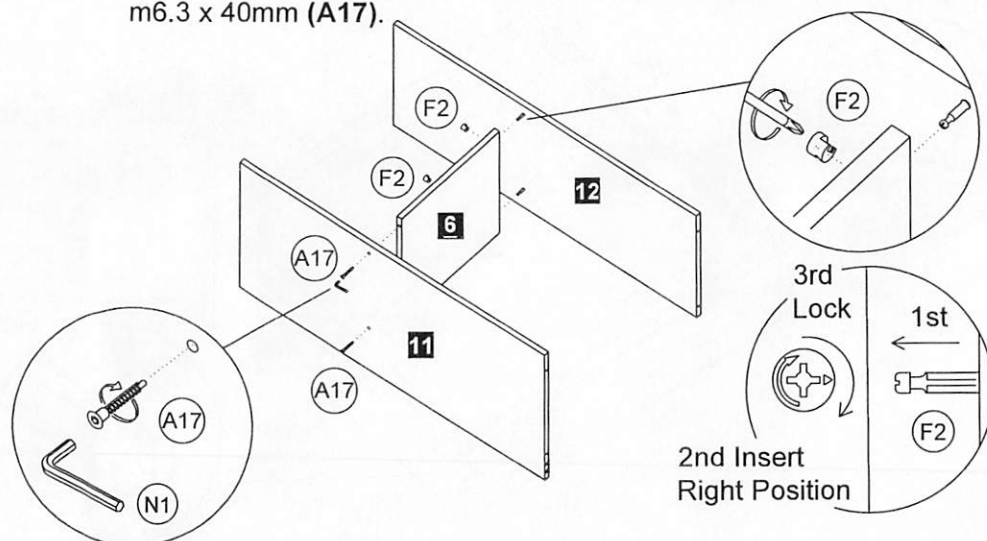


**STEP 8** Use Allen Key (N1) to tighten the Crosshead Screw 6.3 x 40mm (A17) & button the screw head by using Crosshead Cover (Y). Insert the Hanging Steel Pipe (P) through the Hanger 21 (P1) until large marking hole at panel no. 2.

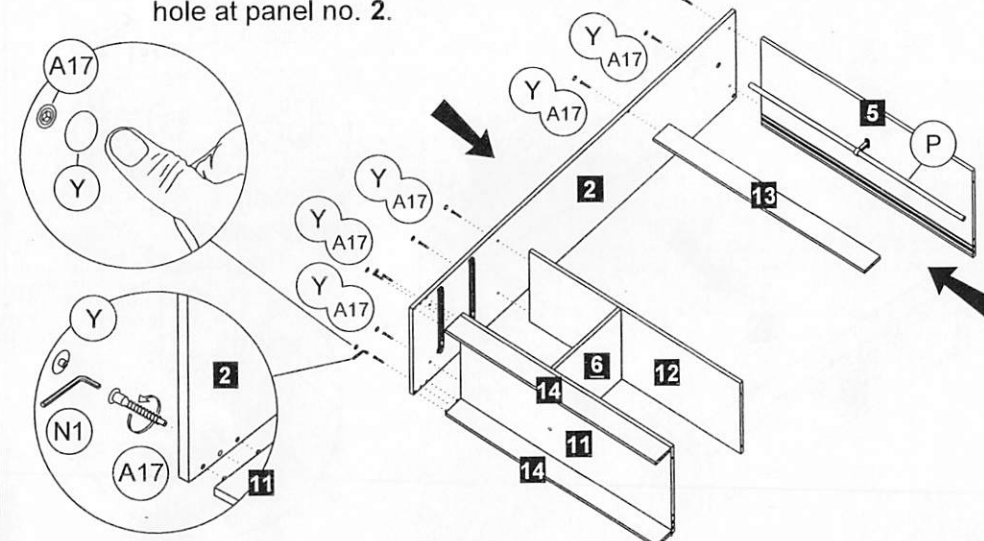


**STEP 1** First, fix the Mini Fix Bolt (F2) at panel no. 8 & insert the Wood Dowel 6 x 25mm (D4) at panel no. 9 & 10.

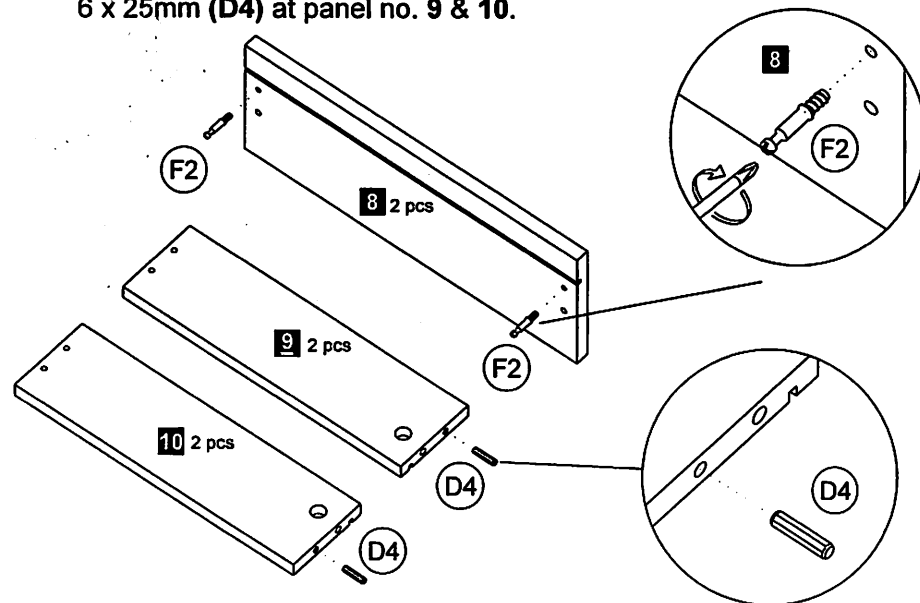


**STEP 2** Use Screw M4 x 38mm (A10) to assemble the panel no. 9, 10 & 15 together. Assemble 2 sets of drawer frame in repeated at step 2.

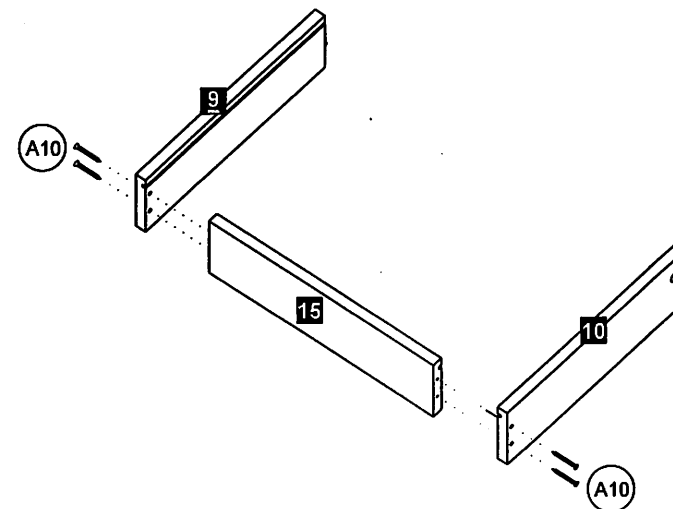

**STEP 3** Slide the panel no. 17 until the groove end & assemble the drawer head panel by using Mini Fix 15mm (F2). Assemble 2 sets of drawer in repeated at step 3.

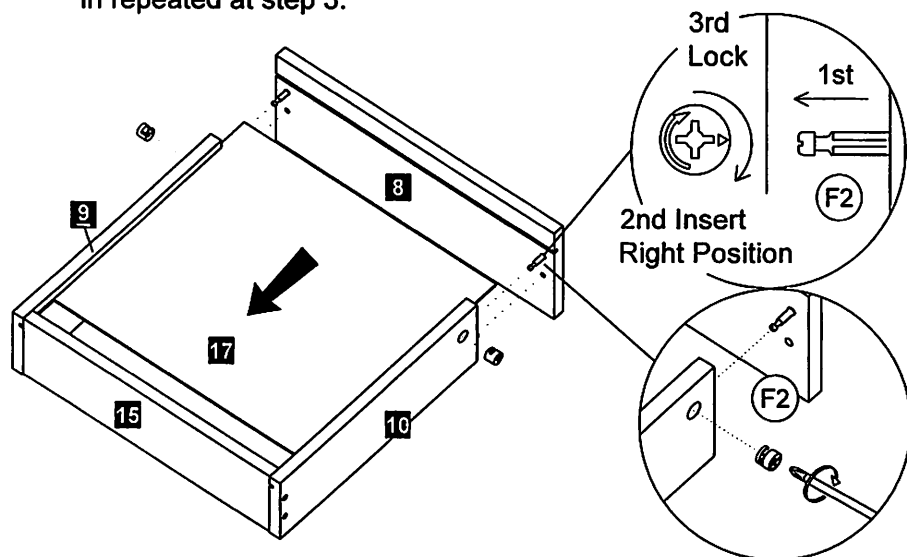


**STEP 4** Use Screw M3.5 x 14mm (A2) to assemble the Drawer Metal Slide 350mm (M5) & Single Plastic Cap (R2). Assemble 2 sets of drawers in repeated at step 4.

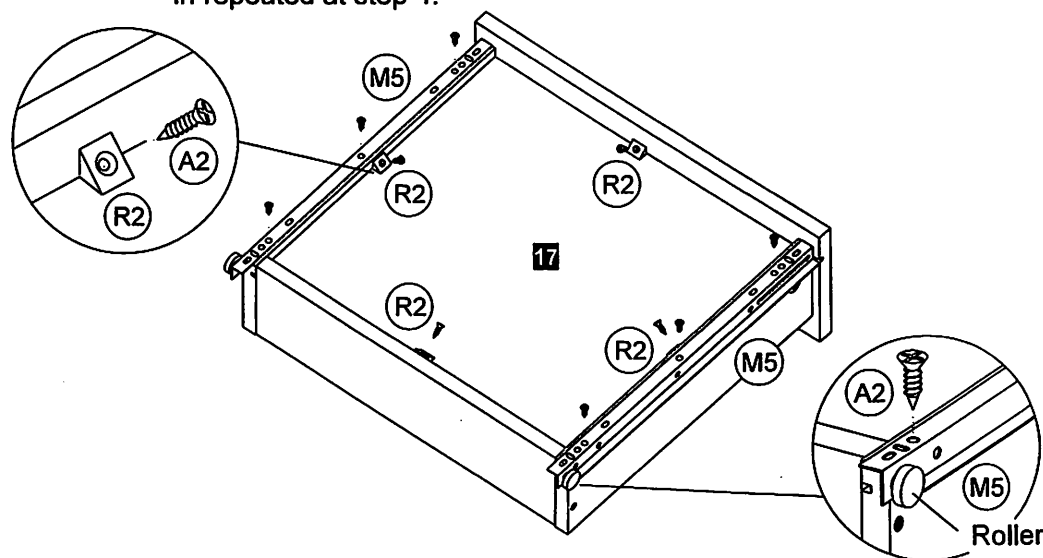

Reference Screw Size.


Place your screw on top to identify the size.

### A2




14mm

Screw  
m3.5 x 14mm




### A17




40mm

Crosshead Screw  
6.3 x 40mm




### A10



38mm

Screw  
m4 x 38mm



# ASSEMBLY INSTRUCTION

MODEL : 12\_0035










PAGE : 1/6










**Before you begin, please follow assembly instruction carefully, then follow step by step.**

Read instruction carefully. See furniture Parts List and Hardware List for guidance. Be sure you have all parts before you start assembling. Place and assemble furniture on a clean flat soft surface, such as carpet, rug or carton to prevent being scratched.

## Reminder :

Please ensure that all surface and edges with colours / laminations are facing forward / outward.

HARDWARE LIST			QTY
A2		Screw m3.5 x 14mm	110
A10		Screw m4 x 38mm	8
A17		Crosshead Screw 6.3 x 40mm	20
D4		Wood Dowel 6 x 25mm	4
D6		Wood Dowel 8 x 25mm	12
F2		Mini Fix 15mm	8 Sets
L1		Leg Pin	2
L2		Plastic Leg L Shape	4
M5		Drawer Metal Slide 350mm	2 Sets

N1		Allen Key	1
N2		Nail	60 (+-3)
P		Hanging Steel Pipe 18mm x 981mm	1
P1		Hanger 21	1
R1		L Bracket	4
R2		Single Plastic Cap	8
V5		Sliding Roller 1door 2sets	4 Sets
V9		Plastic Sliding Rail 970mm	4
Y		Crosshead Cover	18

Each pack have contain different type hardware and size of screw for easy assemble.  
Please refer to page 2, check a screw size.

## CAUTION

MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH. DO NOT USE DETERGENT OR CHEMICAL. AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.



USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

